


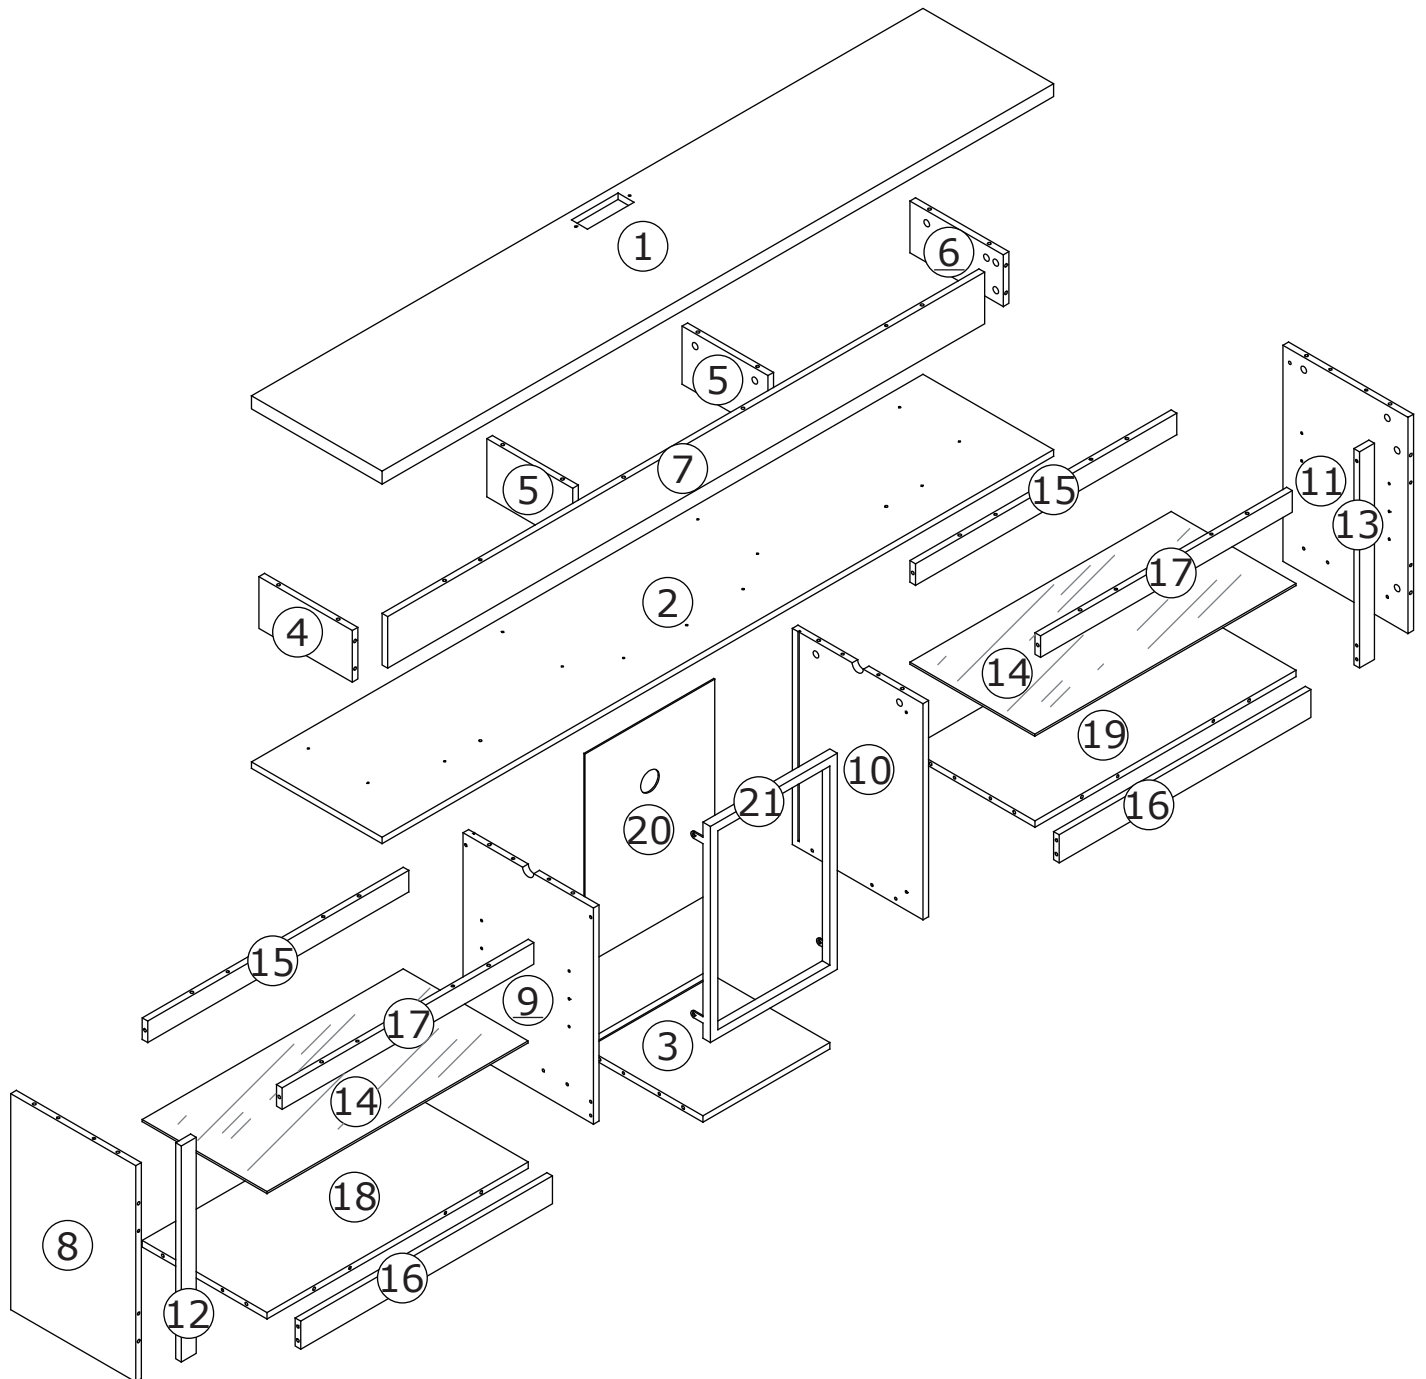
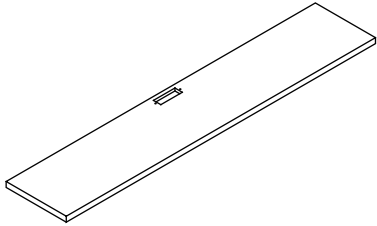
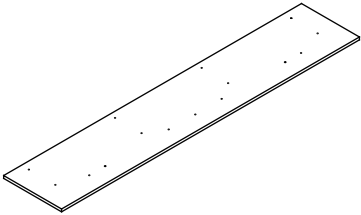
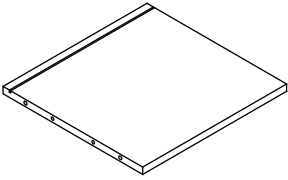
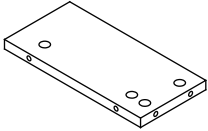
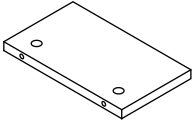
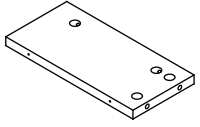
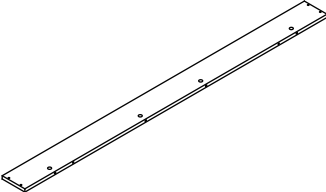
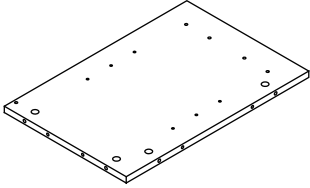
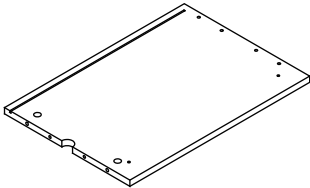
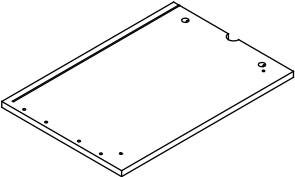
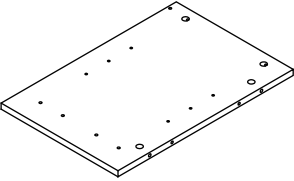
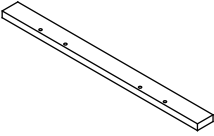
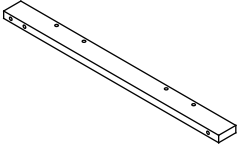
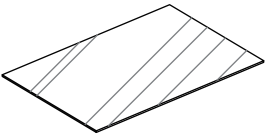
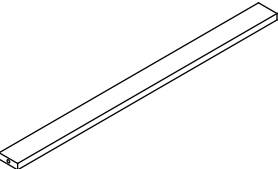
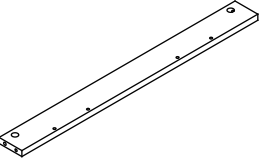
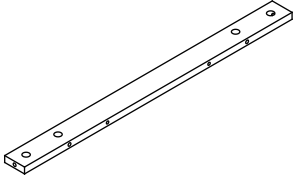
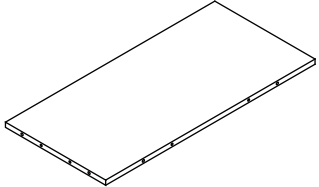


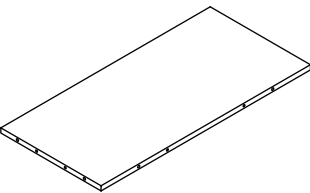

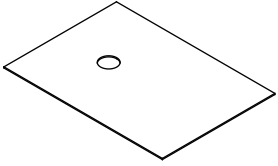






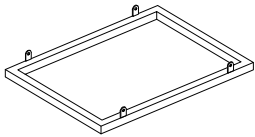






Parts and Operation Elements







Parts and Operation Elements

			
①	1pc	②	1pc
			
③	1pc	④	1pc
			
⑦	1pc	⑧	1pc
			
⑪	1pc	⑫	1pc
			
⑮	2pcs	⑯	2pcs
			
⑲	1pc	⑳	1pc
		㉑	1pc




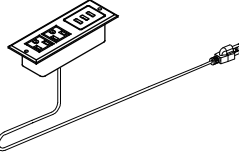
Hardware

			
Cam Bolt	15x12mm Cam Lock	Ø8x40mm Dowel	5x40mm Screw
(A) 64pcs ^{+2pcs}	(B) 64pcs ^{+2pcs}	(C) 45pcs ^{+2pcs}	(D) 12pcs ^{+2pcs}
			
M3x12mm Screw			
(E) 42pcs ^{+2pcs}	(F) 8pcs ^{+2pcs}	(G) 21pcs ^{+2pcs}	(H) 1pc
			
		M3x12mm Screw	M6x12mm Screw
(J) 1pc	(K) 1pc	(L) 2pcS	(M) 4pcs
			
			3x16mm Screw
(N) 64pcs ^{+2pcs}	(P) 16pcs ^{+2pcs}	(Q) 4pcs	(R) 4pcs


General instructions to assemble connecting pieces

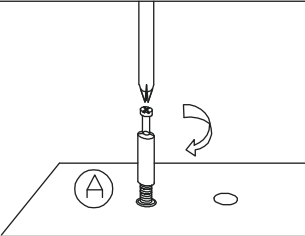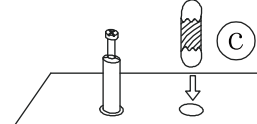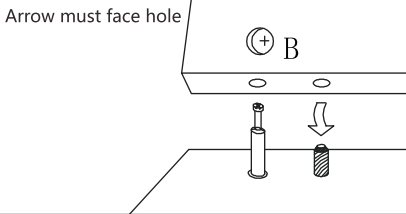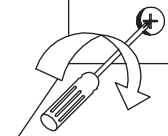			
Gently screw cam bolt into the threaded anchor.	Insert the wood dowel halfway into hole.	Arrow must face hole	Screw the camlock firmly into locked position.


1

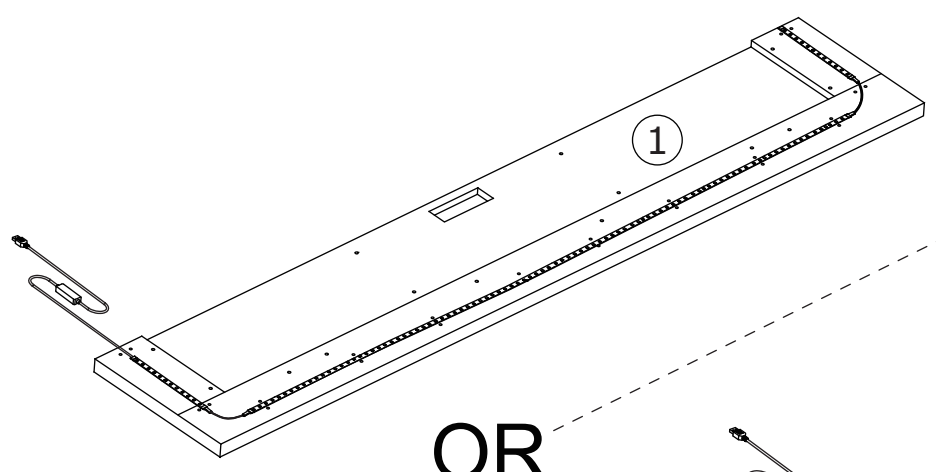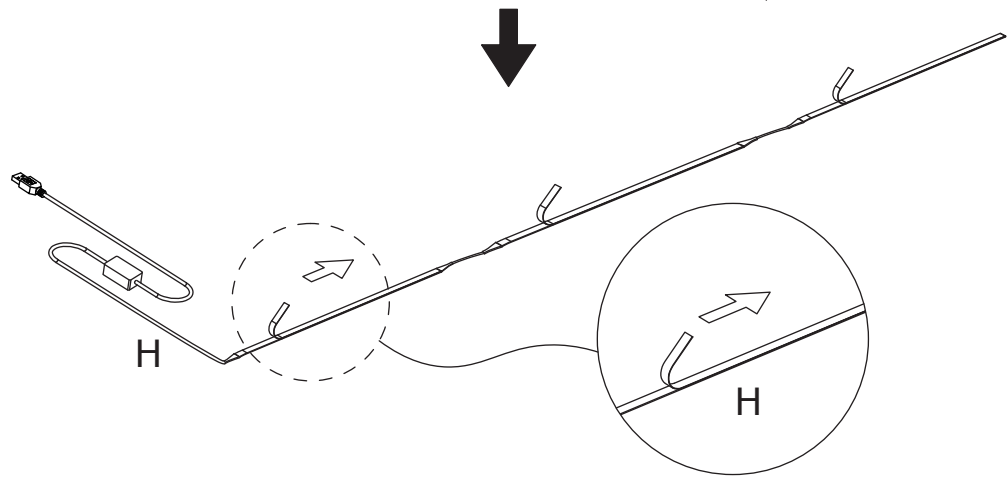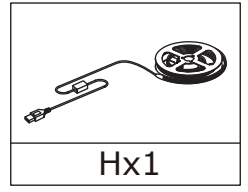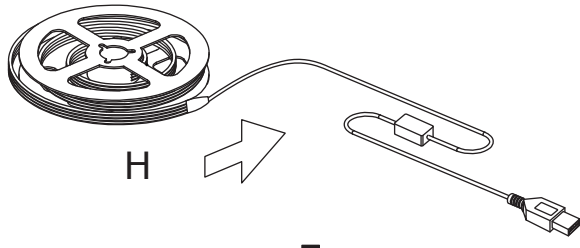


OR

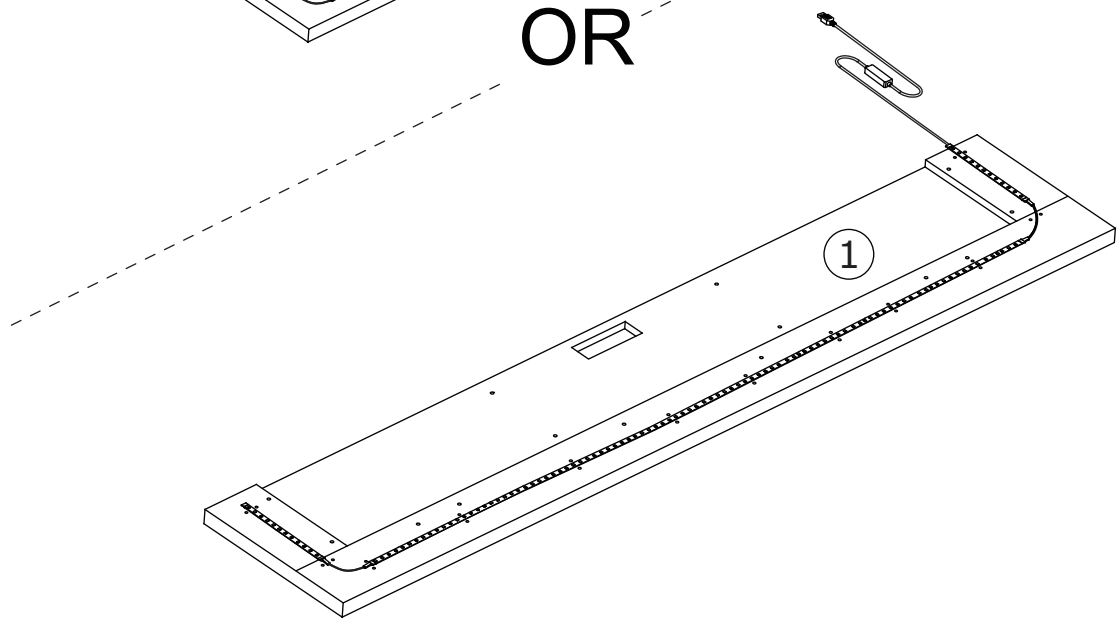

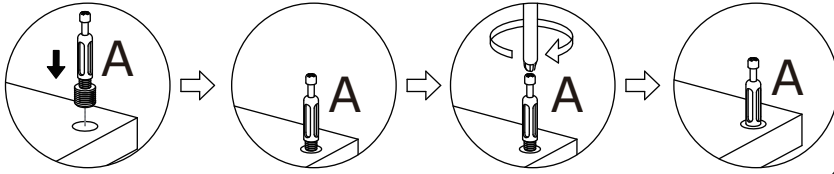



2

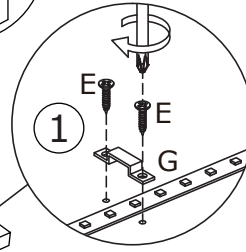


Before assembly, tear off the film of plates 1, 2 and 7.





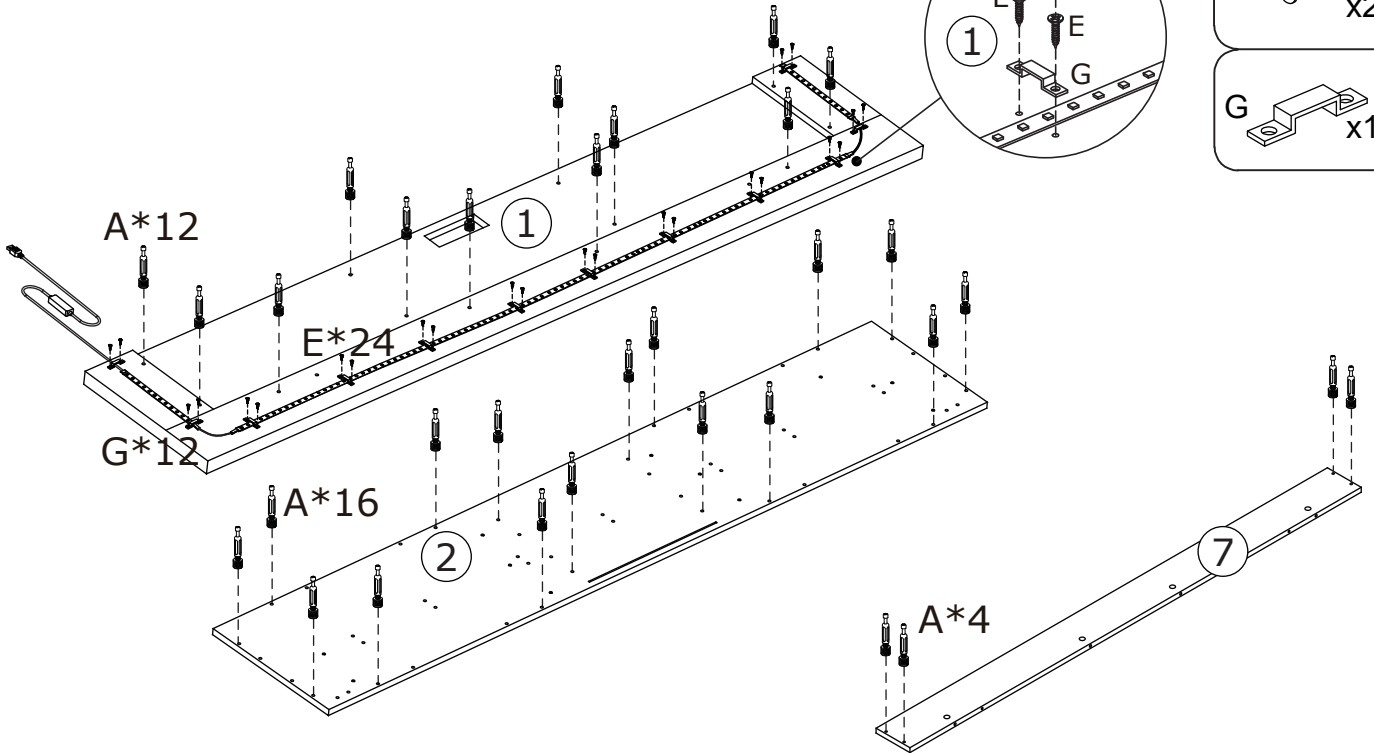


- A  x32
- E  x24
- G  x12

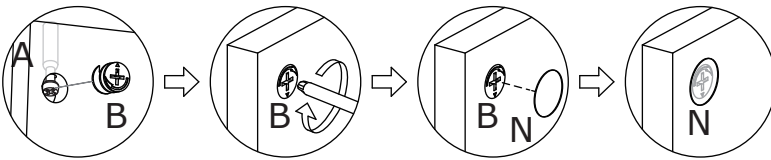


3



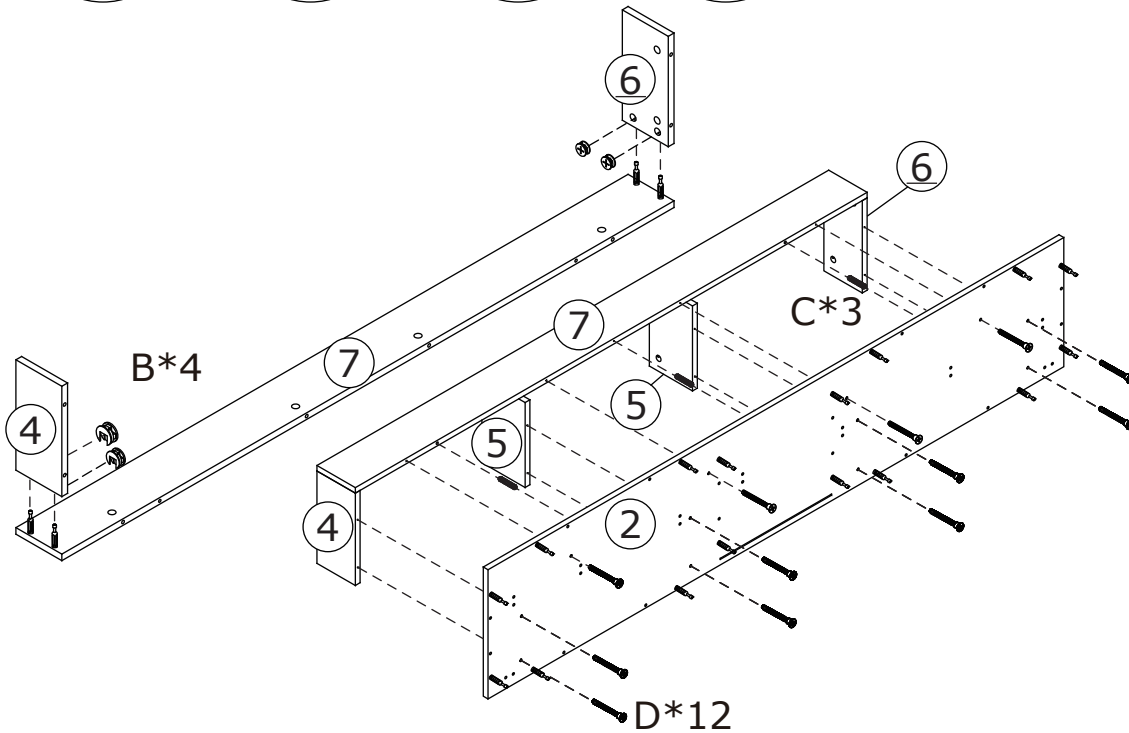




- B  x4
- C  x3
- D  x12
- N  x4

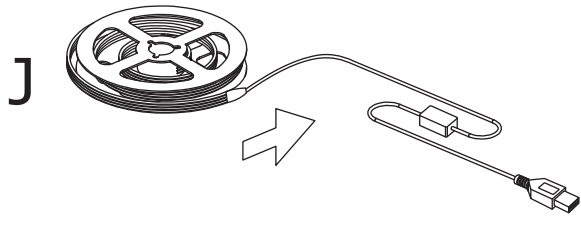


4







- J  x1
- E  x18
- G  x9

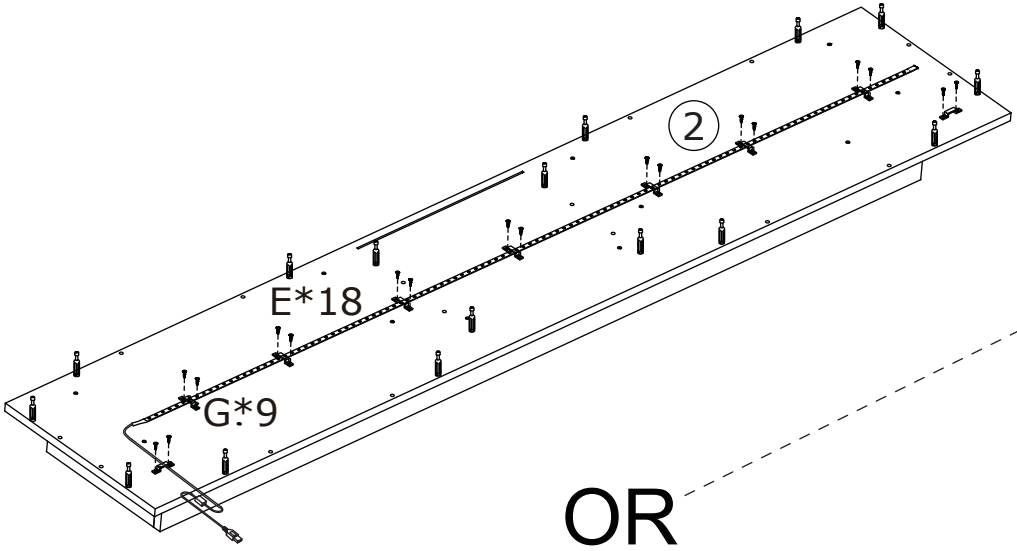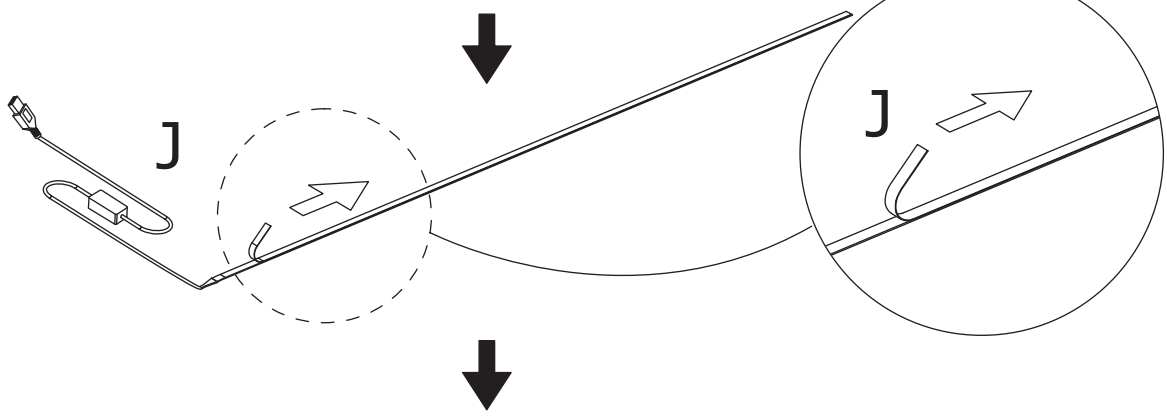



OR

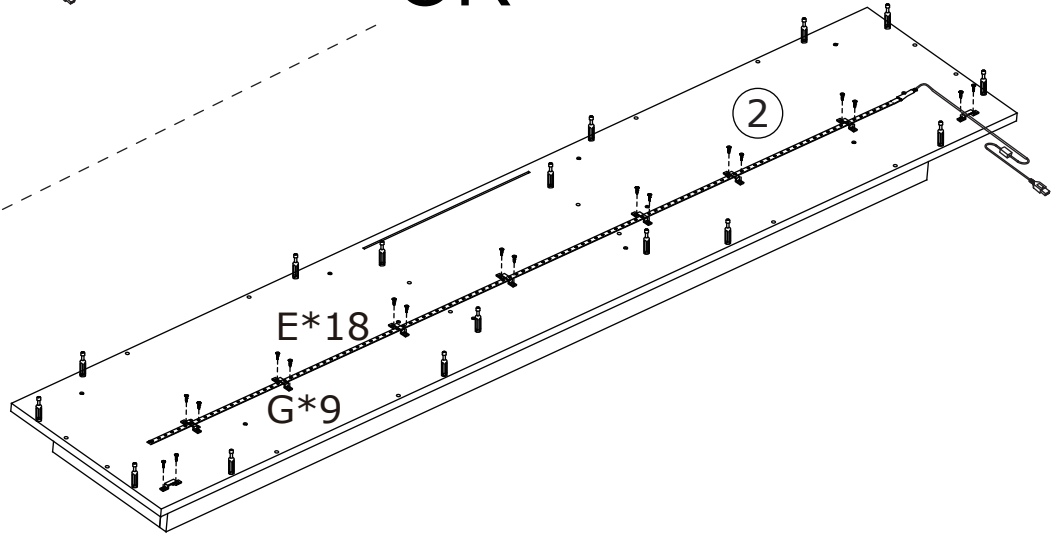




5

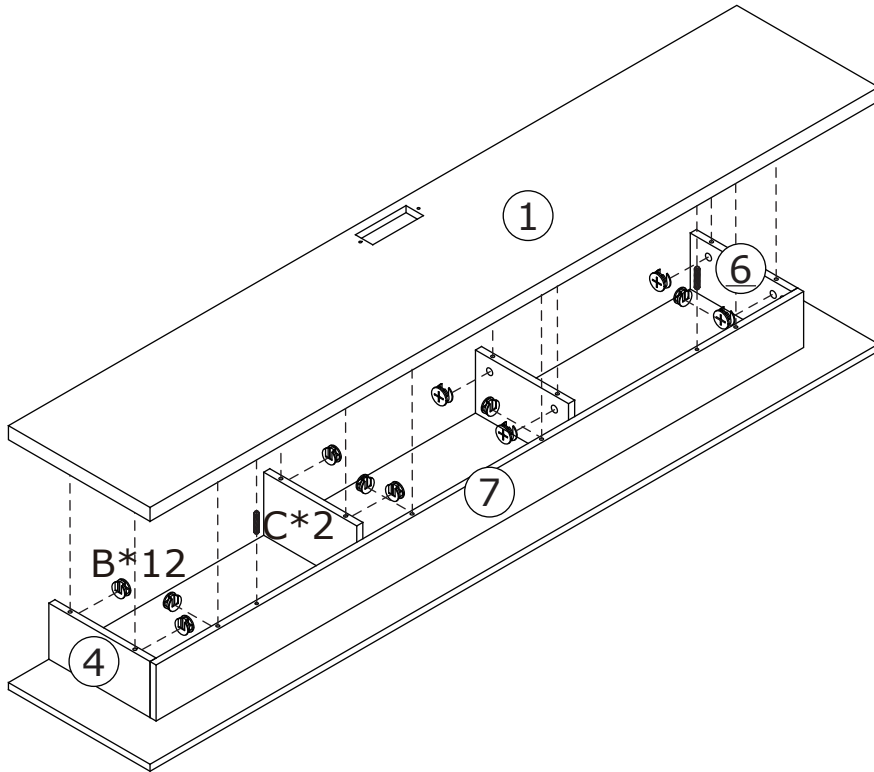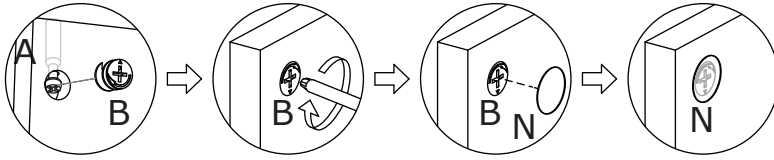



6

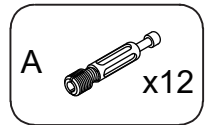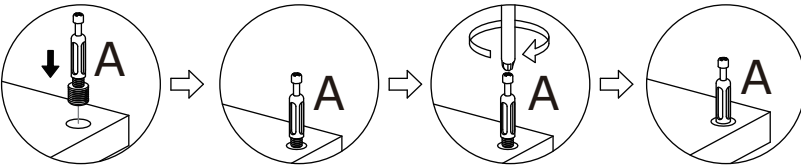


Before assembly, tear off the film of plates 12, 13 and 16.

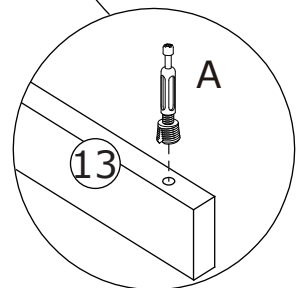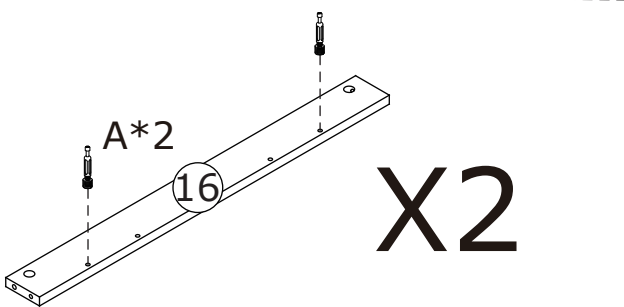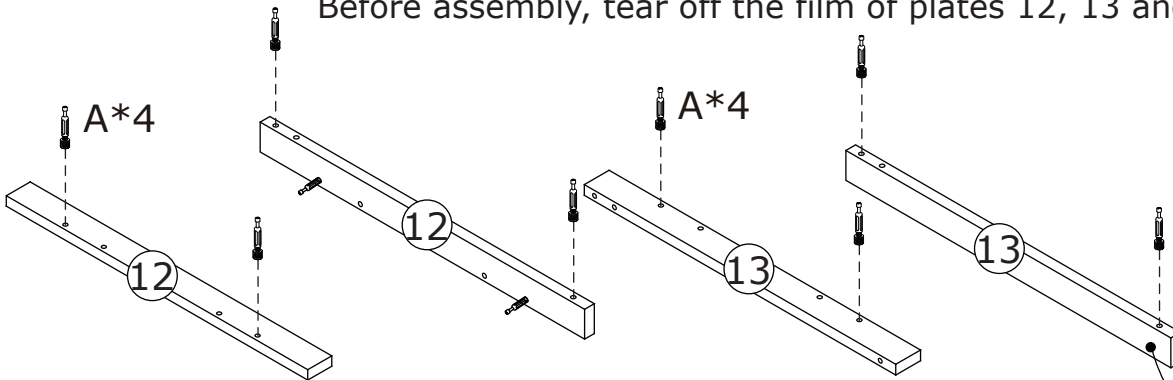




7

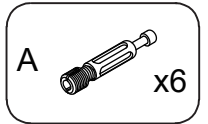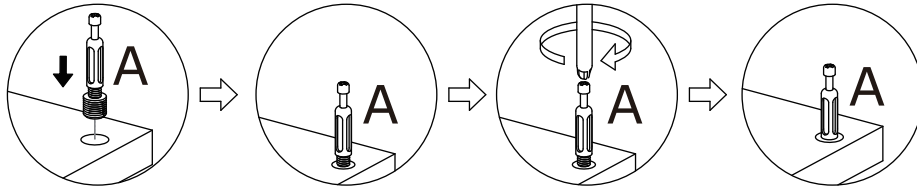


Before assembly, tear off the film of plates 8 and 11.

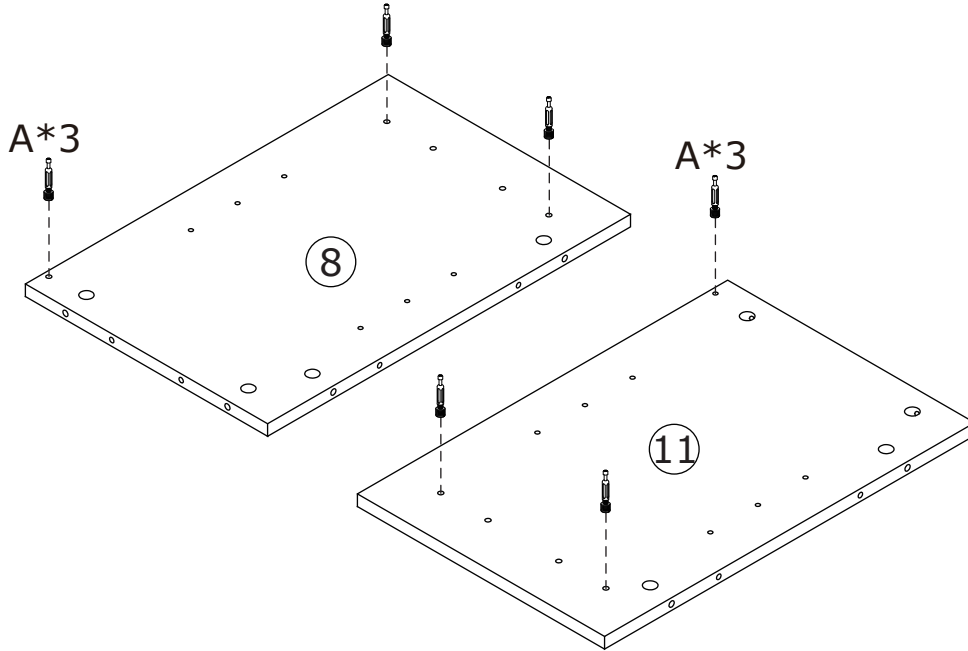

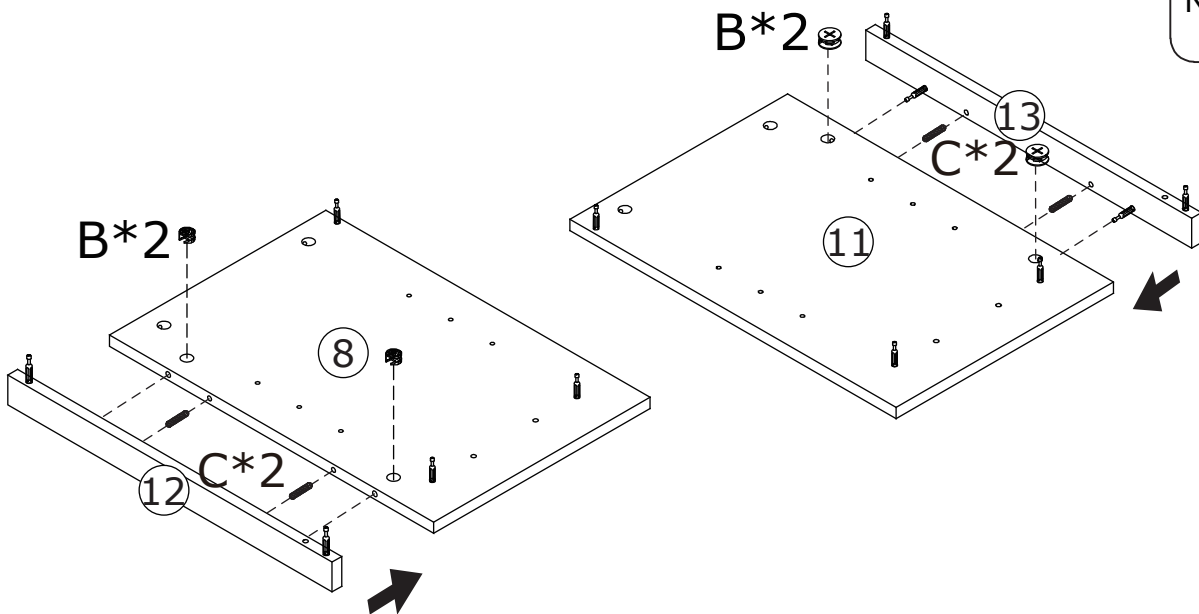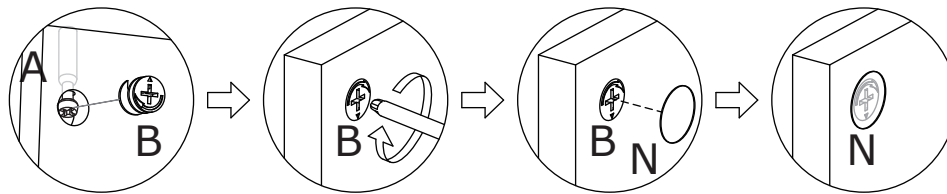


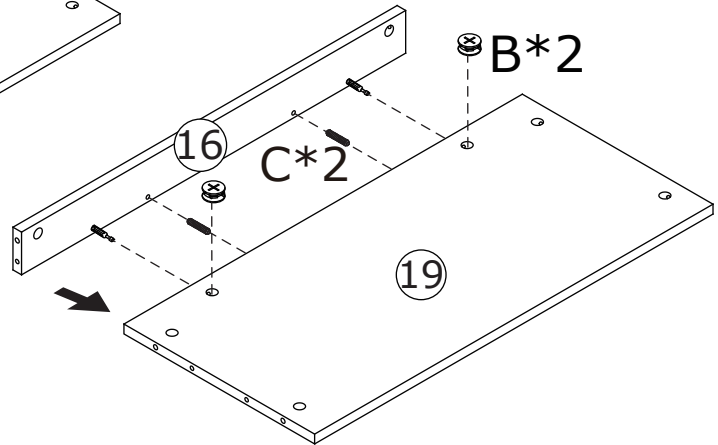
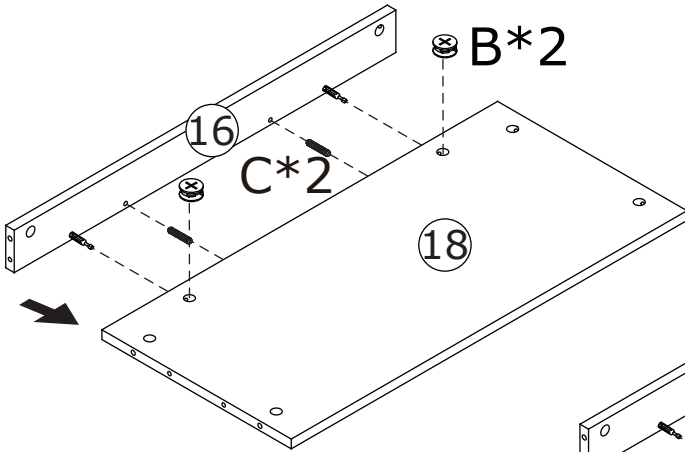
8

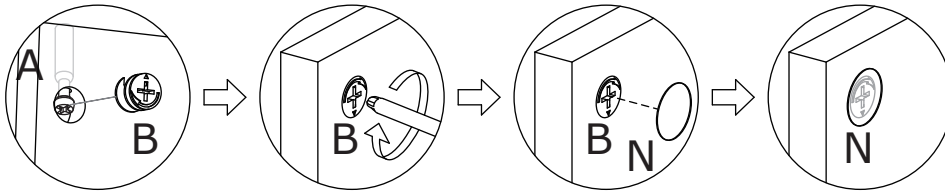


9






- B  x4
- C  x4
- N  x4


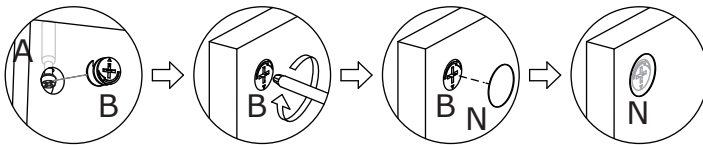


10






- B  x8
- C  x6
- N  x8


Before assembly, tear off the film of plates 17.

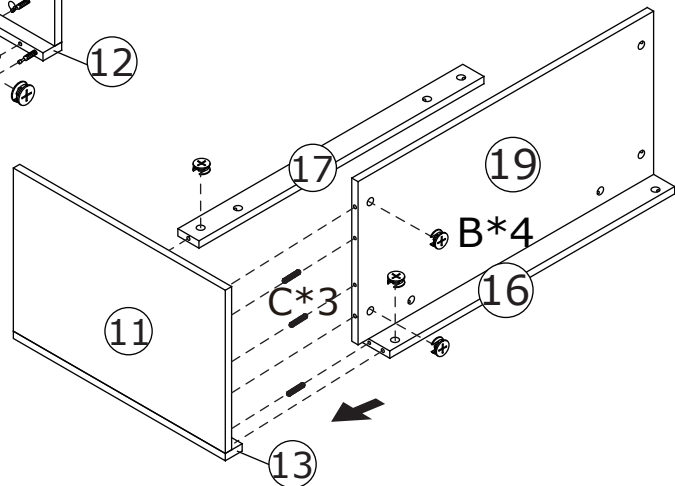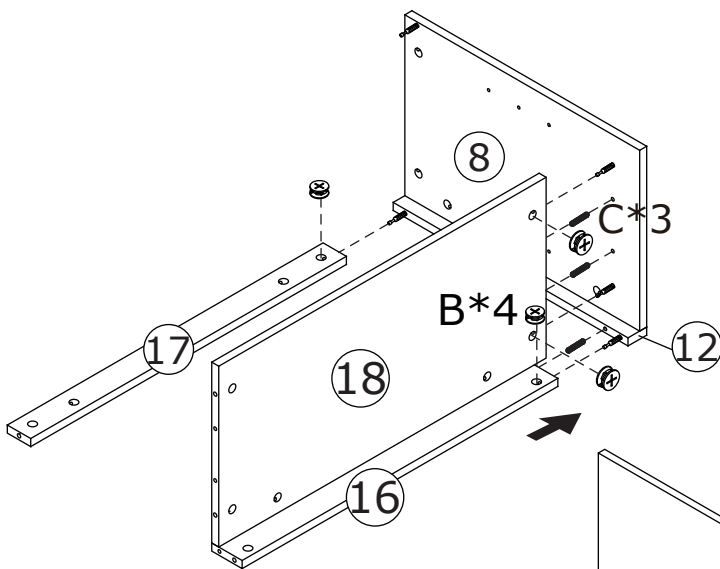





11

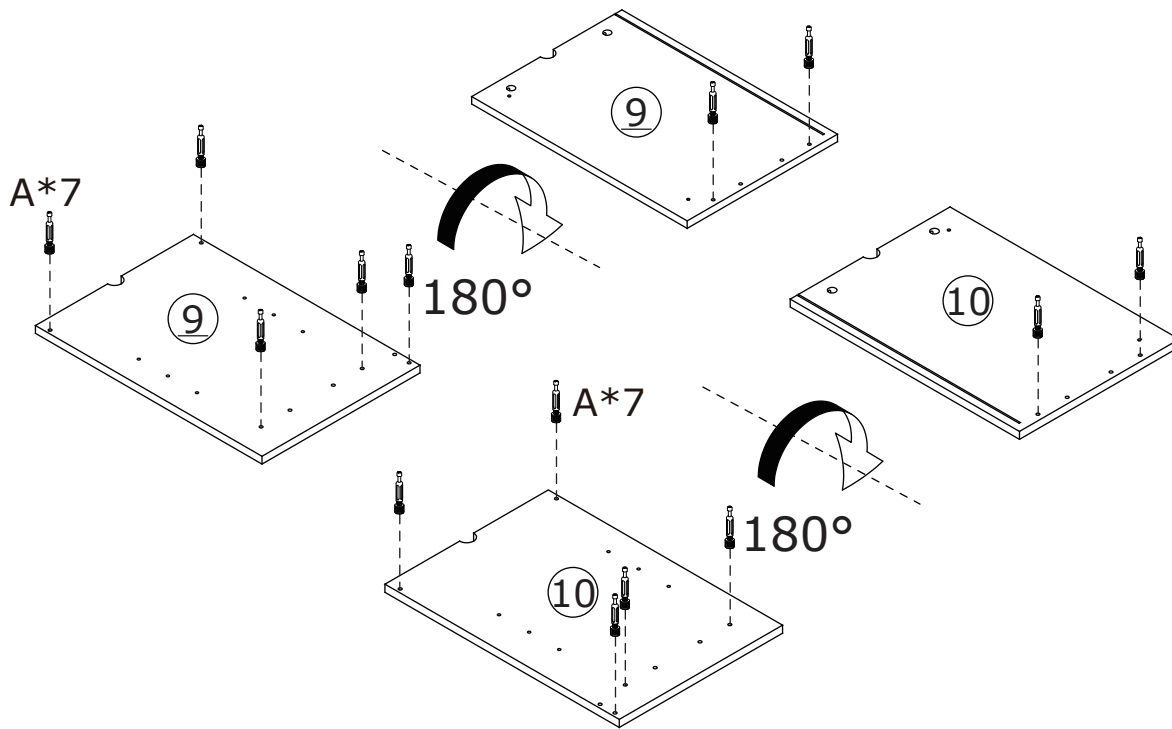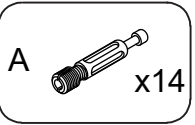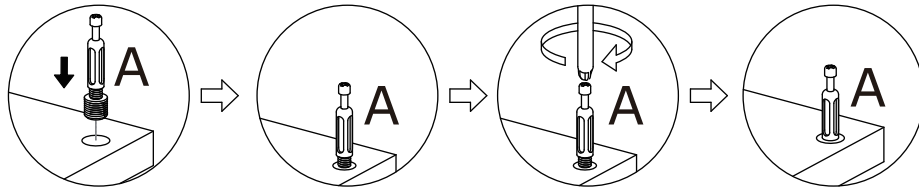


12

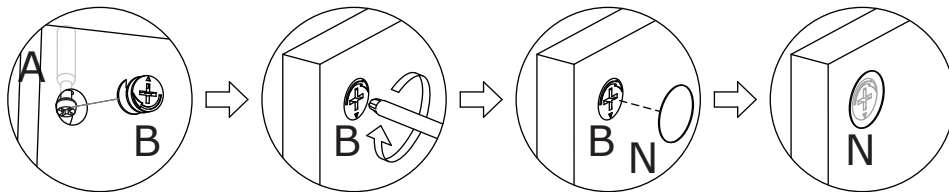

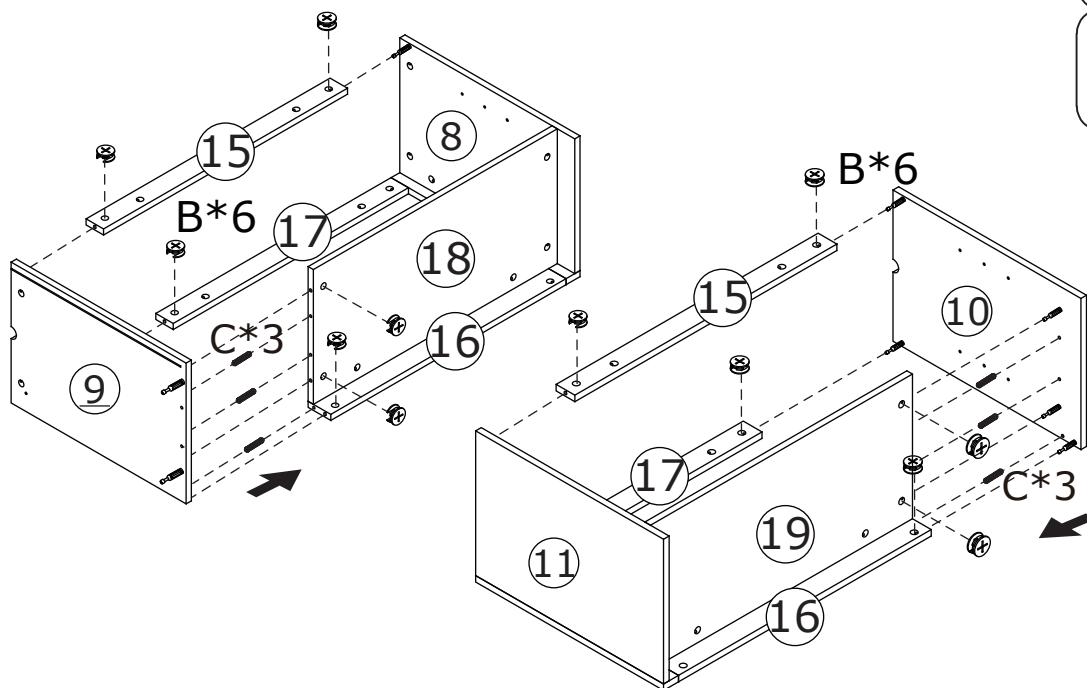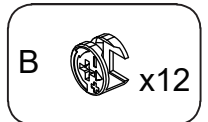


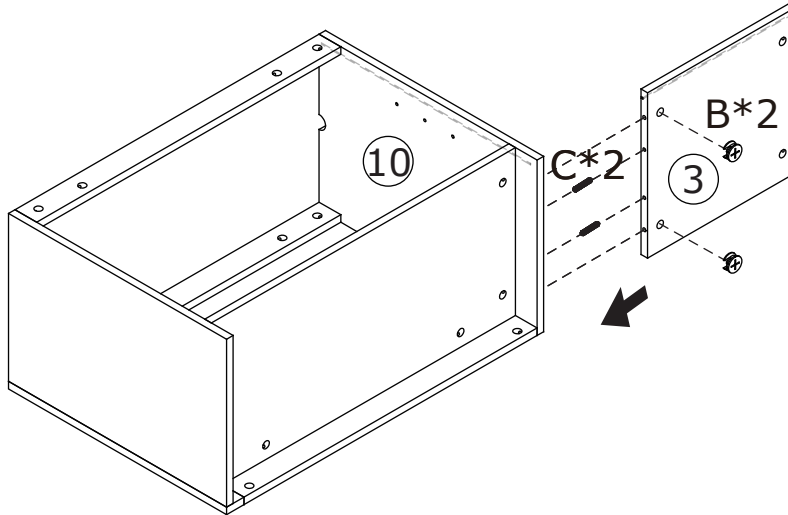
The hole of B accessories is facing up.

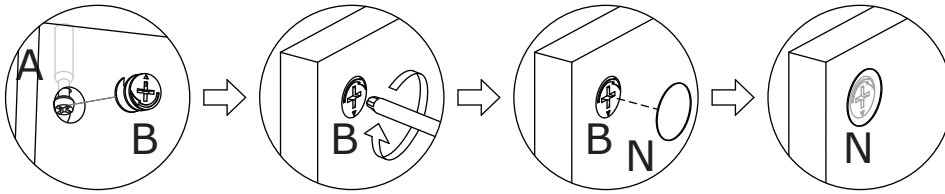


13








- B  x2
- C  x2
- N  x2

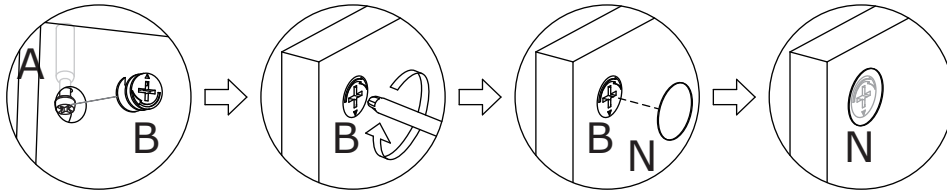



14




- B  x2
- C  x2
- N  x2
- P  x16

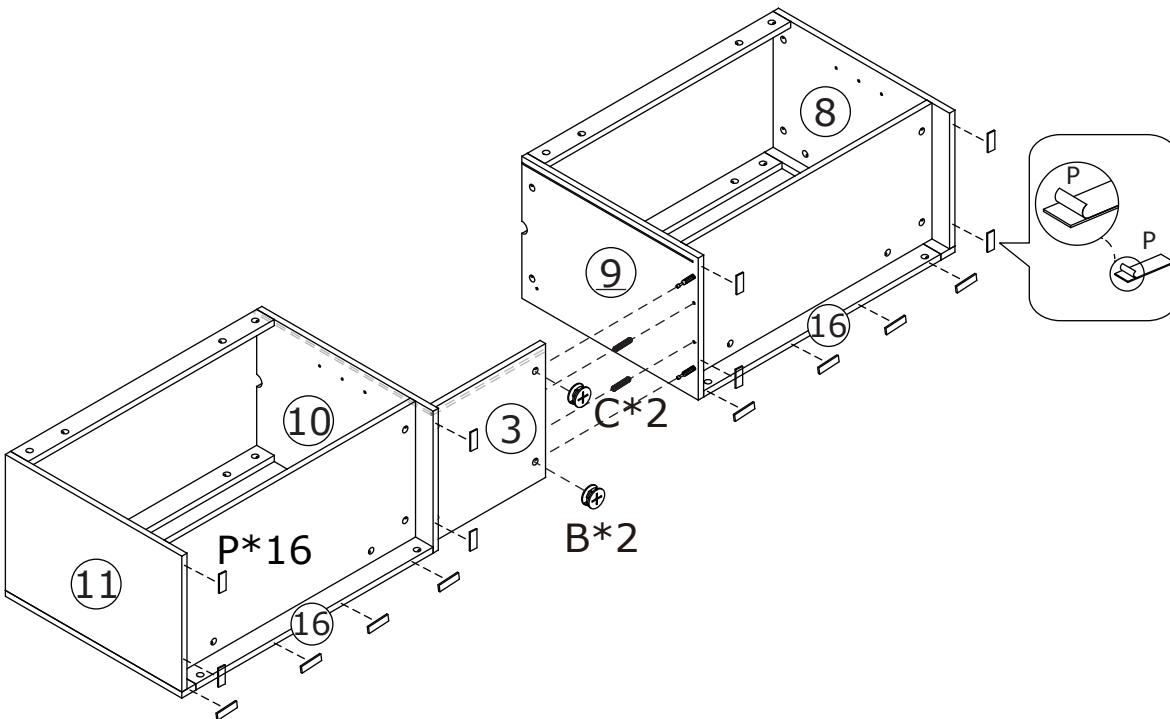


15

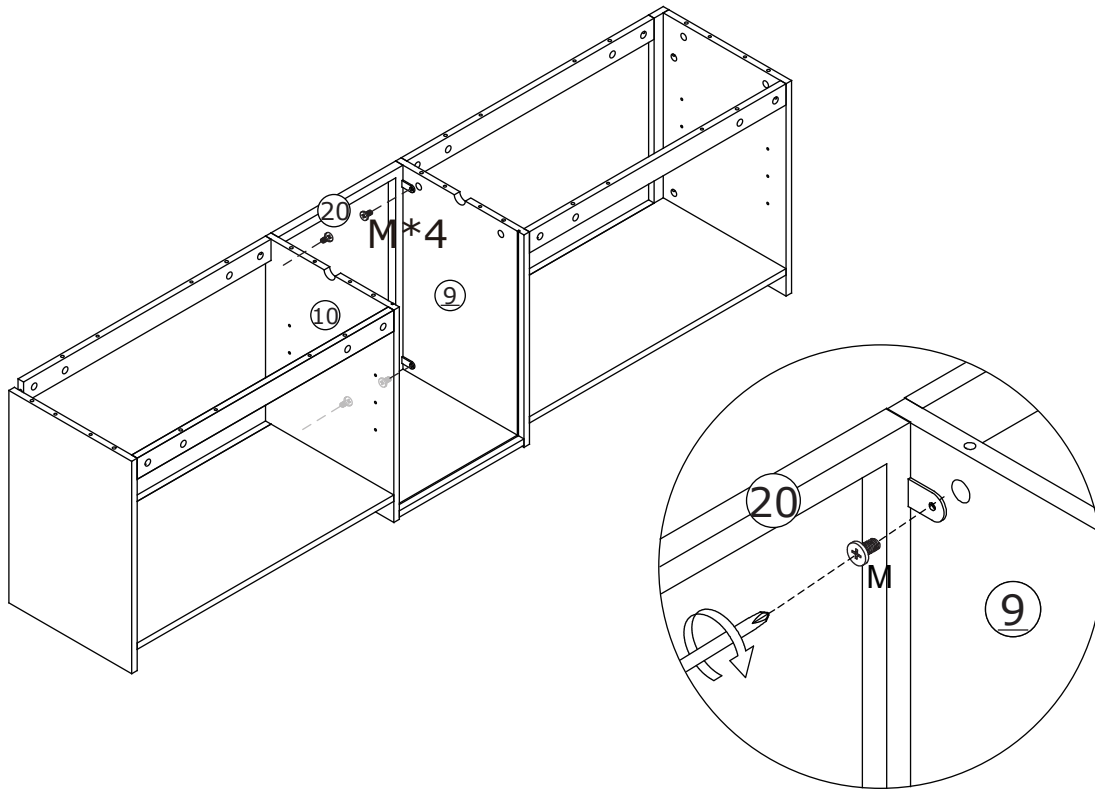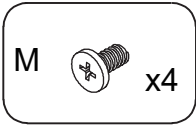

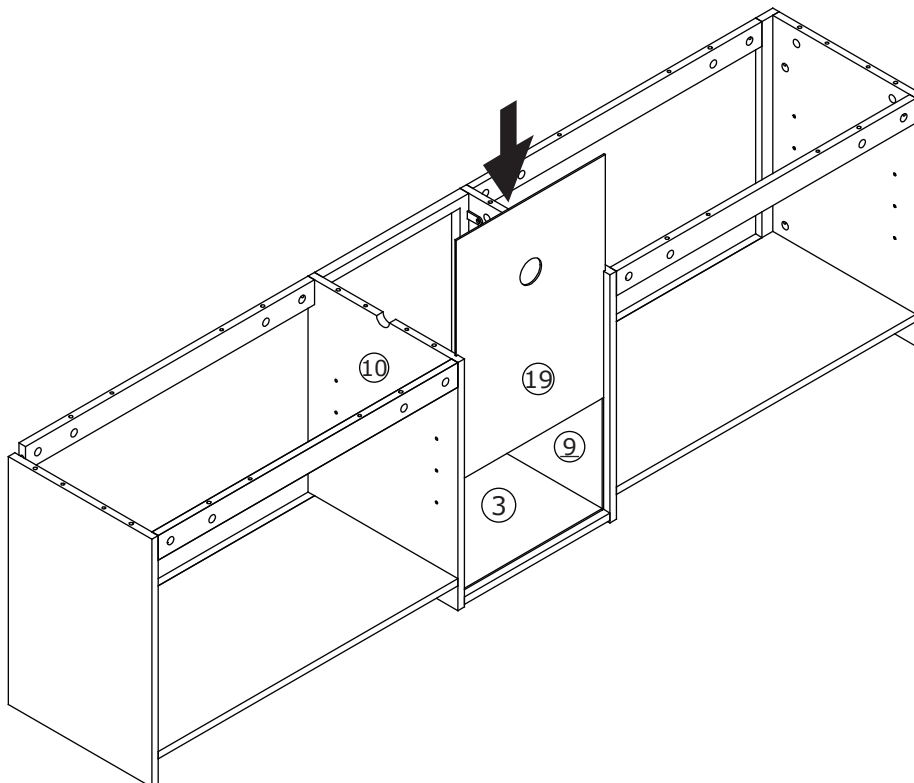


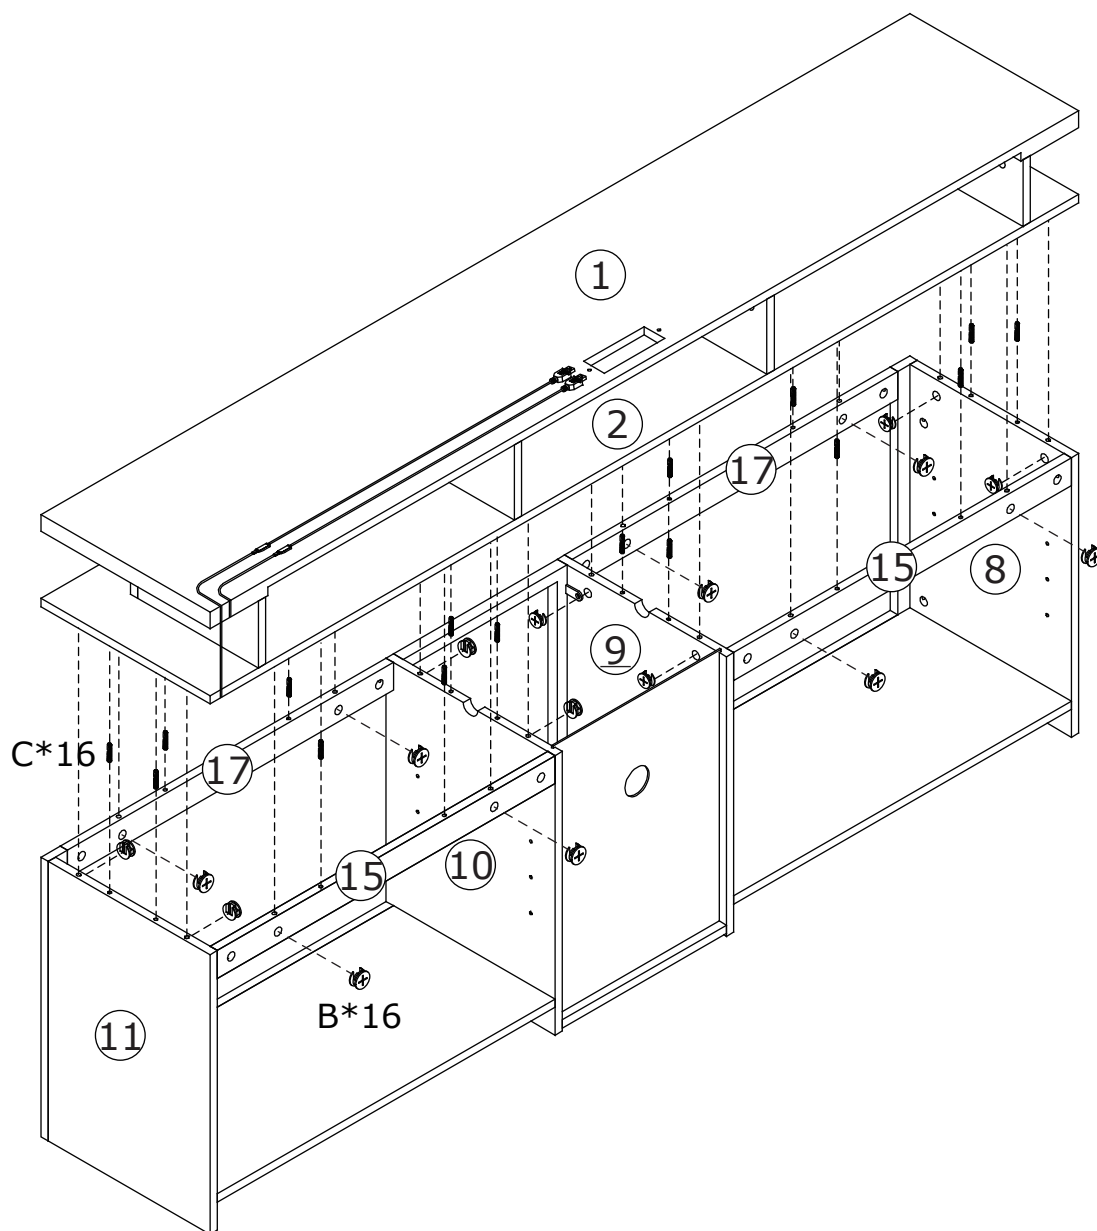
16

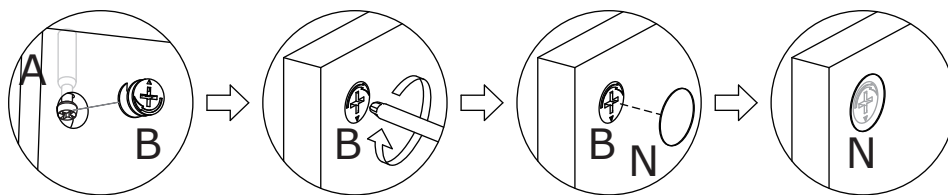



17





- B  x16
- C  x16
- N  x16




18

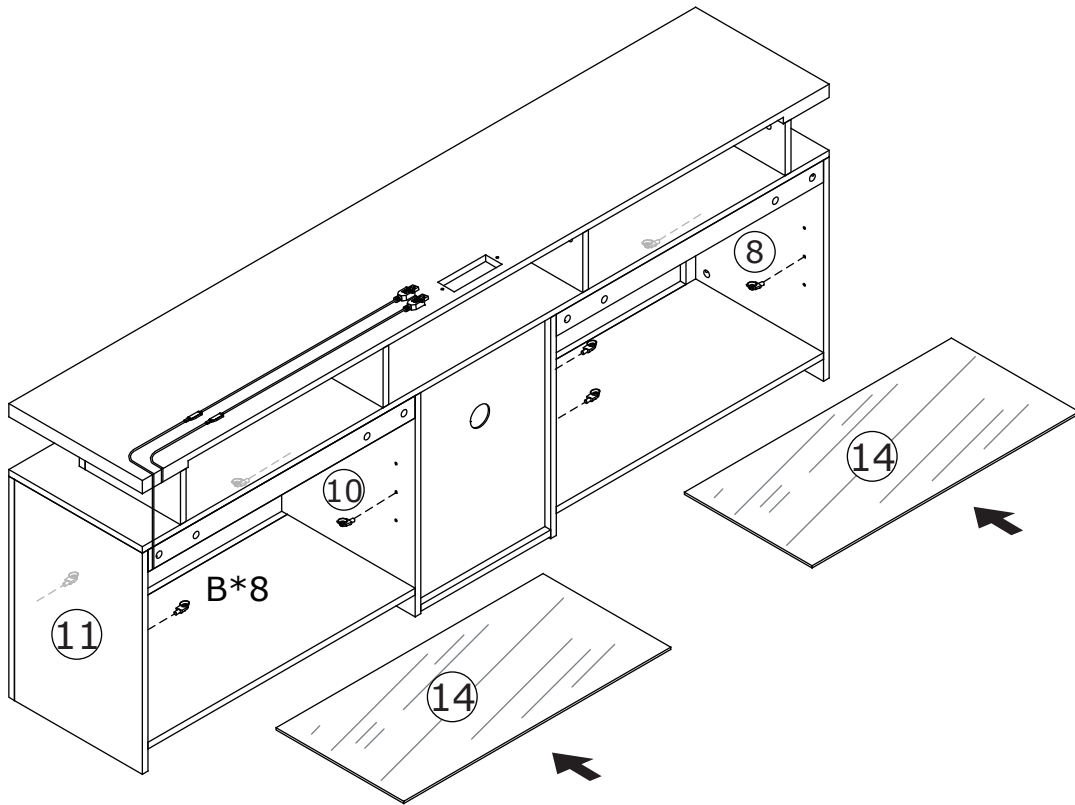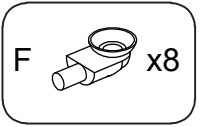


19

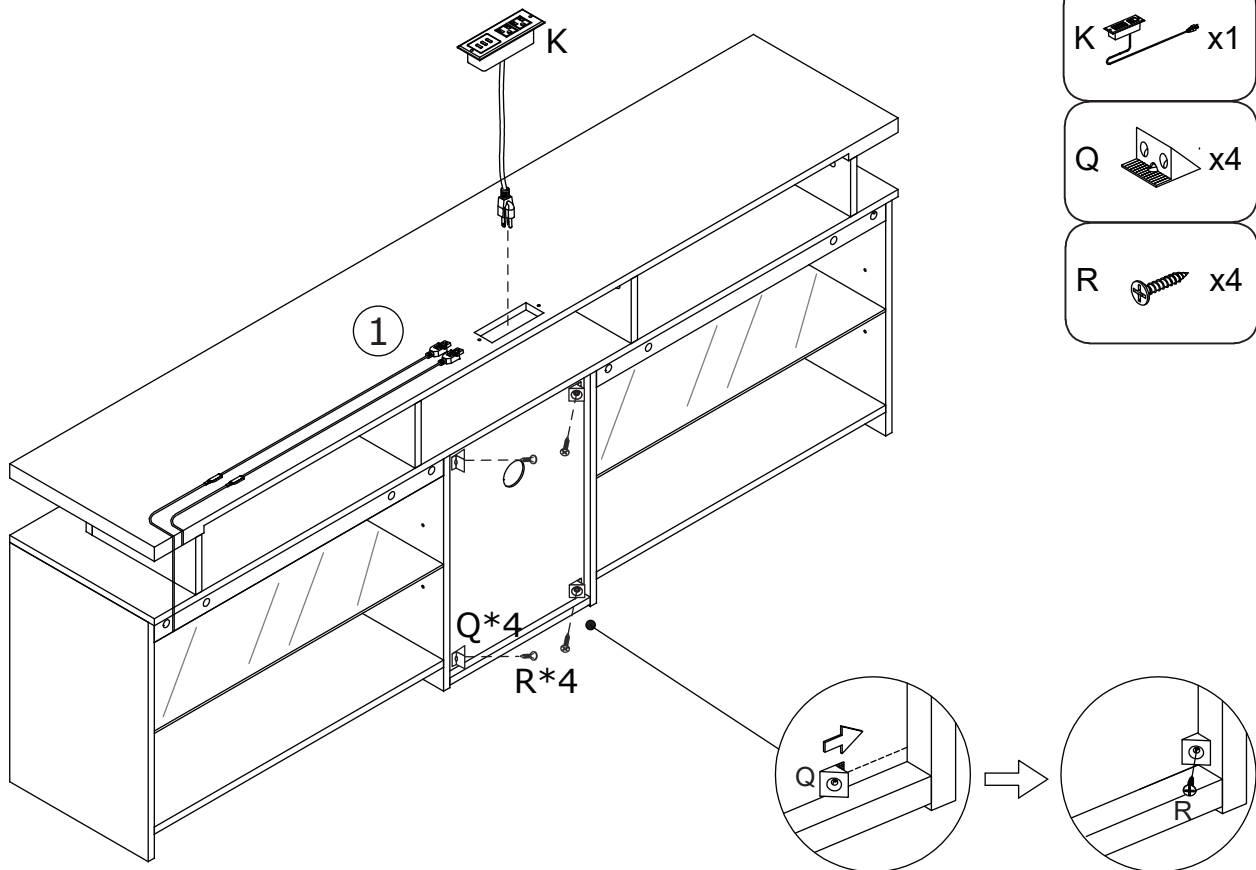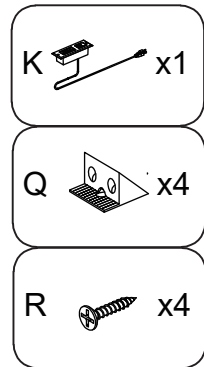

20

L  x2

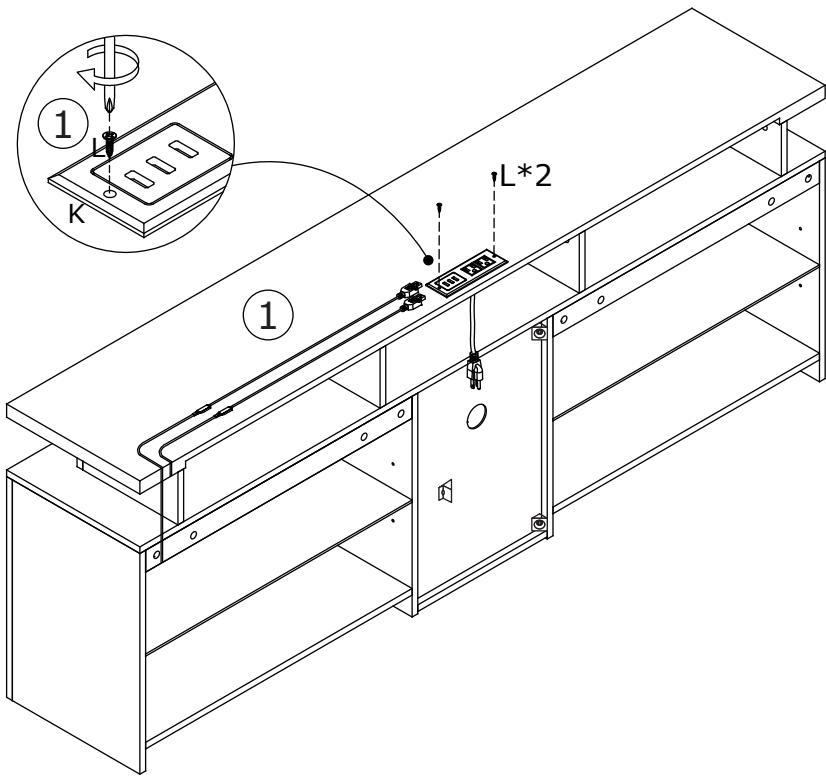

21

