



List of important parts




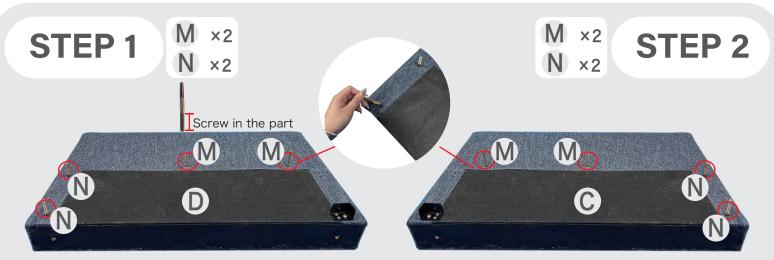


Attach the corresponding screw to the armrest.

N:Twist into the short side first

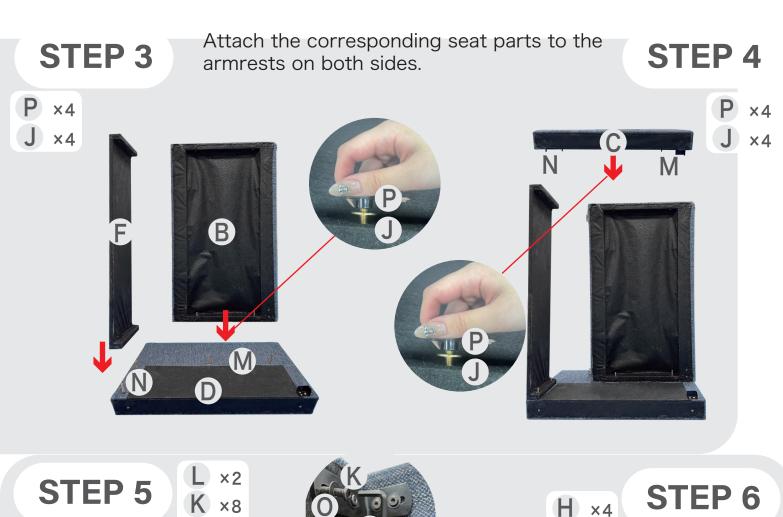

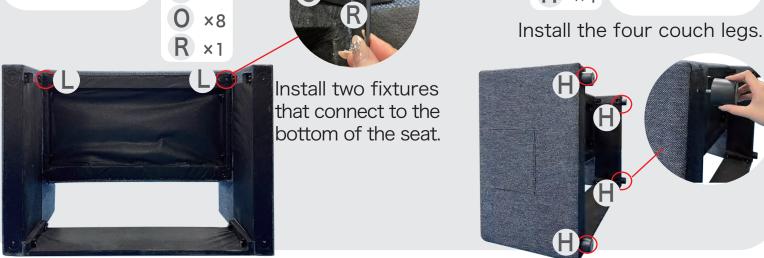



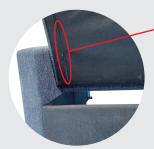

The plug-ins on both sides need to be inserted at the same time and plugged in for normal application. If one side is not properly plugged in, the zipper needs to be opened

Pull the shrapnel with the arrow below and unplug and plug it back in Thank you!

Tips:




N ×3

Install the three screws of the front bezel. Twist into the short side first **G**

P ×3
J ×3


STEP 9

Connect the front bezel with the broaching machine with the assembled screws.

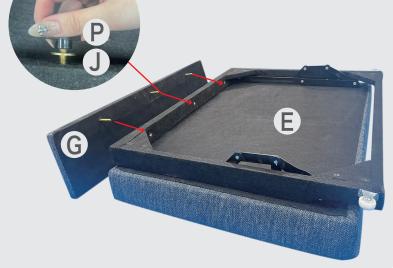

STEP 10



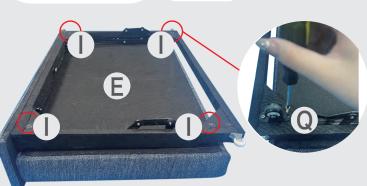

Install the pulley at the bottom of the broaching machine.

STEP 11



Finished product display



