



# Simple Installation Process

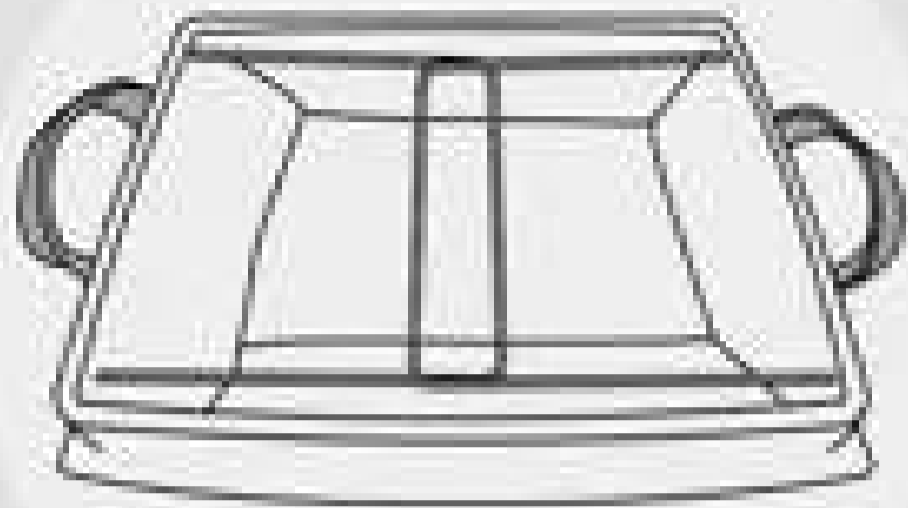


1 Unfold metal frame



2 Push inward firmly



4 Gently Iron for Instant Smoothness

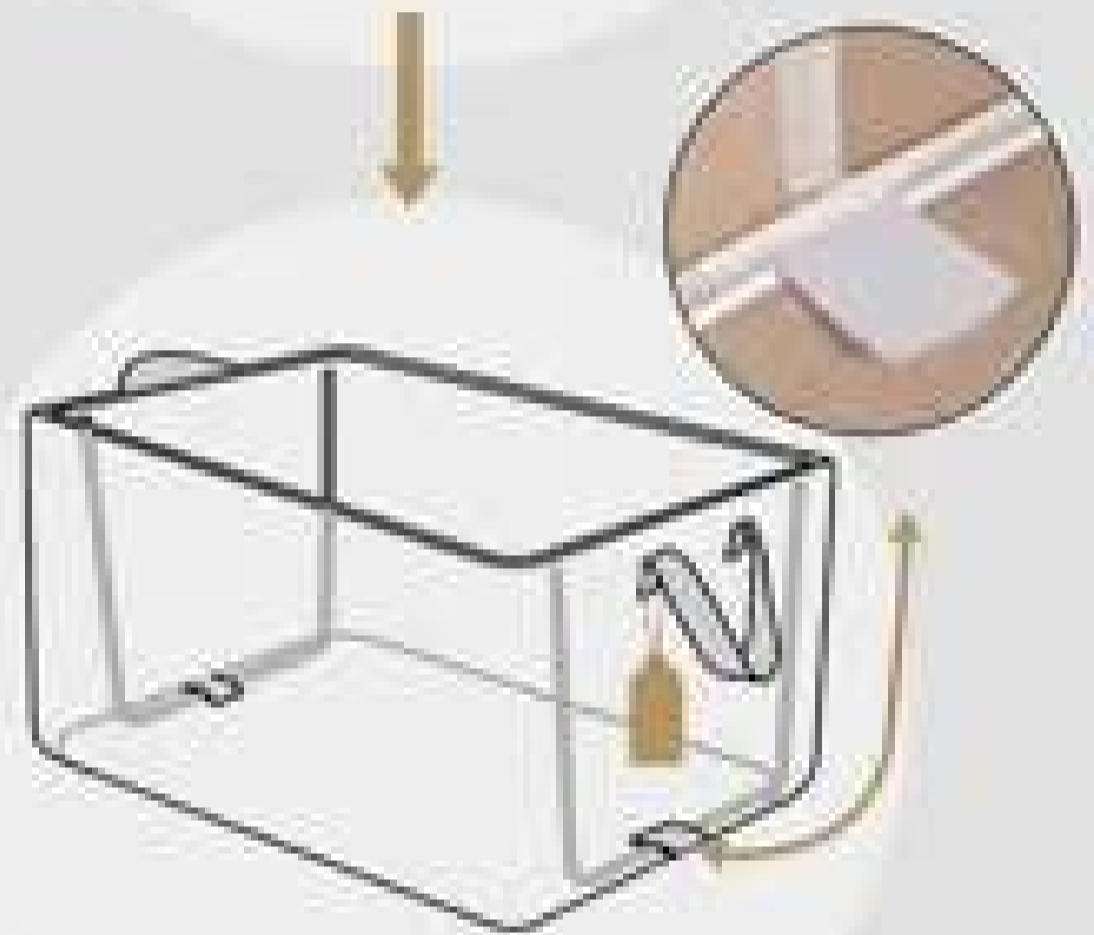

3 Expand to 90° for Secure Lock