

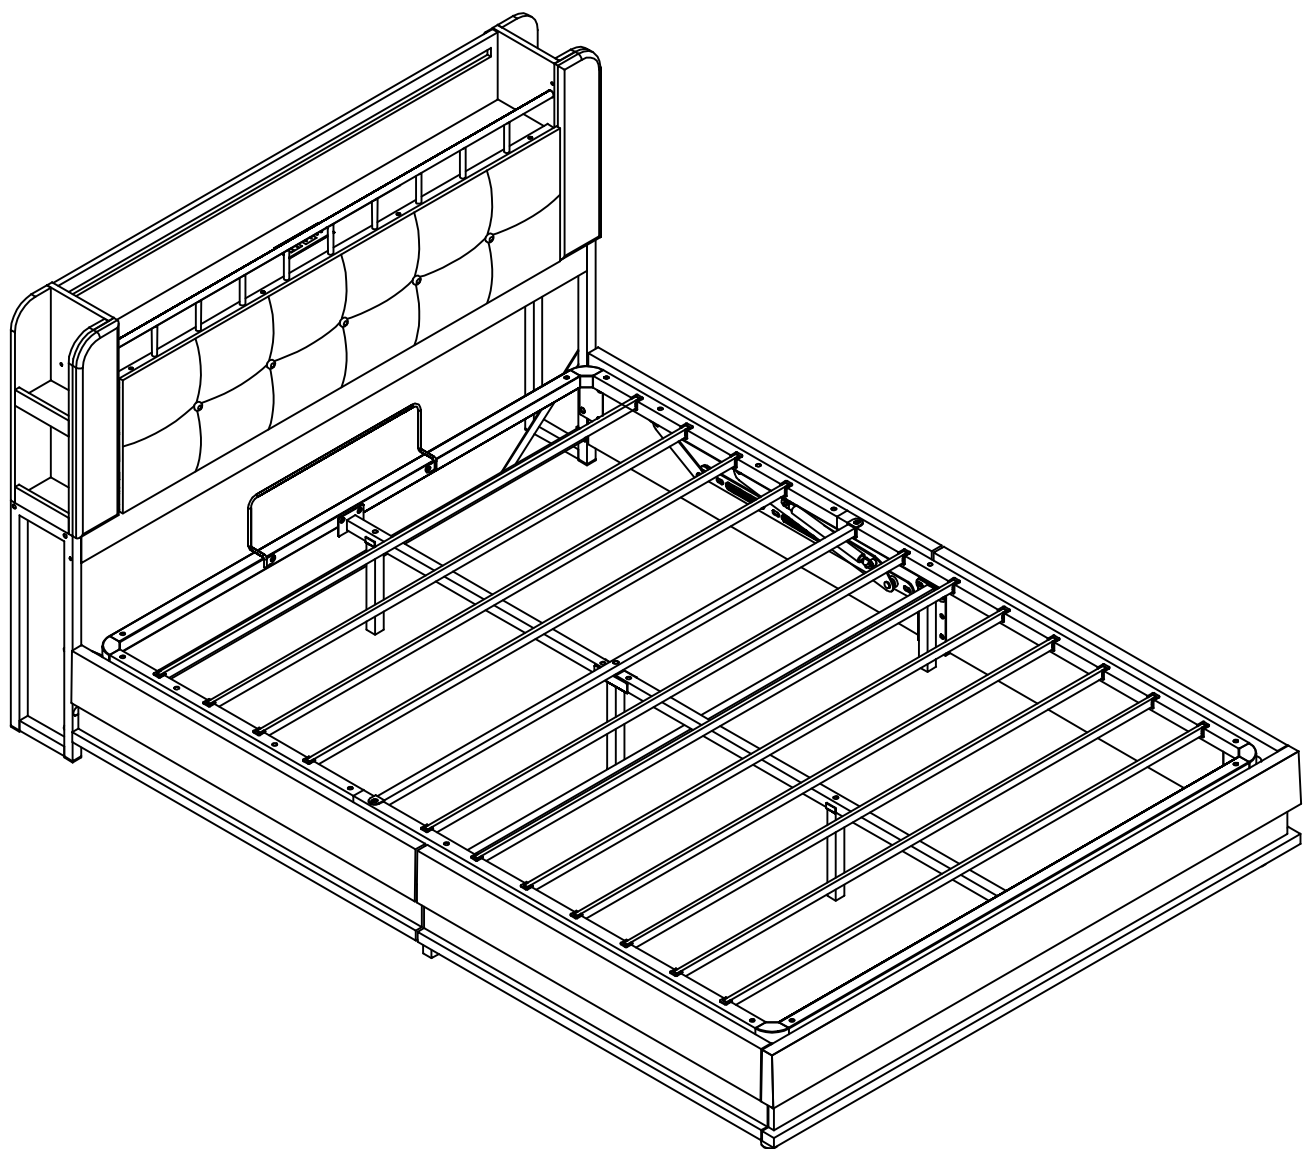
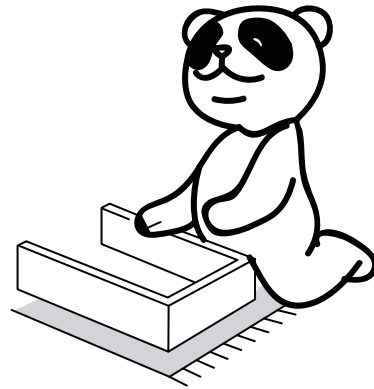




Installation & Assembly

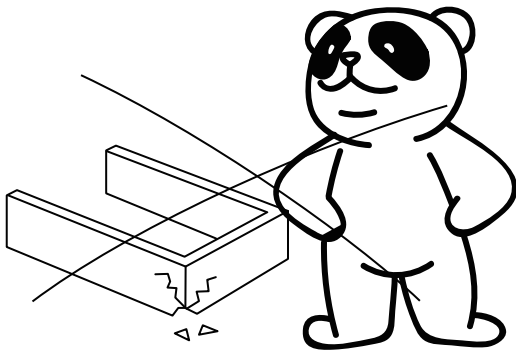



Version: 1.0

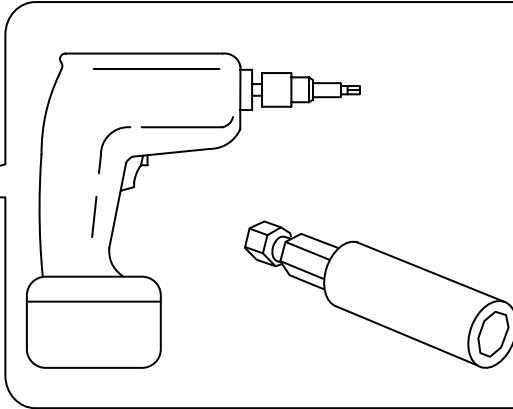

Violent installation is prohibited

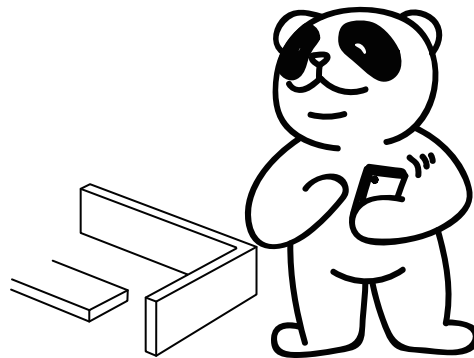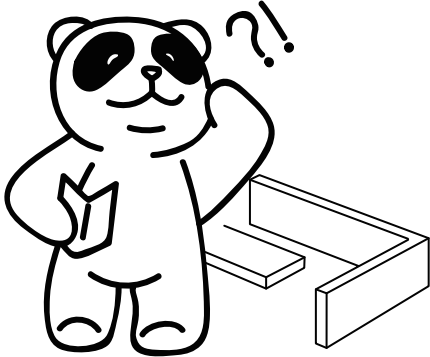


Please call if you need help

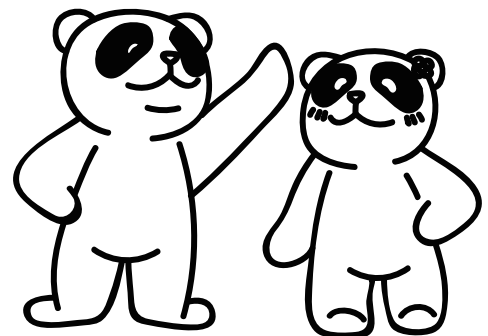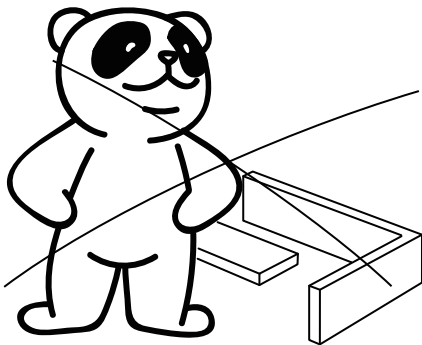


Multi-person cooperation is recommended


Assembly Instruction

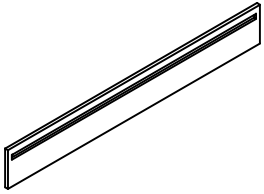


1
x1

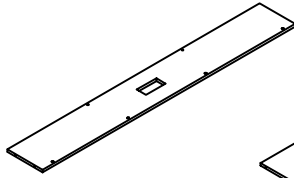

2
x1

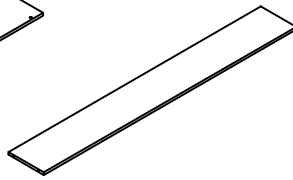

3
x1



4
x1



5
x1




6
x1




7
x1




8
x2

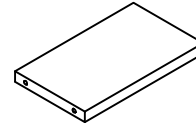


9
x4



10
x4

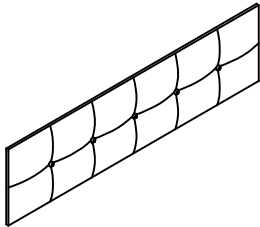


11
x1

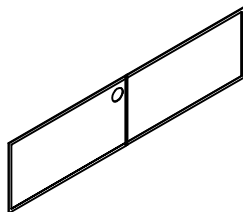


12
x1




13
x1




14
x1

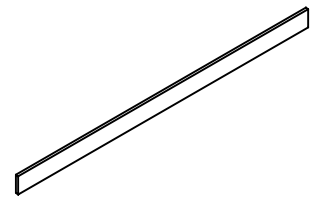


15
x1

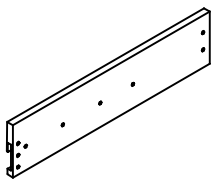


16
x1

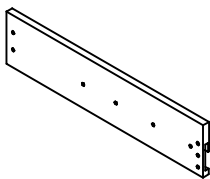


17
x1

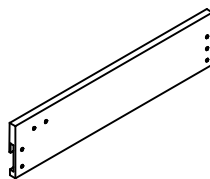


18
x1

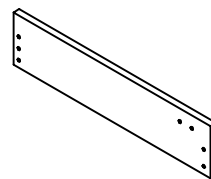


19
x1

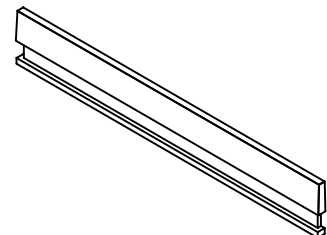


20
x1

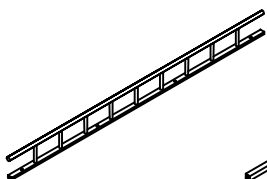


21
x1

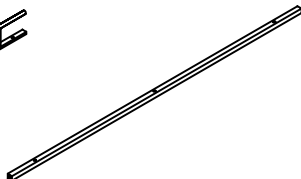


22
x1

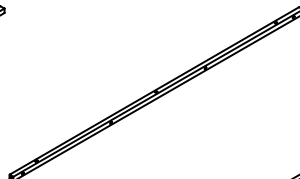

23
x1

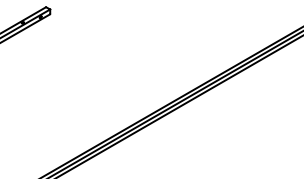


24
x1




25
x1


Assembly Instruction




26
x1

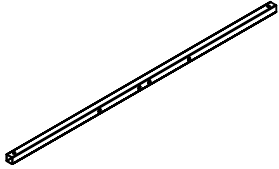


27
x2

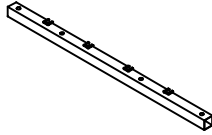


28
x1

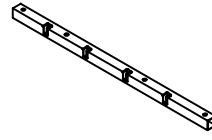


29
x1

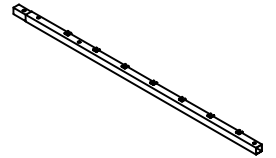


30
x1

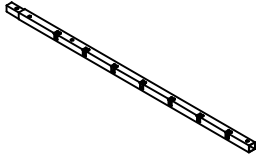


31
x1

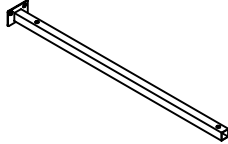


32
x1

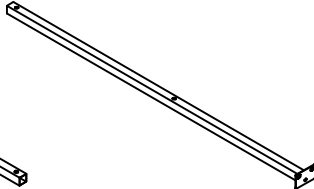


33
x1




34
x2




35
x1




36
x2

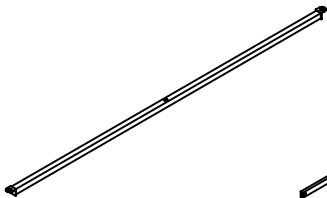


37
x1

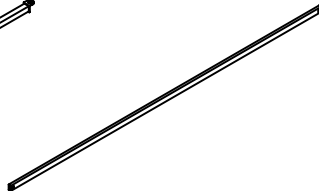

38
x11

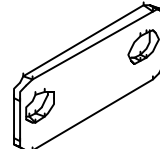


39
x4

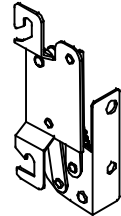


40
x1



41
x1

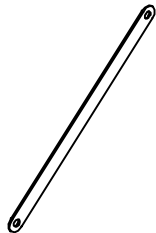


42
x2

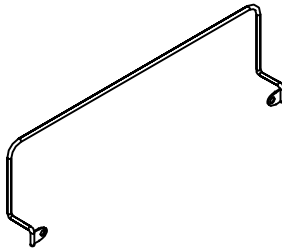


43
x1




44
x2

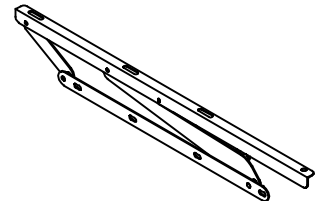


45
x1

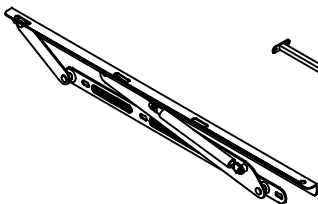


46
x1

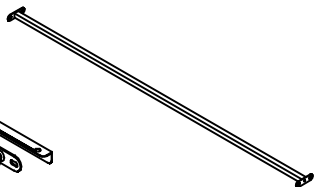


47
x1



48
x4




49
x2

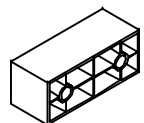


50
x1

Assembly Instruction




51
x1




52
x1



53
x2




54
x1

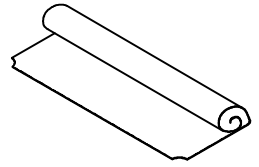


55
x1




56
x1

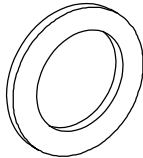

57
x1




58
x1

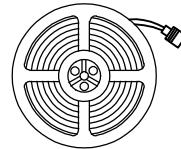


Light strip

59
x2

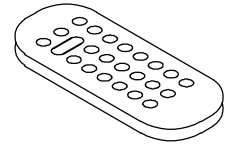

Remote control

60
x1



Magic tape

61
x8

Assembly Instruction



A

M3*12


x2+1



B

M6*18

x4+1



C

M5*35


x46+2



D

M6*20

x6+1



E

M6*50

x4+1



F

M6*32

x4+1



G

M8*15

x48+2



H

M8*20

x12+1



I

M8*12

x8+1



J

M8*35

x6+1



K

M8*45

x8+1



L

M8*55

x1



M

M6*10

x12+1



N

M4*50


x2+1



V


M6*28

x6+1

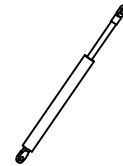

O

x2



P


x2



Q

M6

x1



R

M5


x1



S


M8

x1



W

x12+1



T

x1




U

x1

Assembly Instruction

Note:


1. Should be assembled on flat ground to keep balance.
2. Before completing the installation, do not tighten the screws.

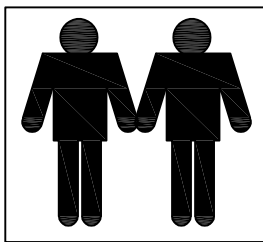

**It needs at least
two people to install !!**




**Before starting the
assembly, you must
read the whole
manual and follow
the instructions**

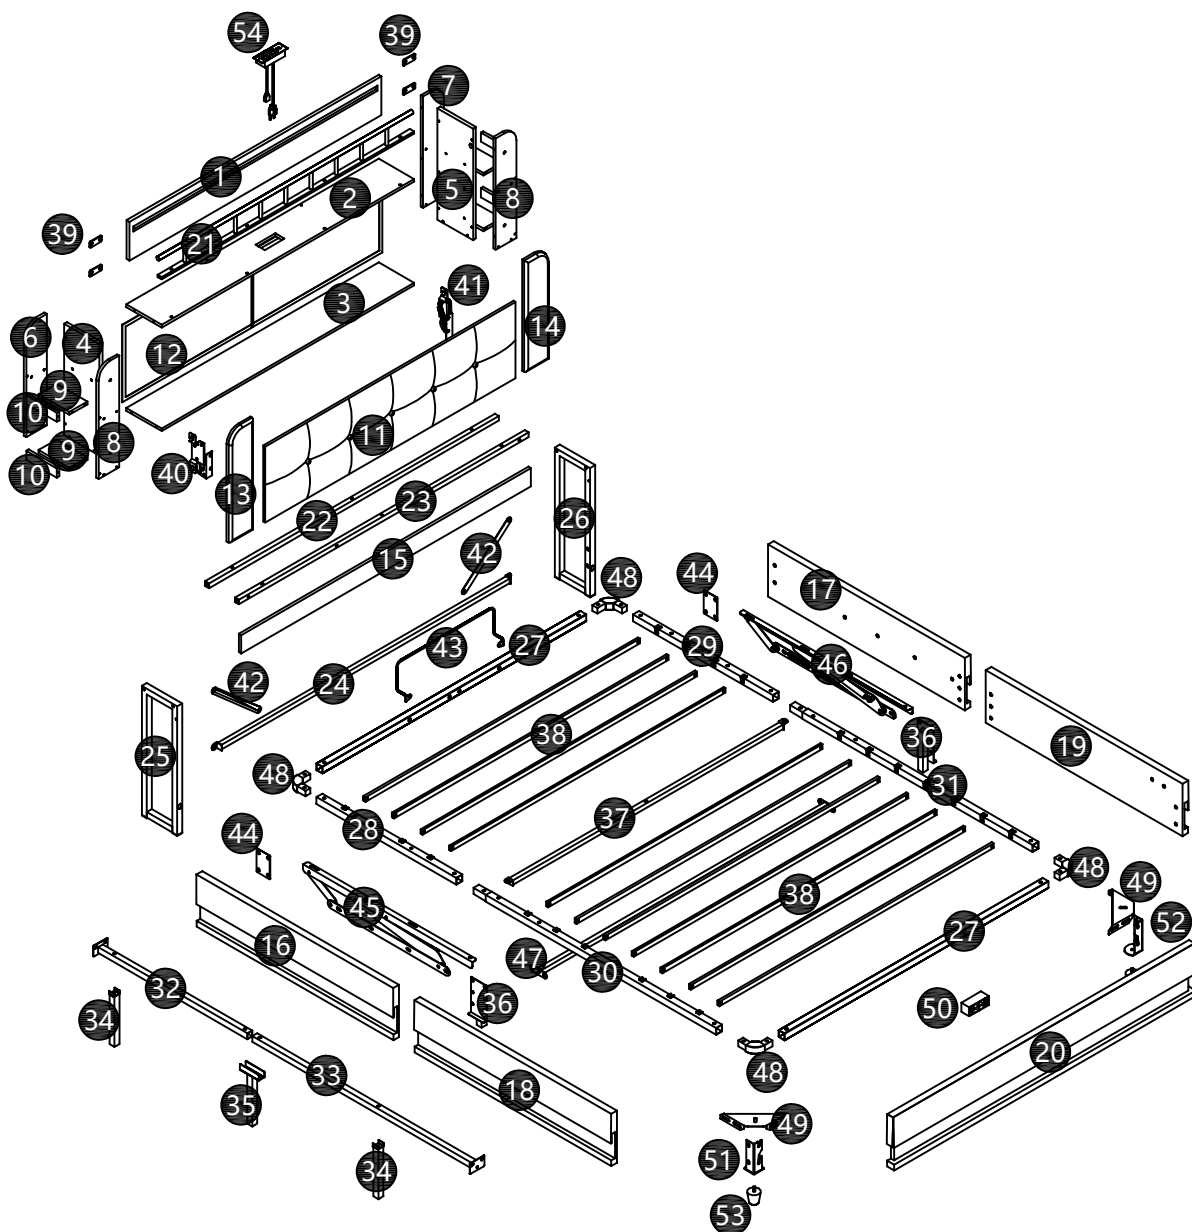


Assembly Instruction


1

B M6*18
 x4

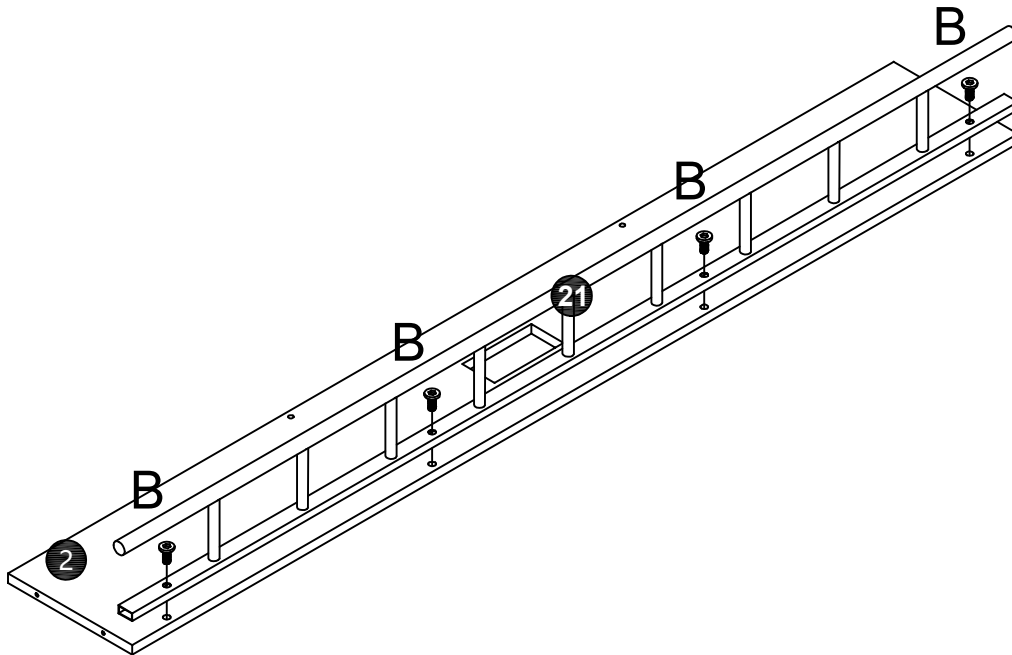


2


C M5*35
 x8

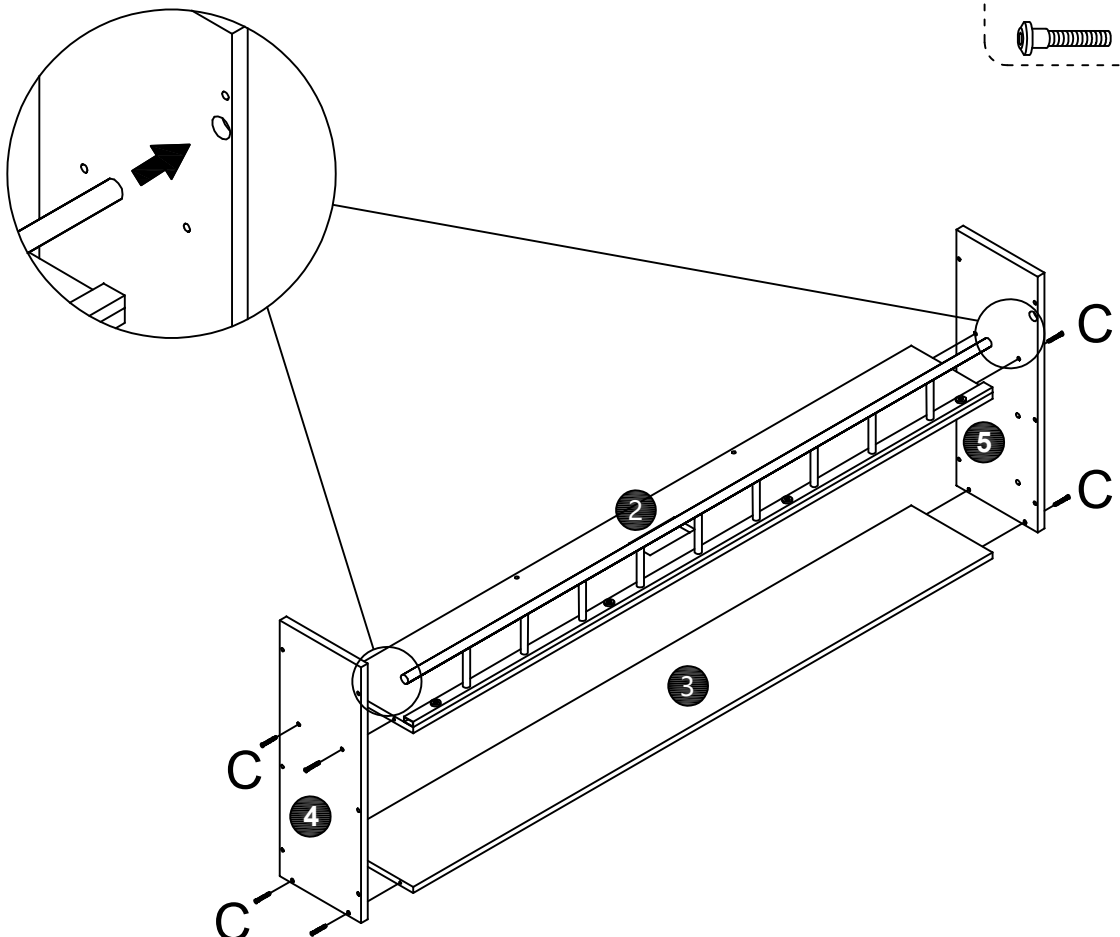


Assembly Instruction


3

C M5*35
 x12

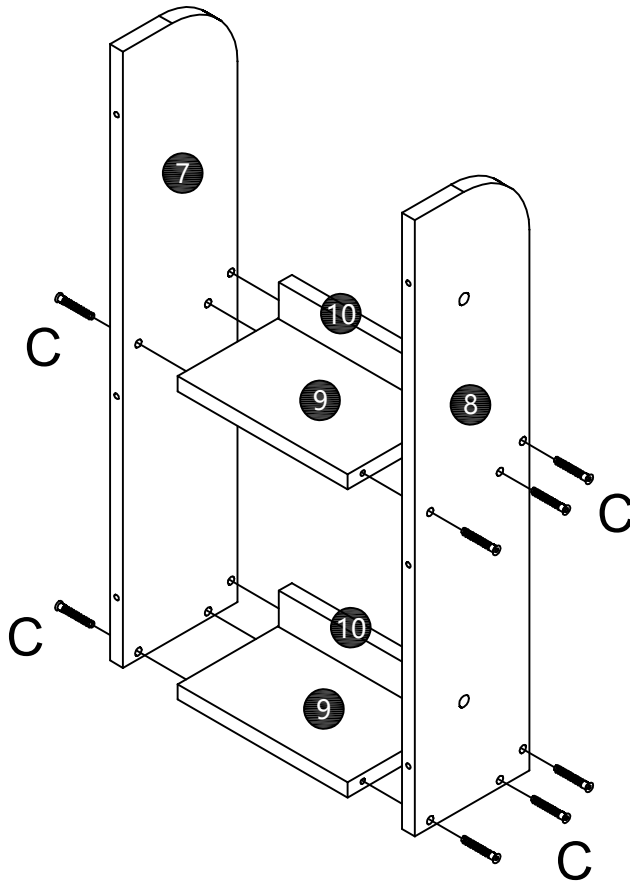


4


C M5*35
 x12

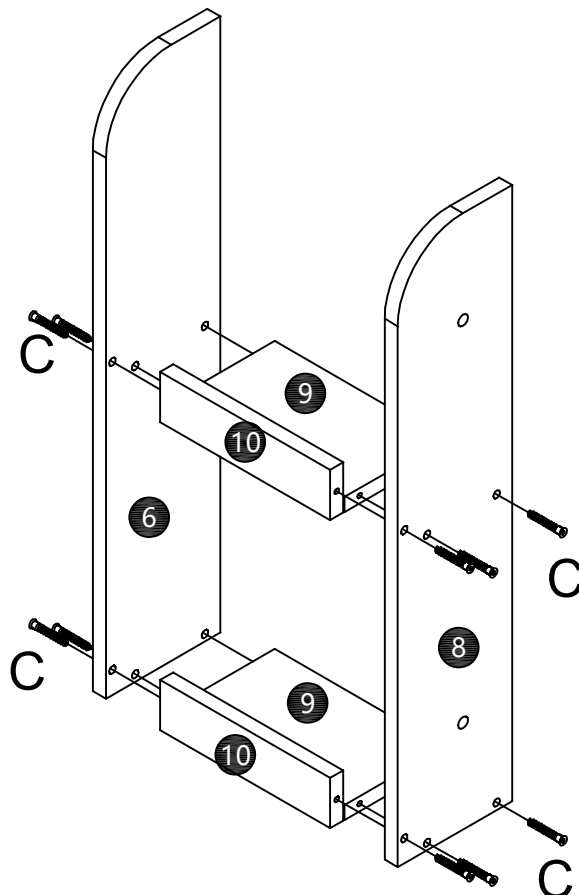

Assembly Instruction



5

C M5*35
 x12

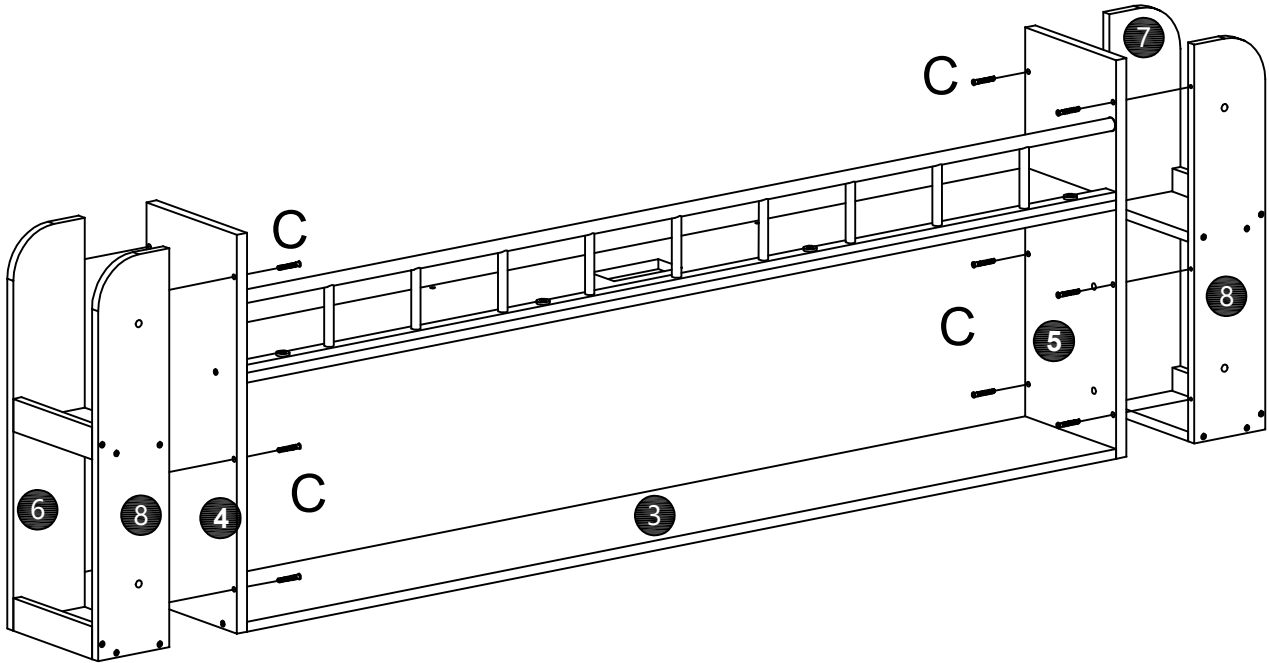

6

A M3*12
 x2

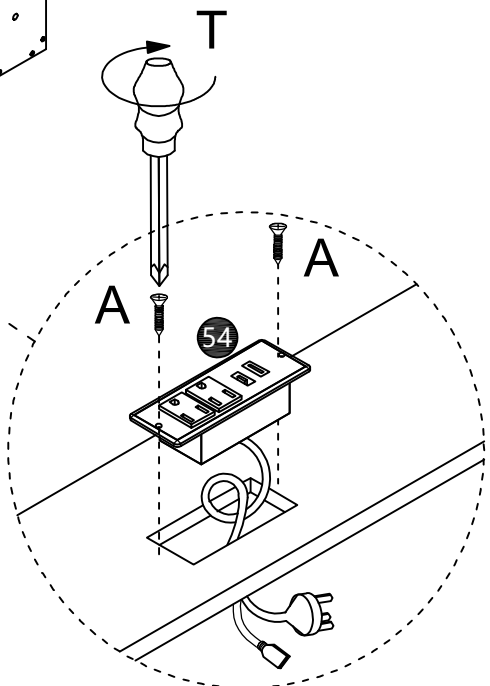
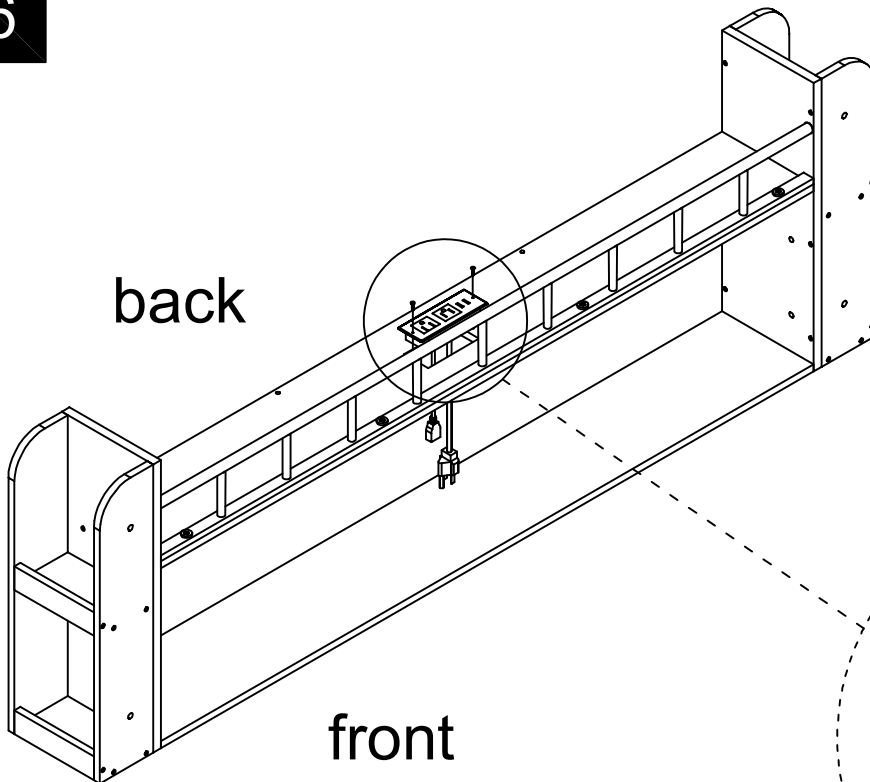


Assembly Instruction

7

D M6*20

x4

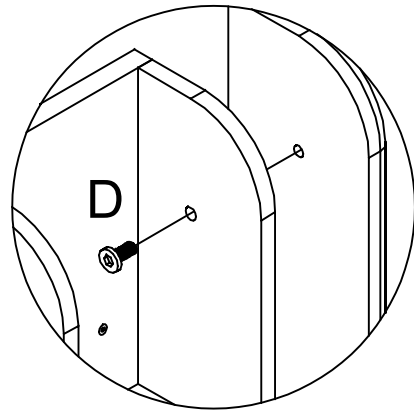
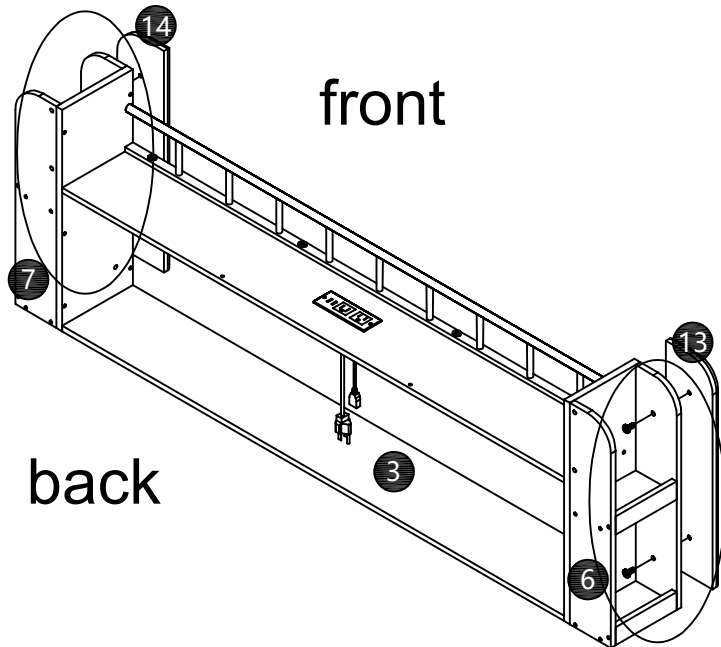


8

Pay attention to the direction of these holes during installation.

E M6*50



x4

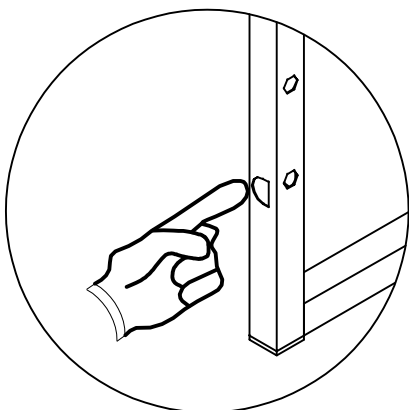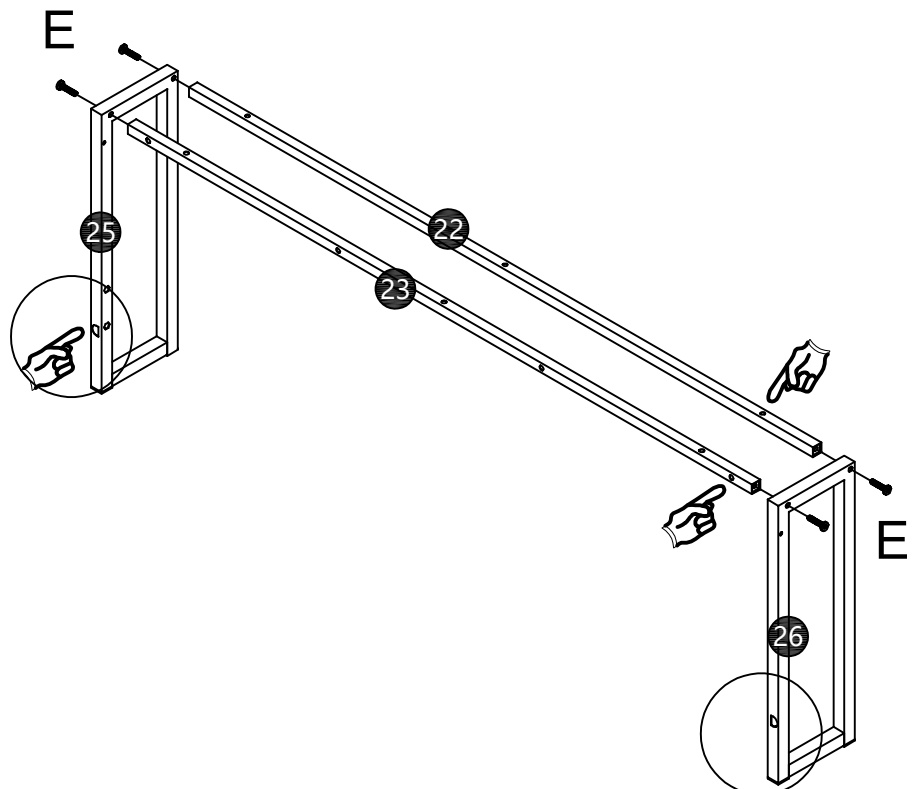

Assembly Instruction


9

G M8*15
x2

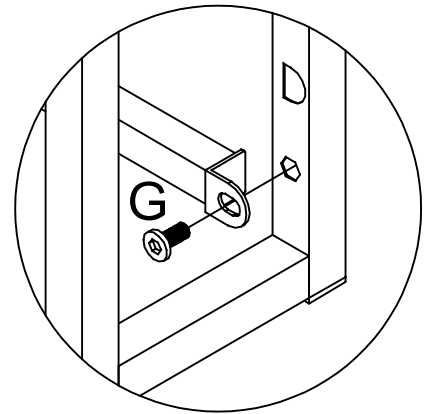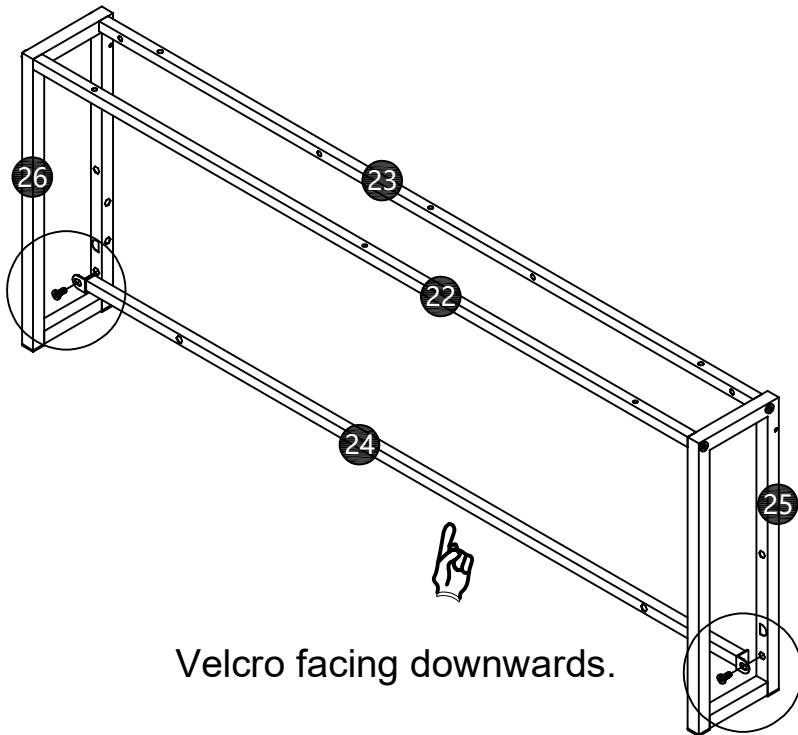

10


G M8*15
x4

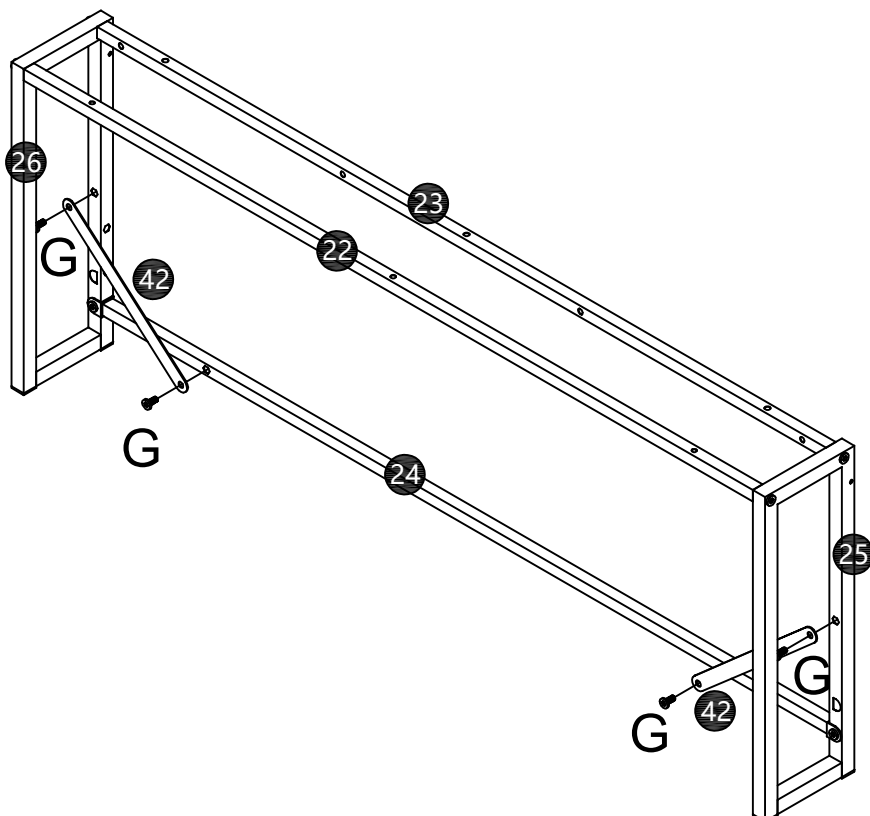


Assembly Instruction

11

V M6*28




During installation, this hole is oriented in the same direction as the soft package

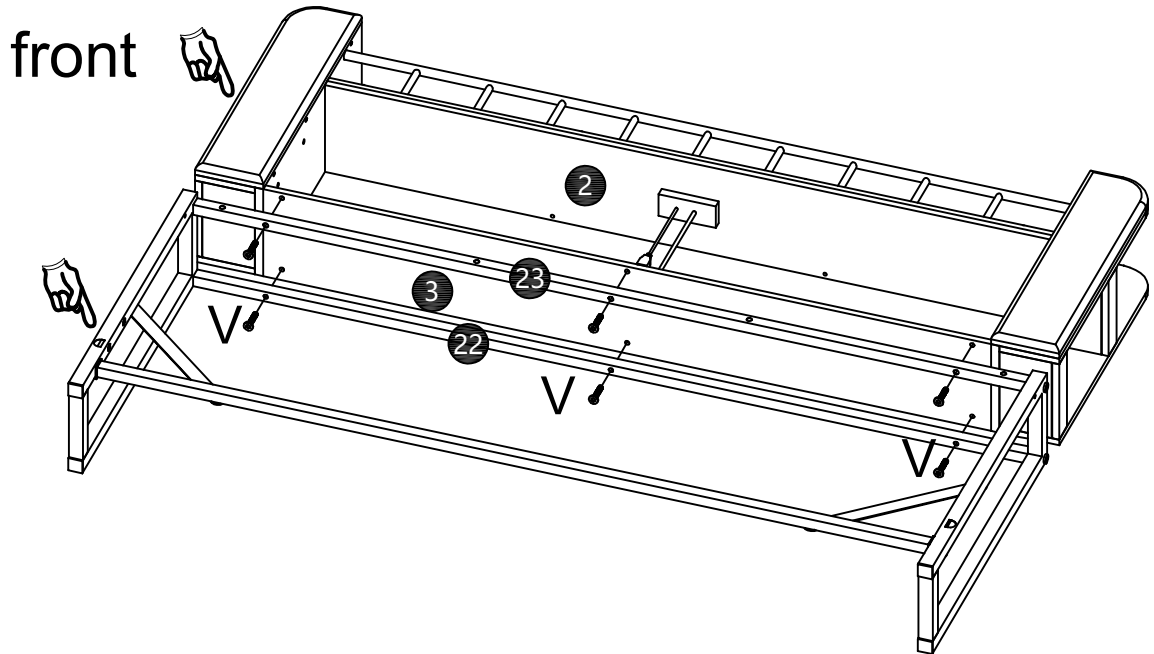


12

To prevent lock explosion, align 15 with the iron pipe before tightening the screw

F M6*32




N M4*50

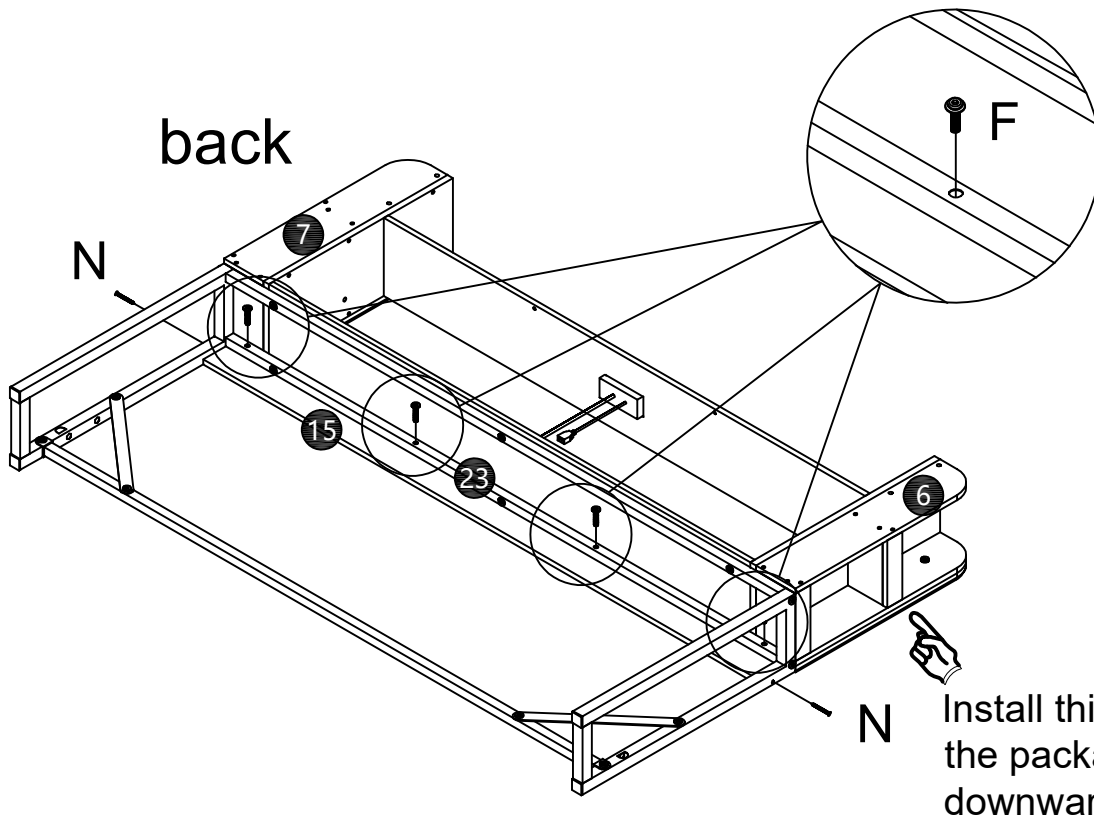


Install this step with the package facing downwards

Assembly Instruction

13

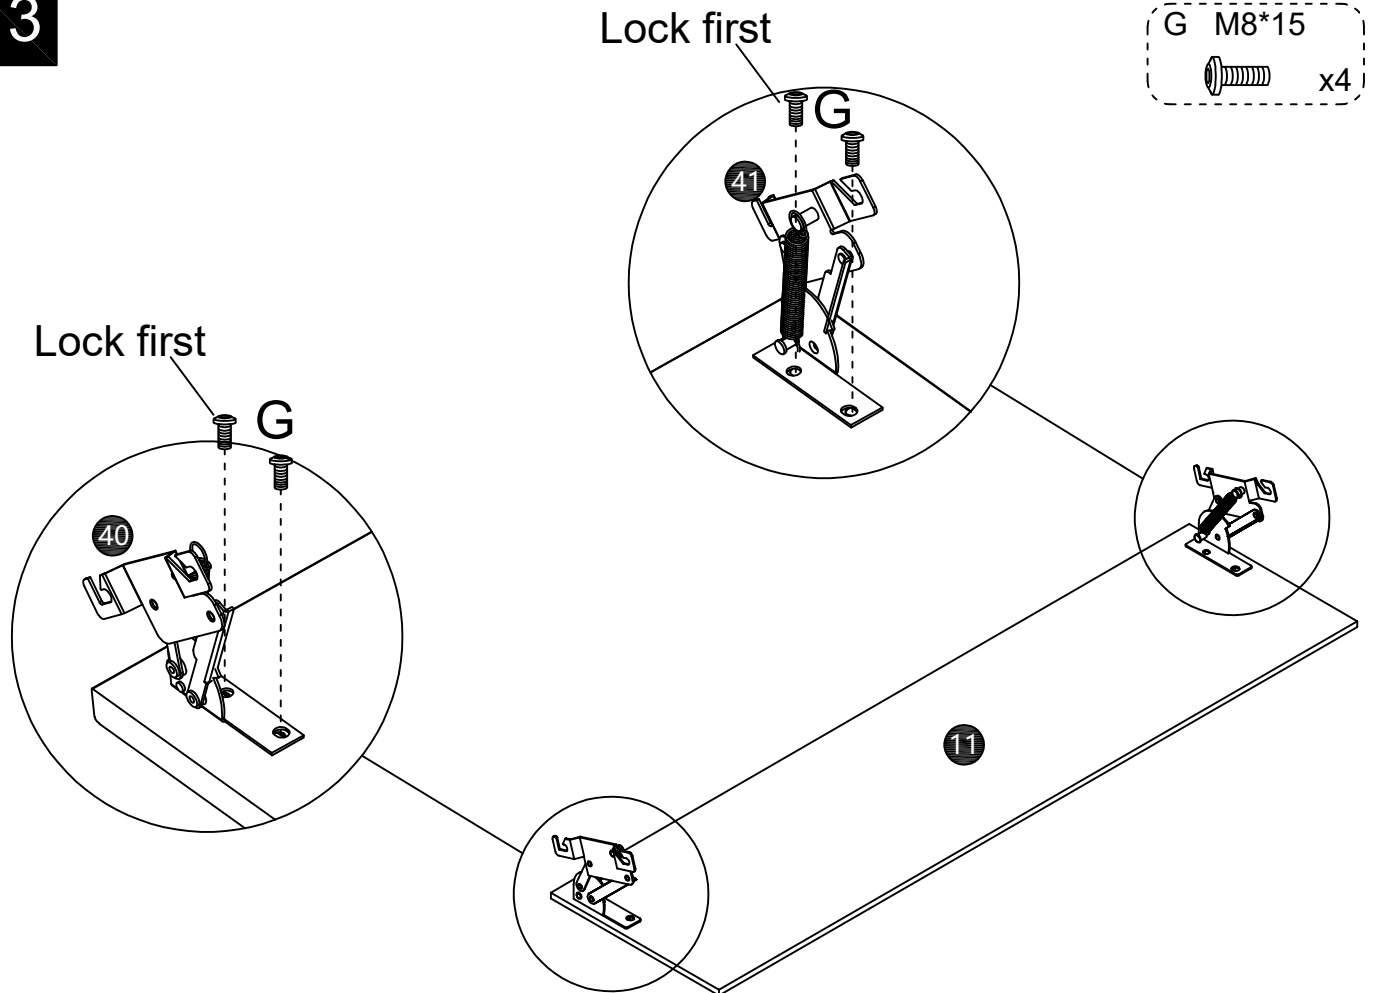




14

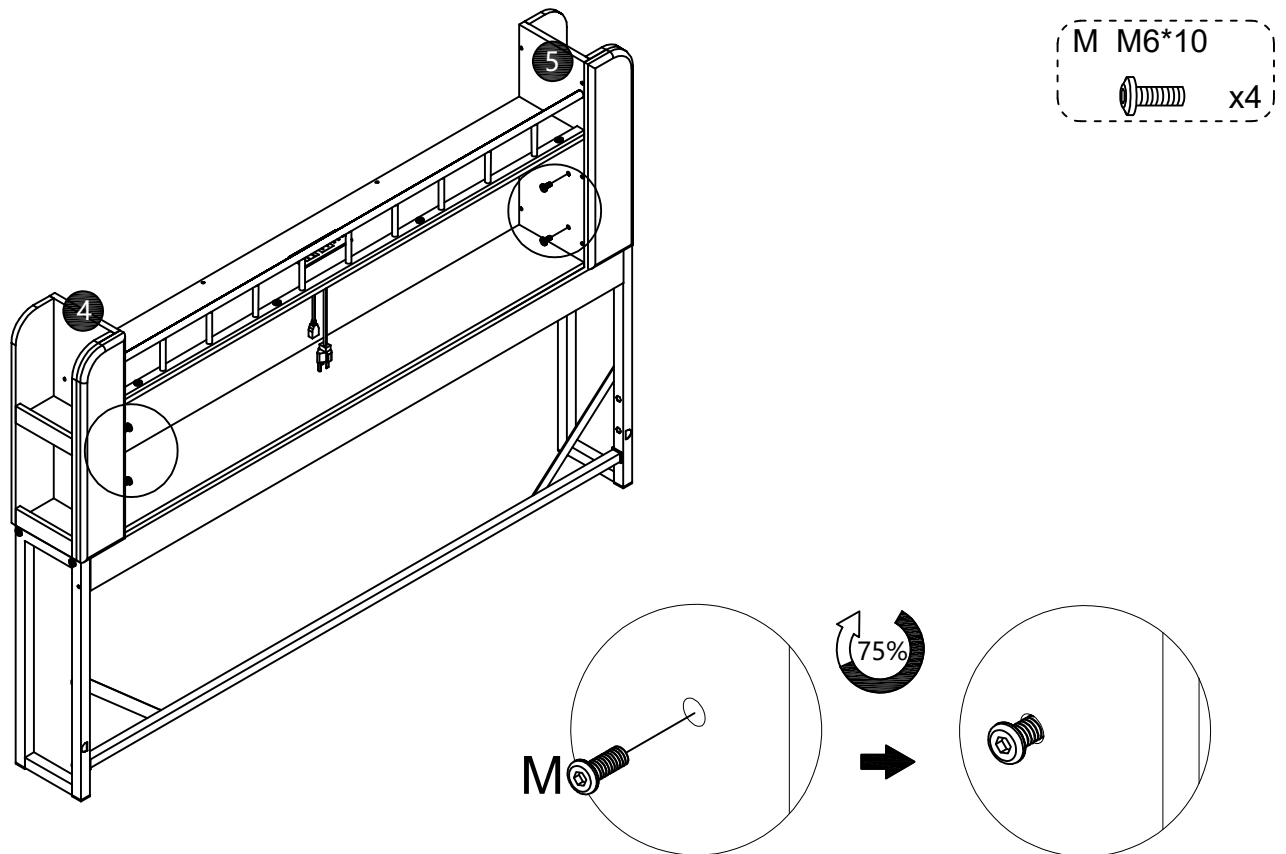

Do not tighten the screws securely


Assembly Instruction

15

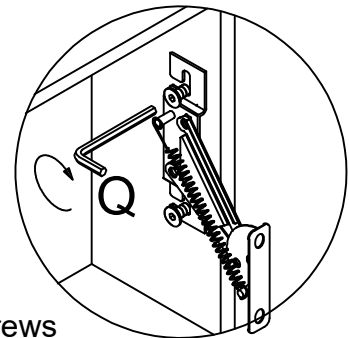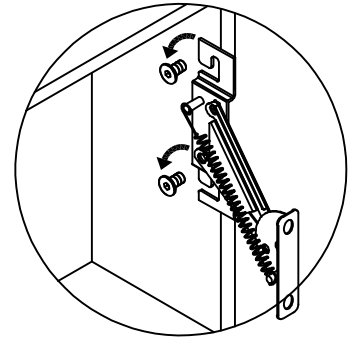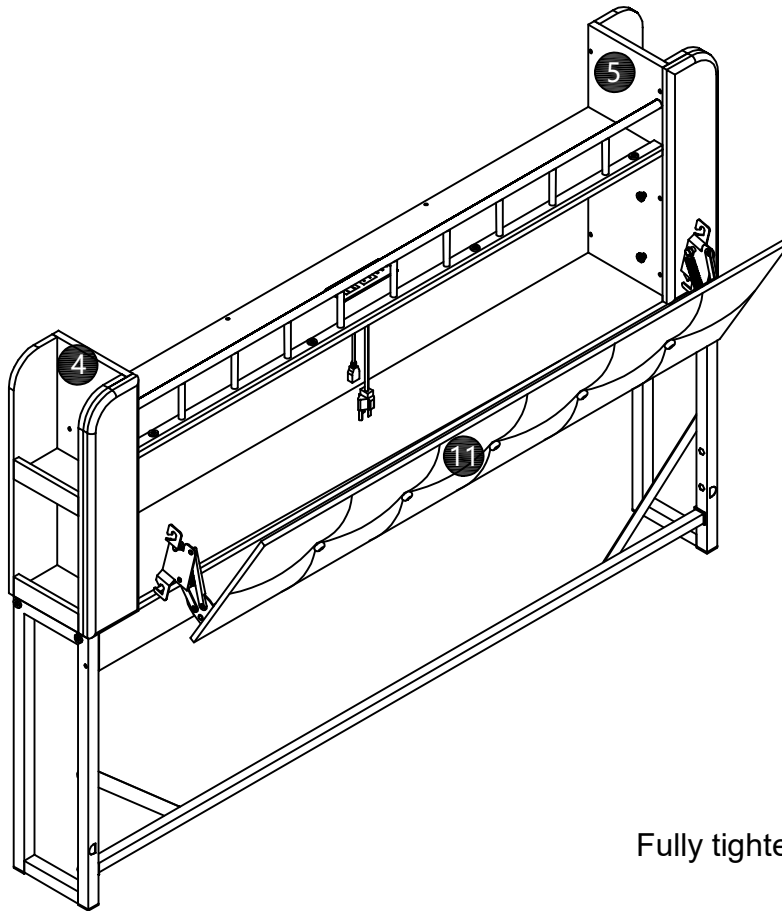


Fully tighten all screws

16

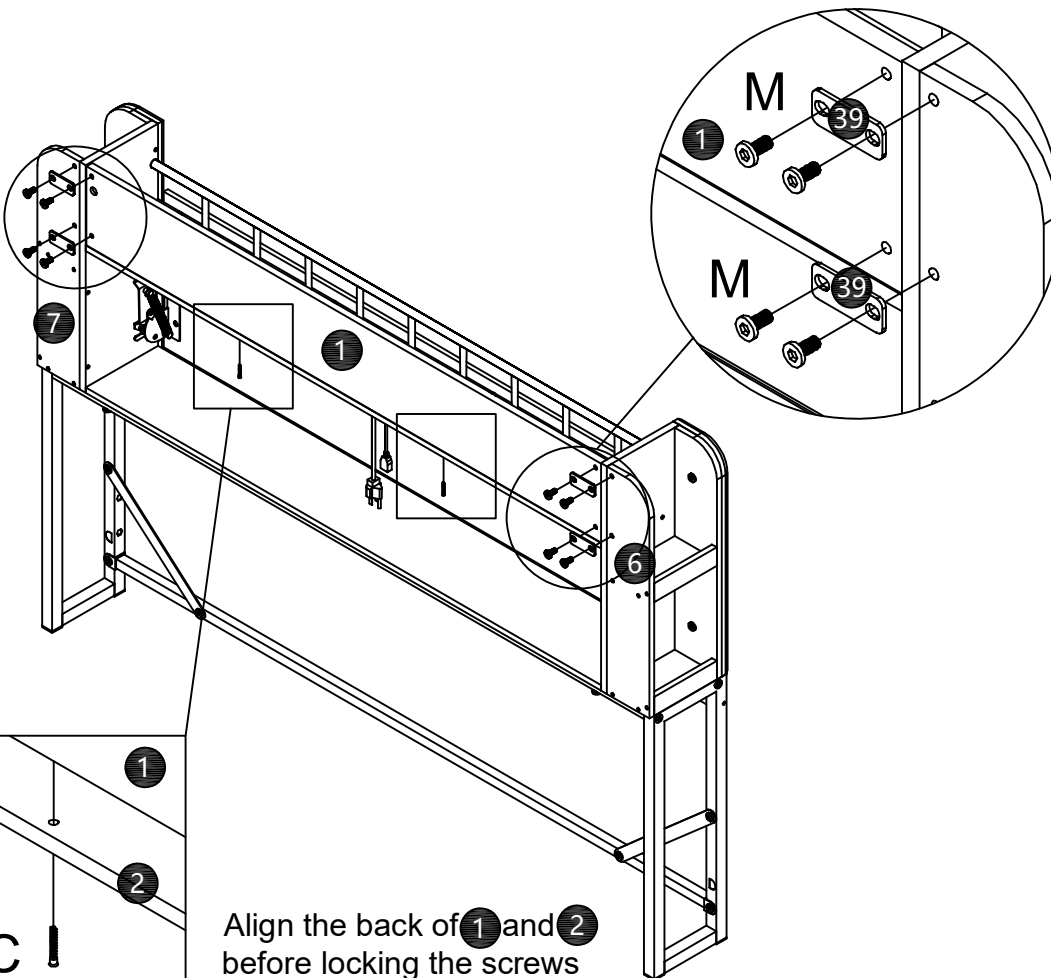

M M6*10
x8


C M5*35
x2

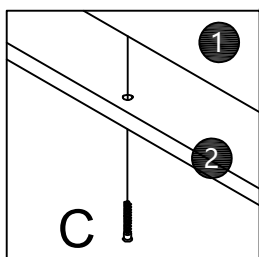


Align the back of 1 and 2
before locking the screws

Assembly Instruction

17

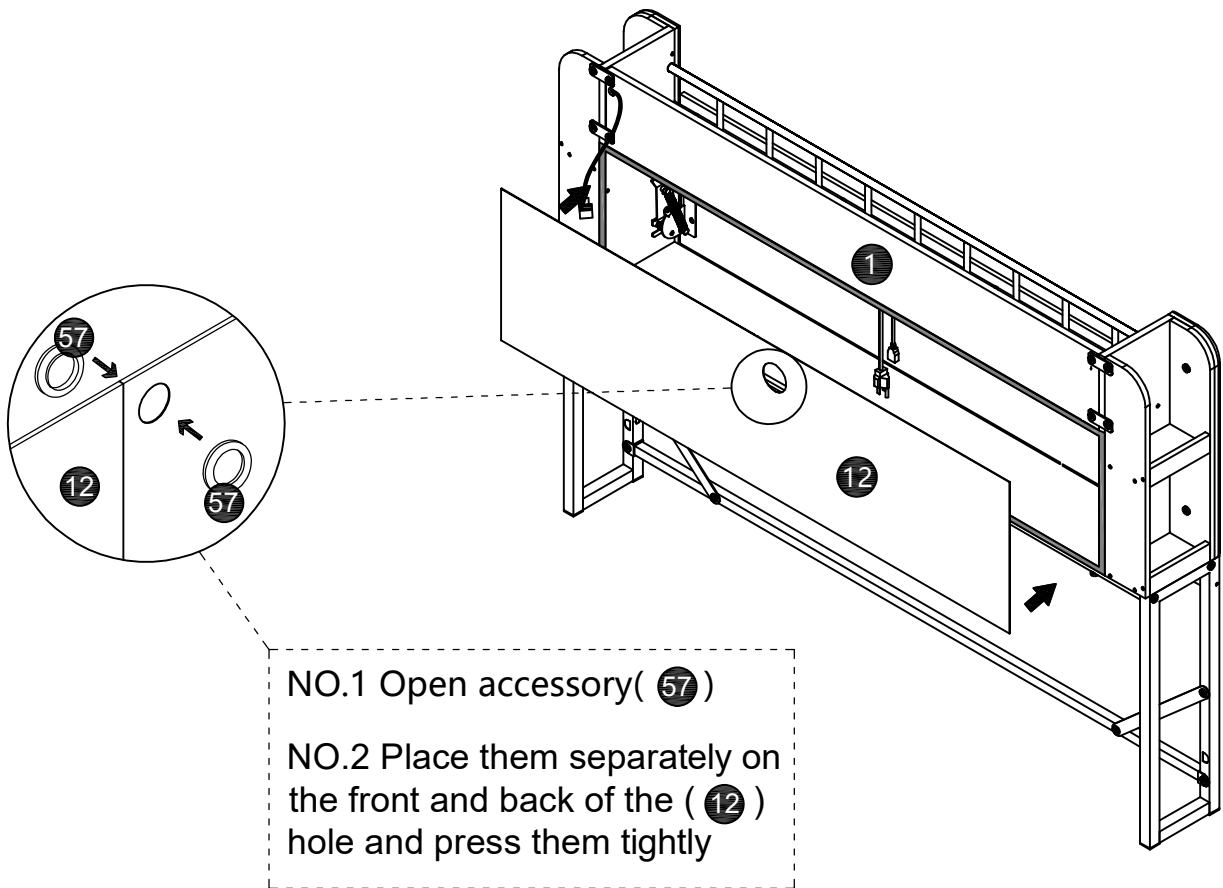


18

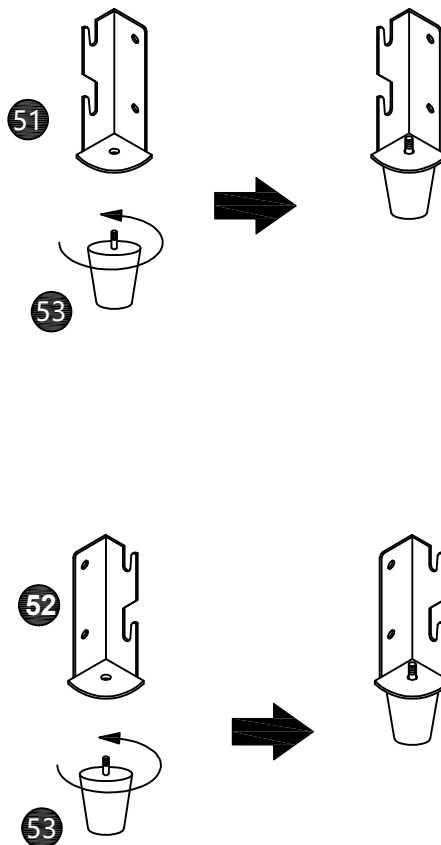

Assembly Instruction


19

G M8*15
 x16

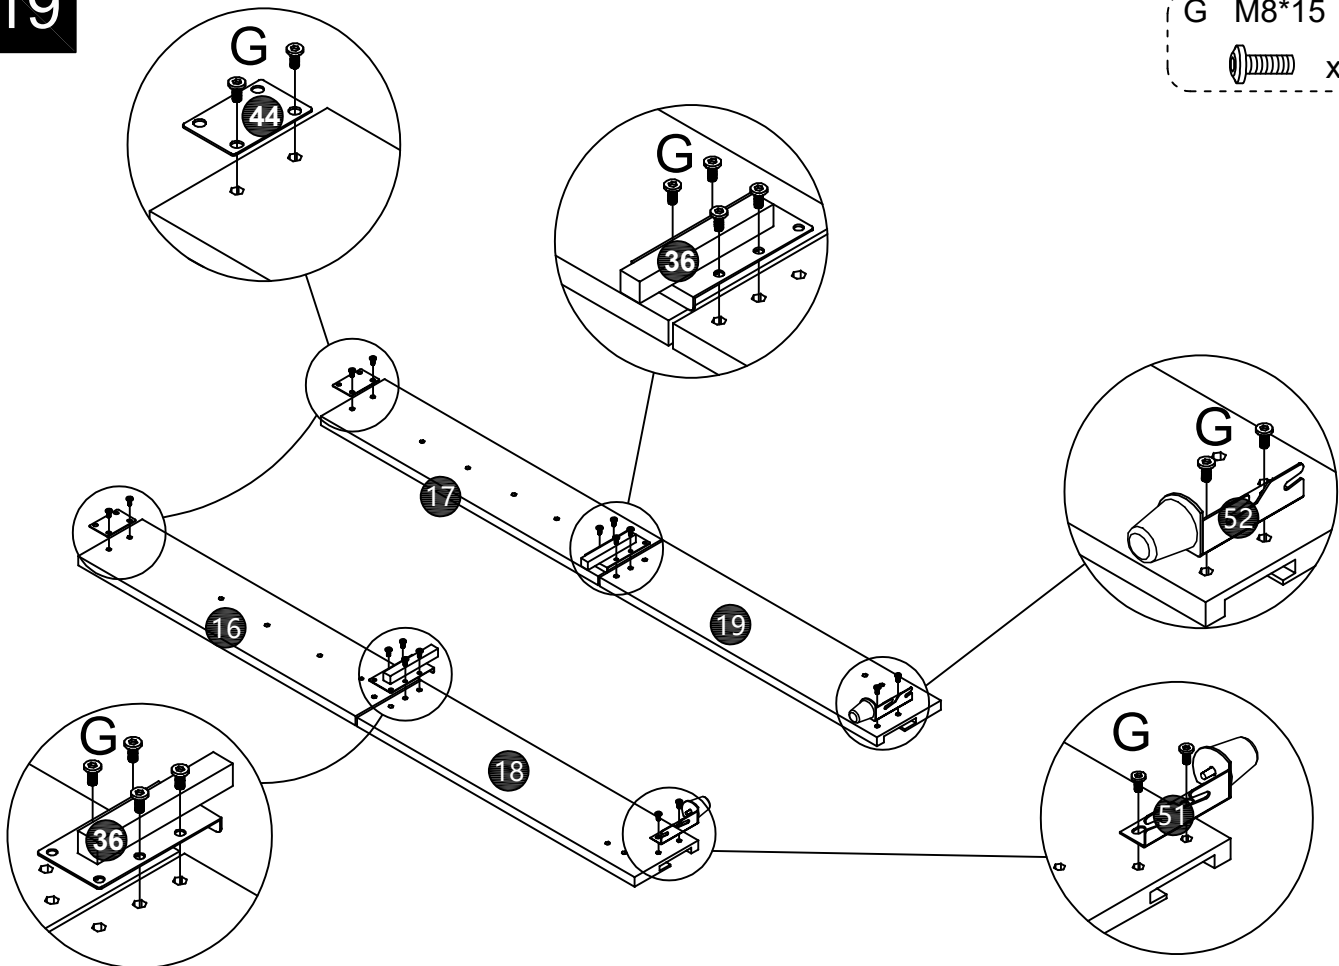

20


G M8*15
 x8

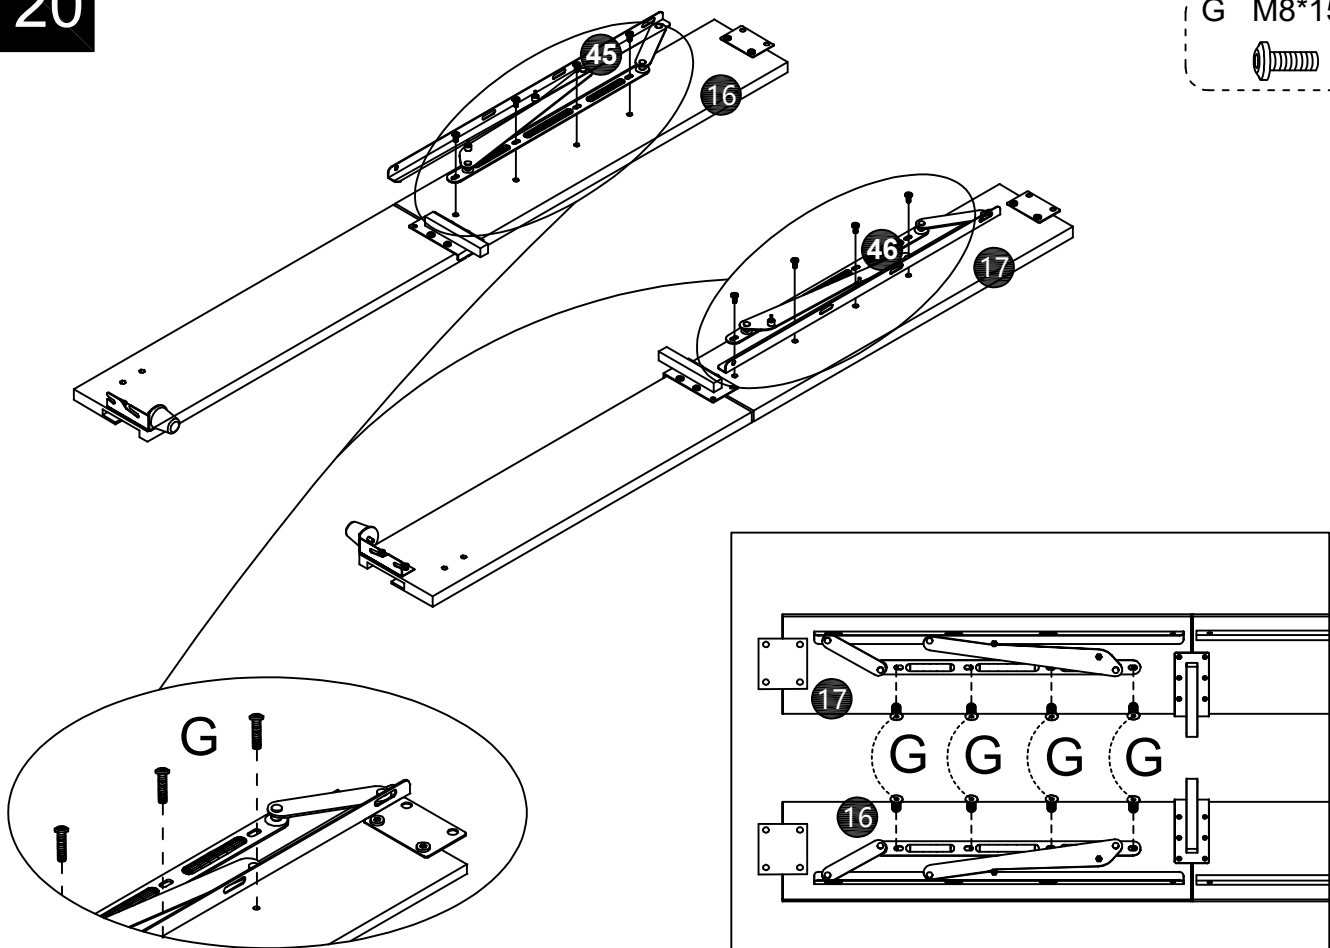

Assembly Instruction


21

G M8*15
x4

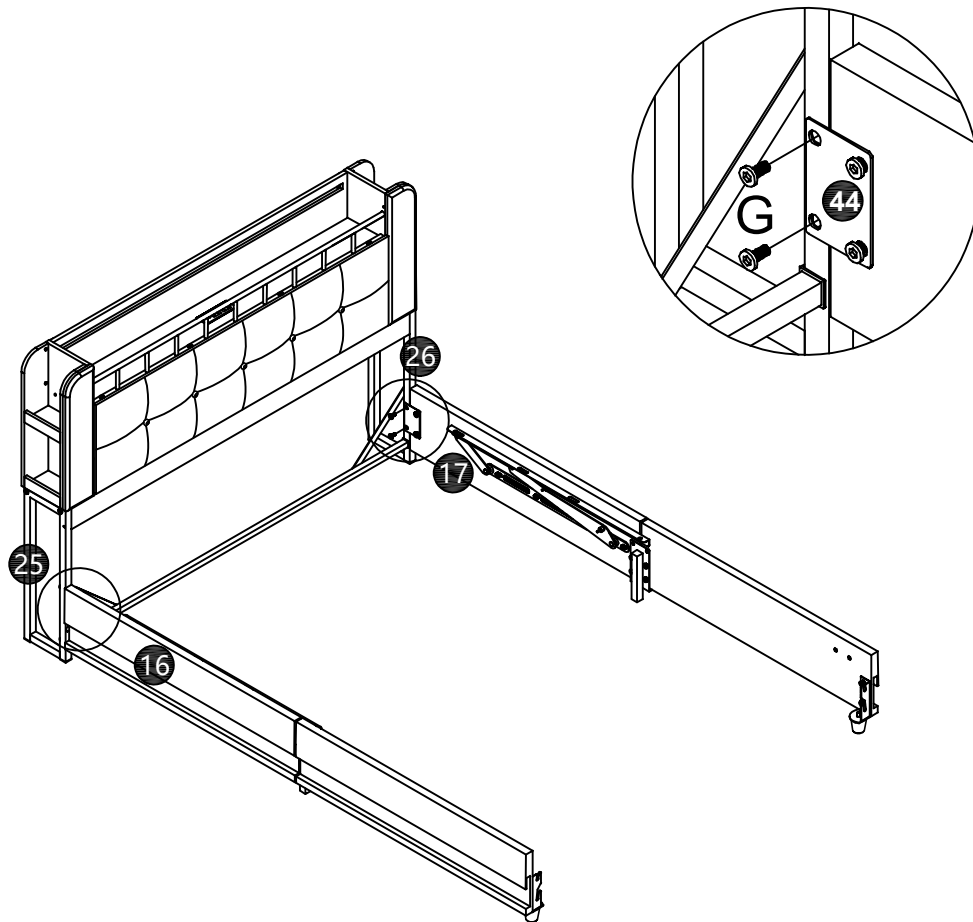


22

H M8*20
x4

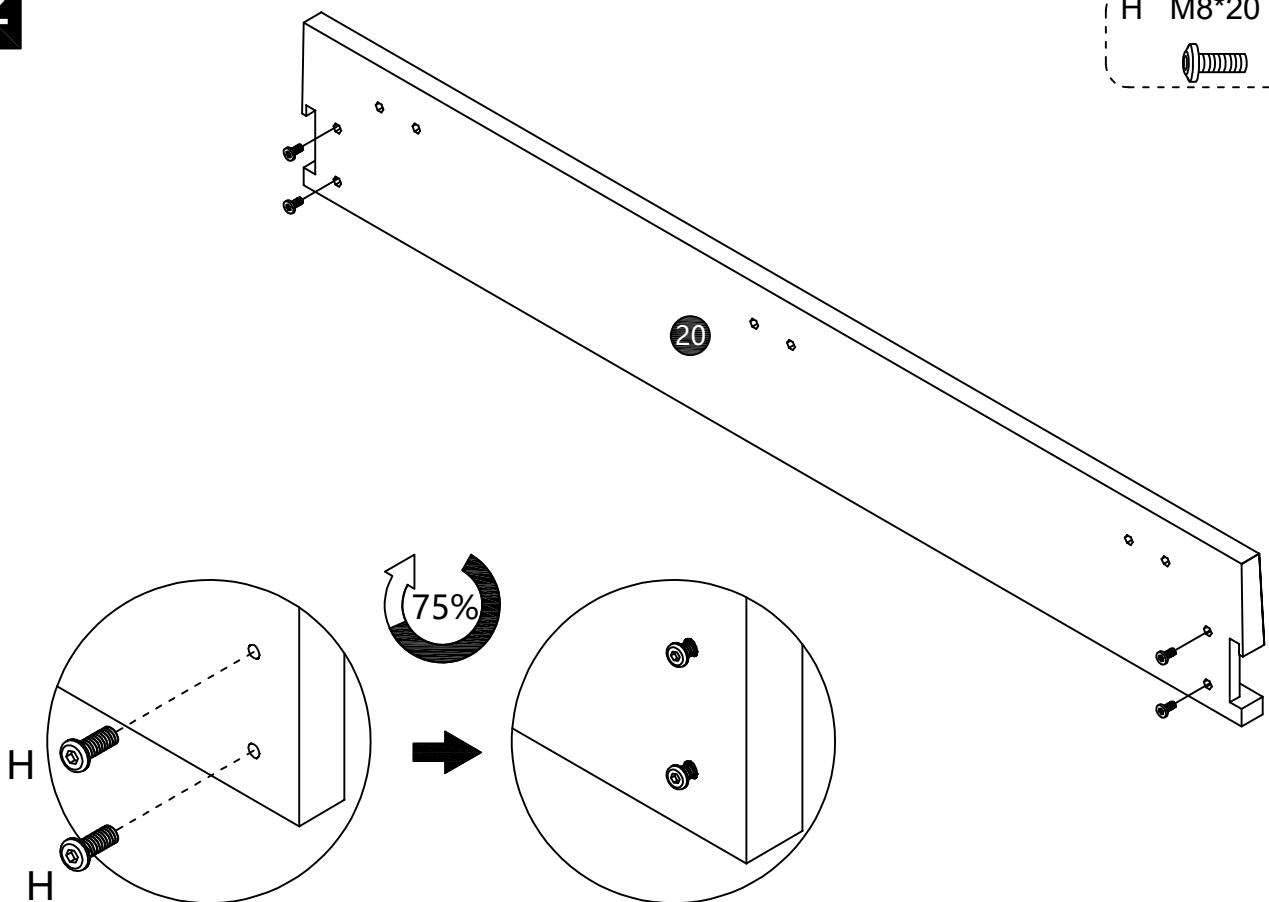


Assembly Instruction

23

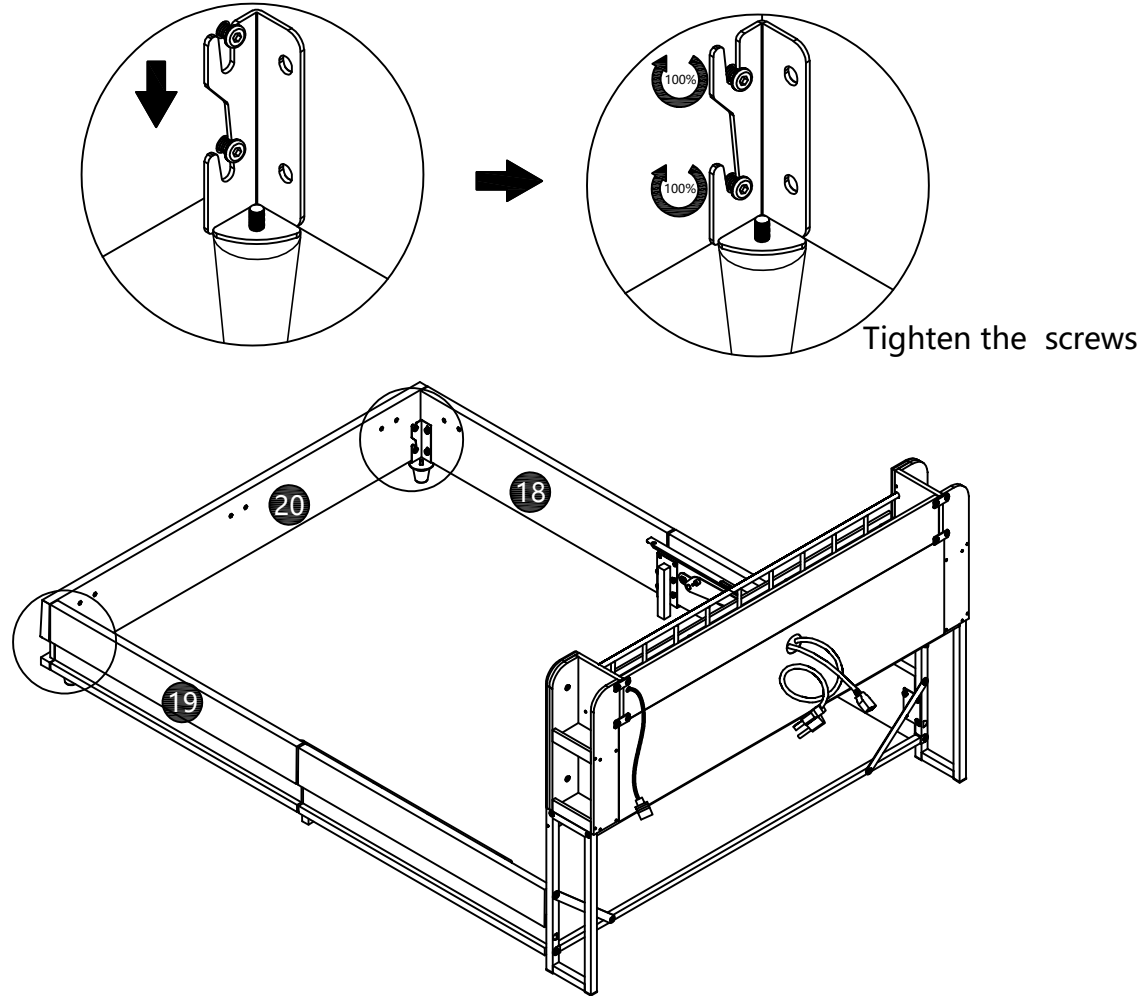

24


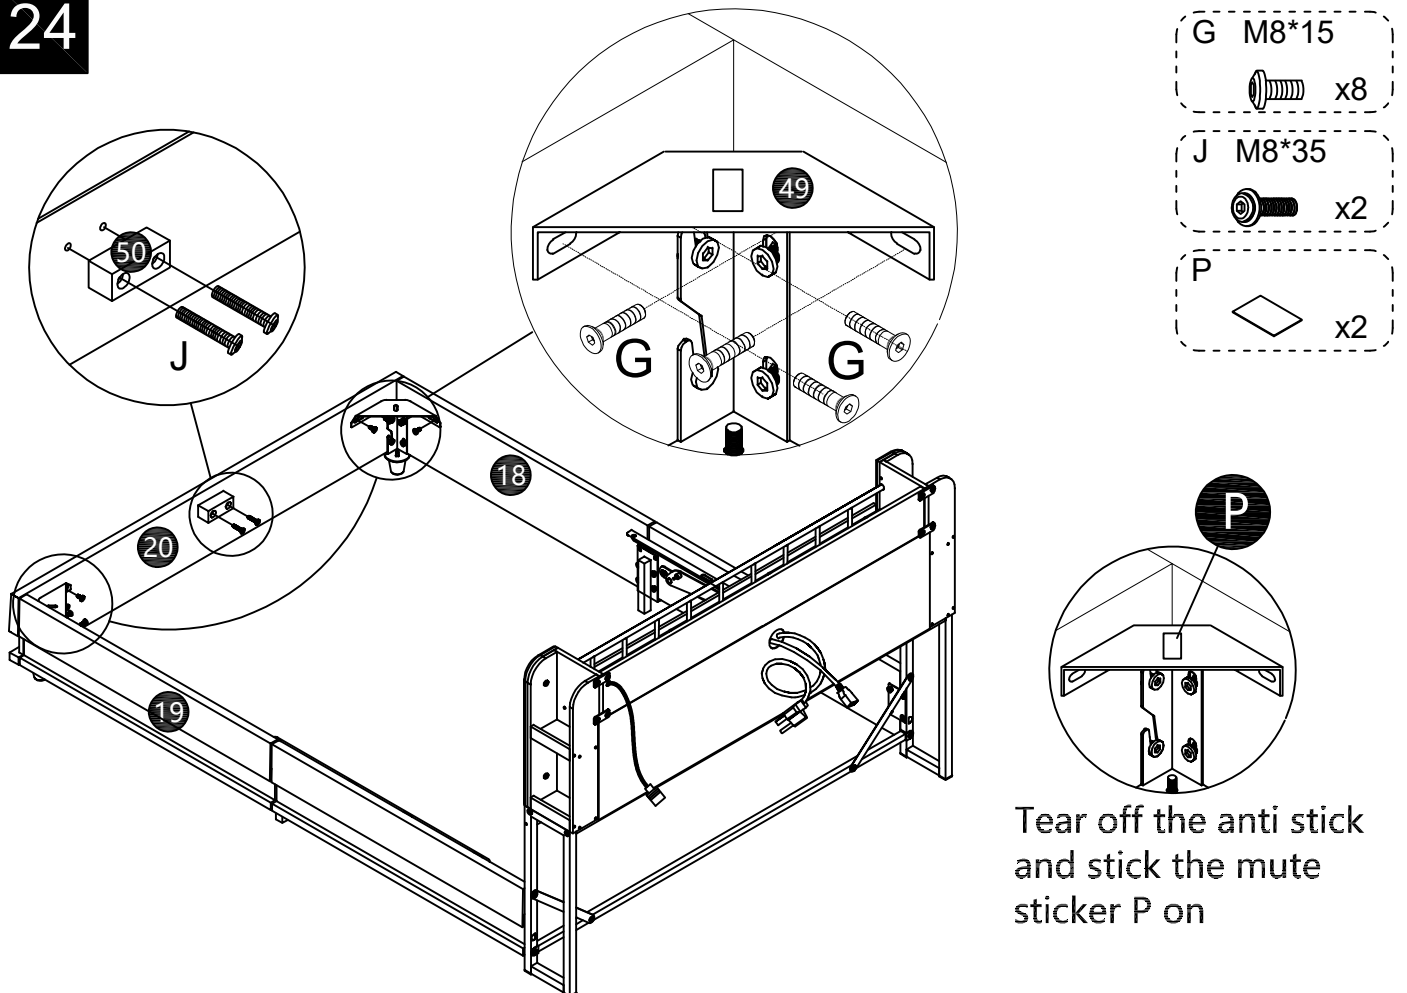


Assembly Instruction

25

H M8*20


x4

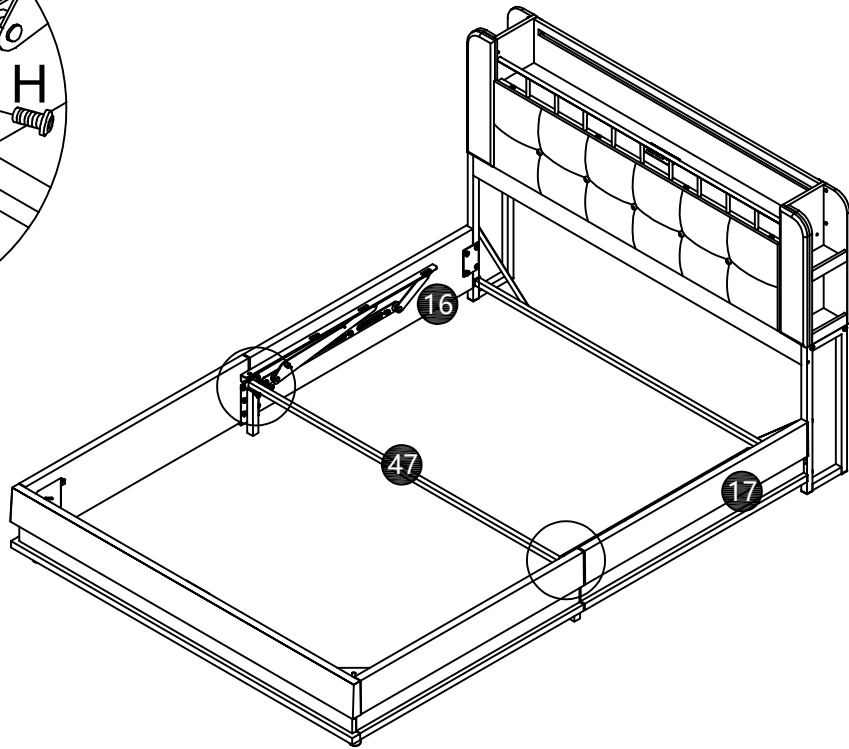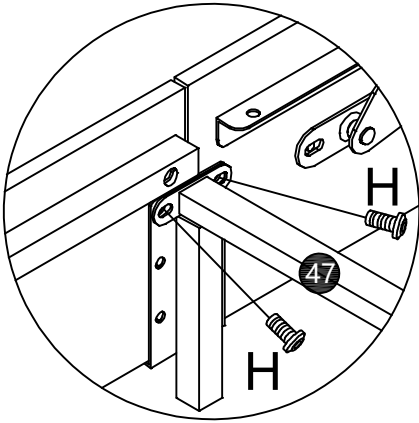

26

J M8*35


x4

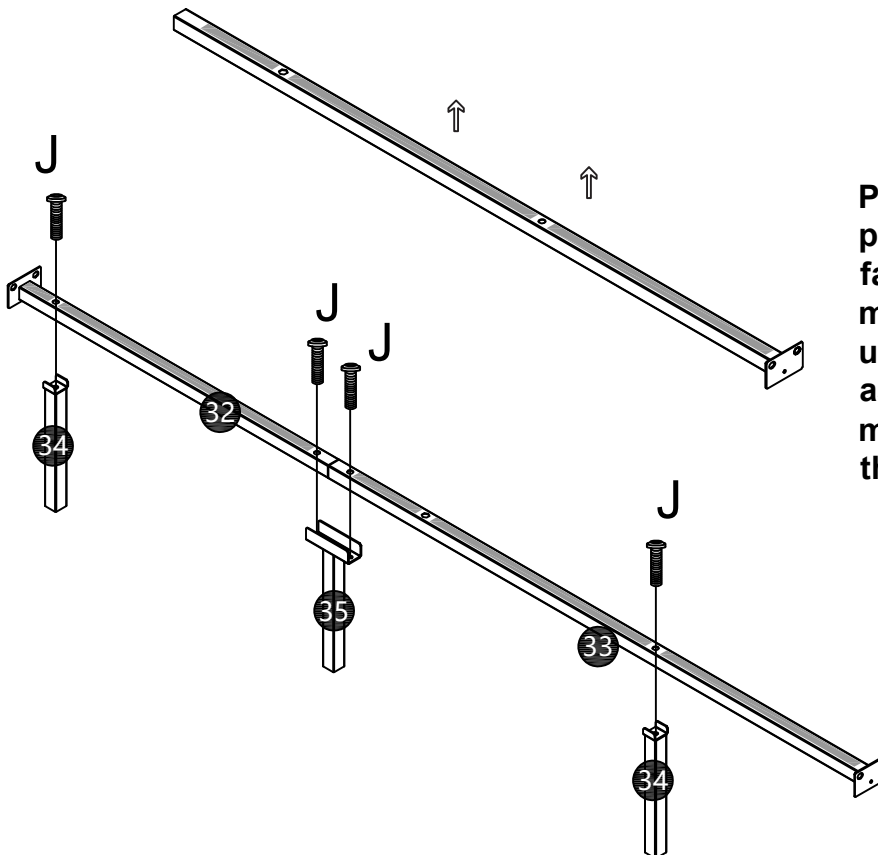



Please be sure to pay attention to the fact that there are mute stickers facing upwards during assembly, and the material feels soft to the touch

Assembly Instruction


27

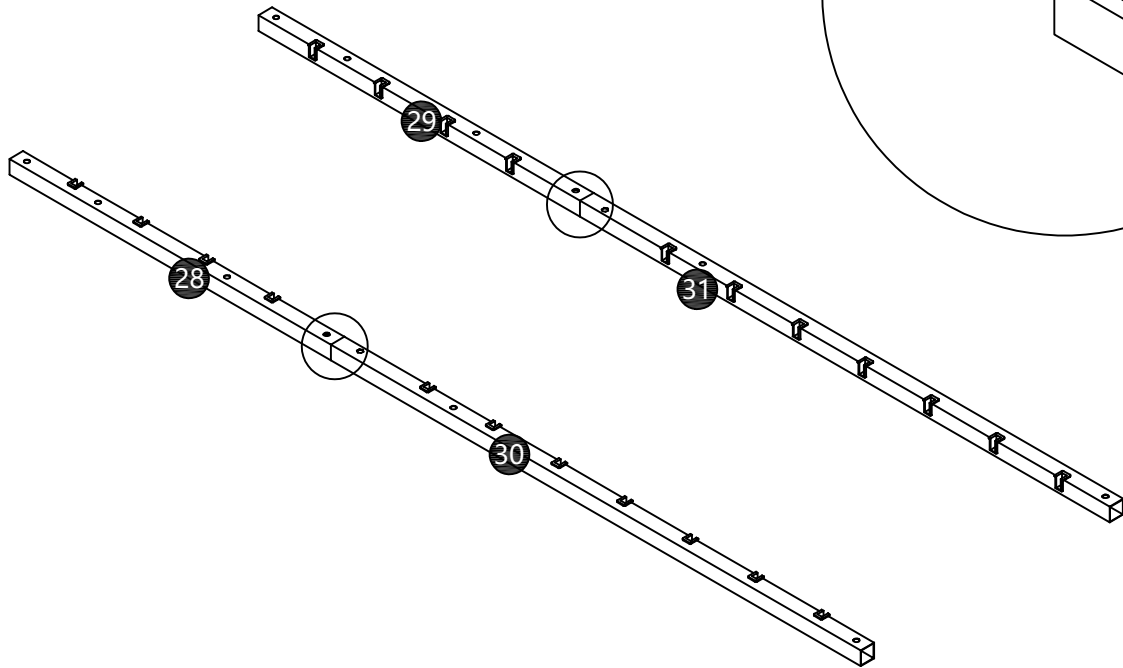

28

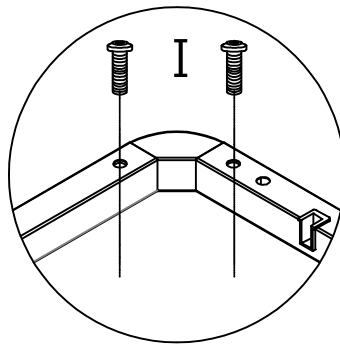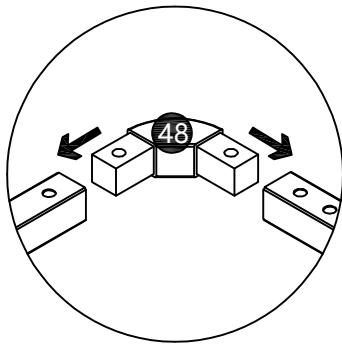


I M8*12
x8

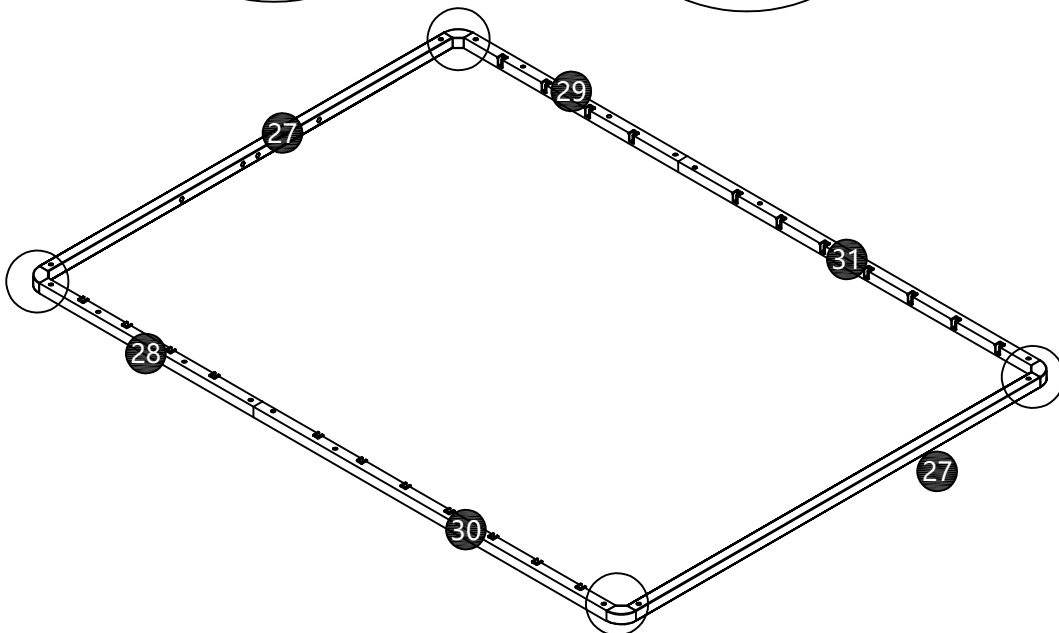

The screw hole of
27 faces inward

Assembly Instruction


29

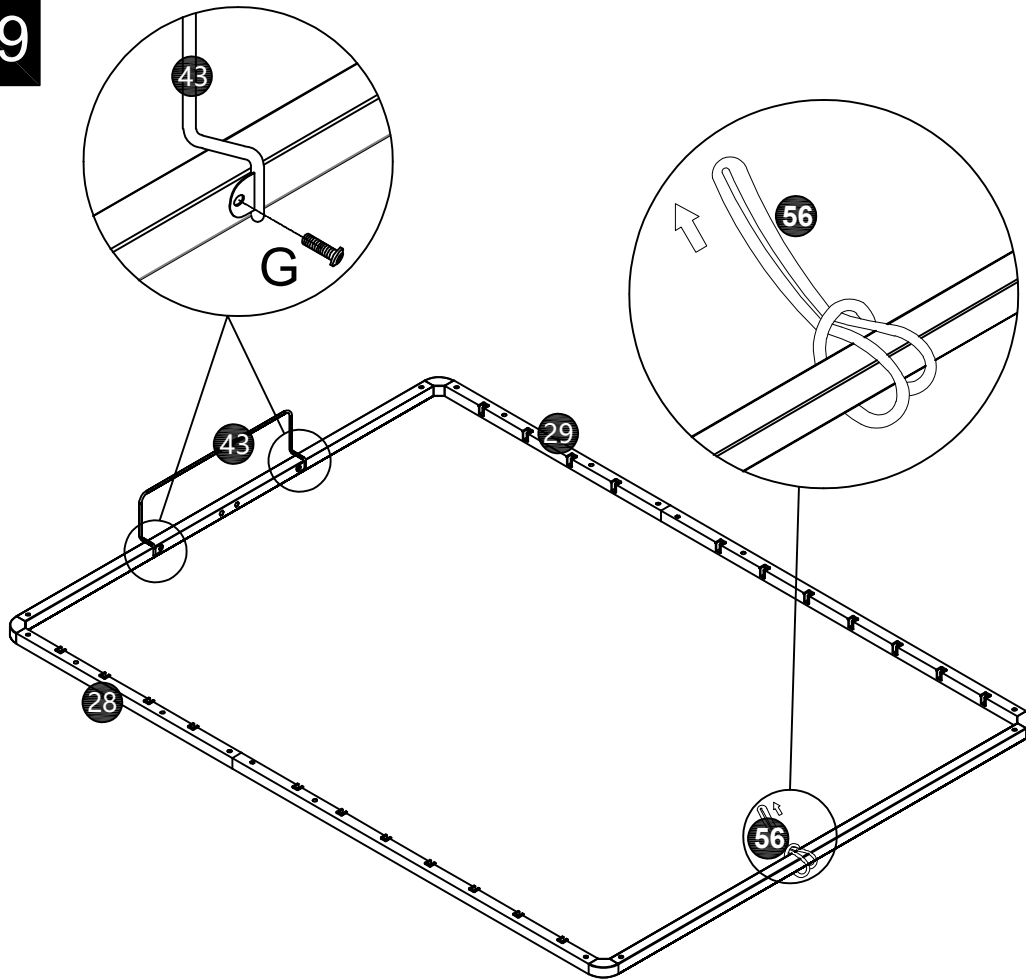

G M8*15

x2

30

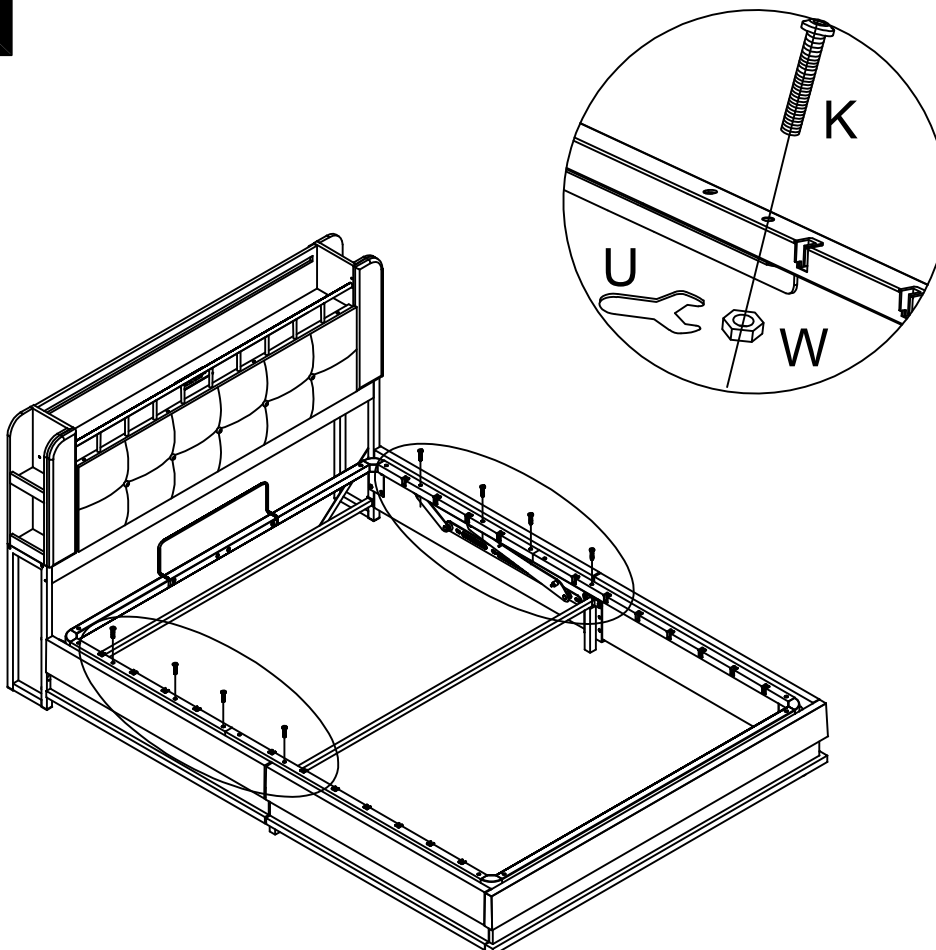

K M8*45

x8


W M8

x8


Assembly Instruction

31

W M8
 x4

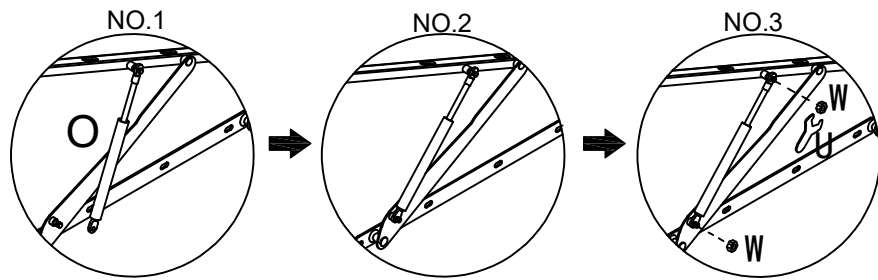


NO.1 Put one end of the cylinder frame first.
NO.2 As shown in the figure, install the other end of the cylinder frame.
NO.3 Then tighten the nut.

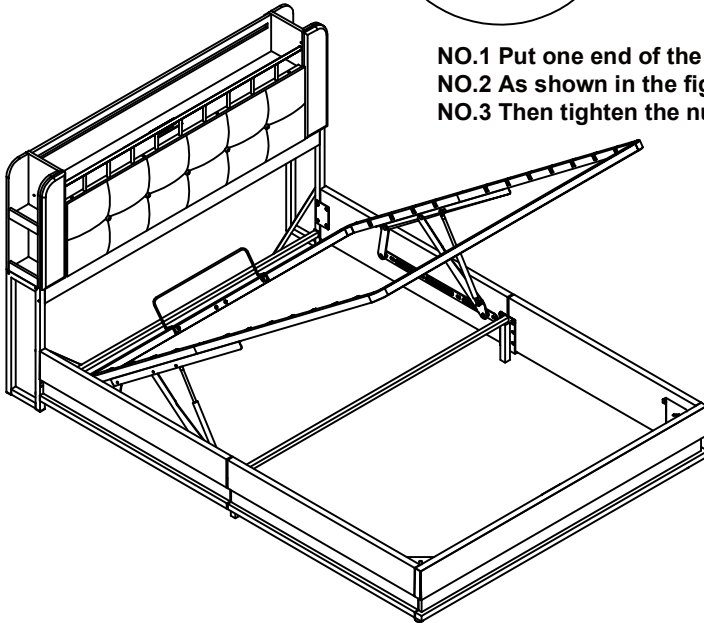


Two people are needed
to install it

32


H M8*20
 x4

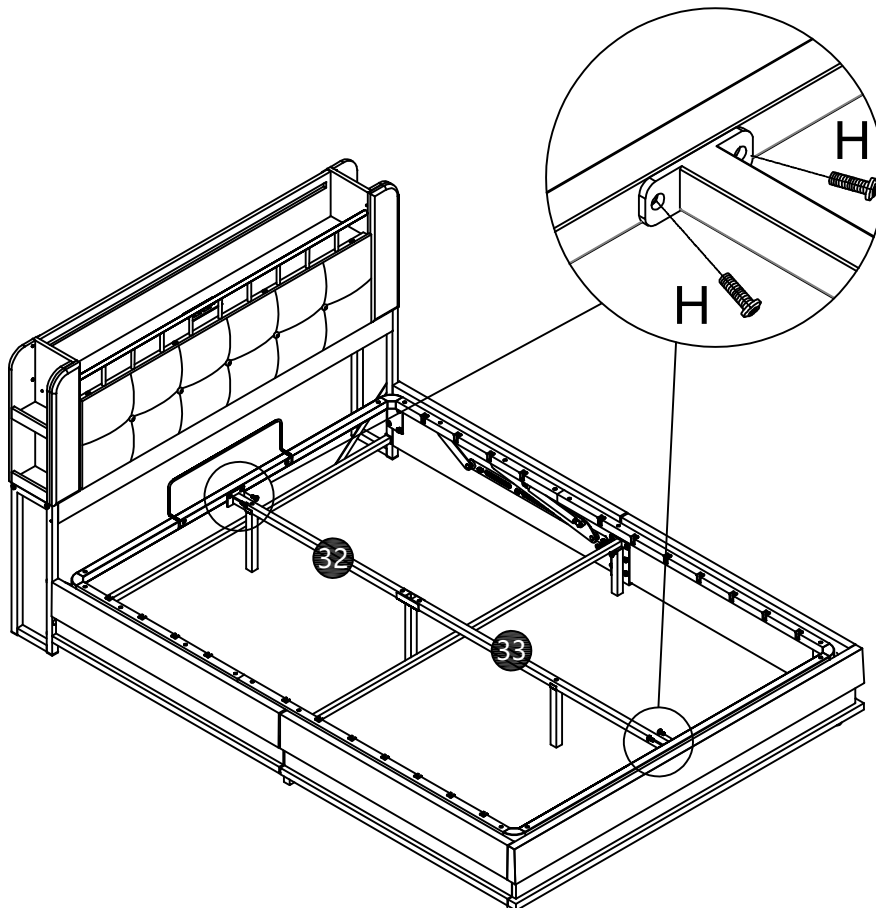


33

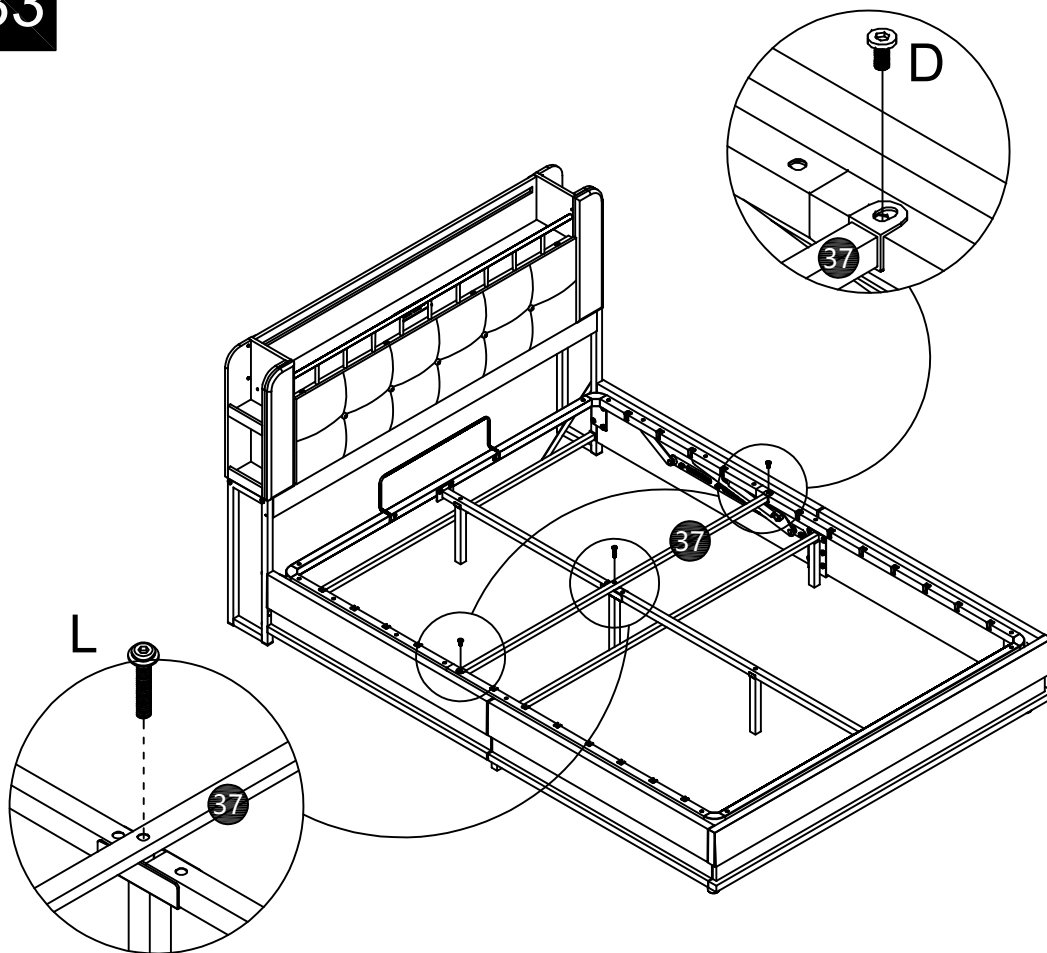




34



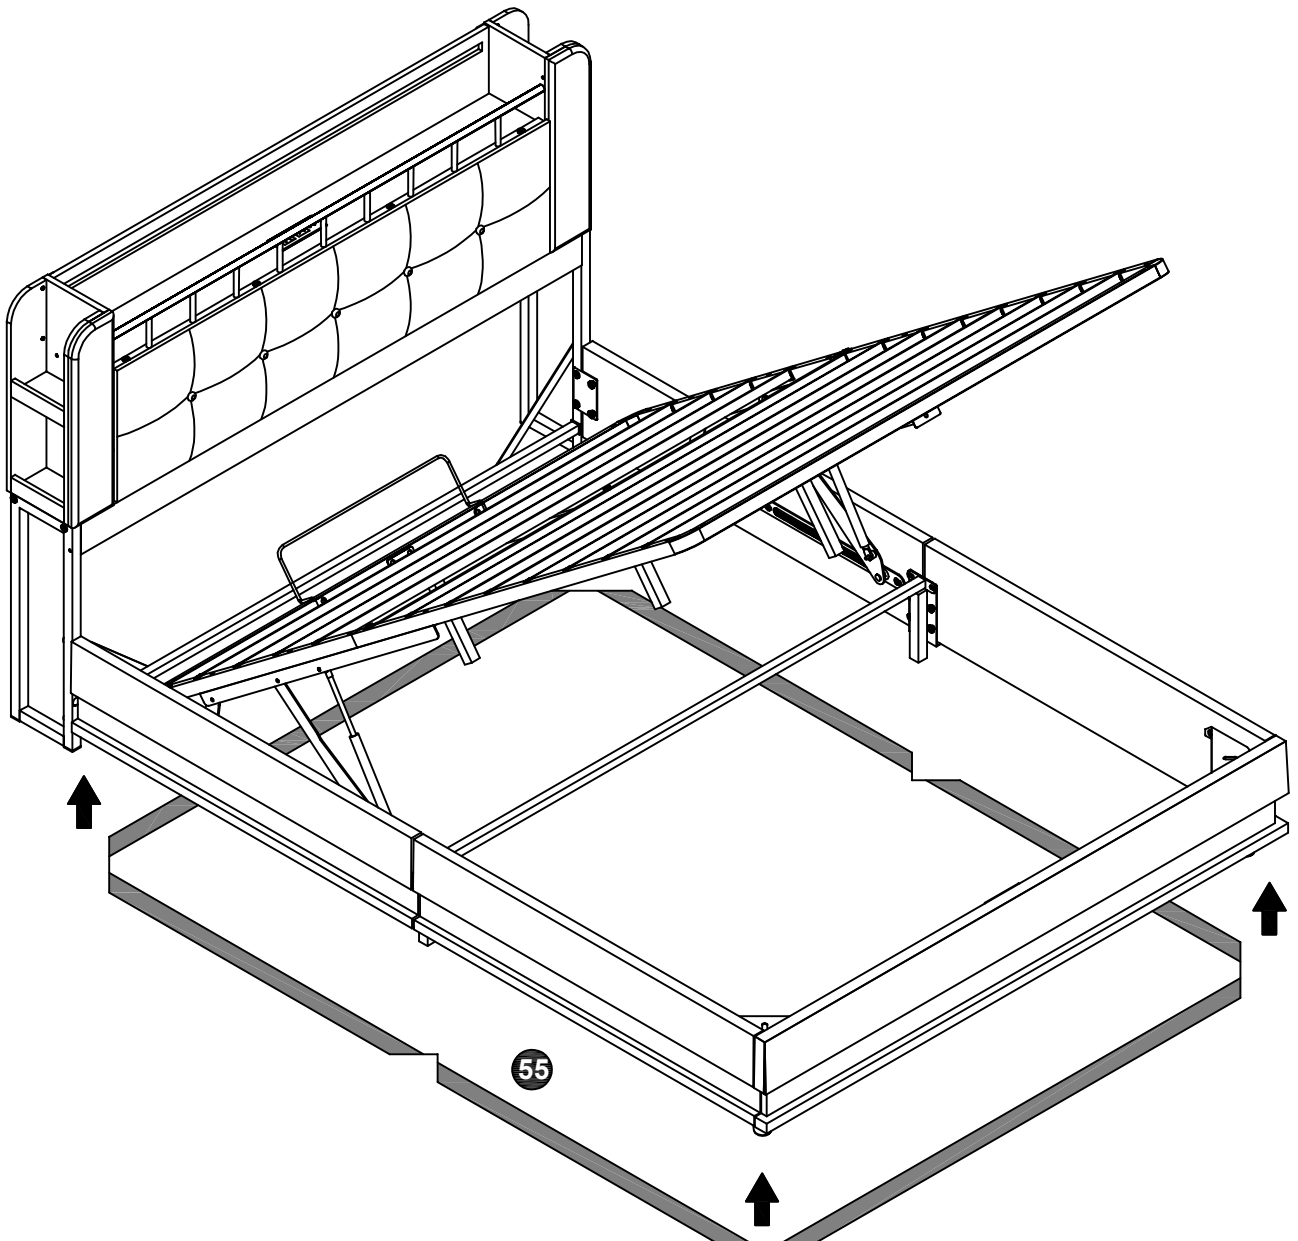


Assembly Instruction

Before pressing down
the bed frame, the
mattress must be
placed first

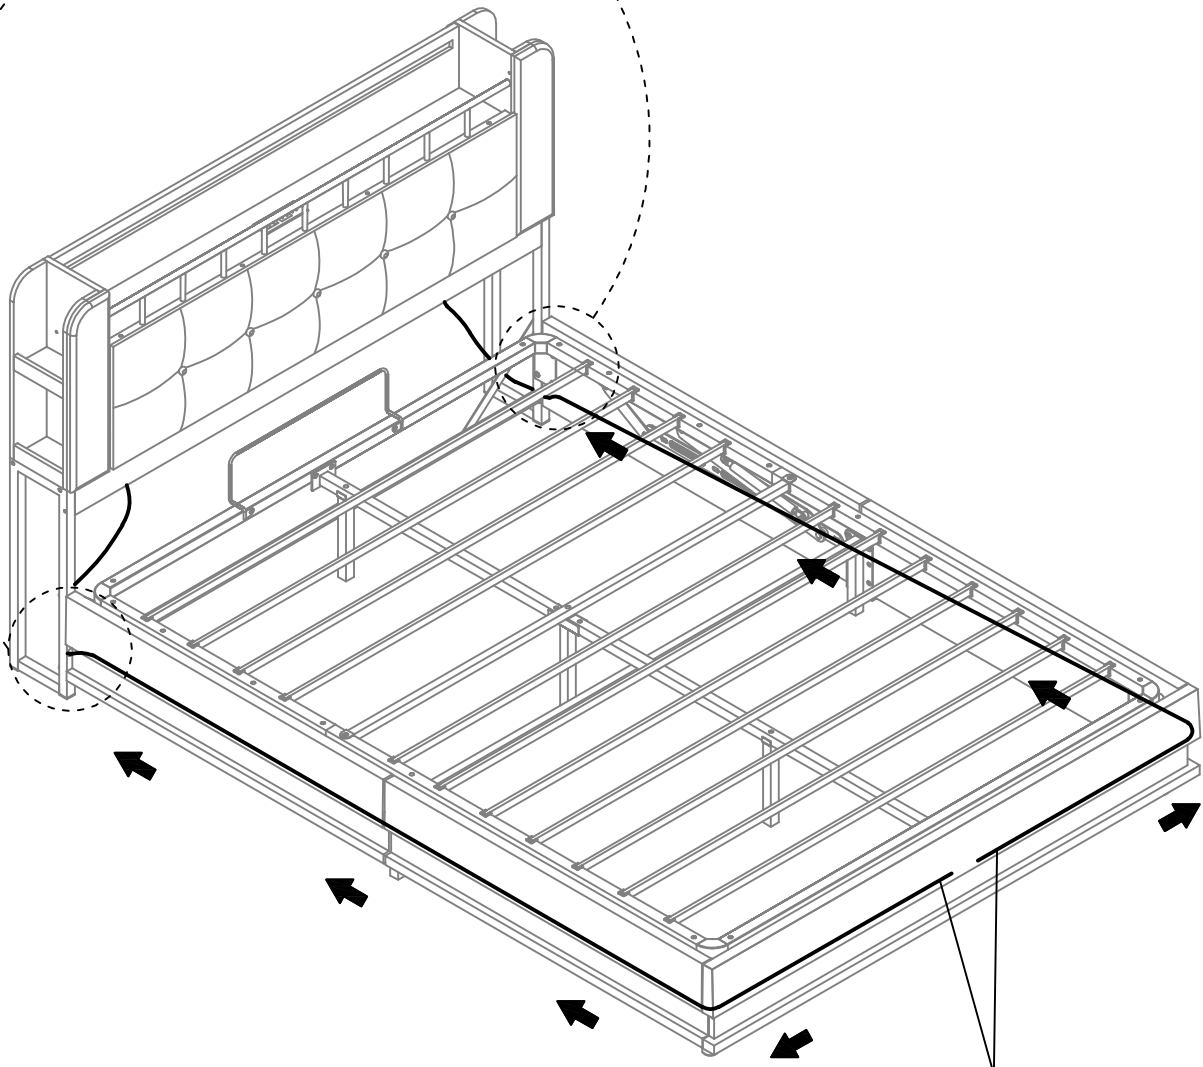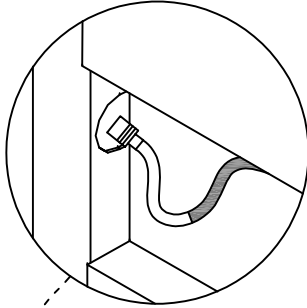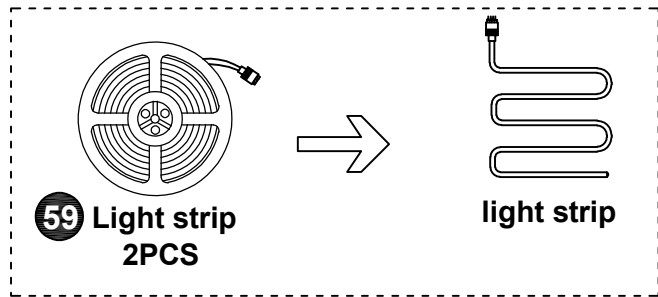


At the bottom stick
the light strip on


Assembly Instruction



60 Remote control
1PC






58 Power cord
1PC




61 Magic tape
8PCS


You can use Magic tape to stick the connecting wire of the light strip anywhere.

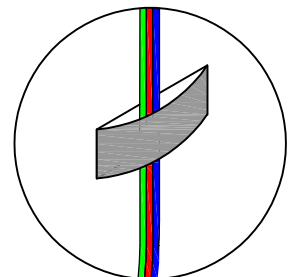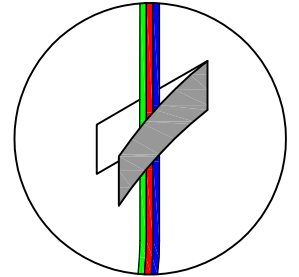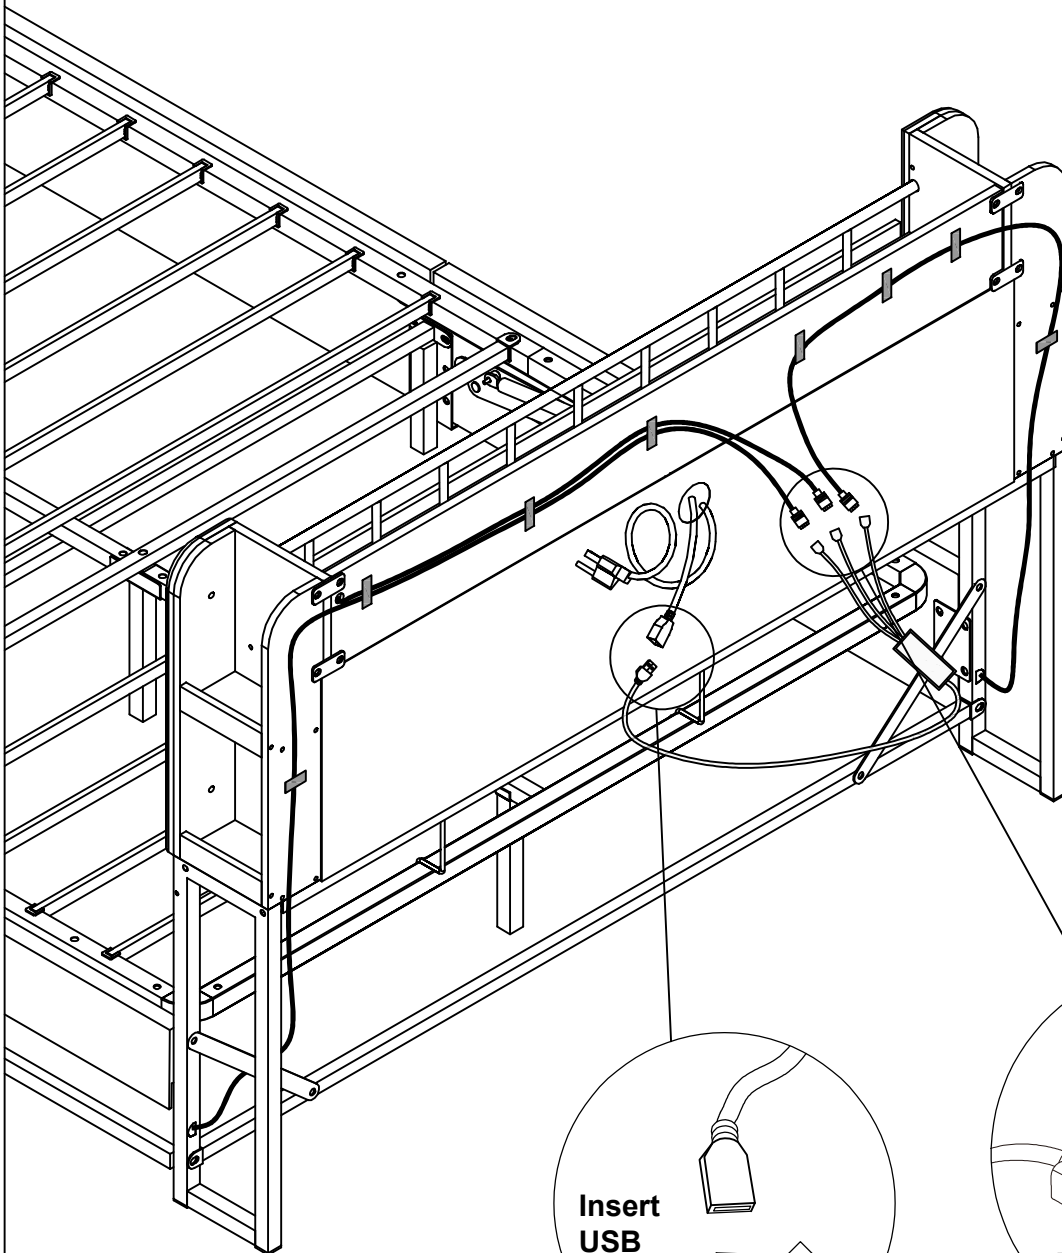

Stick to

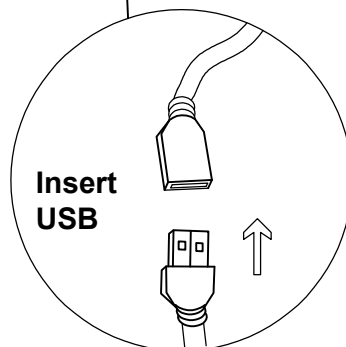

Insert
USB

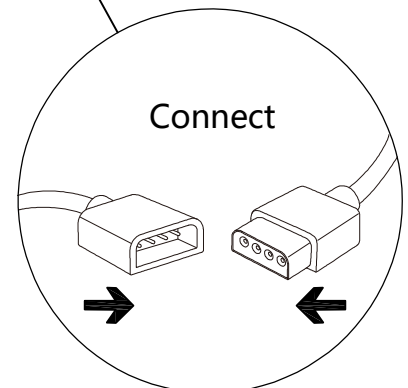

Connect