


INSTRUCTION MANUAL

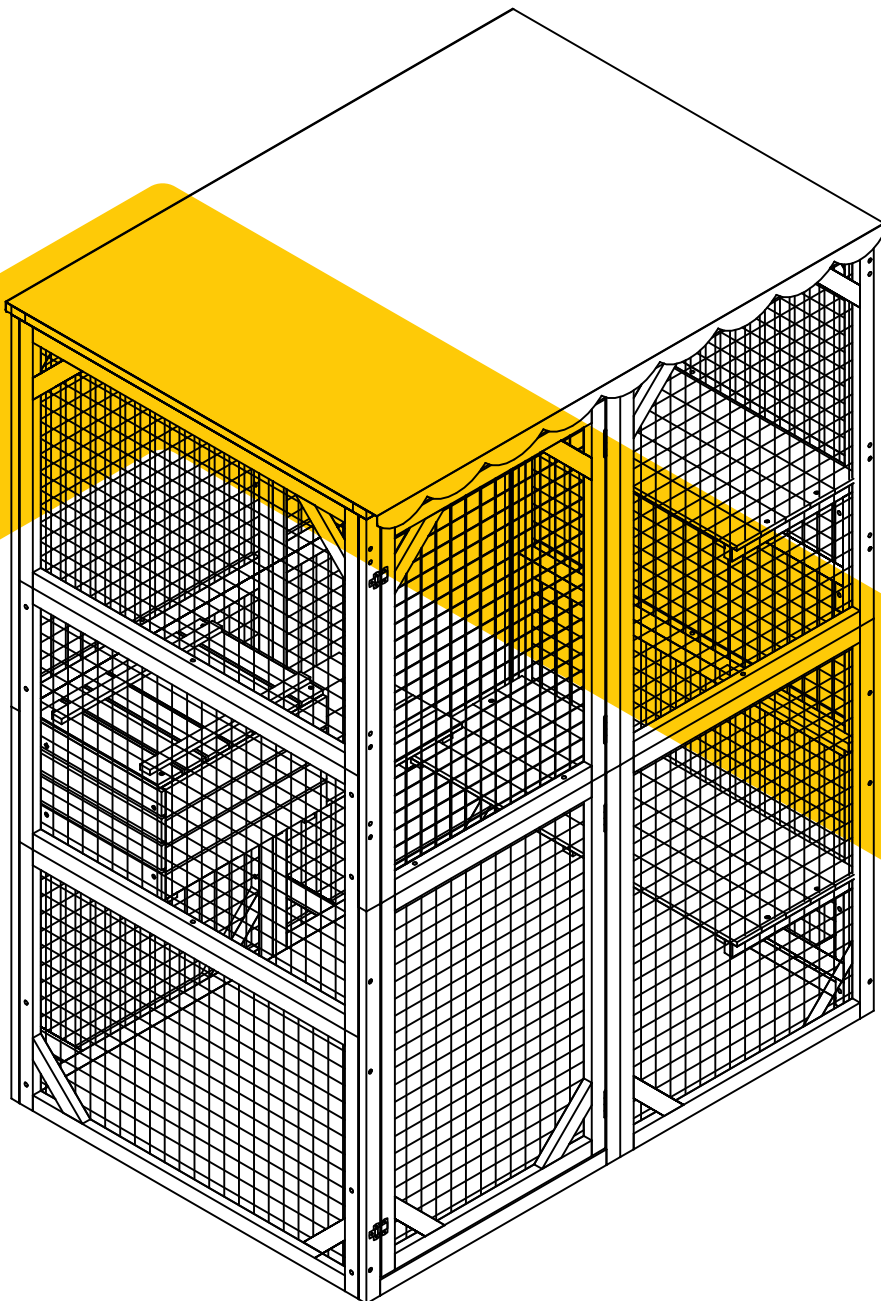



NOTICE


Please retain these instructions for future reference.

- Firmly tighten all bolts, screws, and knobs before use.
- Check all bolts, screws, and knobs every 90 days to ensure they remain secure.
- During assembly, fasten screws loosely at first. Do not fully tighten until the entire unit is assembled.
- Do not use or store this product near open flames or flammable materials.
- Some parts may be heavy or have sharp edges—use caution.
- Moving parts may cause injury, pinching, or cuts—handle with care.
- If any parts are missing, broken, or damaged, discontinue use until repairs or replacements are made.
- Use this product only as described in the instructions. Improper use may void the warranty.

TOOLS REQUIRED



Phillips
Screwdriver



Drill
(recommended)



Two-person assembly
recommended



Estimated assembly
time: 60 minutes


HARDWARE

M6.0 x 60 mm bolt
10 pcs + 1 spare



P1

M4.0 x 60 mm screw
17 pcs + 1 spare

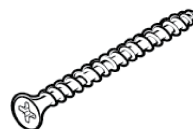

P2

M4.0 x 40 mm screw
24 pcs + 1 spare



P3

M3.5 x 35 mm screw
12 pcs + 1 spare




P4

M3.5 x 25 mm screw
20 pcs + 1 spare




P5

M3.0 x 16 mm screw
12 pcs + 1 spare

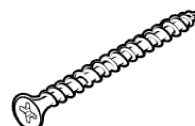

P6

Connect pieces
6 pcs




P7

PARTS

Wire panel


1 pc

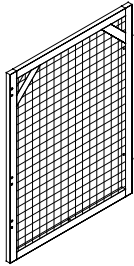

A

Wire panel


1 pc

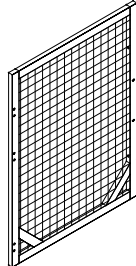

B

Wire panel


1 pc

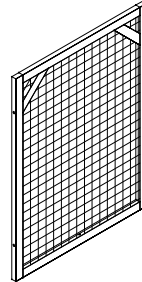

C

Wire panel


1 pc

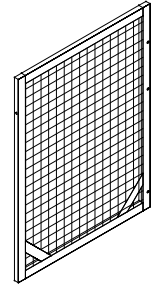

D

Wire panel


2 pcs

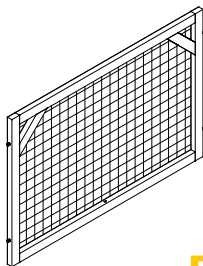

E

Wire panel


1 pc

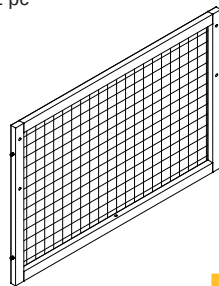

F

Wire panel


2 pcs

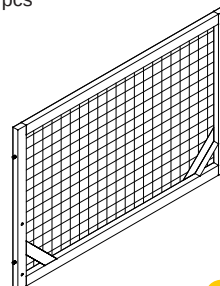

G

Wire panel


1 pc

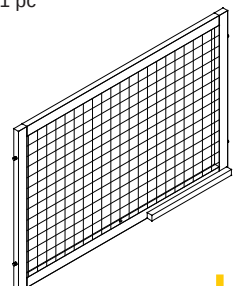

H

Bracket


5 pcs

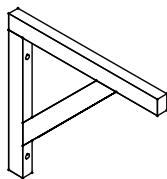

I

Roof panel


1 pc

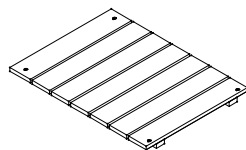

J

Wall panel


1 pc

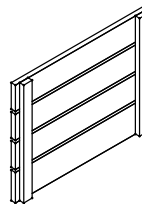

K

Wall panel


1 pc

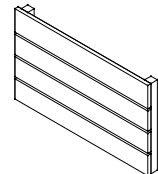

L

Wall panel


1 pc

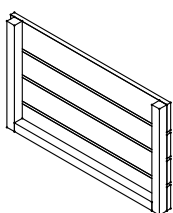

M

Shelf panel


1 pc

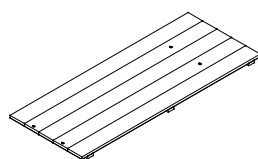

N

Shelf panel


2 pcs

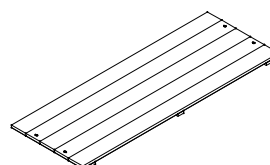

O

Wire panel


1 pc

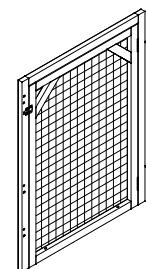

P


PARTS

Wire panel
1 pc

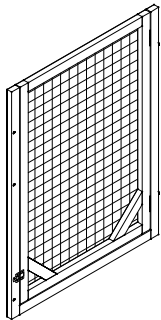


Q

Wire roof panel
2 pcs

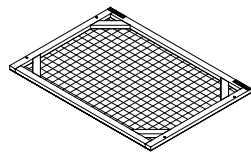


R

Waterproof tarp
1 pc

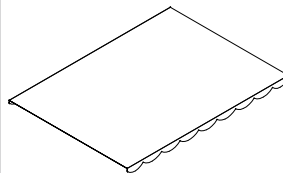


S

Wire panel
1 pc

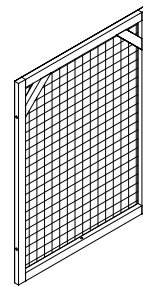

T

Wire panel
1 pc

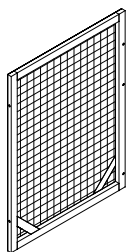


U

Notice


Read Before Assemble!

The following is a schematic diagram.

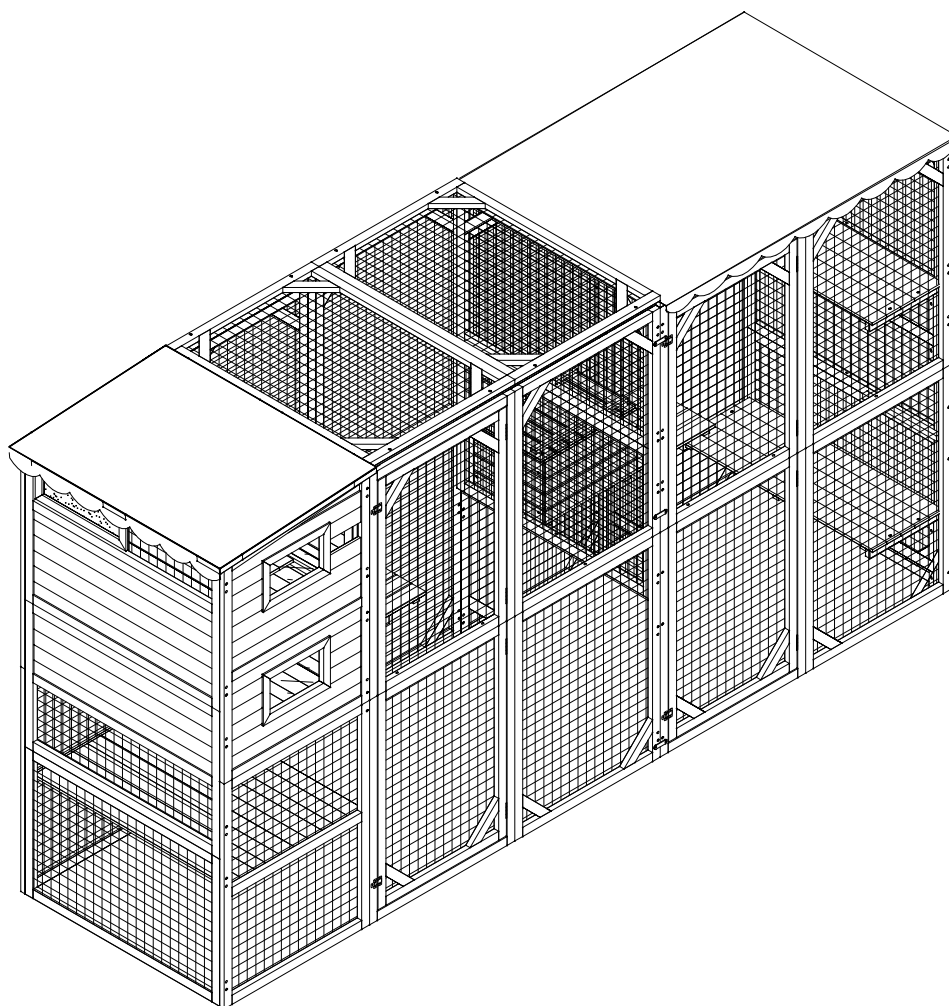


PRODUCT ASSEMBLY

- 01** Join A and B together using 1x P2 screws.
Join I together using 2xP1 bolts for connection.
Join C and D together using 1x P2 screws.

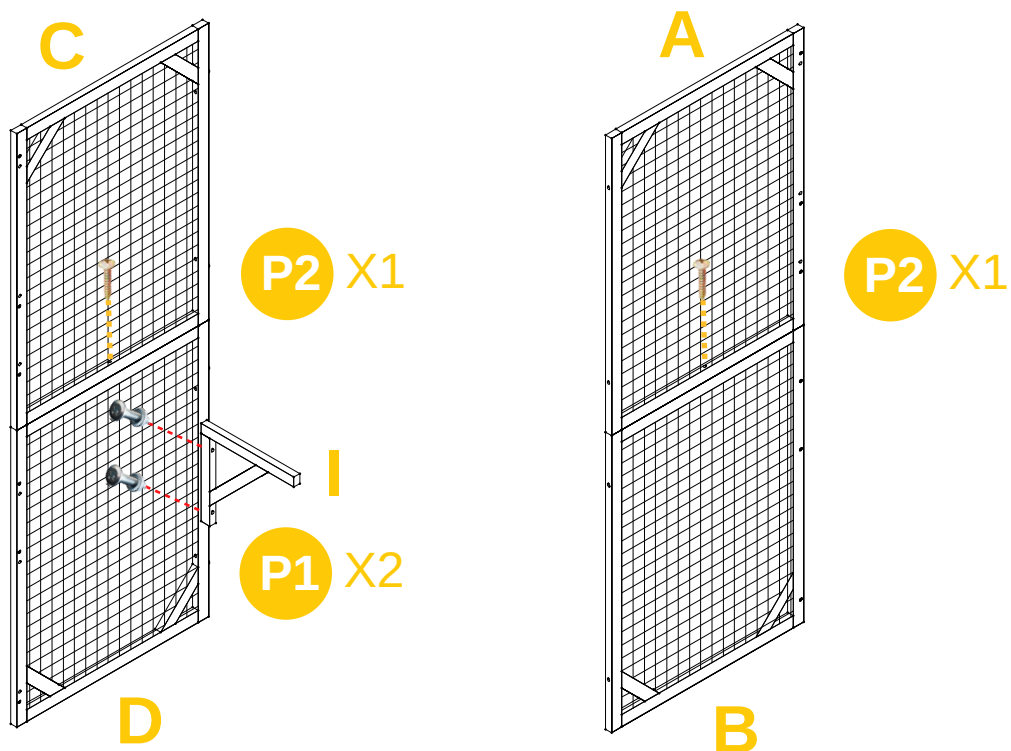


Join A&B and C&D together using 4x P2 screws.

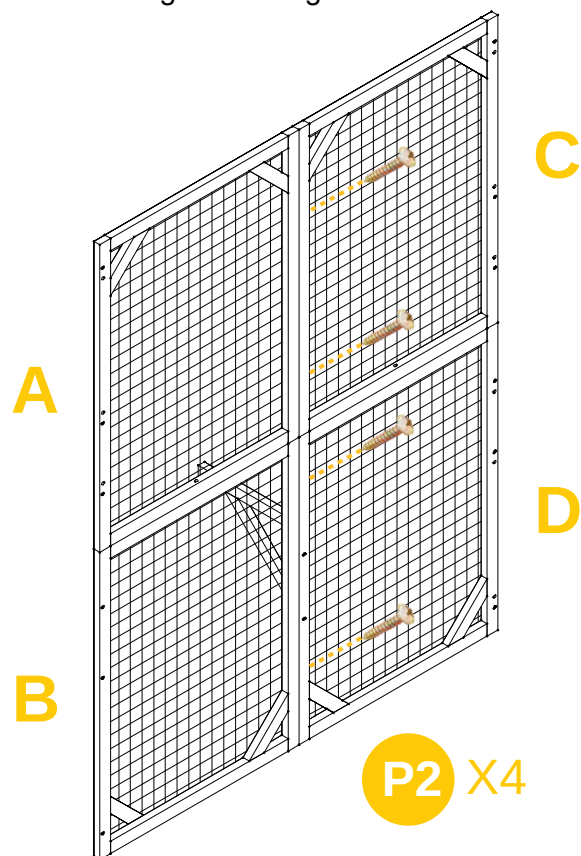

PRODUCT ASSEMBLY


02

Join E, H, and G together using 2x P2 screws.
Join E, F, and G together using 2x P2 screws.
Join I together using 4xP1 bolts for connection.

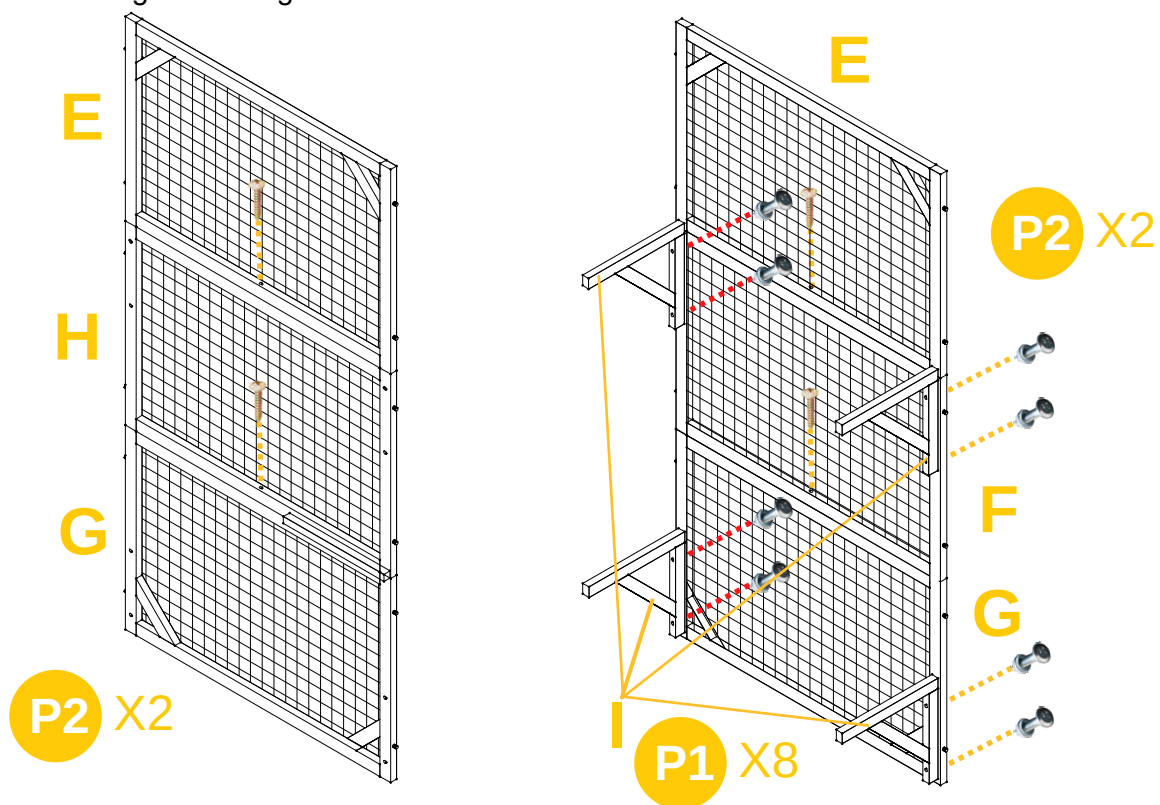

03


Install using 12x P3 screws total.

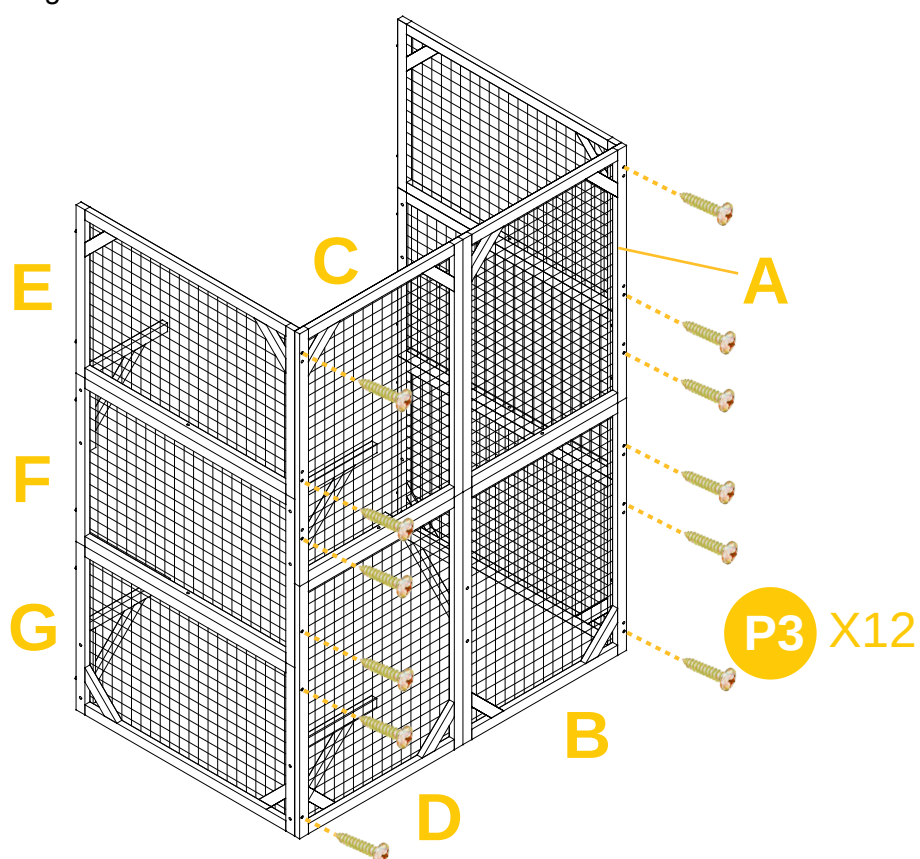

PRODUCT ASSEMBLY

04


Join K, L, and M together using 4x P4 screws.
Join K&L&M, and J together using 4x P5 screws.

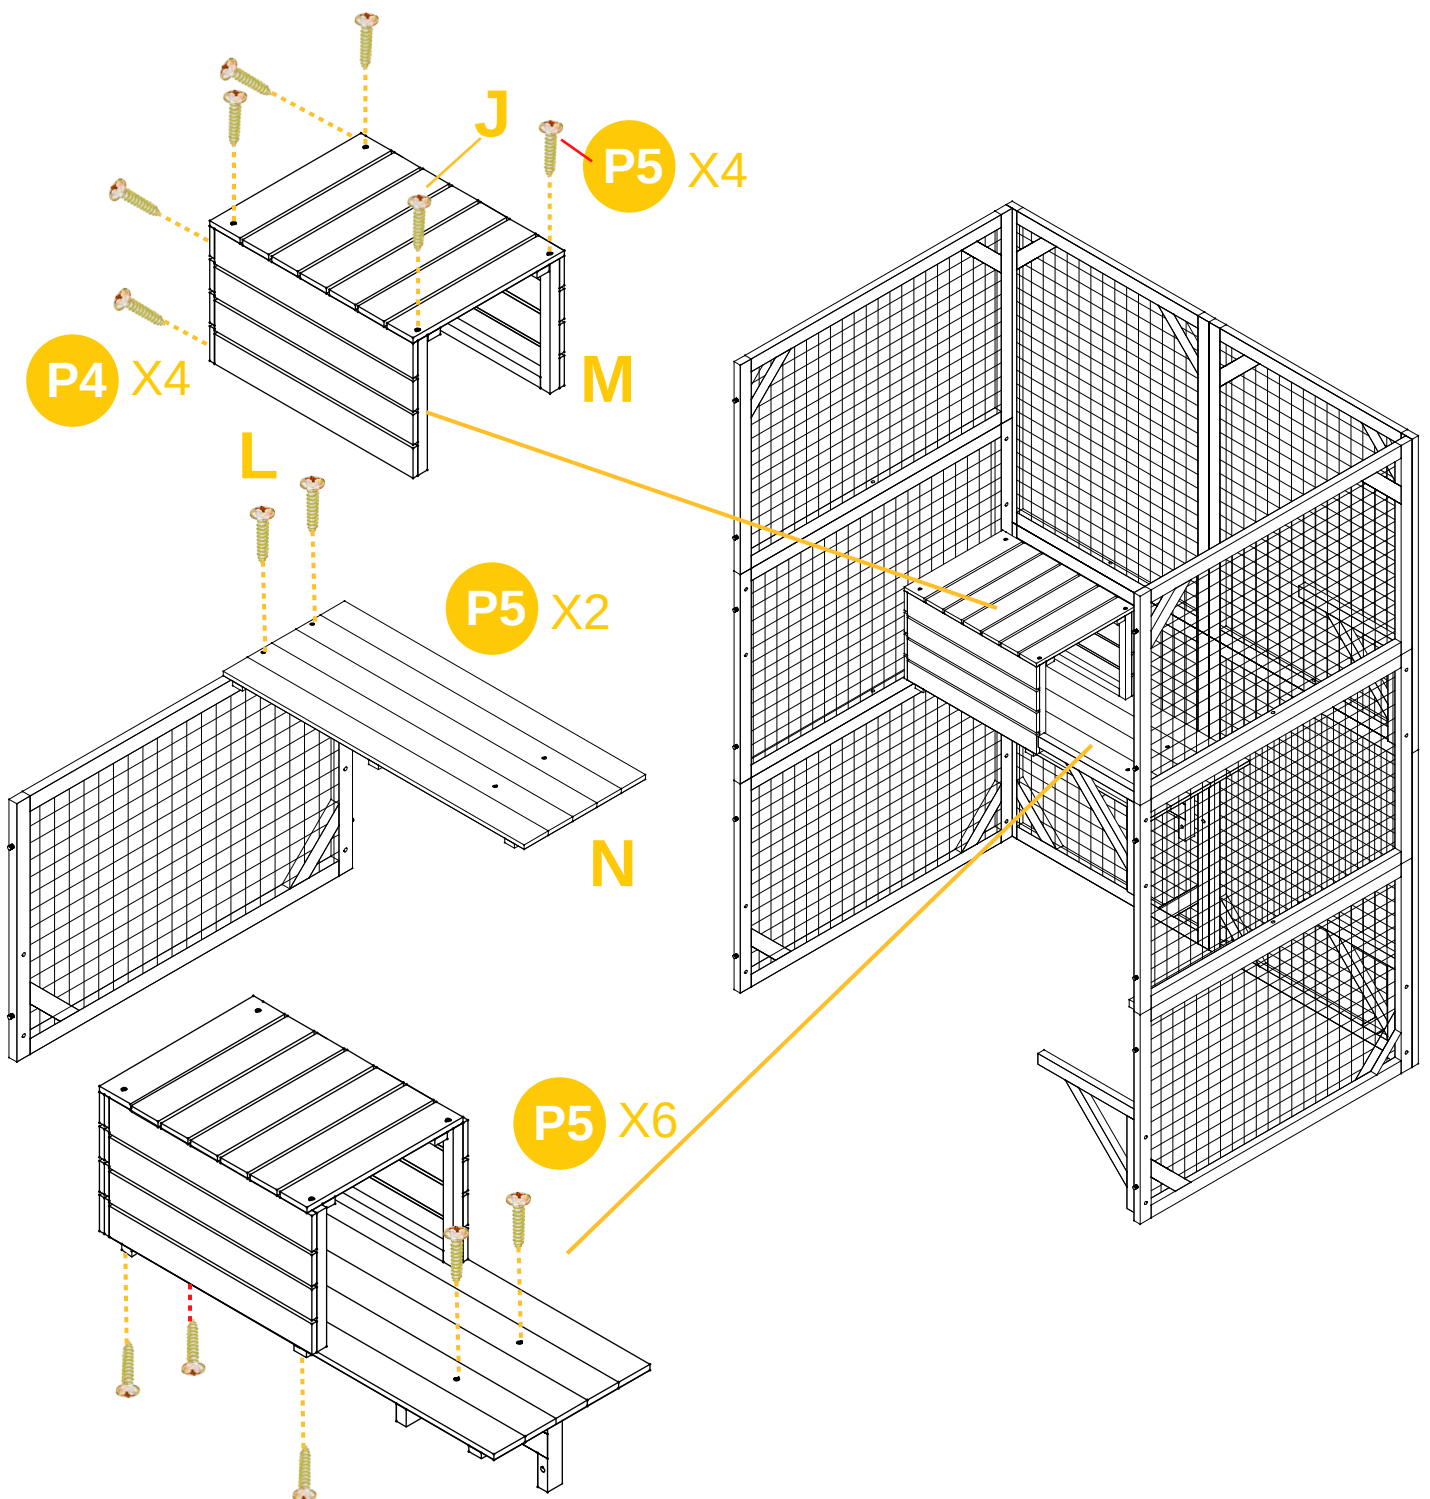

PRODUCT ASSEMBLY


05

Join 2x O and I together using 8x P5 screws.

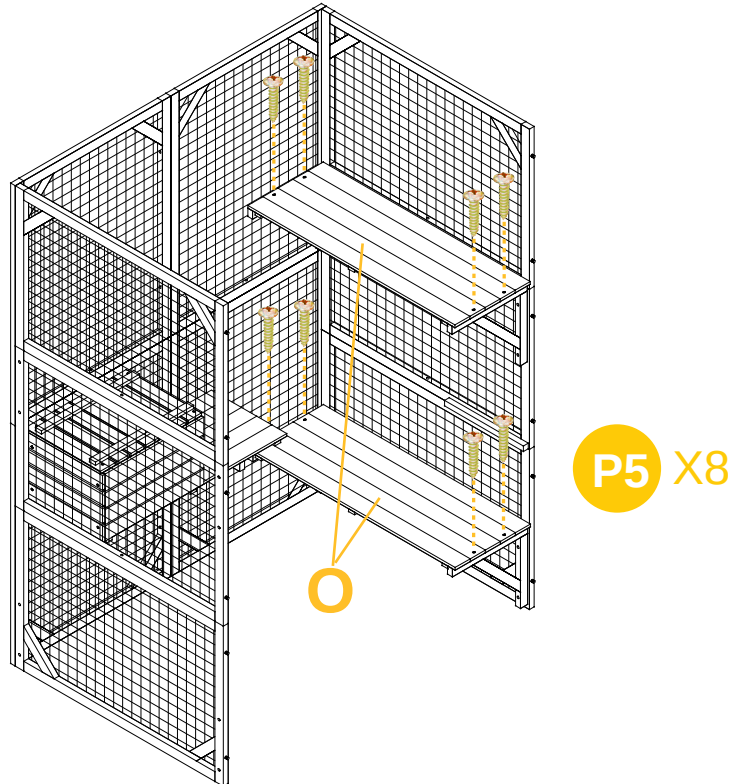


06

Join P and Q together using 2x P2 screws.
Join P&Q, T and U together using 12x P3 screws.

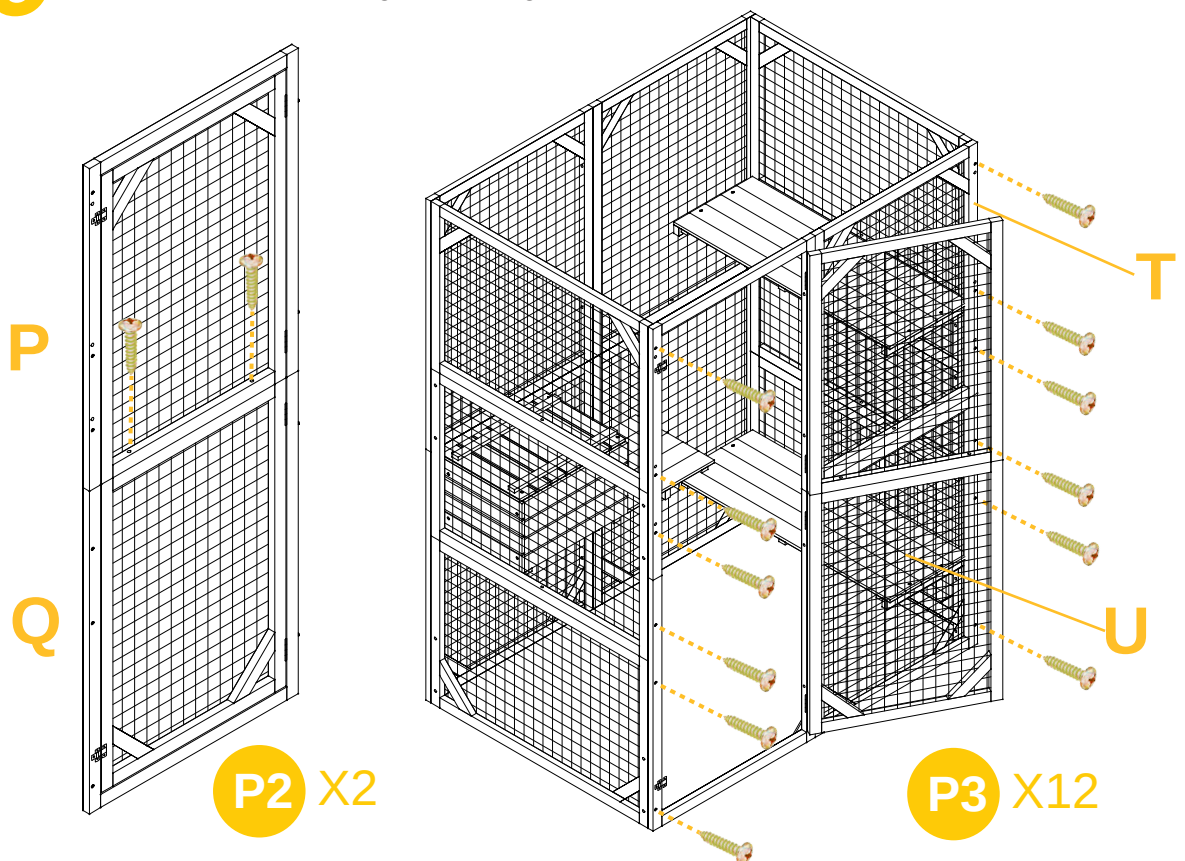


PRODUCT ASSEMBLY

07 Join P&Q and T&U together using 4x P2 screws.

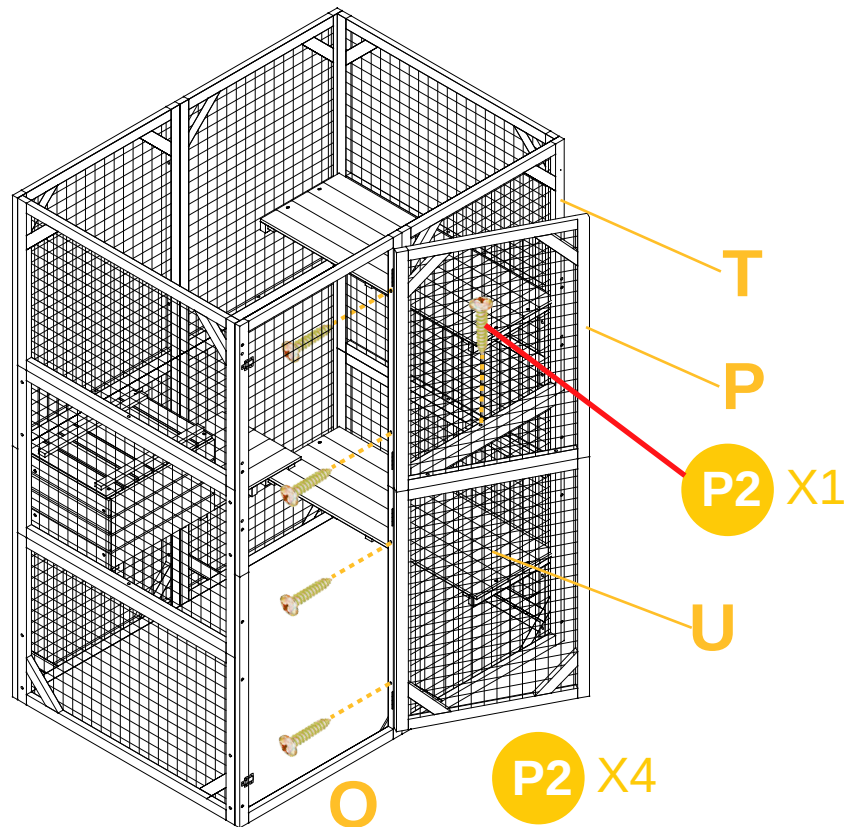


08 Install 2x R using 8x P4 screws total.

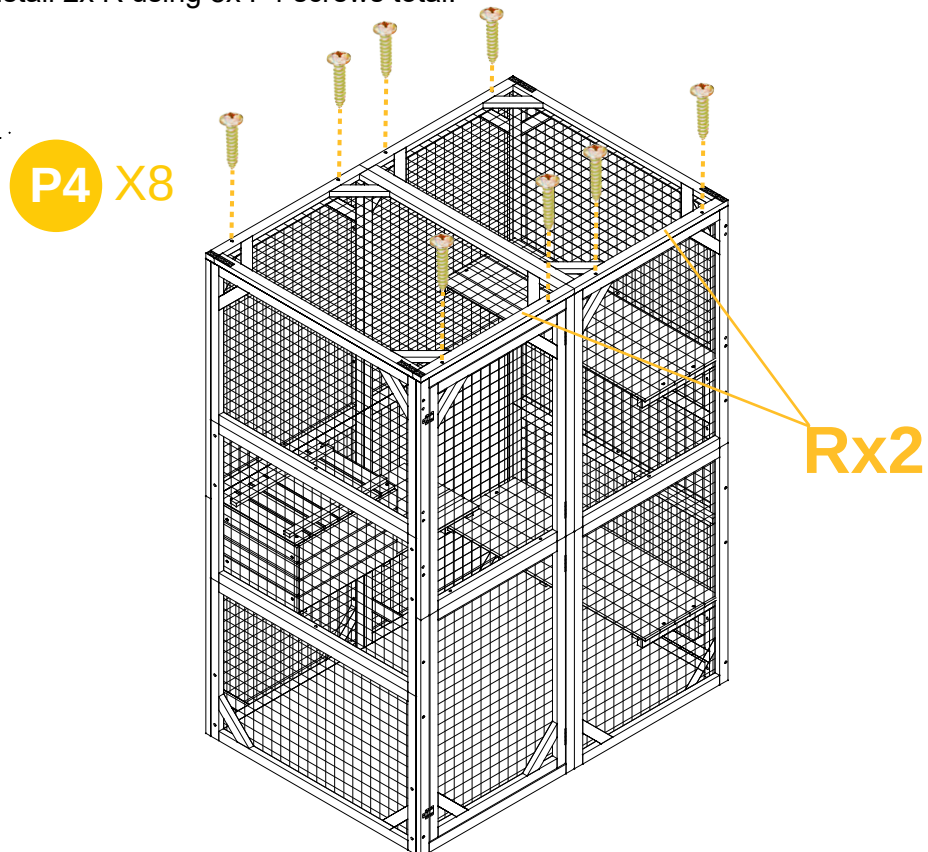

PRODUCT ASSEMBLY

09 Cover the S component over the R.

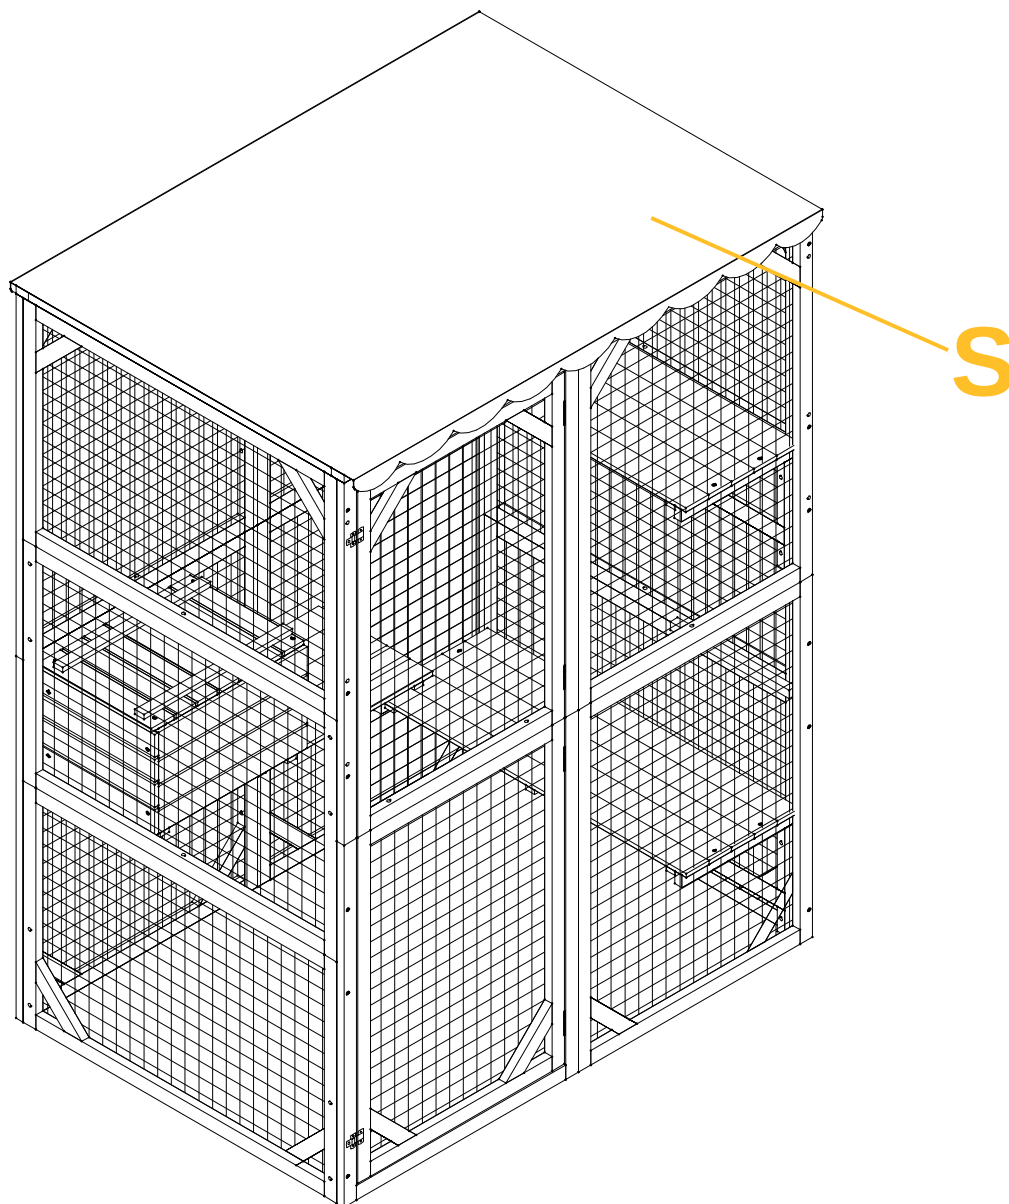

Notice

Read Before Assemble!

Combine the separated parts.

First, remove the lower panel and the two internal supports and one layer board of the balcony side panel. Then, remove the lower panel of the left side panel.

