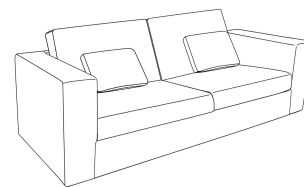


Assembly Instruction



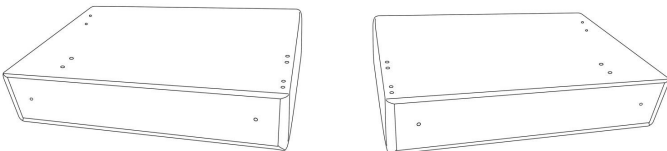
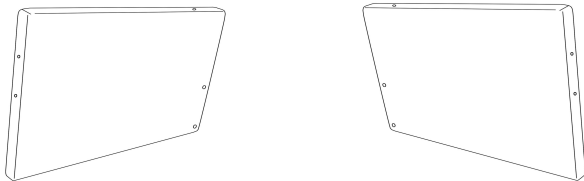
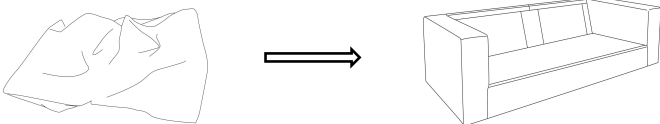


Item: 11462-3S Sofa Series






Parts List

Carefully unpack all parts before attempting to assemble.


This page lists all the contents included in the box. Please take time to identify the hardware as well as the individual components of this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.







1, Components List


No.	Components	Components Picture	Quantity
A	Armrest Board		1 sets
B	Backrest Board		1 sets
C	Fabric Cover		1
D	Front Support Board connect with Armrest		1
E	Back Support Board connect with Armrest		1

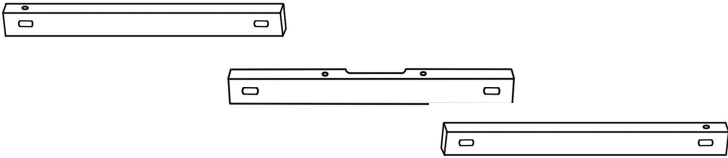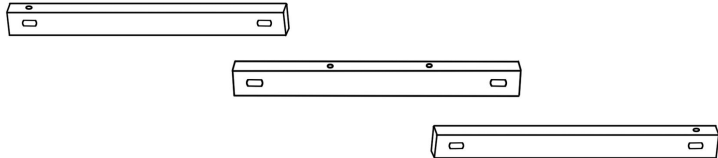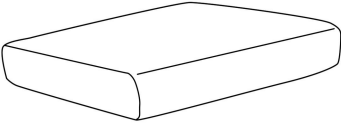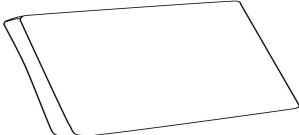No.	Components	Components Picture	Quantity
F	Inside Slats for Back Suppor		1 sets(total 3pcs)
G	Inside Slats for the Front Support		1 sets(total 3pcs)
H	Support Slats for Seat		2
I	Seat cushion		2
J	Backrest cushion		2
K	Pillow		2

2, Hardware List


No.	Parts Name	Parts Picture	Quantity	Location
1#	L Coner connection Metal		4	Part A & D (Front Support Board connect with Armrest)
	Bolts / M6*16mm with Flat washer for Armrest		16 sets	

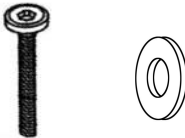No.	Parts Name	Parts Picture	Quantity	Location
2#	Black Plastic legs for Armrest		4	Part A (Legs for Armrest)
3#	Middle support leg - Long		1	Part D (On Front Support Board)
	Middle support leg - Short		1	Part E (On Back Support Board)
	Bolts / M6*40mm with Flat washer		4 sets	Part D & E (Front & Back Middle support legs)
4#	Metal Connections for Backrest & Seat		1	Part B & E (Bottom of Backrest Board)
	Bolts / M8*20mm with Flat washer		4	Part B (Bottom of Backrest Board)
	Bolts / M8*16mm with Flat washer		2	Part E (Middle of Back Support Board)
5#	Metal slide rail		2 sets	Part A & B (Both Sides of Armrest & Backrest Board)
	Bolts / M6*16mm for Metal slide rails		8	

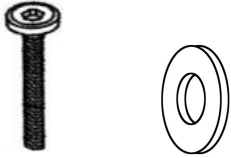No.	Components	Components Picture	Quantity	Location
6#	Metal Connections for Top Backrest		1	Part B (Combine Top of Backrest Boards)
	Bolts / M8*20mm with Flat washer		2 sets	
7#	Bolts / M8*40mm with Flat washer (for Wood Slats - Sides)		12 sets	Part F & G (Inside Slats for Front & Back Support)
	Bolts / M6*30mm with Flat washer (Ribs strips - Top)		8 sets	Part H (Support Slats for Seat)
	Bolts / M8*16mm		4	Part A (Armrest)
	M4 Allen Key		1	For Bolts / M6
	M5 Allen Key		1	For Bolts / M8

Assembly Instruction

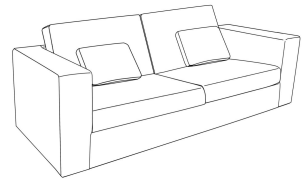Item: 11462-3S Sofa Series



Assembly Instruction

Carefully unpack all parts before attempting to assemble.

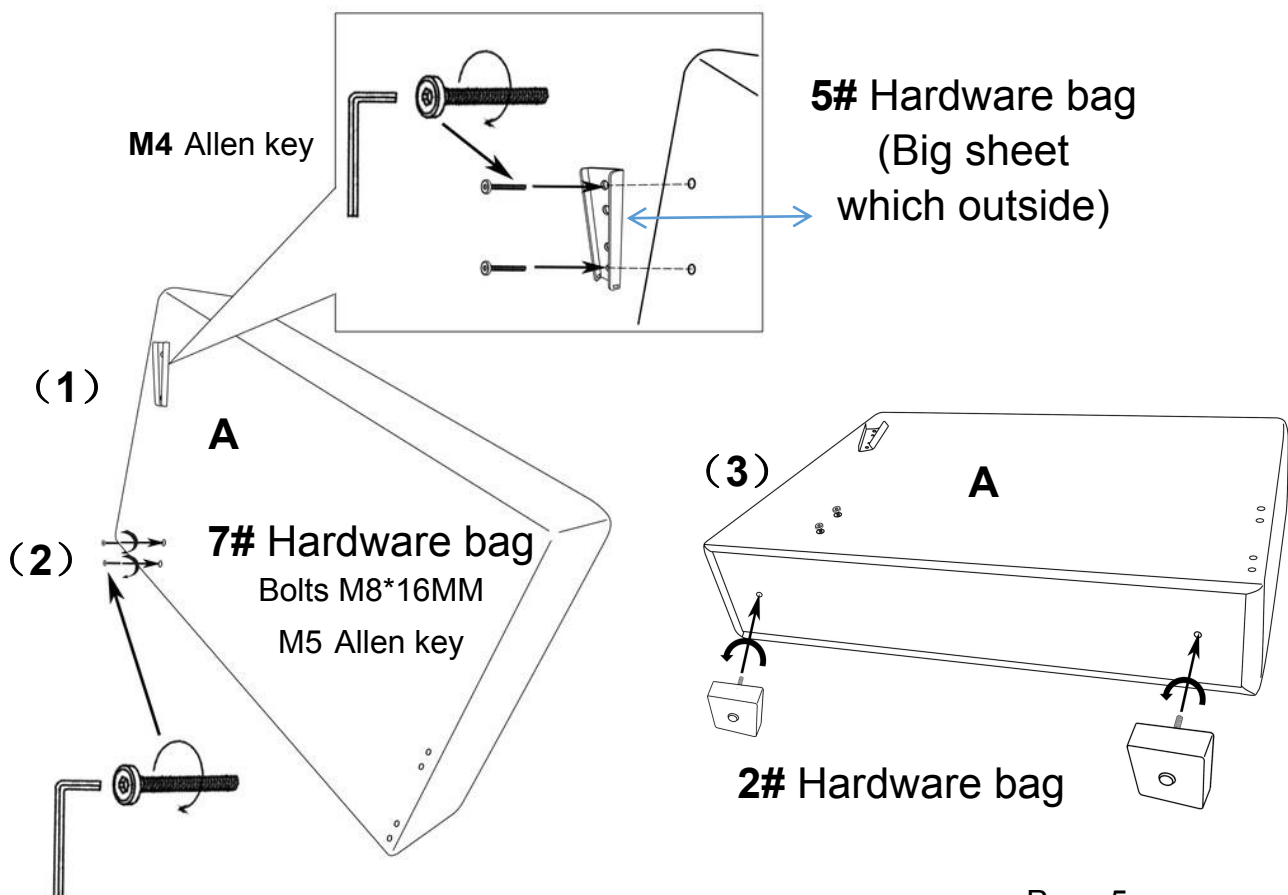
STEP 1 : Assemble the Armrest

(1) Attach the Metal slide rail(Hardware 5#bag) into the Armrest holes with bolts by M4 Allen key . Refers to Parts A & Hardware 5# bag & 7# .

(2) Attach the Bolts (Hardware 7#bag) into the Armrest holes , by M5 Allen key . Not too tight . Refers to Parts A & Hardware 7# .


(3) Turn the wood feet in the holes of the Armrests' bottom to tighten them . Refers to Parts A & Hardware 2# .

Repeat (1) - (2) - (3) action to assemble the other Armrest .



STEP 2 : Assemble the Backrest

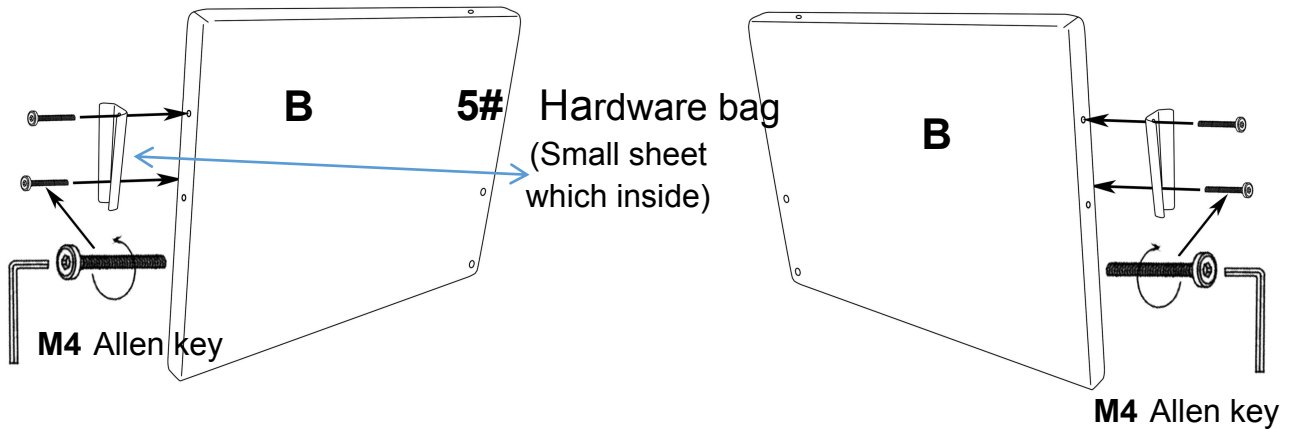
Attach the Metal slide rail(Hardware 5#bag) into the Backrest holes with bolts by M4# Allen key , Repeat action to assemble the other Backrest.
Refers to Parts B & Hardware 5# & Hardware 7# .



STEP 3 : Assemble the Front Support Board

(1) Attach the Metal L Coner connections (Hardware 1#bag) into the Front Support Board'S holes with bolts & washes by M4 Allen key (Hardware 7#) .
Refers to Parts D & Hardware 1# . -- Hold half holes not to operate.

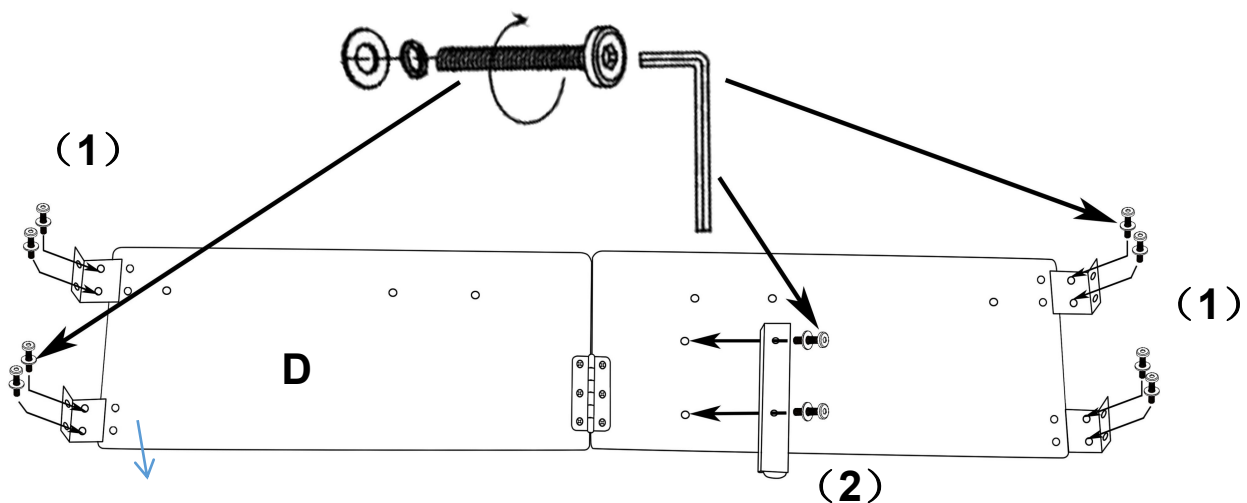(2) Attach the Middle support leg (Long one) into the Board's holes, by inserting the bolts & washes into the leg holes, then tighten with the M4 Allen key (Hardware 7#) .
Refers to Parts D & H & Hardware 3# .




1# Hardware bag

3# Hardware bag
Long leg
M4 Allen key

STEP 4 : Assemble the Back Support Board


(1) Attach Inside Slats for the Back SupportS (Part G) onto the Back Support Board'S holes with bolts & washes by M5 Allen key (Hardware 7#) . PS: The slats need near to outside, Reserve enough space to install the middle slat . Refers to Parts E & F & Hardware 7# .

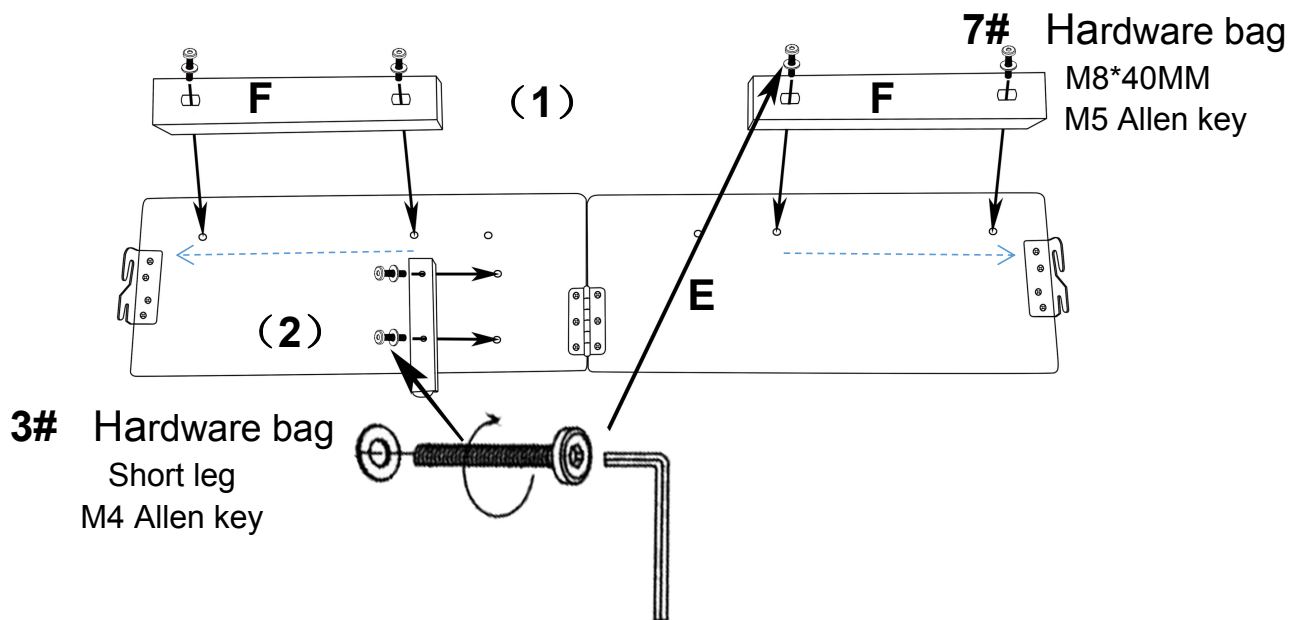(2) Attach the Middle Support leg (Short one) into the Board's holes, by inserting the bolts & washes into the leg holes, then tighten with the M4 Allen key (Hardware 3#). Refers to Parts E & Hardware 3# .




STEP 5 : Connect the Back Support Board and Armrests

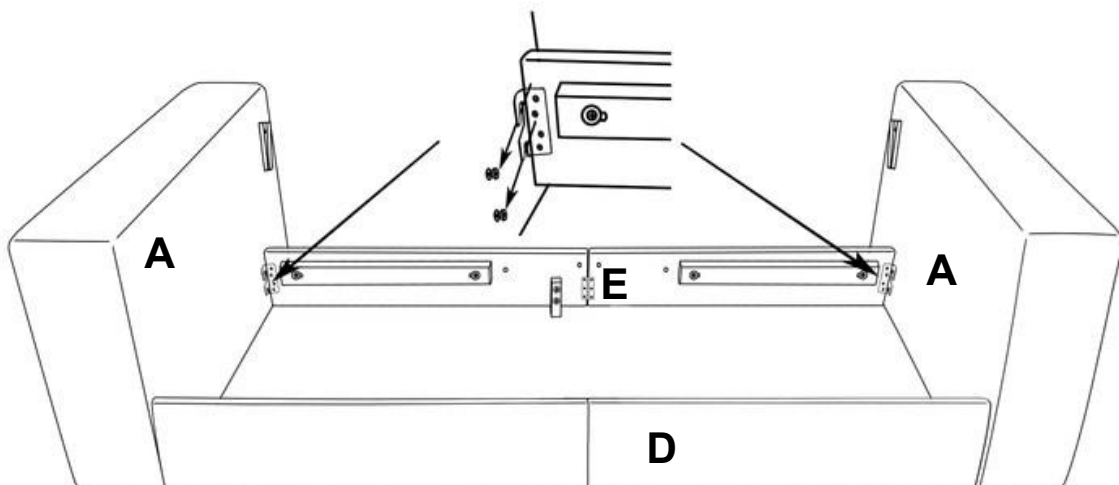Connect the Back Support Board and Armrests as Picture below, then tight the bolts on Armrests. Refers to Parts A & E .



STEP 6 : Connect the Front Support Board and Armrest Boards

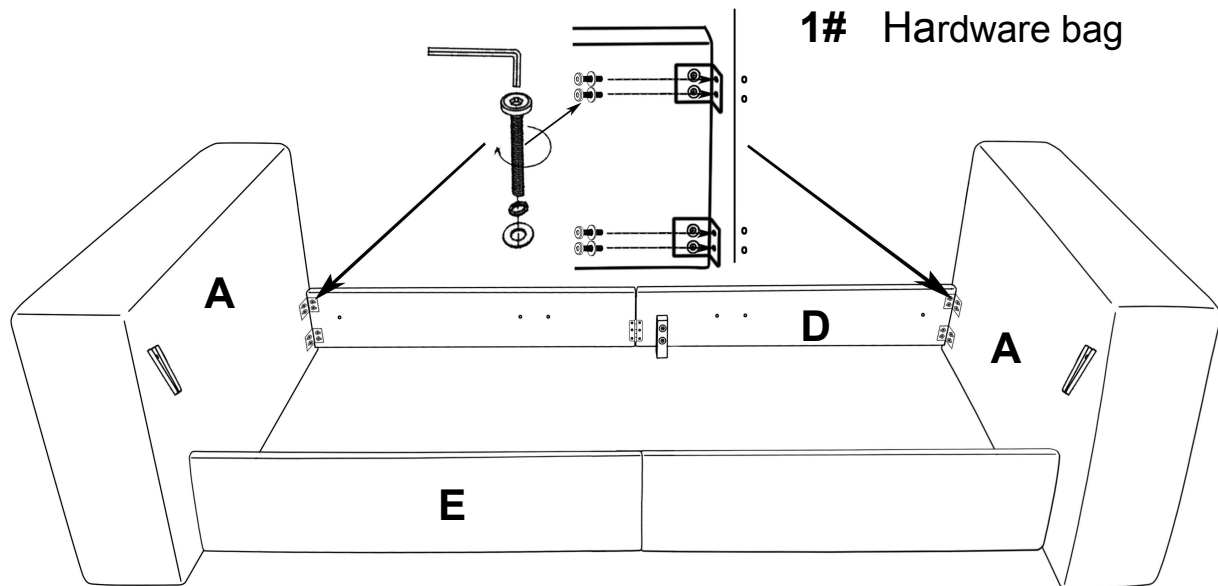
Connect the Front Support Board and Armrests as Picture below , by inserting the bolts into the Armrests' holes, tighten with M4 Allen key, then tighten all bolts fully. Refers to Parts A & D & Hardware 1# .



STEP 7 : Assemble the Slats onto the Front Support Board

Attach Inside Slats for the Front SupportS (Part G) onto the Front Support Board'S holes with bolts & washes by M5 Allen key (Hardware 7#) .

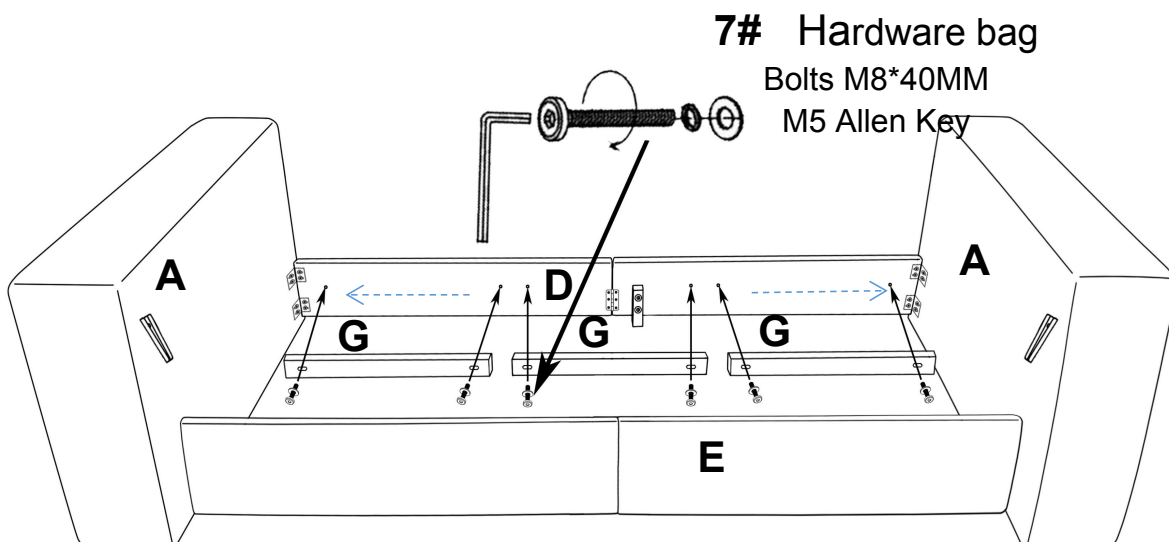
- PS: The slats need near to outside, Reserve enough space to install the middle slat . Refers to Parts D & G & Hardware 7# .



STEP 8 : Connect the Backrest Boards


Connect two piece Backrest Boards together with 6# Hardware as Picture below , by inserting the bolts into the top holes, tighten with the M5 Allen key (Hardware 7#), then tighten all bolts fully. Refers to Parts B & Hardware 6# .

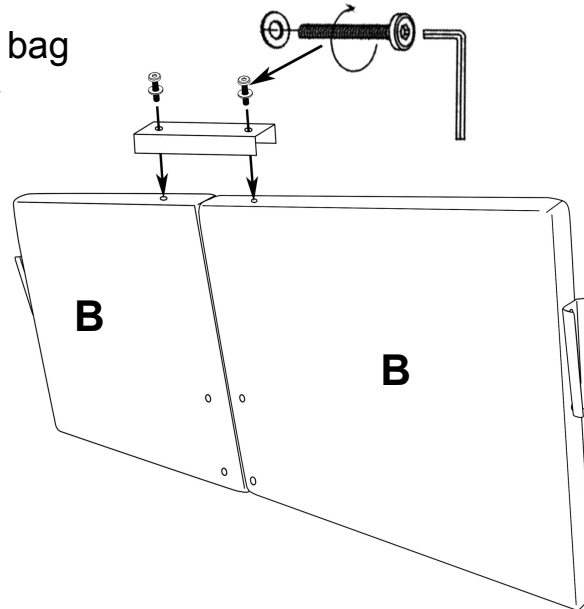6# Hardware bag
M5 Allen key



STEP 9 : Connect the Backrest Boards

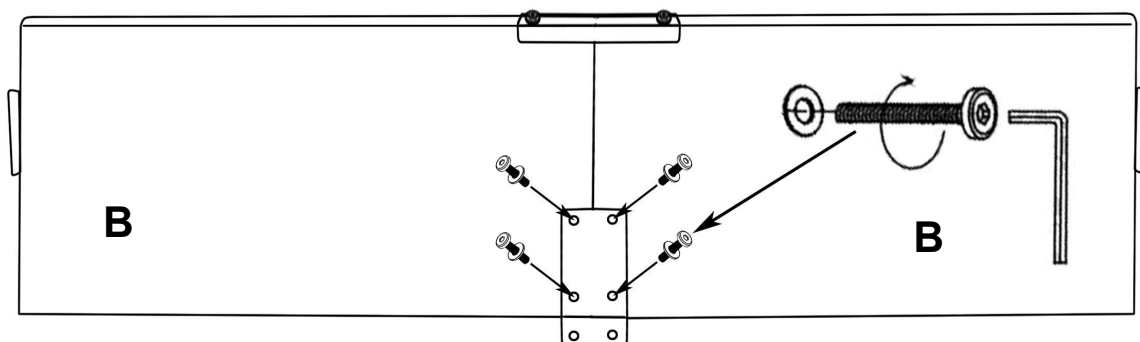Connect two piece Backrest Boards together with 4# Hardware as Picture below , by inserting the bolts into the top holes, tighten with the M5 Allen key, Only 4pcs bolts need to Fix . Refers to Parts B & Hardware 4# .




4# Hardware bag
M8*20mm
M5 Allen Key

STEP 10 : Connect the Backrest Boards & Armrest Boards

Put the connectors of whole Backrest board into the Armrest boards insert, like the picture as below .

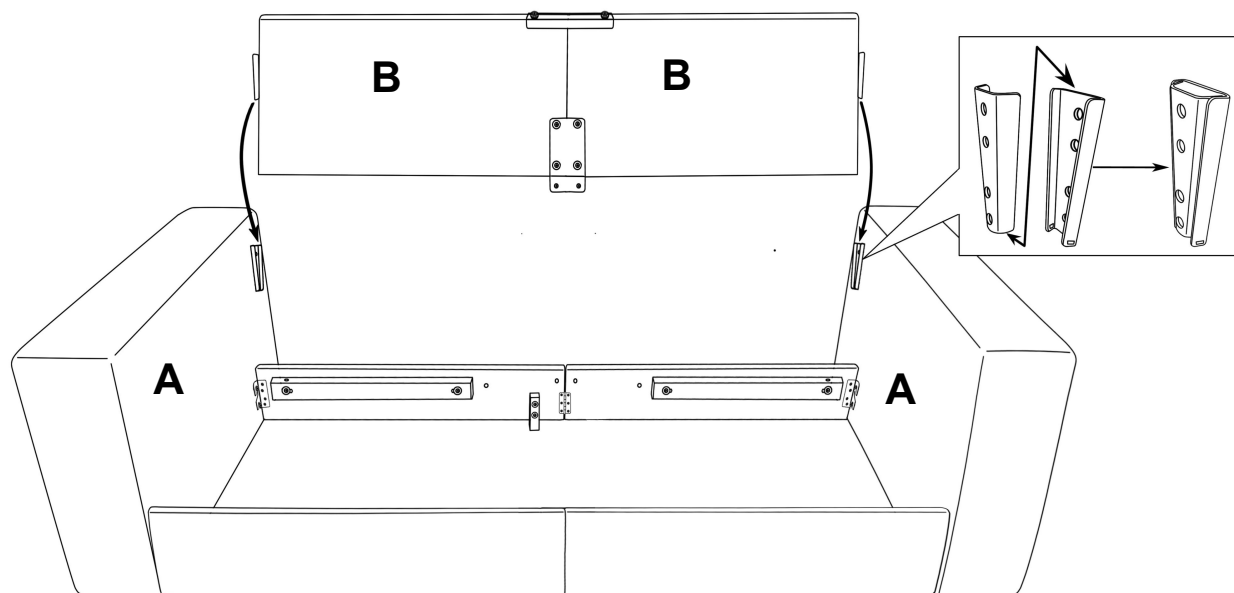
Refers to Parts A & B .



STEP 11 : Connect the Backrest Boards & Back Support Board


Connect the whole Backrest Boards together with Part E, as Picture below , by inserting the bolts into the top holes, tighten with the M5 Allen key.

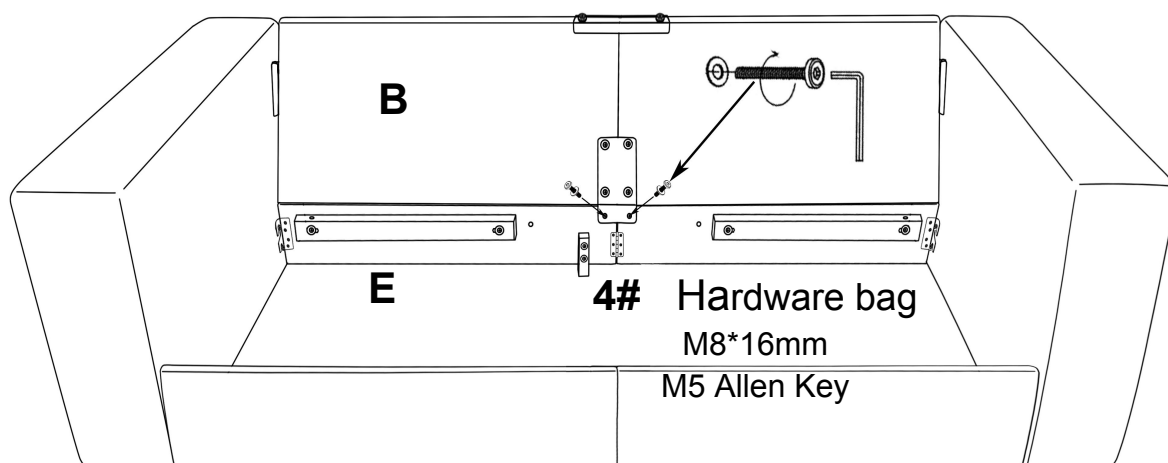Refers to Parts B & E & Hardware 4# .



STEP 12 : Assemble the Back Support Board

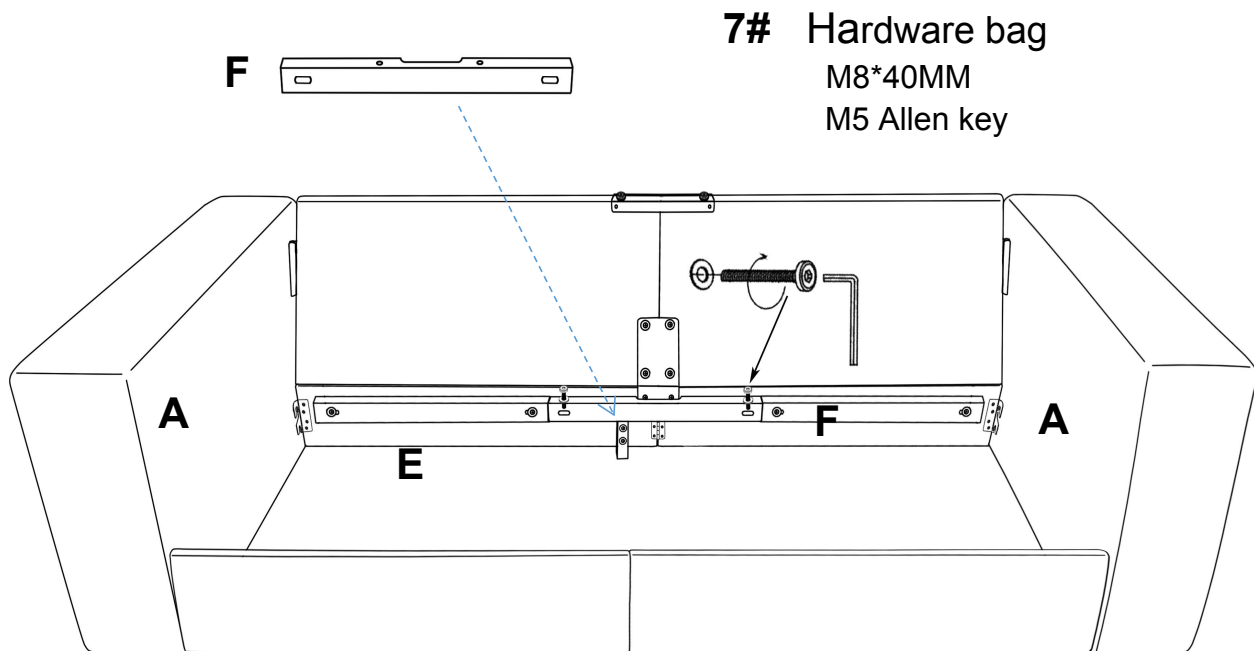Assemble Middle slat onto the Back Support Board with 7# Hardware as Picture below , by inserting the bolts into the top holes, tighten with the M5 Allen key, Refers to Parts E & F & Hardware 7# .




Level the whole sofa frame.
Tighten all bolts with the Allen key too much
now.

STEP 13 : Assemble Support Slats for Seat

Put the 2 pieces Support Slats onto the Seat frame as Picture below , by inserting the bolts into the top holes, tighten with the M4 Allen key. (Option - ssemble one sid by rolling up the slats then to the other side)

Refers to Parts H & Hardware 7# .

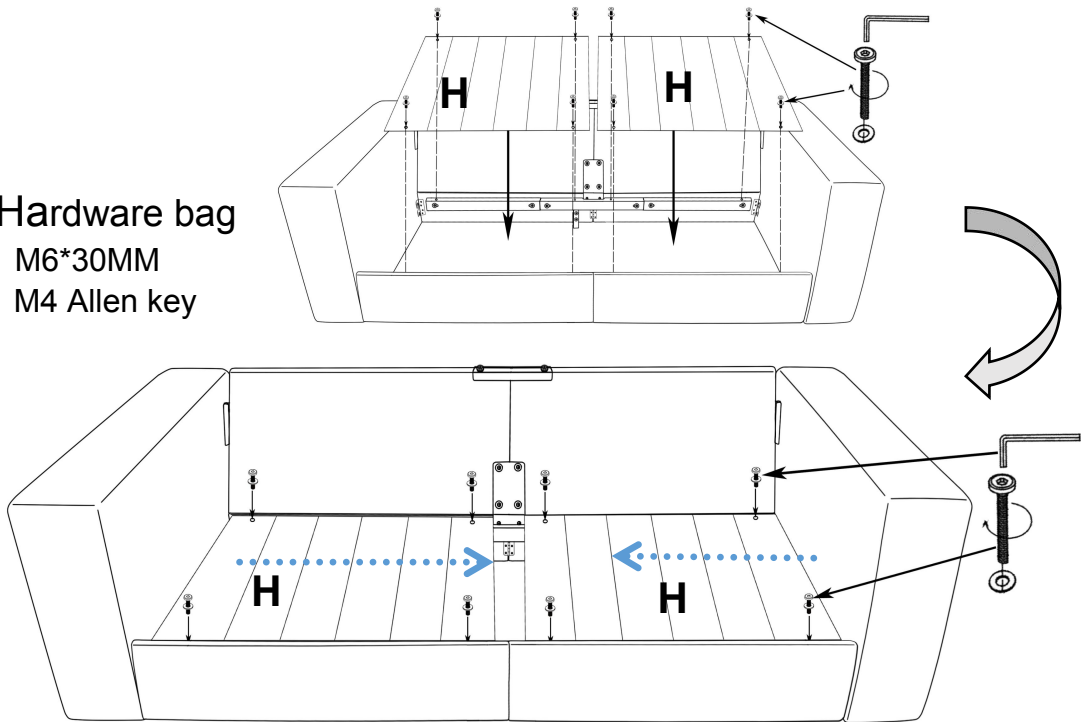
7# Hardware bag
M6*30MM
M4 Allen key



STEP 14 : Put on the sofa Cover

Put the cover on the sofa base, Take care : the four corners of the sofa cover need to be aligned at first ! Then to Pull down the four sides simultaneously. Avoid to pull down 1 or 2 or 3 corner to the bottom, then to pull down the other.

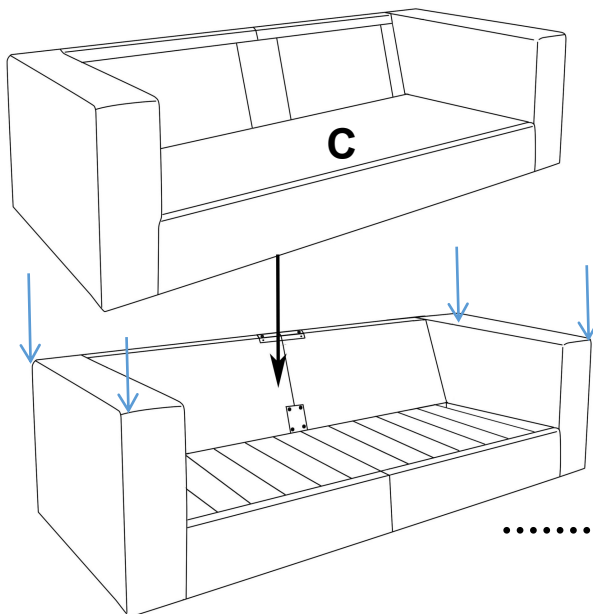Refers to Parts C .




Flatten the cover and
stick the bottom
adhesive buckle onto
the bottom frame of the
sofa.

STEP 15 : Put on the Cushions & Pillows

(1) Put the Back cushions, Seat cushions, Pillows on the sofa like the below picture.
Refers to Parts J & I & K .

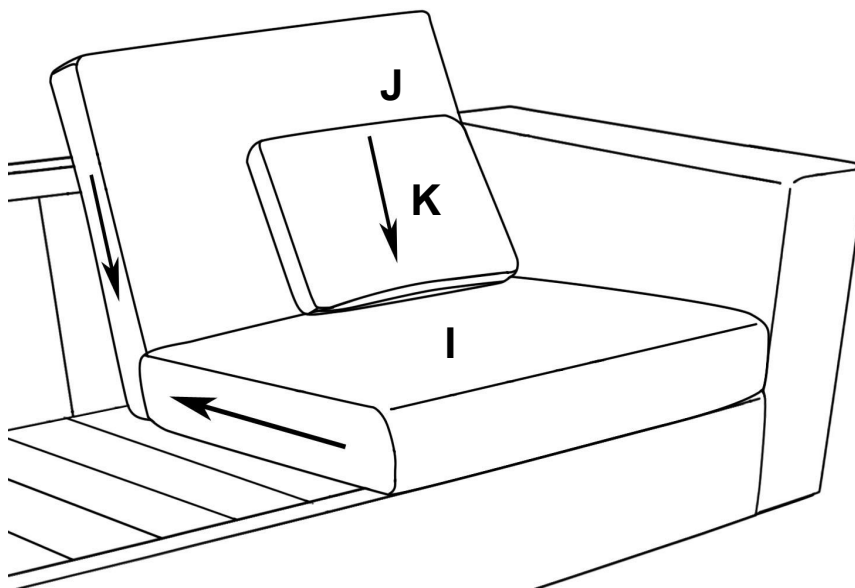(2) Tap the Cushions & Pillows to restore their shape.



The Cushions & pillows needs to be restored within 48 hours due to vacuum compression !

