



PX01
PX02
PX03

ASSEMBLY INSTRUCTION

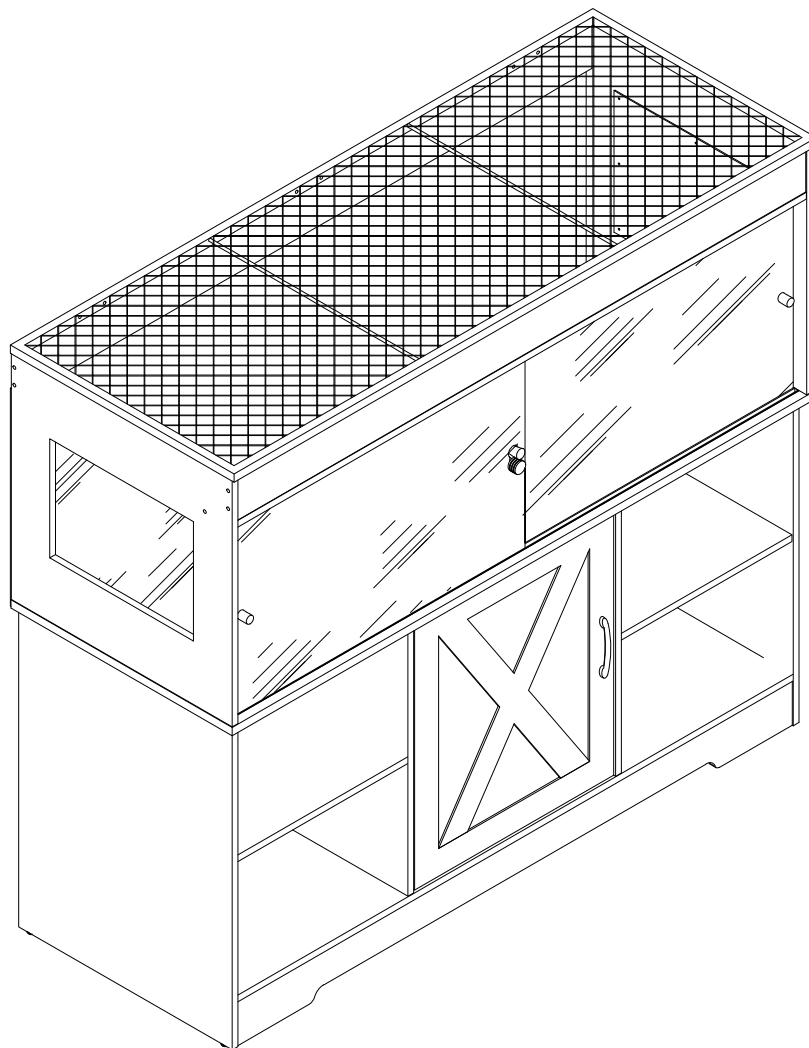


ASSEMBLY INSTRUCTION

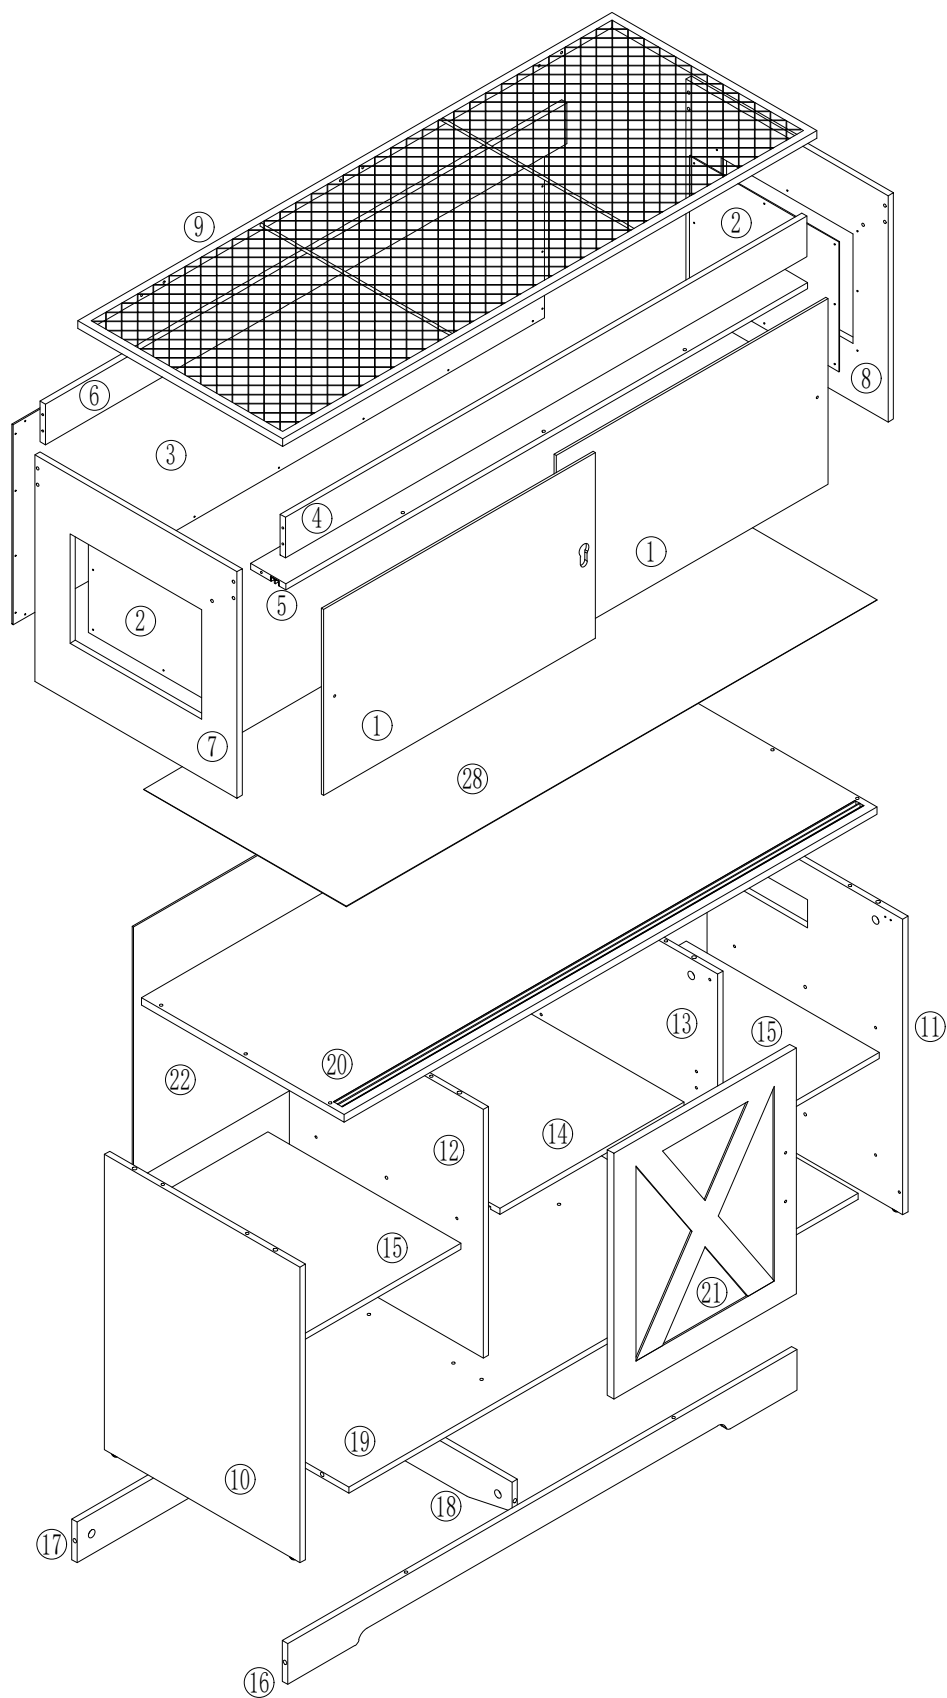


ASSEMBLY INSTRUCTION

1

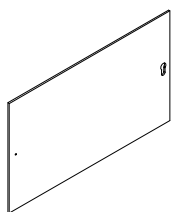


2PCS

2

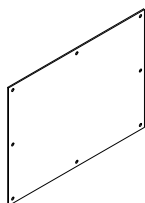


2PCS

3

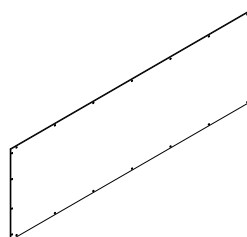


1PCS

4

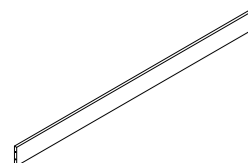


1PCS

5

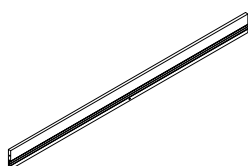


1PCS

6

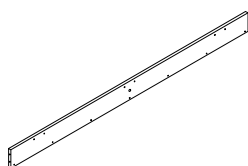


1PCS

7

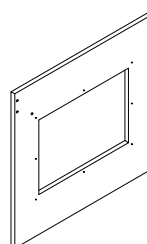


1PCS

8

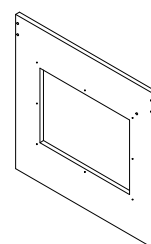


1PCS

9

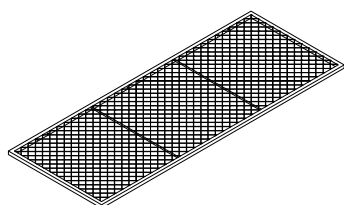


1PCS

10

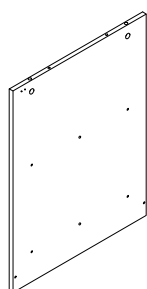


1PCS

11

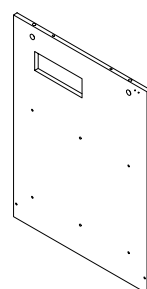


1PCS

12

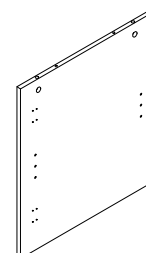


1PCS

13

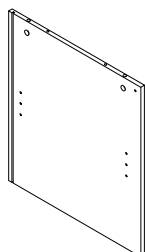


1PCS

14

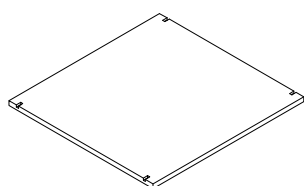


1PCS

15

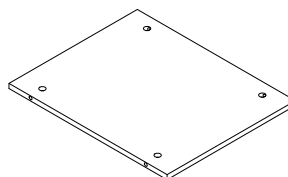


2PCS

16

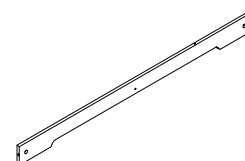


1PCS

17

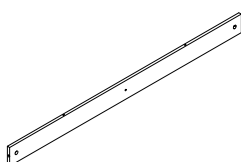


1PCS

18

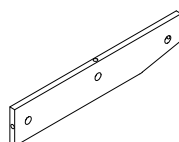


1PCS

19

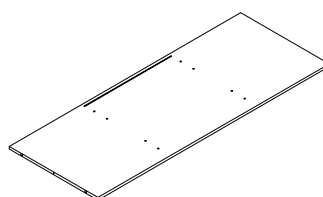





















1PCS

20

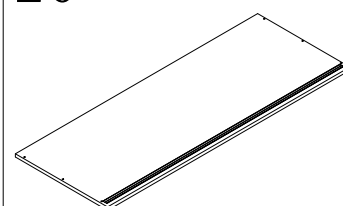

1PCS




ASSEMBLY INSTRUCTION

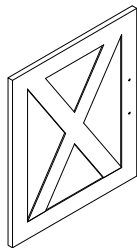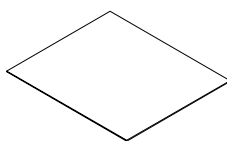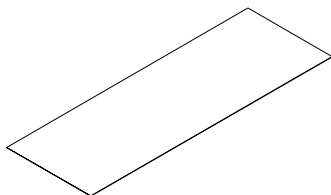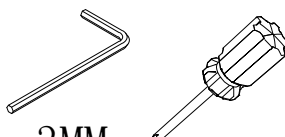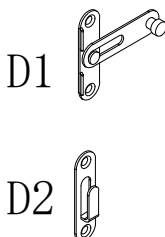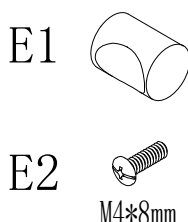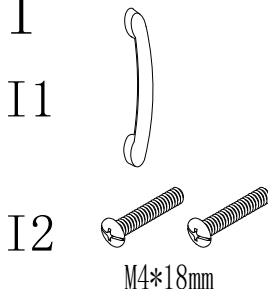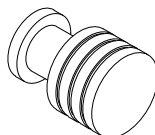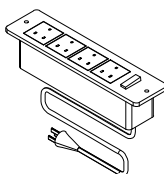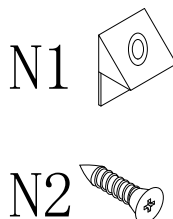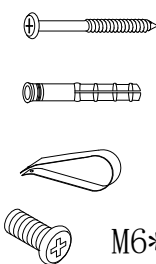21		22		28		 3MM			
1PCS		1PCS		1PCS					
A	 M5*38 23PCS	B	 φ6*30mm 22PCS	C	 M3*12mm 82PCS	D	 D1 D2 1PCS	E	 E1 E2 M4*8mm 2PCS
F	 M6*40mm 27PCS	G	 φ15*9.3mm 27PCS	H	 φ5*20mm 5PCS	I	 I1 I2 M4*18mm 1PCS	J	 1PCS
K	 3PCS	L	 1PCS	M	 M4*22mm 8PCS	N	 N1 N2 M3*14mm 6PCS	O	 M4 8PCS
P	 M6*10 1PCS	Q	 5PCS	R	 2PCS	S	 2PCS	T	 1PCS

ASSEMBLY INSTRUCTION





STEP1

16		1PCS
17		1PCS
18		1PCS
F		2PCS
Q		1PCS

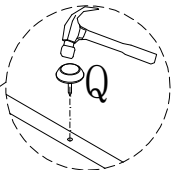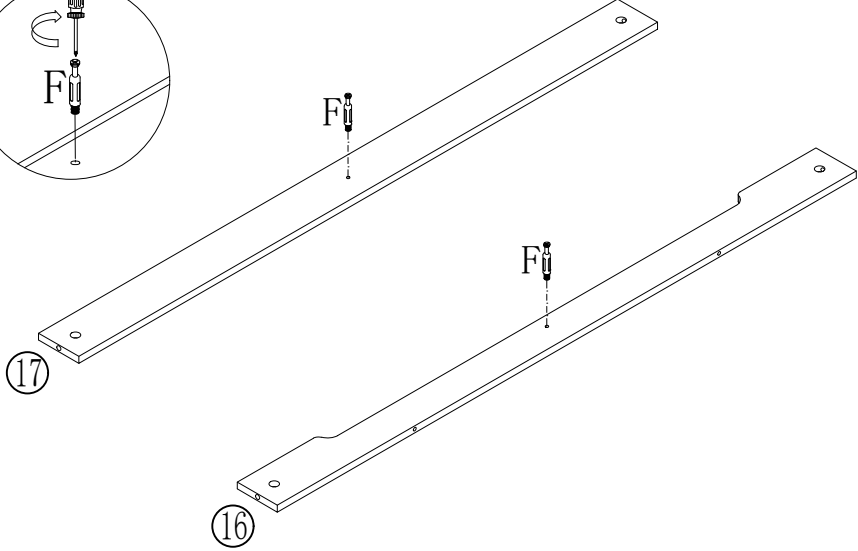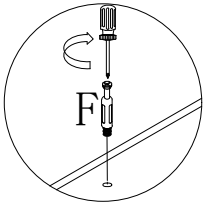


STEP2


G		2PCS
---	---	------

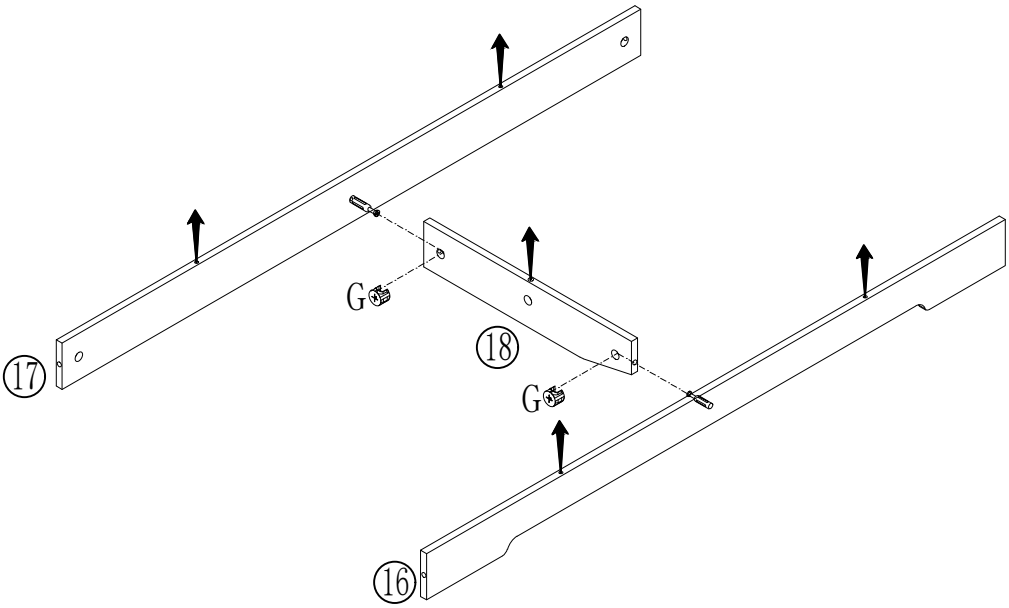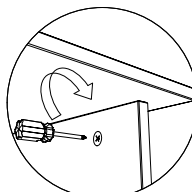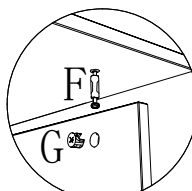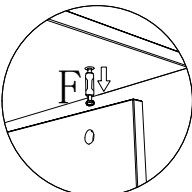

ASSEMBLY INSTRUCTION


STEP3

19		1PCS
F		1PCS

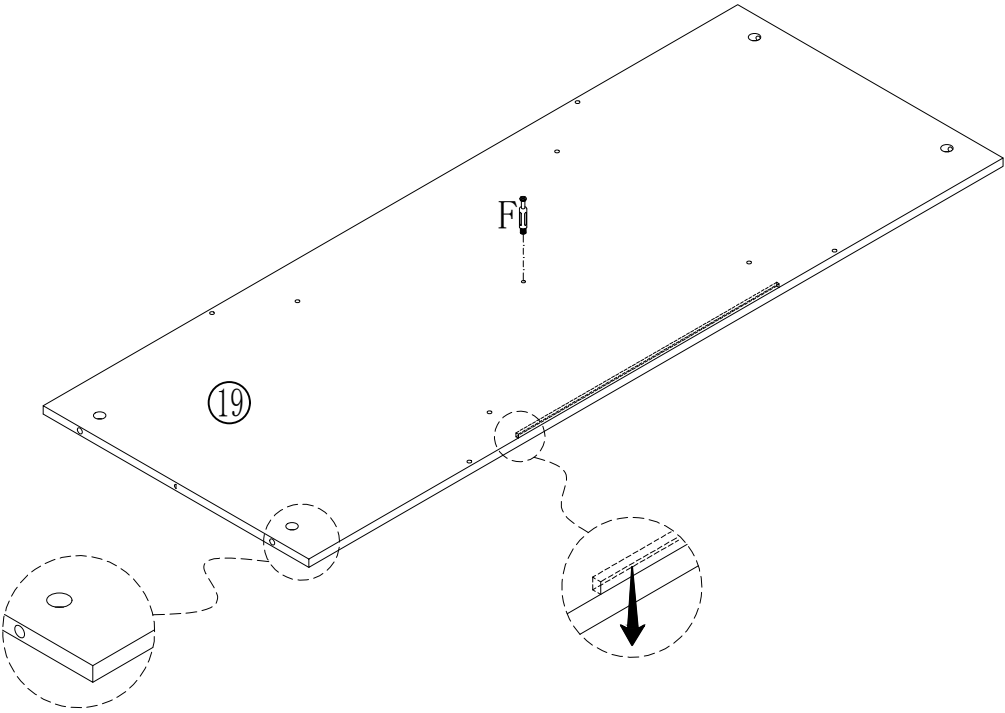

STEP4


B		4PCS
G		1PCS

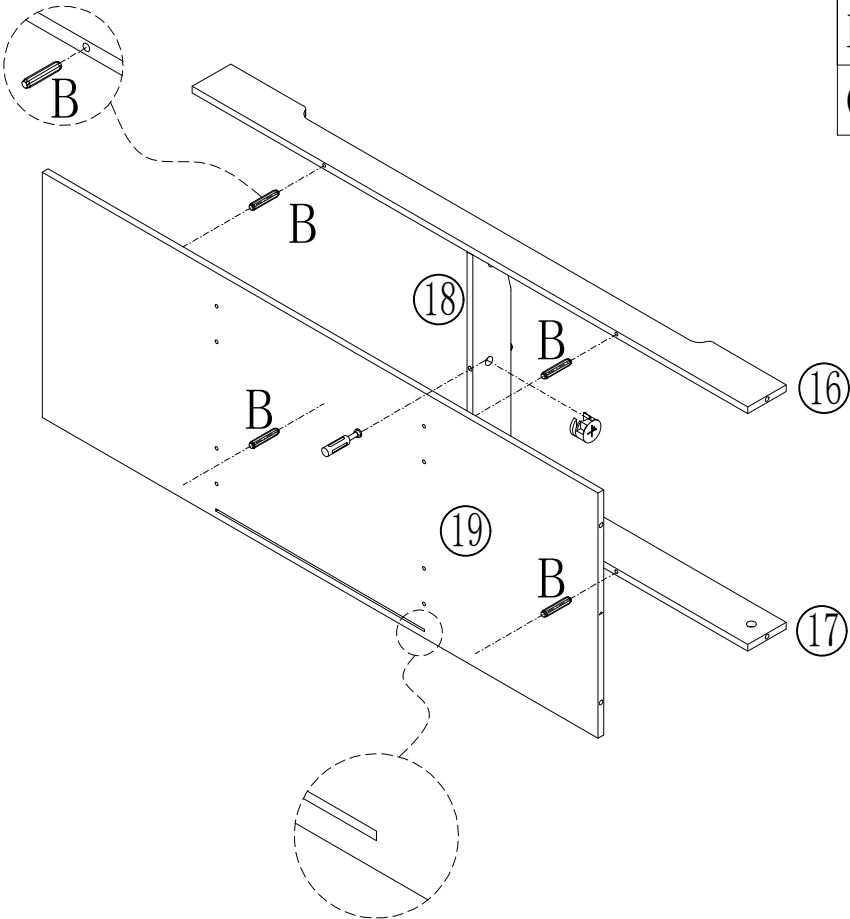

ASSEMBLY INSTRUCTION


STEP5

12		1PCS
15		1PCS
B		1PCS
F		2PCS
G		2PCS

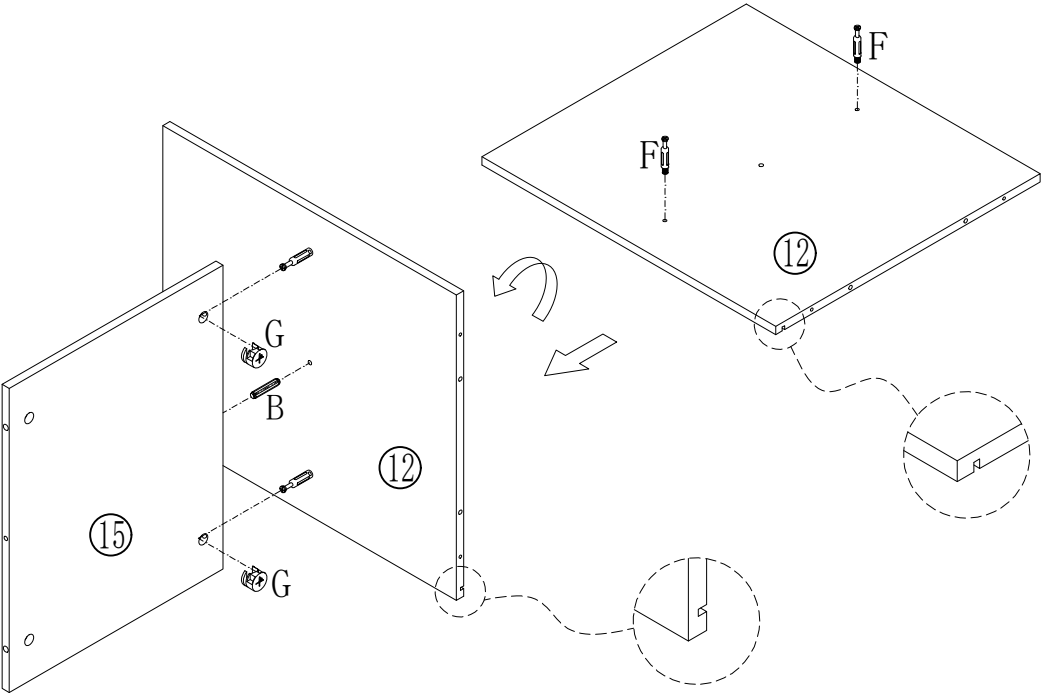

STEP6


13		1PCS
15		1PCS
B		1PCS
F		2PCS
G		2PCS

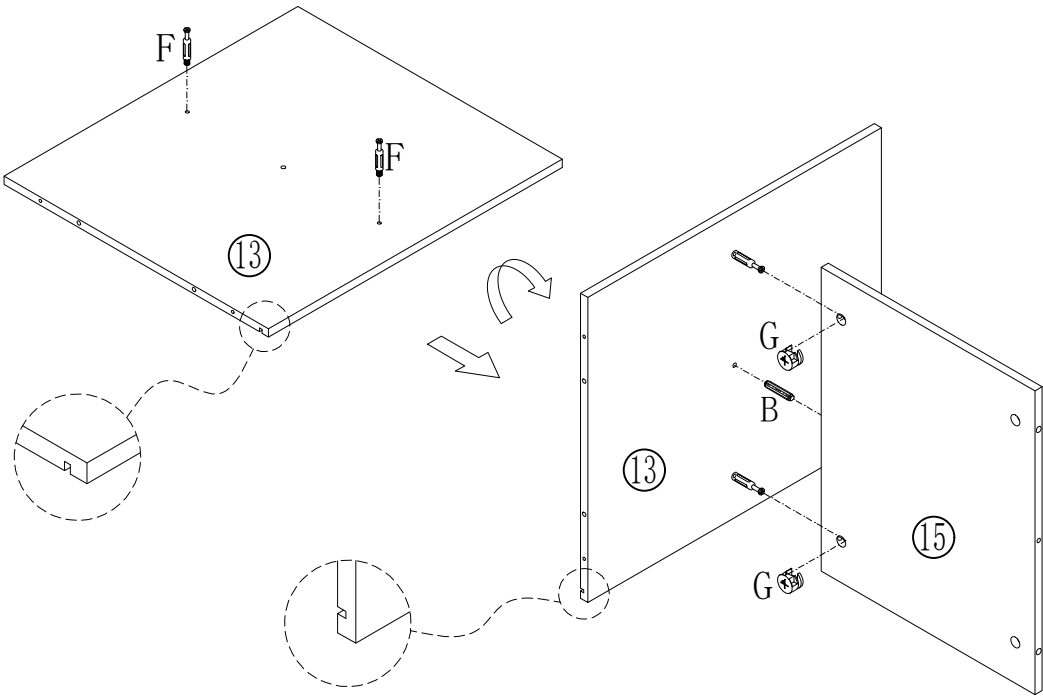

ASSEMBLY INSTRUCTION


STEP7

A		4PCS
B		4PCS

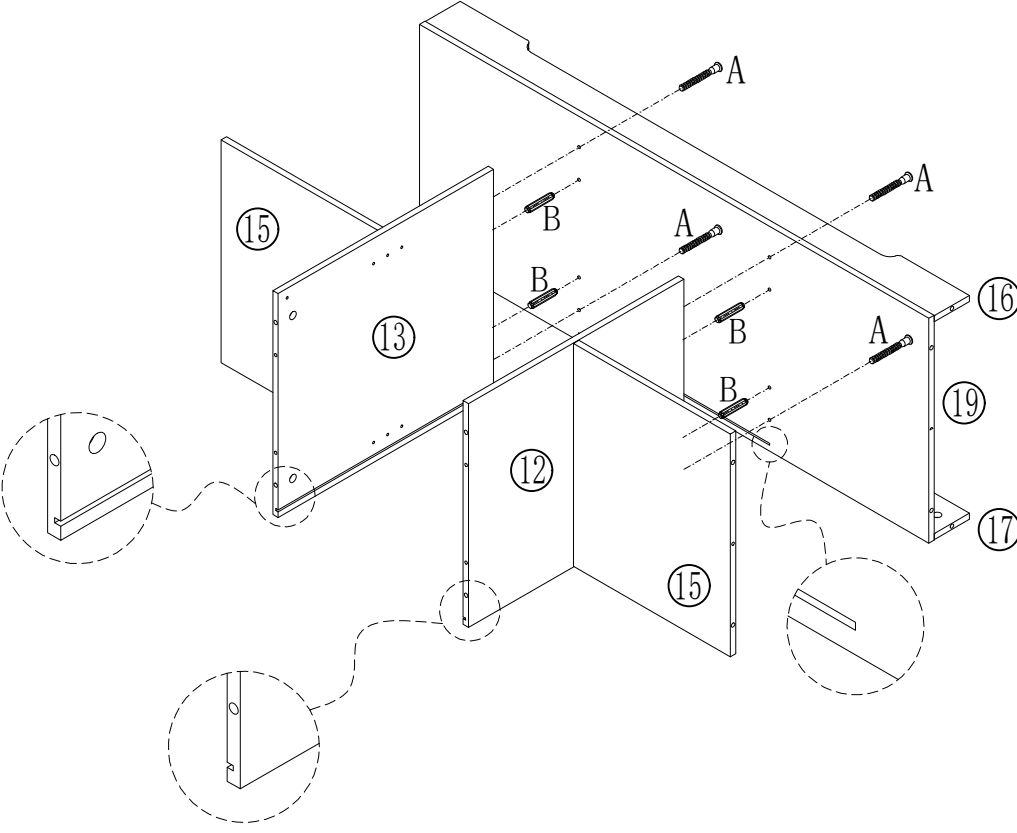

STEP8



10		1PCS
11		1PCS
Q		4PCS

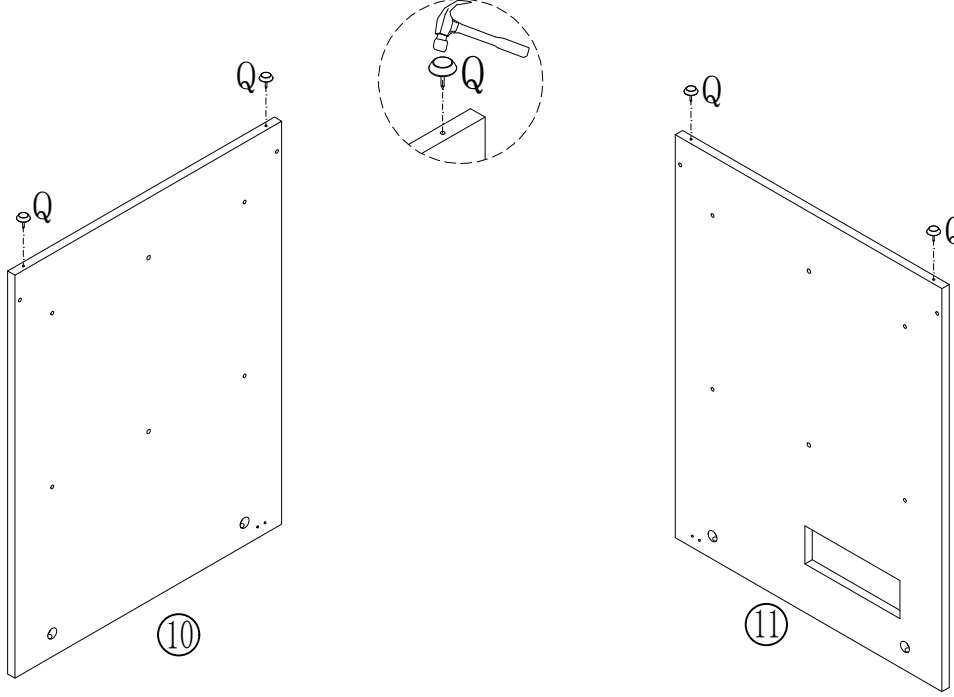

ASSEMBLY INSTRUCTION

STEP9


F  12PCS

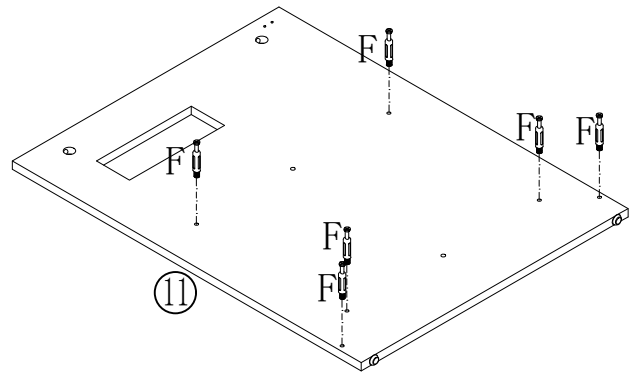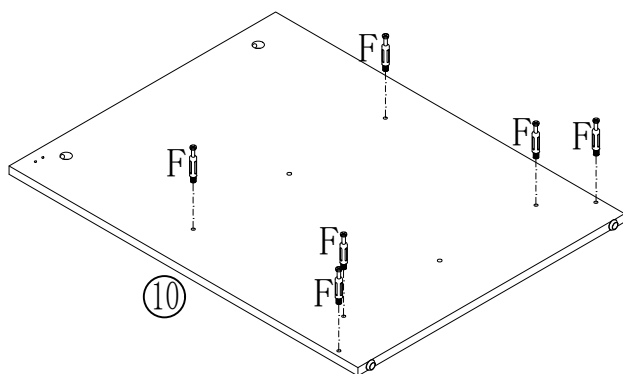

STEP10

B  2PCS


G  6PCS

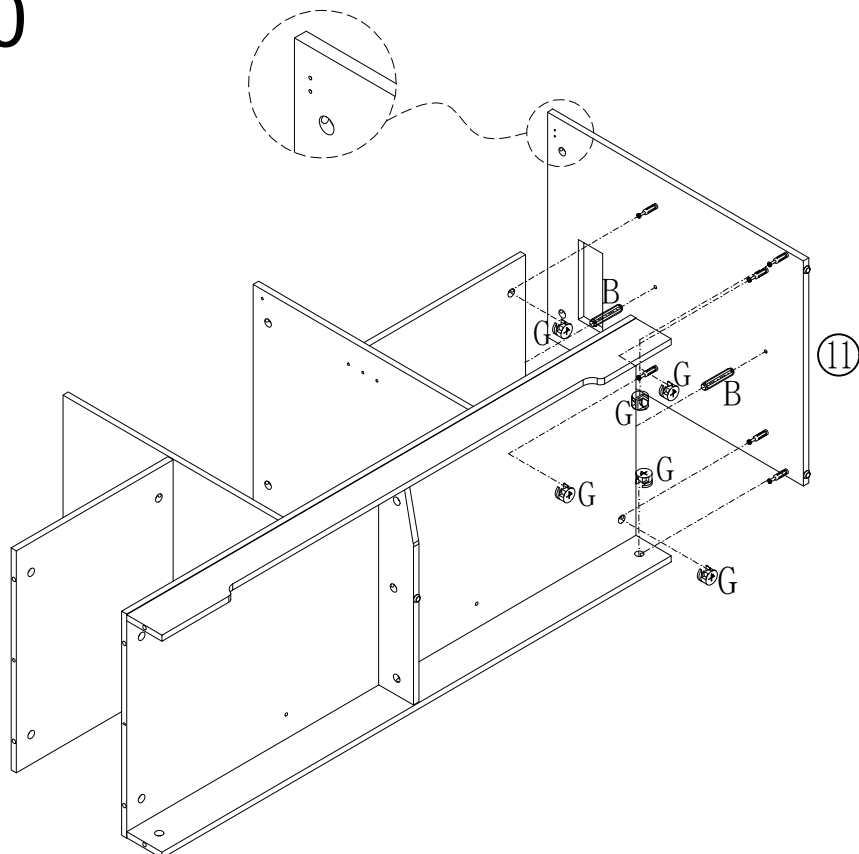

ASSEMBLY INSTRUCTION



STEP11

B		2PCS
G		6PCS

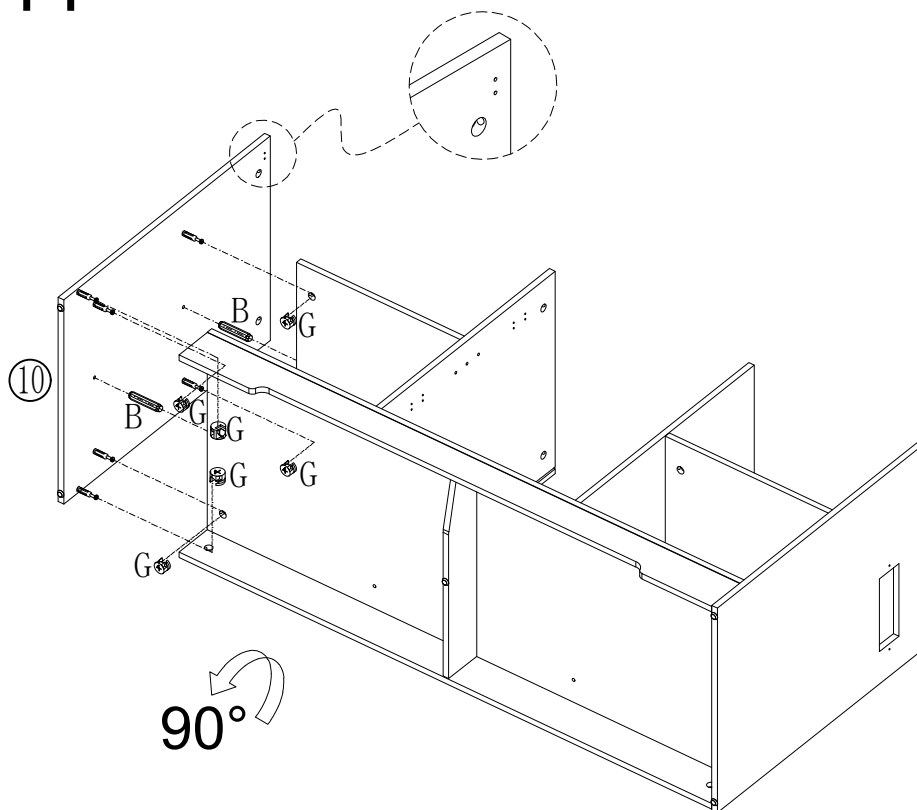


STEP12

22		1PCS
B		8PCS

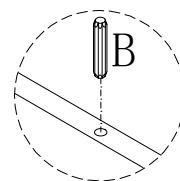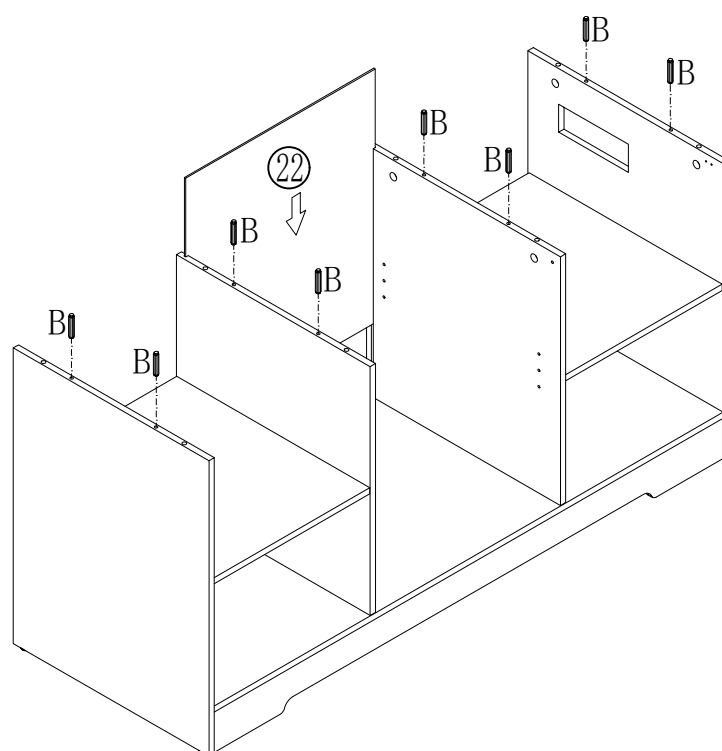


ASSEMBLY INSTRUCTION

STEP13


20  1PCS

F  8PCS

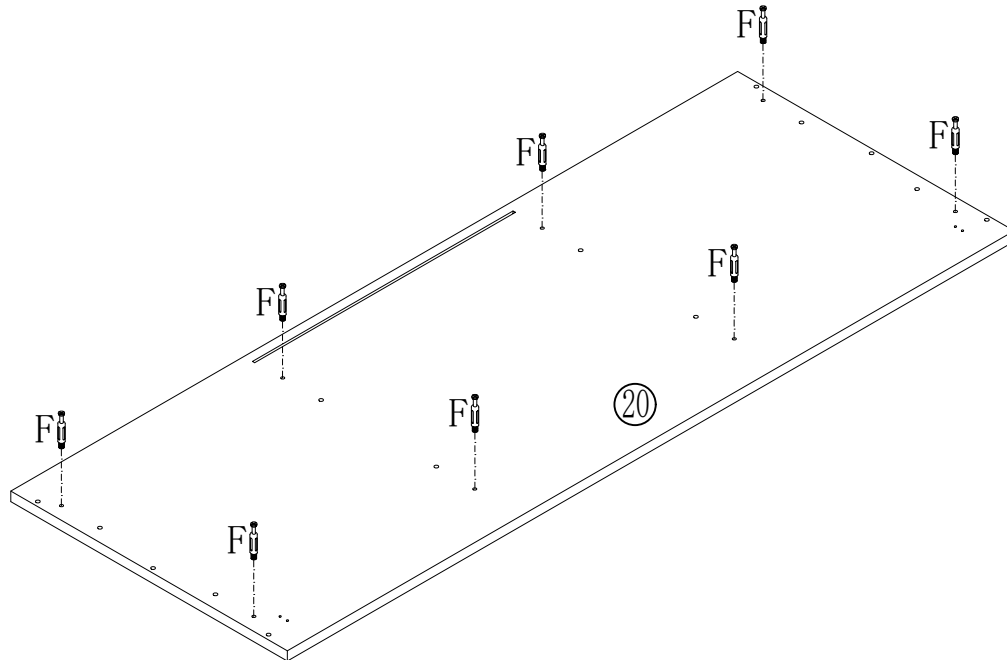

STEP14


G  8PCS

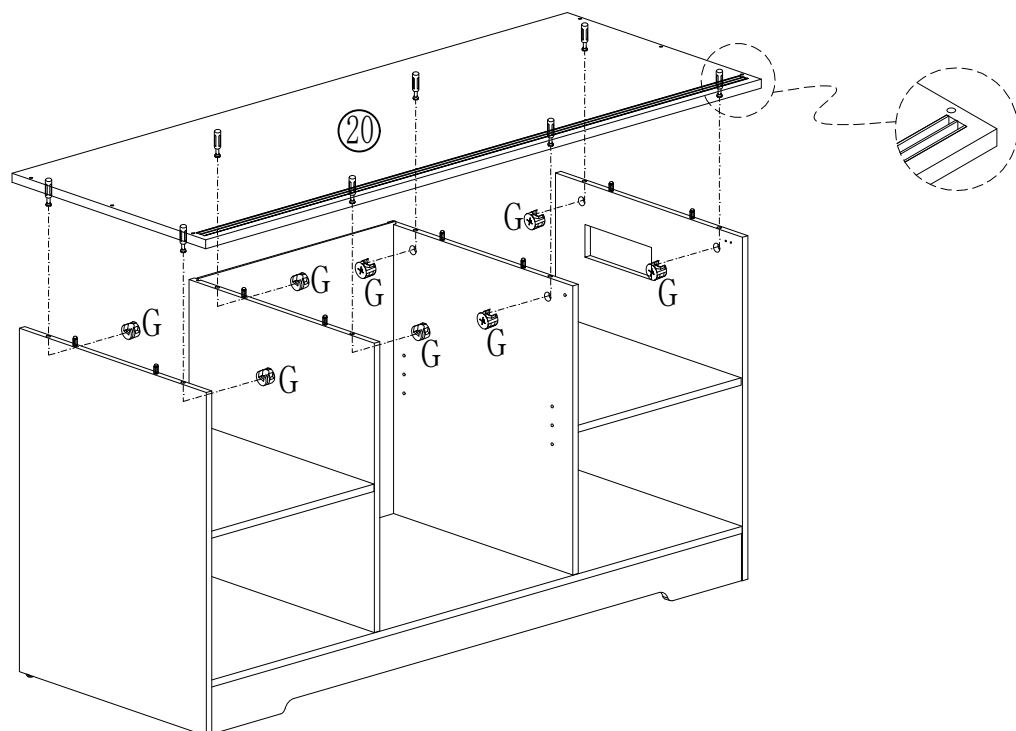

ASSEMBLY INSTRUCTION


STEP15

C		4PCS
R		1PCS

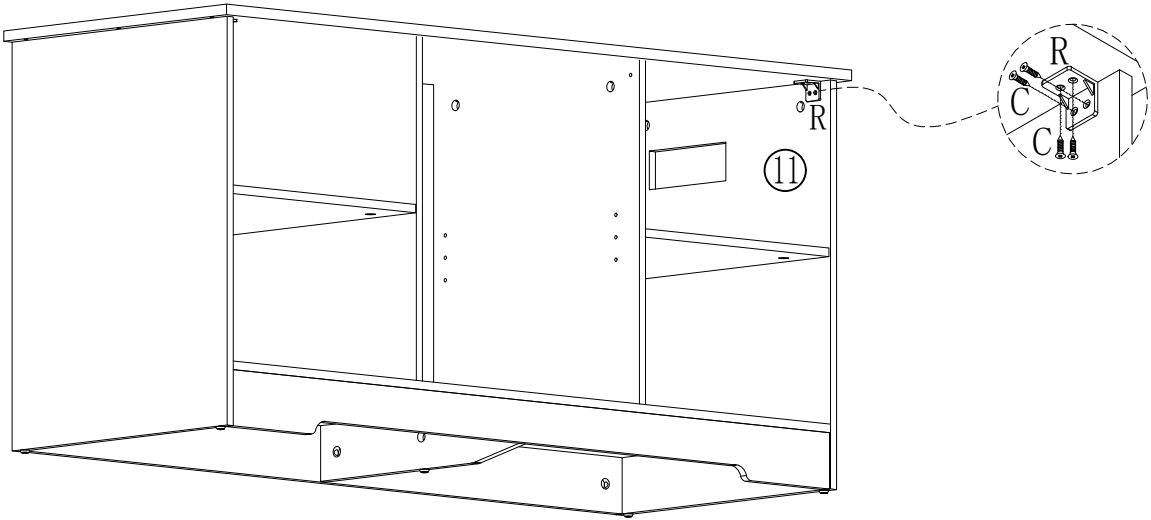

STEP16


C		4PCS
R		1PCS

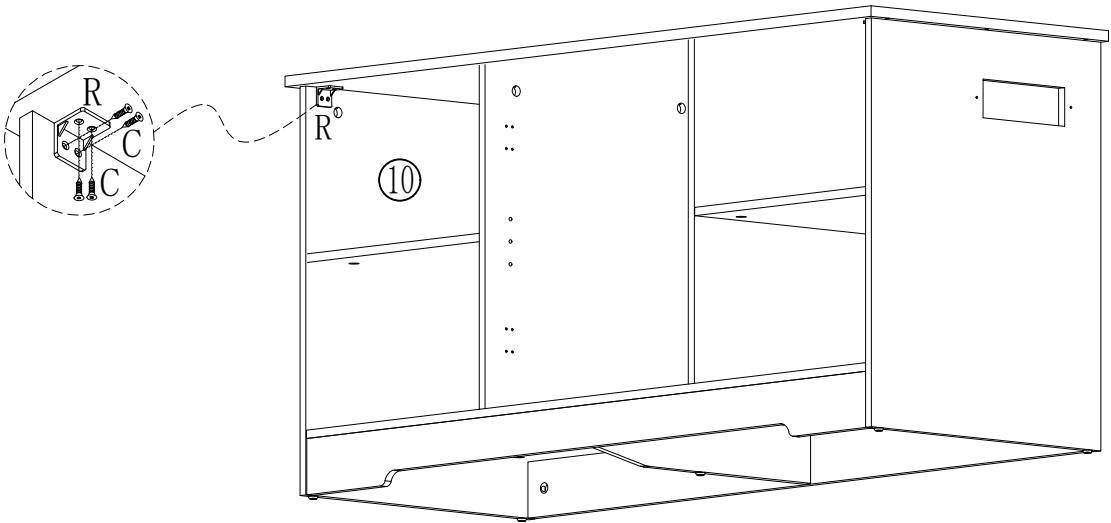

ASSEMBLY INSTRUCTION


STEP17

14		1PCS
H		5PCS

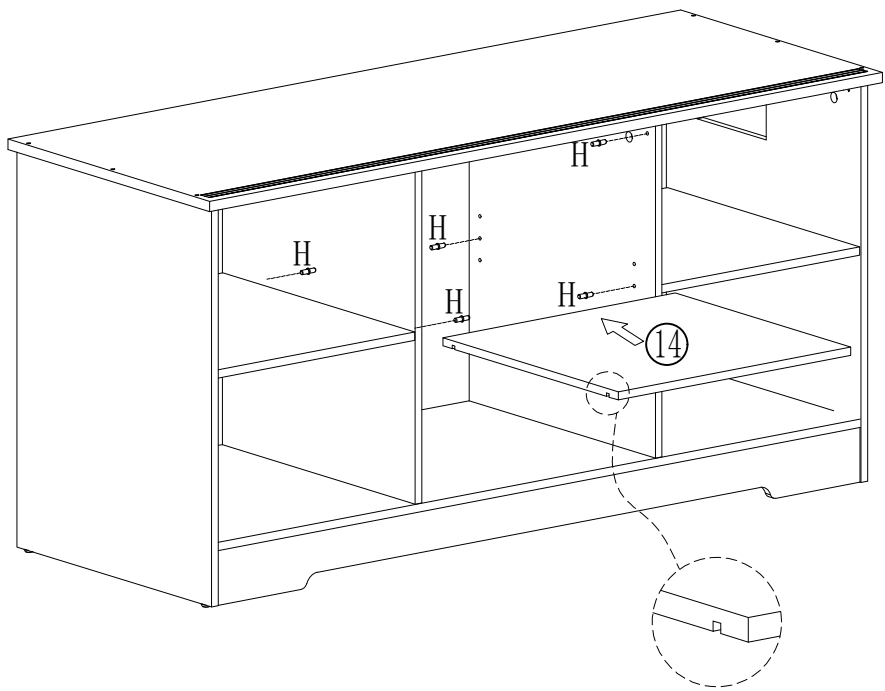

STEP18


21		1PCS
C		4PCS
I		1PCS
S		2PCS

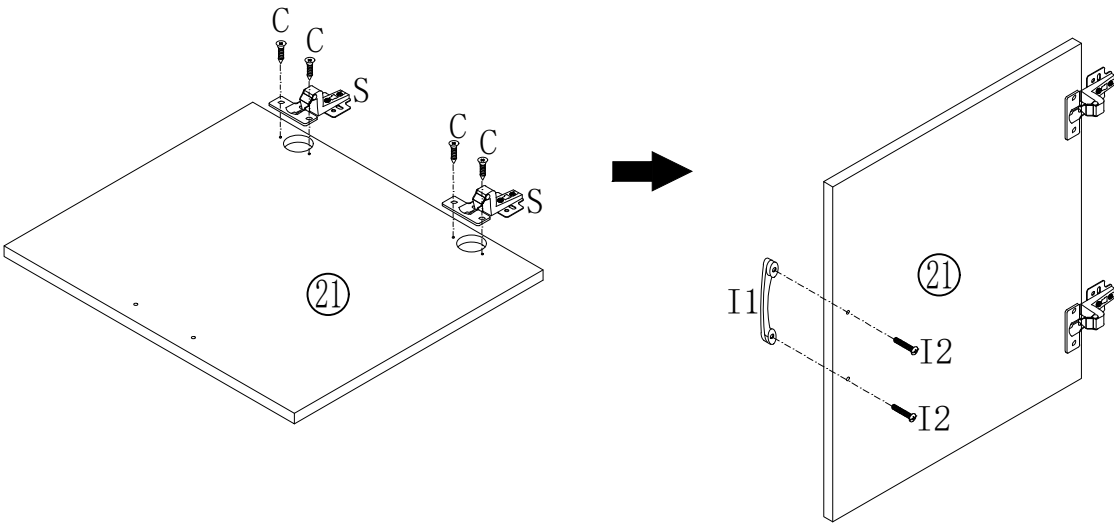

ASSEMBLY INSTRUCTION

STEP19

C  8PCS

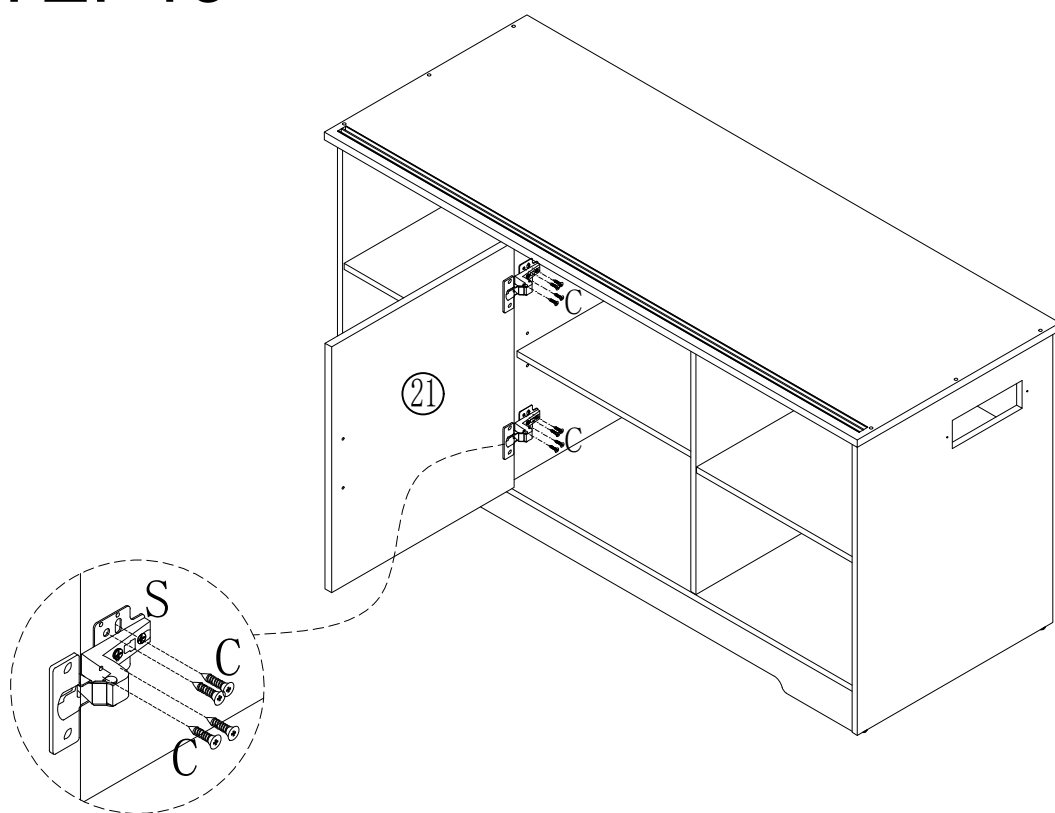


180°

STEP20



2  2PCS

7  1PCS

8  1PCS

C  16PCS


Please tear off
the protective
film before use.

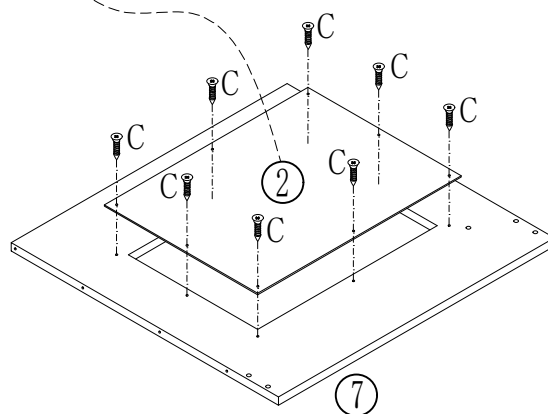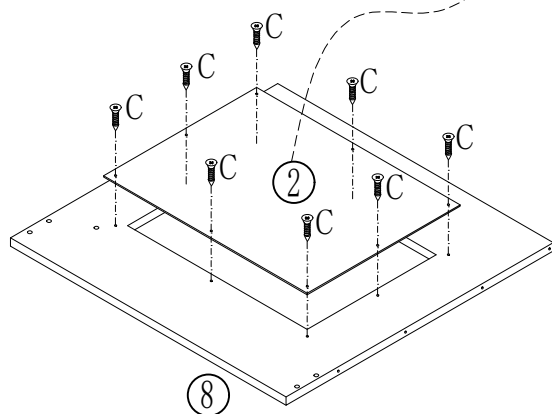

ASSEMBLY INSTRUCTION


STEP21

A  6PCS

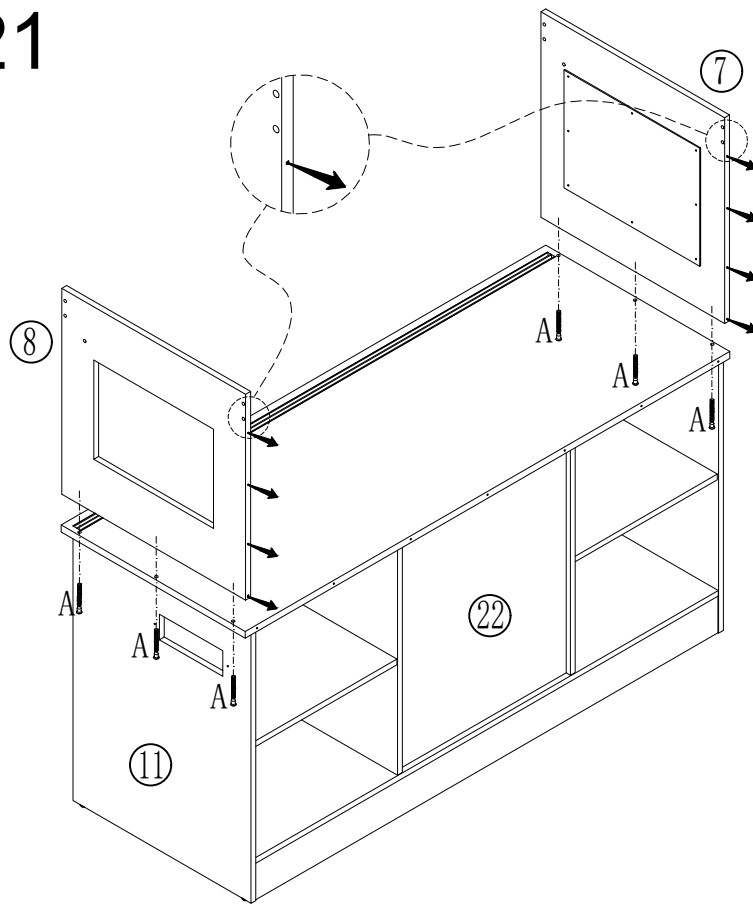

STEP22


6  1PCS
A  4PCS

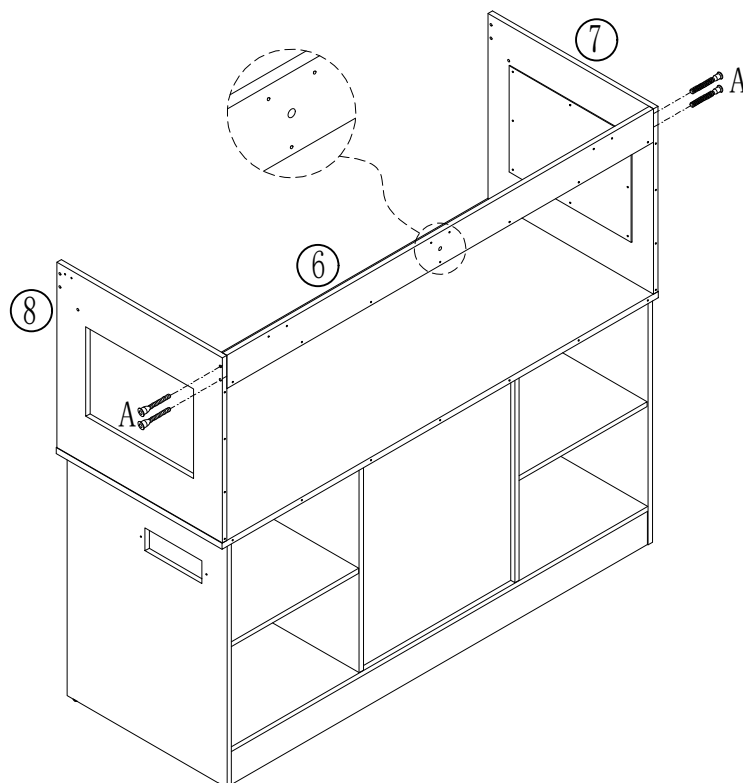

ASSEMBLY INSTRUCTION

STEP23


3		1PCS
C		36PCS

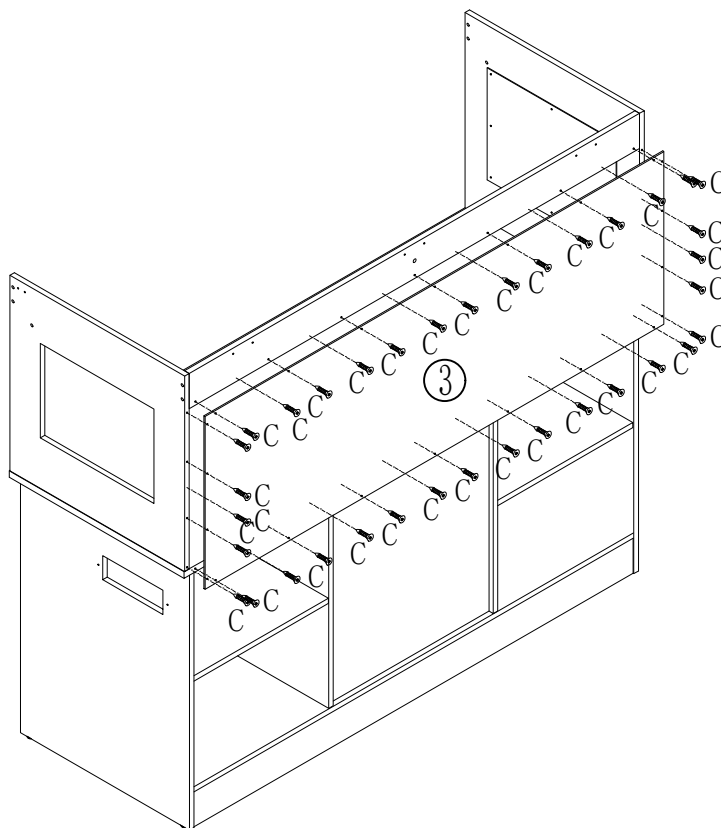


180°

STEP24


28		1PCS
----	---	------

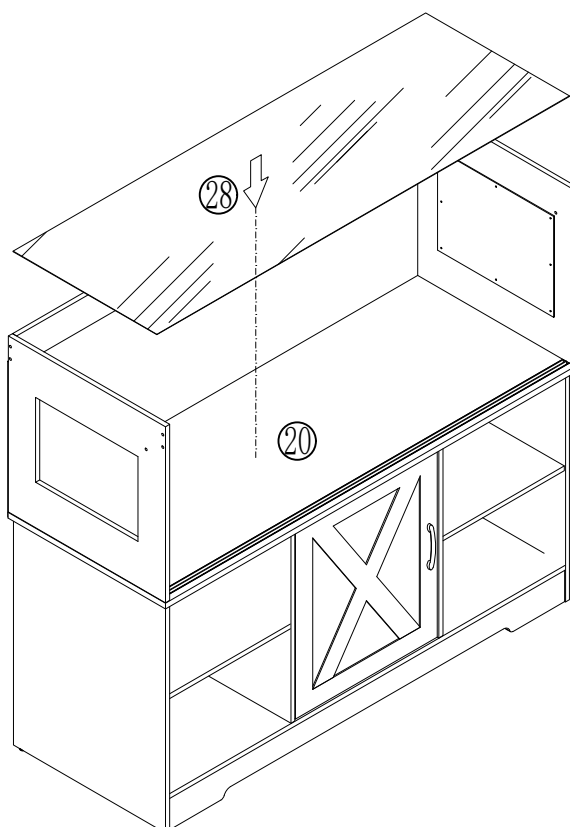

ASSEMBLY INSTRUCTION


STEP25

4		1PCS
5		1PCS
A		3PCS

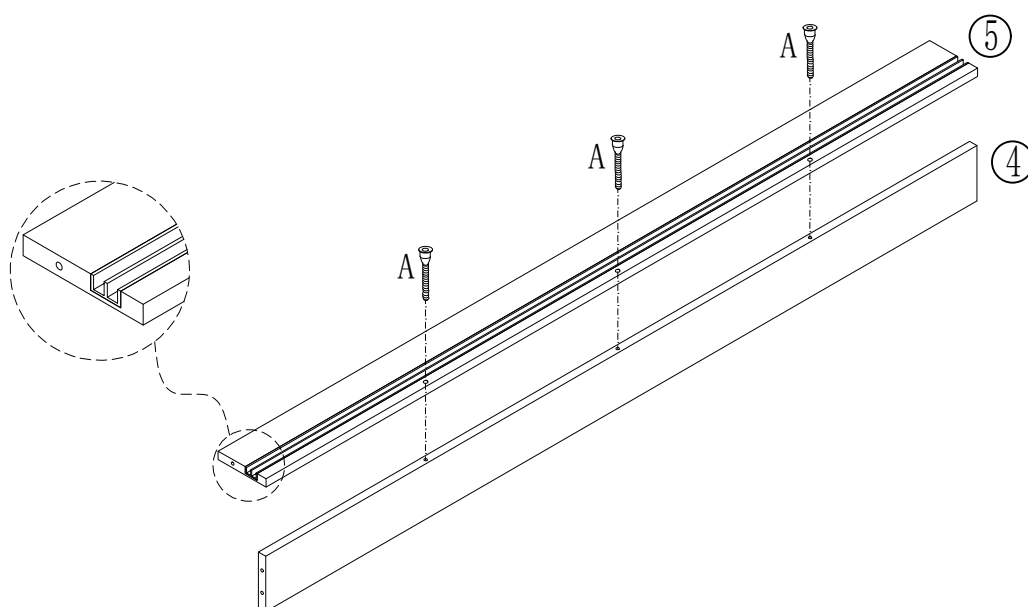

STEP26


1		2PCS
E	 	2PCS

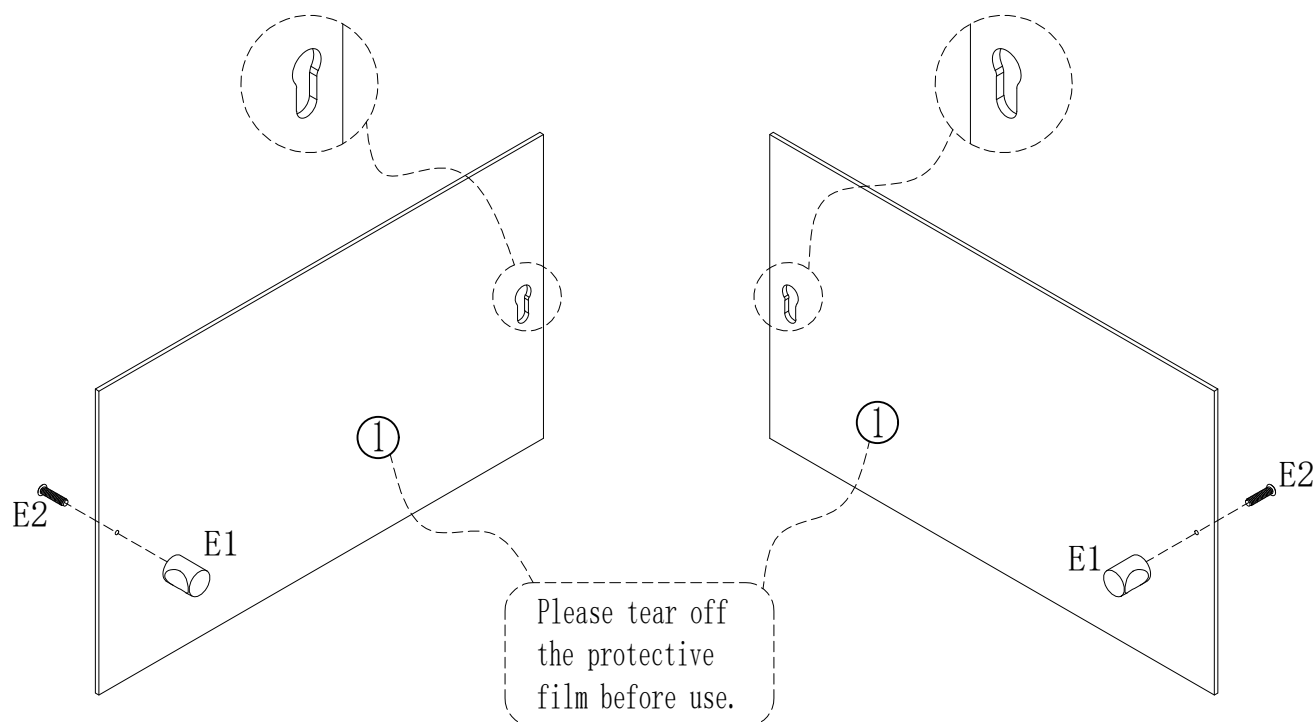

ASSEMBLY INSTRUCTION


STEP29

C		2PCS
D2		1PCS
J		1PCS

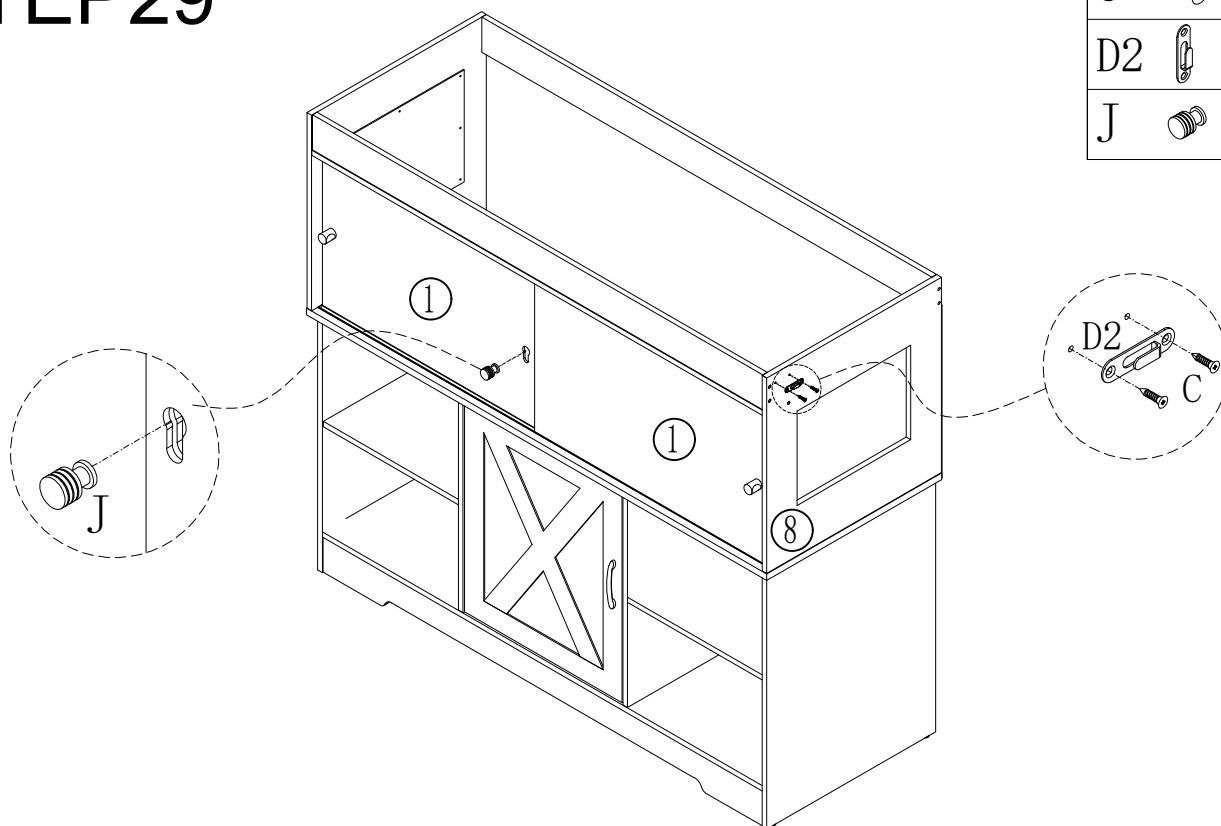

STEP30


T		1PCS
---	---	------

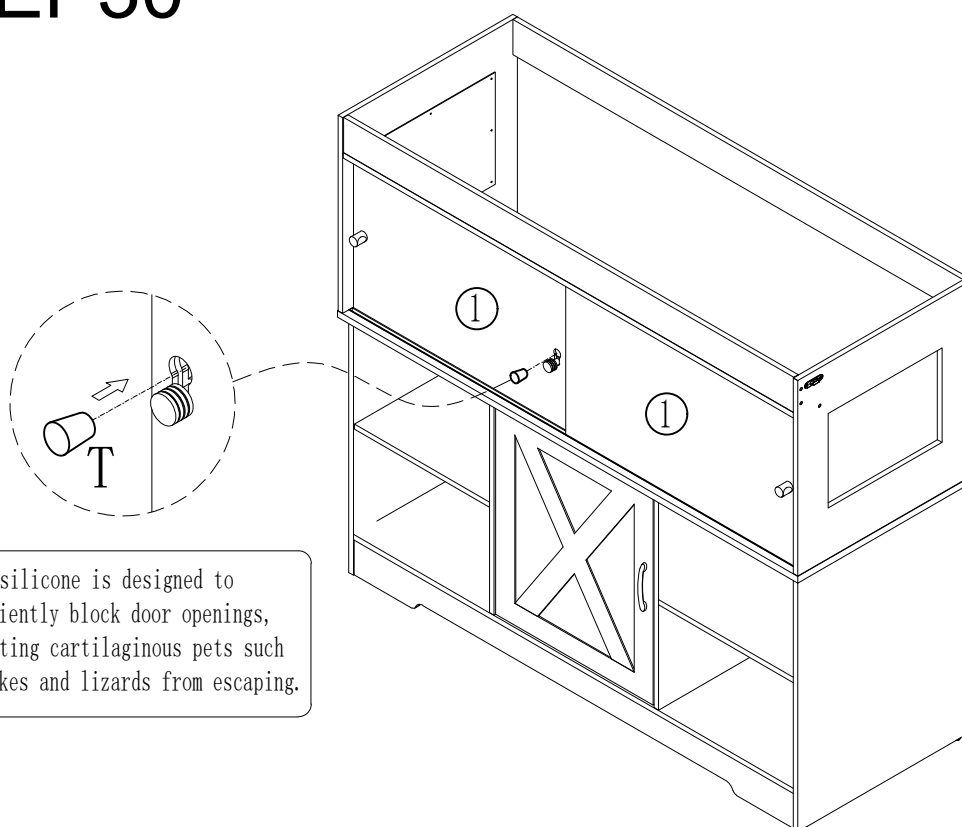


This silicone is designed to conveniently block door openings, preventing cartilaginous pets such as snakes and lizards from escaping.

ASSEMBLY INSTRUCTION

STEP31

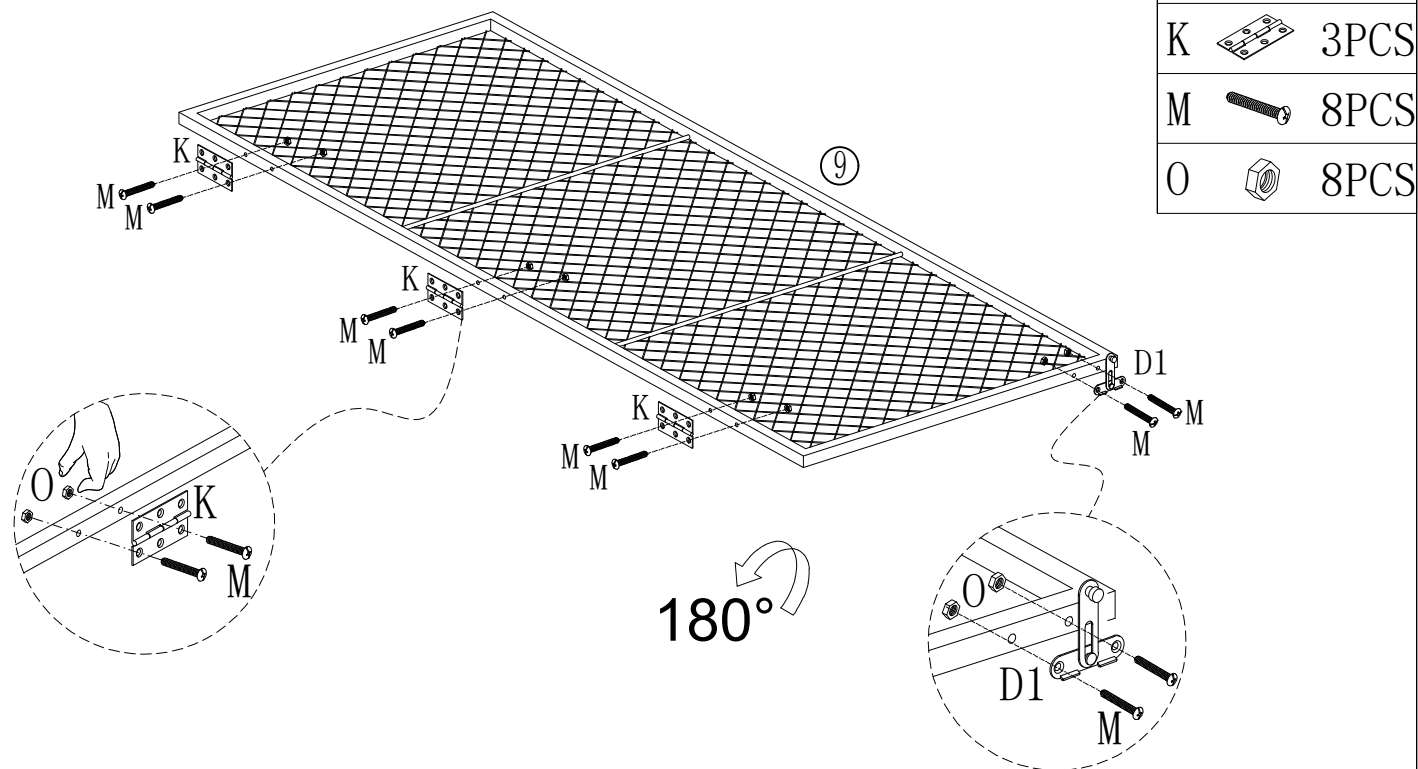


STEP32

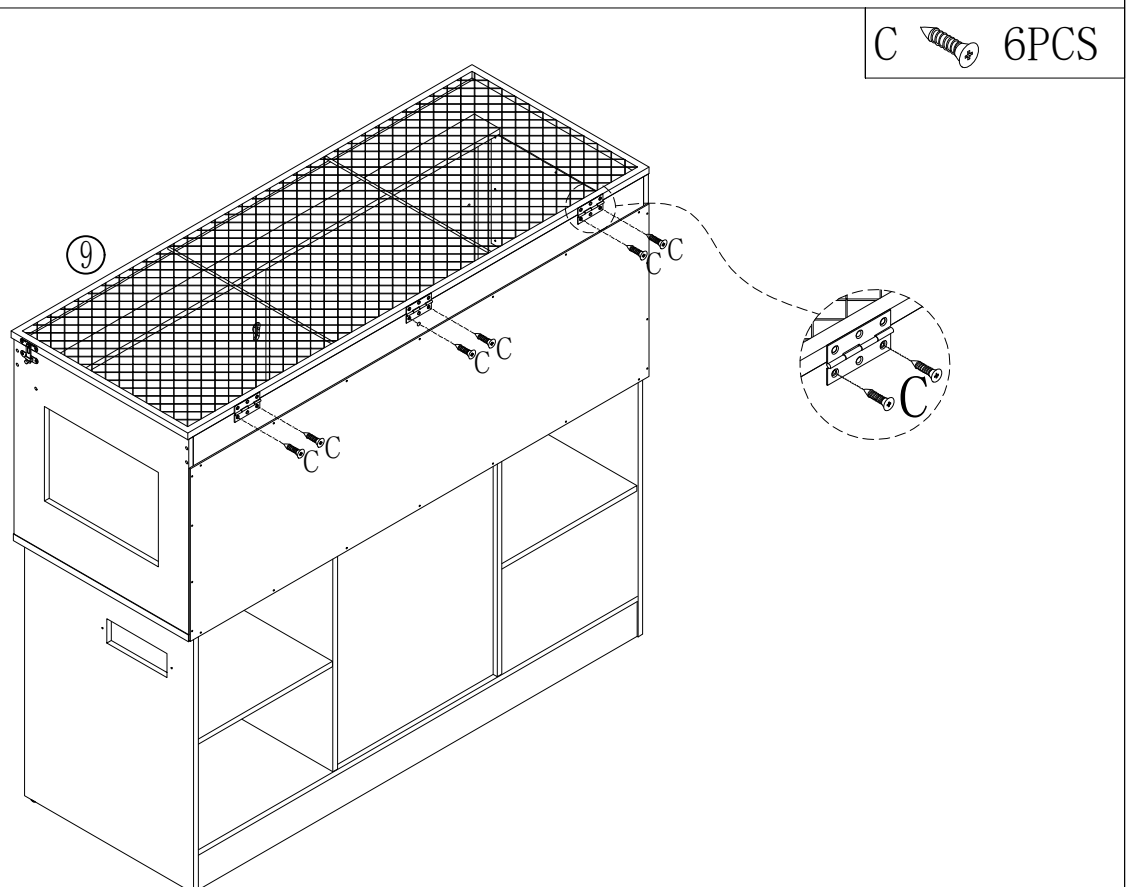

ASSEMBLY INSTRUCTION



STEP33

L		1PCS
C		2PCS

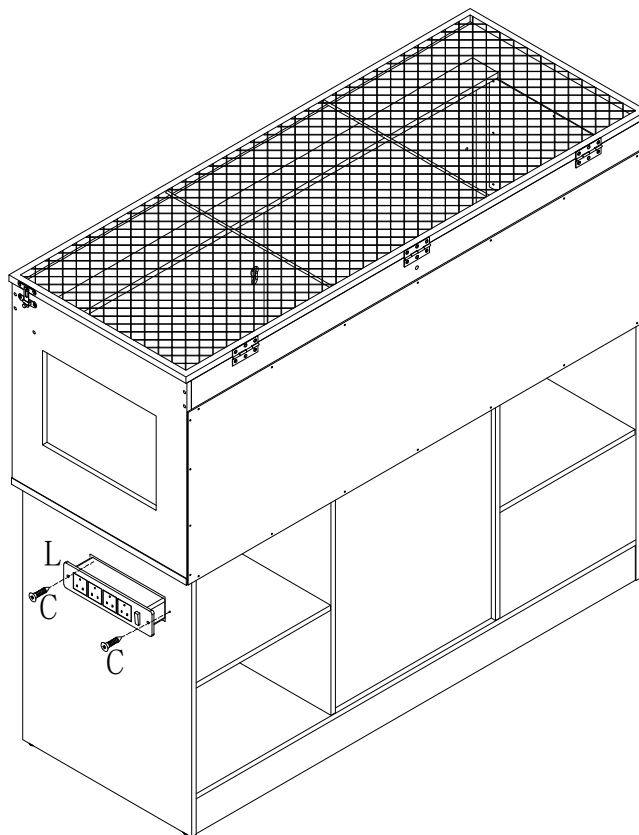



STEP34

N		 6PCS
---	---	--

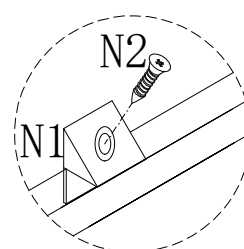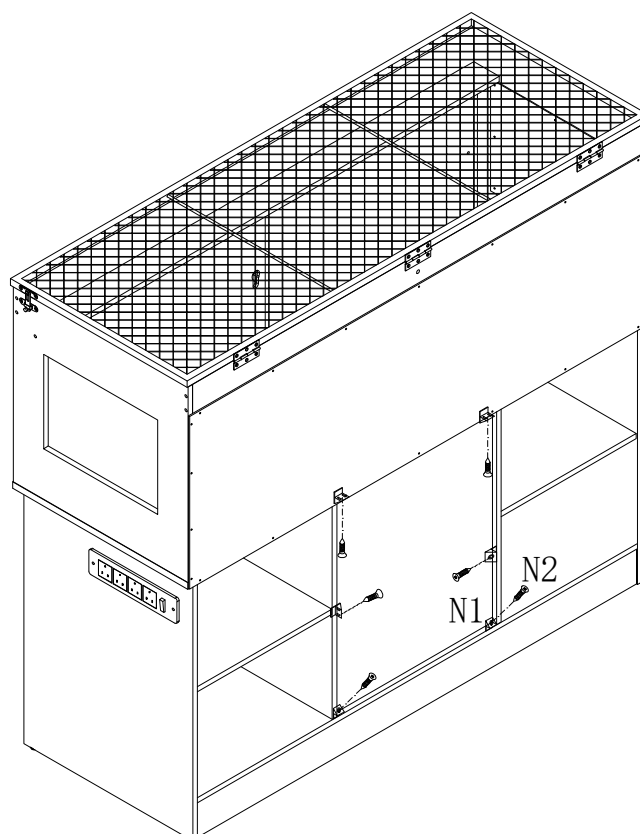

ASSEMBLY INSTRUCTION

STEP35

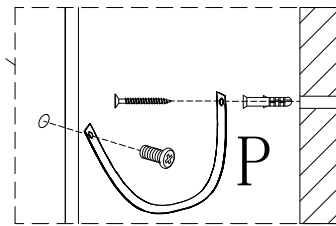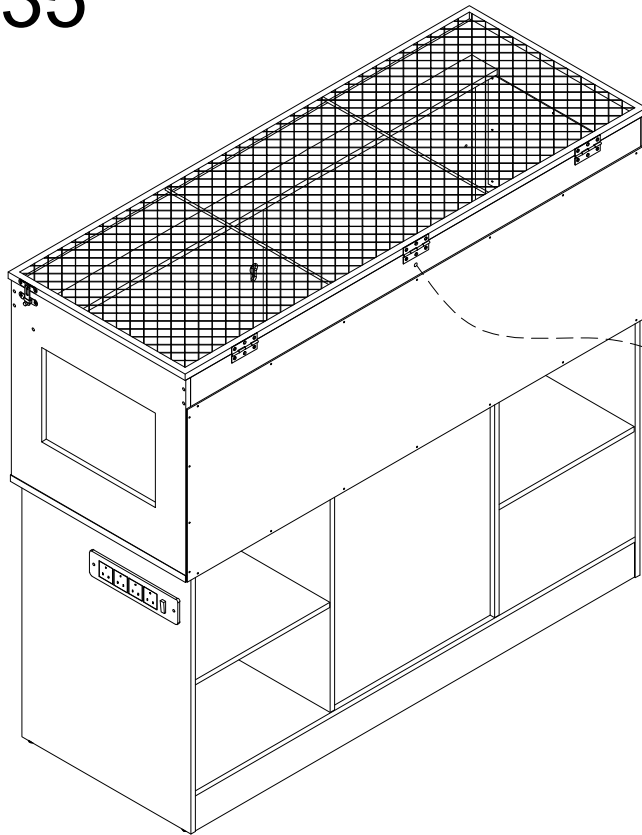

Installation Completed

