



ASSEMBLY INSTRUCTIONS

HOUSE BED WITH TRUNDLE

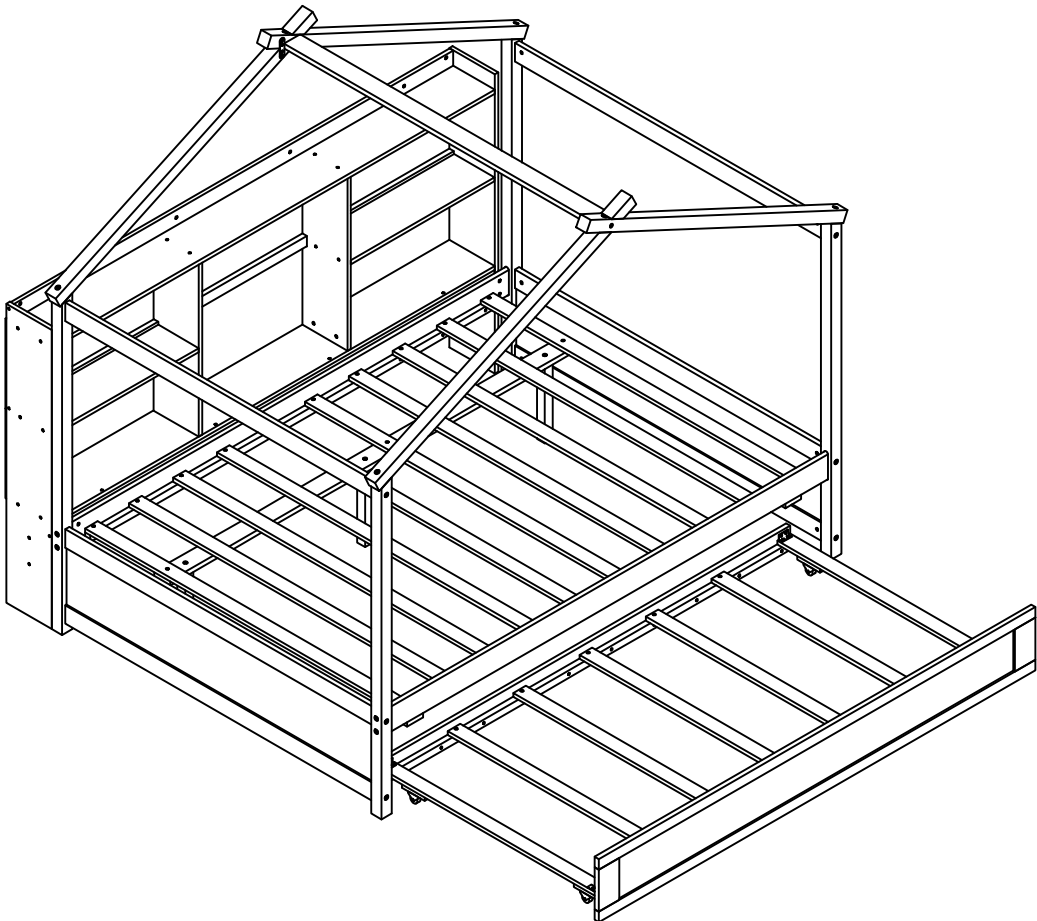










WF304949/WF304950

Detail View

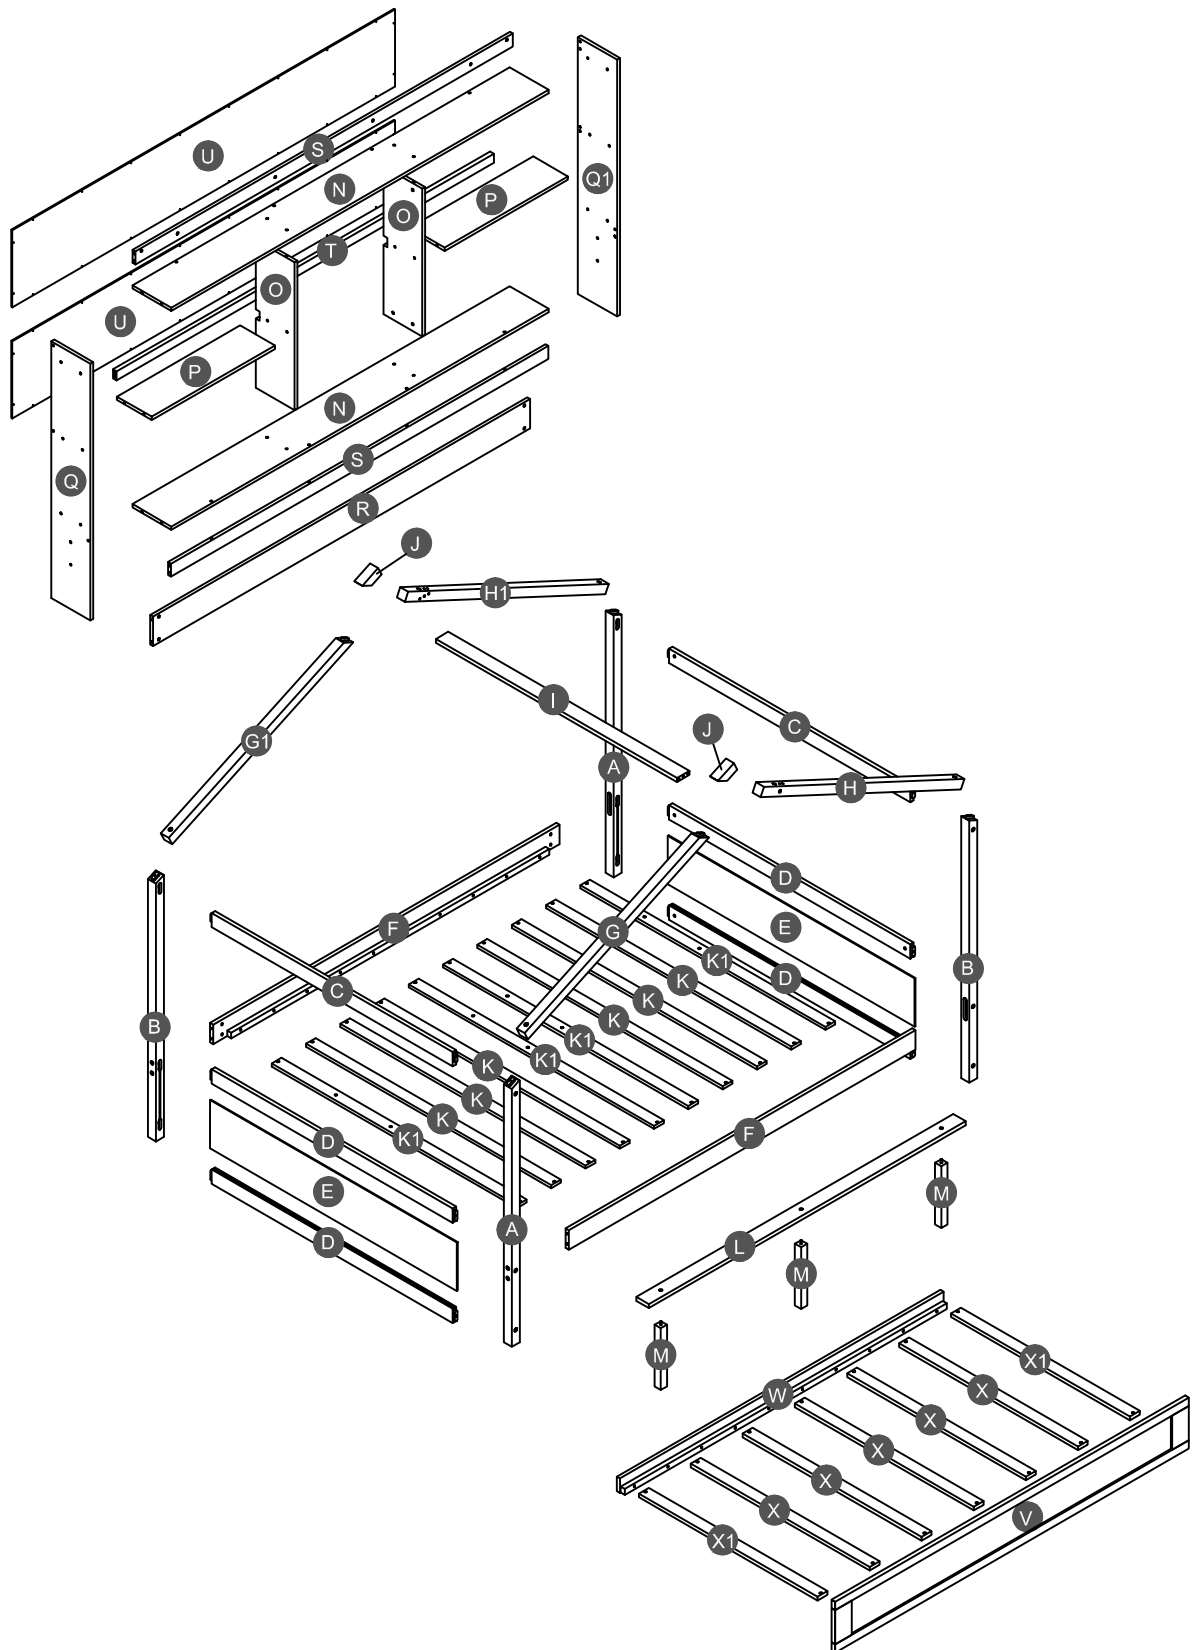







Part List

WF304949 - Hardware inside






A  Leg (Left Front/Right Back) - 2pcs	B  Leg (Left Back/Right Front) - 2pcs	E  Side panel HB/FB - 2pcs
F  Side rail - 2pcs	I  Upper horizontal bar - 1pc	L  Lower support slat - 1pc
M  Leg support - 3pcs	N  Top + Bottom panel - 2pcs	R  Lower horizontal bar - 1pc
S  Horizontal bar (Back) - 2pcs	T  Divider horizontal bar (Back) - 1pc	U  Back panel - 2pcs
V  Front panel side rail of trundle - 1pc	W  Back panel side rail of trundle - 1pc	X  Trundle Slats - 5pcs
X1  Trundle Slats - 2pcs		

Part List


WF304950

C  Upper horizontal bar HB/FB - 2pcs	D  Lower horizontal bar HB/FB - 4pcs	G  Upper (Left Front) - 1pc
G1  Upper (Left Back) - 1pc	H  Upper (Right Front) - 1pc	H1  Upper (Right Back) - 1pc
J  Block - 2pcs	K  Slats - 6pcs	K1  Slats - 4pcs
O  Divider panel - 2pcs	P  Shelf panel - 2pcs	Q  Side panel (Left) - 1pc
Q1  Side panel (Right) - 1pc		

Hardware List WF304949


1  Ø8*30mm Wood dowel (12pcs)	2  (Ø15)1/4"*100mm Hex-Head bolts (8pcs)	3  (Ø15)1/4"*80mm Hex-Head bolts (14pcs)
4  (Ø12)1/4"*60mm Hex-Head bolts (42pcs)	5  1/4"*15 (9.5mm) Horizontal-Hole bolts(64pcs)	6  (Ø12)1/4"*65mm Hex-Head bolts (8pcs)
7  (1/4")4.5*58mm Allen key (1pc)	8  Ø4*30mm Wood screws (50pcs)	9  75*20*2 mm Metal bracket (2pcs)
10  100*63*20mm Wheels (4pcs)	11  Ø3.5*15mm Wood screws (80pcs)	12  70*35*19 mm Trundle stopper (2pcs)
13  40*18*18*2mm Metal bracket (6pcs)	14  95*95*18*3mm Metal bracket (2pcs)	

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

STEP 1:

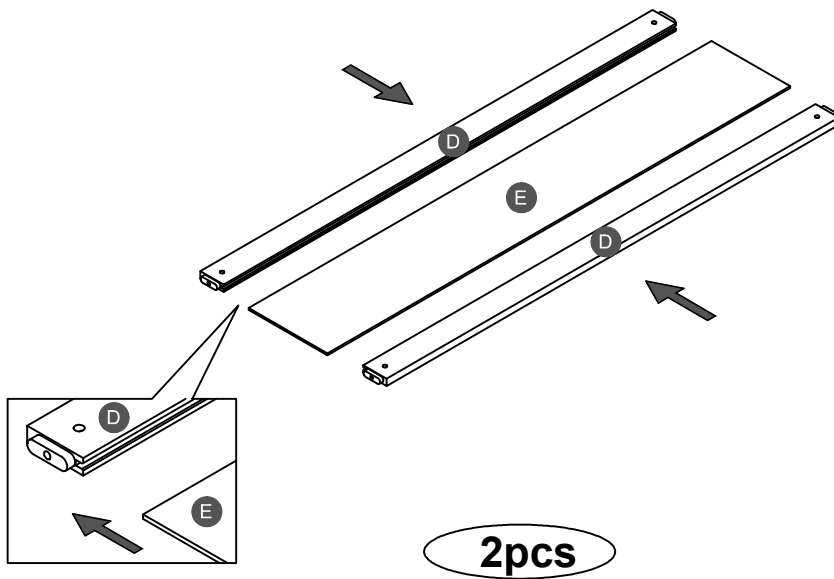


STEP 2:

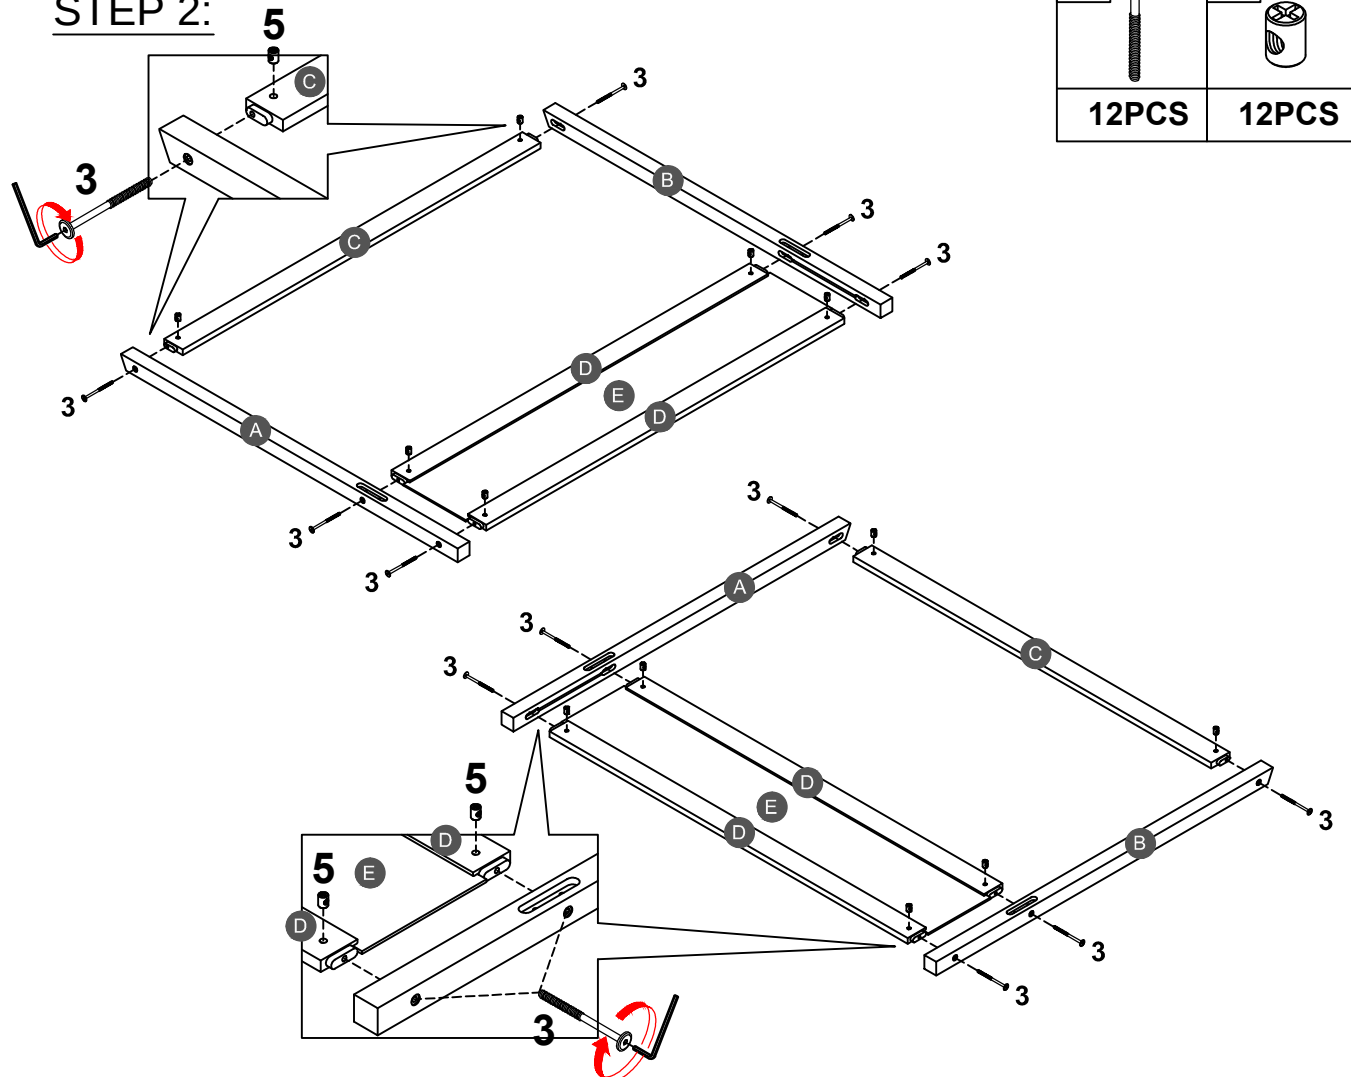

STEP 3:


8	12
	
4PCS	2PCS

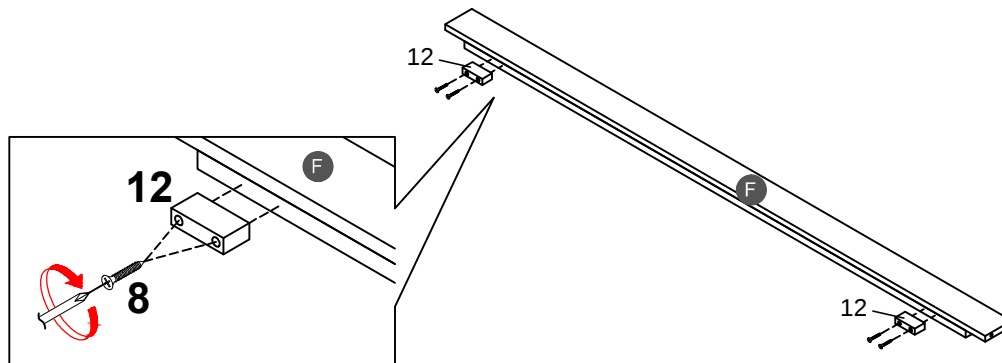


Drawer stopper (12) with lower side rail front (F) by using screw (8).

STEP 4:


2	5
	
8PCS	8PCS

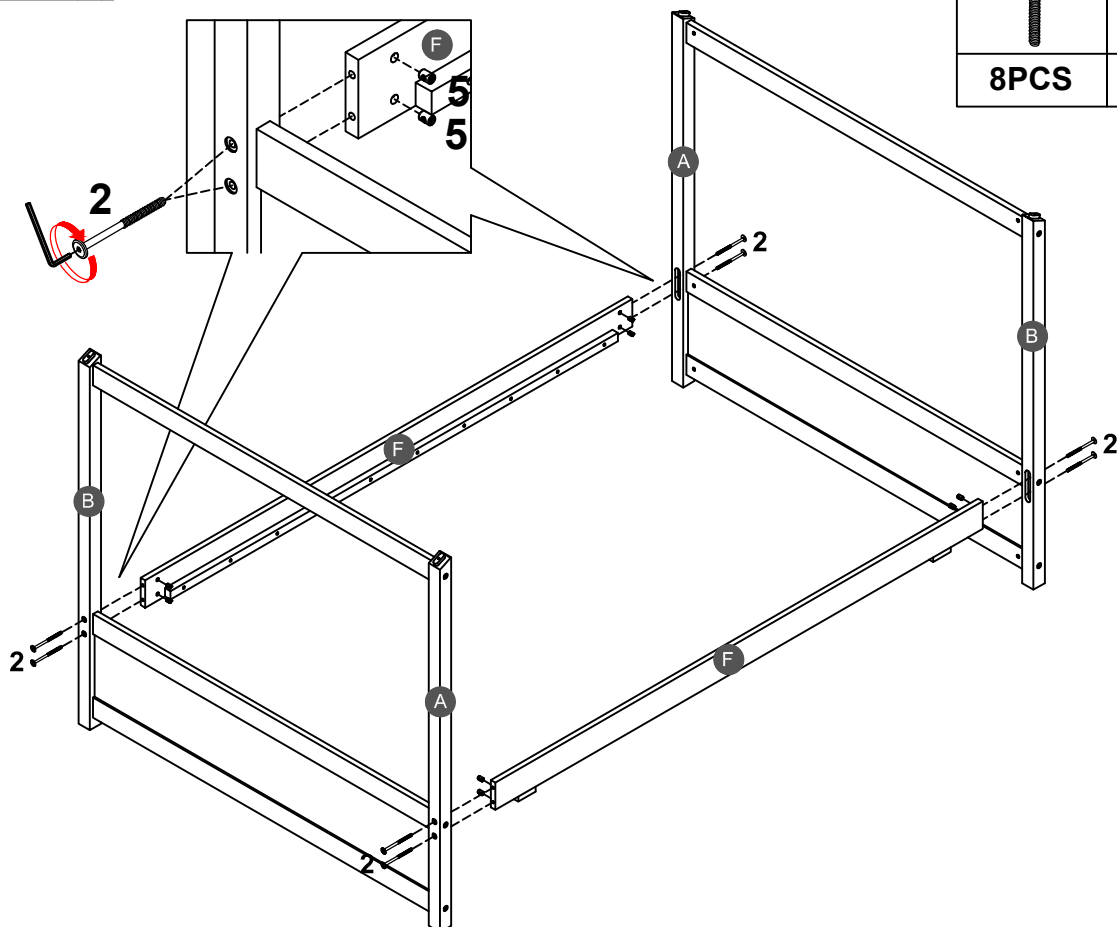


STEP 5:

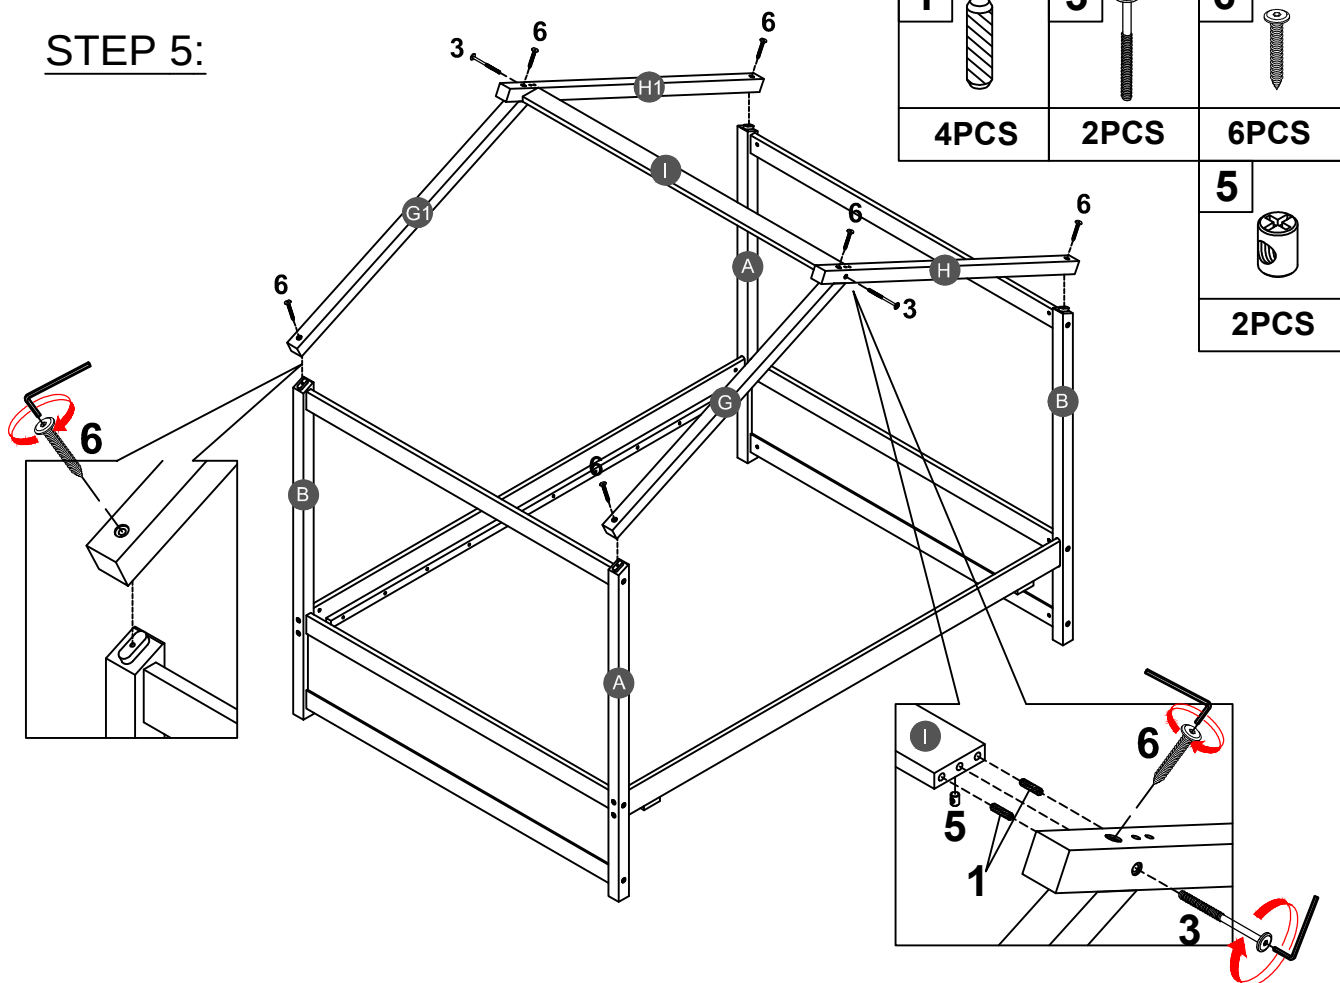

STEP 6:

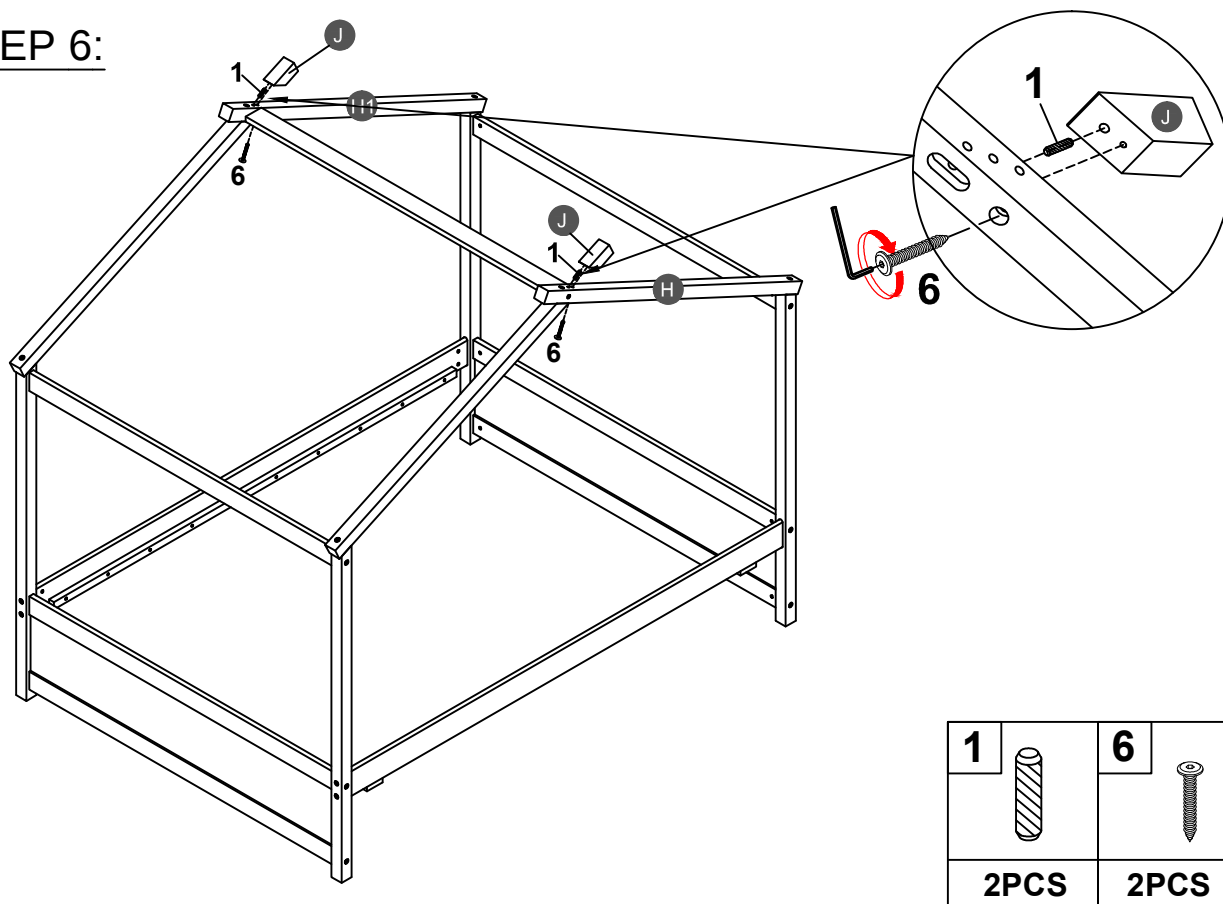


STEP 7:

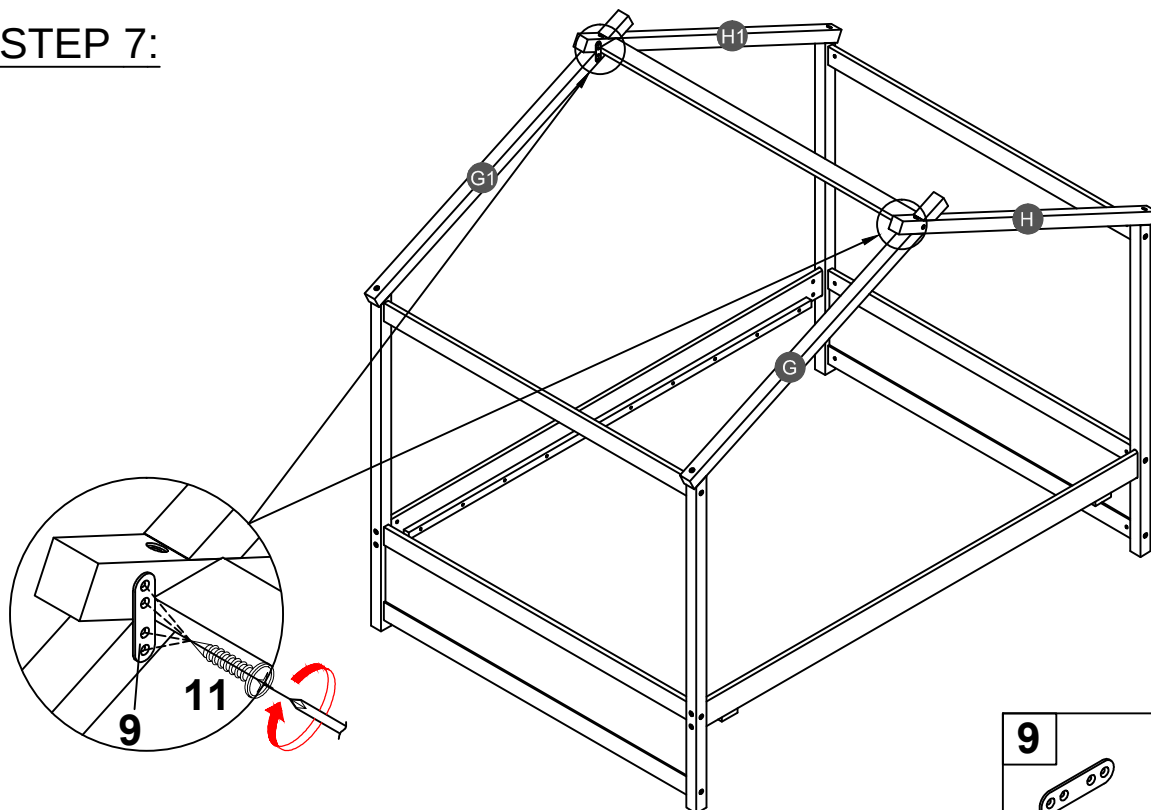

9		11	
2PCS		8PCS	


STEP 8:

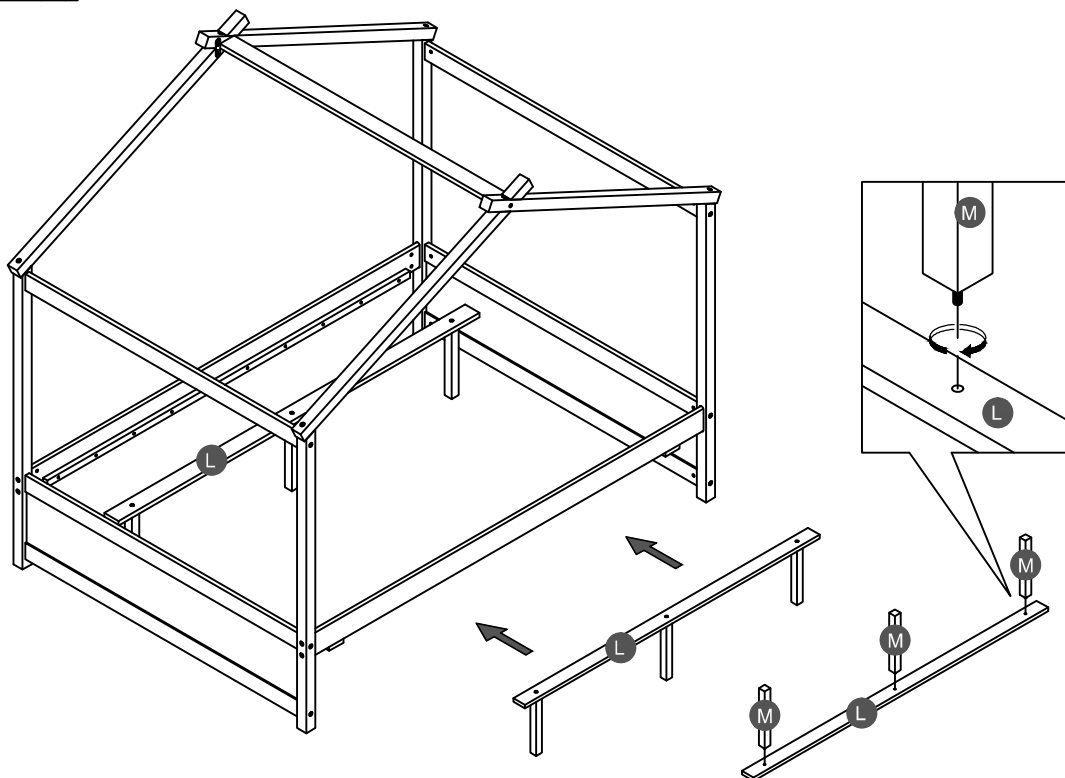

Assembling leg support (M) with lower support slat (L) later rotate, Move support slat inside Full bunkbed.

STEP 9:

24PCS

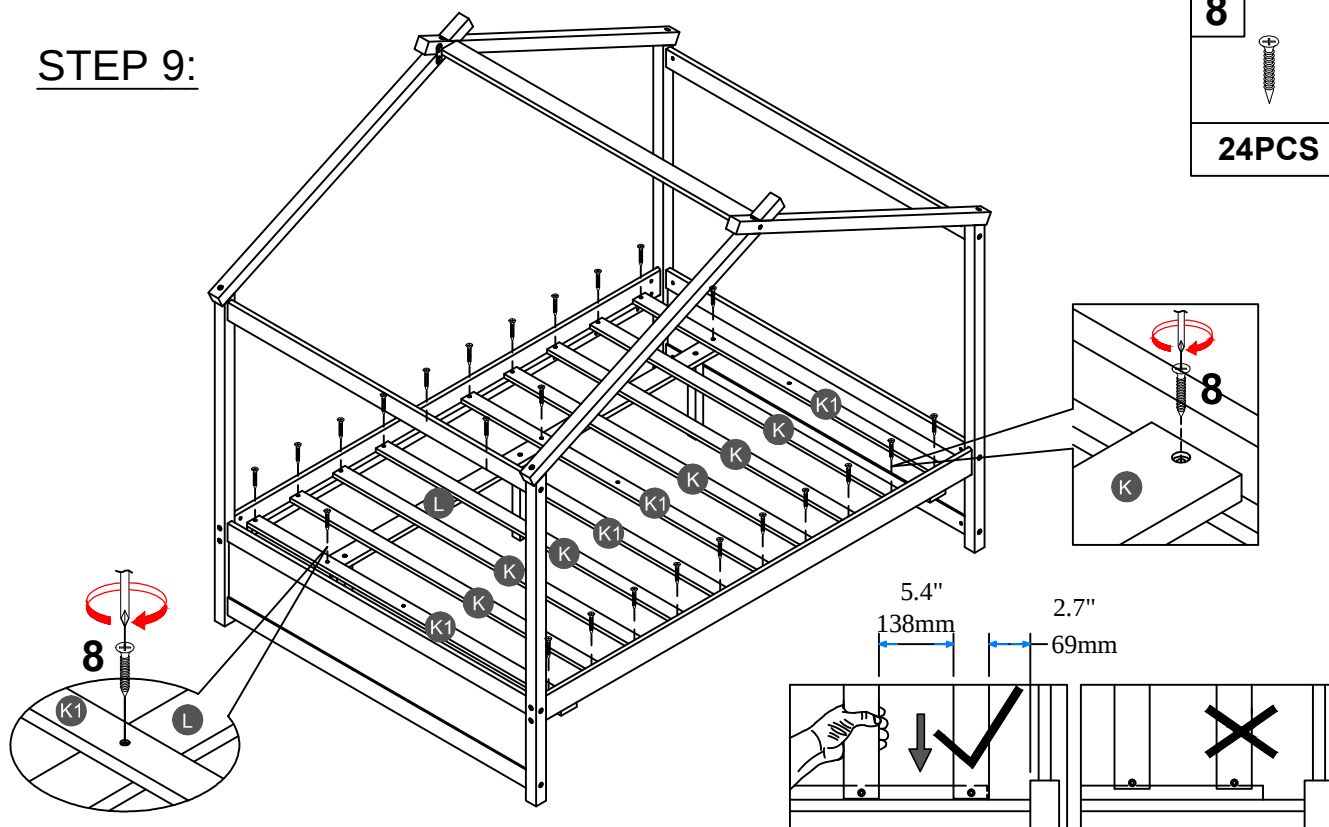

Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break. Do not lock the bed slats on the edge of the wood, please hold firmly before screwing , hold it in place with one hand, then lock the screw.


STEP 10:




8PCS



8PCS

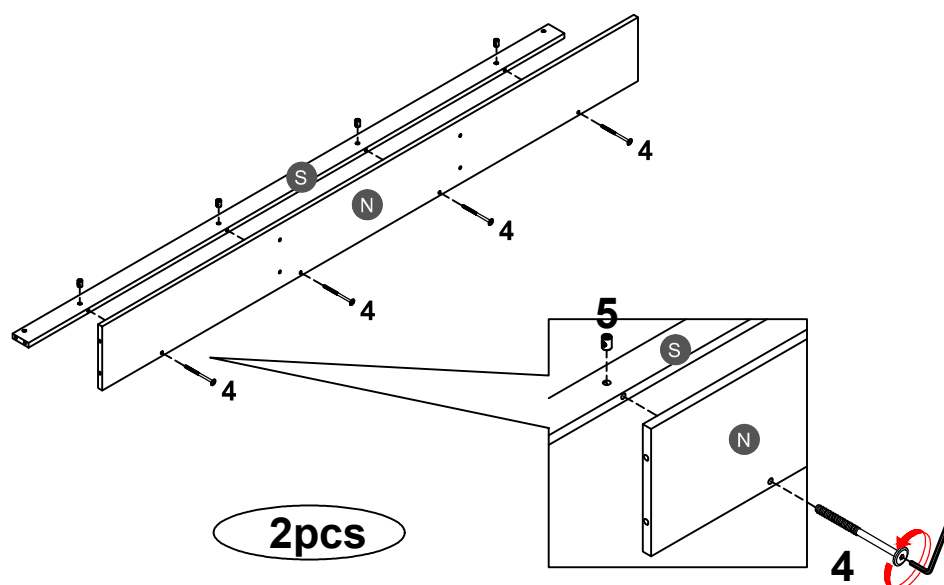


STEP 11:

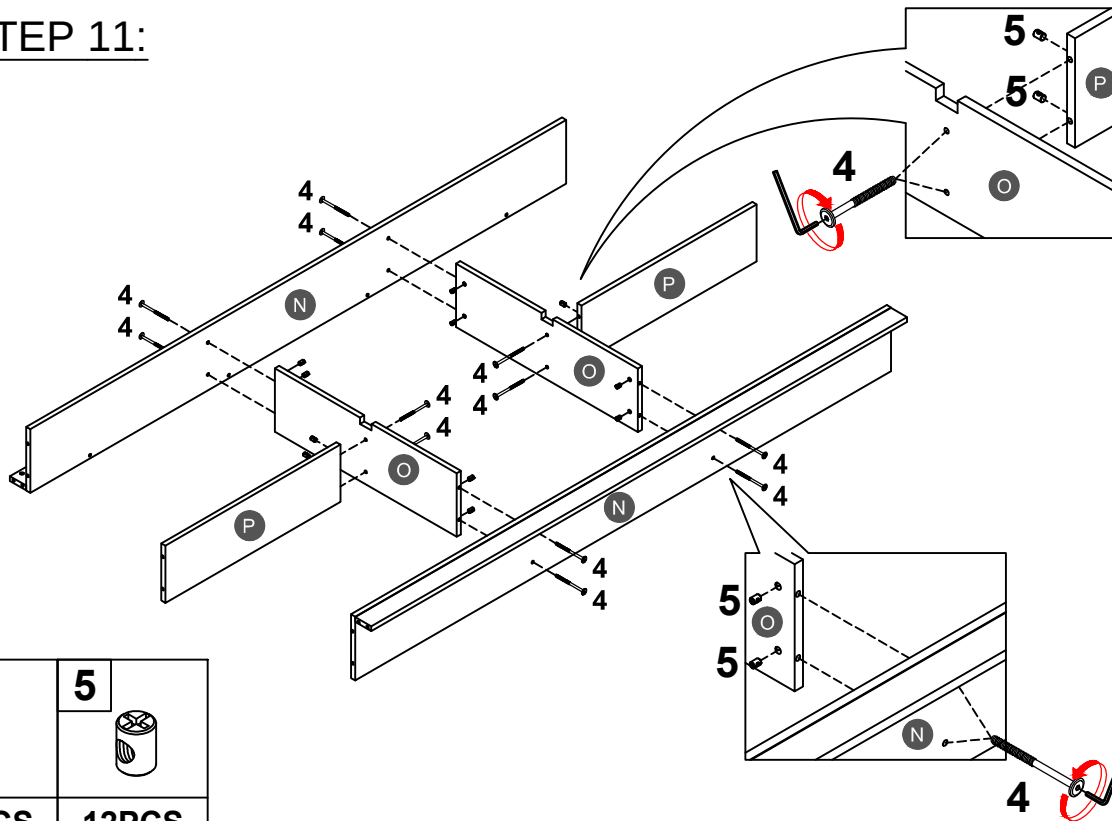

4		5	
12PCS		12PCS	

STEP 12:

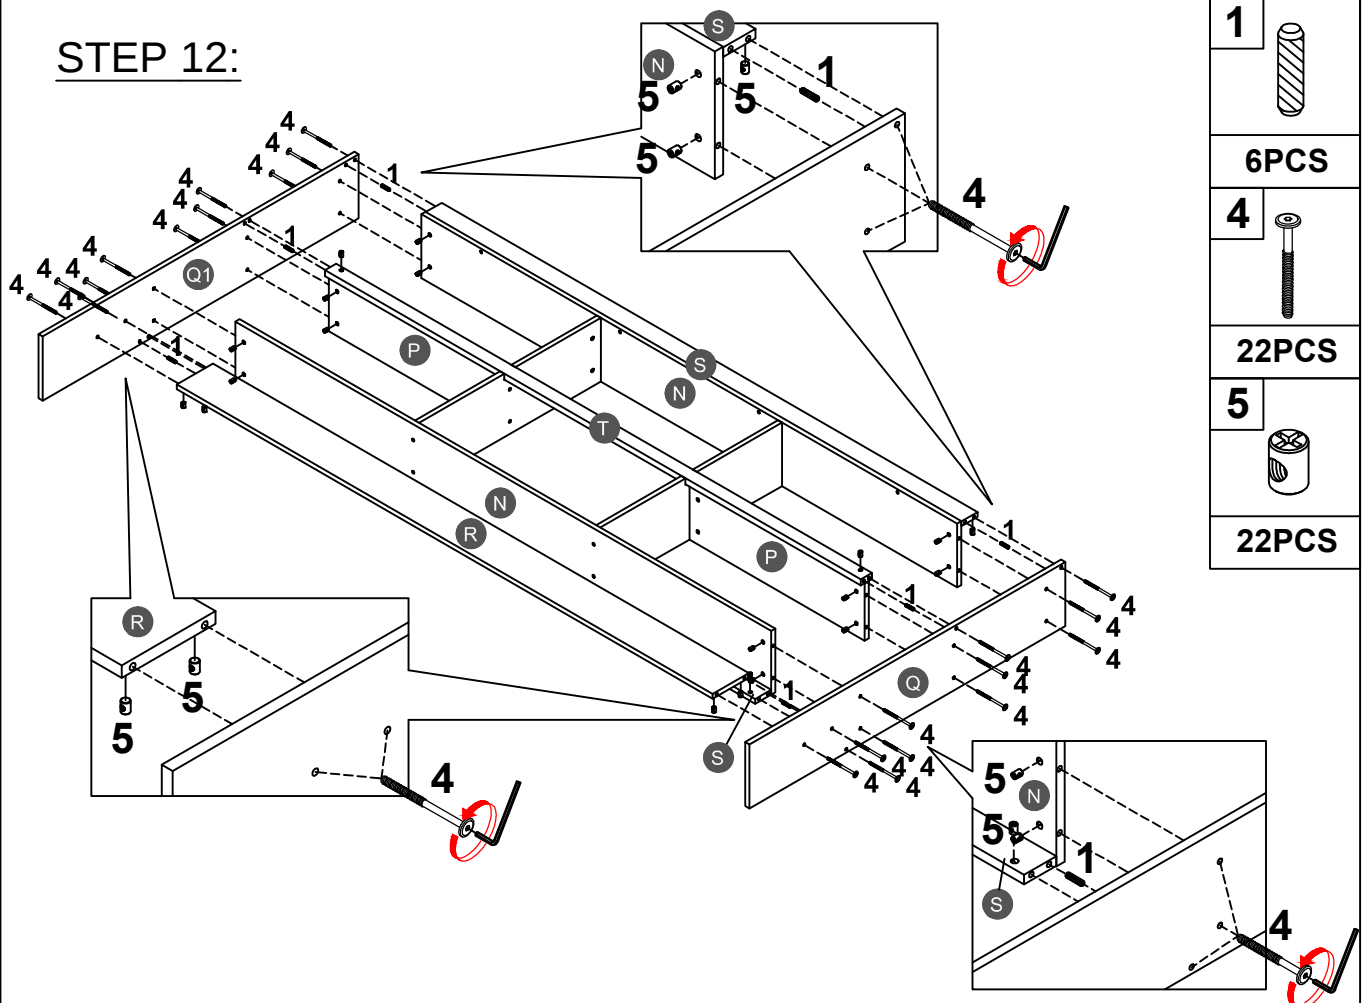


1		6PCS
4		22PCS
5		22PCS

STEP 13:


11




40PCS

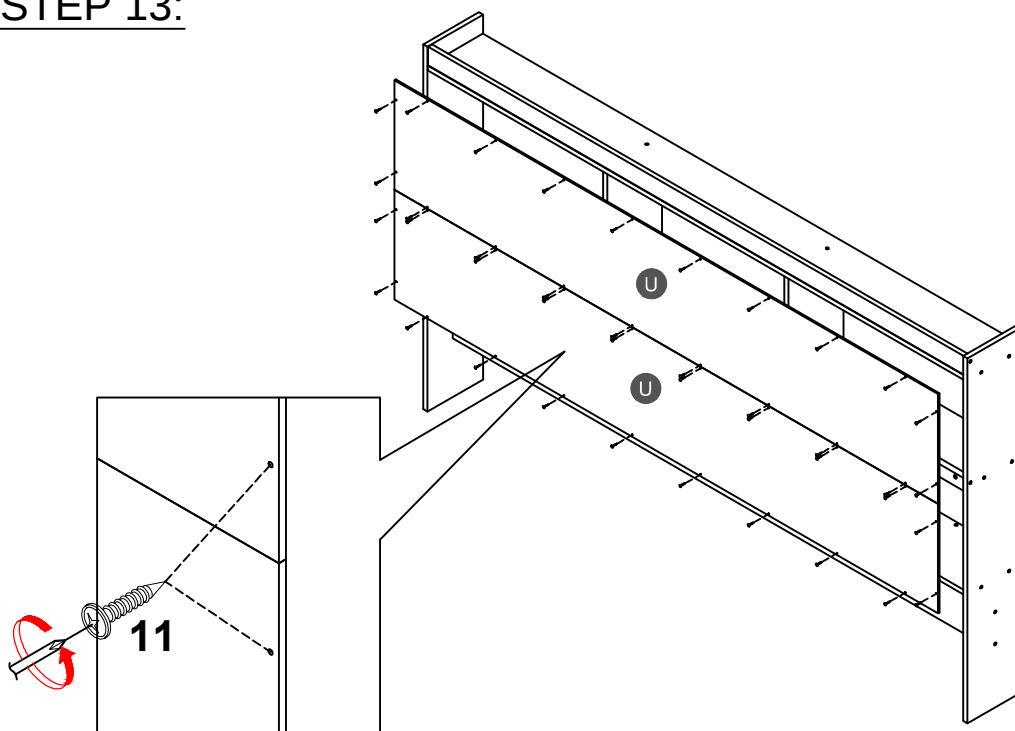

STEP 14:

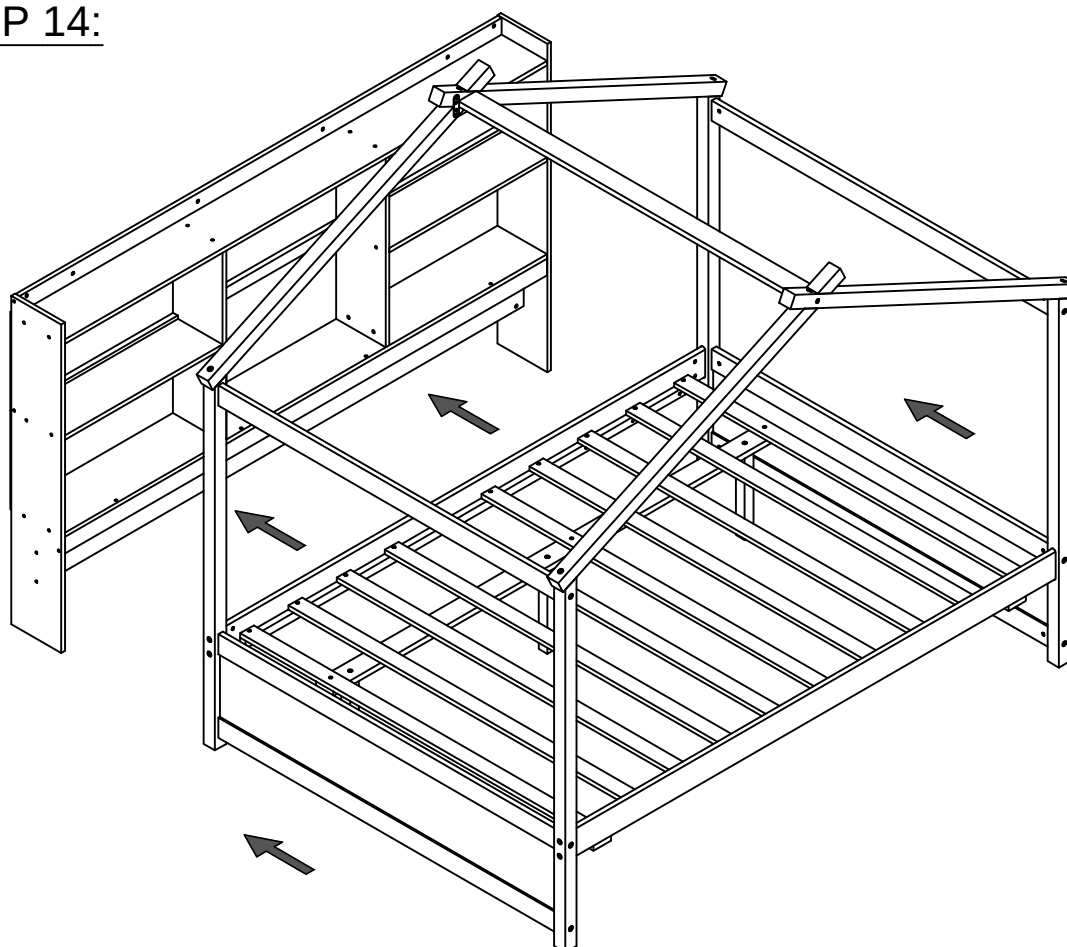

STEP 15:

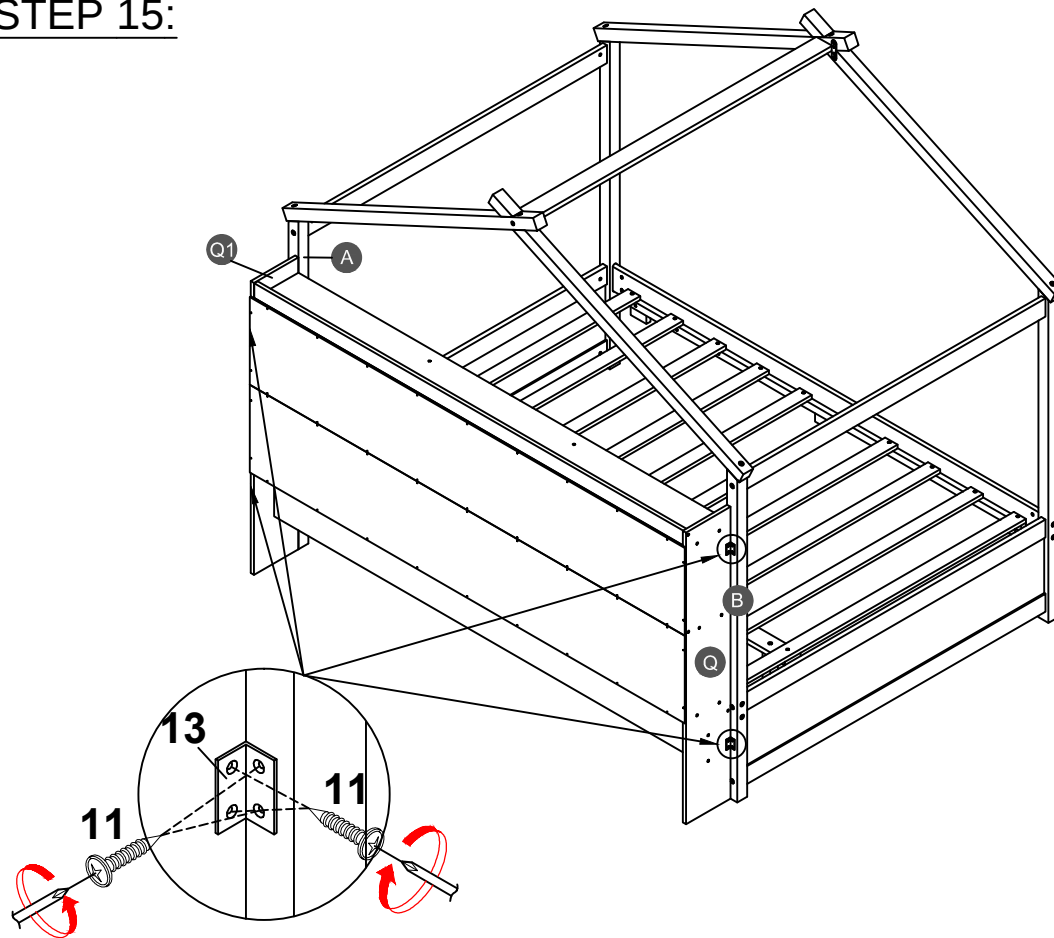

11




16PCS

13



4PCS

STEP 16:

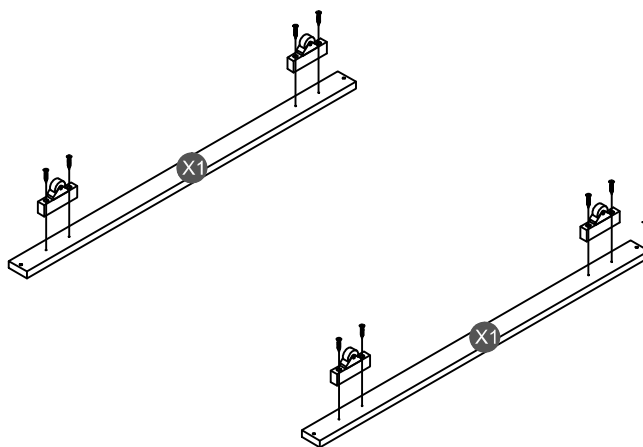

8




8PCS

10



4PCS

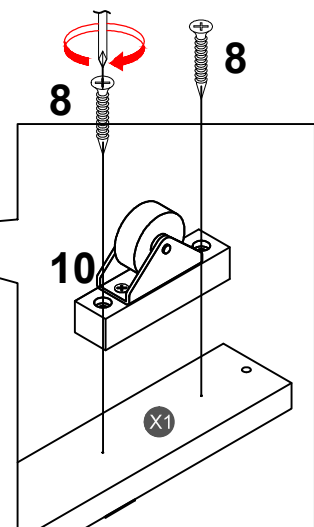


STEP 17:

8



14PCS

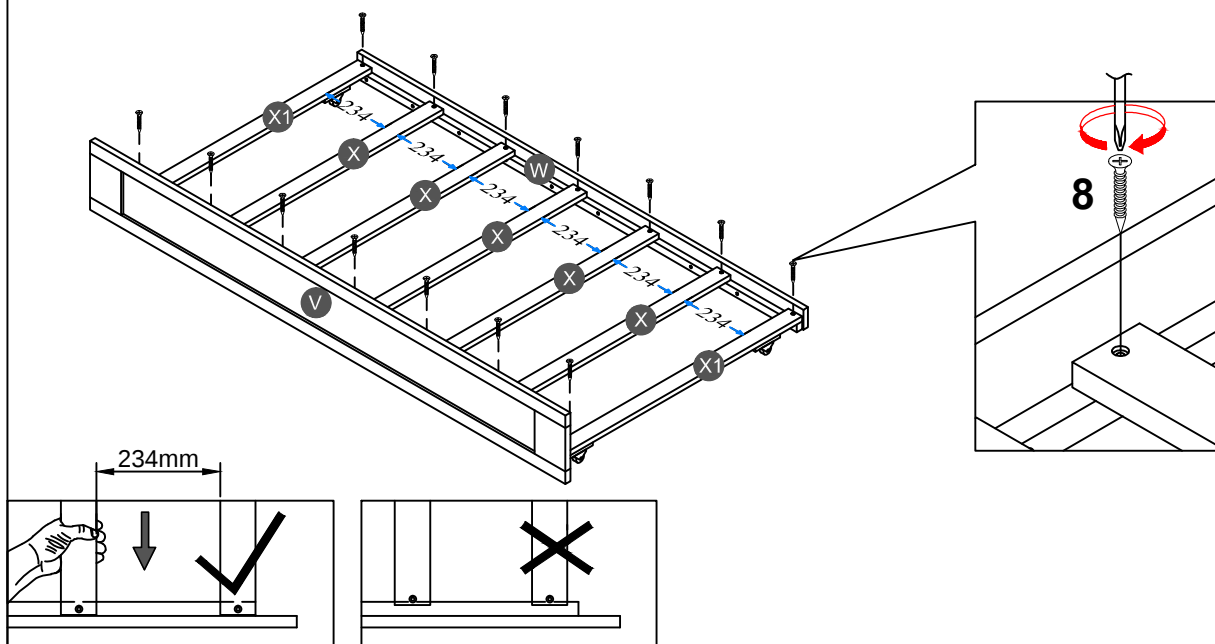

Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break.

Do not lock the bed slats on the edge of the wood, please hold firmly before screwing, hold it in place with one hand, then lock the screw.

STEP 18:

11




8PCS

14





2PCS

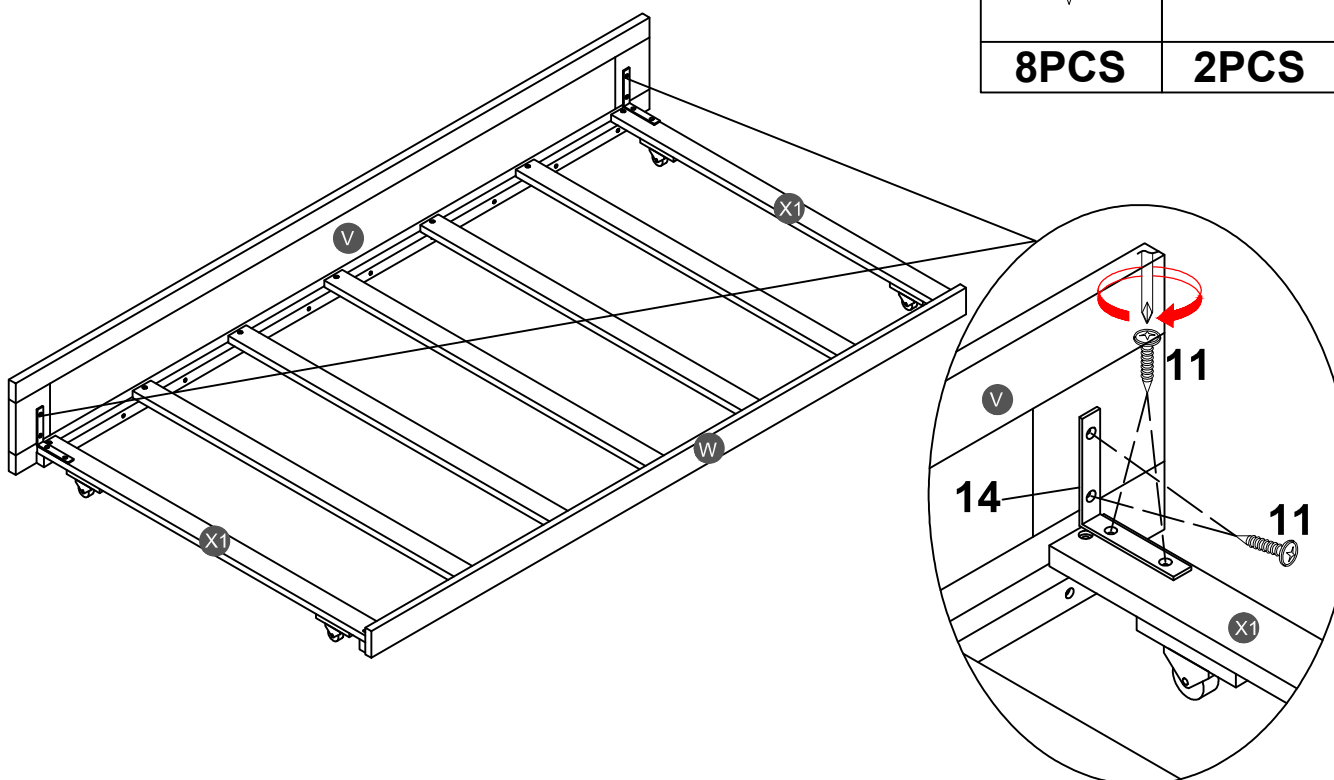


STEP 19:

11		13	
8PCS		2PCS	

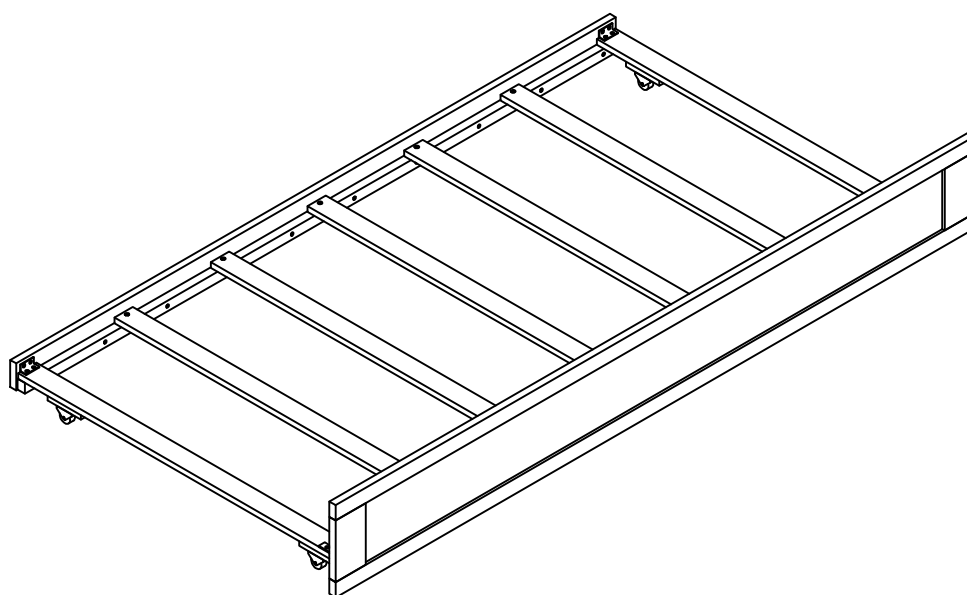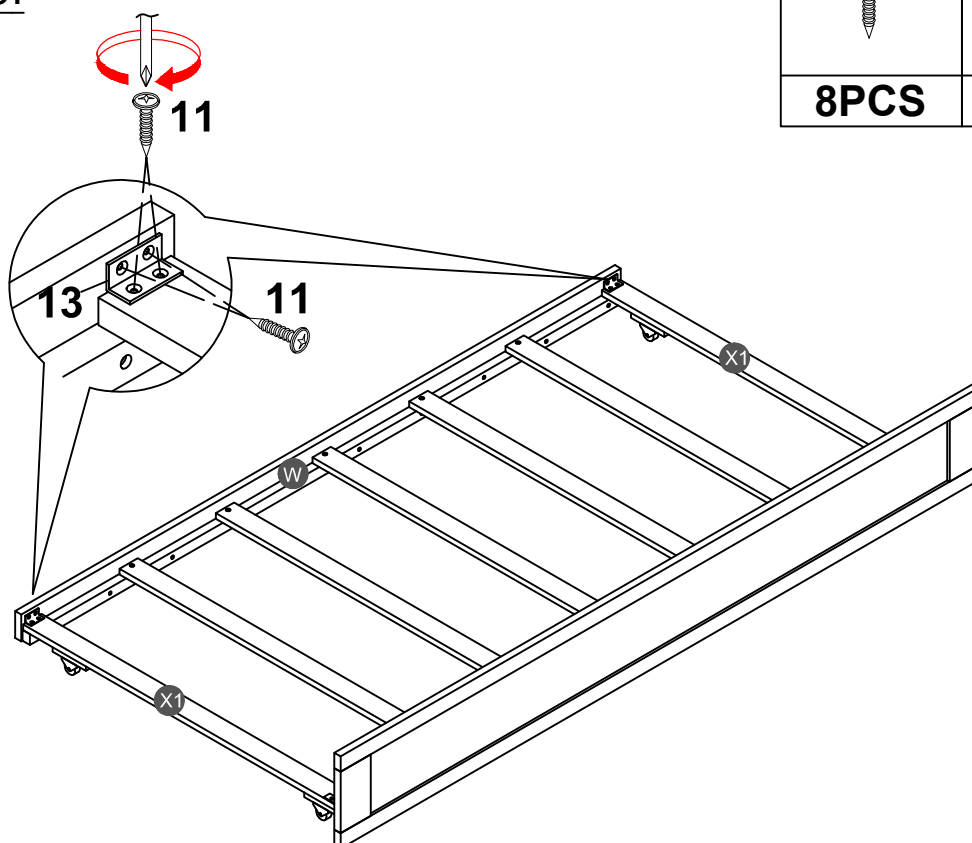

STEP 20:

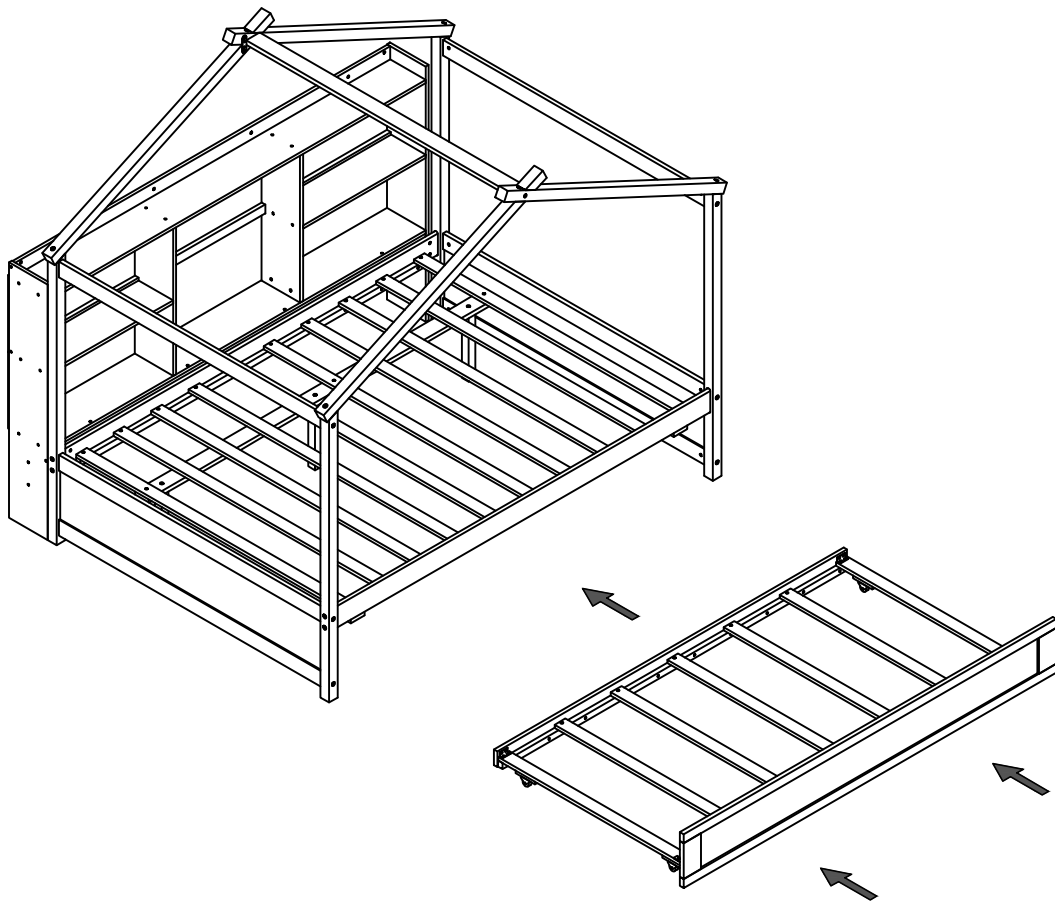

Push Trundle under the bottom of Bunkbed.

