



Parts List			
Label	Picture	Description	QTY
A		Chair Backrest	1
B1		Right Wing	1
B2	82	Left Wing	1
С		Chair Base	1
Hardware			
Label	Picture	Description	QTY
1)		Bolt(M6*30mm)	3
2	6	Flat Washer(M6)	3
3		Allen Key(M6)	1

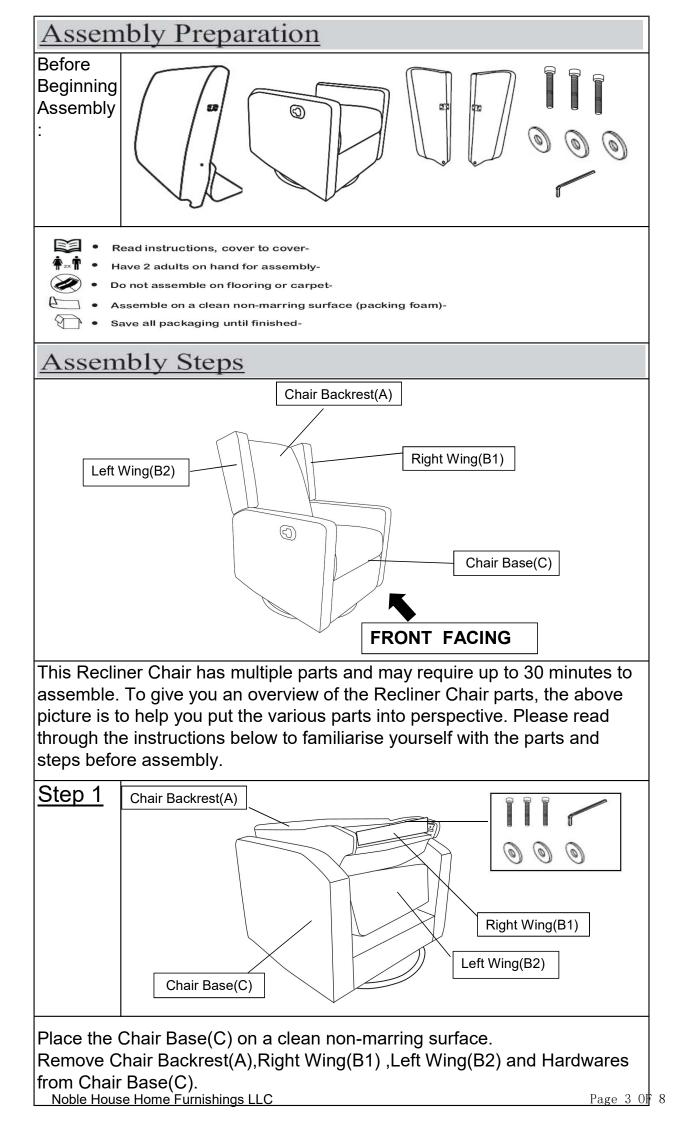


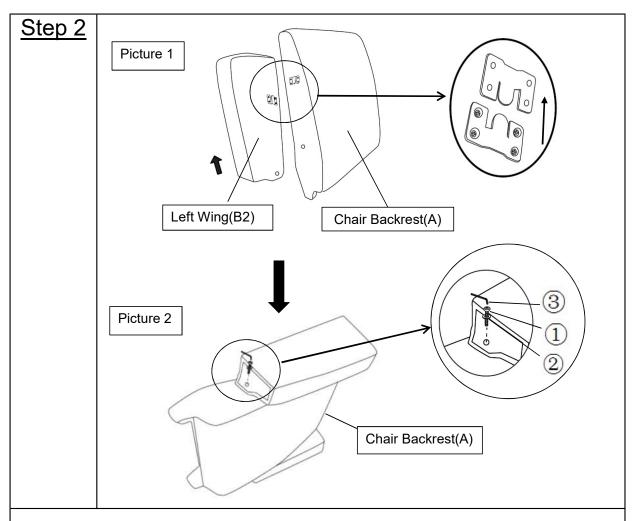

Align the mounting position of the Left Wing(B2) to the left side of Chair Backrest(A) .Then slide Left Wing(B2) forward by hand to make sure it locks into the position as shown in the picture 1.


Attach Left Wing(B2) to the Chair Backrest(A) using Bolt(1) and Flat Washer(2) with Allen Key(3). Fully tighten it until secure, as shown in the picture 2.

Repeat the same step to install the Right Wing(B1) to the Right side of Chair Backrest(A).

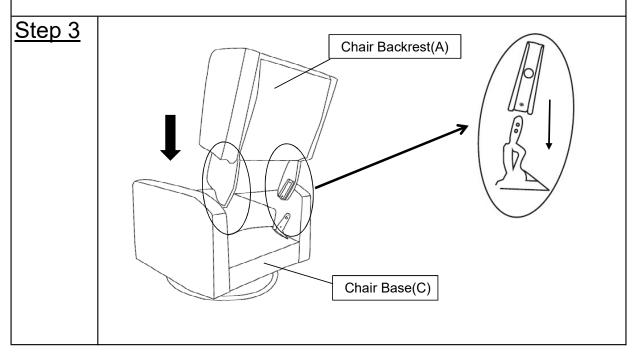


With assistance from your adult partner,hold up the fully assembled backrest with Wings,stand behind the chair.Insert the small Metal Arms on the sides of the Chair Backrest(A) into the prefabricated slide lock gadget on the Chair Base(C) as shown above.

Firmly but gently, push the Chair Backrest(A) downwards until the Backrest is fully slotted and locked into position.

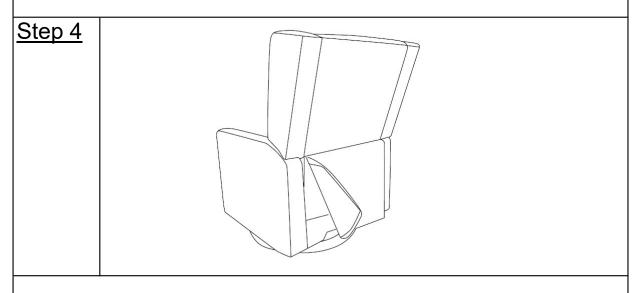

Smooth down the fabric flap on the Chair Backrest.

Run your hands down both sides of the flap, from top to bottom, allowing the velcro tape to adhere to the flap under the seat of the chair.

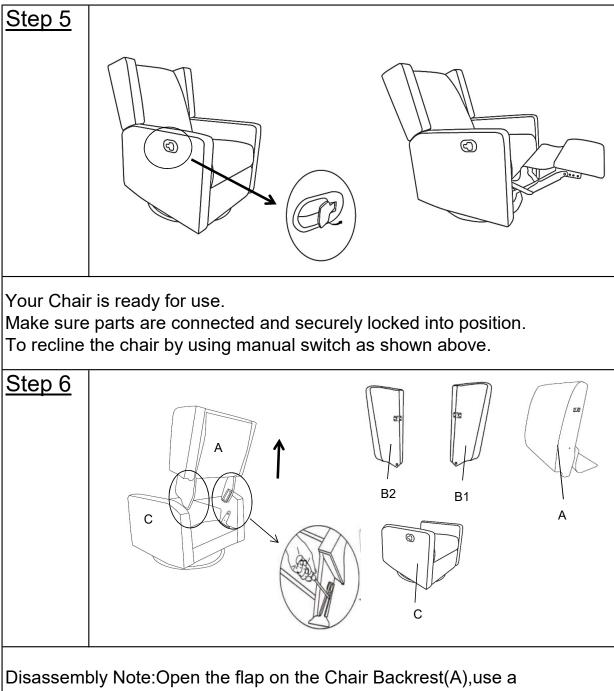

Disassembly Note:Open the flap on the Chair Backrest(A), use a screwdriver(Don't use fingers)pressing outward on the metal ear on the preattached Metal Bracket on one side of the Chair Base(C), with assistance of your adult partner to keep the Chair Base(C) in place, pull out the Chair Backrest(A) upward at the same time, repeat the same step for another side. Then the Chair Backrest(A) can be taken out.

