


TIPS:


- 1, In order to facilitate the assembly, the screw holes related to the product structure have an adjustable range.
- 2, When assembling, please align the screws on the armrest and the beam and install them to 50% first.
- 3, After all the screws are installed, then tighten them all to 100%.
(The screws connecting the seat and the backrest can be directly screwed to 100%)

(A)x1 Seat

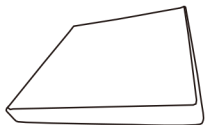


(F)x8 Screw

M8x6mm



(B)x1 Backrest

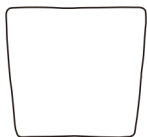


(G)x2 Washer




(H)x2 Screw

M8x4.5mm



(C)x1L/1R Armrest

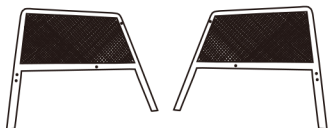

(D)x1 Beam



(I)x1 Screwdriver




(J)x1 Waist



(E)x4 Built-in nut




(K)x4 Felt

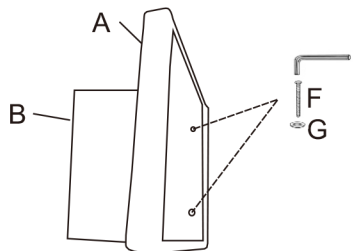


①

Please assemble on a clean floor to avoid soiling the chair.
Please put the backrest on the floor.
Then lift off the black cloth at the bottom of the seat and find 2 screw holes, installed the 2 screws directly to 100%

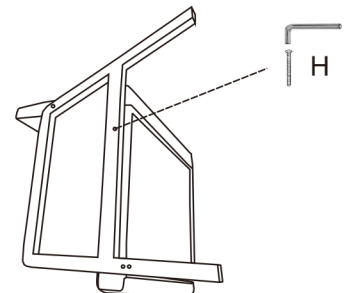


②

Please put the chair on its side, then put the armrest on it to install, please install the screws to 50%

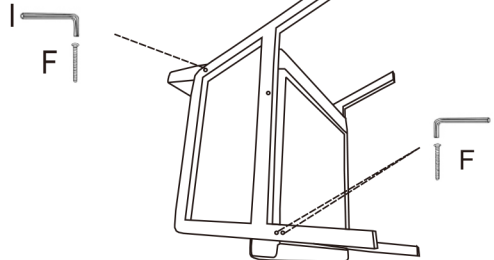


③

Please install the screws of right armrest, After all the screws are installed correctly, you can tighten them to 100%

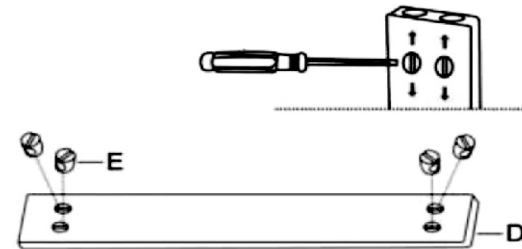


④

Please keep the hole position of the built-in nut correct, it can be adjusted with the slotted screwdriver

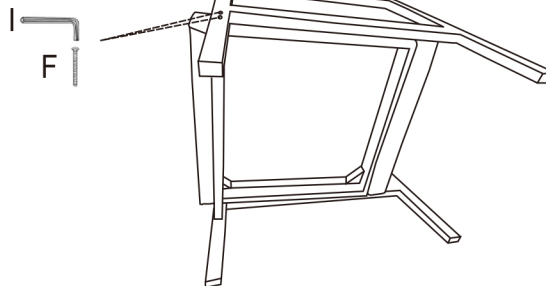

⑤

The side of the beam with no holes faces outward, Please install the screws to 50%, reserve adjustment space

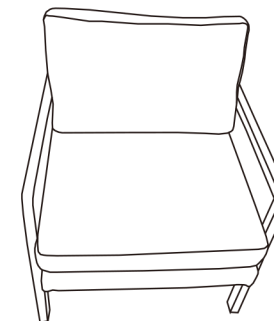

⑥

Please paste the anti-slip felt strip to the bottom of the armrest, successfully installed! Please enjoy your leisure time now!