




INSTALLATION MANUAL

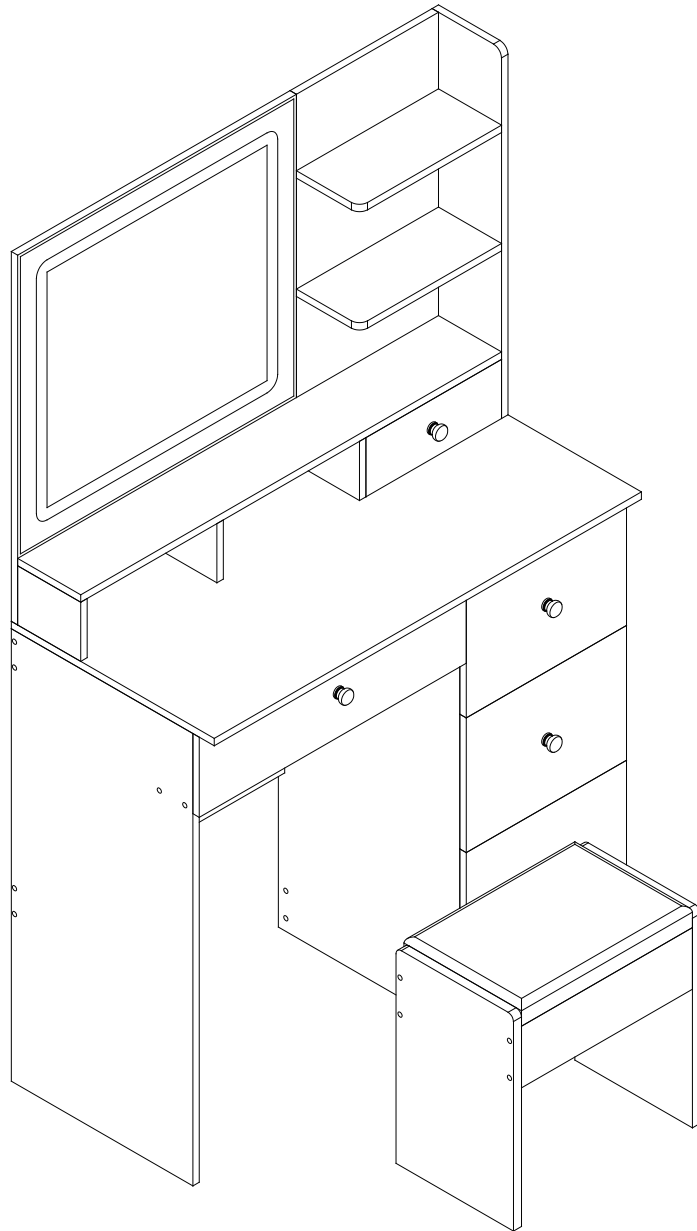

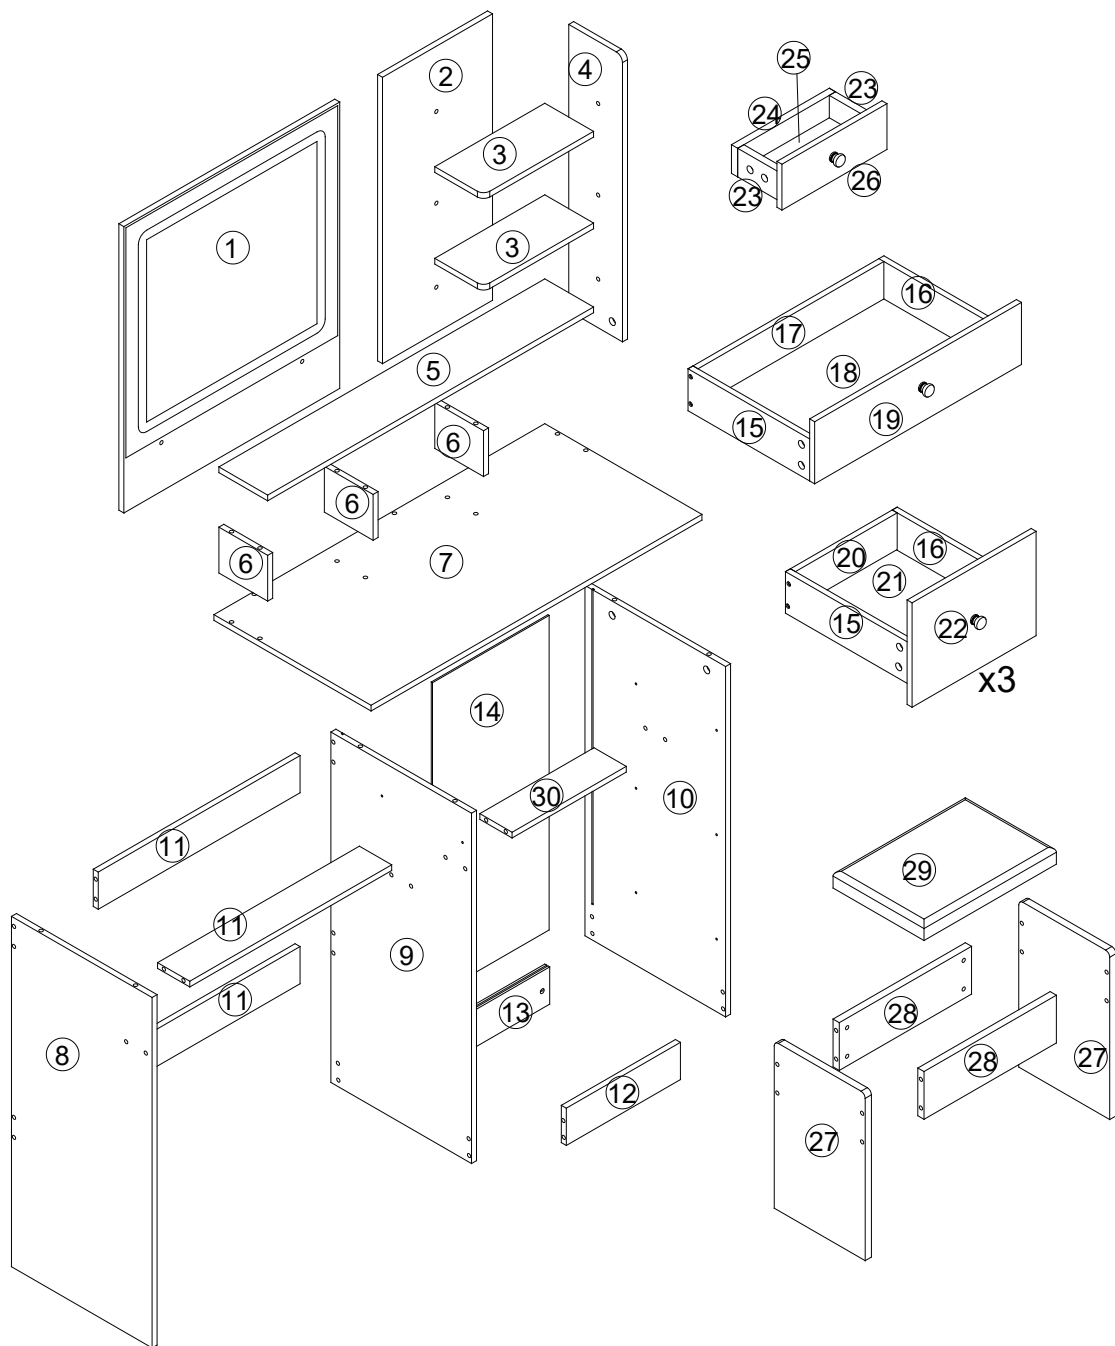

1 - x1	6 - x3	11 - x3	16 - x4	21 - x3	26 - x1
2 - x1	7 - x1	12 - x1	17 - x1	22 - x3	27 - x2
3 - x2	8 - x1	13 - x1	18 - x1	23 - x2	28 - x2
4 - x1	9 - x1	14 - x1	19 - x1	24 - x1	29 - x1
5 - x1	10 - x1	15 - x4	20 - x3	25 - x1	30 - x1

HARDWARE




A	SCREW & PLASTIC LOCK	x42
---	----------------------	-----




B	SCREW & METAL LOCK	x42
---	--------------------	-----



C	SCREW	x44
---	-------	-----



D	METAL PLATE	x8
---	-------------	----




E		x1
---	--	----




F	SHAKE HANDS	x5
---	-------------	----



G	SCREW	x5
---	-------	----



H	SCREW	x16
---	-------	-----



J	SCREW	x40
---	-------	-----




K	SCREW	x40
---	-------	-----



L		x2
---	--	----


1. Screw installation method

When the screw is installed, please keep it in line with the board, and do not tighten it too tightly

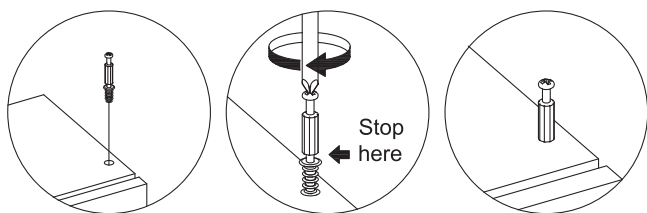


2. Check the Nut direction









This direction of the marked nut is consistent with the direction in which the screw is inserted

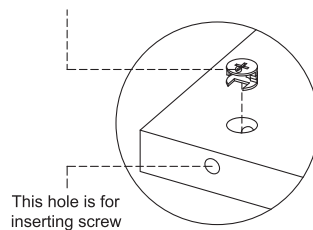


3. Installation on the board with fixing screws

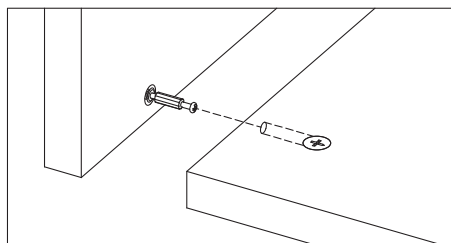


3. Rotate slowly until it stops

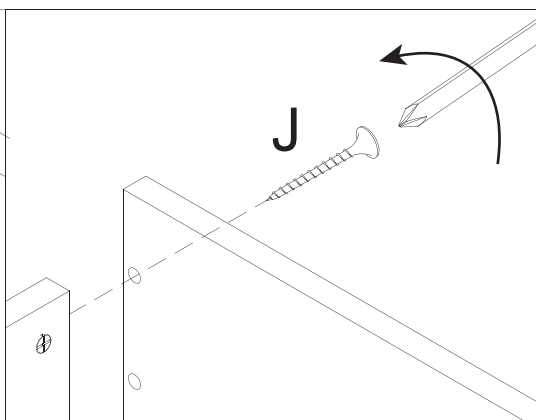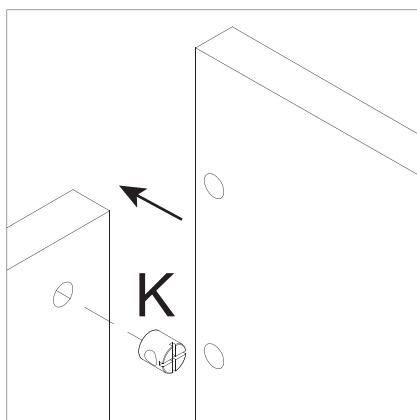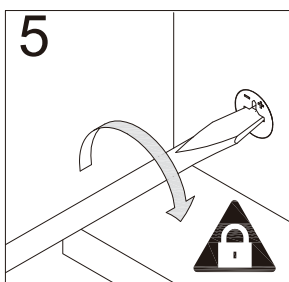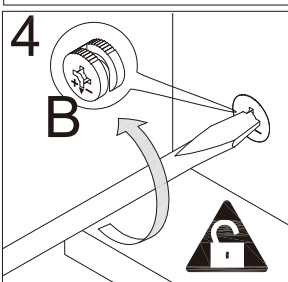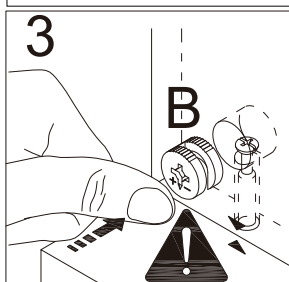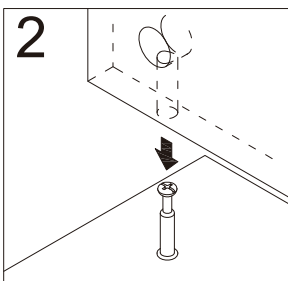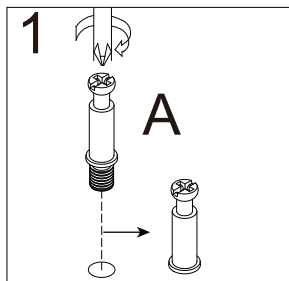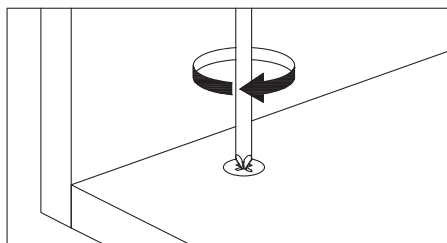


Step 01

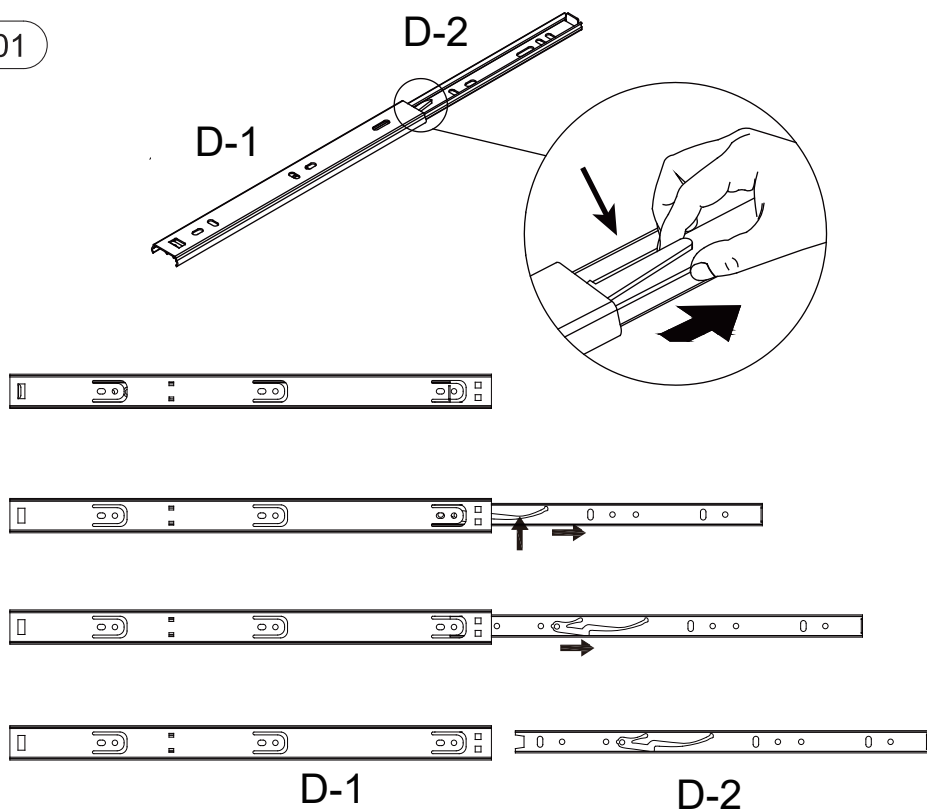


Step 02

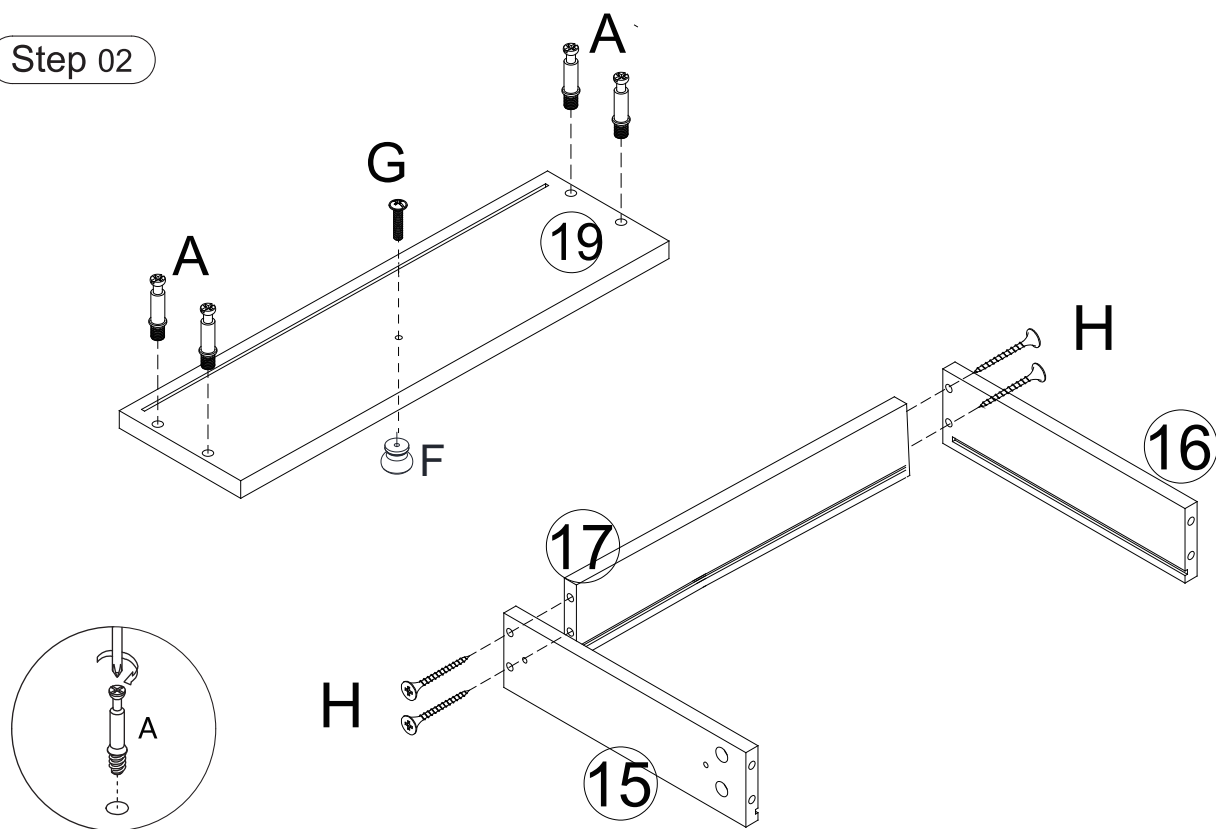

Step 03

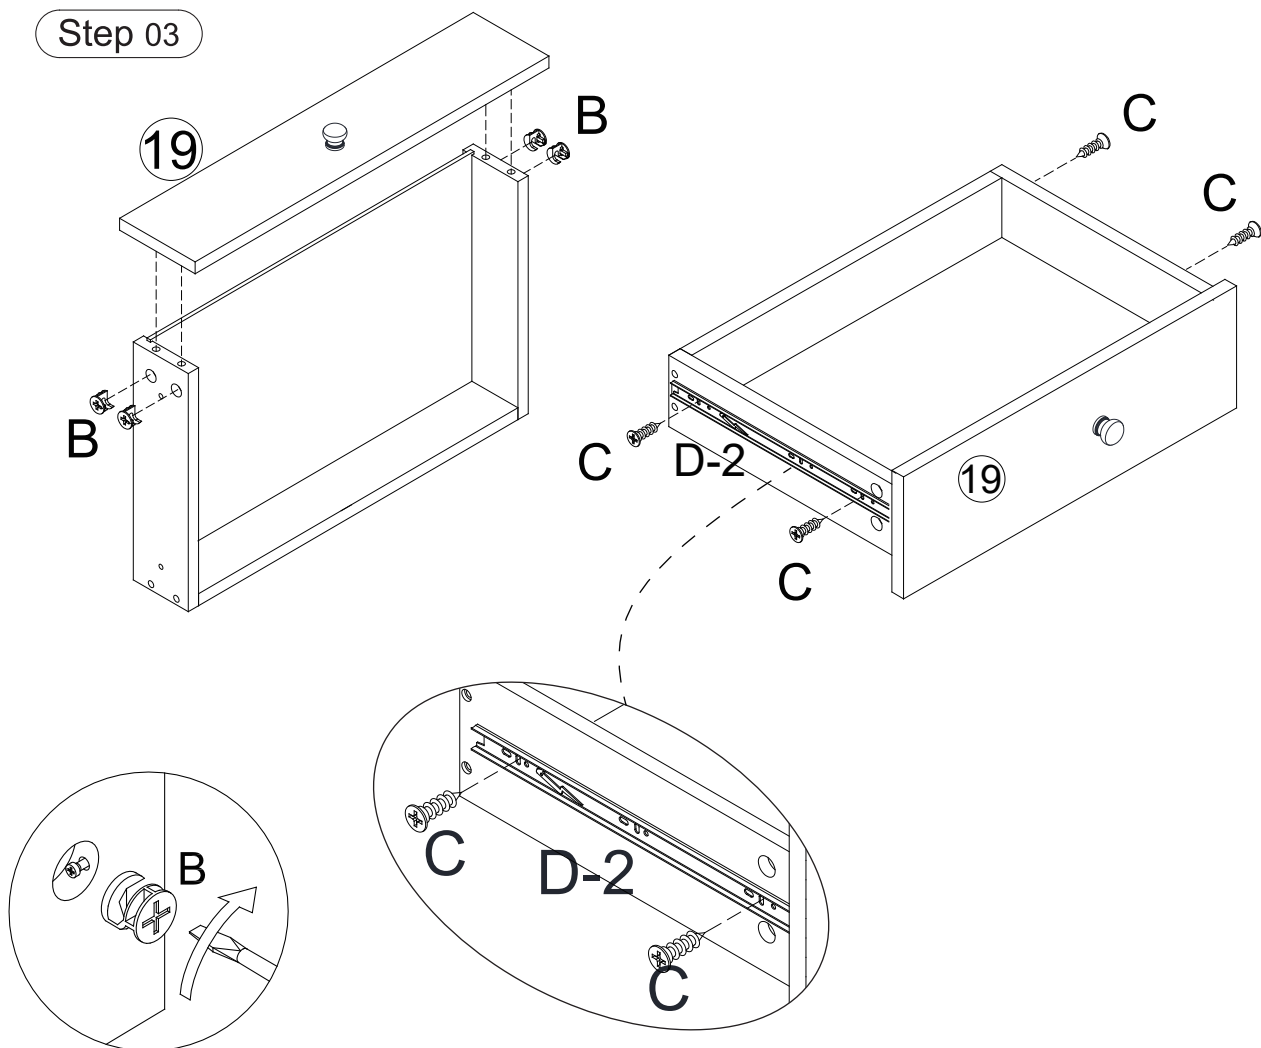


Step 04

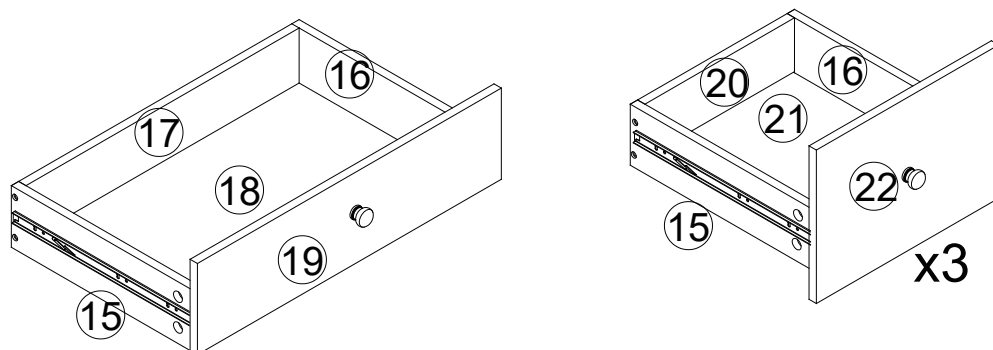


The Four drawers are installed in the same way


Step 05

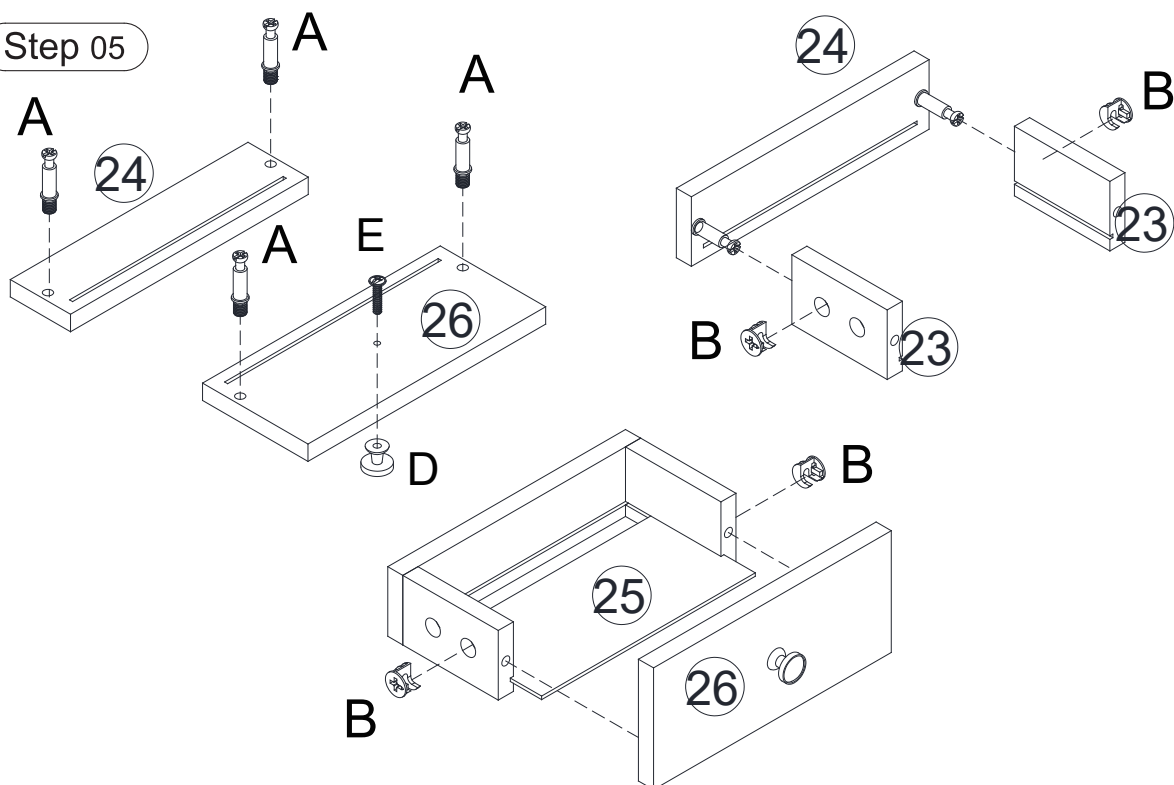


Step 06

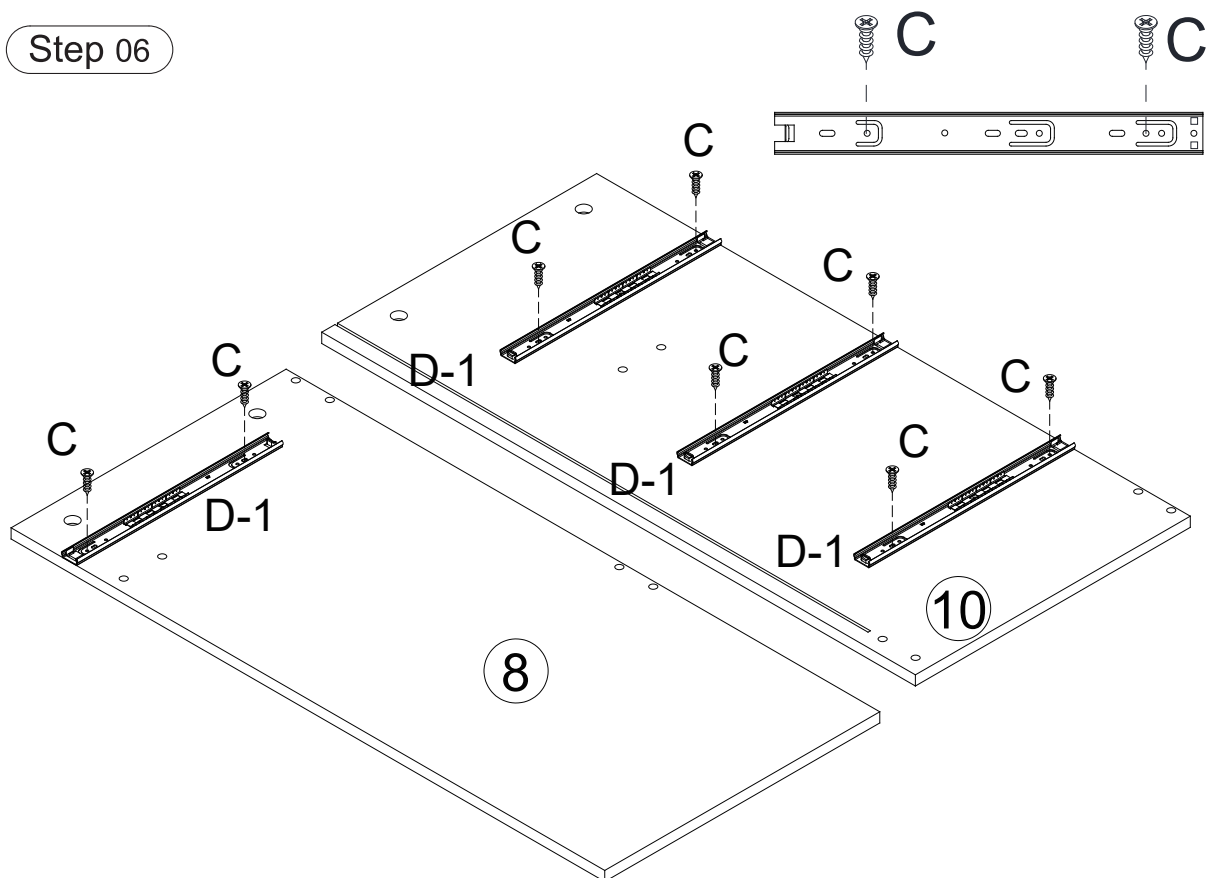


Step 07

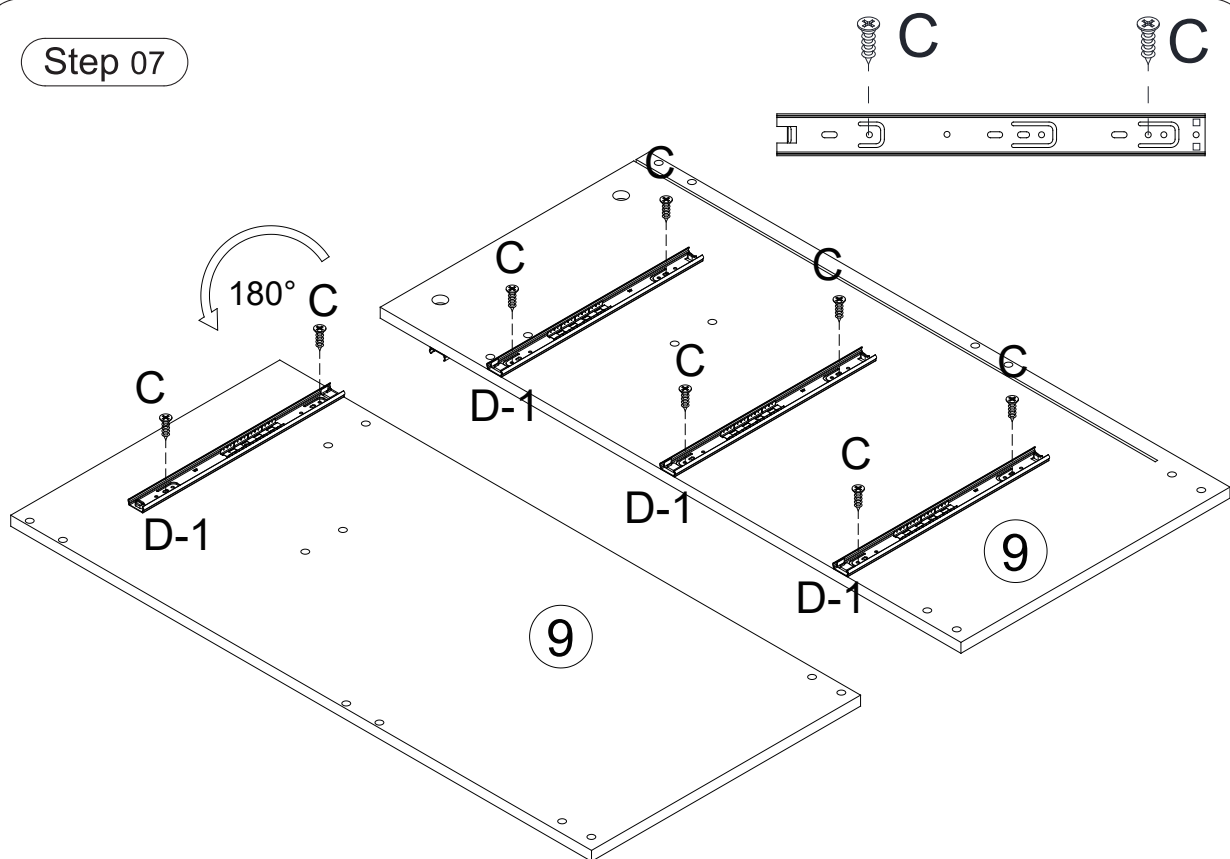


Step 08

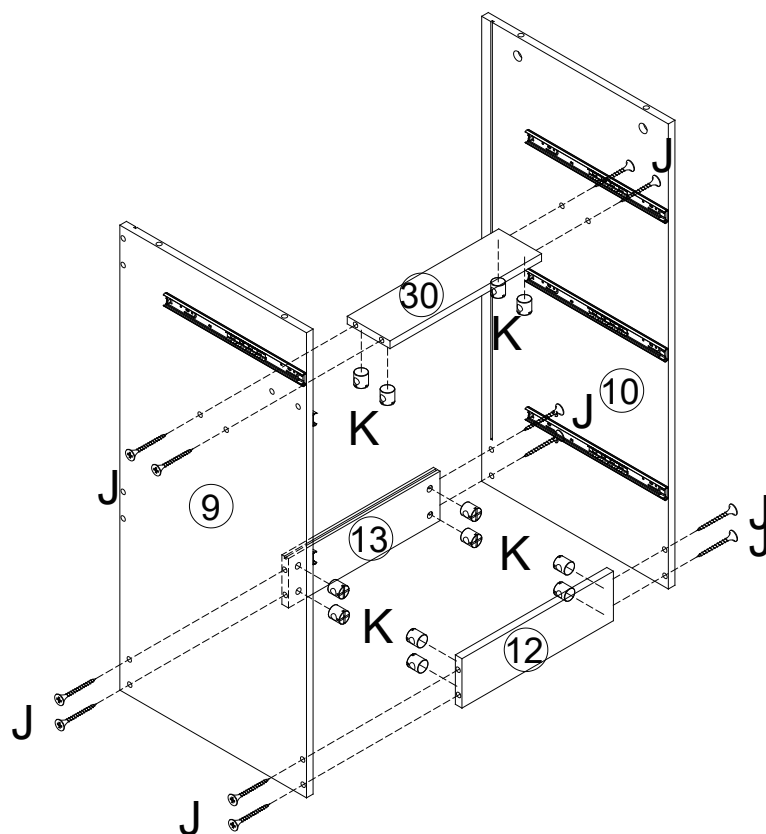


Step 09

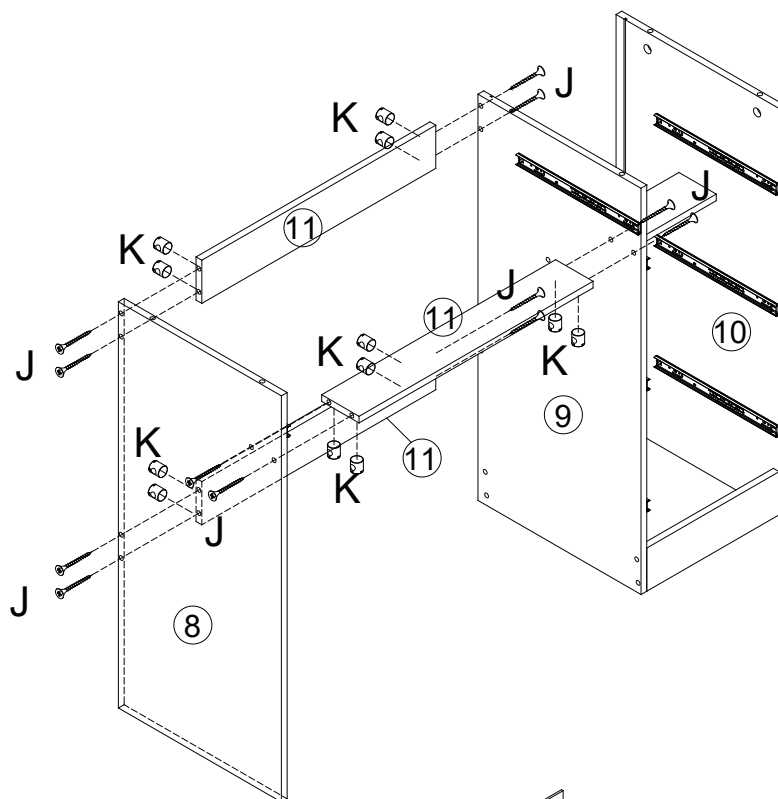


Step 10

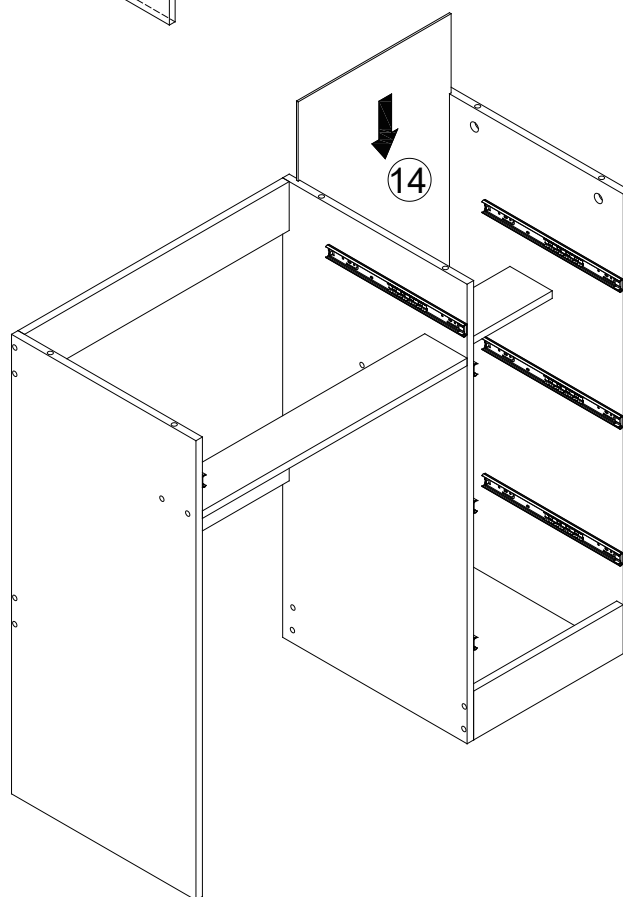


Step 11

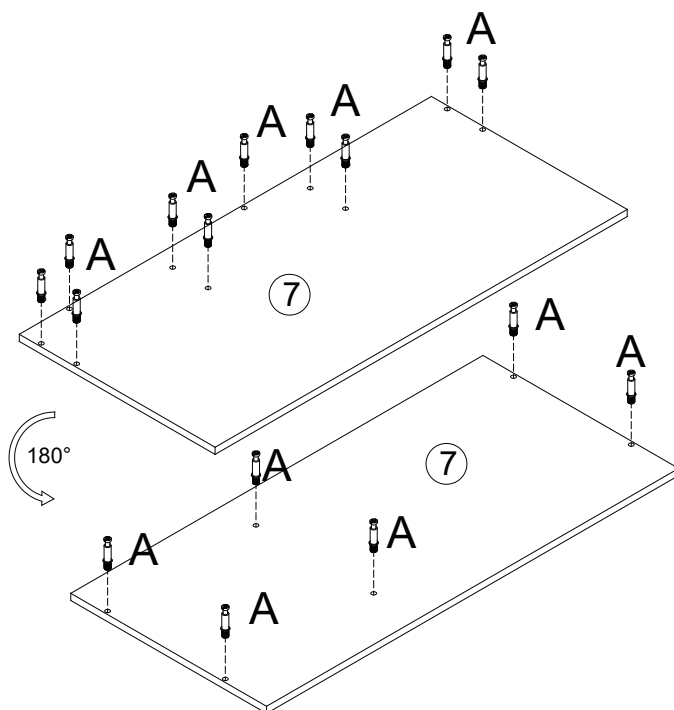


Step 12

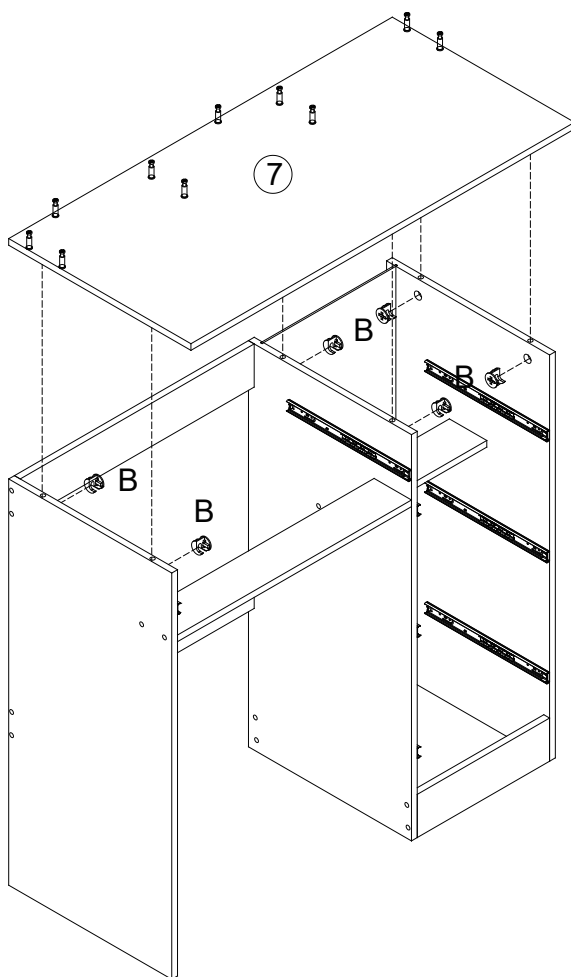


Step 13

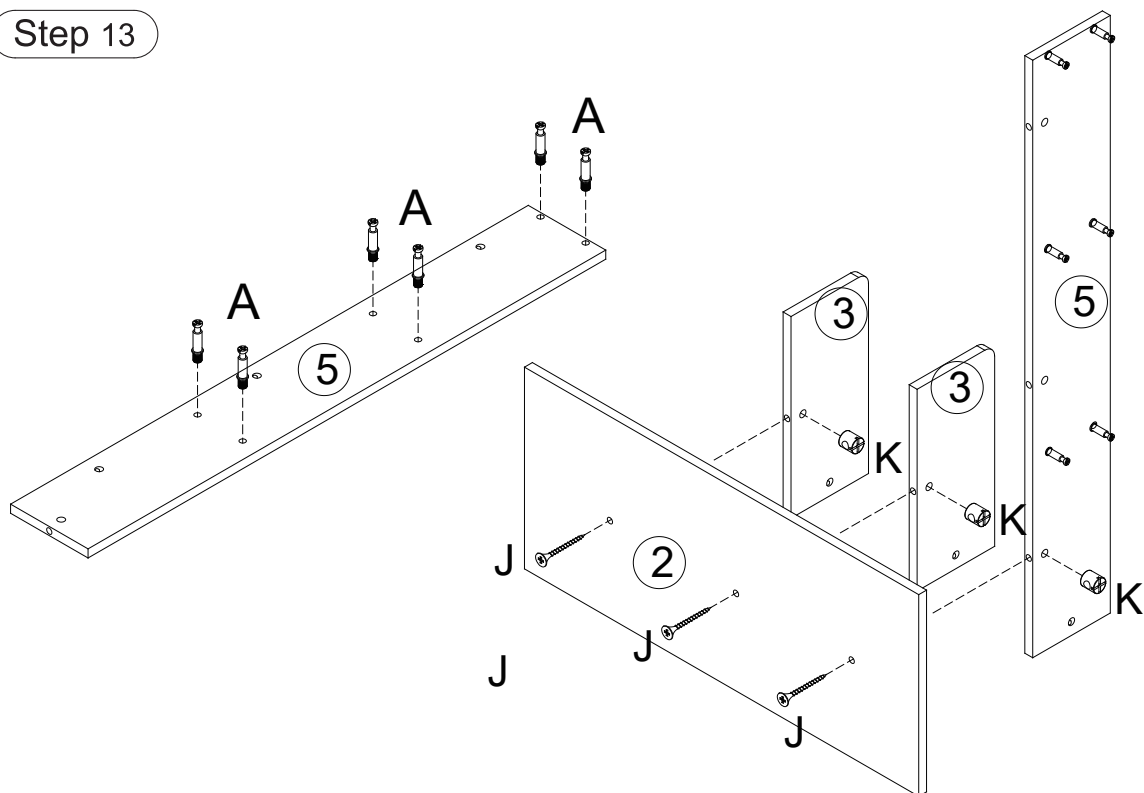


Step 14

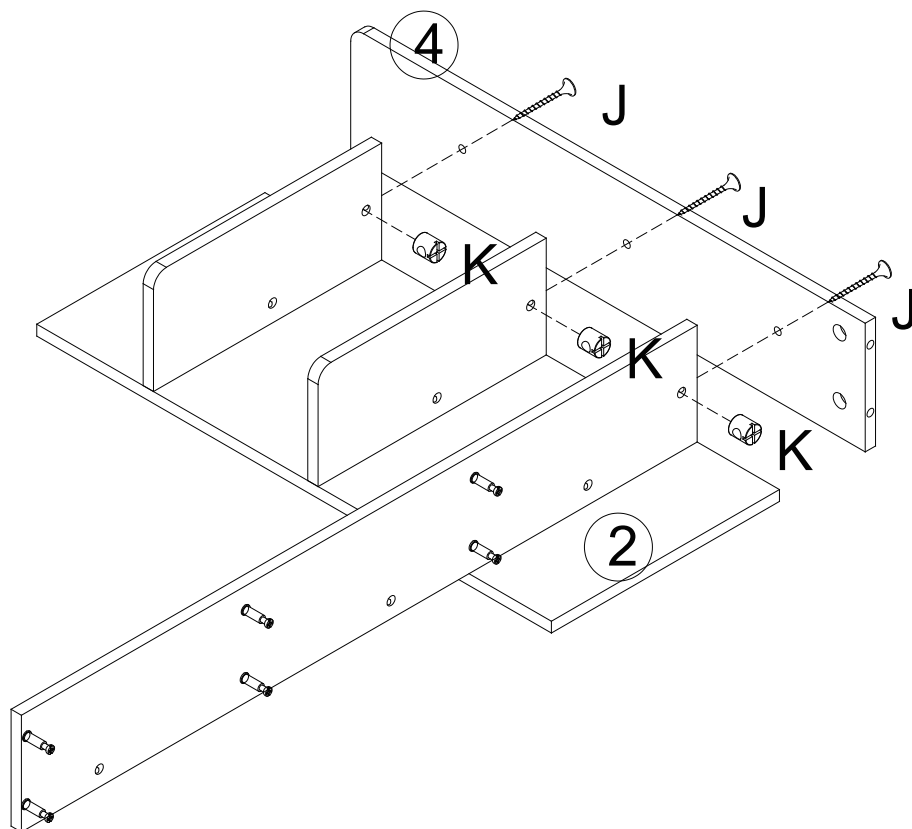


Step 15

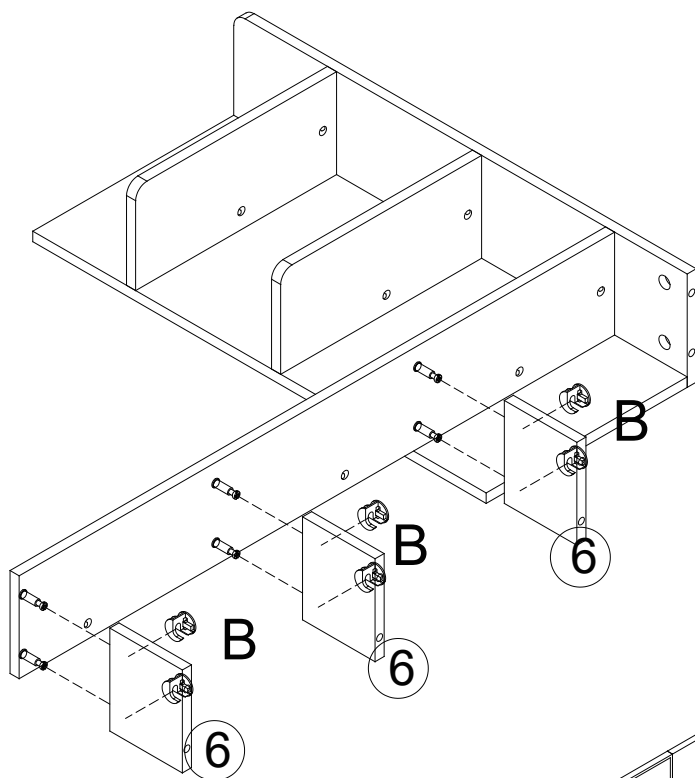



Step 16

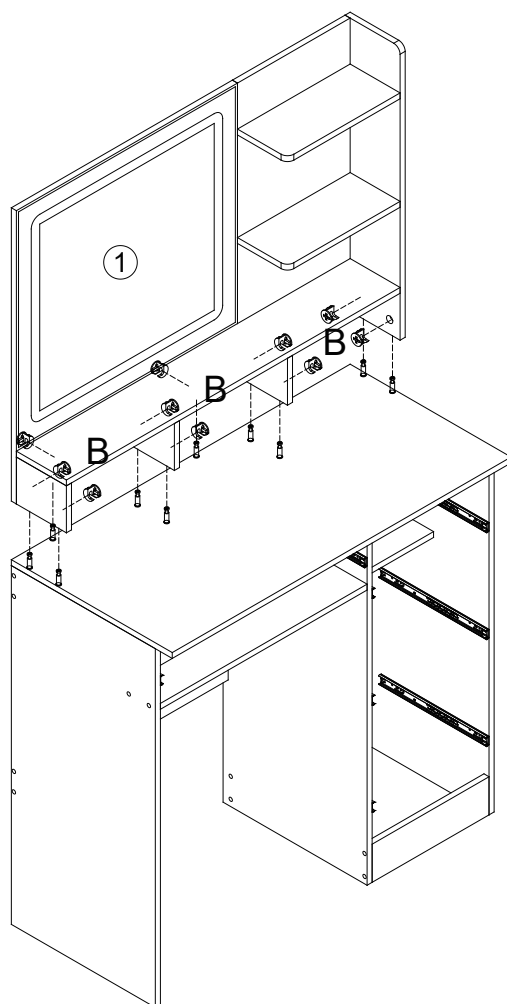

Step 17

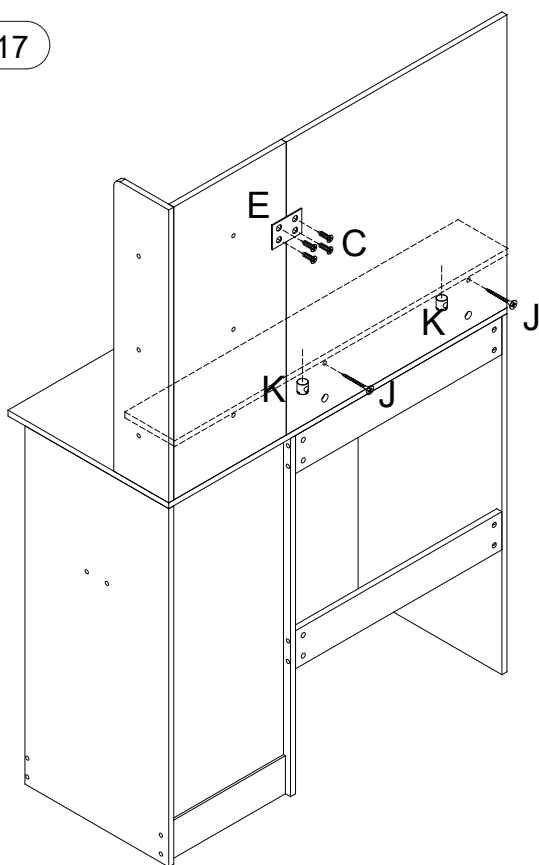

Step 18

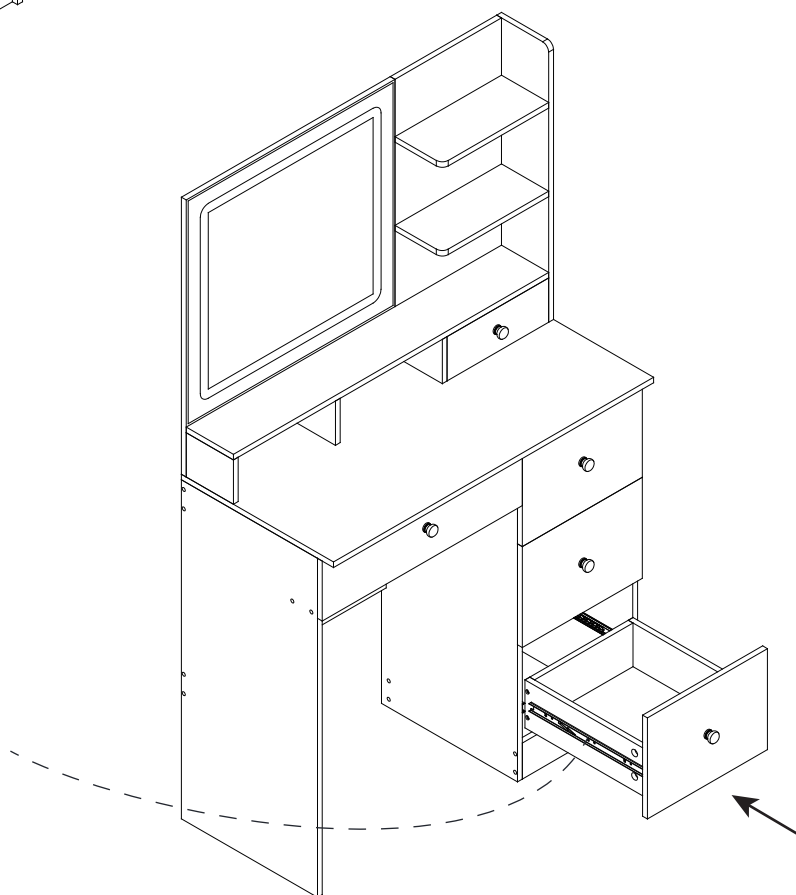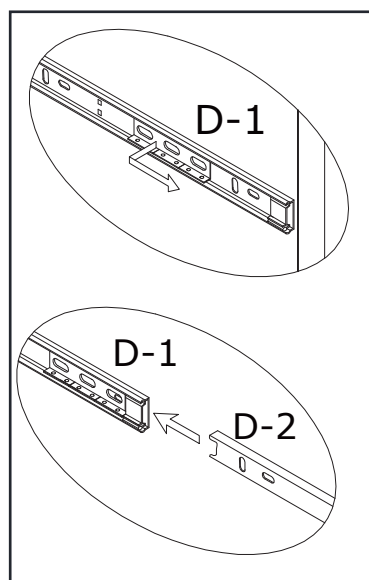

Step 19

