

4-Foot Swing

Assembly Instructions



- (2) Chains with 5/16" x 5" eyebolts
- (2) S-Hooks
- (2) Shocks
- (2) 6-foot Lengths of Chain


Parts List

- (1) 1/4-inch x 3-inch Carriage Bolts
- (2) 1/4-inch x 3-1/4-inch Carriage Bolts
- (2) 1/4-inch x 4-inch Carriage Bolts
- (5) 1/4-inch Washers
- (8) 5/16-inch Washers
- (5) 1/4-inch Nuts
- (4) 5/16-inch Nuts

* Tools required: 1/2-inch wrench, 7/16-inch wrench, hammer

1. Armrest to Seat Assembly

Select proper armrest. (Curve side goes towards seat)
Place a 5/16-inch washer on a 5-inch eyebolt and insert through top hole in front armrest support and seat assembly. Place a 5/16-inch washer and nut on end of bolt and tighten. Insert a 3-1/4-inch carriage bolt through bottom hole in front armrest support and seat assembly. Place a 1/4-inch washer and nut on end of bolt and tighten. Repeat on other side.

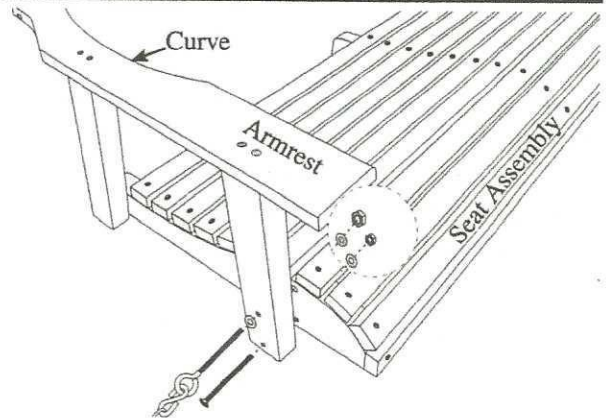

2. Armrest to Seat and Backrest

Insert 4-inch carriage bolt through the bottom rear section of the armrest support, then through seat assembly and backrest. Place a 1/4-inch washer and nut on end of bolt and tighten. Repeat on other side.

