


HOW TO INSTALL YOUR RAILING


SINGLE WROUGHT IRON BALUSTER

IMPORTANT - PLEASE READ ALL INSTRUCTIONS BEFORE YOU BEGIN INSTALLATION


- These instructions are for a single wrought iron baluster.
- Refer to your local building code for current regulations.

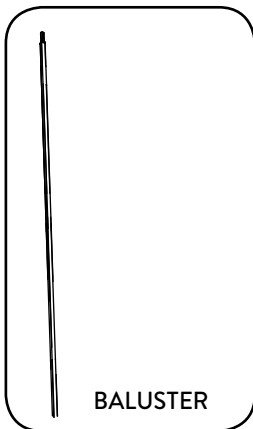

Part included

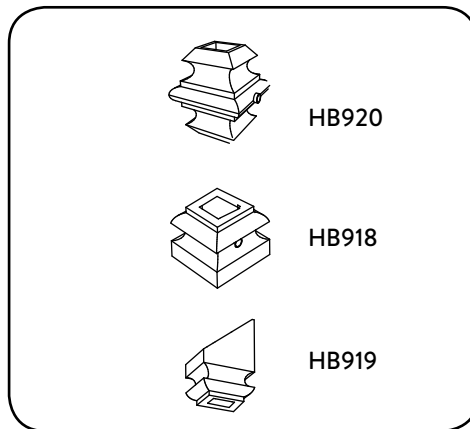


Sold separately

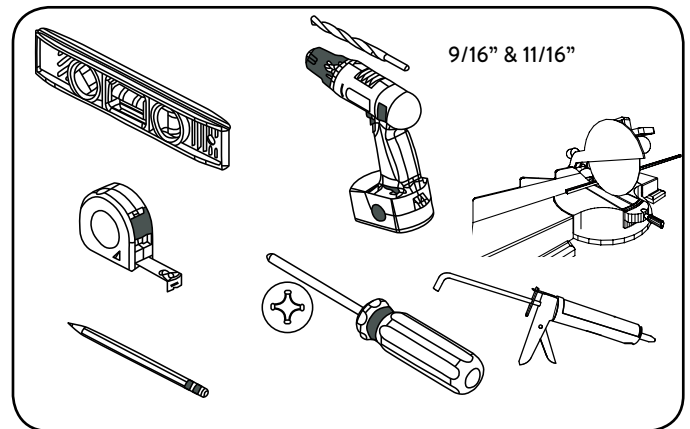


Recommended tools

1. Baluster preparation


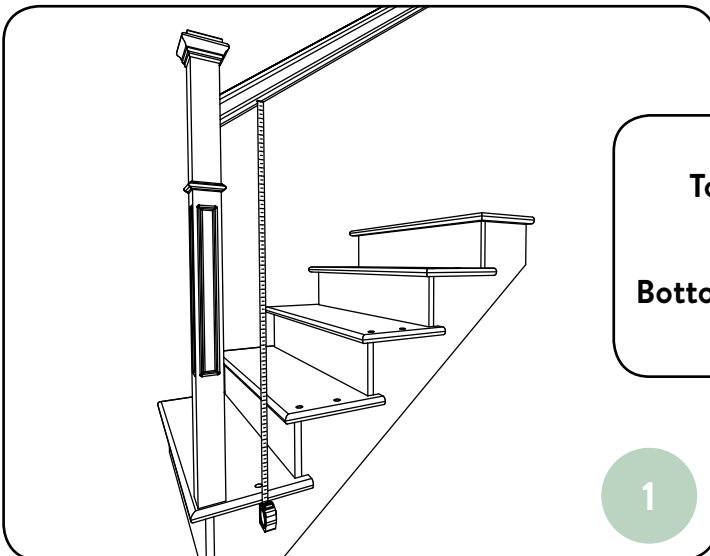


At each baluster location, measure the length between the tread and the lower side of the handrail. Add 1" to the measurement for insertion.

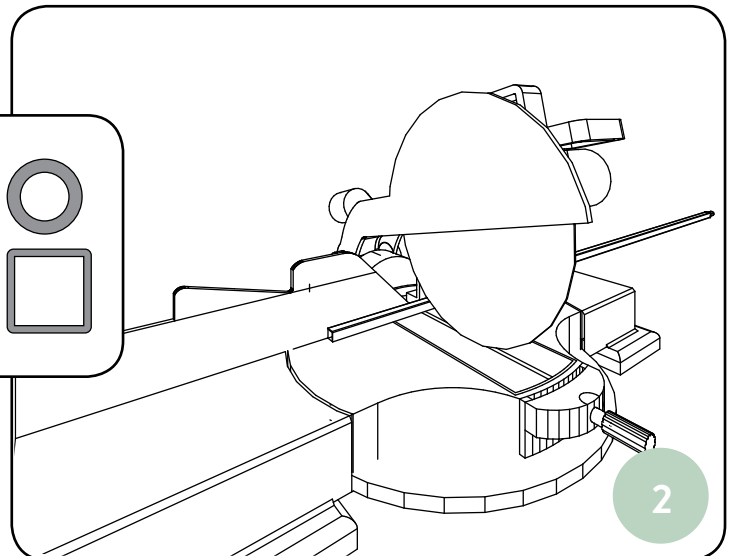


Trim each baluster from the bottom using a metal saw.


2. Baluster installation

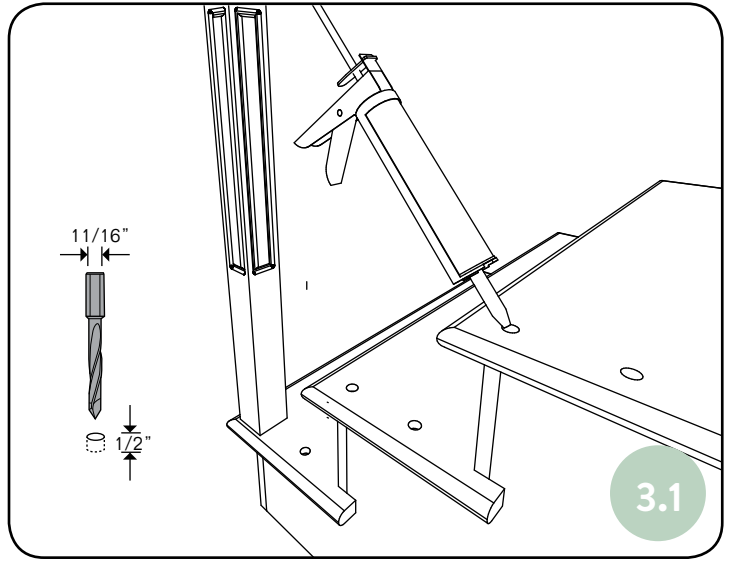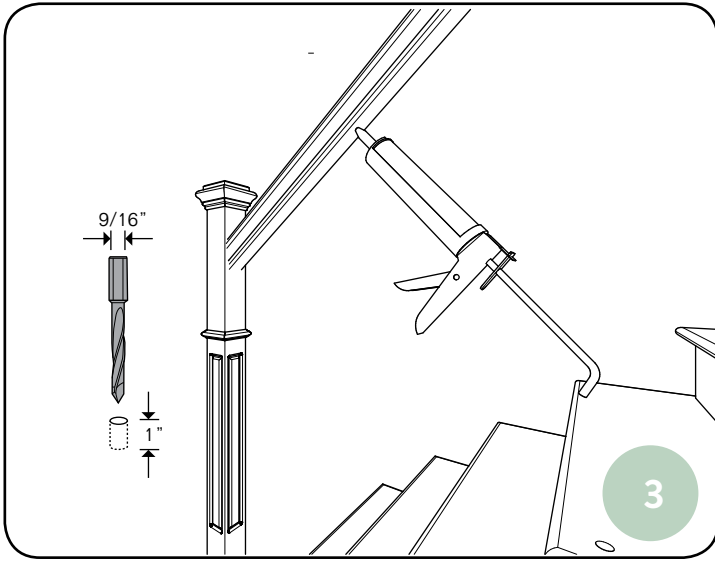


Fill the drilled tread and handrail holes half full with construction adhesive or epoxy.

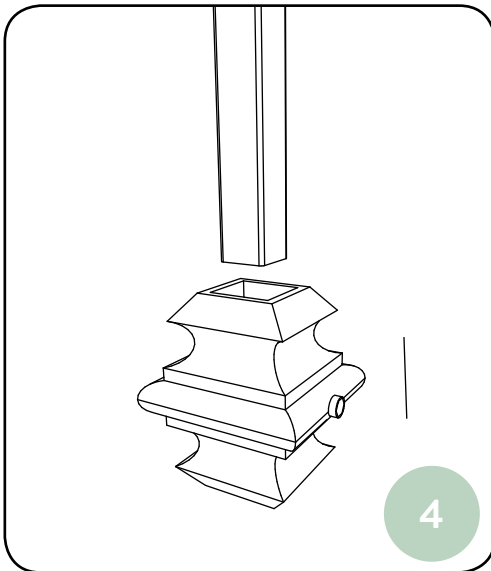


Slide the Angle Shoe, Decorative Knuckle and Straight Shoe if desired.

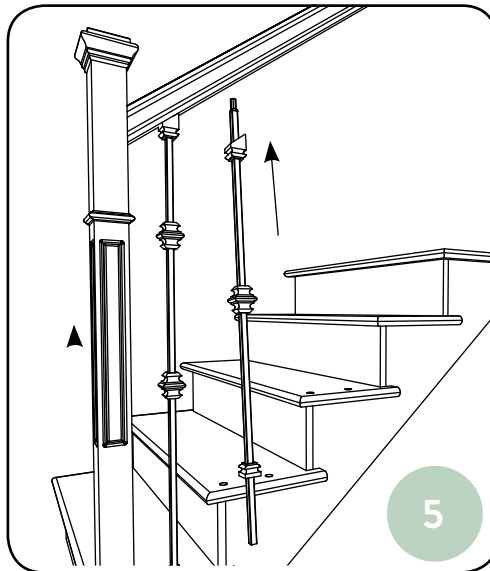


Insert each baluster in the handrail hole than sit the baluster in the tread hole. Make a complete turn to make sure that adhesive is on all faces of baluster.

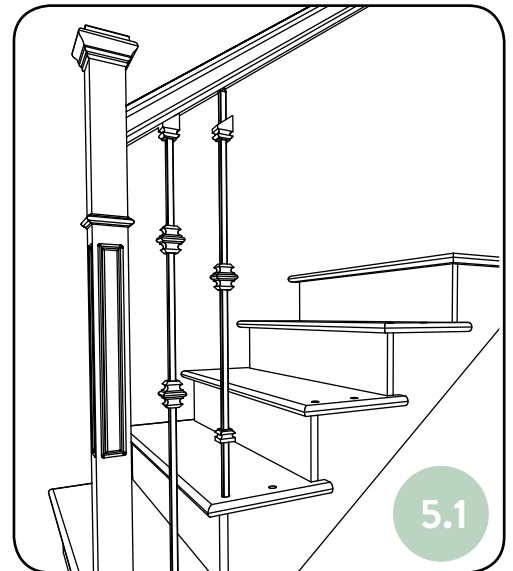

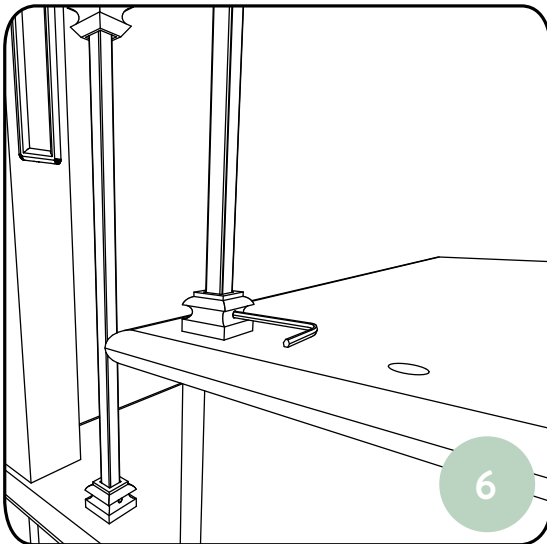

Using an allen wrench, secure each shoe against the handrail or tread.

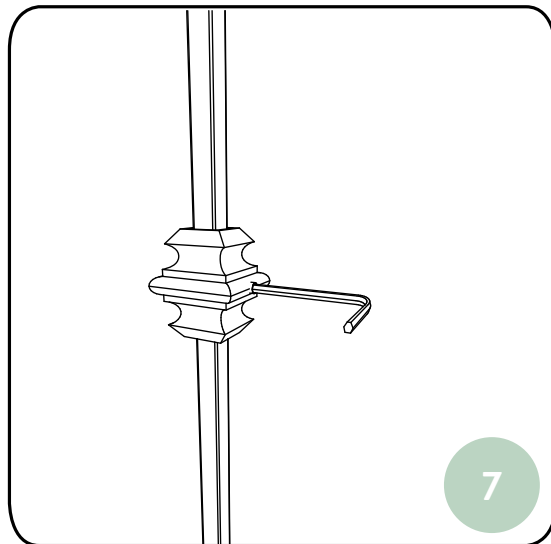

Slide each decorative knuckle to the desired location and tighten the set screw using an allen wrench

To solidify, do not touch your railing for a period of 24 hours. After 24 hours, remove any protruding dry adhesive with a utility knife.

8

DO NOT RETURN TO RETAILER

If you have any questions, please contact our customer service at:
info@colonialelegance.com or call toll free at: 1-800-361-2030

VISIT OUR WEB SITE

www.colonialelegance.com

***1 year limited warranty**