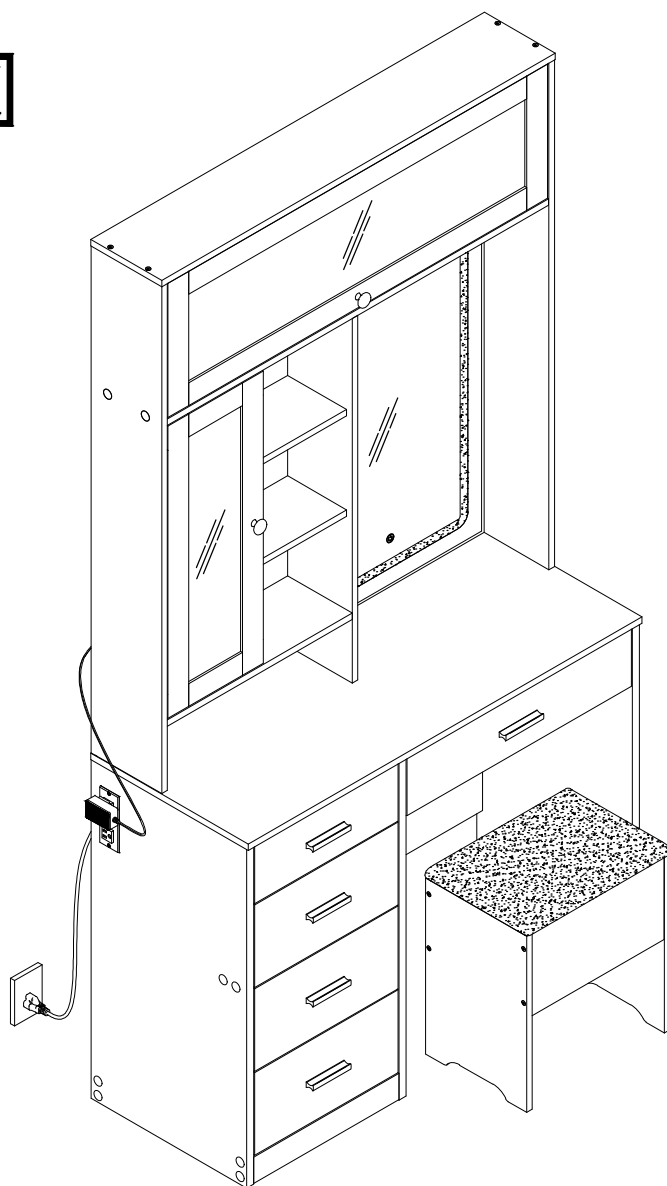


VANITY SET WITH LIGHTS

User Manual



MANUFACTURED BY: HONG SHAN VIET NAM CO.,LTD


CATALOG:

Part List.....	04-05.
Accessories List.....	06.
Assemble.....	07-39.


Foreword:

Thank you for choosing our product! We hope you have a good shopping experience!

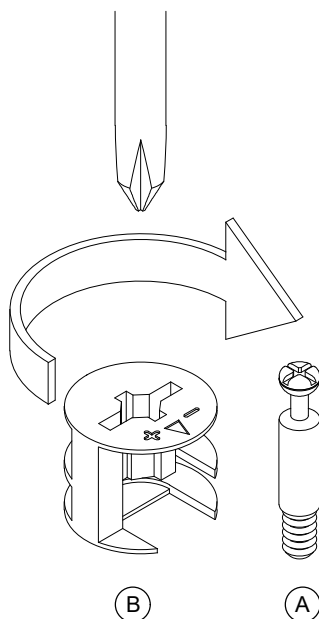
We aim to provide a 100% satisfaction product and customer service.



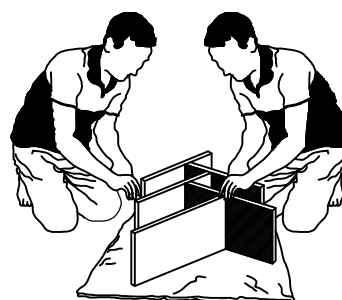Only slight turn of cams required.
Do **NOT** overturn.



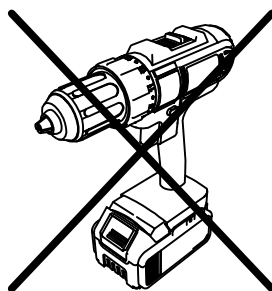Requires 2 people to assemble
the product more easily



*Power Tool **NOT**
Recommended for **A-B**
hardware assembly

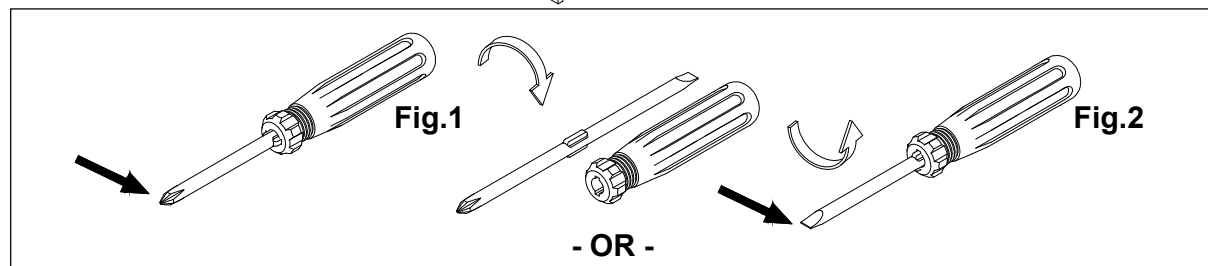
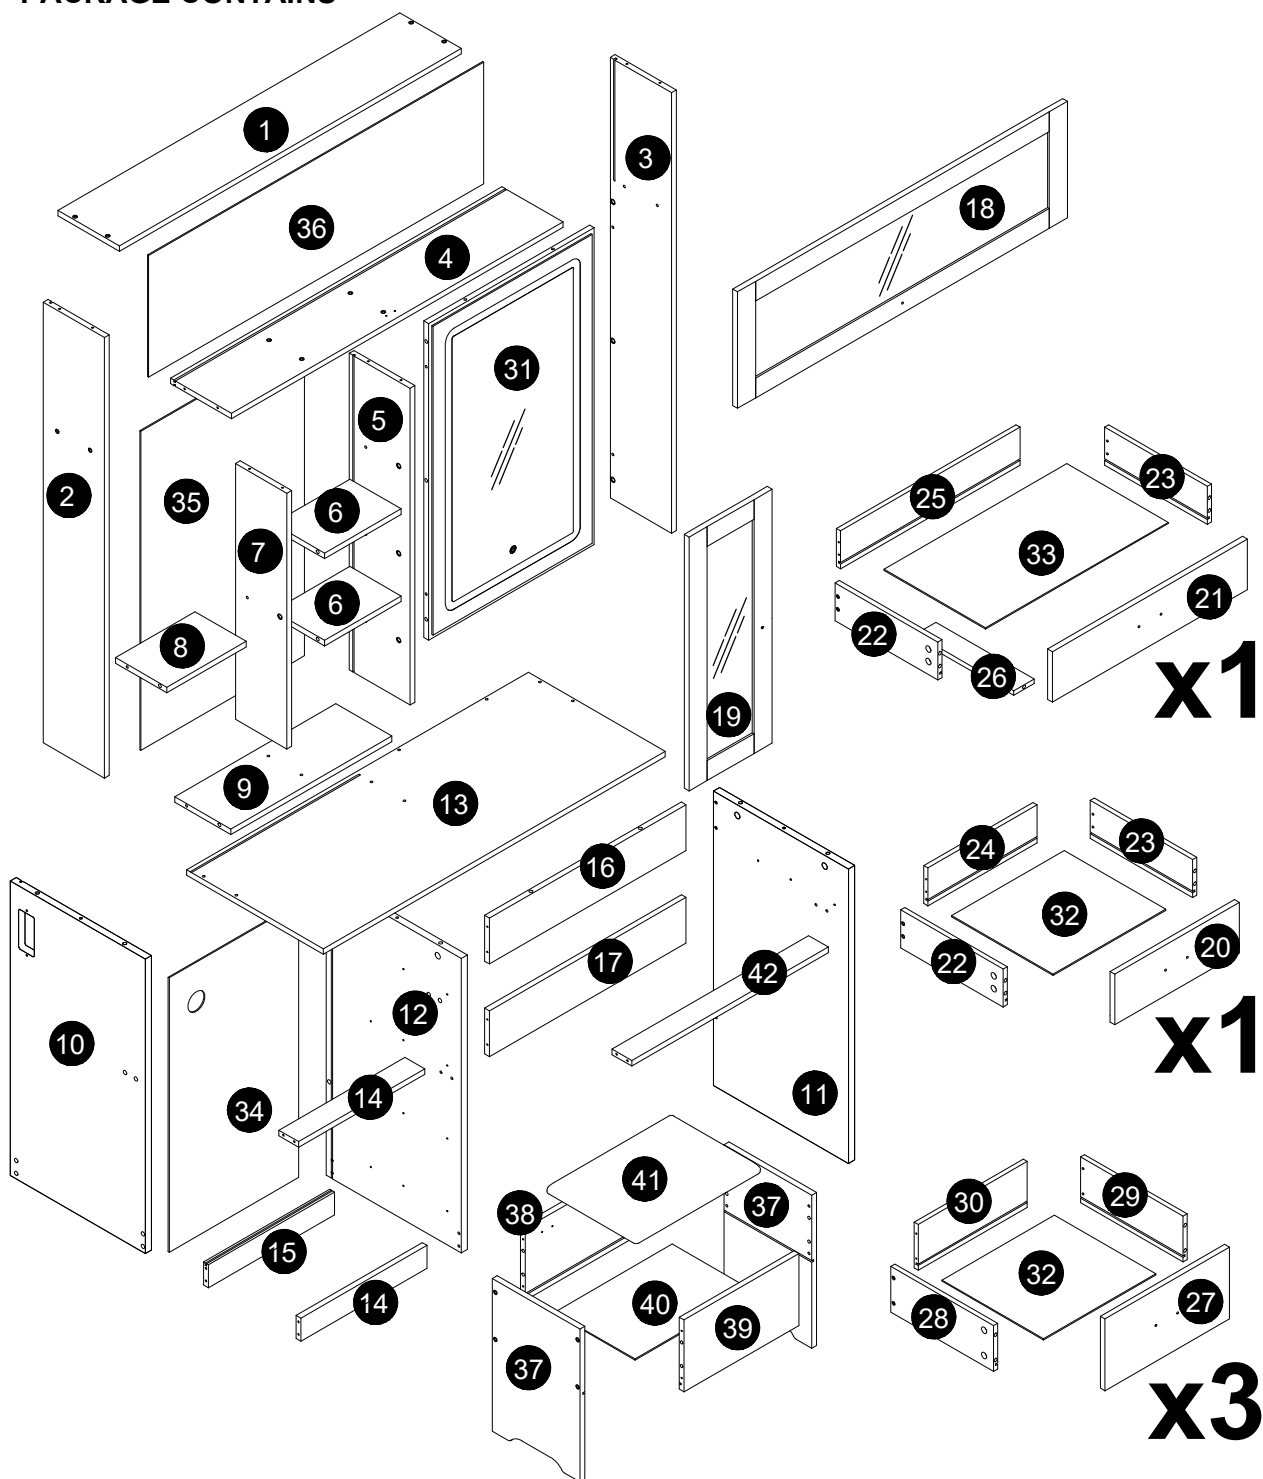


TOOL REQUIRED
Phillips Screwdriver

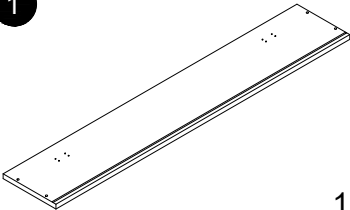
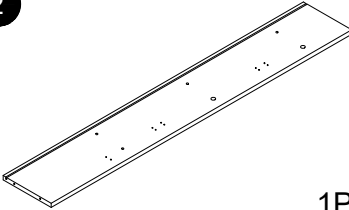
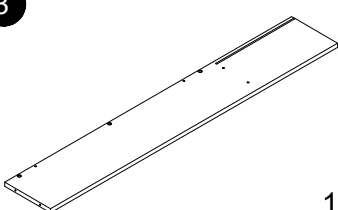
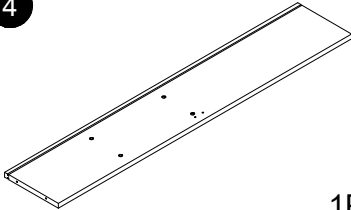
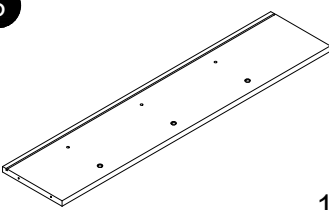
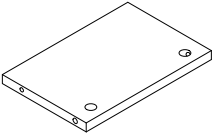
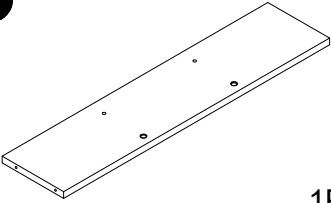
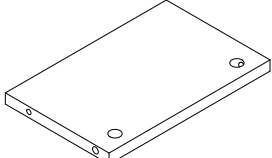
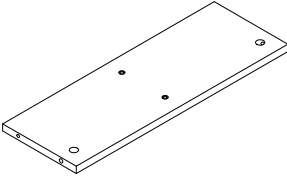
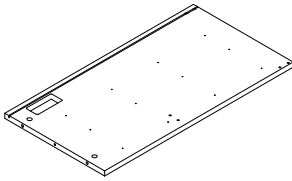
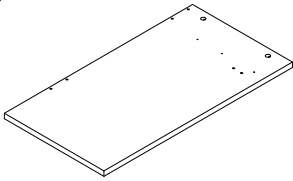
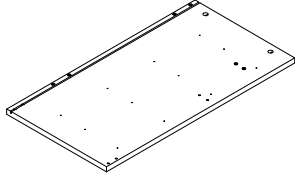
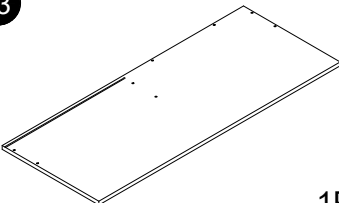
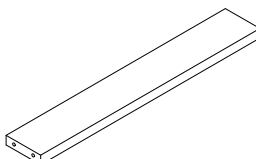
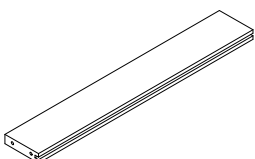
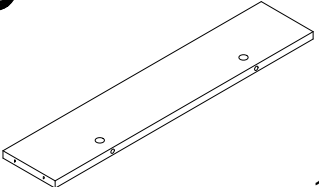
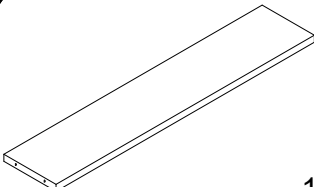
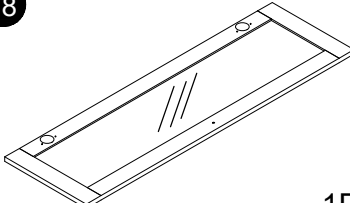
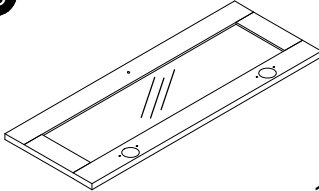
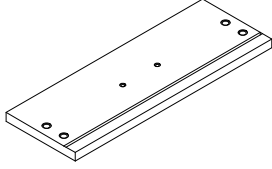
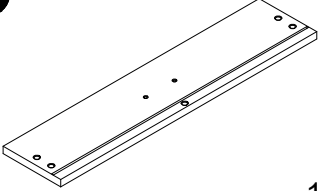
TIPS

1. When installing the product, use a soft surface (such as carpet or cardboard) to avoid scratching or damaging the surface of the product.
2. Please try to use a manual screwdriver instead of electric screw driver. A manual screwdriver can be used to better control the tightness of the screws.
3. Do not use any glue.
4. The product is unstable before it is assembled. Please pay attention to the product installation sequence, and align all screws and screw holes before tightening.
5. The structure of this product can not meet the requirements of children climbing.

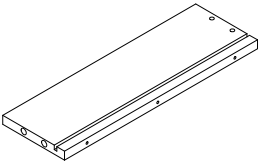
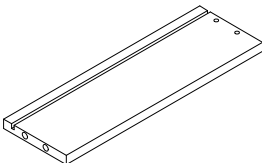
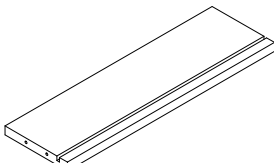
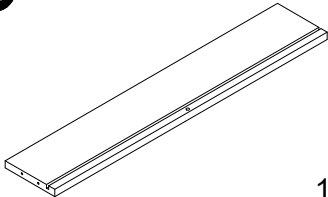
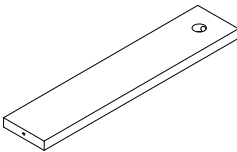
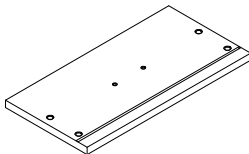
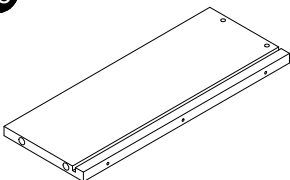
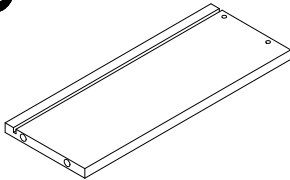
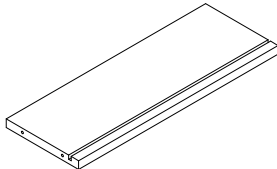
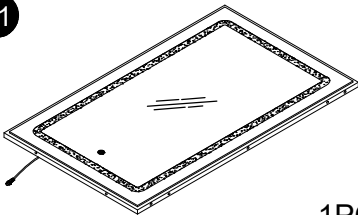
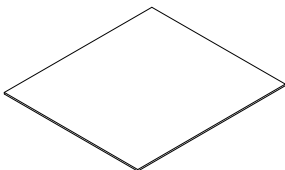
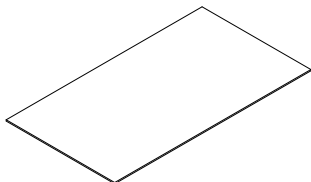
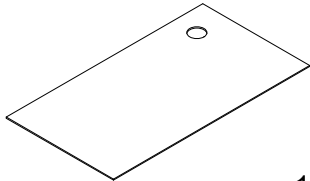
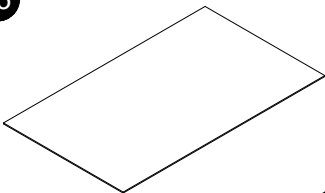
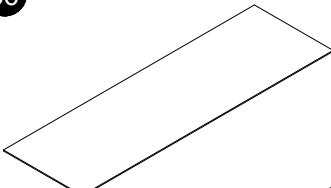
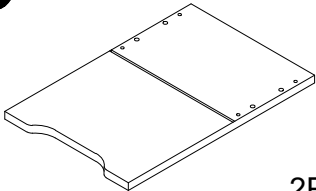
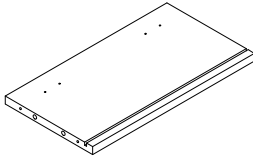
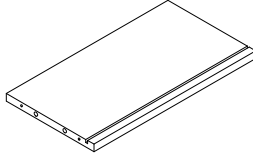
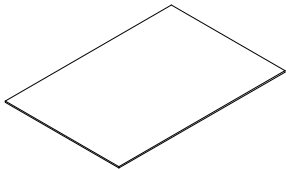
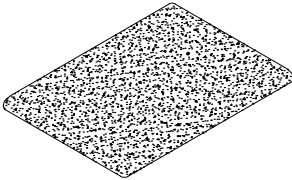
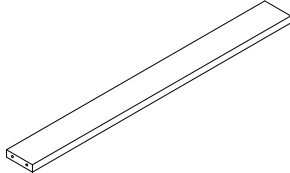
PACKAGE CONTAINS



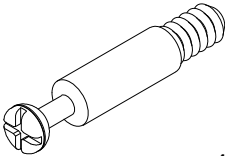


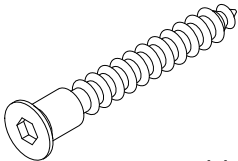
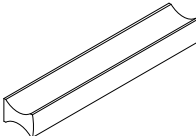
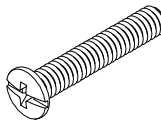
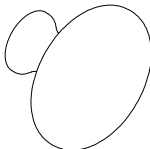
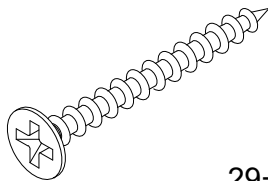
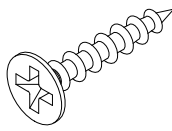

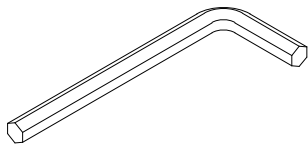
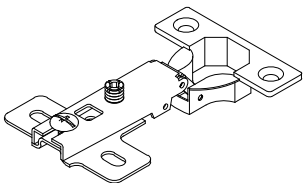
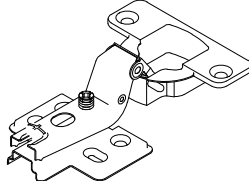
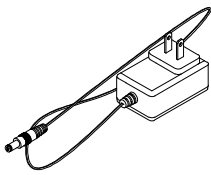
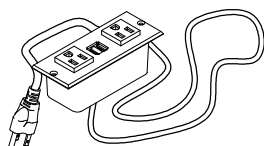
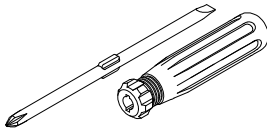
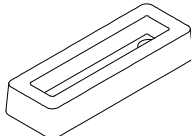




PARTS LIST (Unit: mm)

<p>1</p>  <p>1PC</p>	<p>2</p>  <p>1PC</p>	<p>3</p>  <p>1PC</p>
<p>4</p>  <p>1PC</p>	<p>5</p>  <p>1PC</p>	<p>6</p>  <p>2PCS</p>
<p>7</p>  <p>1PC</p>	<p>8</p>  <p>1PC</p>	<p>9</p>  <p>1PC</p>
<p>10</p>  <p>1PC</p>	<p>11</p>  <p>1PC</p>	<p>12</p>  <p>1PC</p>
<p>13</p>  <p>1PC</p>	<p>14</p>  <p>2PCS</p>	<p>15</p>  <p>1PC</p>
<p>16</p>  <p>1PC</p>	<p>17</p>  <p>1PC</p>	<p>18</p>  <p>1PC</p>
<p>19</p>  <p>1PC</p>	<p>20</p>  <p>1PC</p>	<p>21</p>  <p>1PC</p>

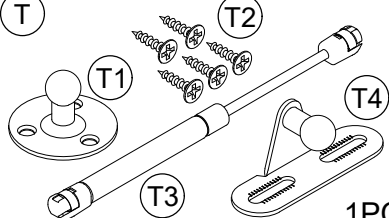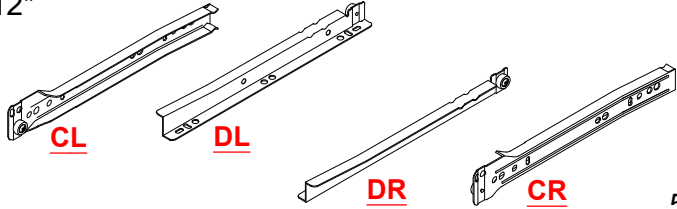


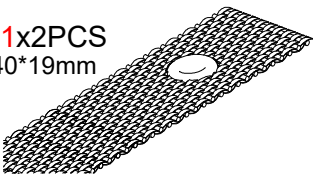



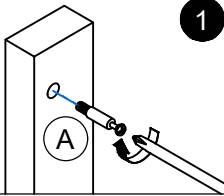
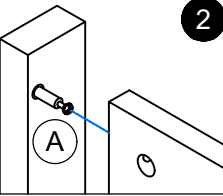
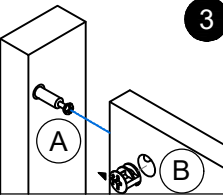
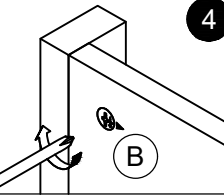
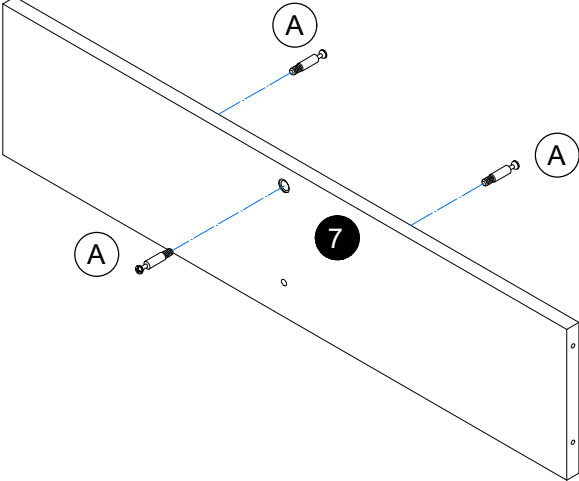
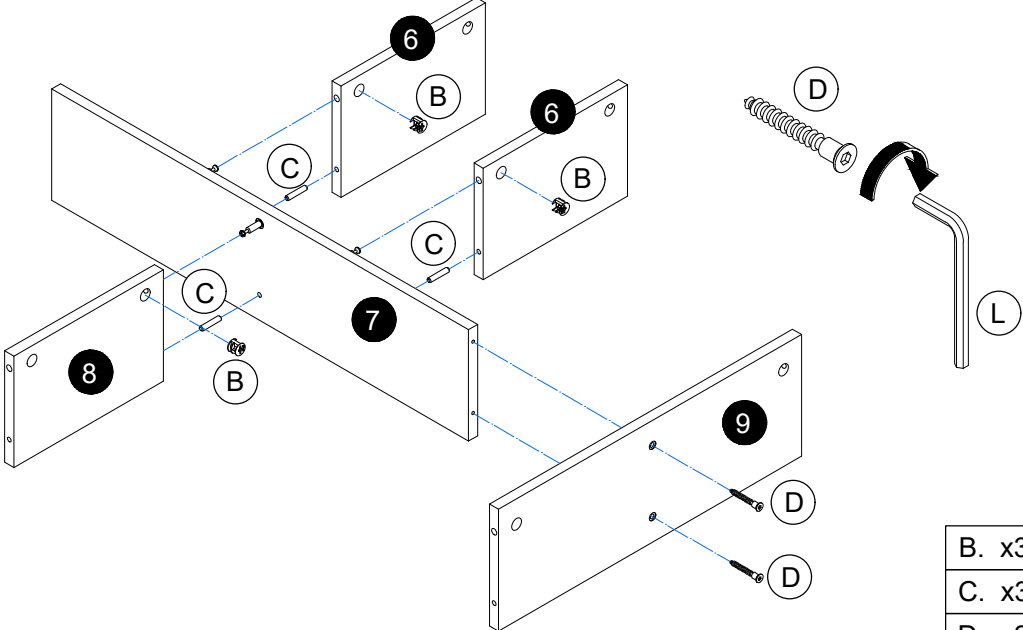
PARTS LIST (Unit: mm)

<p>22</p>  <p>2PCS</p>	<p>23</p>  <p>2PCS</p>	<p>24</p>  <p>1PC</p>
<p>25</p>  <p>1PC</p>	<p>26</p>  <p>1PC</p>	<p>27</p>  <p>3PCS</p>
<p>28</p>  <p>3PCS</p>	<p>29</p>  <p>3PCS</p>	<p>30</p>  <p>3PCS</p>
<p>31</p>  <p>1PC</p>	<p>32</p>  <p>4PCS</p>	<p>33</p>  <p>1PC</p>
<p>34</p>  <p>1PC</p>	<p>35</p>  <p>1PC</p>	<p>36</p>  <p>1PC</p>
<p>37</p>  <p>2PCS</p>	<p>38</p>  <p>1PC</p>	<p>39</p>  <p>1PC</p>
<p>40</p>  <p>1PC</p>	<p>41</p>  <p>1PC</p>	<p>42</p>  <p>1PC</p>







ACCESSORIES LIST (Unit: mm)

<div><div>A</div><div>6.5x36</div><div></div><div>43+2PCS</div></div>	<div><div>B</div><div>15x9.8</div><div></div><div>43+2PCS</div></div>	<div><div>C</div><div>Ø6x30</div><div></div><div>27+2PCS</div></div>	
<div><div>D</div><div>#9.5xM5x46</div><div></div><div>44+2PCS</div></div>	<div><div>E</div><div>80x15x10</div><div></div><div>5PCS</div></div>	<div><div>F</div><div>#9xM4x16</div><div></div><div>12PCS</div></div>	
<div><div>G</div><div>Ø28x24</div><div></div><div>2PCS</div></div>	<div><div>H</div><div>#8xM4x35</div><div></div><div>29+2PCS</div></div>	<div><div>I</div><div>#7x3.5x14</div><div></div><div>96+2PCS</div></div>	
<div><div>J</div><div>Ø17x18x4</div><div></div><div>6PCS</div></div>	<div><div>L</div><div></div><div>1PC</div></div>	<div><div>M</div><div></div><div>2PCS</div></div>	
<div><div>N</div><div></div><div>4PCS</div></div>	<div><div>O</div><div></div><div>1PC</div></div>	<div><div>P</div><div></div><div>1PC</div></div>	
<div><div>Q</div><div></div><div>1PC</div></div>	<div><div>R</div><div></div><div>1PC</div></div>	<div><div>S</div><div></div><div>S.1 S.2 16PCS</div></div>	<div><div>U</div><div>Ø20</div><div></div><div>22+2PCS</div></div>
<div><div>T</div><div></div><div>T1 T2 T3 T4 1PC</div></div>		<div><div>K</div><div>12"</div><div></div><div><u>CL</u> <u>DL</u> <u>DR</u> <u>CR</u> 5SET</div></div>	


INSTALLATION INSTRUCTION

V1x2PCS Ø6x35mm 	V2x2PCS Ø13x40mm 	V3x2PCS Ø8xM4x35mm 	W1x2PCS 140*19mm 	W2x2PCS Ø8xM4x16mm 
V			W	
HOW TO  Cam lock  Cam bolt	 <p>1. Screw Cam Bolt into panel</p>	 <p>2. Insert Cam Bolt into bolt hole of joining panel.</p>	 <p>3. Insert Cam Lock with arrow facing bolt.</p>	 <p>4. Gently turn Cam Lock 180° clockwise to lock into position.</p>
STEP1				
 <p>A. x3PCS</p>				
STEP2				
 <p>B. x3PCS C. x3PCS D. x2PCS</p>				

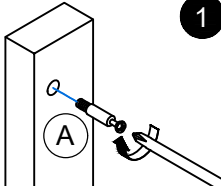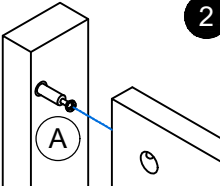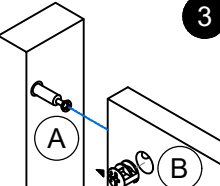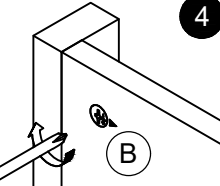INSTALLATION INSTRUCTION


<p>HOW TO</p>  <p>Cam lock</p>  <p>Cam bolt</p>	 <p>1. Screw Cam Bolt into panel</p>	 <p>2. Insert Cam Bolt into bolt hole of joining panel.</p>	 <p>3. Insert Cam Lock with arrow facing bolt.</p>	 <p>4. Gently turn Cam Lock 180° clockwise to lock into position.</p>
---	---	--	--	--

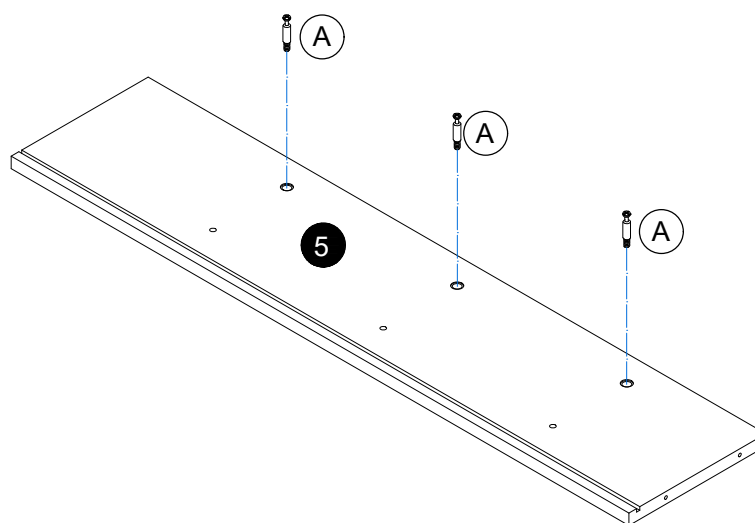STEP3



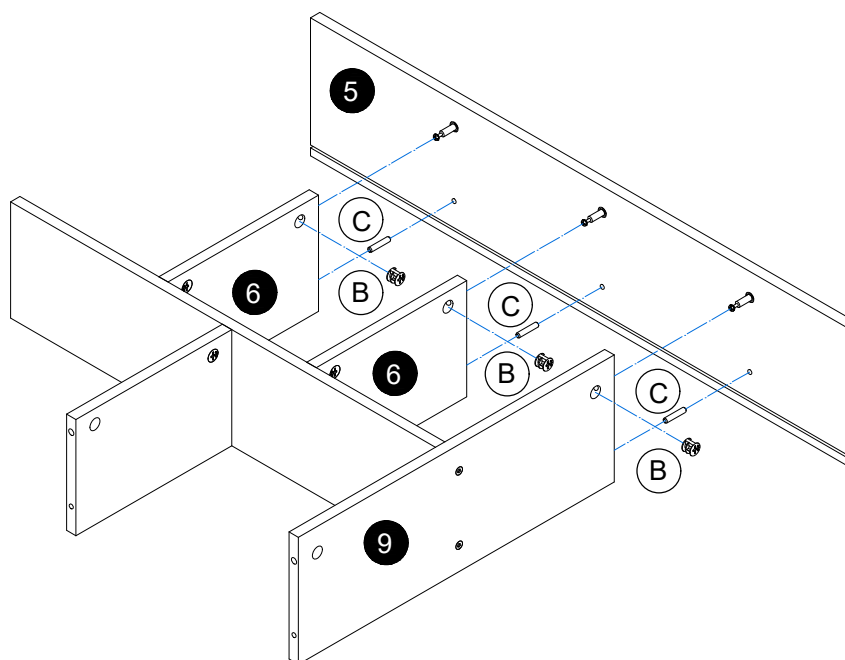A. x3PCS


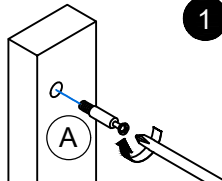
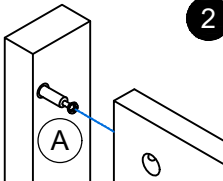
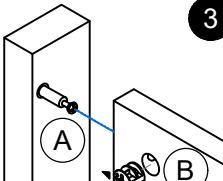
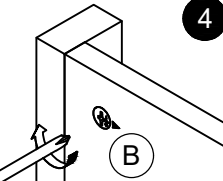
STEP4




B. x3PCS

C. x3PCS

INSTALLATION INSTRUCTION


<p>HOW TO</p>  <p>Cam lock</p> <p>Cam bolt</p>	 <p>1. Screw Cam Bolt into panel</p>	 <p>2. Insert Cam Bolt into bolt hole of joining panel.</p>	 <p>3. Insert Cam Lock with arrow facing bolt.</p>	 <p>4. Gently turn Cam Lock 180° clockwise to lock into position.</p>
---	---	--	--	--

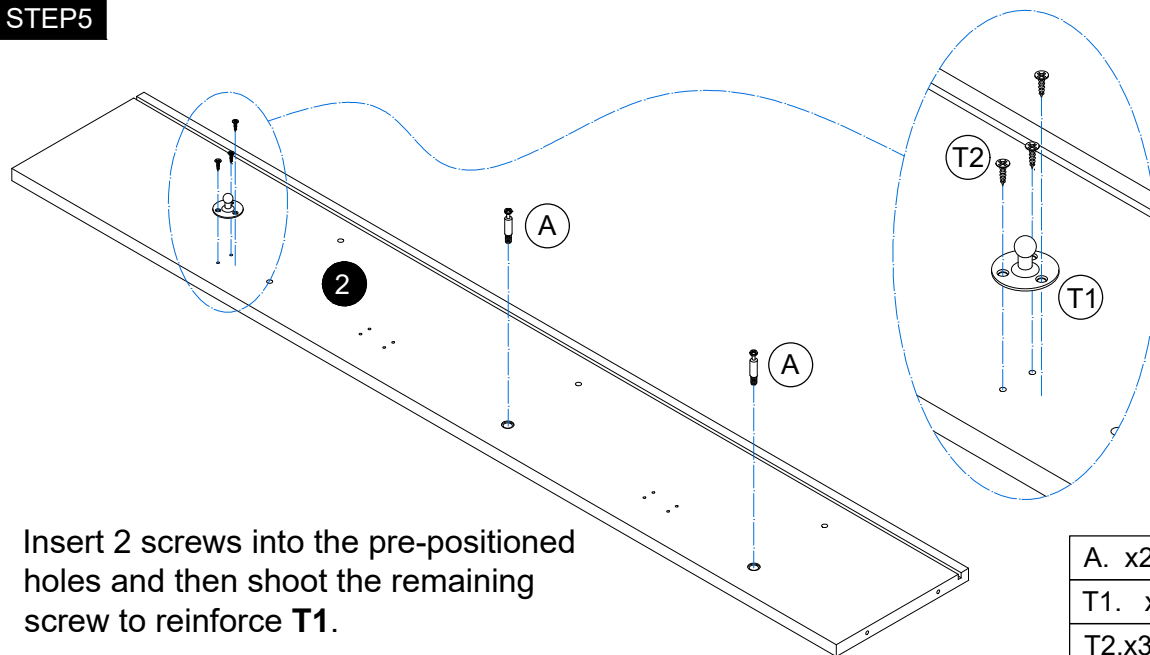STEP5








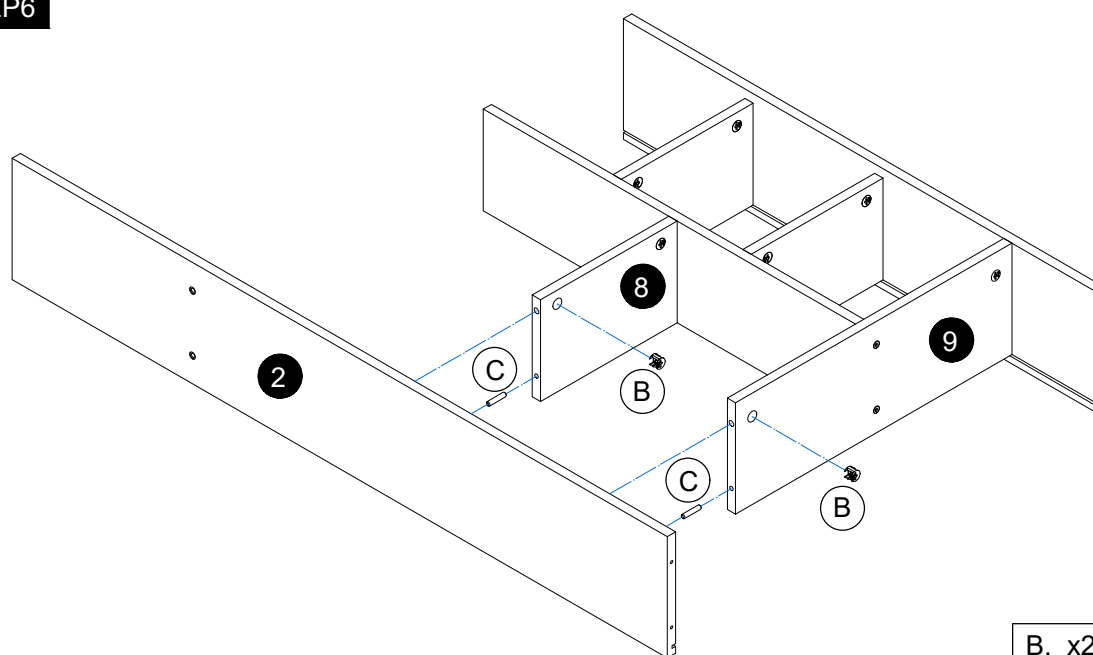
A. x2PCS
T1. x1PC
T2.x3PCS

STEP6




B. x2PCS
C. x2PCS

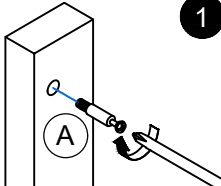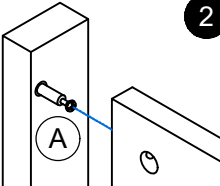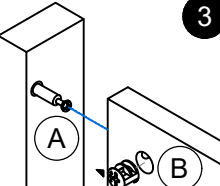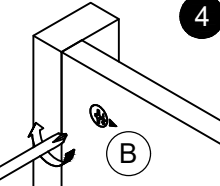INSTALLATION INSTRUCTION


<p>HOW TO</p>  <p>Cam lock</p>  <p>Cam bolt</p>	 <p>1. Screw Cam Bolt into panel</p>	 <p>2. Insert Cam Bolt into bolt hole of joining panel.</p>	 <p>3. Insert Cam Lock with arrow facing bolt.</p>	 <p>4. Gently turn Cam Lock 180° clockwise to lock into position.</p>
---	---	--	--	--

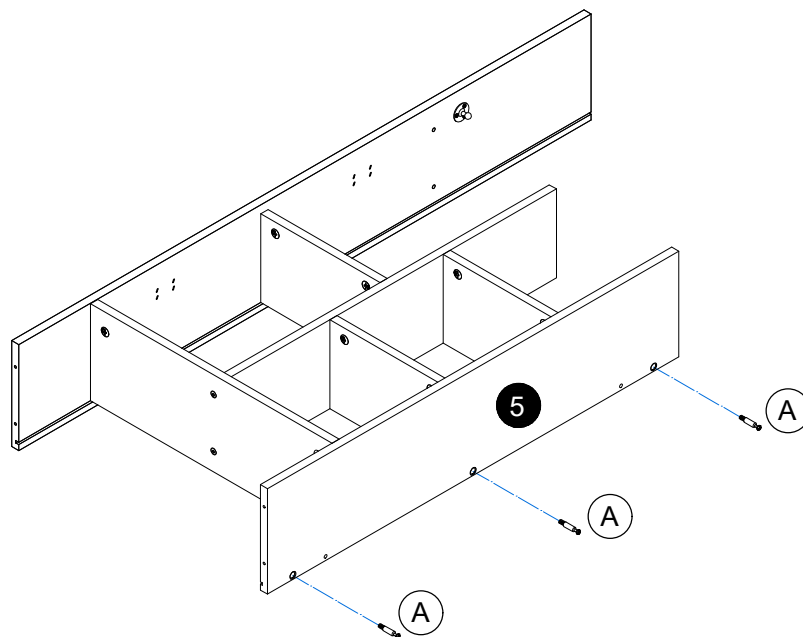STEP7



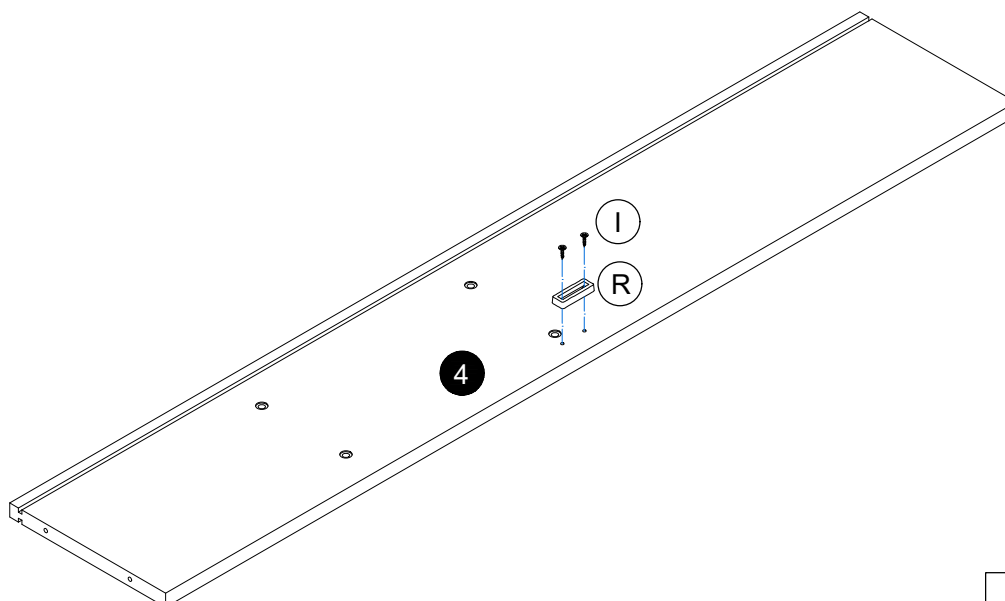A. x3PCS







STEP8




I. x2PCS

R. x1PC

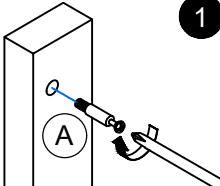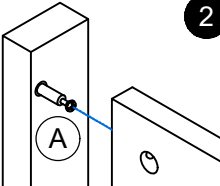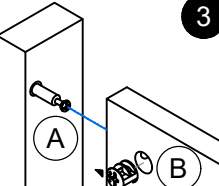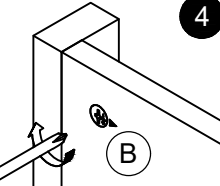INSTALLATION INSTRUCTION


<p>HOW TO</p>  <p>Cam lock</p>  <p>Cam bolt</p>	 <p>1. Screw Cam Bolt into panel</p>	 <p>2. Insert Cam Bolt into bolt hole of joining panel.</p>	 <p>3. Insert Cam Lock with arrow facing bolt.</p>	 <p>4. Gently turn Cam Lock 180° clockwise to lock into position.</p>
---	---	--	--	--

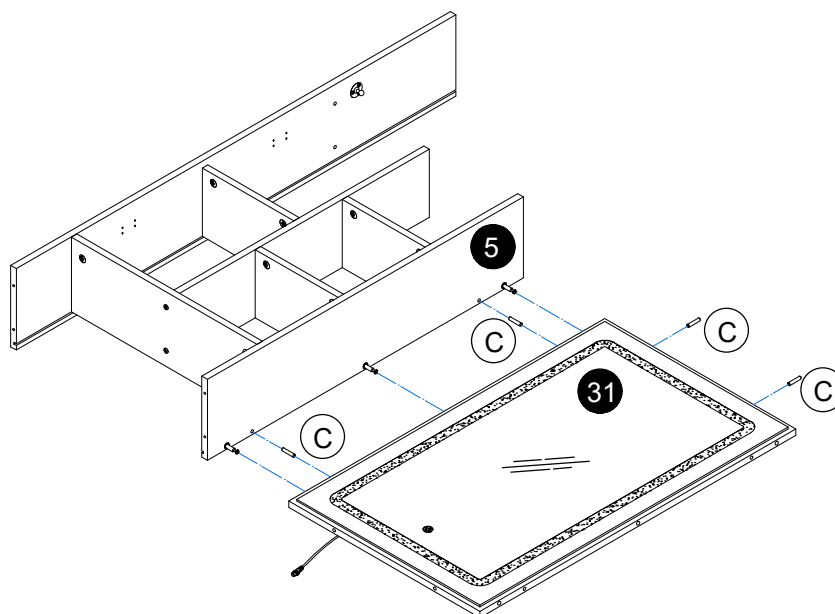STEP9








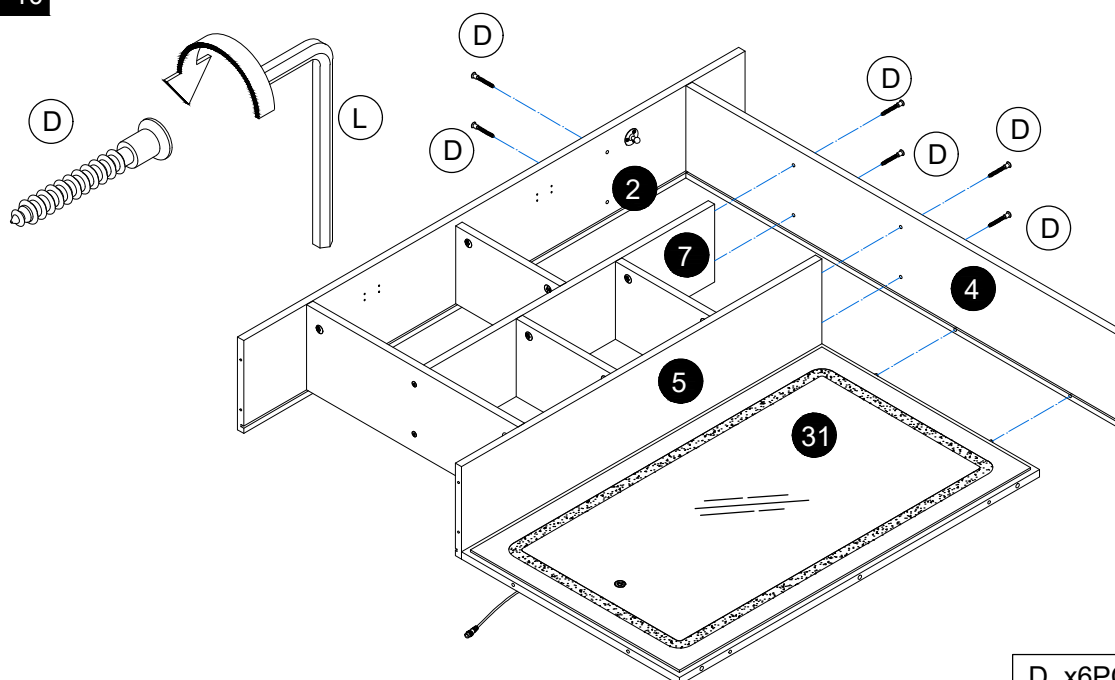
C. x4PCS

STEP10




D. x6PCS

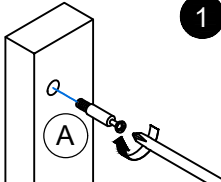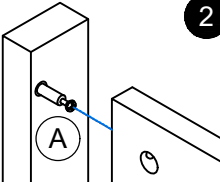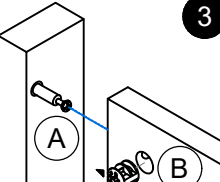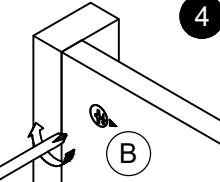INSTALLATION INSTRUCTION


<p>HOW TO</p>  <p>Cam lock</p>  <p>Cam bolt</p>	<p>1</p>  <p>A</p> <p>1. Screw Cam Bolt into panel</p>	<p>2</p>  <p>A</p> <p>2. Insert Cam Bolt into bolt hole of joining panel.</p>	<p>3</p>  <p>A B</p> <p>3. Insert Cam Lock with arrow facing bolt.</p>	<p>4</p>  <p>B</p> <p>4. Gently turn Cam Lock 180° clockwise to lock into position.</p>
---	---	--	---	--

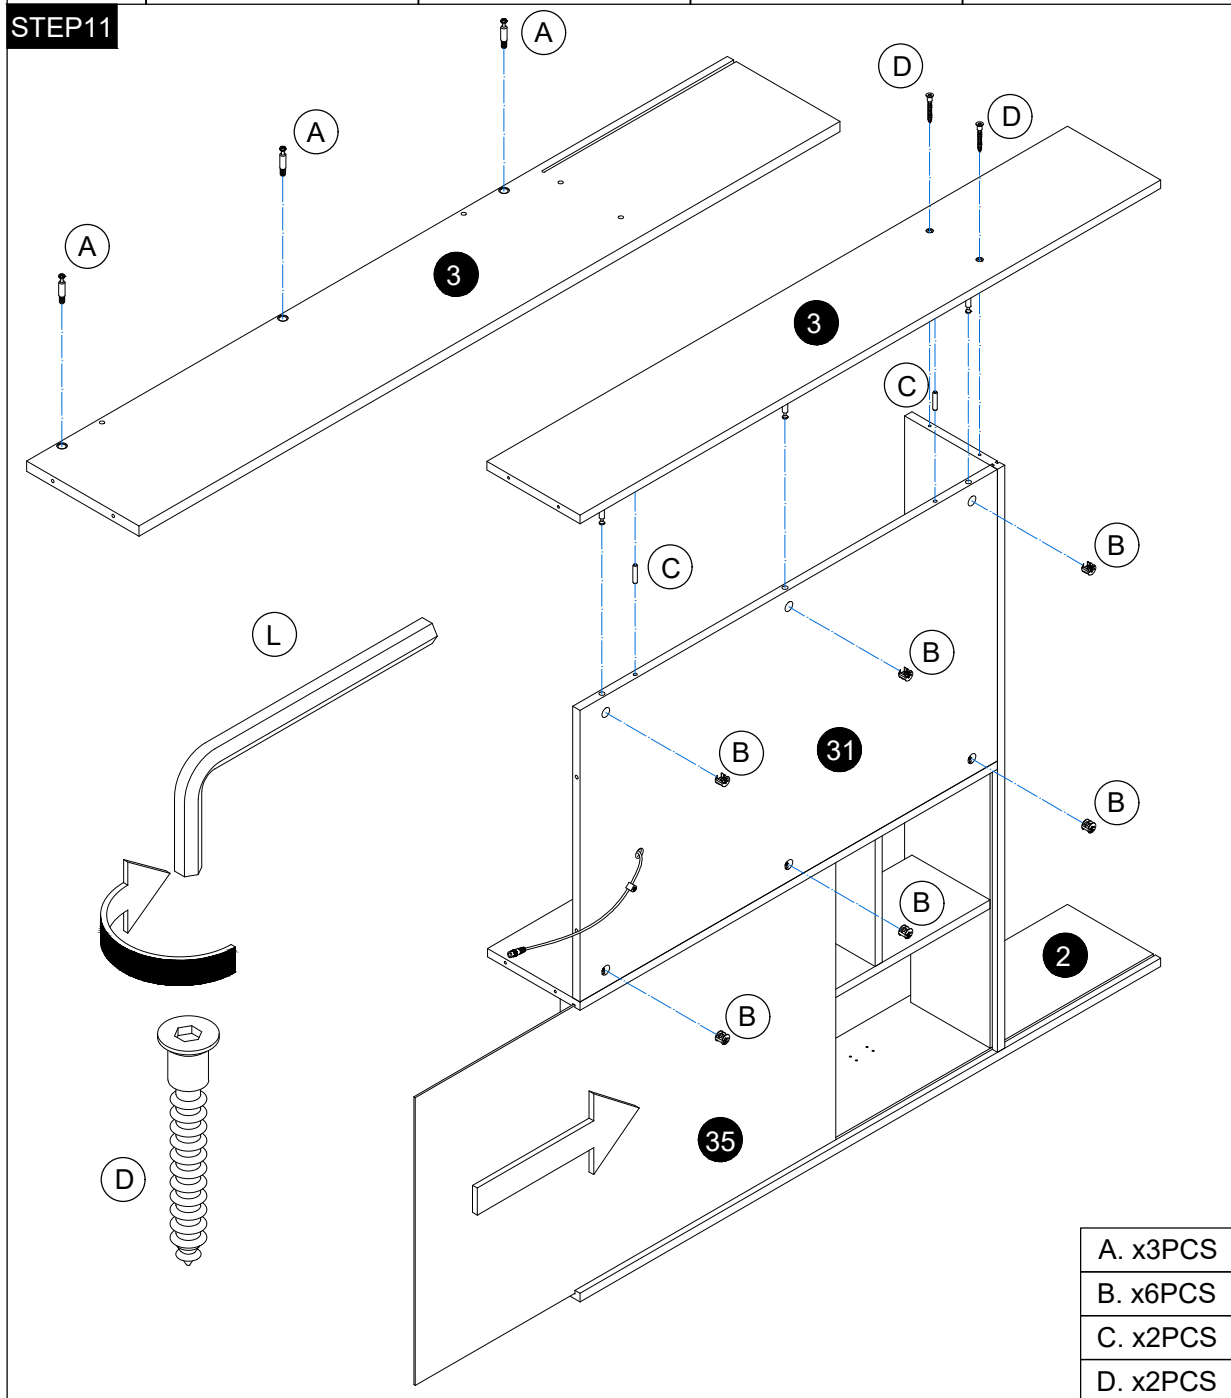STEP11



INSTALLATION INSTRUCTION

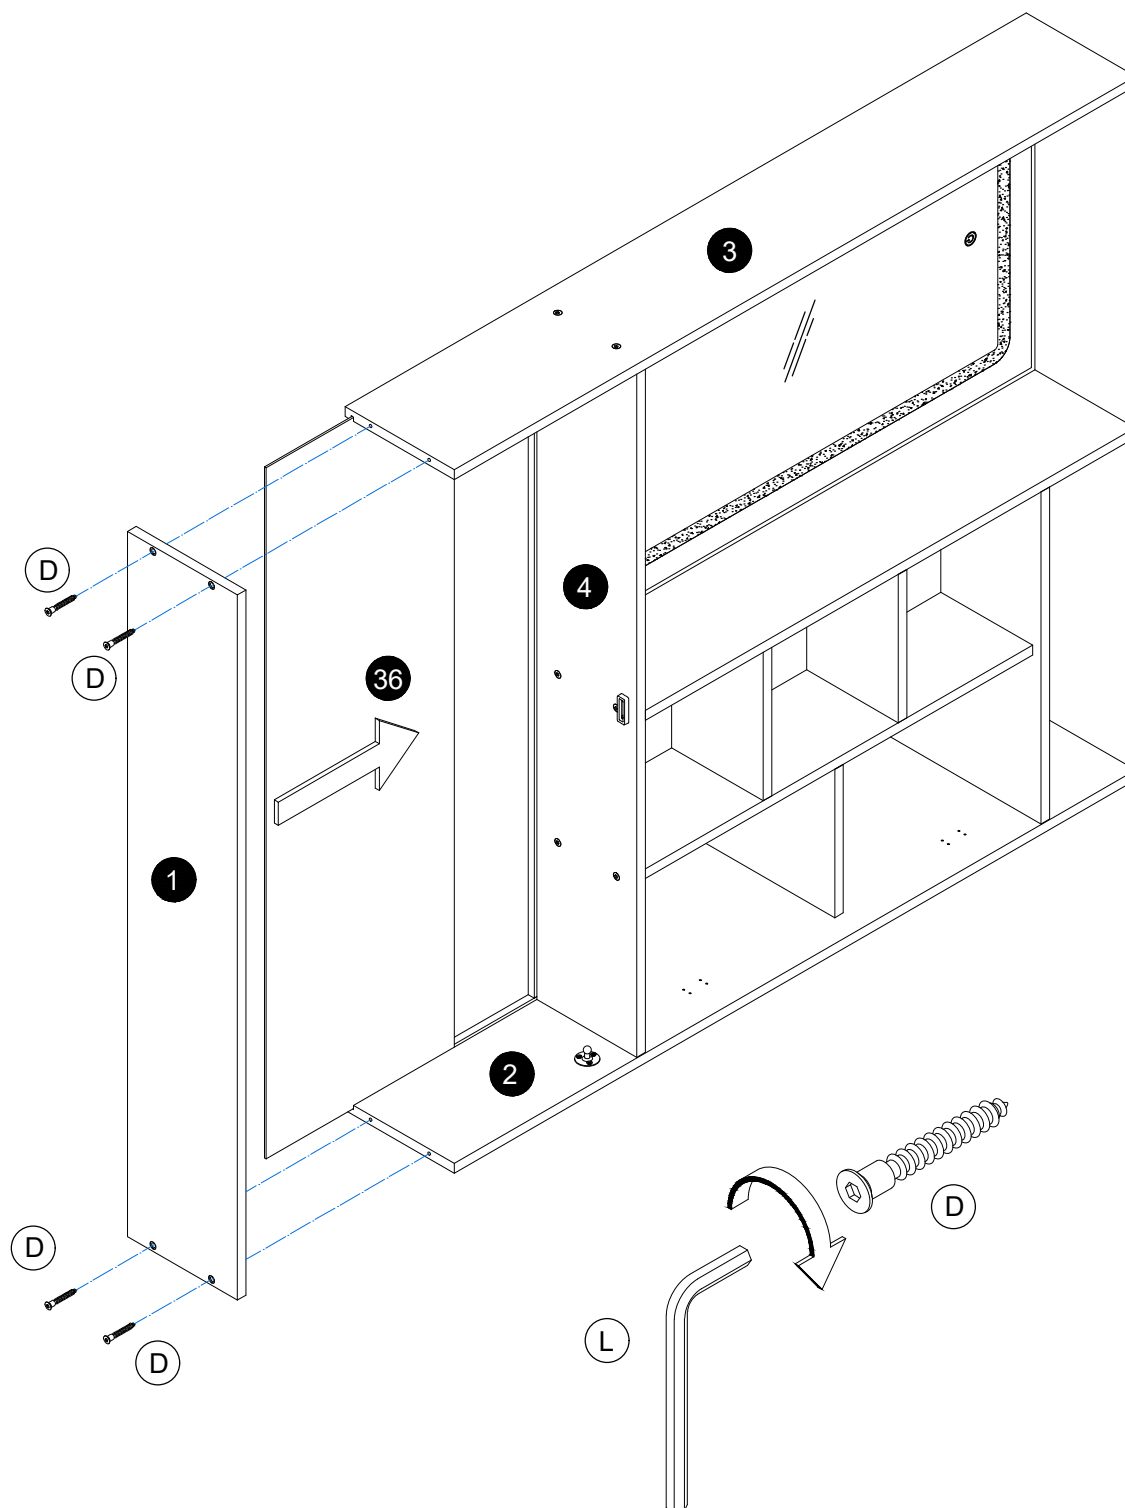
STEP12



D. x4PCS

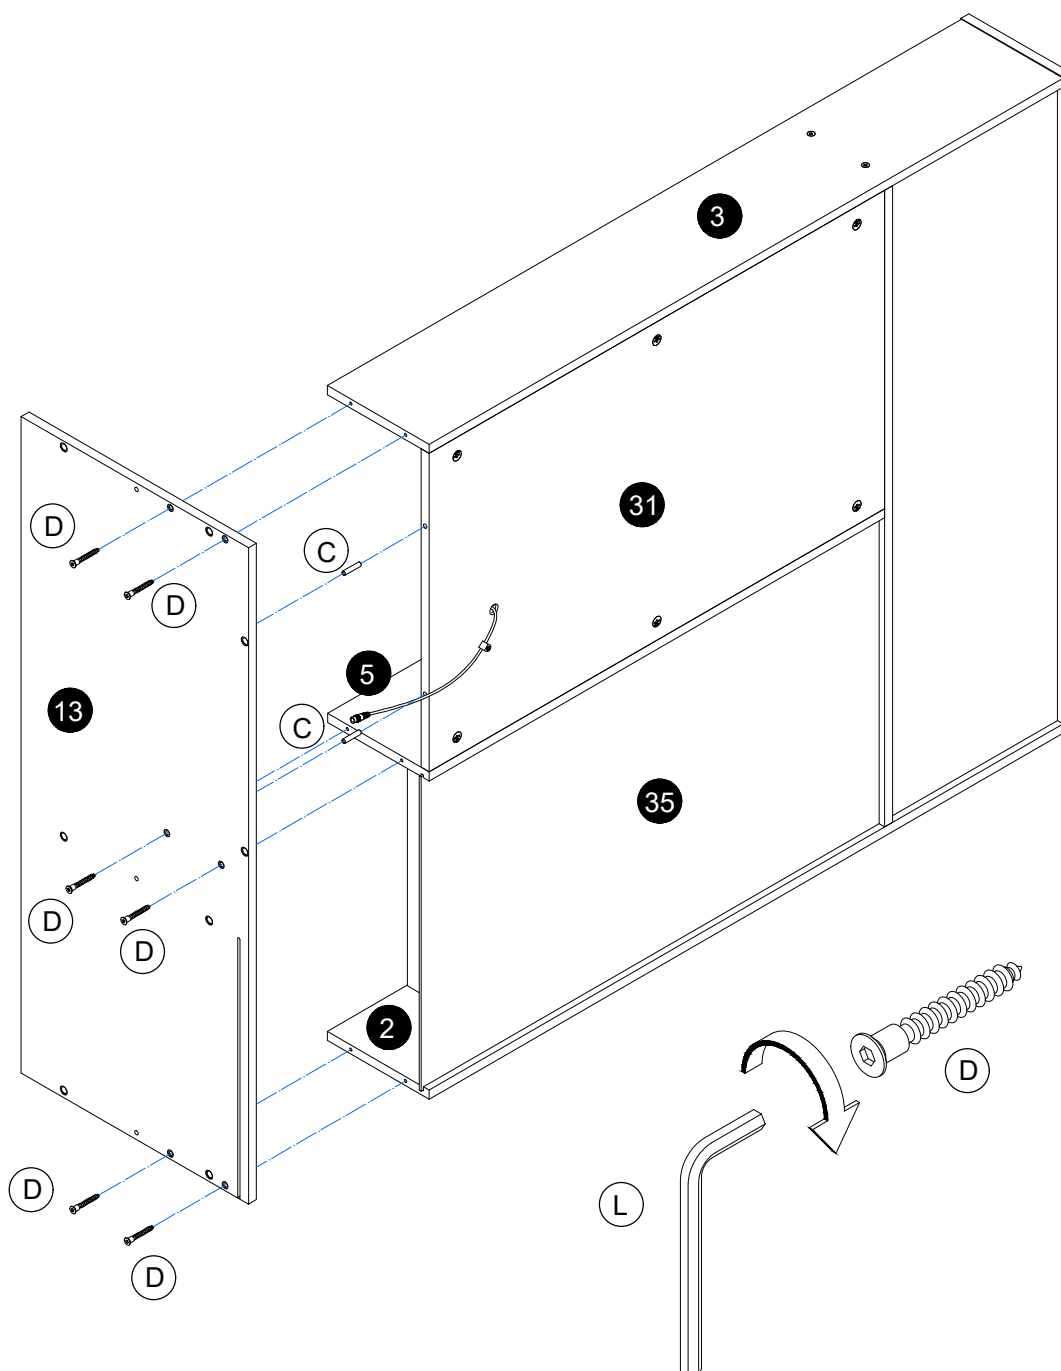INSTALLATION INSTRUCTION







STEP13




C. x2PCS

D. x6PCS

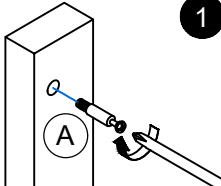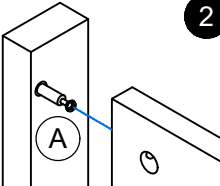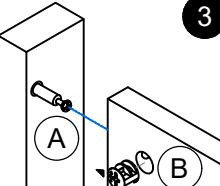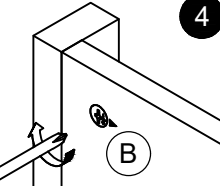INSTALLATION INSTRUCTION

<p>HOW TO</p>  <p>Cam lock</p>  <p>Cam bolt</p>	<p>1</p>  <p>1. Screw Cam Bolt into panel</p>	<p>2</p>  <p>2. Insert Cam Bolt into bolt hole of joining panel.</p>	<p>3</p>  <p>3. Insert Cam Lock with arrow facing bolt.</p>	<p>4</p>  <p>4. Gently turn Cam Lock 180° clockwise to lock into position.</p>
---	---	--	--	--

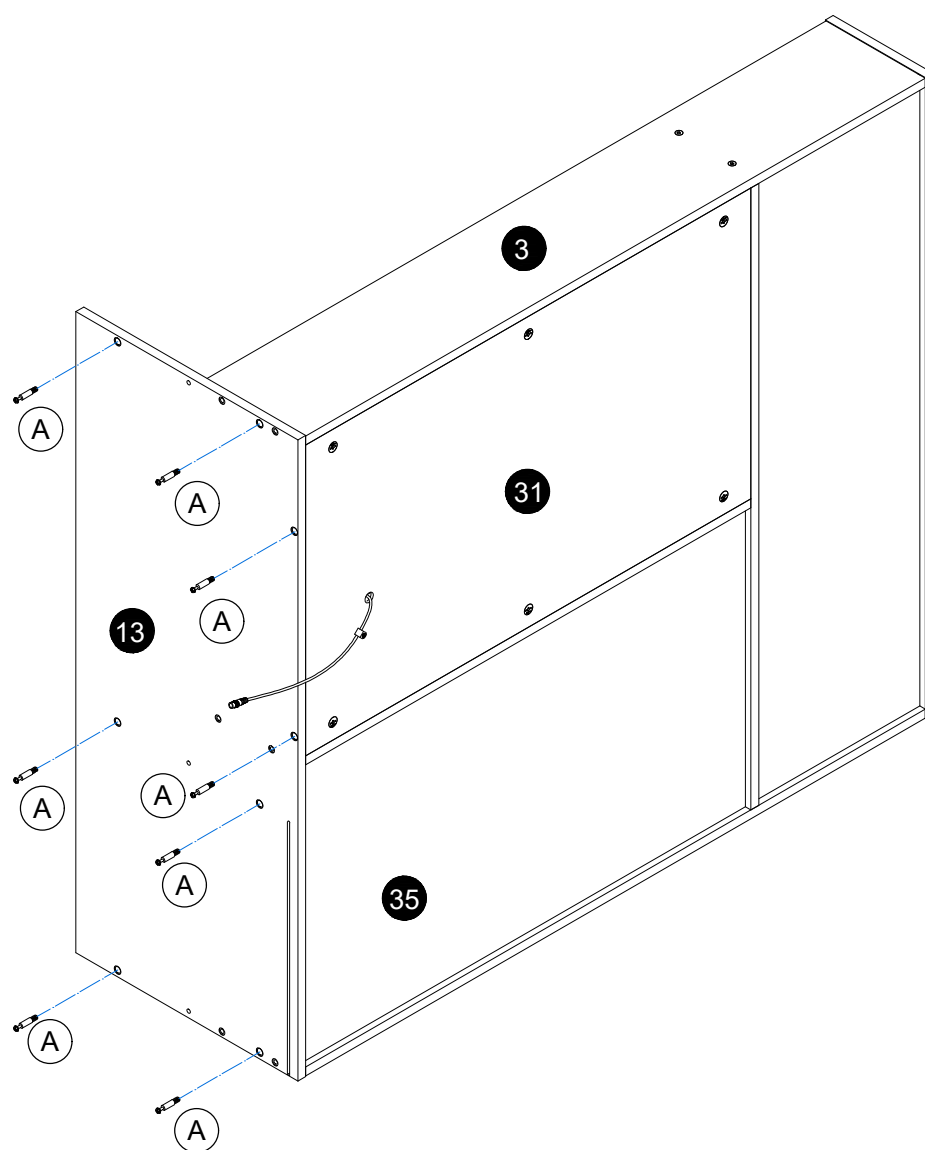
STEP14



A. x8PCS


INSTALLATION INSTRUCTION

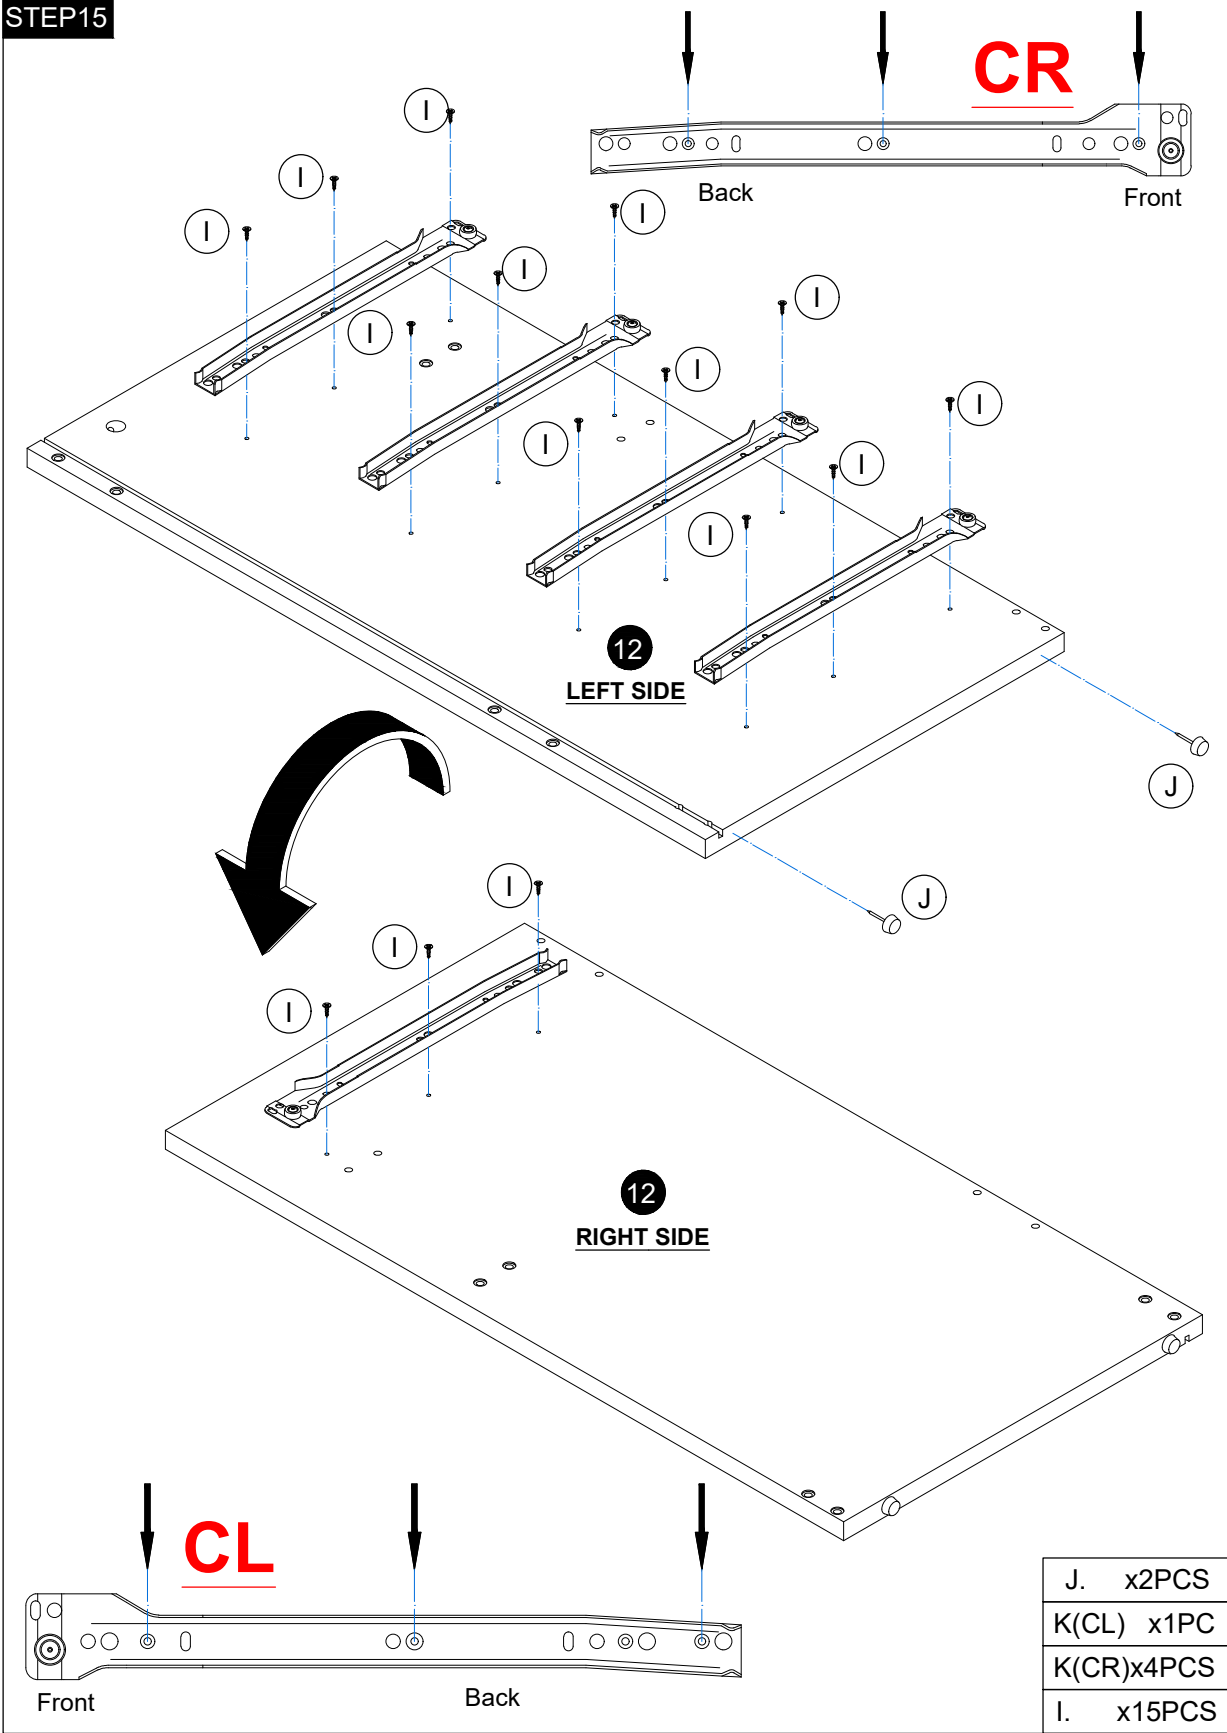STEP15




INSTALLATION INSTRUCTION

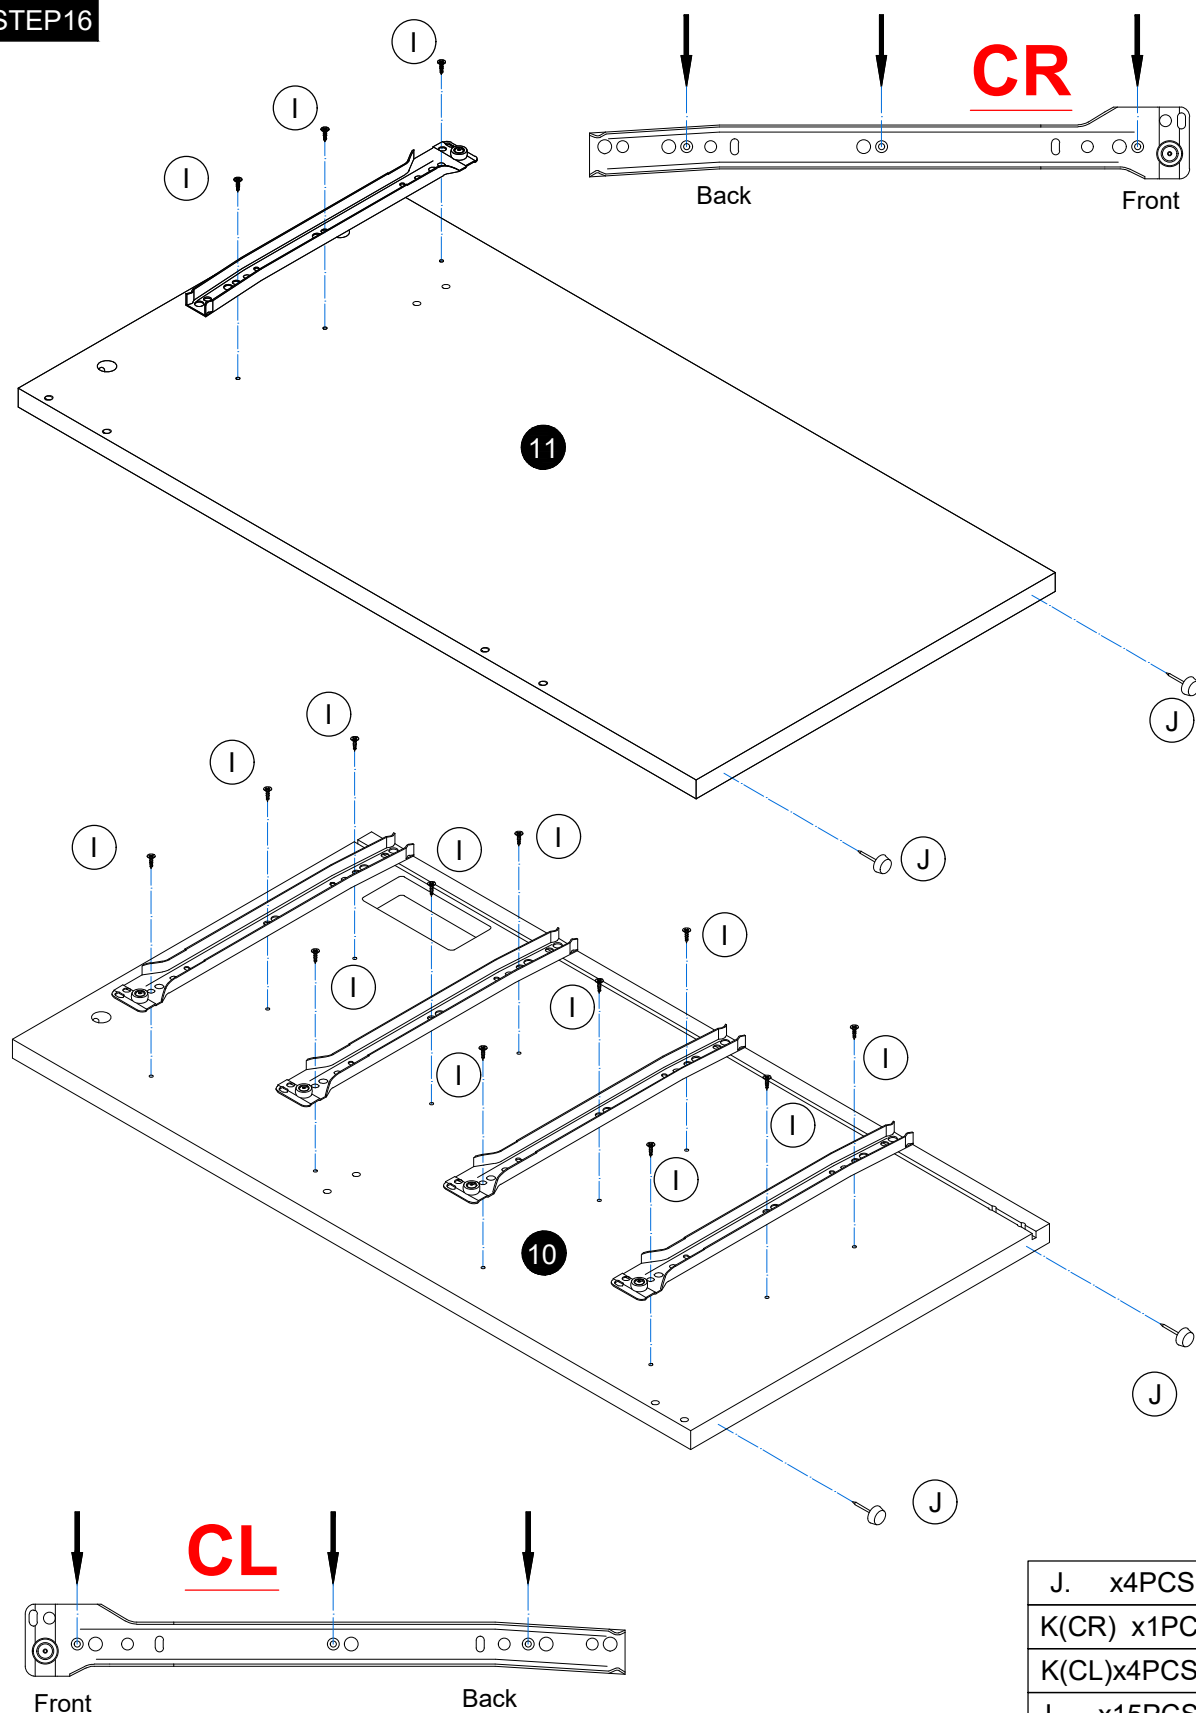STEP16




INSTALLATION INSTRUCTION

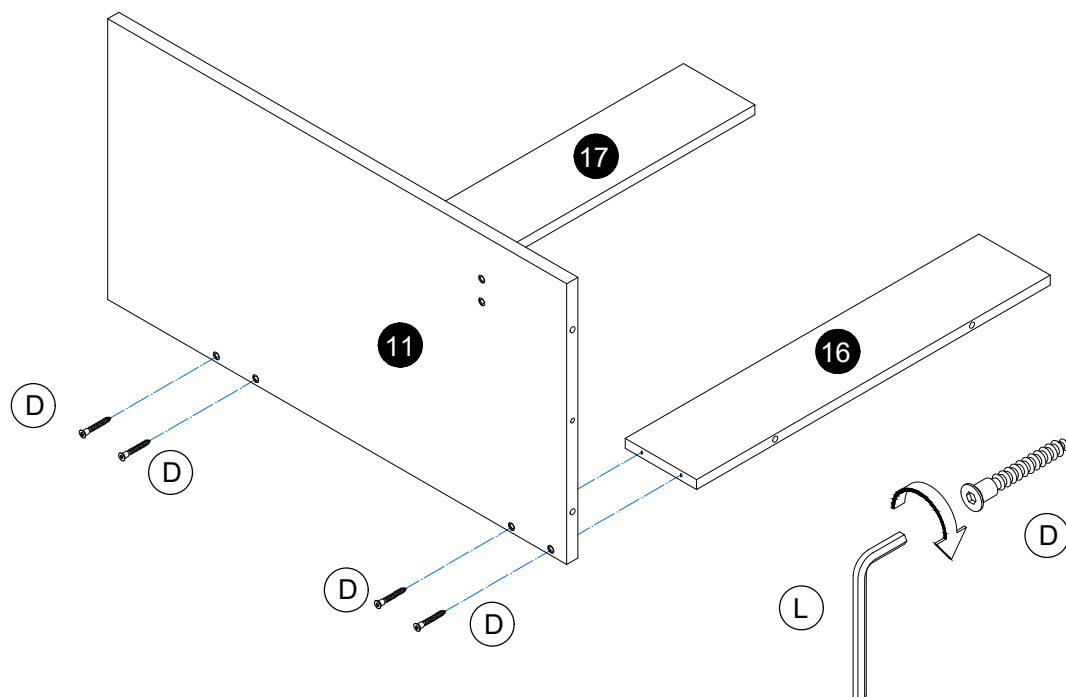STEP17



D. x4PCS

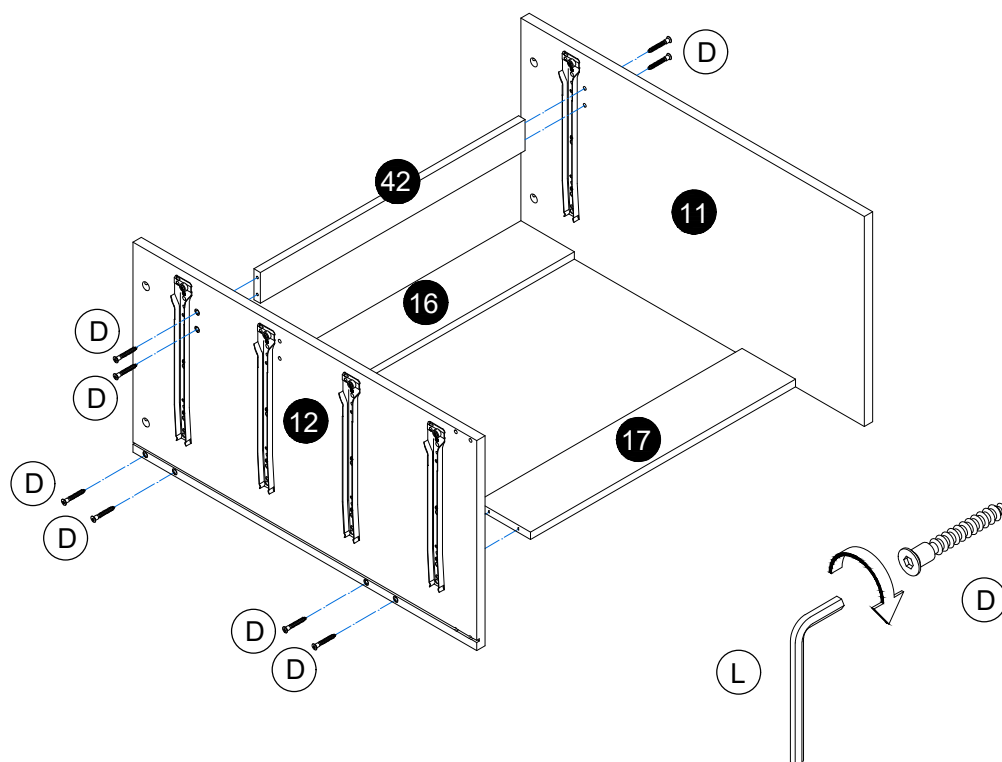
STEP18



D. x8PCS


INSTALLATION INSTRUCTION

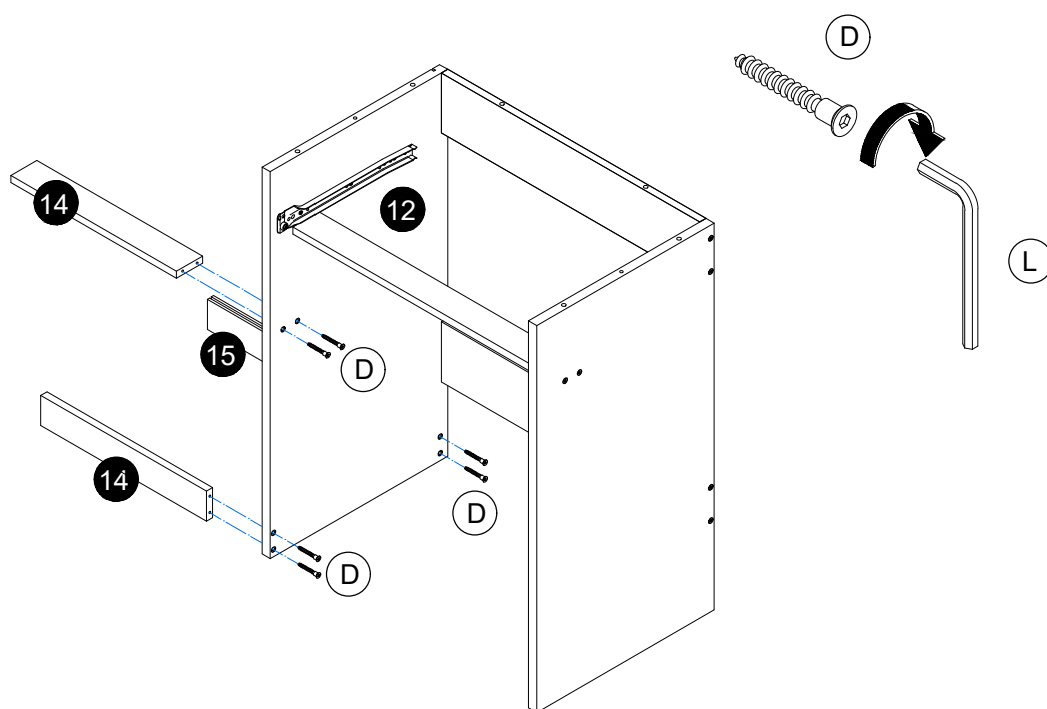STEP19



D. x6PCS

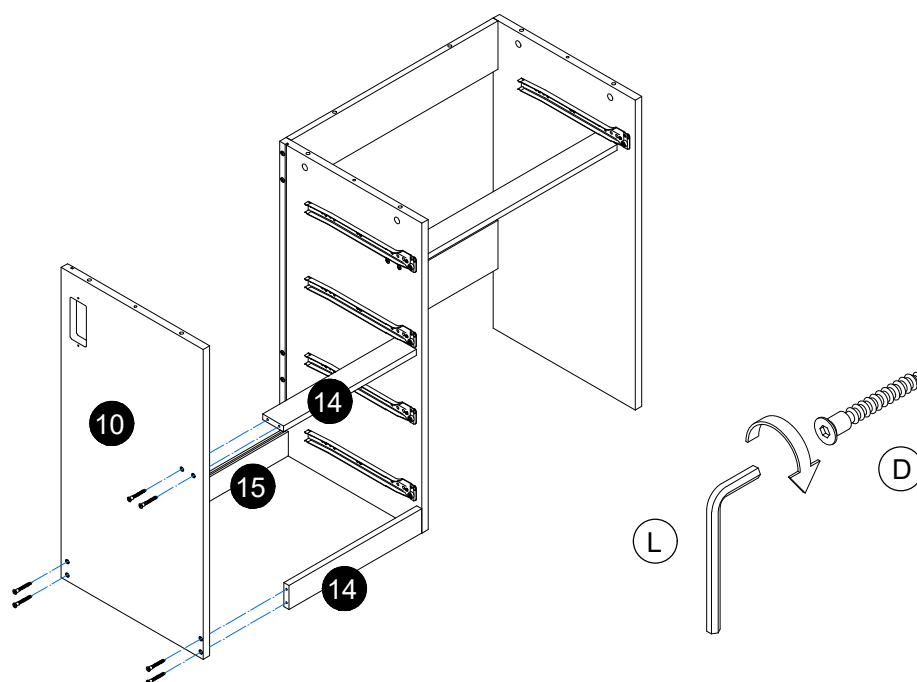
STEP20



D. x6PCS






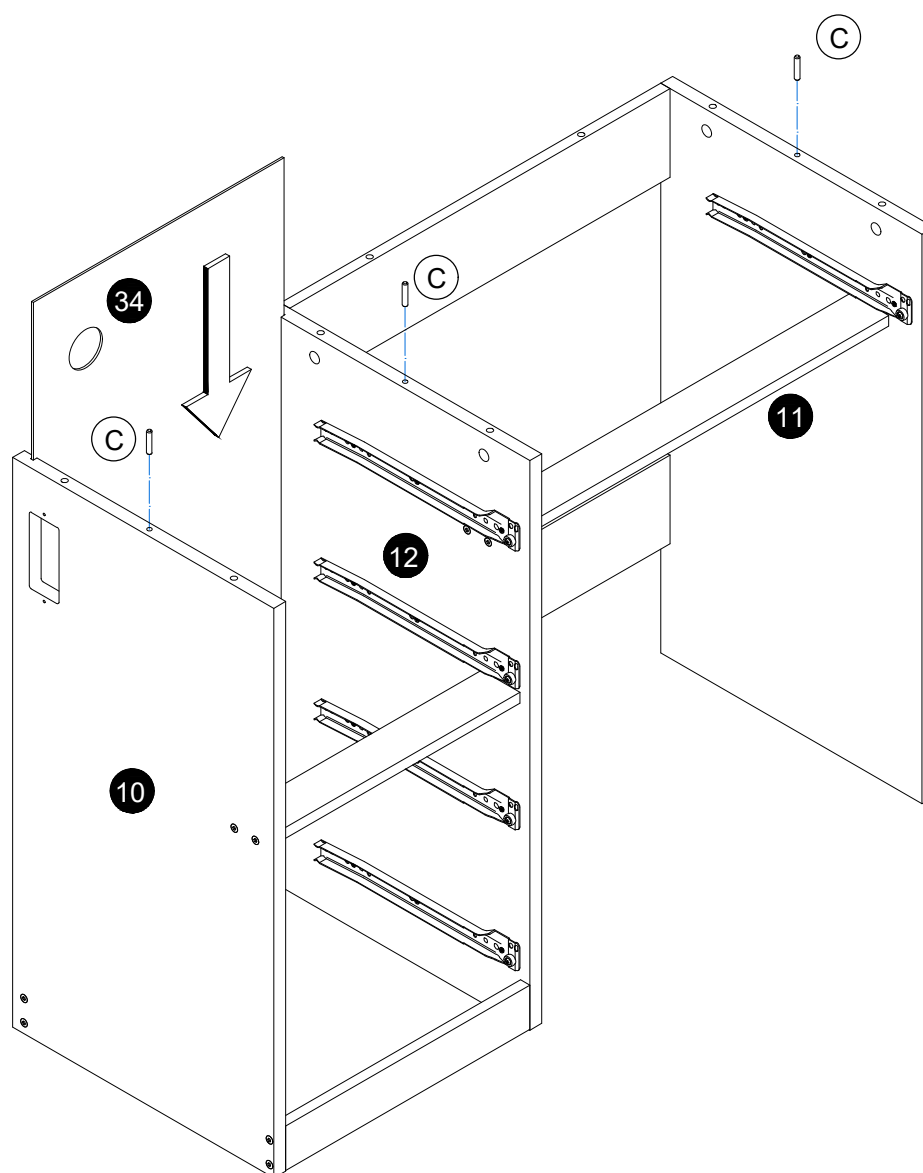
INSTALLATION INSTRUCTION

STEP21




C. x3PCS

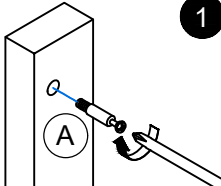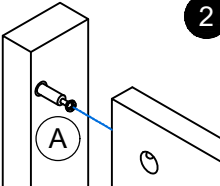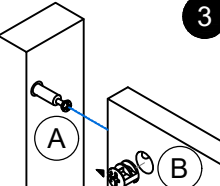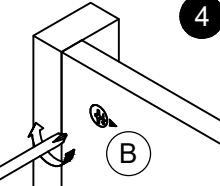INSTALLATION INSTRUCTION

<p>HOW TO</p>  <p>Cam lock</p>  <p>Cam bolt</p>	 <p>1. Screw Cam Bolt into panel</p>	 <p>2. Insert Cam Bolt into bolt hole of joining panel.</p>	 <p>3. Insert Cam Lock with arrow facing bolt.</p>	 <p>4. Gently turn Cam Lock 180° clockwise to lock into position.</p>
---	---	--	--	--

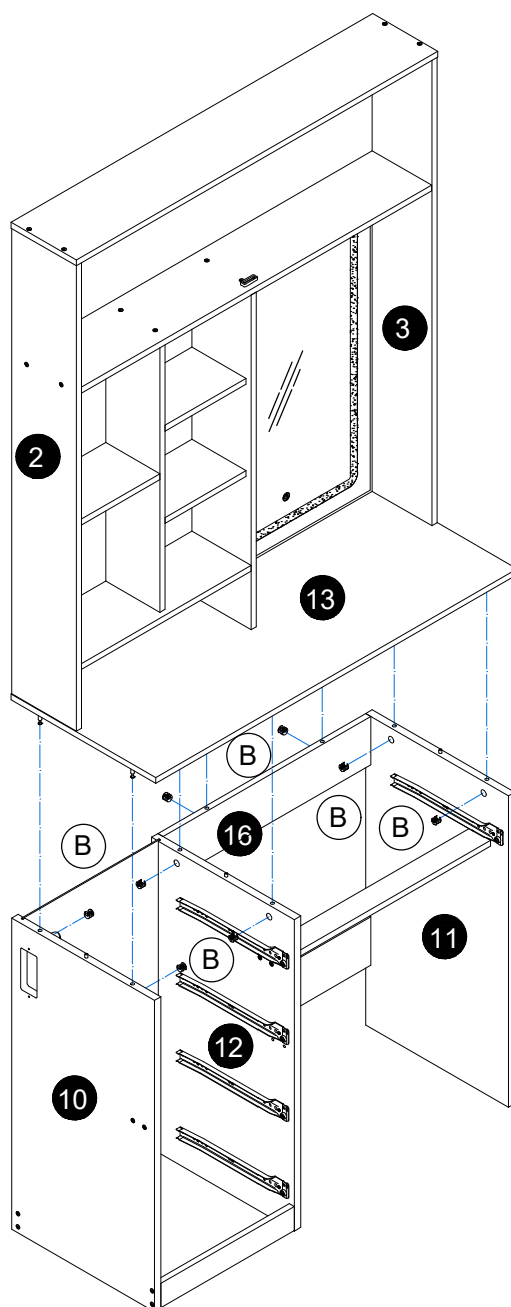
STEP22



B. x8PCS

INSTALLATION INSTRUCTION

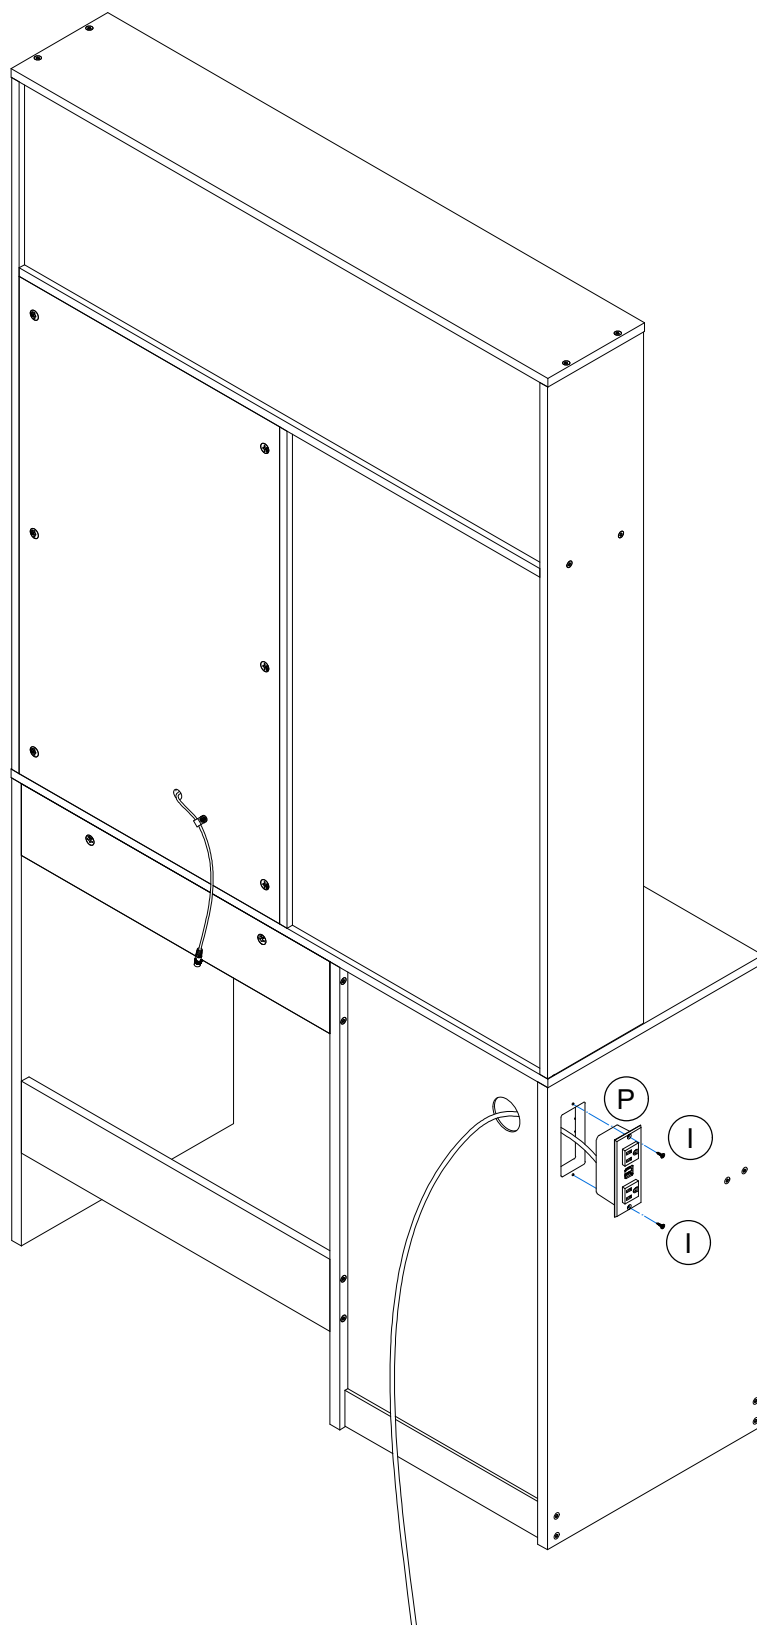STEP23



I. x2PCS
P. x1PC

INSTALLATION INSTRUCTION

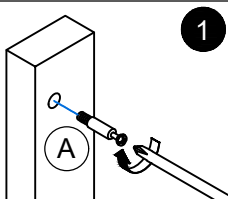
HOW TO



Cam lock




Cam bolt




1

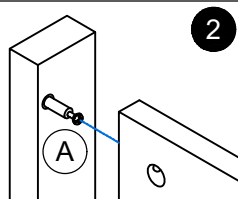1. Screw Cam Bolt into panel




2

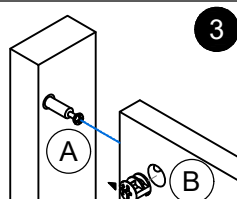2. Insert Cam Bolt into bolt hole of joining panel.



3

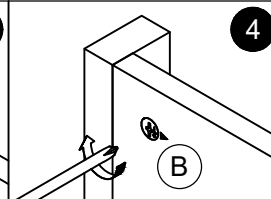
3. Insert Cam Lock with arrow facing bolt.



4

4. Gently turn Cam Lock 180° clockwise to lock into position.

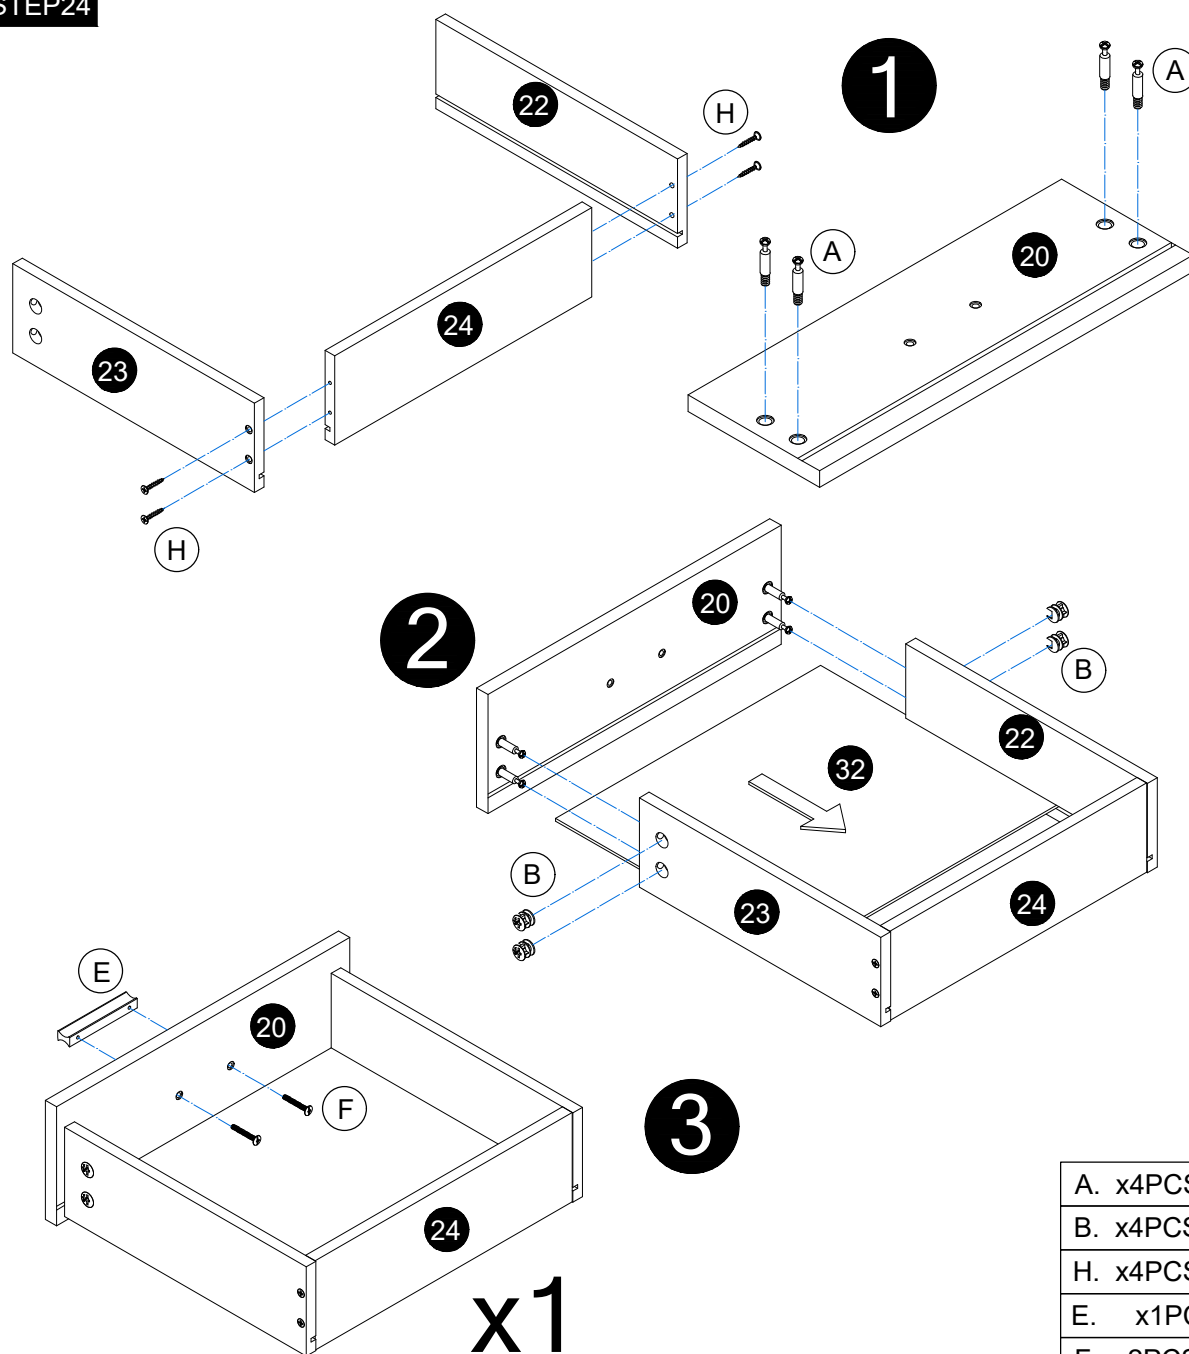STEP24



A. x4PCS



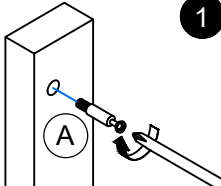
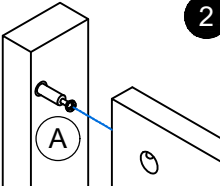
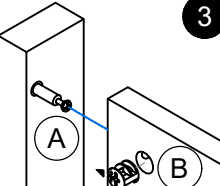
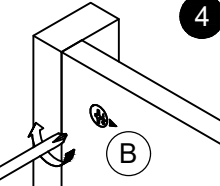
B. x4PCS

H. x4PCS


E. x1PC

F. x2PCS







INSTALLATION INSTRUCTION

<p>HOW TO</p>  <p>Cam lock</p>  <p>Cam bolt</p>	<p>1</p>  <p>1. Screw Cam Bolt into panel</p>	<p>2</p>  <p>2. Insert Cam Bolt into bolt hole of joining panel.</p>	<p>3</p>  <p>3. Insert Cam Lock with arrow facing bolt.</p>	<p>4</p>  <p>4. Gently turn Cam Lock 180° clockwise to lock into position.</p>
---	---	--	--	--

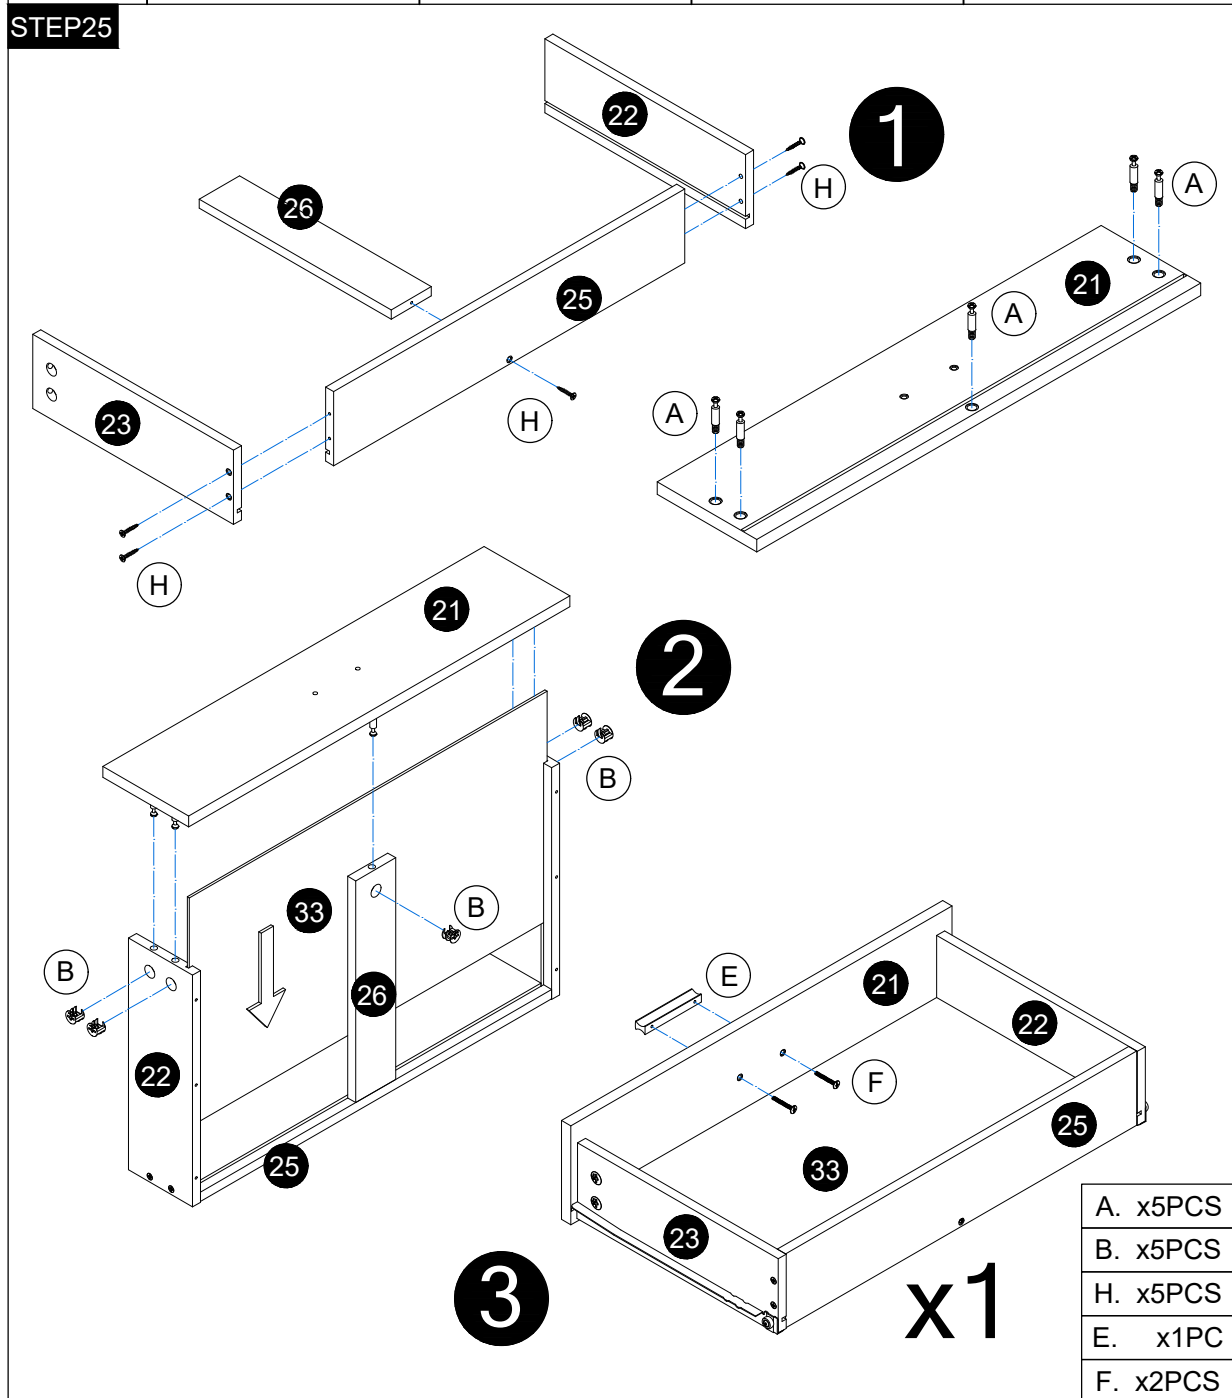
STEP25



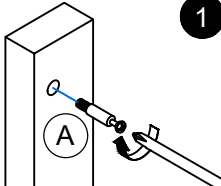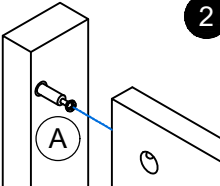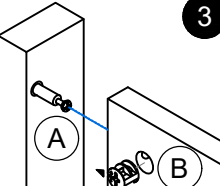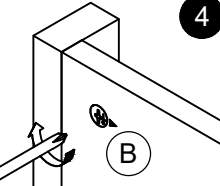INSTALLATION INSTRUCTION


<p>HOW TO</p>  <p>Cam lock</p>  <p>Cam bolt</p>	<p>1</p>  <p>1. Screw Cam Bolt into panel</p>	<p>2</p>  <p>2. Insert Cam Bolt into bolt hole of joining panel.</p>	<p>3</p>  <p>3. Insert Cam Lock with arrow facing bolt.</p>	<p>4</p>  <p>4. Gently turn Cam Lock 180° clockwise to lock into position.</p>
---	---	--	--	--

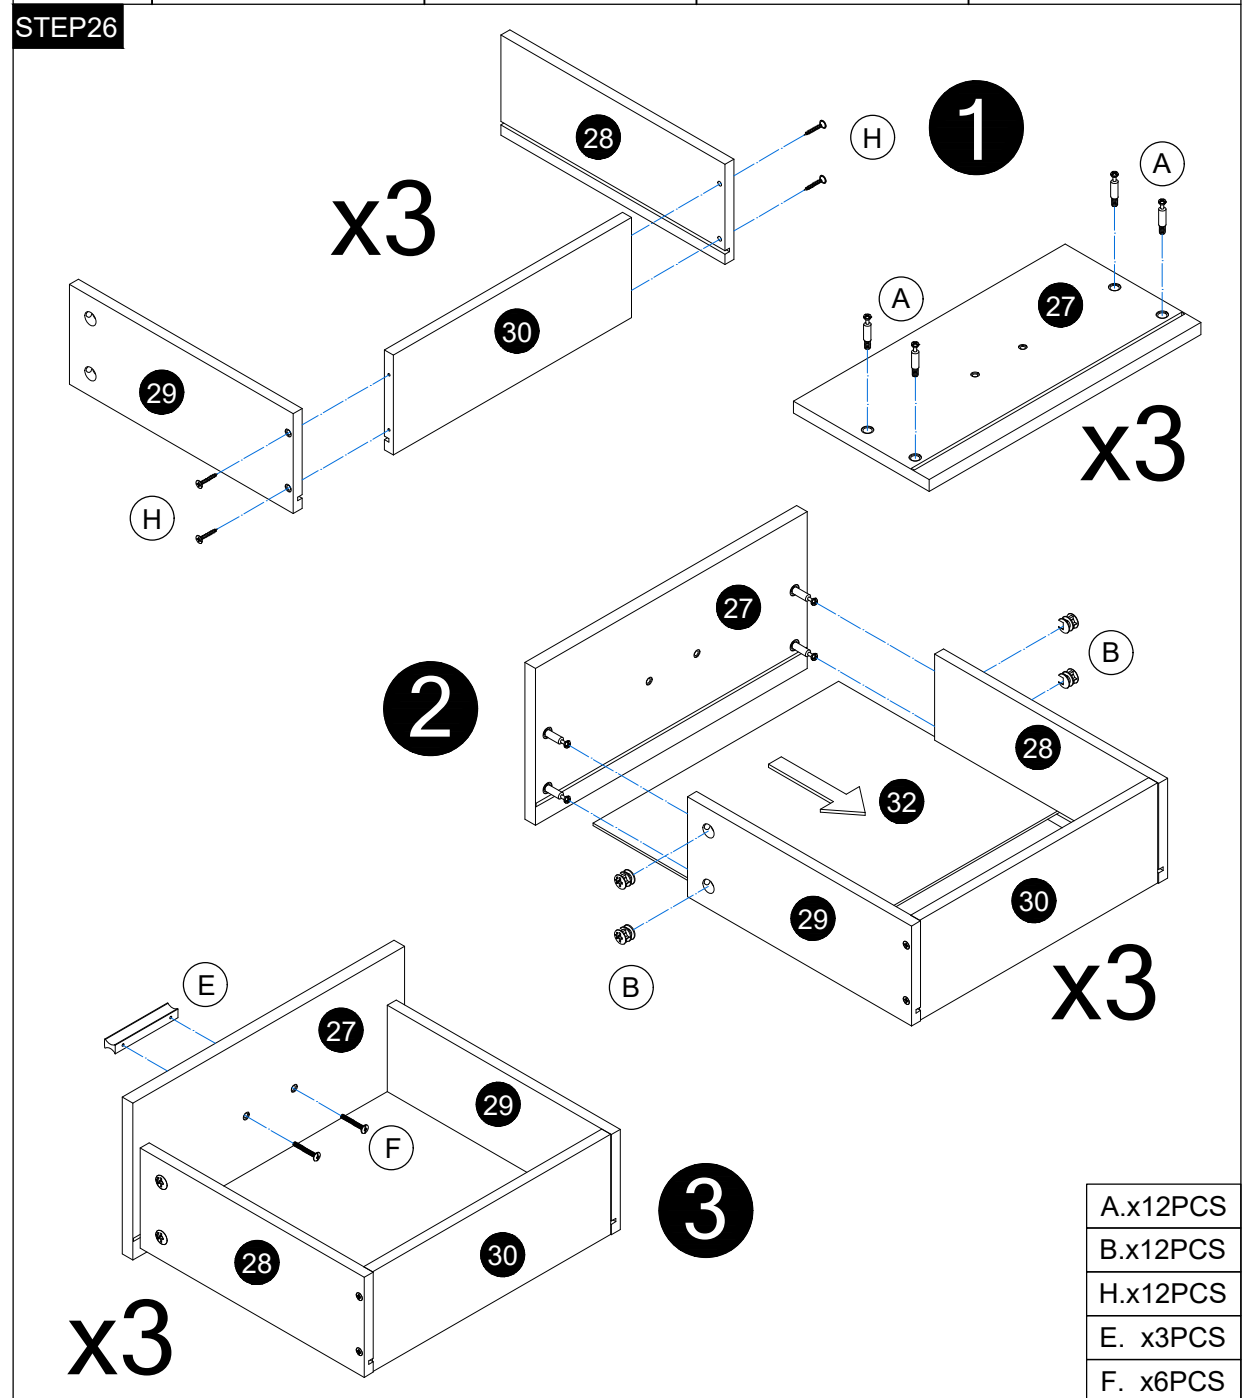STEP26



INSTALLATION INSTRUCTION

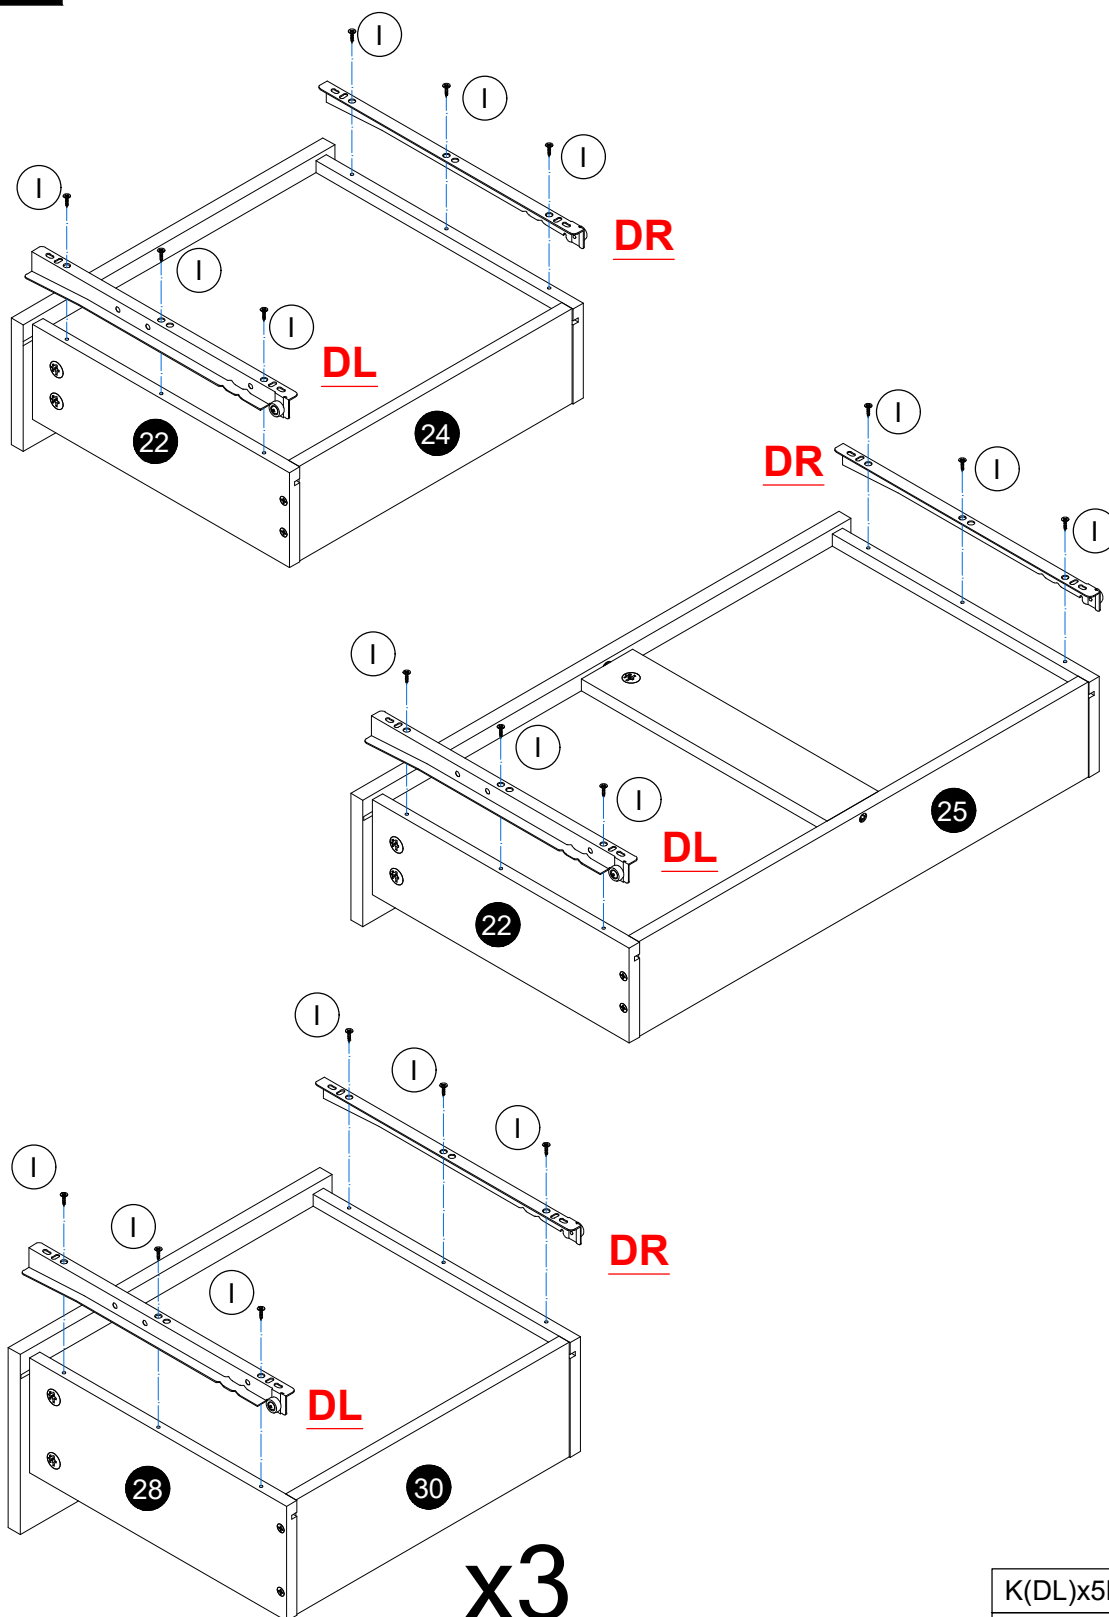
STEP27



K(DL)x5PCS
K(DR)x5PCS
I. x30PCS


INSTALLATION INSTRUCTION

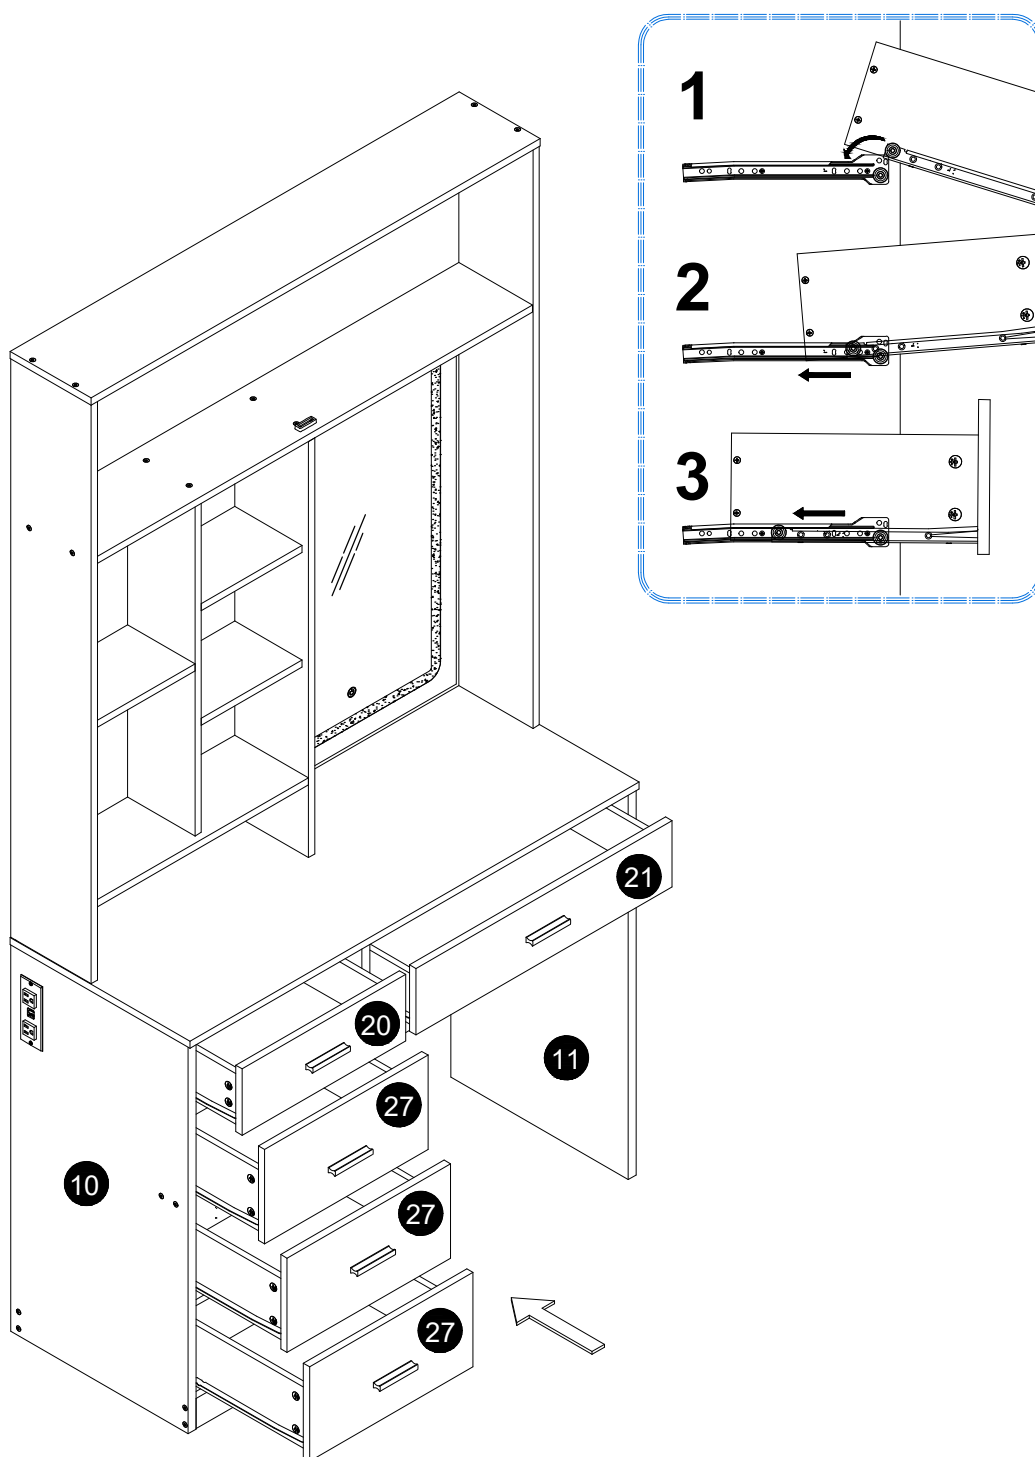STEP28



INSTALLATION INSTRUCTION


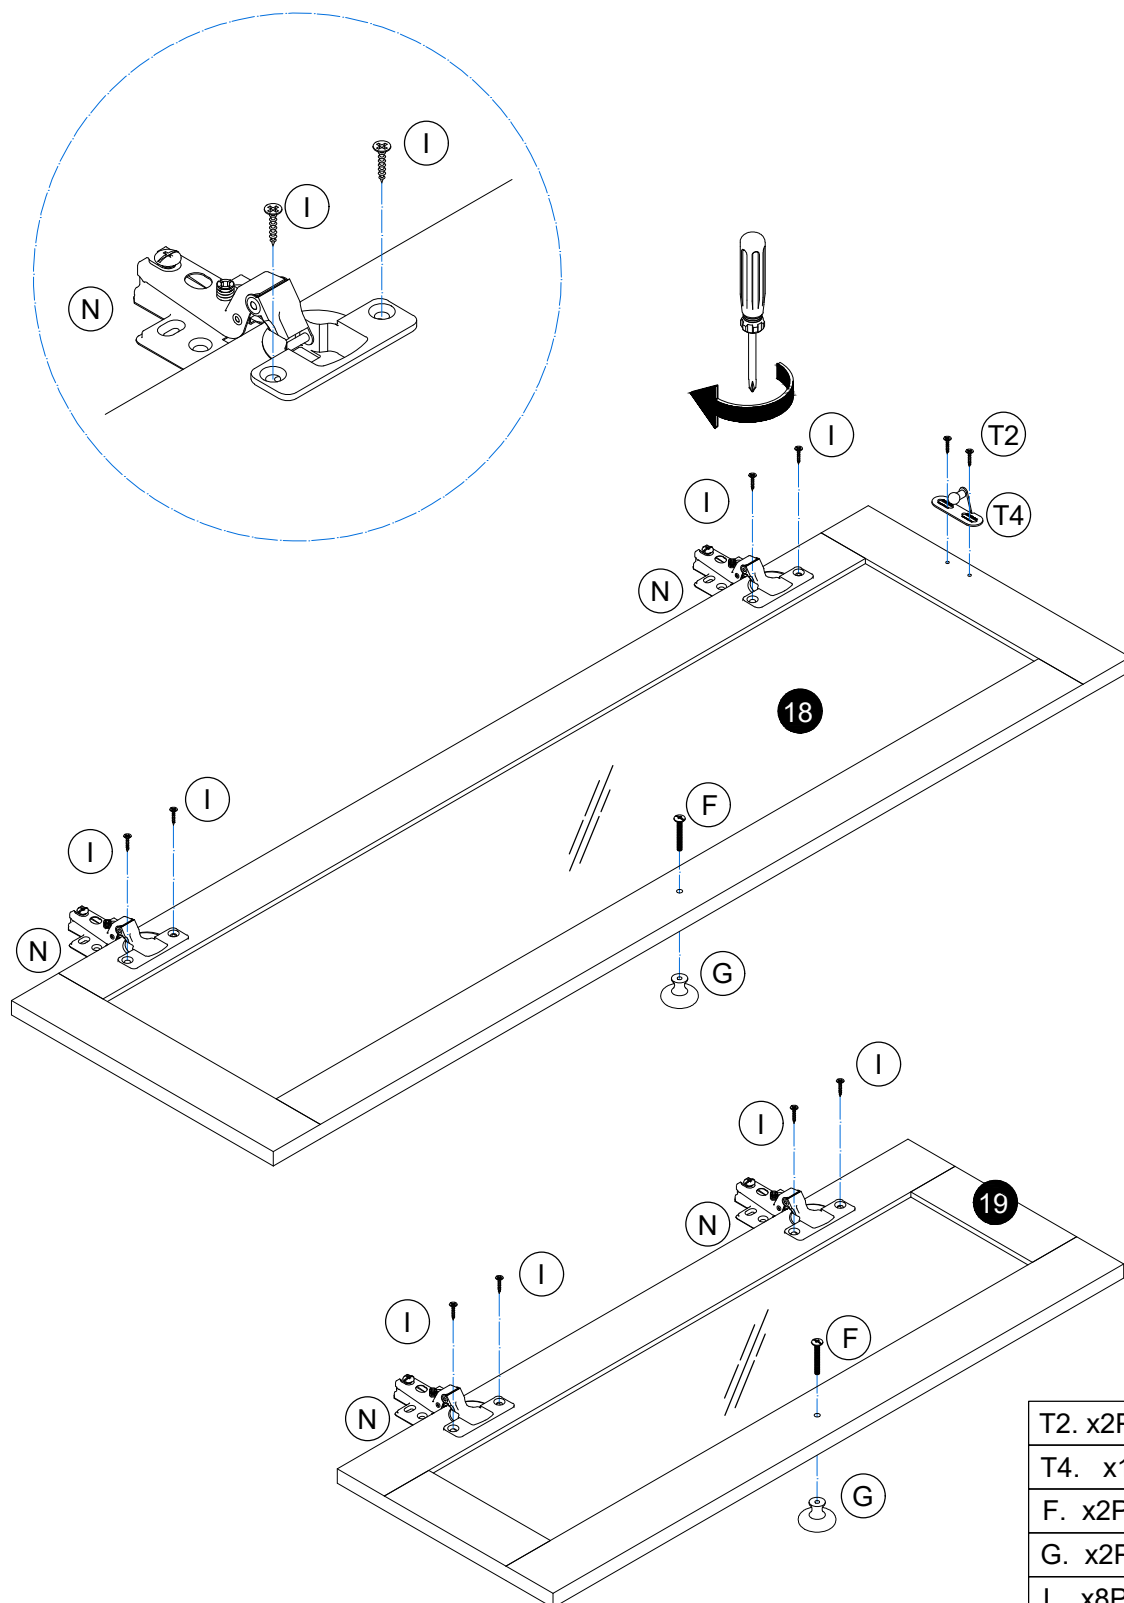
STEP29




T2. x2PCS
T4. x1PC
F. x2PCS
G. x2PCS
I. x8PCS
N. x4PCS

INSTALLATION INSTRUCTION

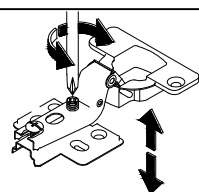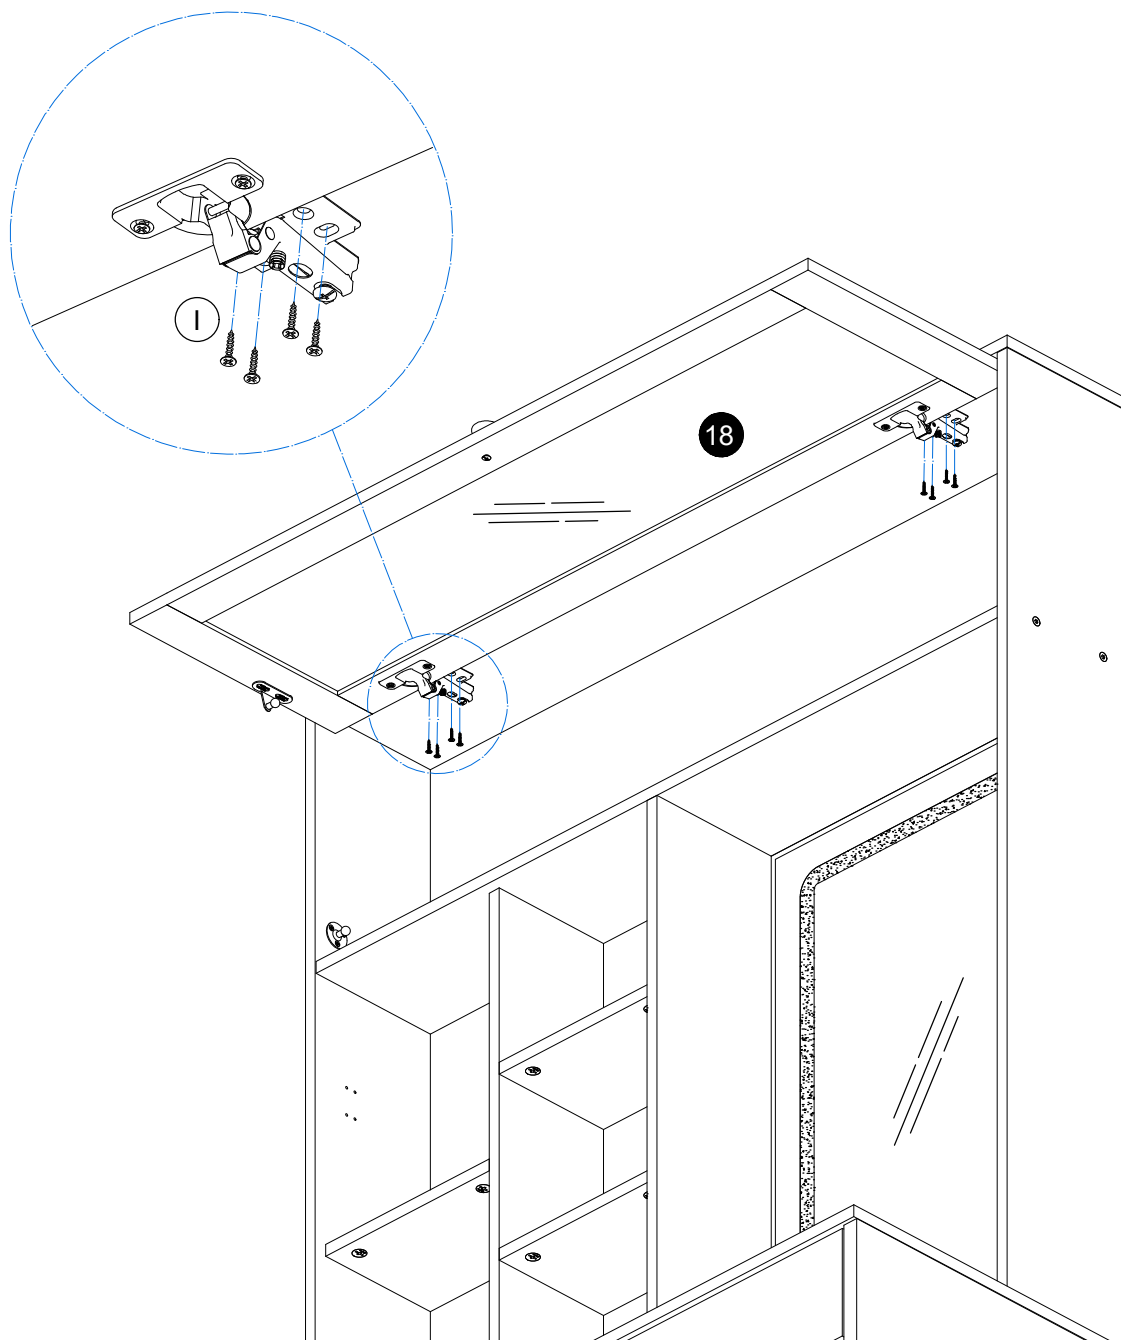STEP30



Adjust the
door left
and right

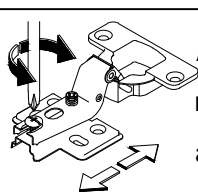


Adjust the door
running back
and forth




I. x8PCS

INSTALLATION INSTRUCTION

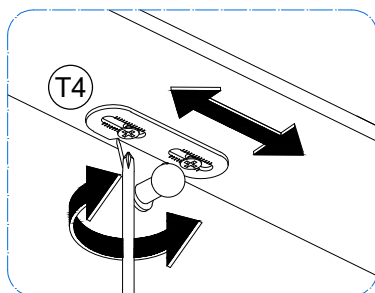STEP31



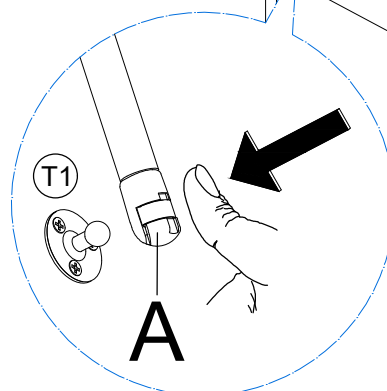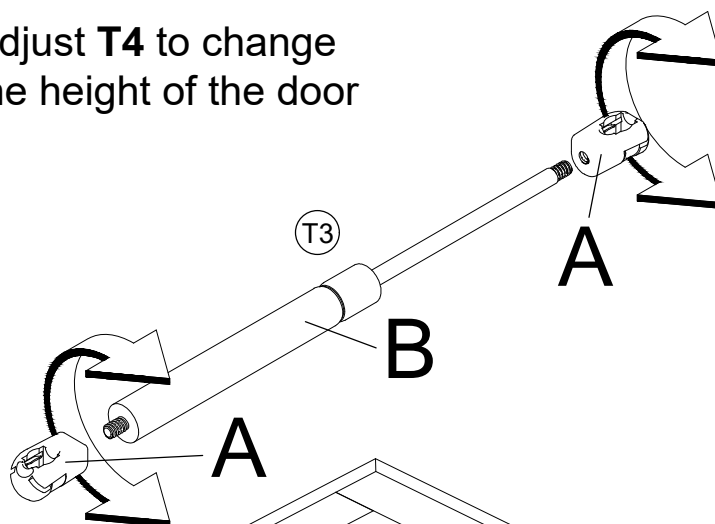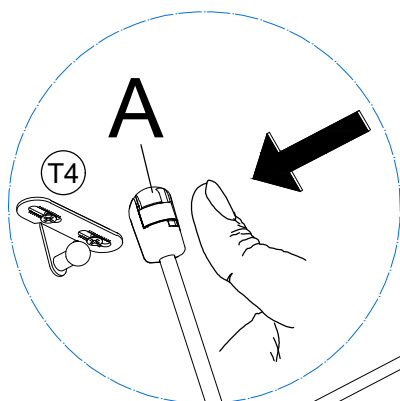Adjust **T4** to change the height of the door





Turn **A** to adjust the height of the door.


T3. x1PC

INSTALLATION INSTRUCTION

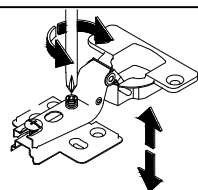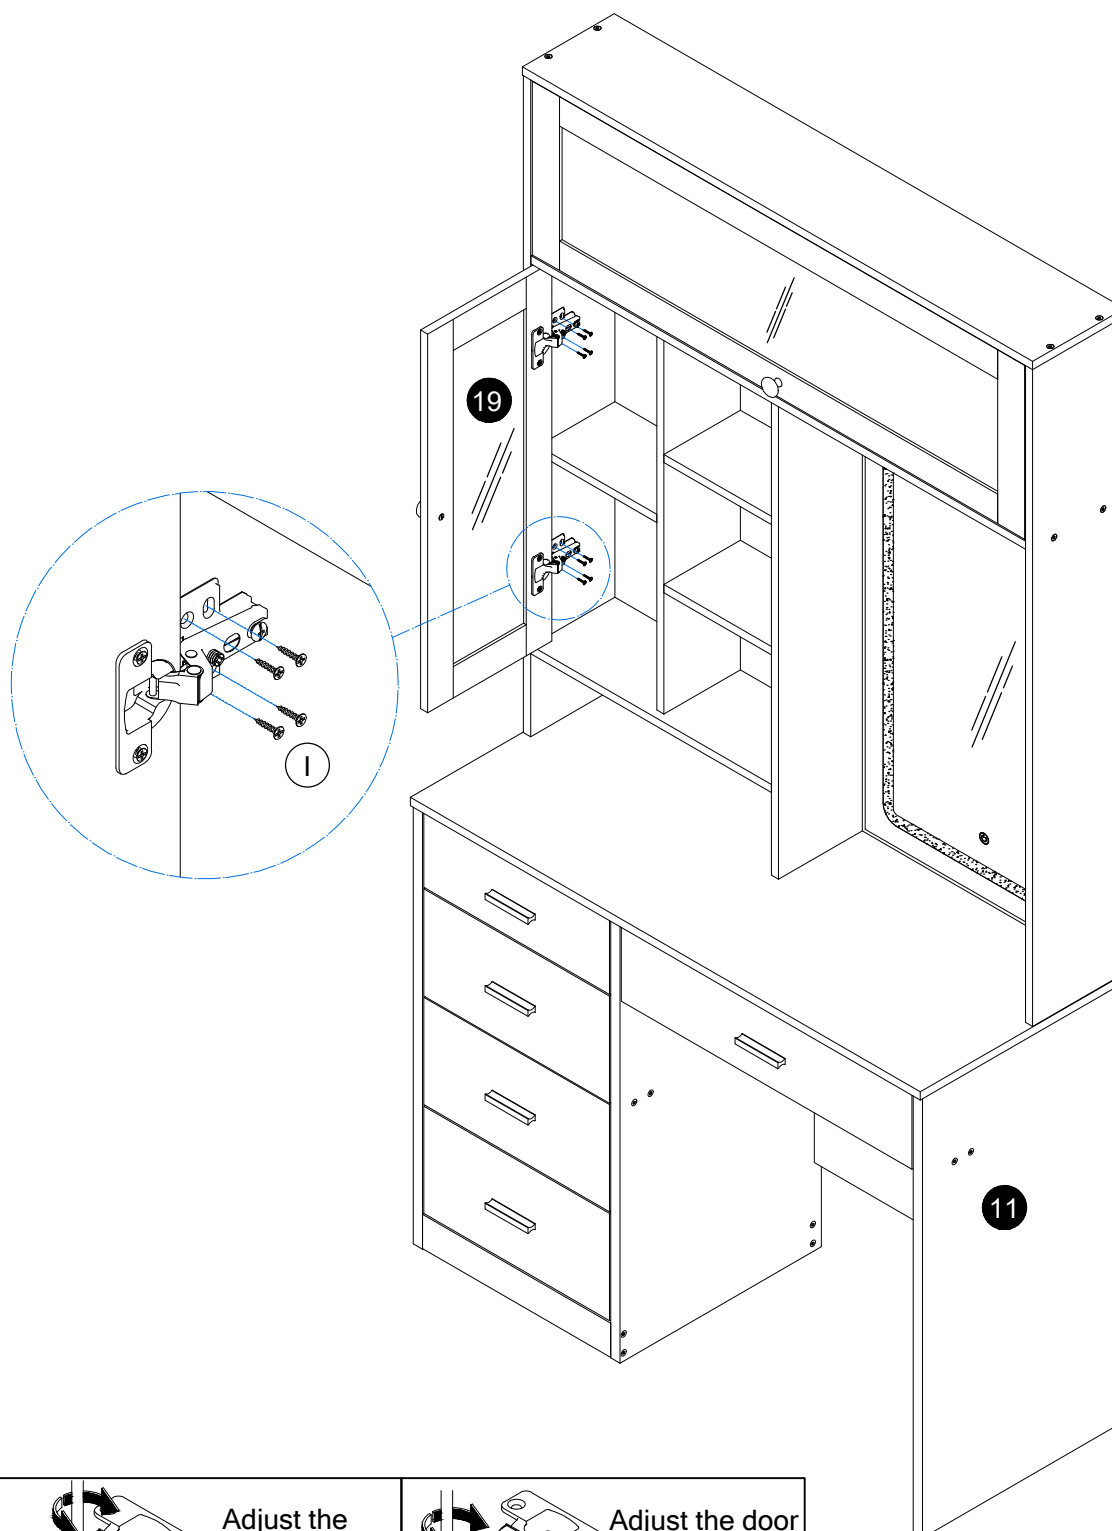STEP32



Adjust the
door left
and right

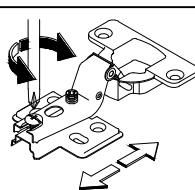


Adjust the door
running back
and forth

I. x8PCS

INSTALLATION INSTRUCTION

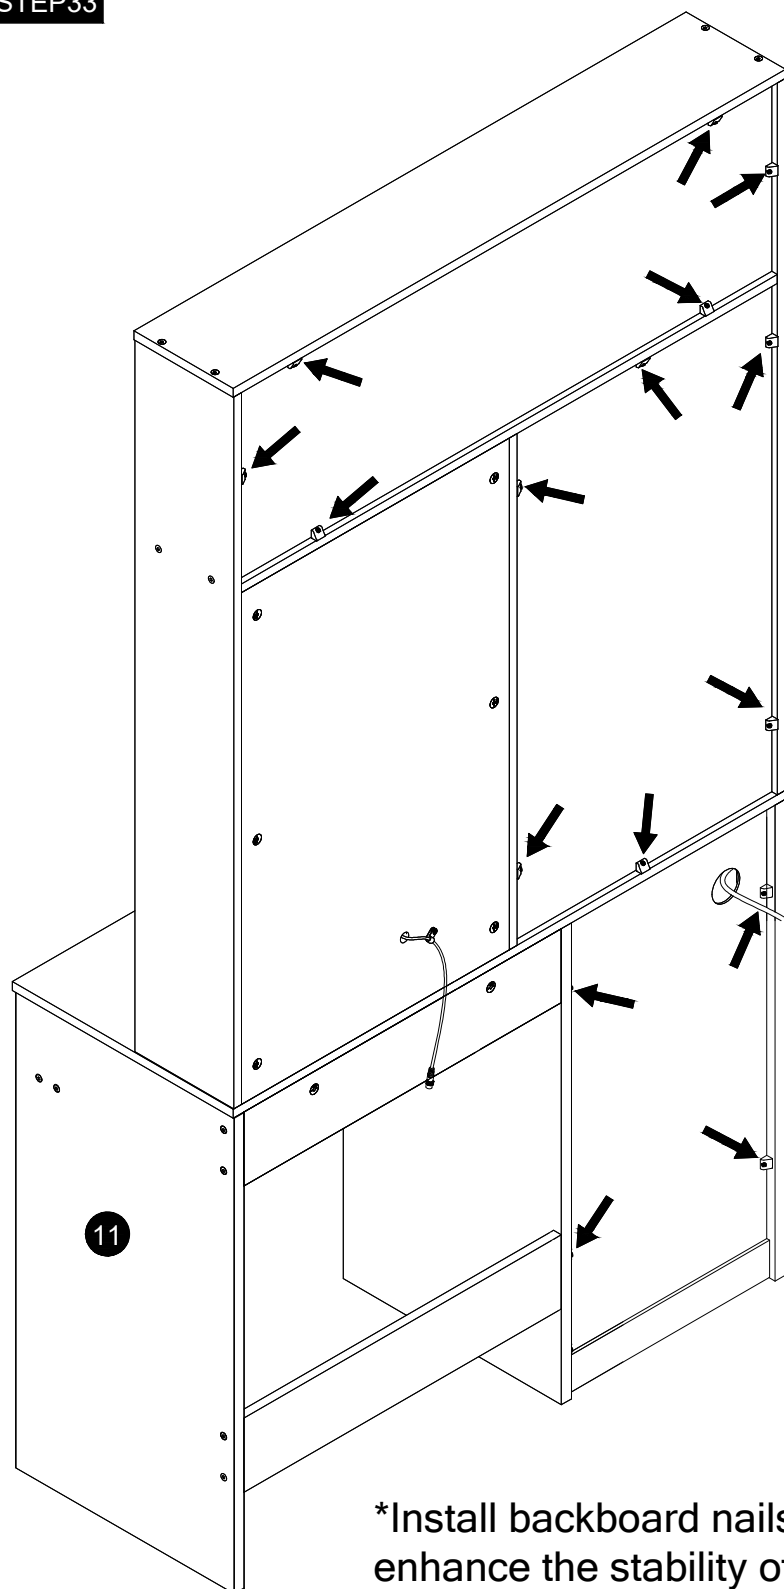STEP33




*Install backboard nails S can effectively enhance the stability of the product and extend the life span of the product.

S. x16PCS

INSTALLATION INSTRUCTION

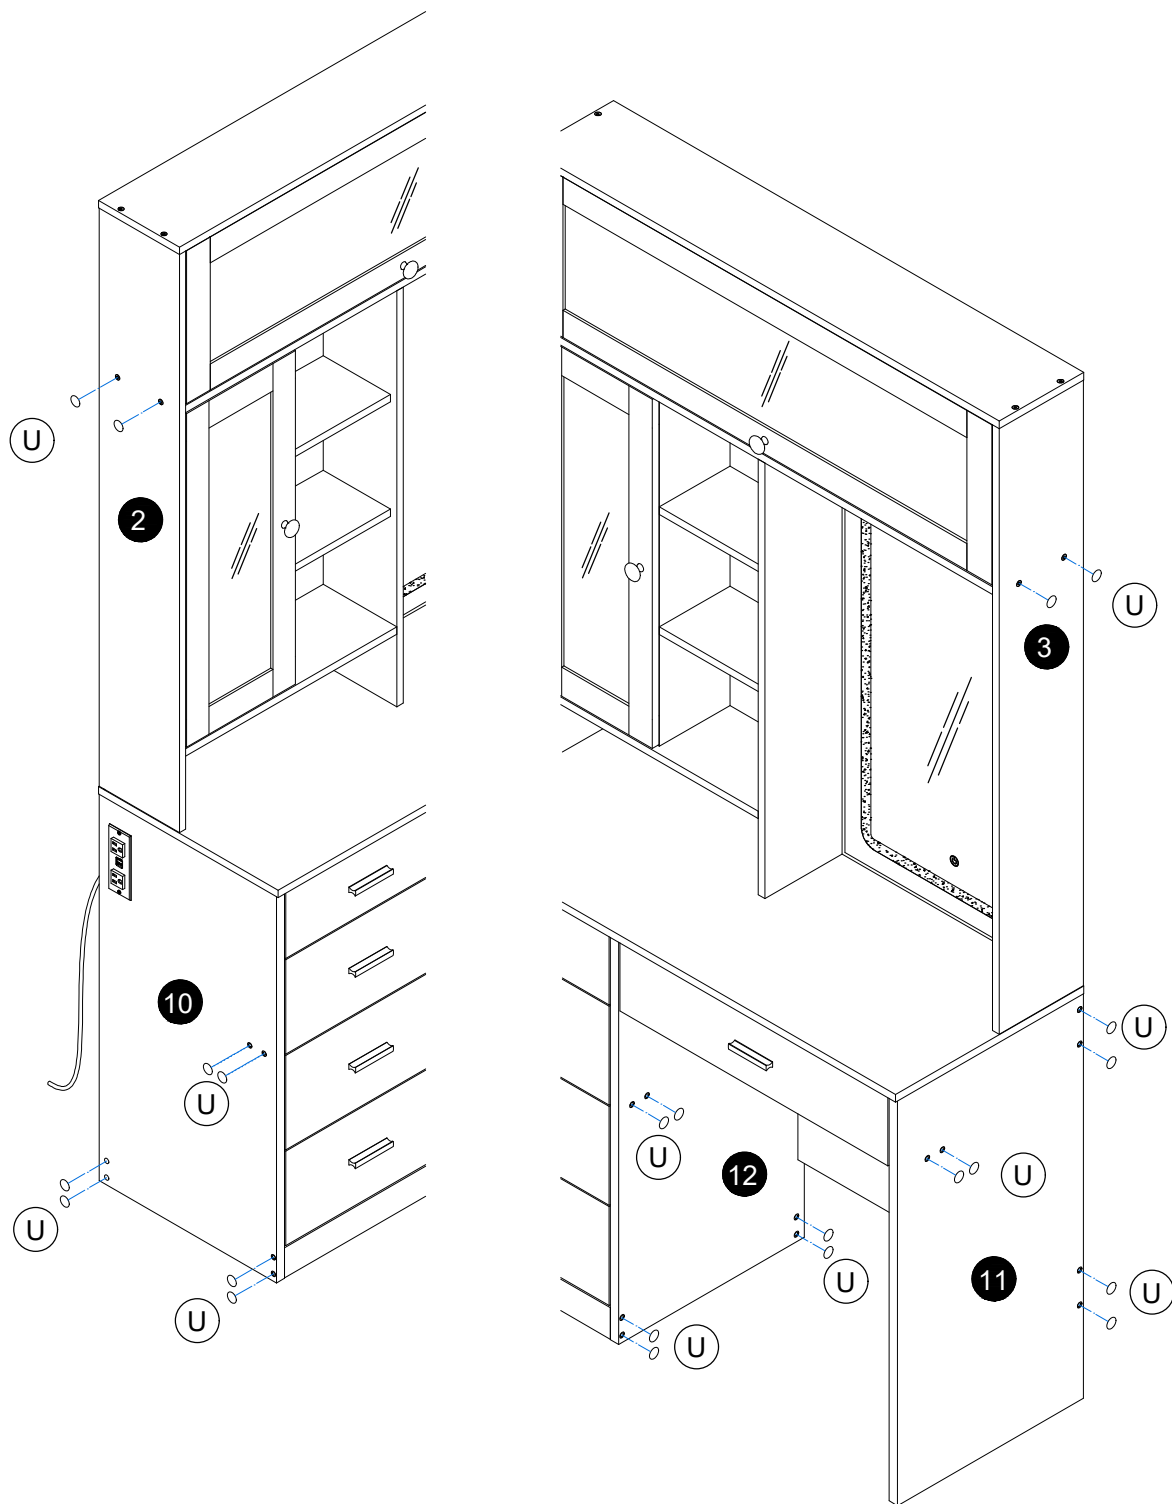
STEP34



U. x22PCS

INSTALLATION INSTRUCTION

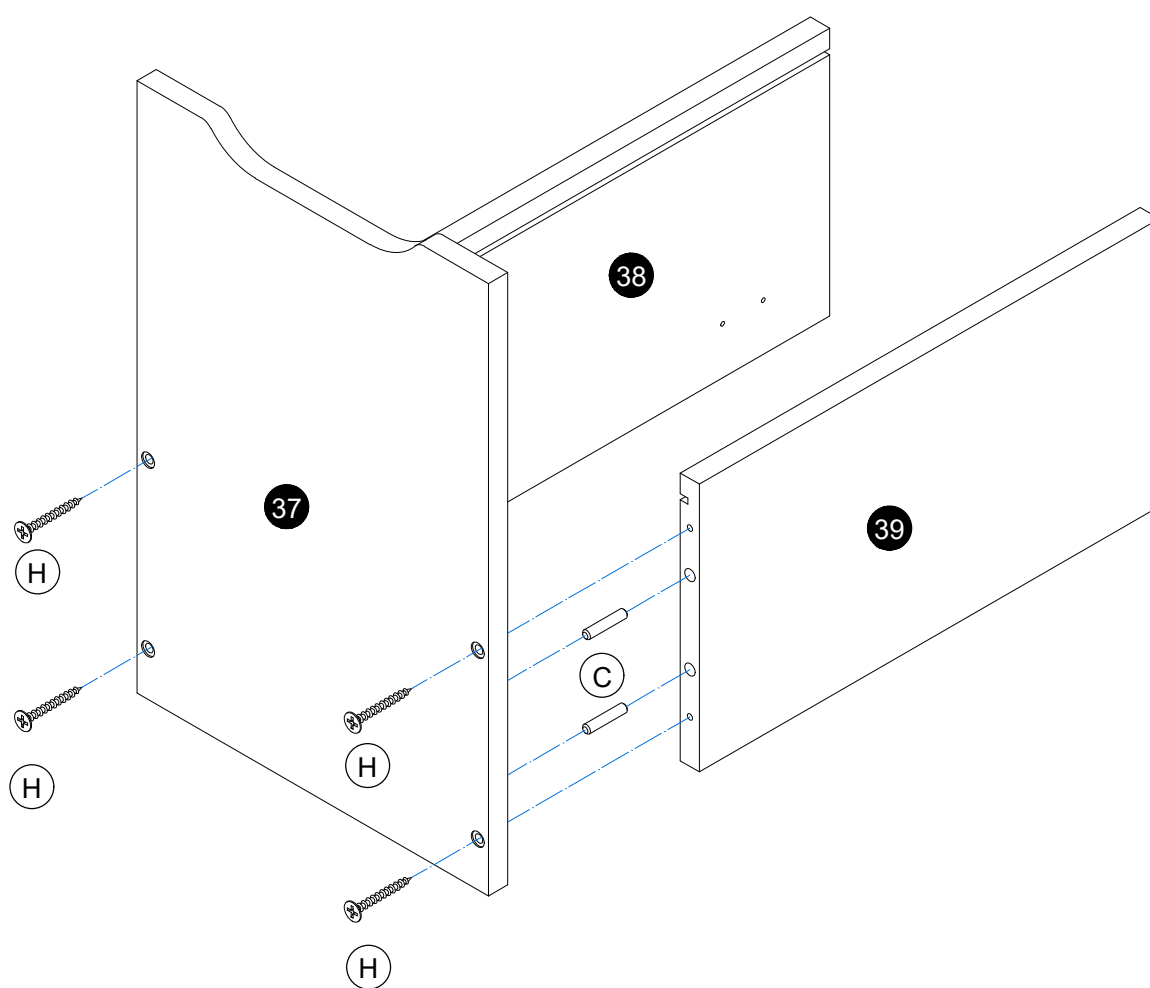
STEP35



H. x4PCS
C. x4PCS

INSTALLATION INSTRUCTION


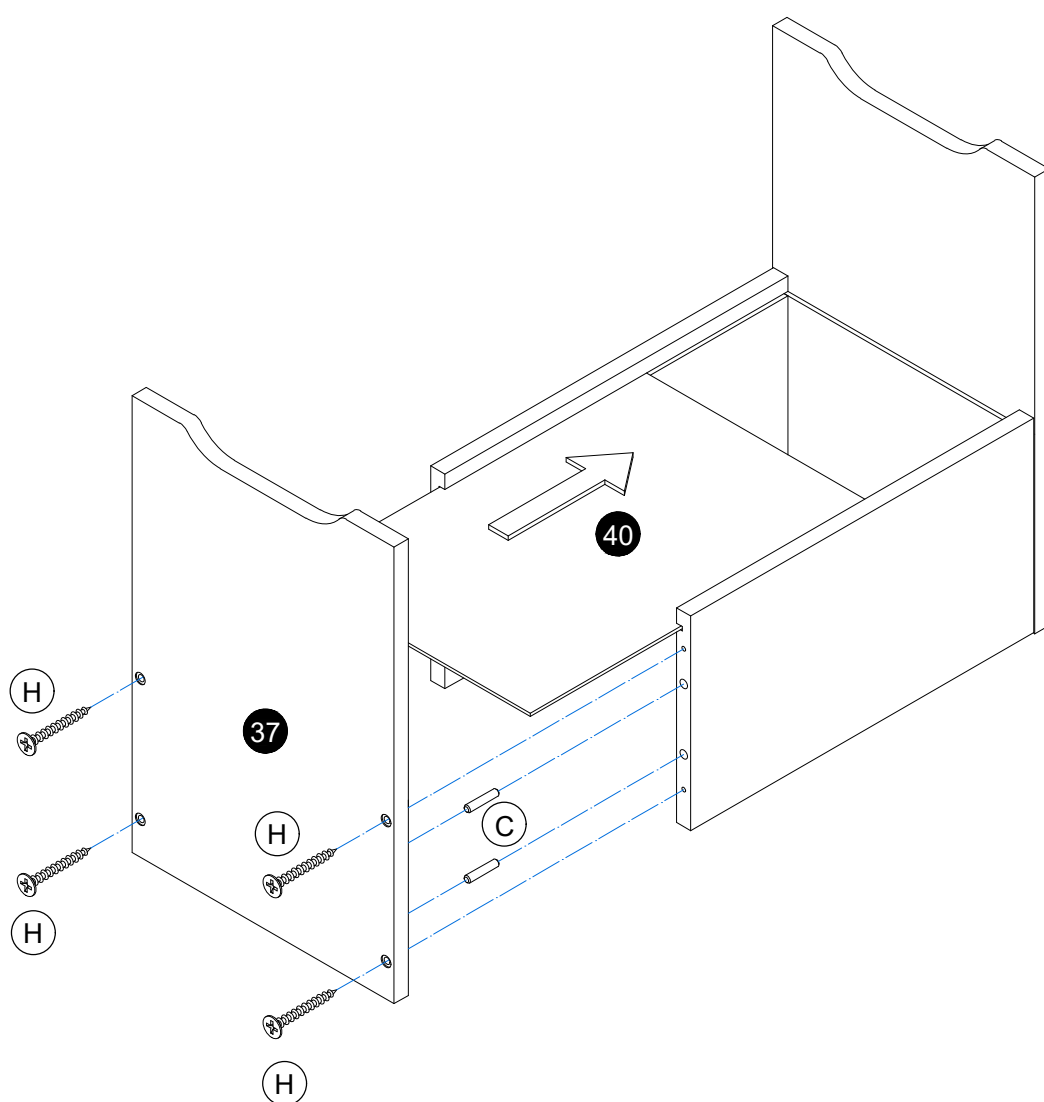
STEP36




H. x4PCS
C. x4PCS

INSTALLATION INSTRUCTION

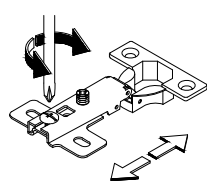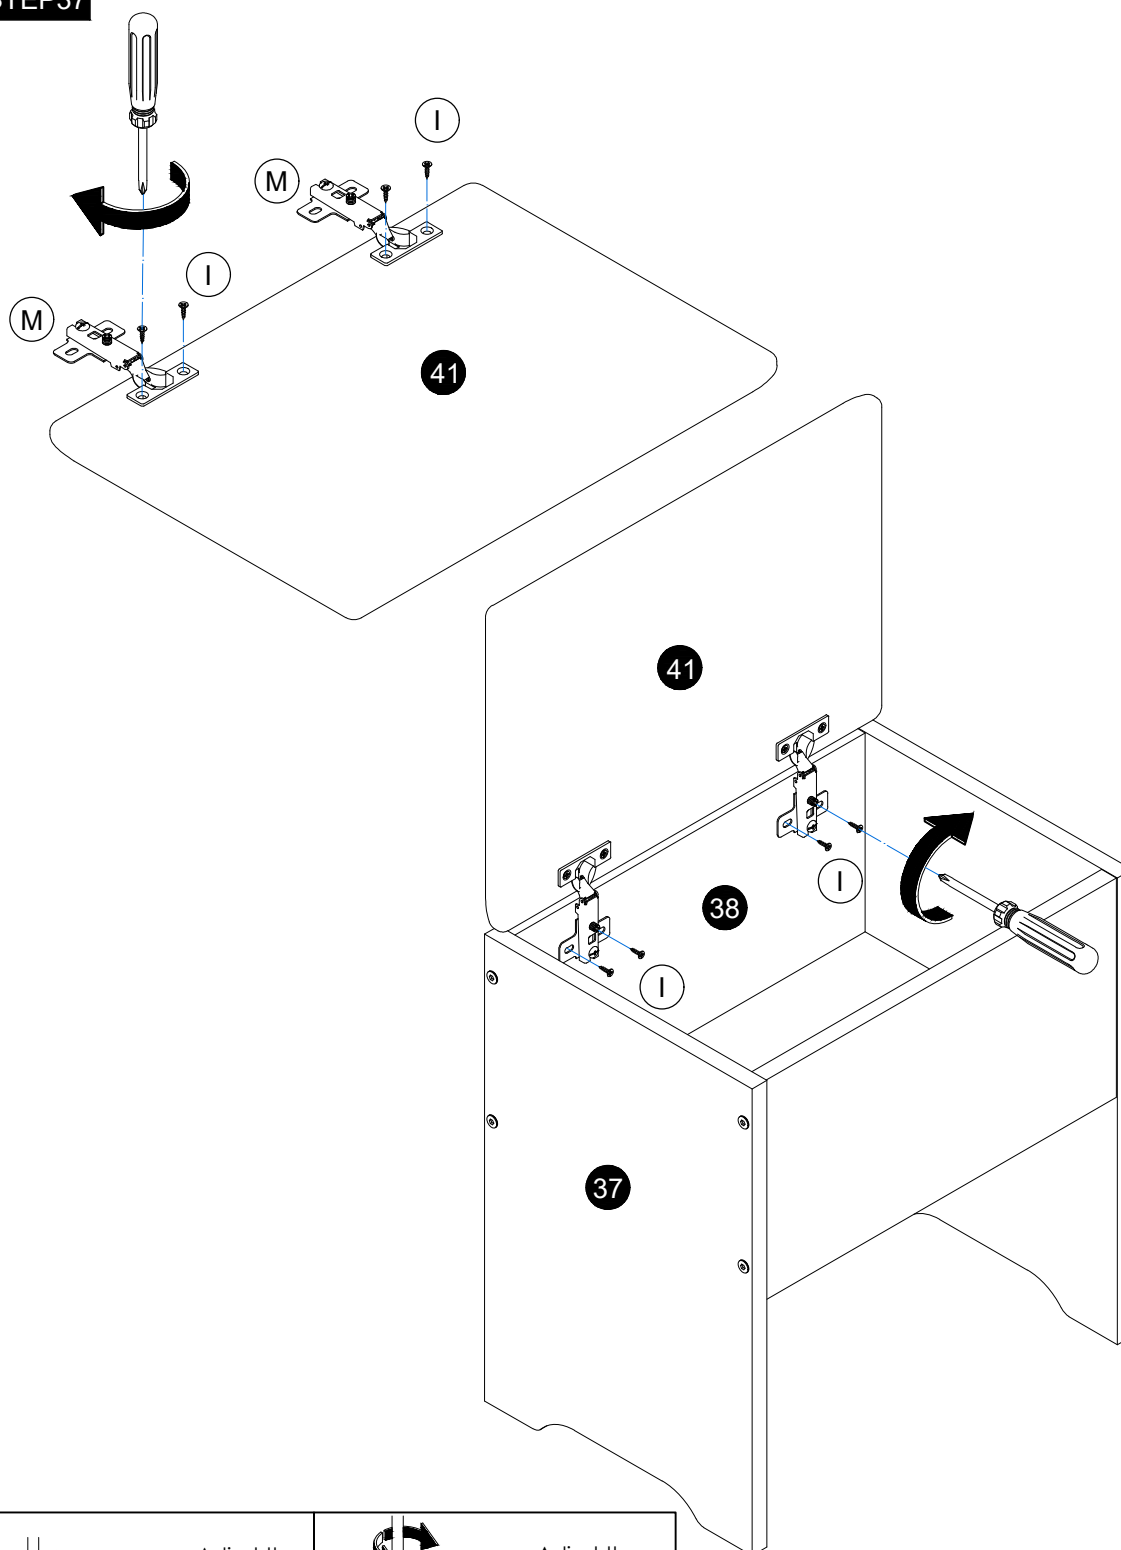STEP37



Adjust the
seat
surface up
and down

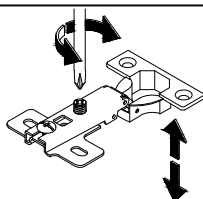


Adjust the
seat surface
forward and
backward

I.	x8PCS
M.	x2PCS

INSTALLATION INSTRUCTION

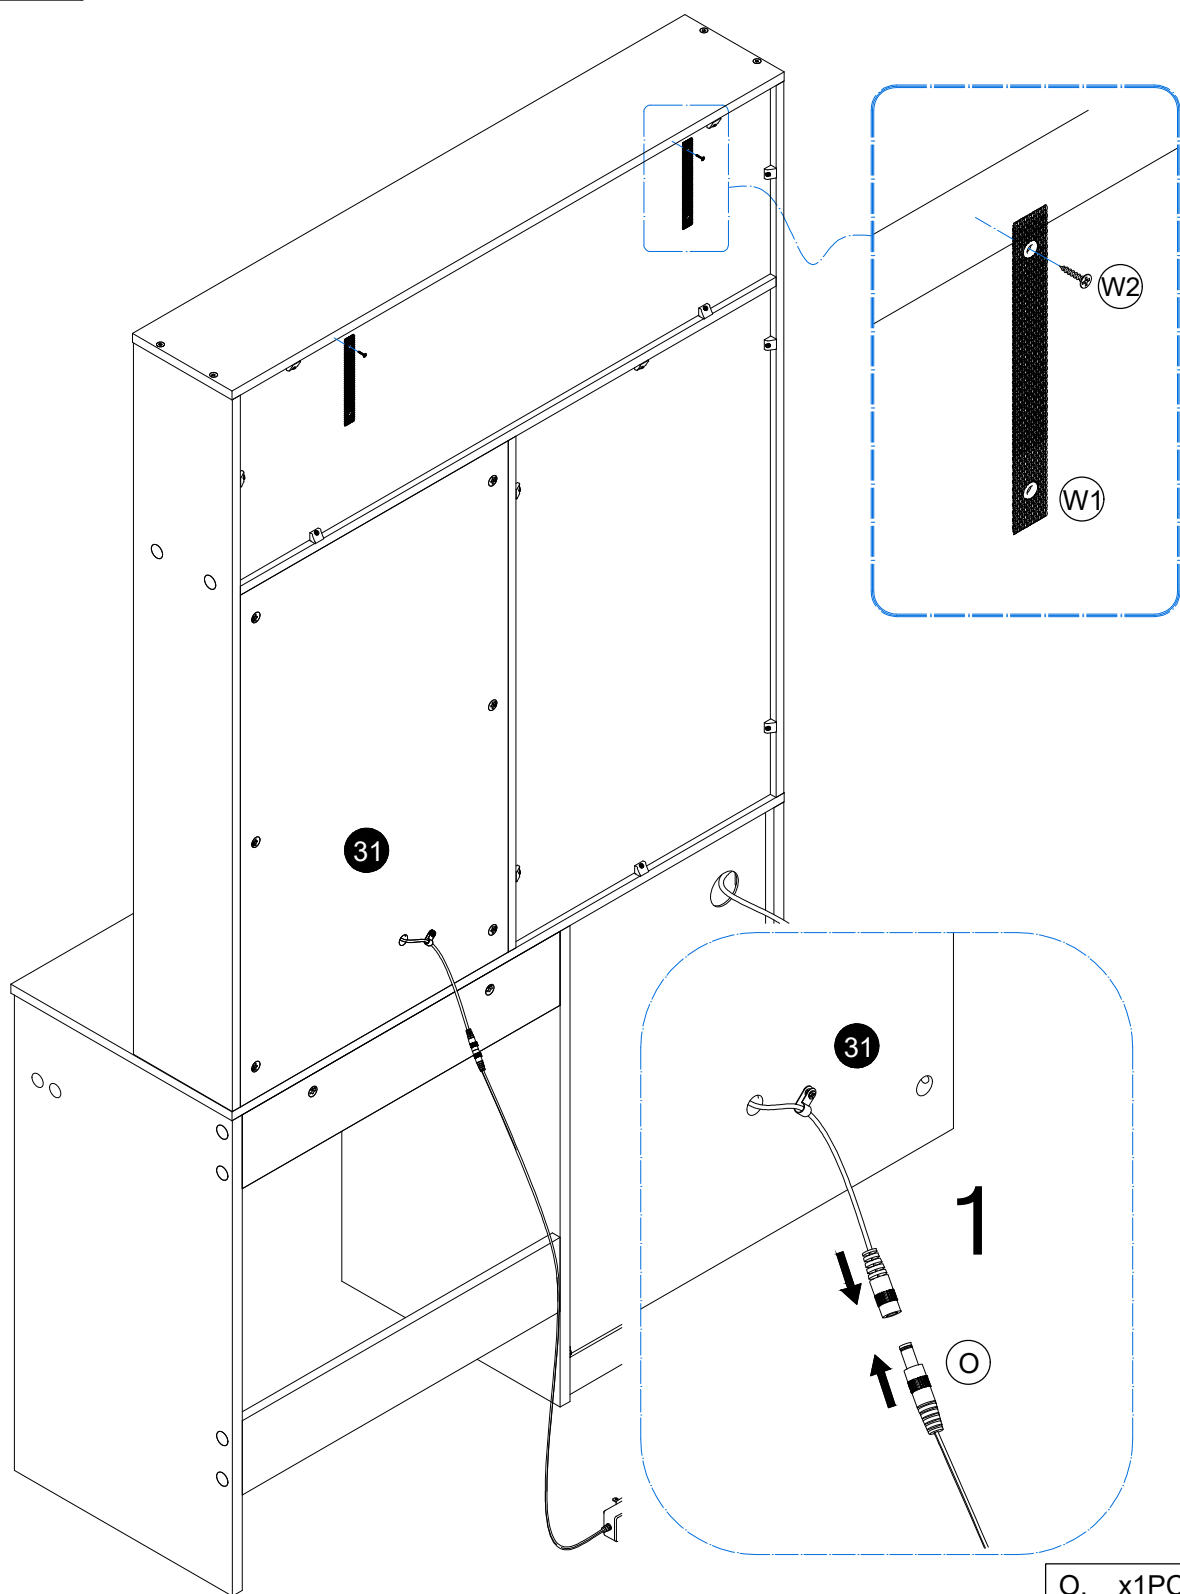
STEP38



O. x1PC
W1.x2PCS
W2.x2PCS

INSTALLATION INSTRUCTION

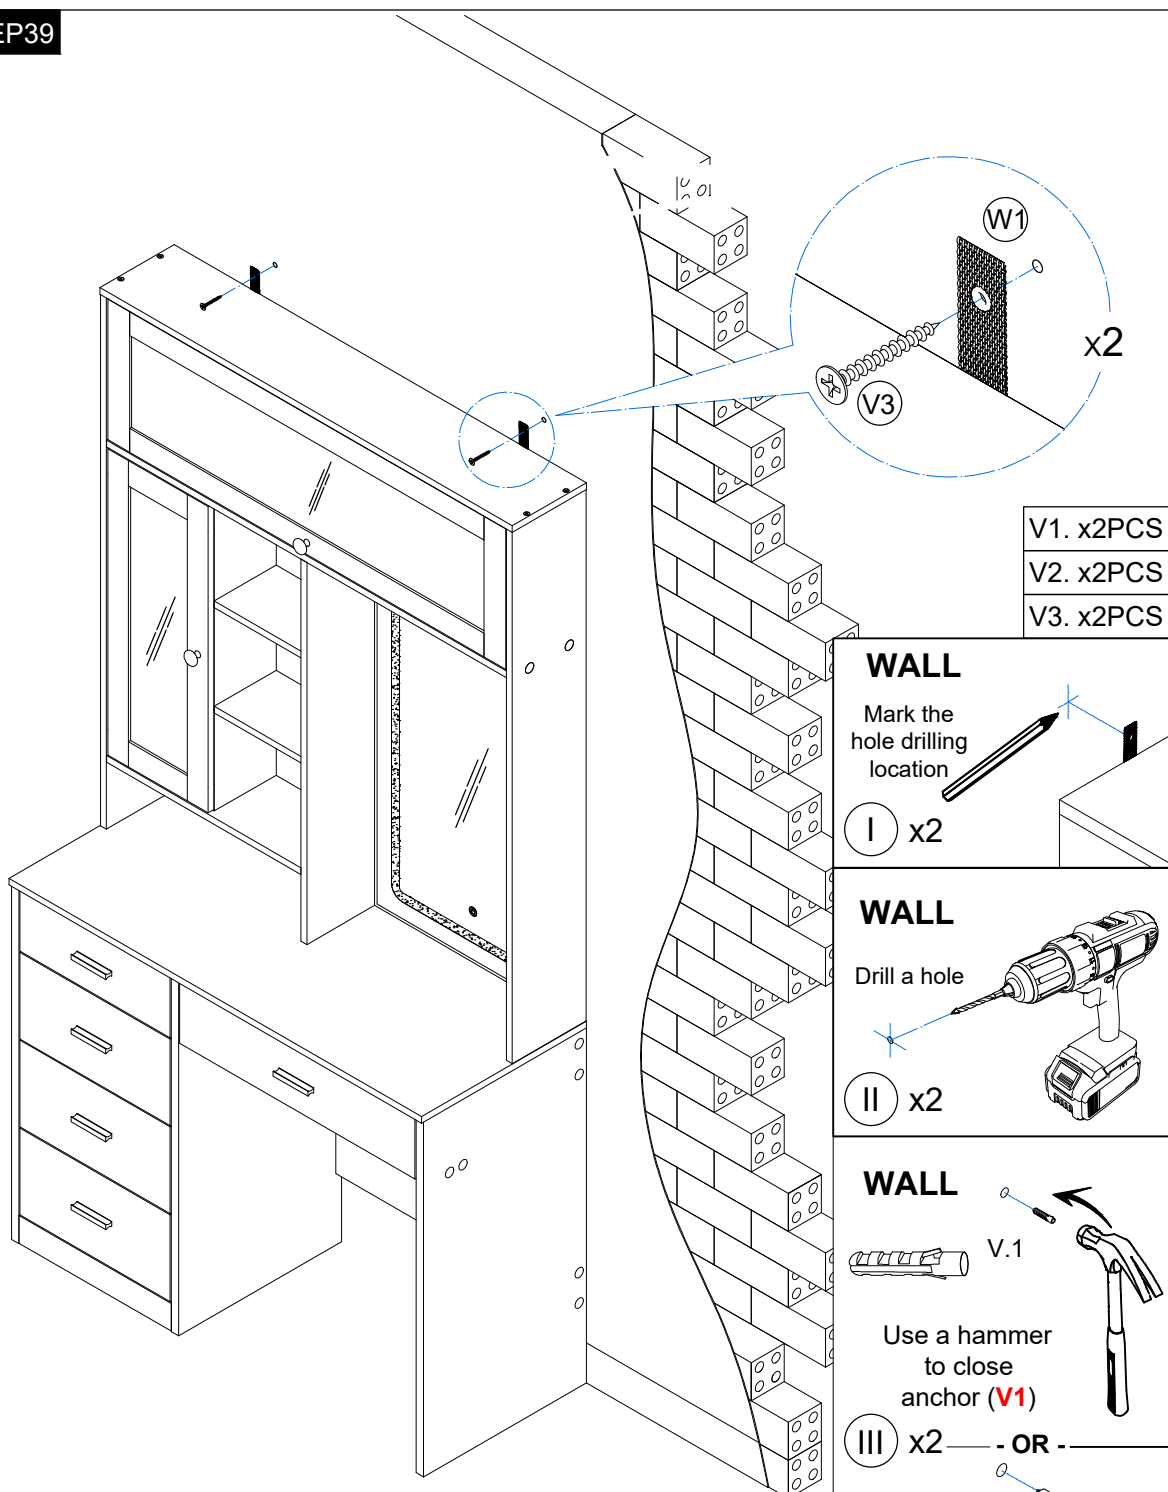STEP39



V1. x2PCS
V2. x2PCS
V3. x2PCS

WALL

Mark the hole drilling location

I x2

WALL

Drill a hole

II x2

WALL

V.1

Use a hammer to close anchor (V1)

III x2 - OR -

V.2

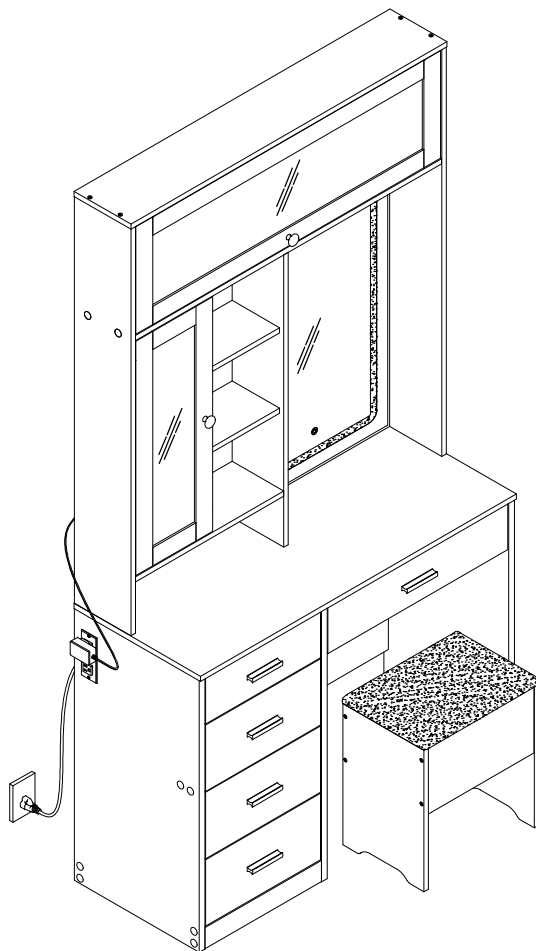
SPECIAL WALL

Use a screwdriver to screw anchor (V2) to the wall

Step1: determine the location of the anti-overturning on the wall and then mark the position after confirming the product has been balanced.
 Step 2: drill the hole and then fixed the anchor (V1) on the **wall** or anchor (V2) for **special wall**.
 Step 3: use screw (V3) to fix the strap (W1) on the **wall** or **special wall**

INSTALLATION INSTRUCTION

STEP40



MANDATORY:

For safety reasons, we recommend you follow these instructions to install the anti-tipping hardware, when installed properly, this hardware may prevent the unit from tipping unexpectedly.

WARNING:

Serious injury can occur if furniture tips over. Place heavy items on lower shelved and as far back as possible.

HONG SHAN FURNITURE VIETNAM COMPANY LIMITED

Lot 1G11, 1G12, Road CN6, CN11, Tan Binh Industrial Park, Tan
Binh Town, Bac Tan Uyen District, Binh Duong, Viet Nam
Date of manufacture : 2024/07