



6 Drawer Cabinet Instruction

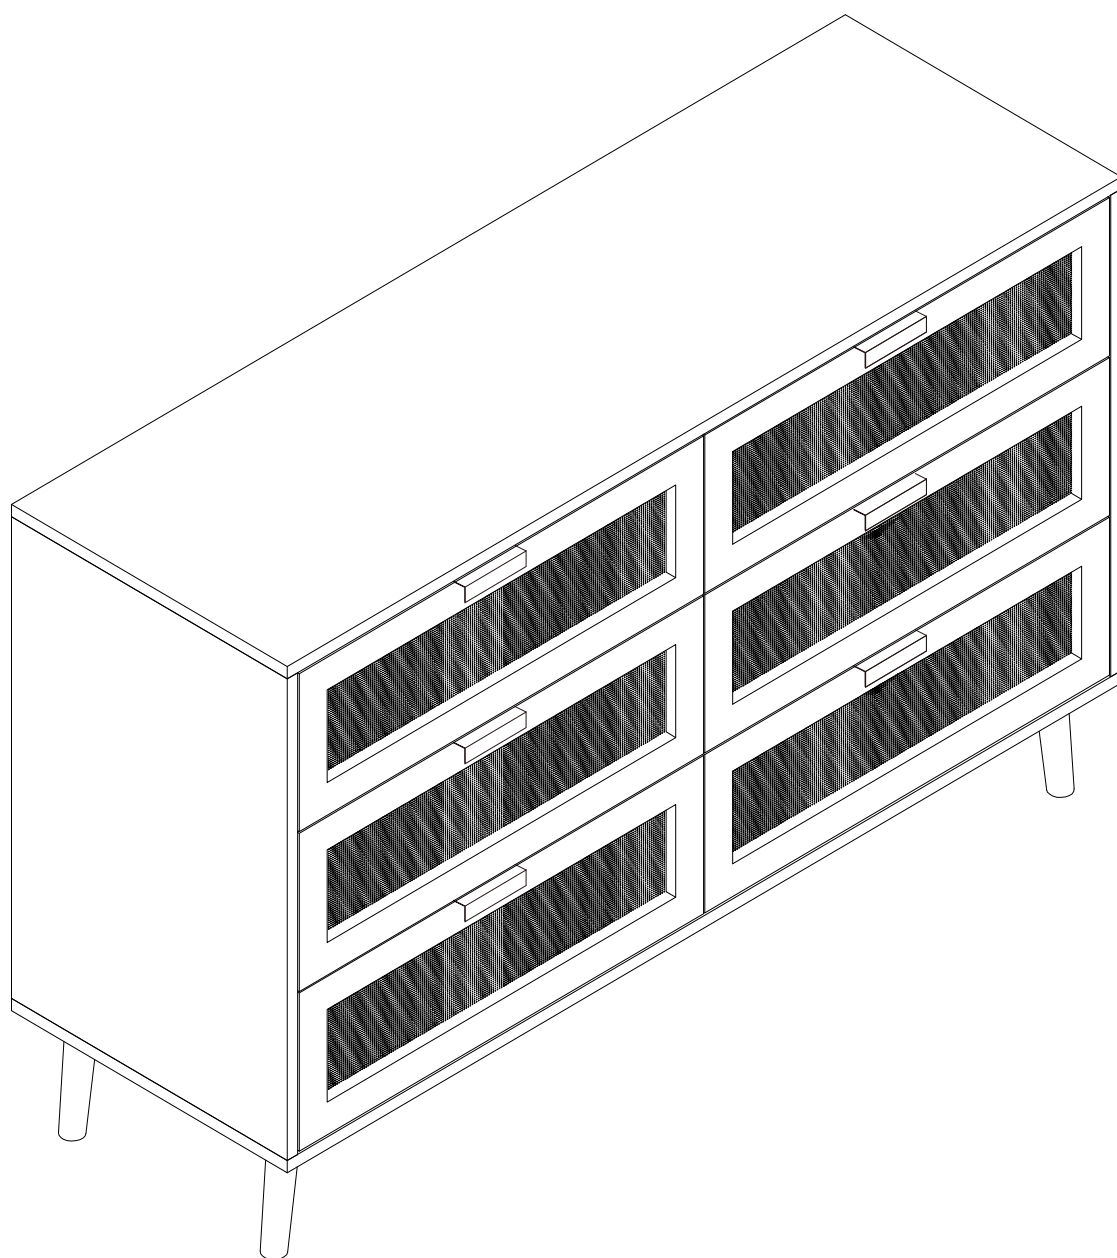

Panels


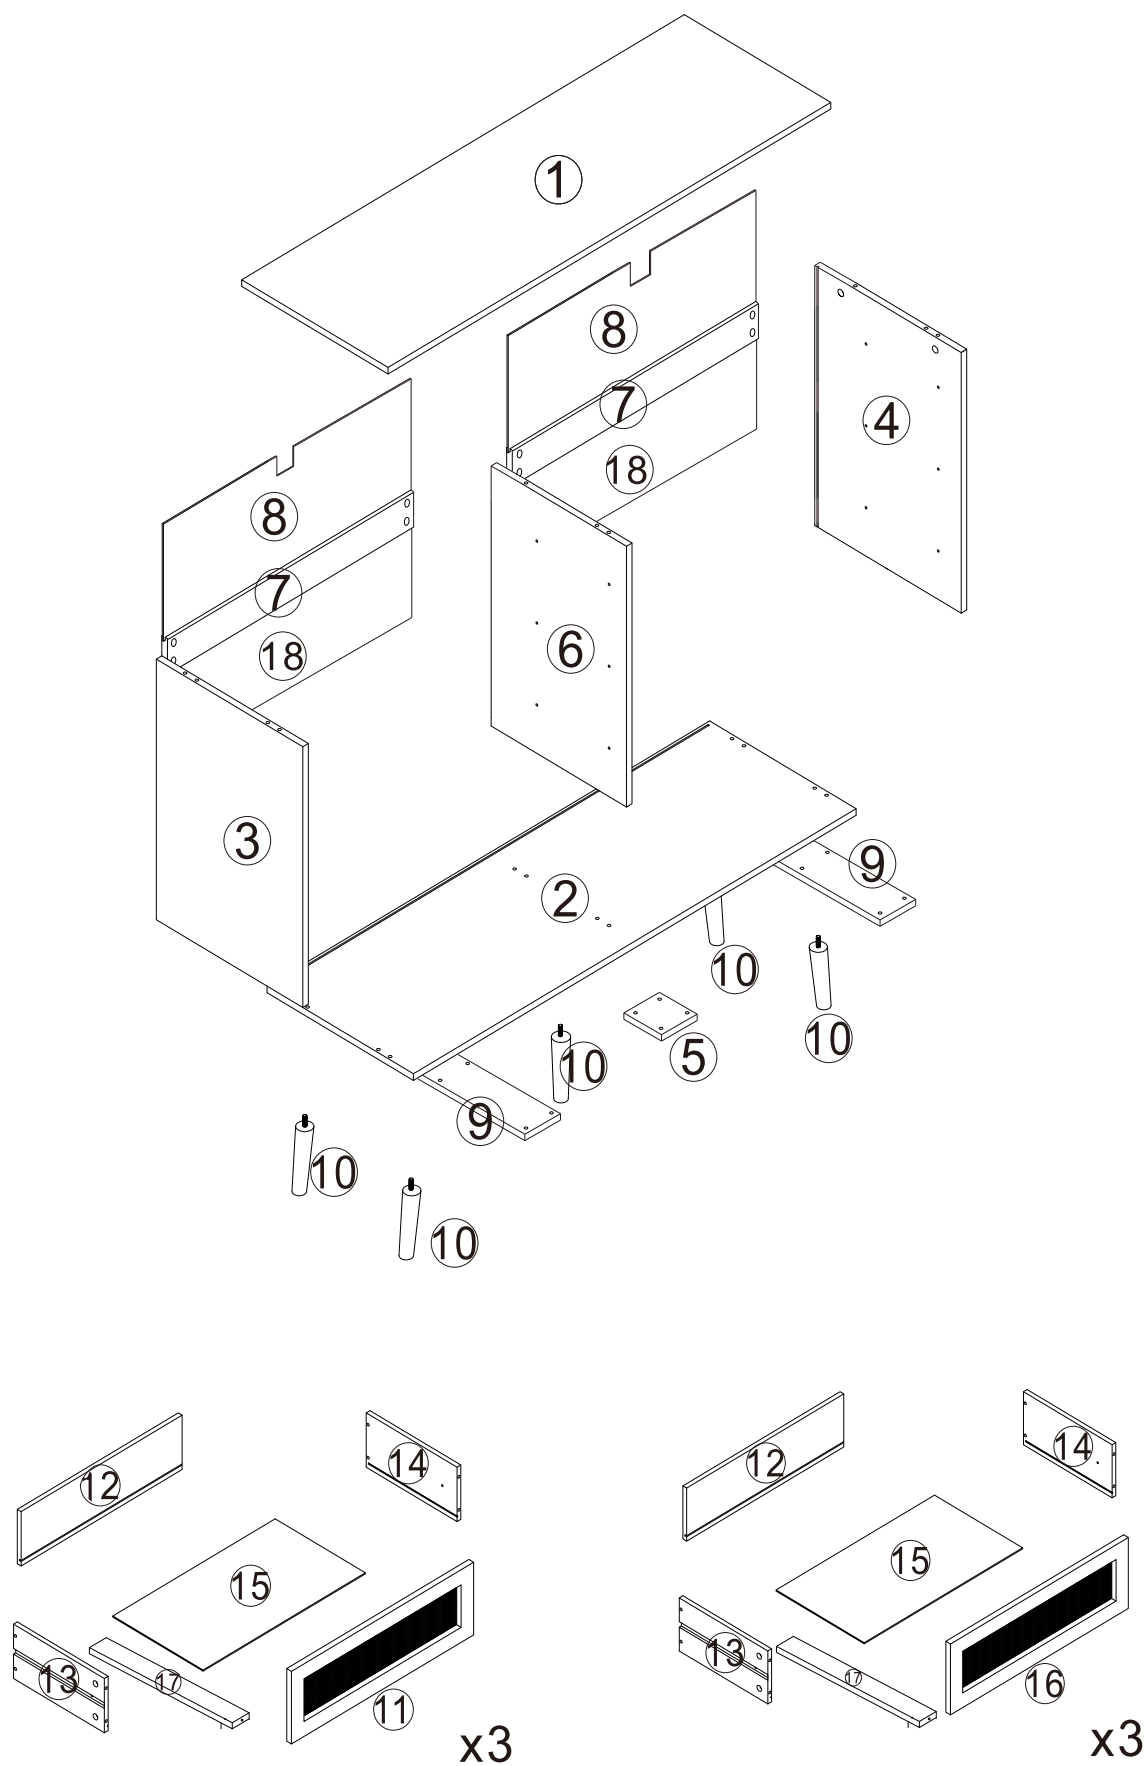


Fittings


Please verify that you have all the listed accessories below:

NOTE: The quantities provided are sufficient to complete the assembly, and in some cases, there might be more accessories supplied than required.

Bag 1



ITEM	PART	QTY	ITEM	PART	QTY
A		44 PCS	B		44 PCS
C		12 PCS	D		30 PCS
E		36 PCS	F		2 PCS
G		6 PCS	H		2 PCS
I		2 PCS	J		16 PCS
K		6 PCS	L		2 PCS
M		12 PCS	N		12 PCS

Tools required





Phillips screwdriver
(small & medium)








step 1

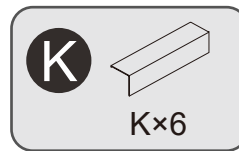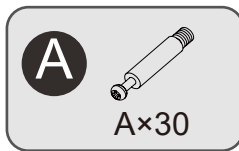

X6

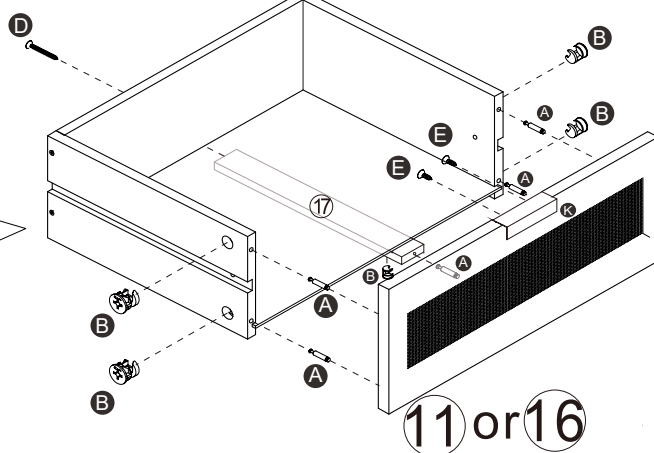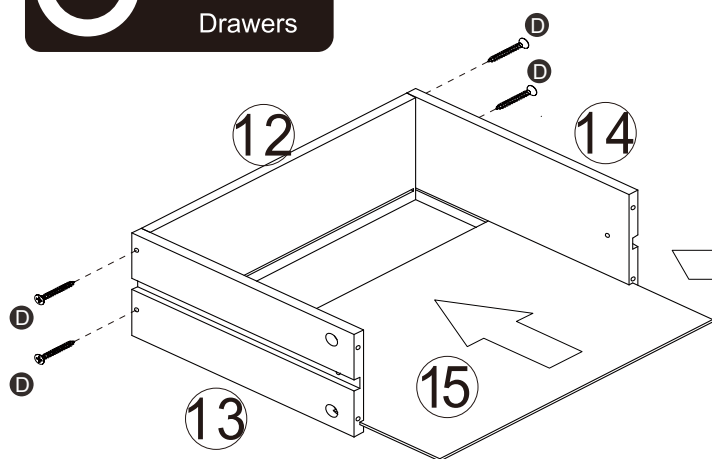

step 2

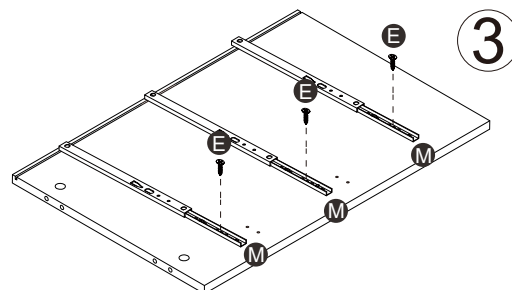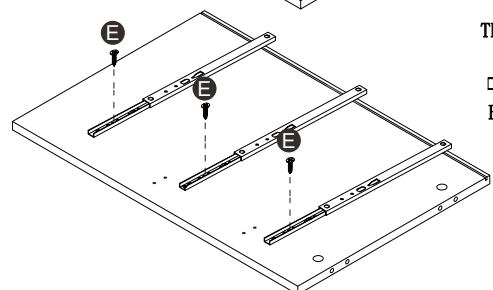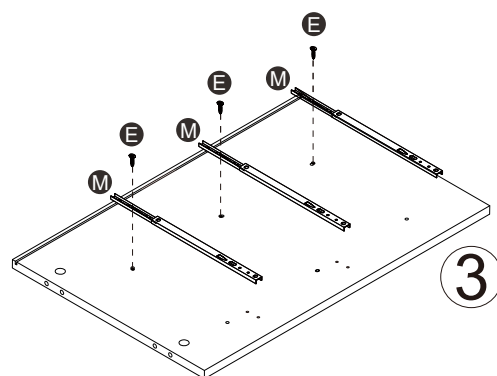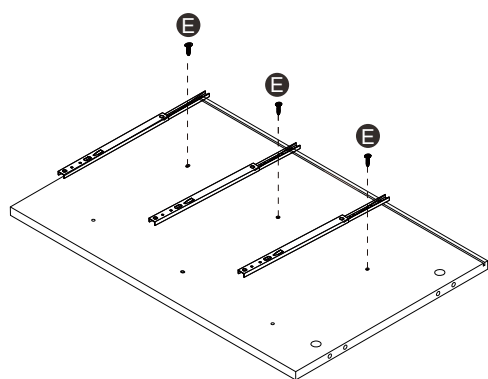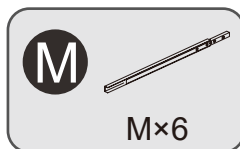

step 3

E



E×12


M



M×6


NOTE: Please pay attention to distinguishing the left and right direction of #6 board. The upper part is the right side to install #6 board, and the lower part is the left side.

THIS HOLE



BACK


FRONT

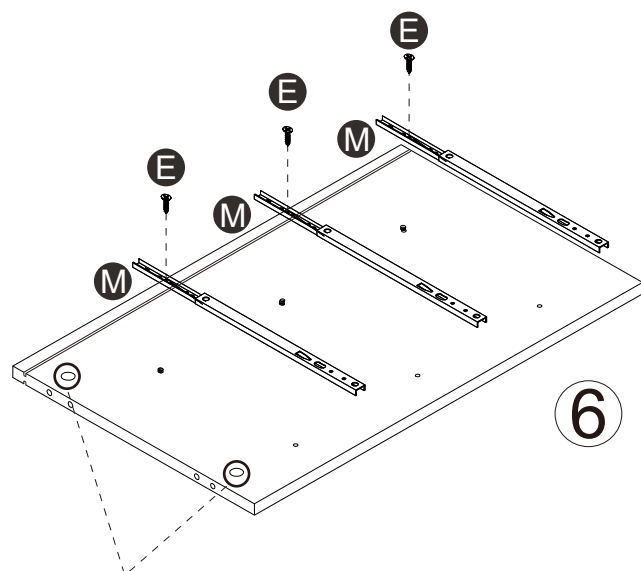

As shown in the picture above, the side of the board with the TWO HOLES is the right side.




THIS HOLE



BACK

FRONT

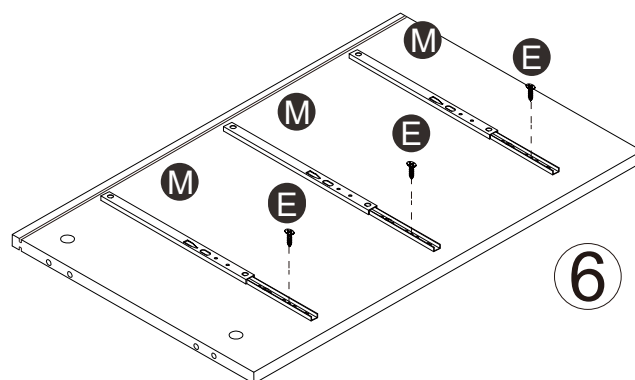


THIS HOLE




BACK

FRONT

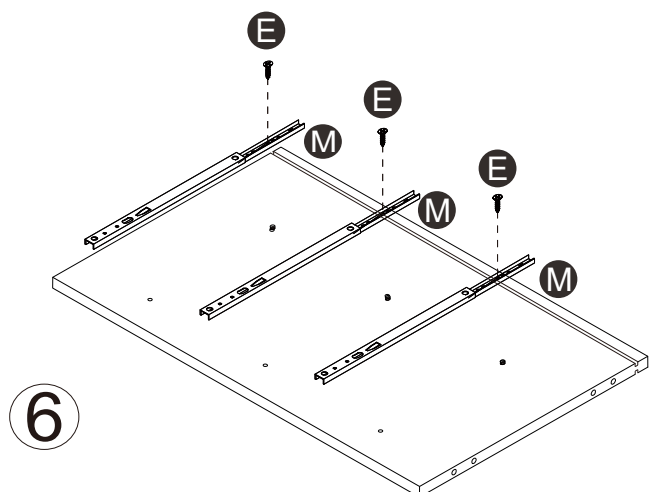


THIS HOLE




BACK

FRONT

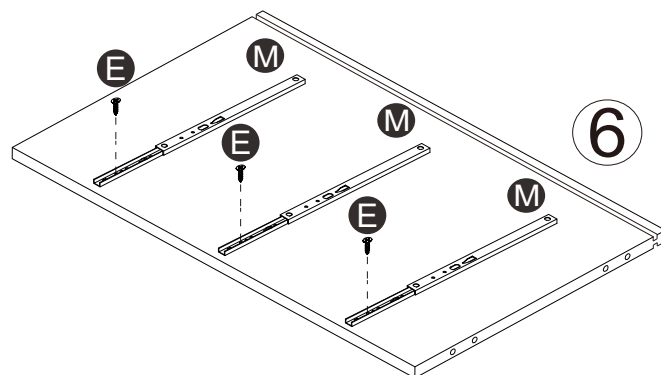


step 4


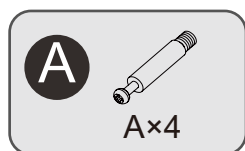


NOTE: In the next steps 4, 5, and 6, please pay attention to distinguish the direction of the board #3 and #4.


The #3 board is installed on the left side of the dresser, and the #4 board is installed on the right side.

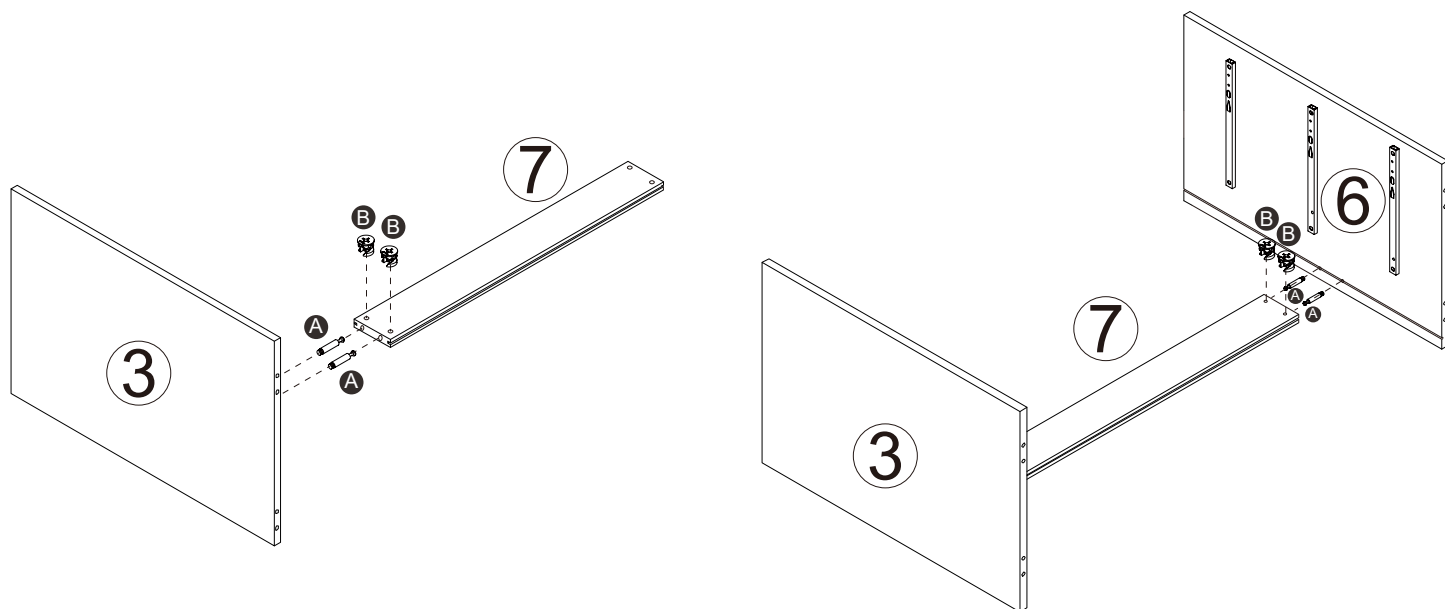

step 5

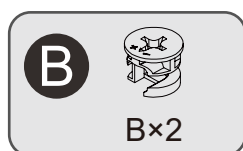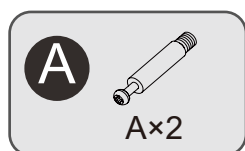

As shown in the picture above, the side of the board with the TWO HOLES is the right side.

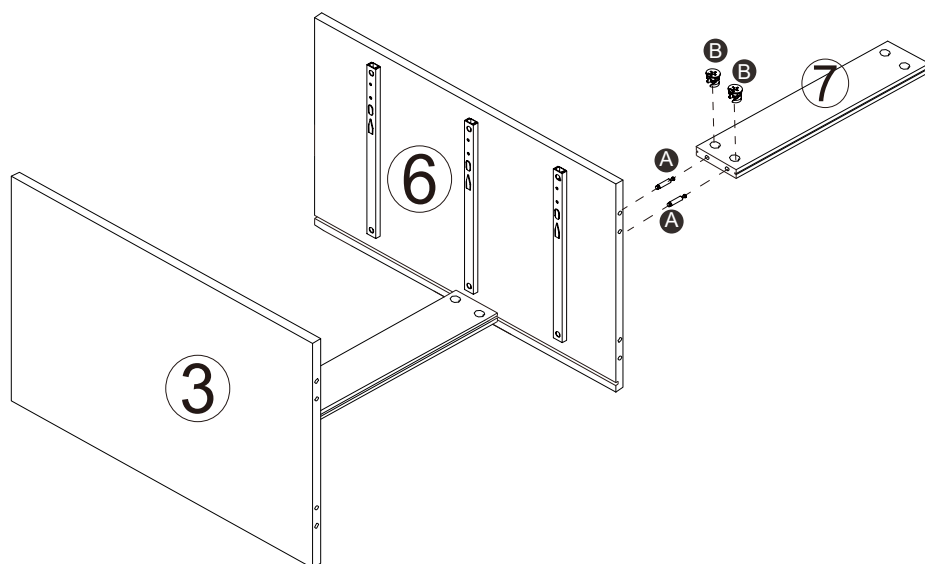

step 6

A




A×2


B



B×2

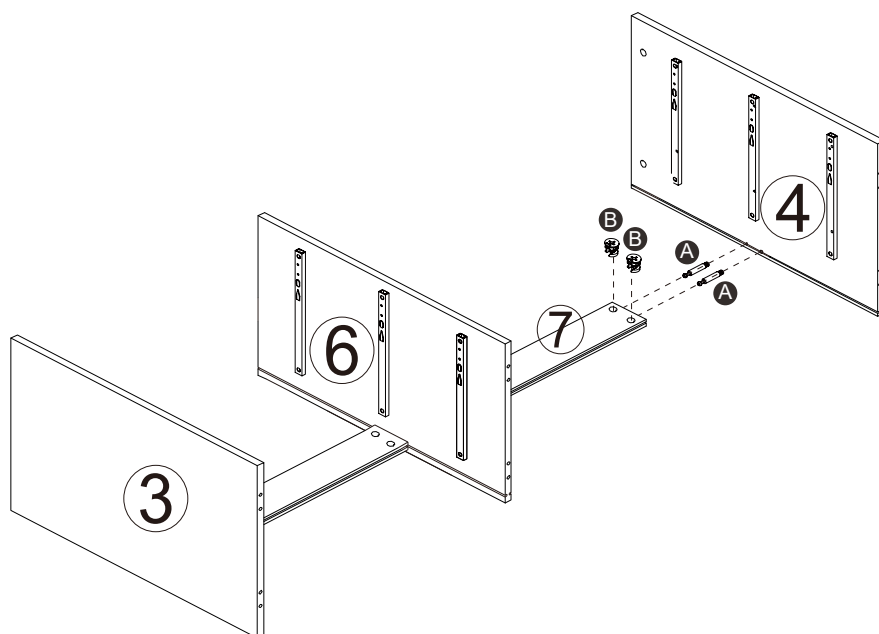

step 7

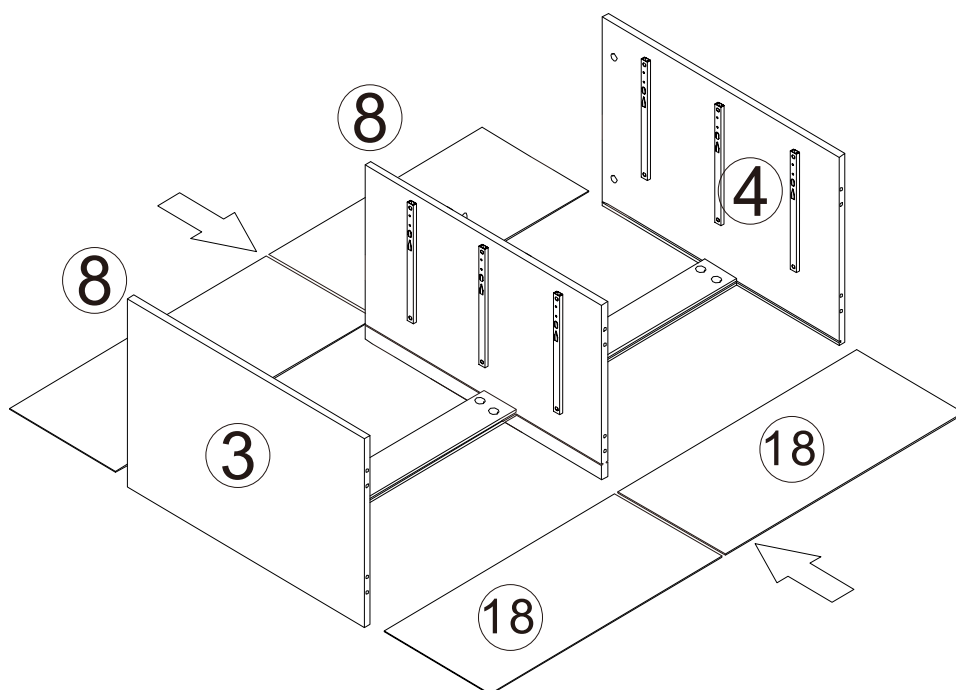

step 8

A




A×6

B




B×6

C



C×6

H






H×2

I




I×2

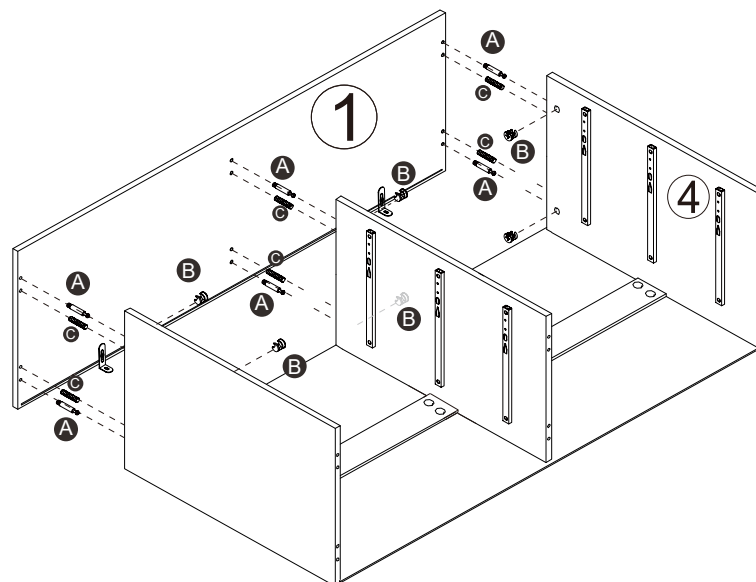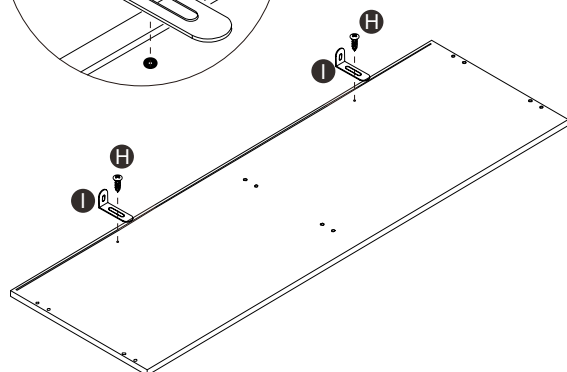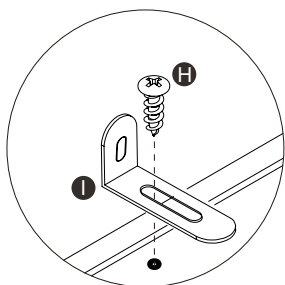

step 9

C




C×6

G






G×6

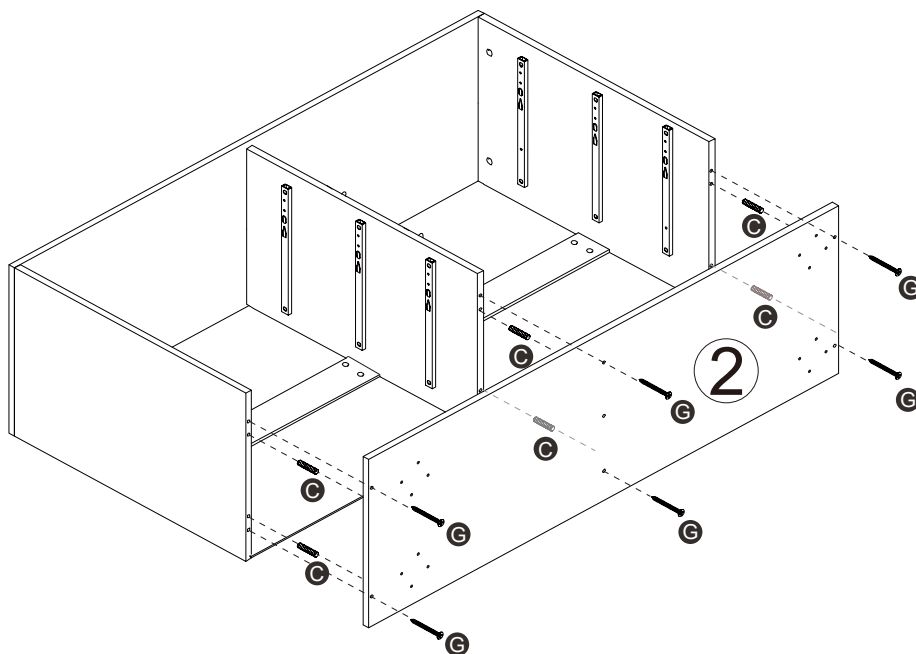


step 10




NOTE: Please pay attention to distinguishing the front and back of the #9 board. The ✓ labeled side is the front side and should be exposed on the outside.

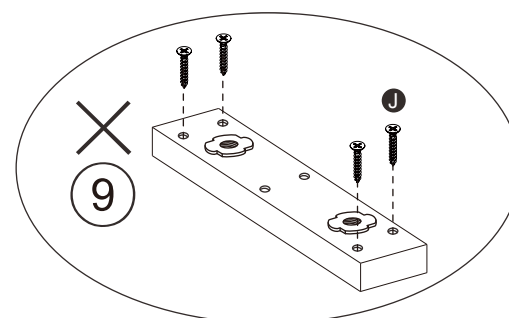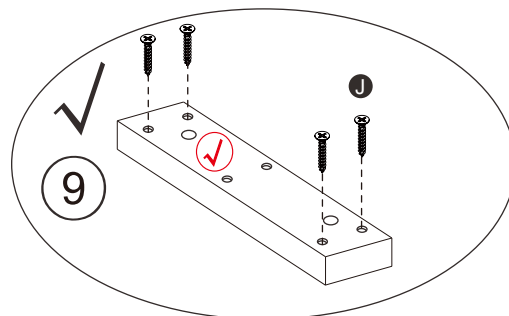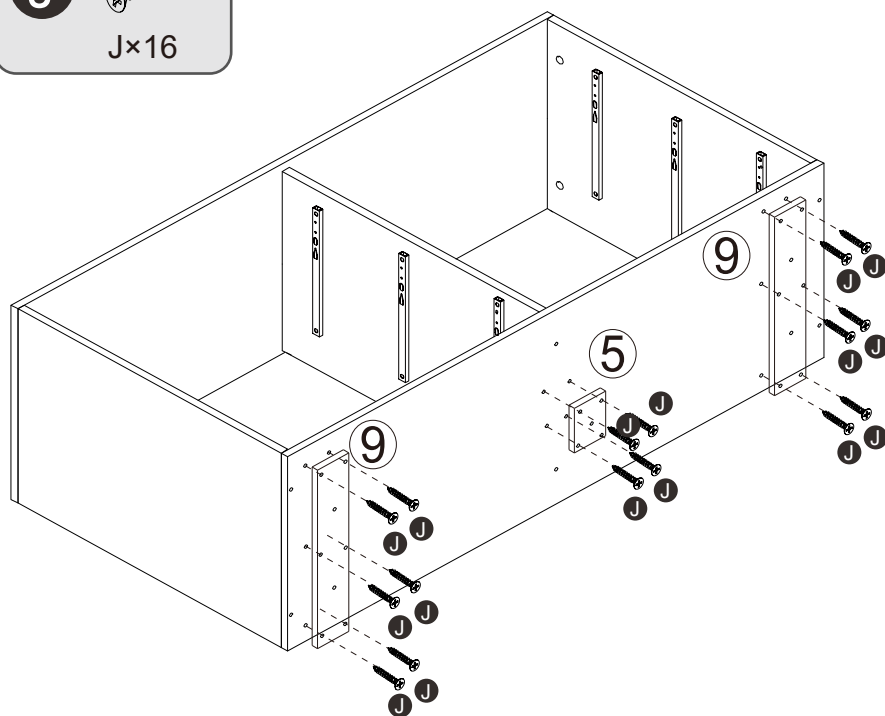


step 11

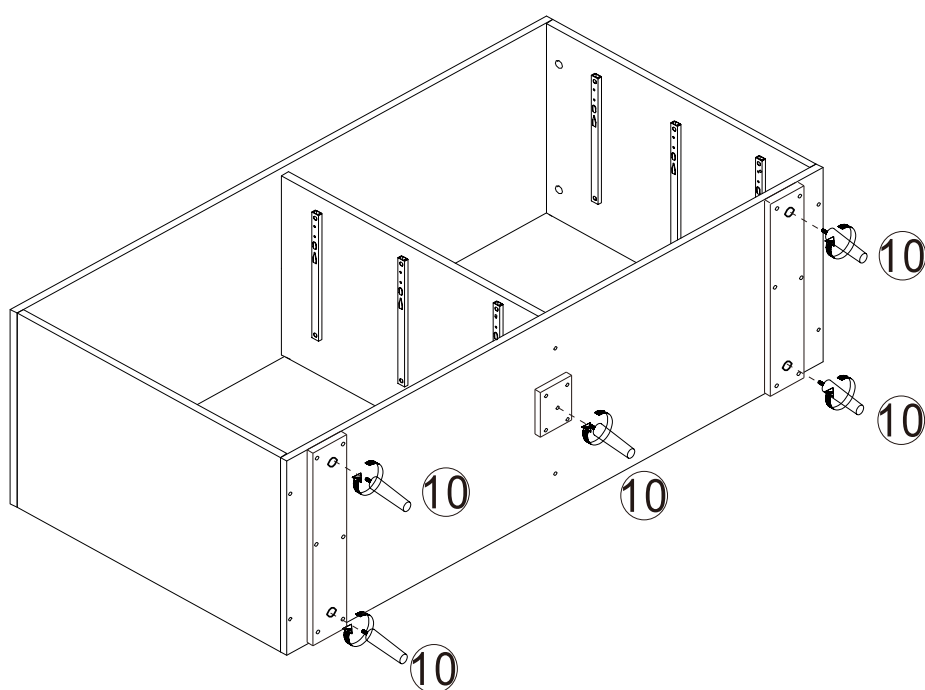

step 12

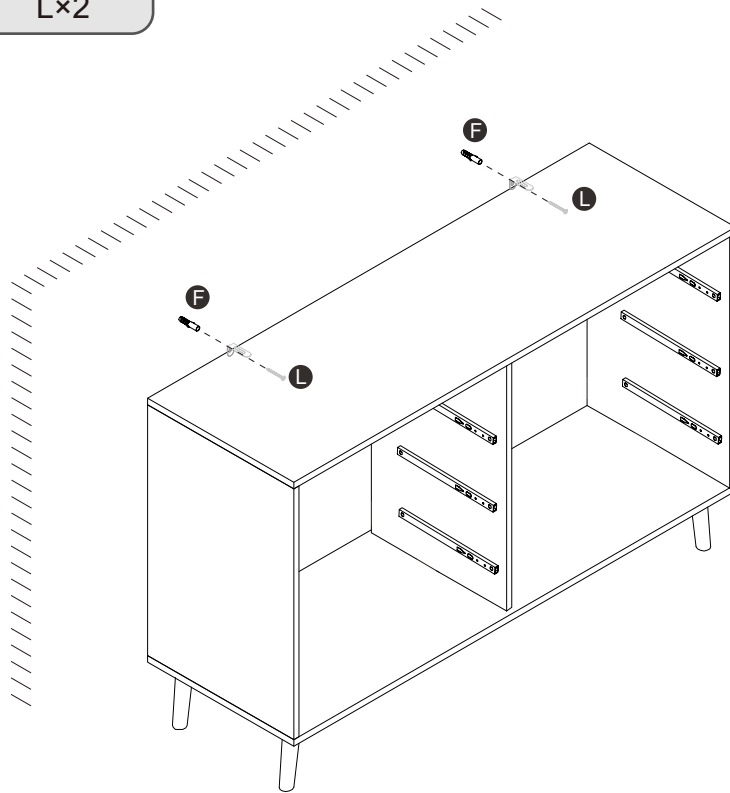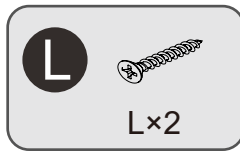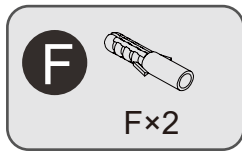


step 13

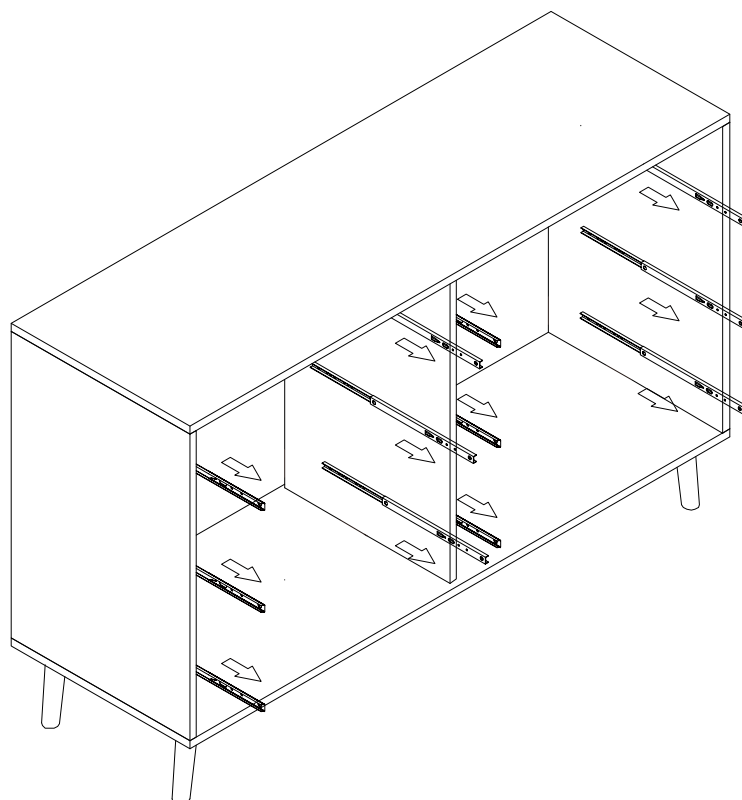

step 14

Note: Please pay attention to distinguishing the left and right directions of the drawer.
The #11 board is on the left side of the drawer, and the #16 board is on the right side.

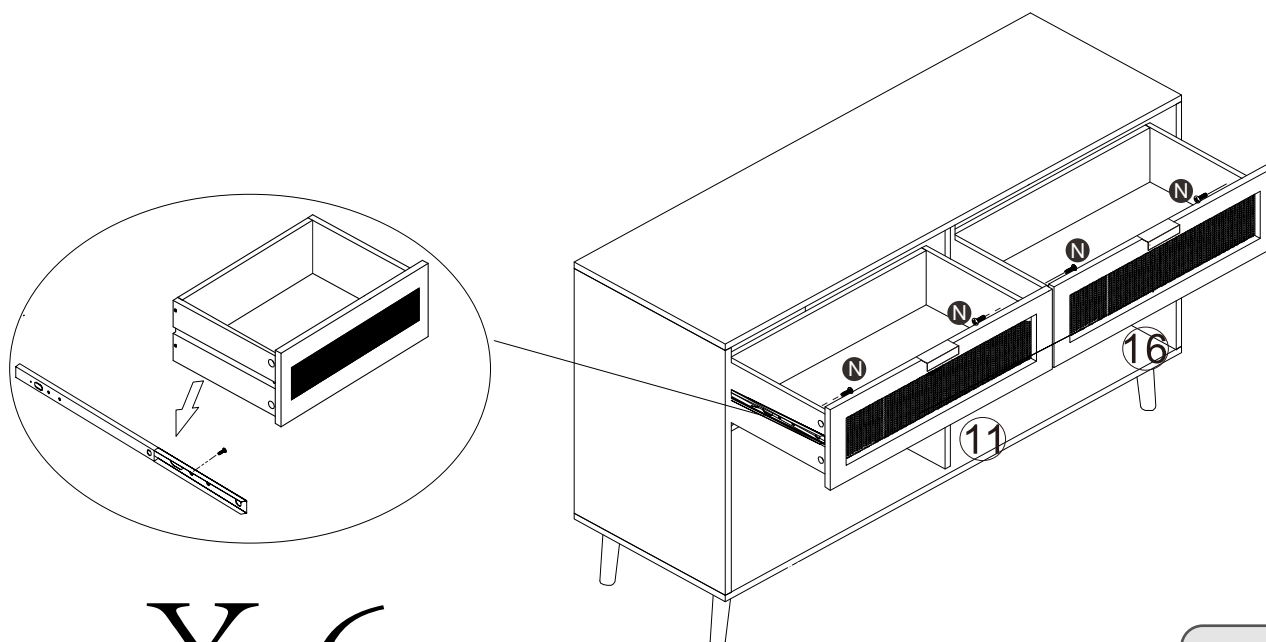

X 6

step 15

Congratulations!!

You have successfully completed the assembly!

