marked "Ground" facing downward, and wrap the fixture ground wire around the Ground Screw (E).

- 9. Tighten the Ground Screw (E) to clamp the Ground Fixture Wire between the head of the Ground Screw (E) and the Mounting Plate (C). It is imperative that the ceiling outlet junction box in your home be properly grounded!
- 10. Connect the neutral fixture wire to the neutral junction box wire; it usually has white insulation around it. Fasten these together with a Wire Connector (A) and wrap the connection with electrical tape. Make sure no wire strands are exposed.
- 11. Connect the hot fixture wire to the hot junction box wire; it usually has black insulation around it. Fasten these together with a Wire Connector (A) and wrap the connection with electrical tape. Make sure no wire strands are exposed. Do not reverse the hot and neutral connections or safety will be compromised.
- **12.** Gently tuck the wire connections neatly into ceiling outlet junction box.
- **13.** Place Canopy (G) over Mounting Plate (C). Make sure the threaded tube on Mount-

CARE INSTRUCTIONS

Wipe clean with a soft, dry cloth or static duster.

ing Plate (C) align with the holes on the Canopy (G). Secure the Canopy (G) by screwing the Ball Nut (H) onto threaded tubes on the Mounting Plate (C).

- **14.** Place the Candle Sleeve (L) over the socket.
- 15. Insert FIVE (5) 25-Watt maximum Type B candelabra base incandescent light bulbs (not included) or FIVE (5) 6-Watt compact fluorescent light bulbs (not included) or FIVE (5) 4-Watt LED light bulbs (not included) into the sockets. Do not exceed specified wattage.
- **16.** Restore the power to junction box and test the fixture.
- 17. Installation is now completed.

Always avoid the use of harsh chemicals or abrasive cleaners as they may cause damage to the chandelier's finish.


PARTS ENCLOSED

OTY

		QII
Α	Wire Connector	3
В	Plastic Anchors	2
С	Mounting Plate	1
D	Wood Screw	2
Е	Ground Screw	1
F	Mounting Screw	2
G	Canopy	1
Н	Ball Nut	2
1	Quick Link	2
J	Chain	2
К	Fixture Loop	2
L	Candle Sleeve	5

WARNINGS

- Before installing the chandelier, make sure the power to the circuit is turned off at the main fuse box/circuit breaker utility box.
- ✓ To reduce the risk of fire, electrical shock or personal injury, always turn off the chandelier and allow it to cool prior to replacing light bulbs.
- Do not touch the bulbs when the chandelier is turned on. Do not look directly at lit bulb.
- Keep flammable materials away from lit bulb.

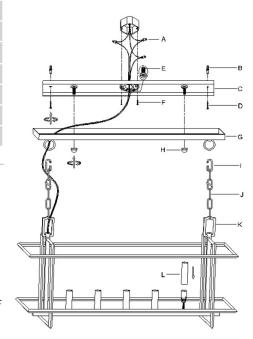

SAFETY FIRST

- This chandelier is meant for indoor use, **dry locations only**.
- Do not use the electric cord to support the weight of the chandelier.
- These instructions are provided for your safety. It is important that they are read carefully and completely before beginning the installation of this lighting fixture.
- For your safety, it is strongly recommended that two people install the lighting fixture.
- This product must be installed in accordance with the applicable installation codes by a person familiar with the construction and operation of the product and the hazards involved.

Save these instructions.

ASSEMBLY INSTRUCTIONS

Remove all parts and hardware from the box along with any plastic protective packaging. Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.

1. Shut off the main electrical supply from the main fuse box/circuit breaker.

- 2. Hold the Mounting Plate (C) over the ceiling junction box to mark the location for Plastic Anchors (B) on ceiling. Check that this is level before installing the Plastic Anchors (B). Mount the Plastic Anchors (B) to the ceiling.
- **3.** Secure the Mounting Plate (C) onto the ceiling by screwing the Wood Screw (D) into the Plastic Anchors (B).
- Secure Mounting Plate (C) onto ceiling outlet box by Mounting Screw (F). Tighten the screws with a screwdriver until secure.
- 5. Connect the Chain (J) to the loop on the Canopy (G) with the Quick Link (I). Close

the opening of the Quick Link by screwing the nut clockwise.

- Feed the power supply cord and bare copper ground wire through the Chain (J) and the Canopy (G).
- 7. Gently pull the existing ground, hot, and neutral junction box wires down from the ceiling junction box and allow these to hang. Carefully inspect the chandelier wires. The neutral fixture wire is ribbed. The hot fixture wire is smooth, and the ground fixture wire is bare copper.
- 8. Attach the ground wire from the fixture to the ground junction box wire; it usually has green insulation around it or is bare wire. Fasten these together with a Wire Connector (A) and wrap the connection with electrical tape. Make sure that no wire strands are exposed. If the ceiling outlet junction box does not have a ground junction box wire, insert the Ground Screw (E) into the Mounting Plate (C) where it's