
Storage cabinet

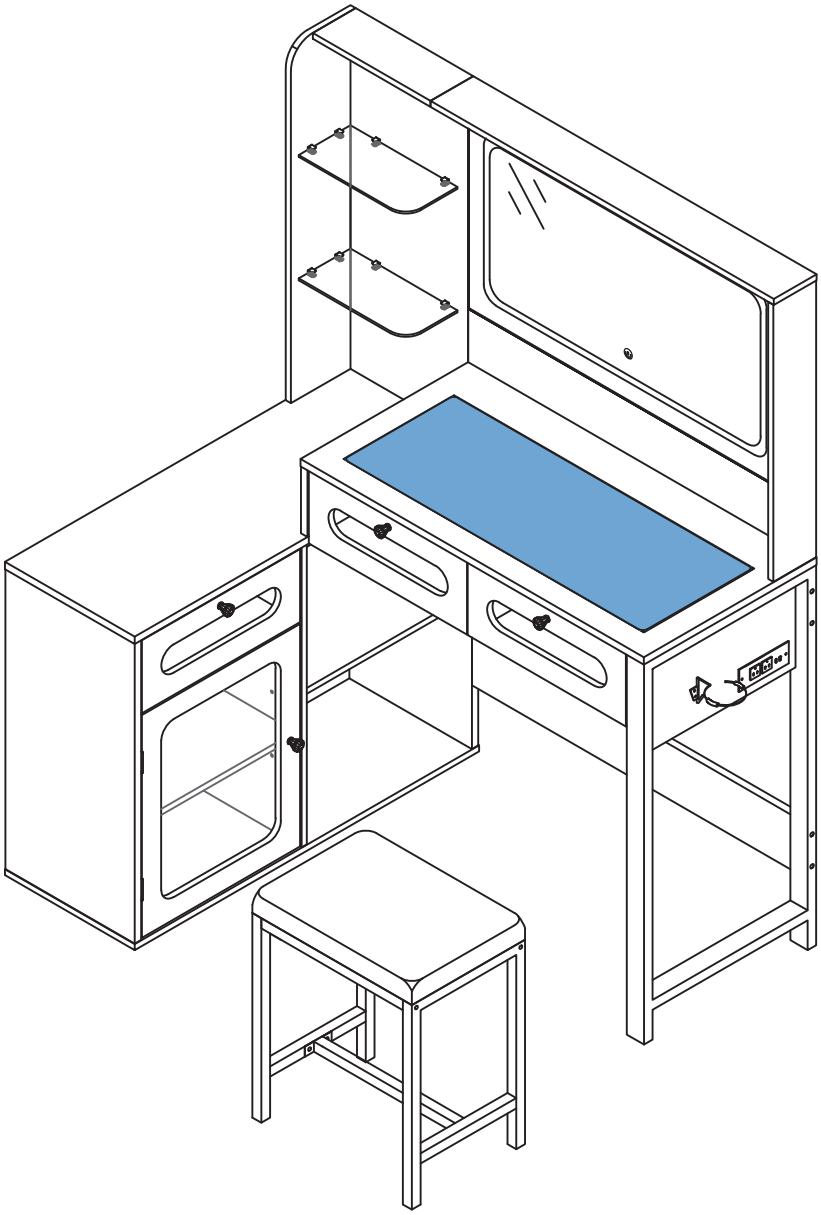

Suggestion: To make the installation process easier and faster, we recommend that two people work together to install the Storage cabinet.

Helpful Hints

1.We recommend two people to assemble the product easier and faster.

2. Please DO NOT tighten the screws deeply during assembling avoiding that metal frame can be bent and plank will crack.


3.We recommend that all screws should not be tightened over during assembling to make it easy to adjust.When it is adjusted to proper stationall screws should be tightened.

4.Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. Failure to do so may result in stripping the screw.


Customer Service


As this item contains many parts, please read the installation instruction carefully before installation and complete the installation with the cooperation of your partner. Please use tools properly and carefully. If you have any questions about the product and installation, please contact us freely.


EXPLODED

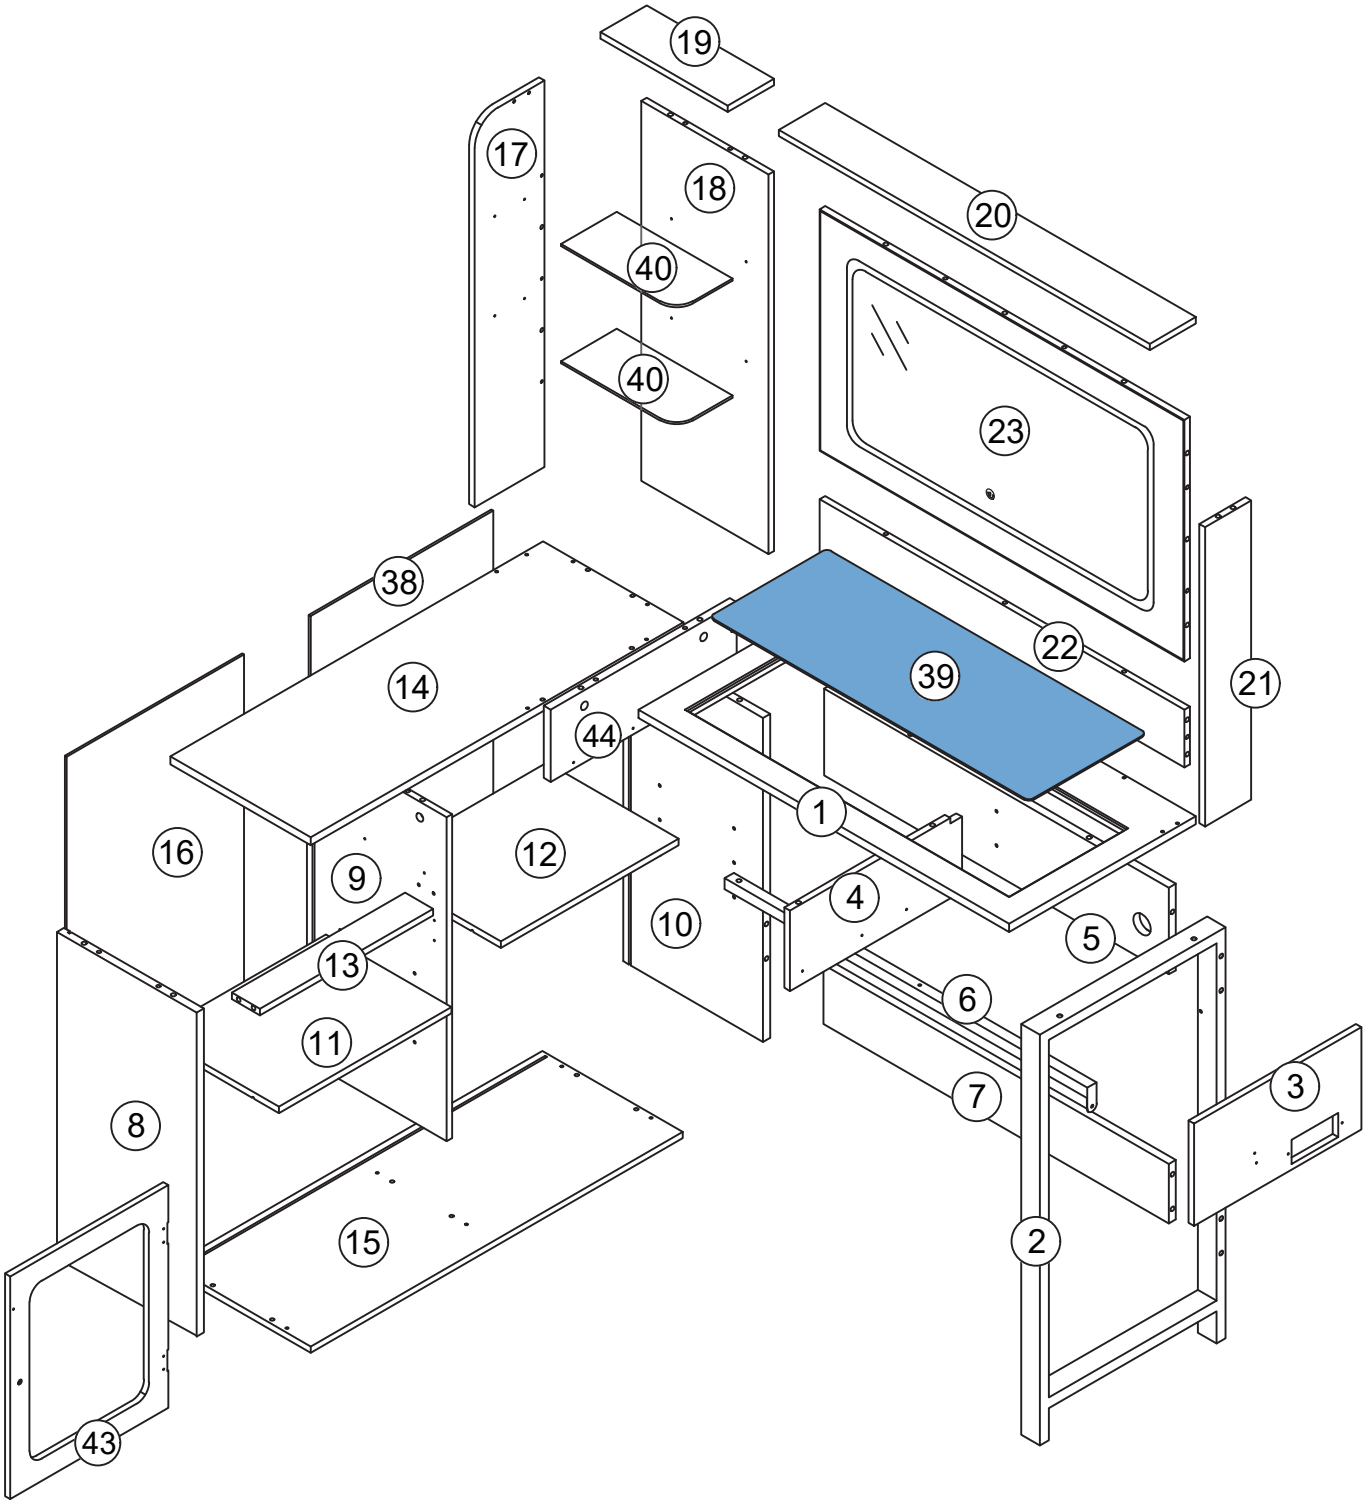



EXPLODED

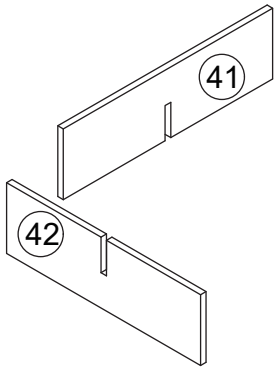

41
42

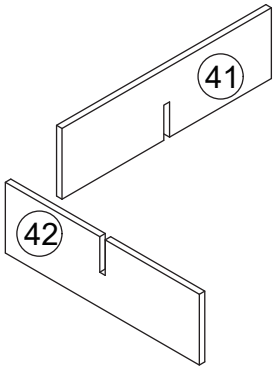
41
42

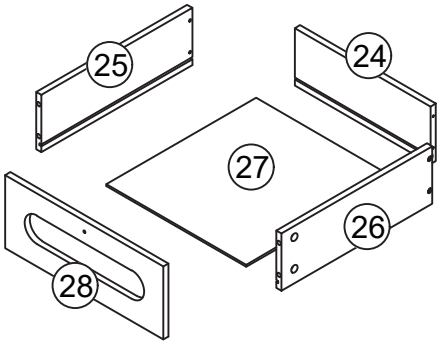

25
24
27
26
28

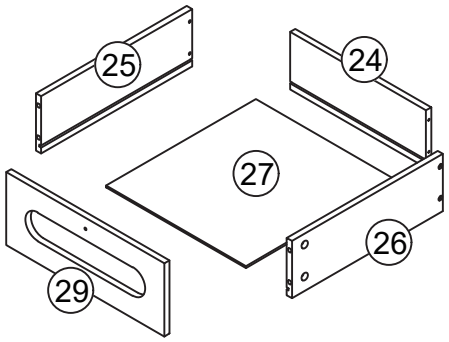
25
24
27
26
29

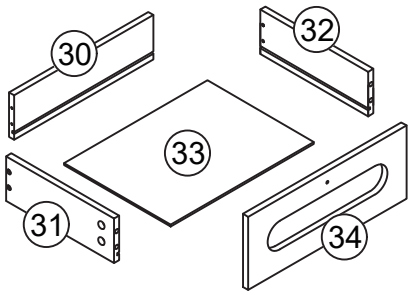

30
32
33
31
34

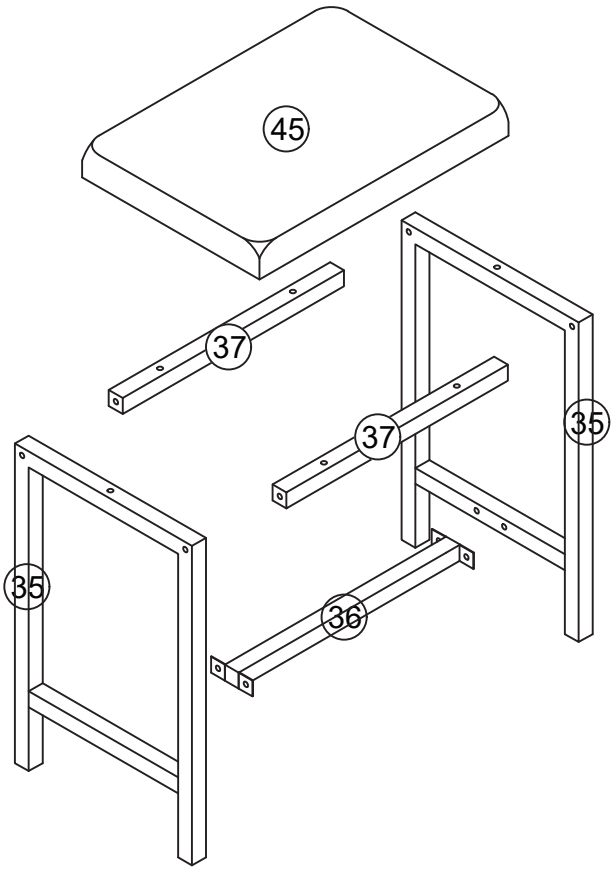
45
37
37
35
35
36


Accessories list

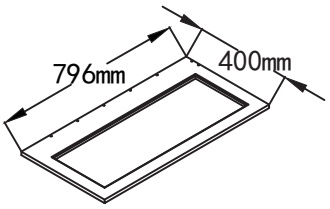


① Qty:1

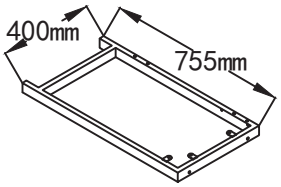


② Qty:1

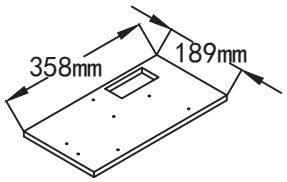


③ Qty:1

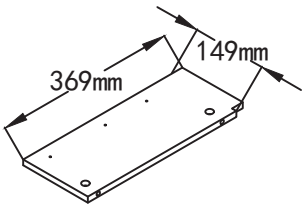


④ Qty:1

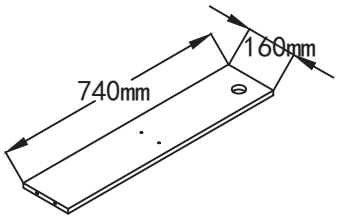


⑤ Qty:1

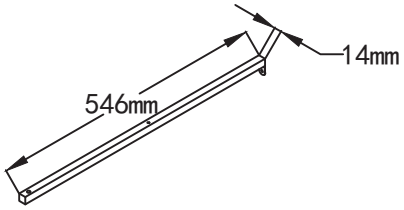


⑥ Qty:1

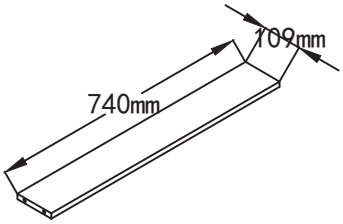


⑦ Qty:1

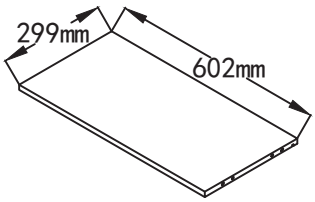


⑧ Qty:1

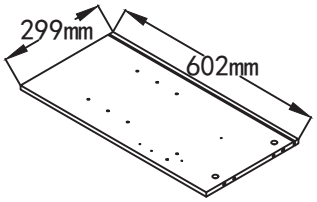


⑨ Qty:1

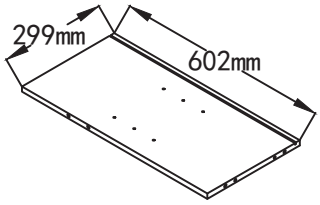


⑩ Qty:1

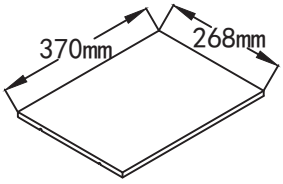


⑪ Qty:1

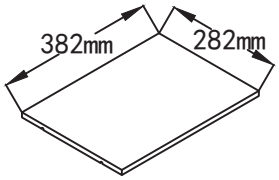


⑫ Qty:1

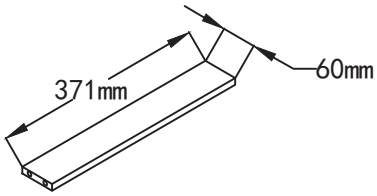

⑬ Qty:1

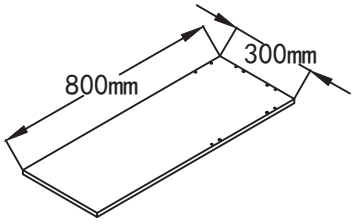


⑭ Qty:1

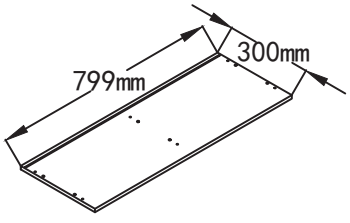


⑮ Qty:1

In many cases, we include additional hardware. Therefore, after following the assembly instructions, do not worry if there are any extra parts - they are provided as a precautionary measure for convenience.


Accessories list

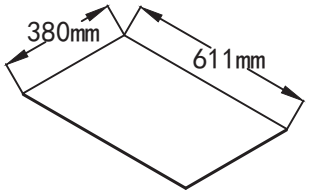


16
Qty:1

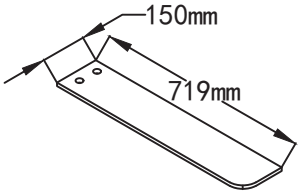


17
Qty:1

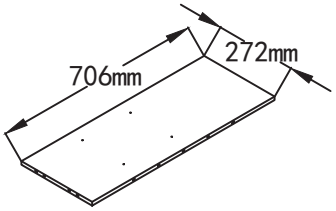


18
Qty:1

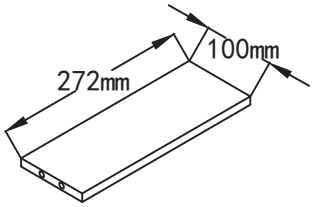


19
Qty:1

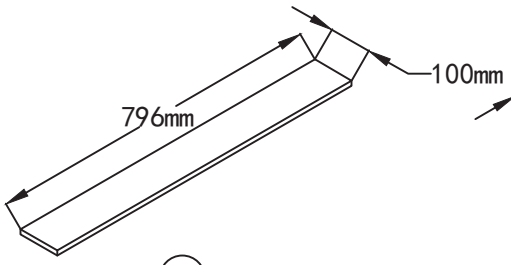


20
Qty:1

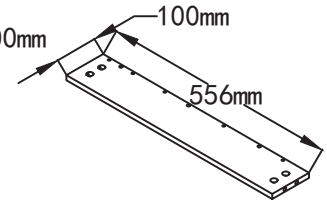


21
Qty:1

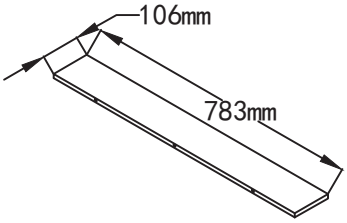


22
Qty:1

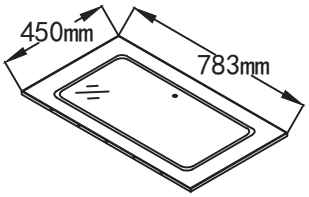


23
Qty:1

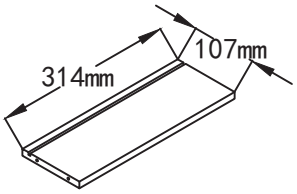


24
Qty:2

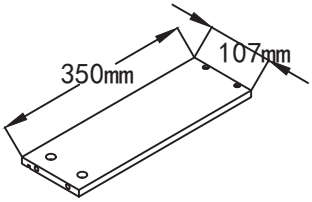


25
Qty:2

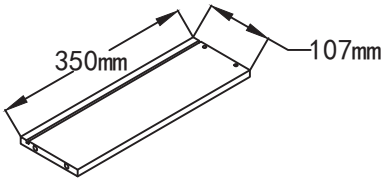


26
Qty:2

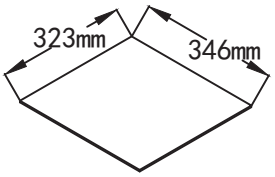


27
Qty:2

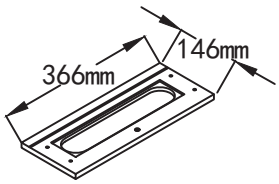

28
Qty:1

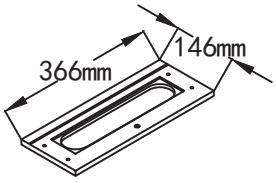


29
Qty:1

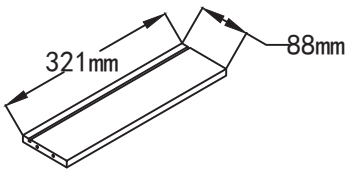


30
Qty:1

In many cases, we include additional hardware. Therefore, after following the assembly instructions, do not worry if there are any extra parts - they are provided as a precautionary measure for convenience.


Accessories list

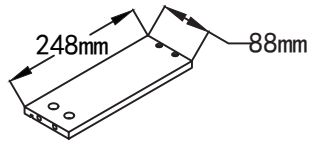


31
Qty:1

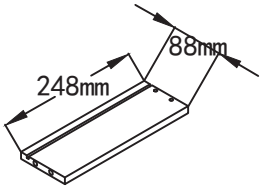


32
Qty:1

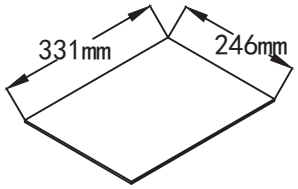


33
Qty:1

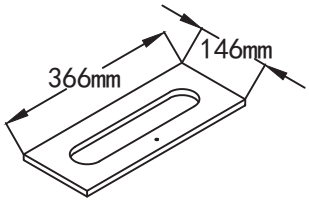


34
Qty:1

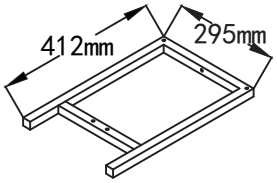


35
Qty:2

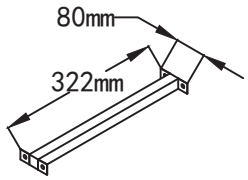


36
Qty:1

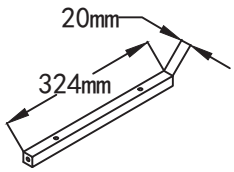


37
Qty:2

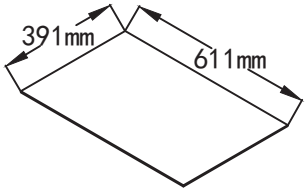


38
Qty:1

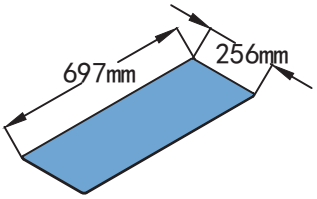


39
Qty:1

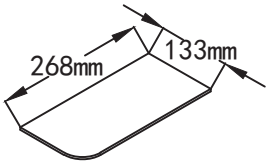


40
Qty:2

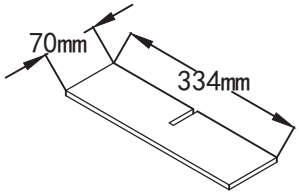


41
Qty:2

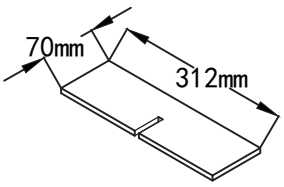


42
Qty:2

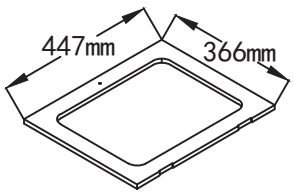

43
Qty:1

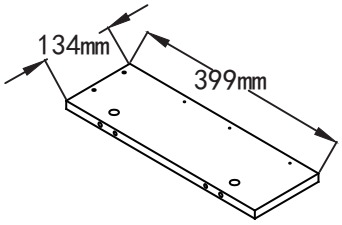









44
Qty:1

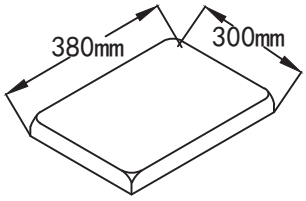

45
Qty:1

In many cases, we include additional hardware. Therefore, after following the assembly instructions, do not worry if there are any extra parts - they are provided as a precautionary measure for convenience.


Accessories list

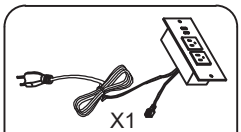 X56+2 Ⓐ M6.5X35mm	 X58+2 Ⓑ Ø15X9.5mm	 X32+2 Ⓒ M6X30mm	 X22+1 Ⓓ M4X40mm	 X1 Ⓔ
 X50+1 Ⓕ M3.5X12mm	 X1 Ⓖ	 X2 Ⓗ	X6 Ⓘ M4X12mm	 X12+1 Ⓙ
 X14+1 Ⓚ M3X14mm	 X6 Ⓛ	 X4 Ⓜ M6X70mm	 X4 Ⓝ M6X15mm	 X3 Ⓞ M6X30mm
 X2 Ⓟ M3.5X12mm	 X1 Ⓠ M4mm	 X2 Ⓡ	 X6 Ⓢ	 X9+1 Ⓣ
 X1 Ⓤ	 X8 Ⓥ	 X8+1 Ⓦ Ø20mm	 X4 Ⓧ M6X40mm	 X8 Ⓨ
 X1 Ⓩ	X19+1 ⓐ M3X12mm	 X4 ⓑ	 X4 ⓒ	 X3 ⓓ M4X40mm
 X2 ⓔ	 X1 ⓕ	 X1 ⓖ	 X2 ⓗ	 X6 ⓘ M6X35mm
 X1	 X2 CL 350mm	 X2 CR 350mm	 X2 DR 350mm	 X2 DL 350mm
X1 CL 250mm	X1 CR 250mm	X1 DR 250mm	X1 DL 250mm	


In many cases, we include additional hardware. Therefore, after following the assembly instructions, do not worry if there are any extra parts - they are provided as a precautionary measure for convenience.


step 1



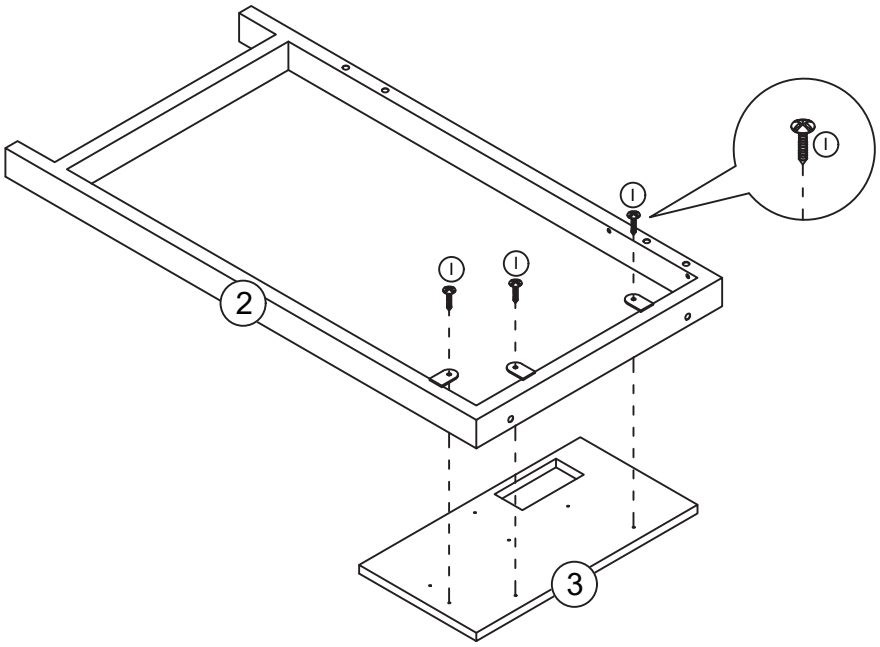


step 2

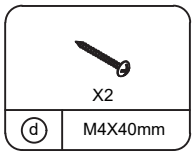


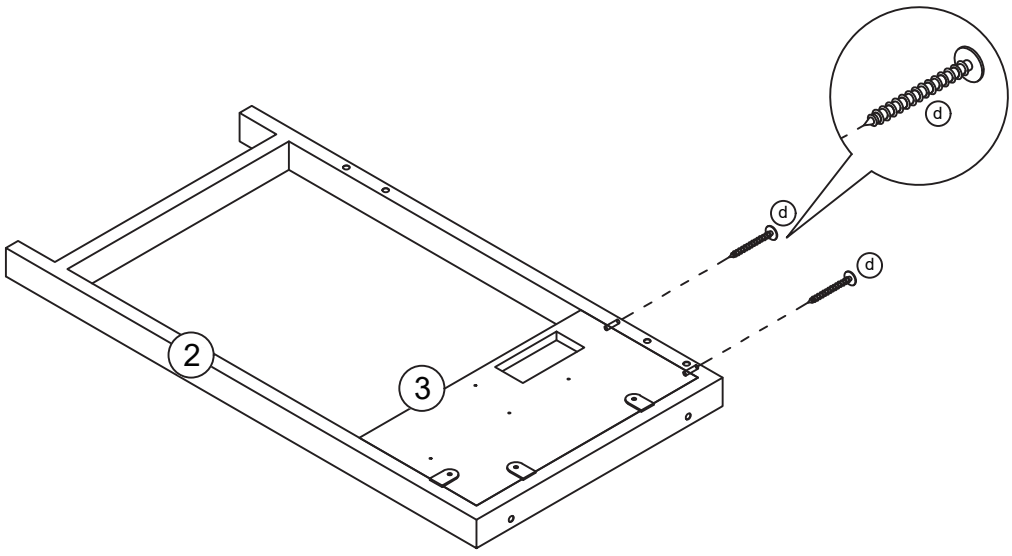


step 3

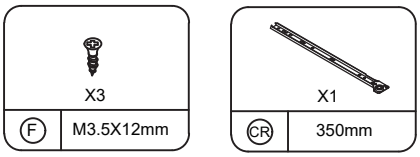



X3
F
M3.5X12mm
X1
CR
350mm

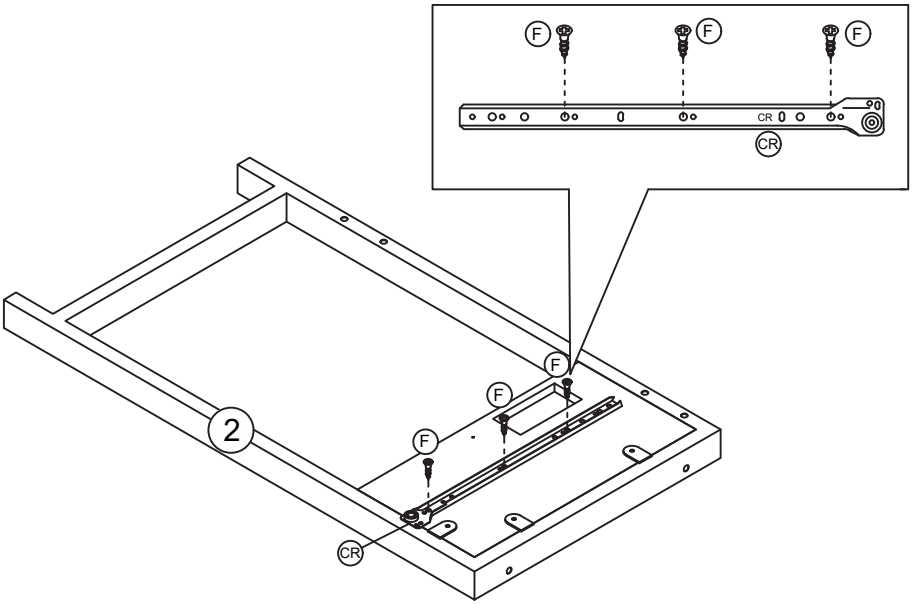

F
F
F
CR
CR
2
F
F
F
CR


step 4

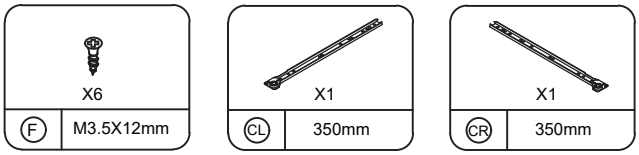
X6
F
M3.5X12mm
X1
CL
350mm
X1
CR
350mm

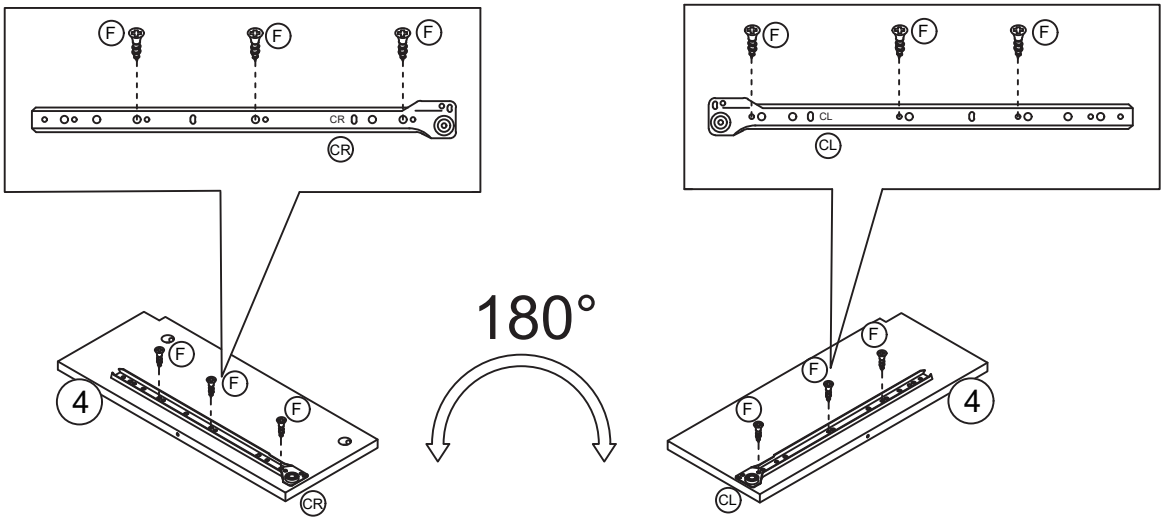

F
F
F
CR
CR
4
F
F
F
F
CR
180°
F
F
F
F
CL
CL
4


step 5

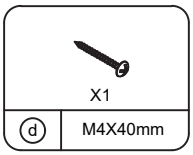

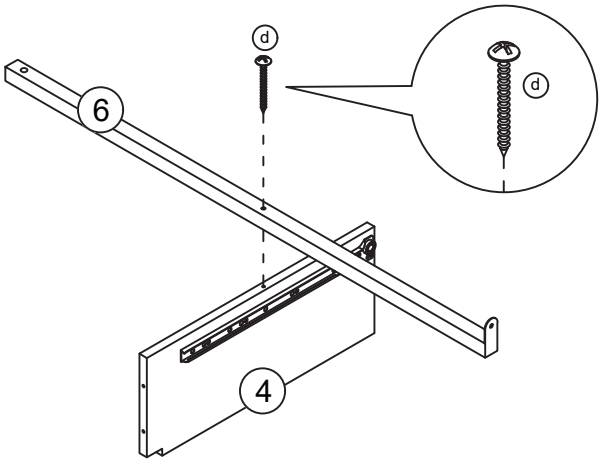


step 6

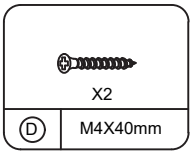


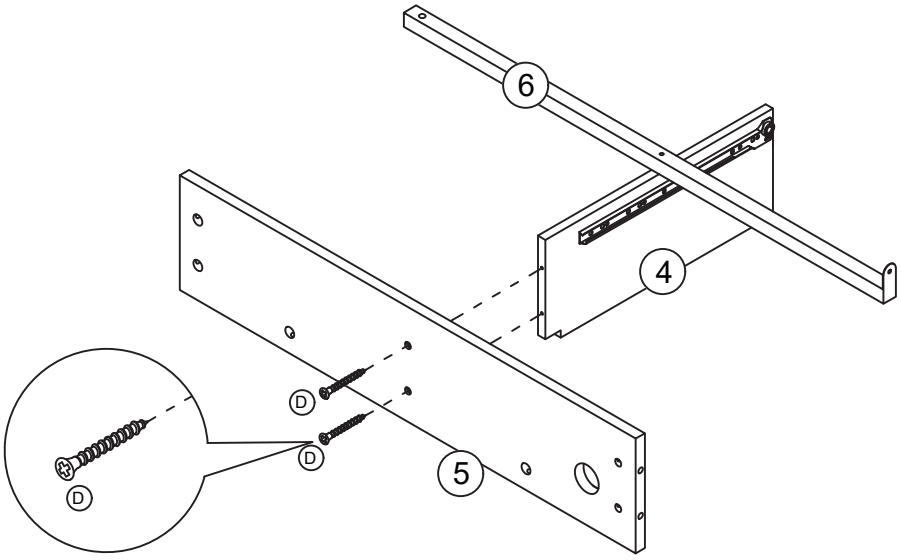

step 7




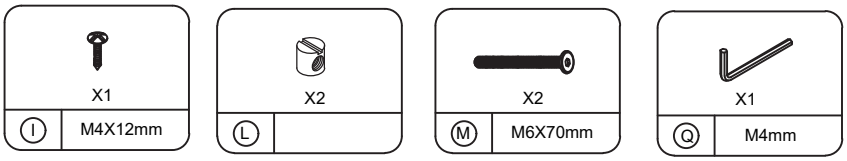


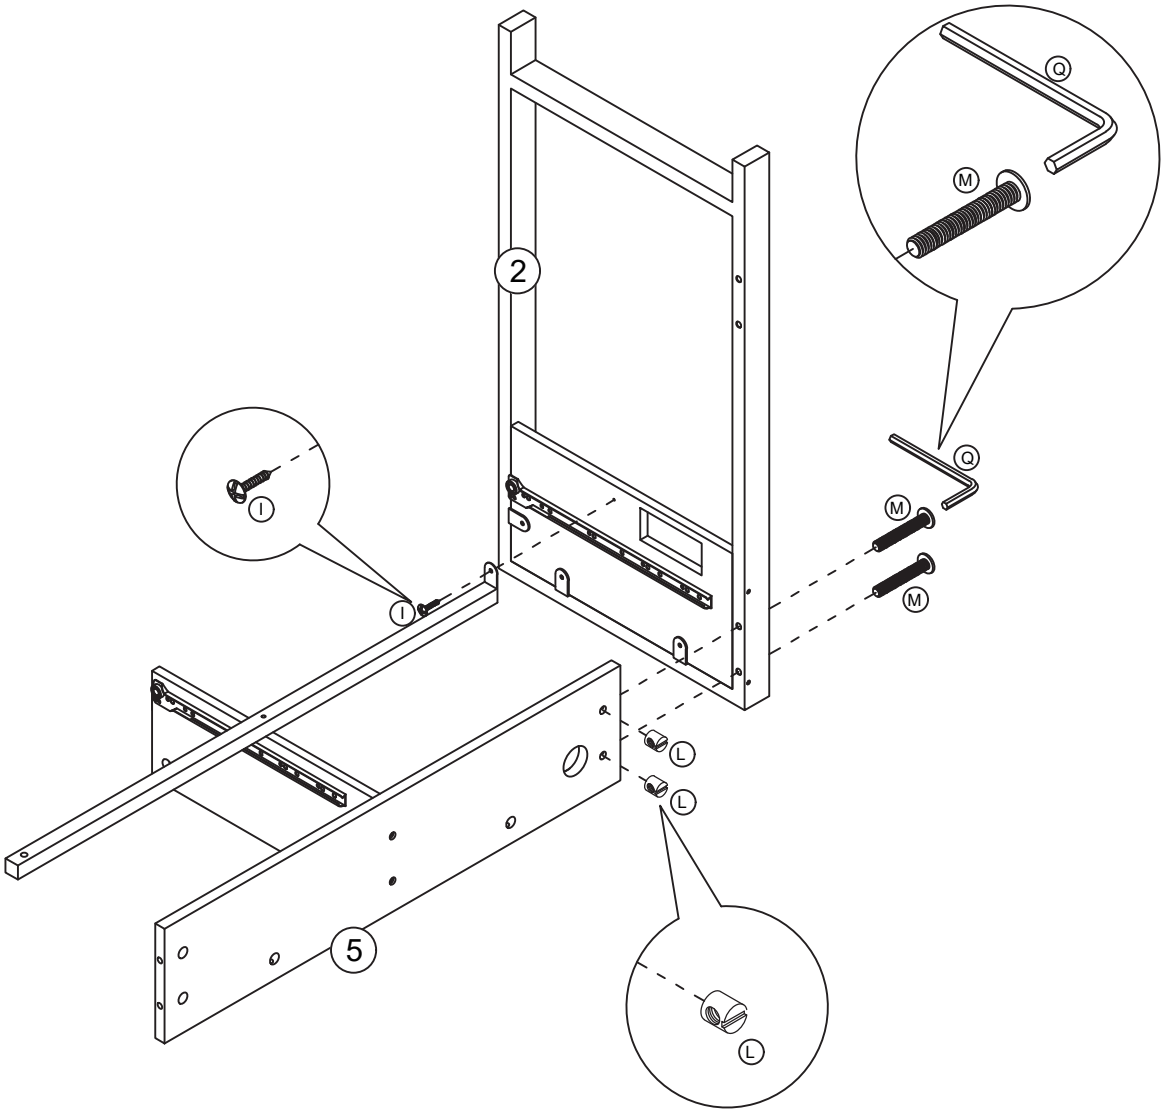



step 8



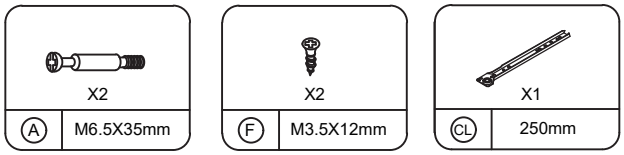

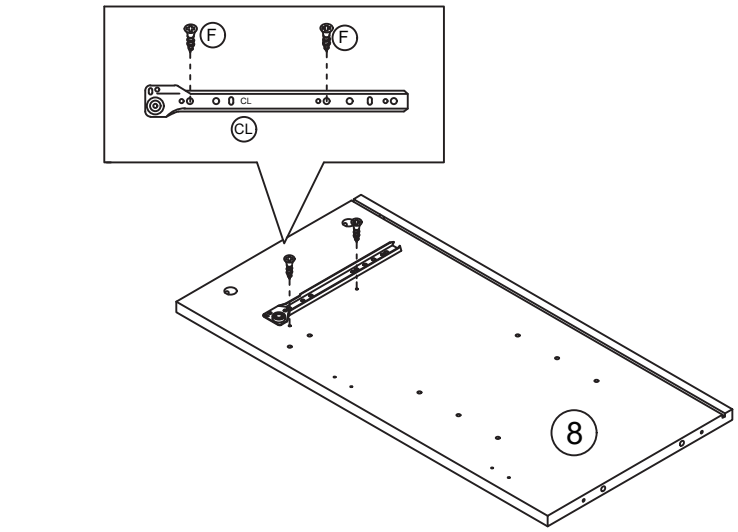


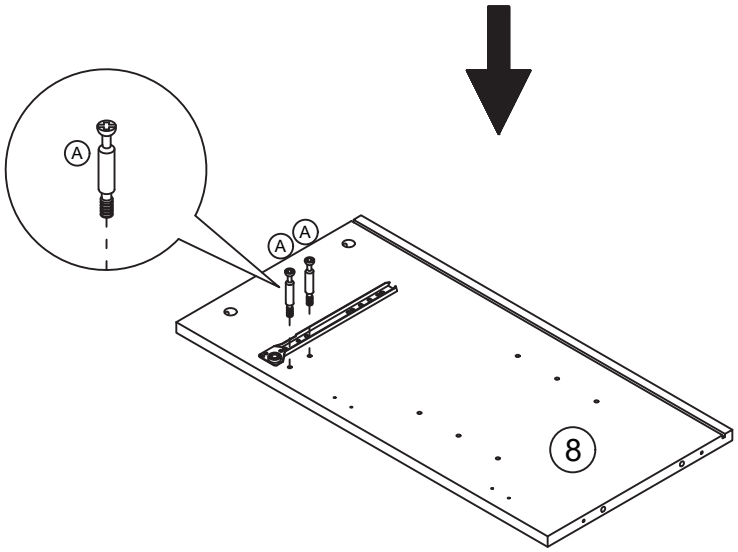


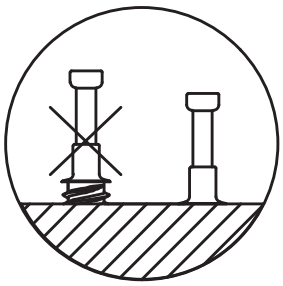


step 9


X2	X2	X1	X2	X1
Ⓐ M6.5X35mm	Ⓕ M3.5X12mm	CR 250mm	Ⓚ M3X14mm	ⓕ

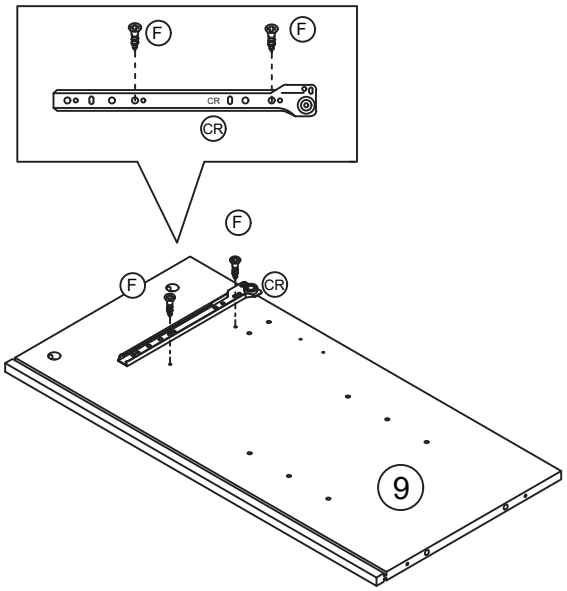


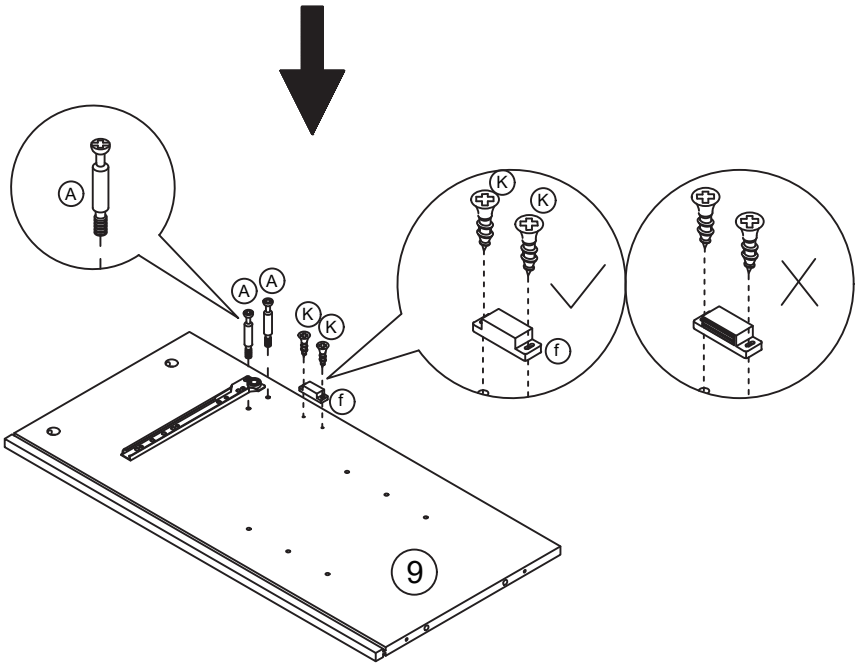

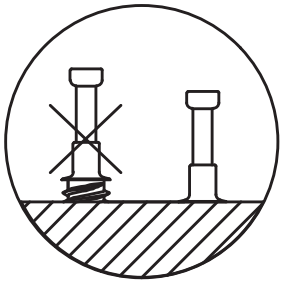


step 10

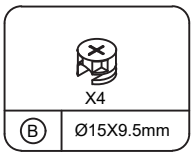

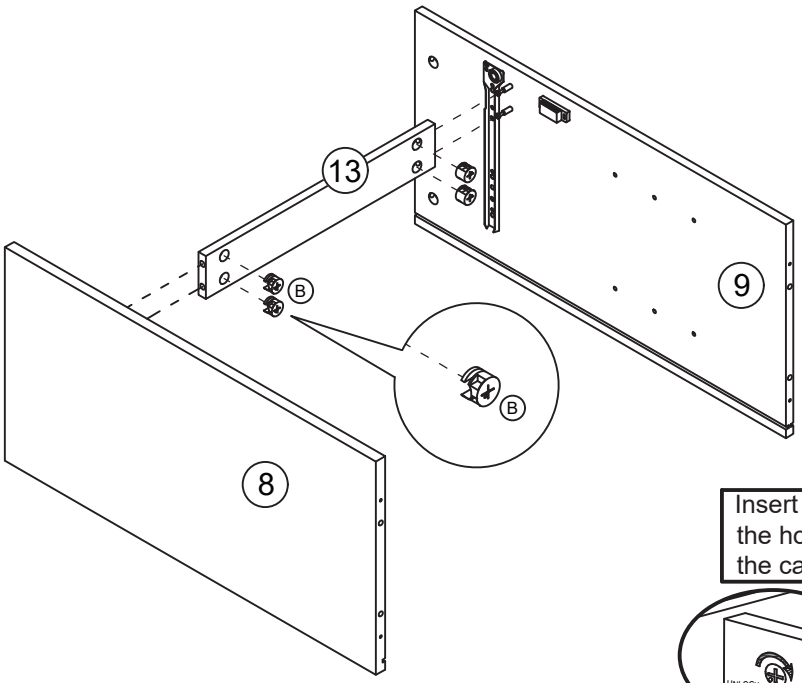



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

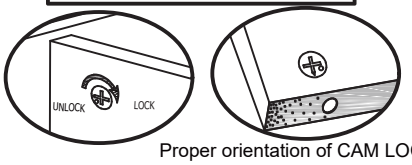

Proper orientation of CAM LOCK


step 11

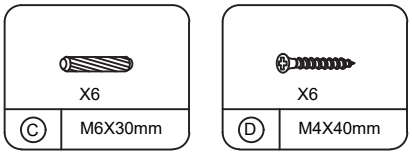

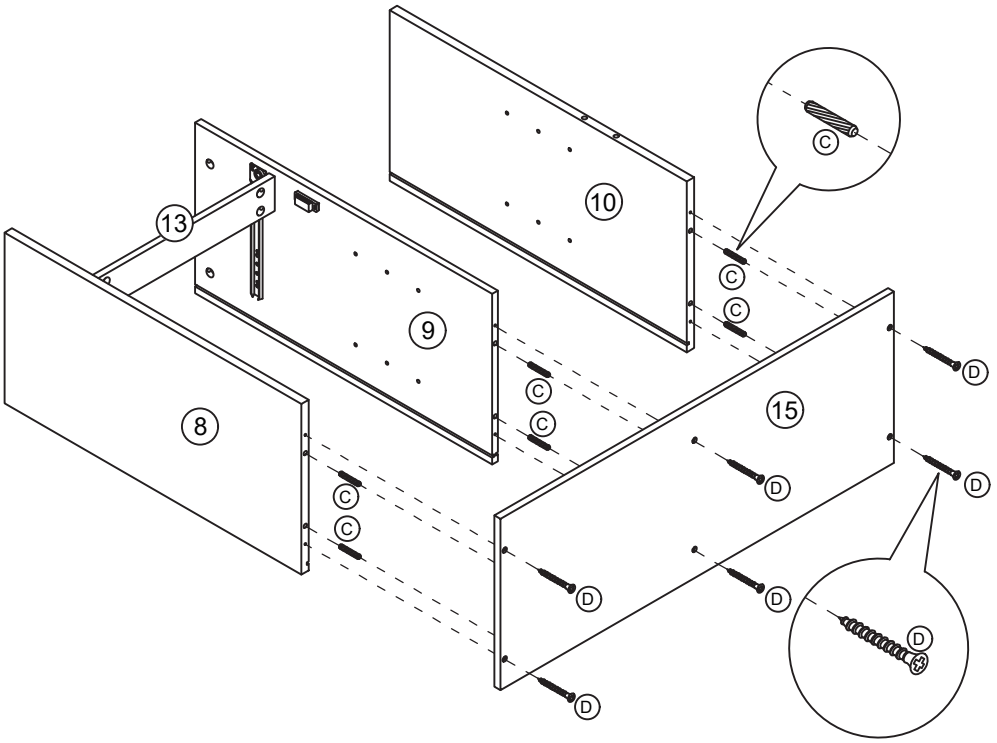


step 12




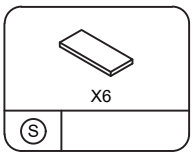


Peel off the film and stick it to the bottom of the cabinet feet.

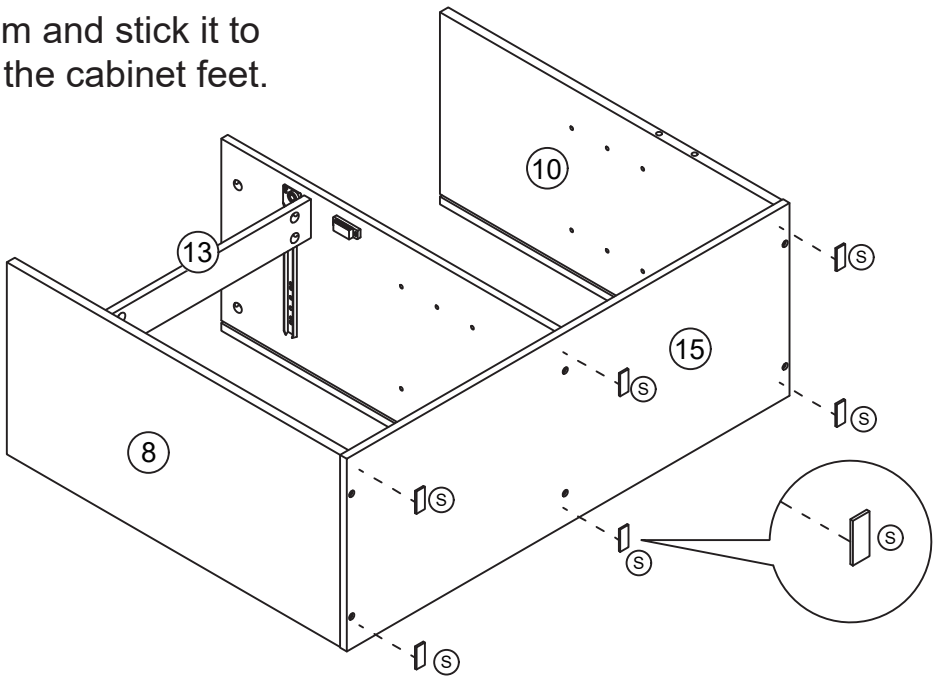



step 13

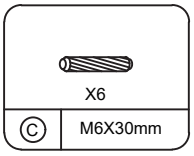


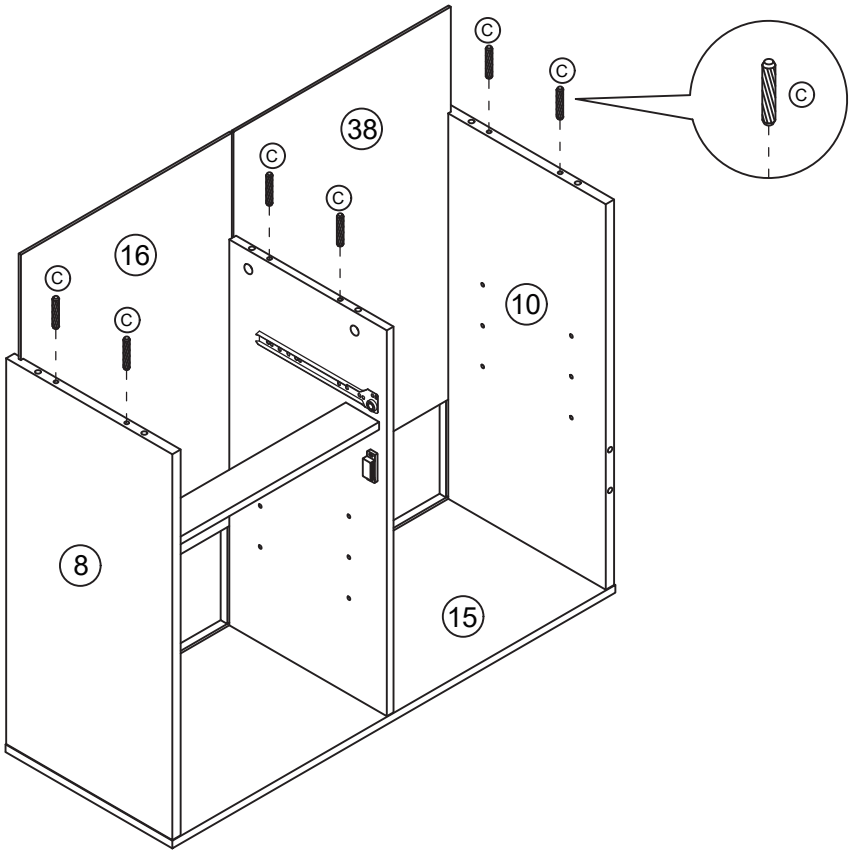


step 14

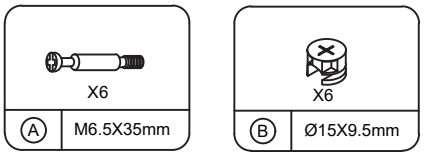

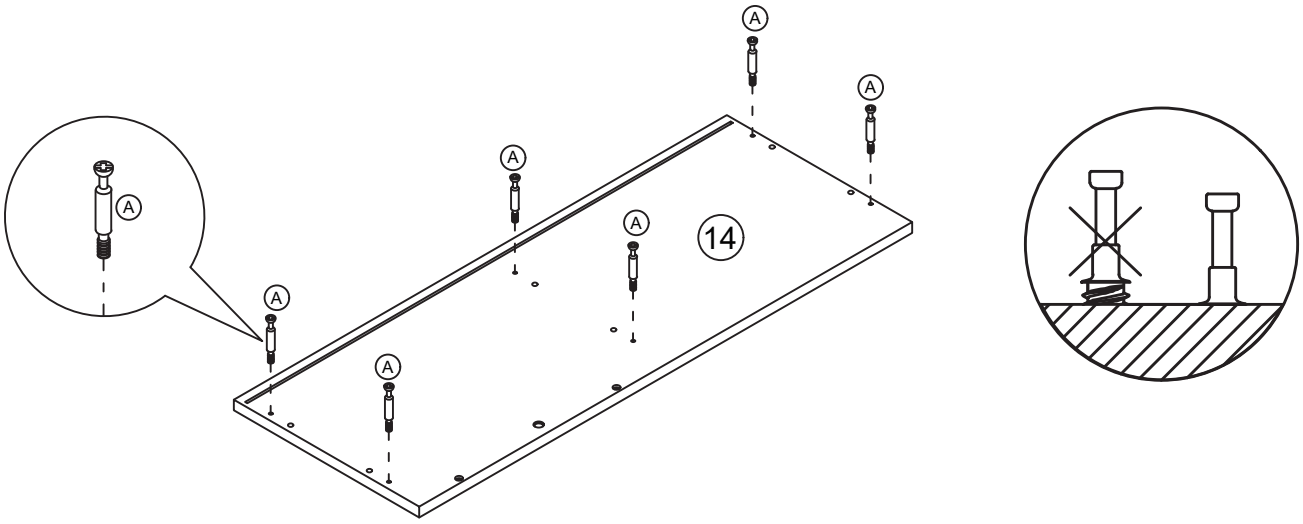

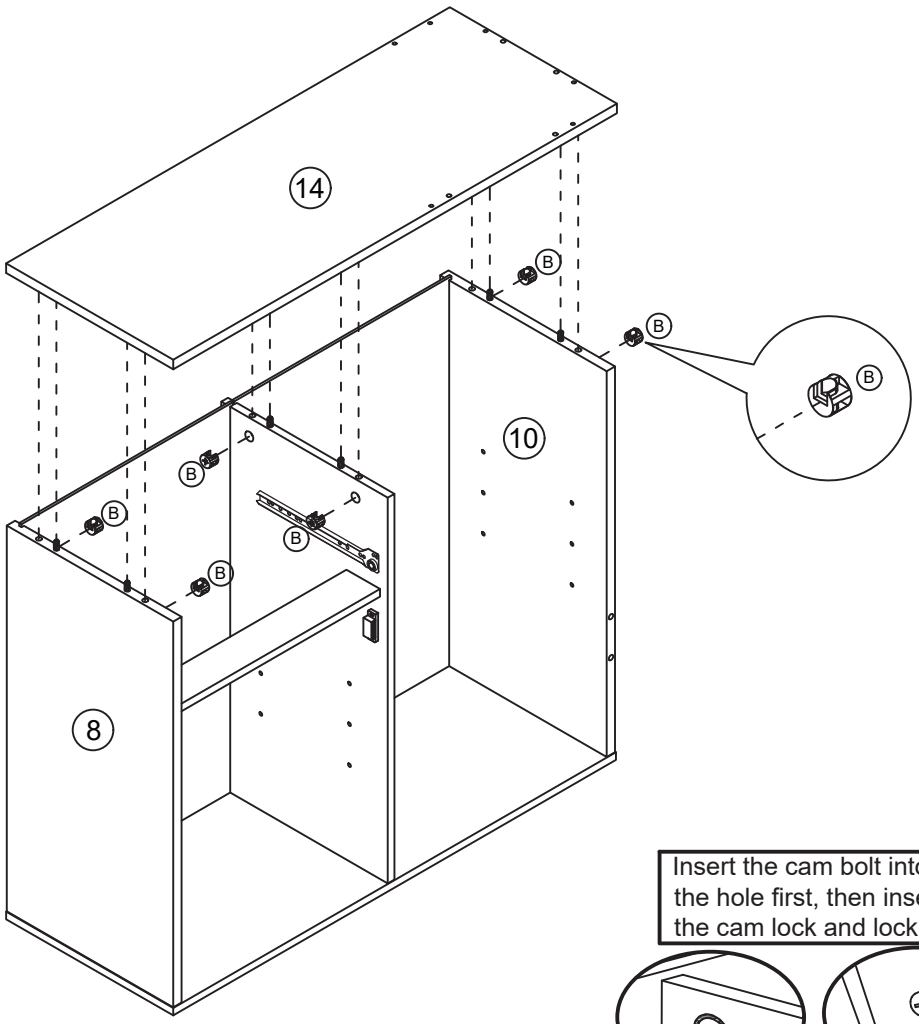



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

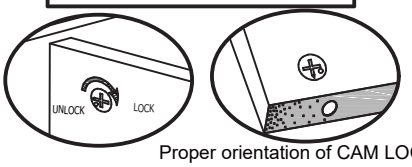



Proper orientation of CAM LOCK

step 15

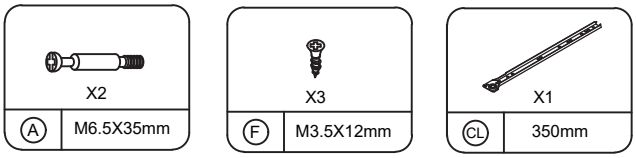

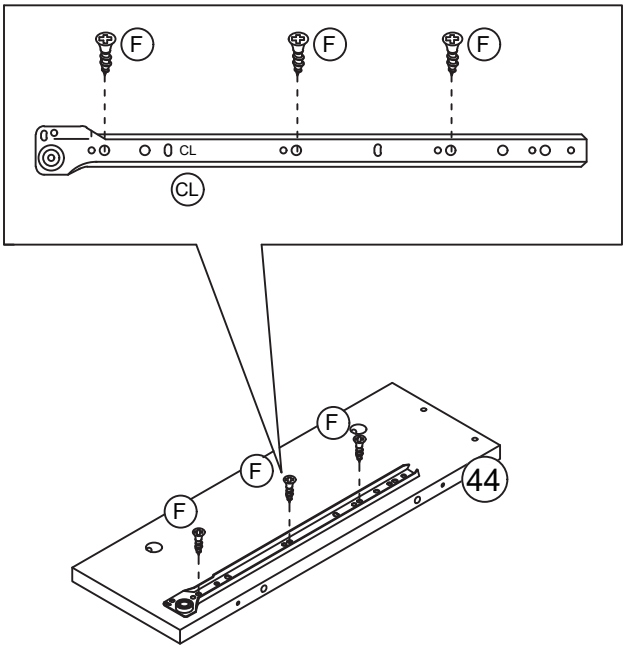


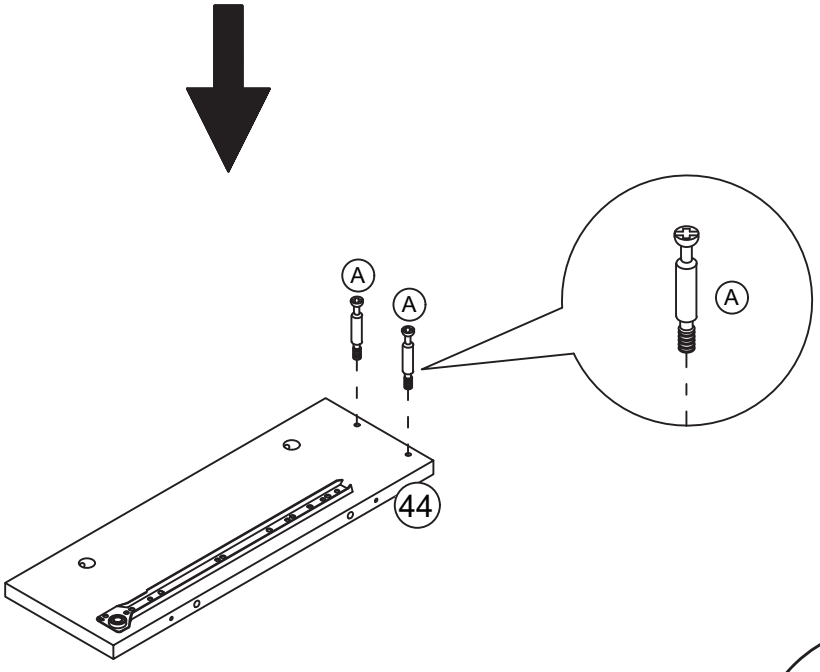


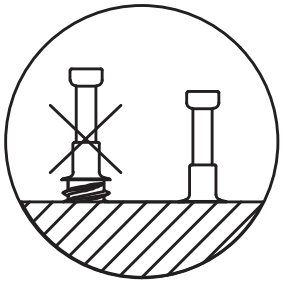


step 16




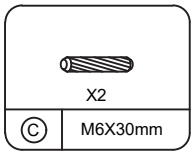


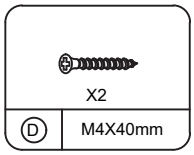

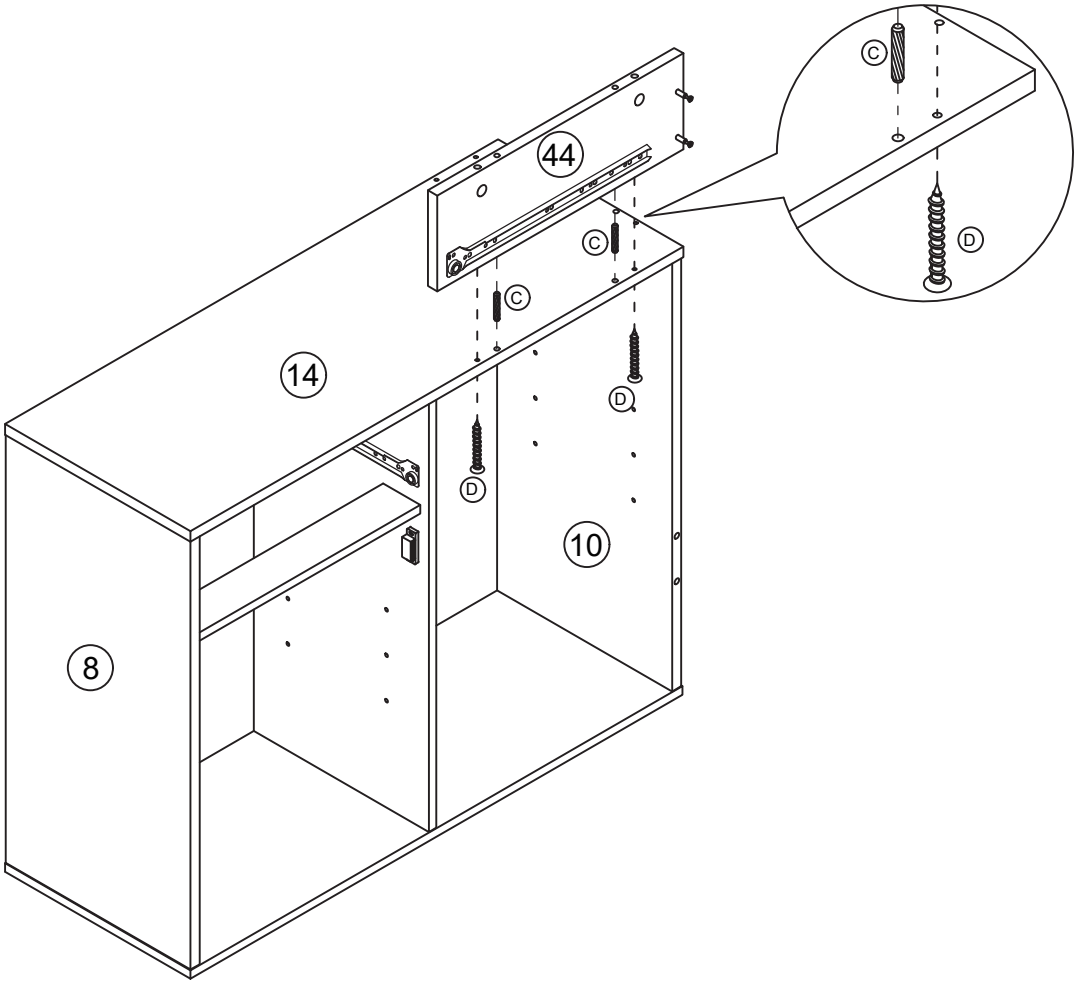


step 17

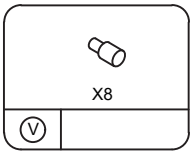


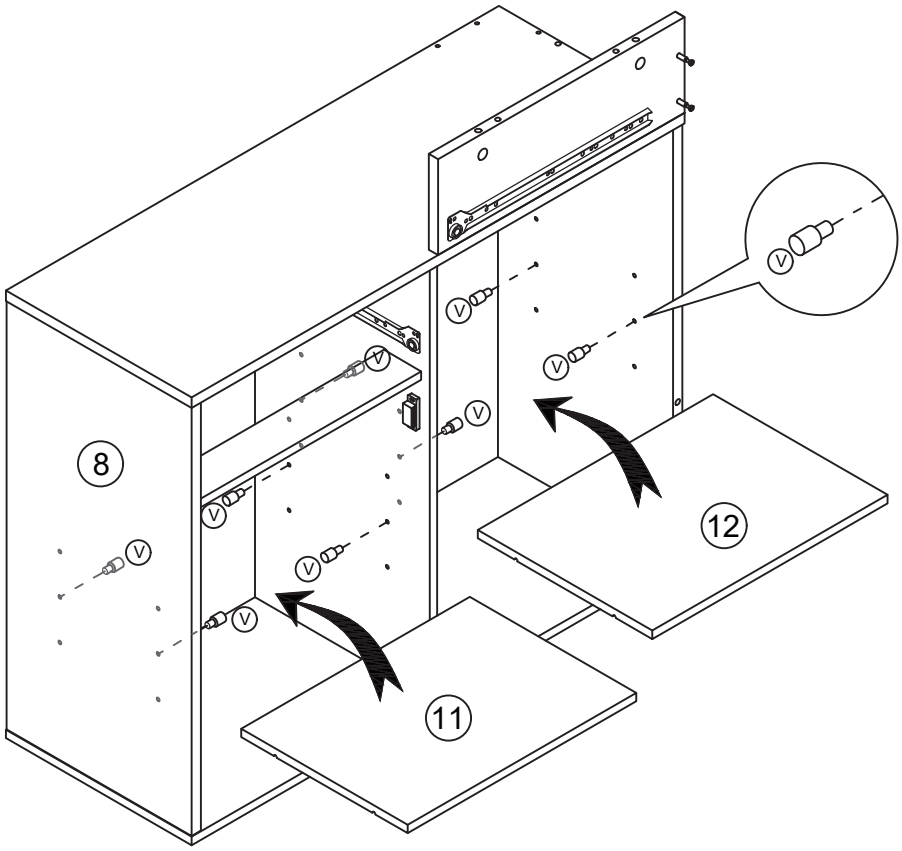


step 18




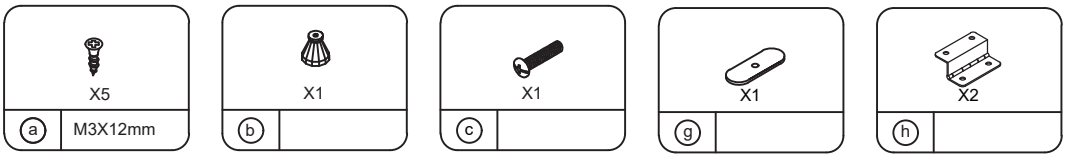

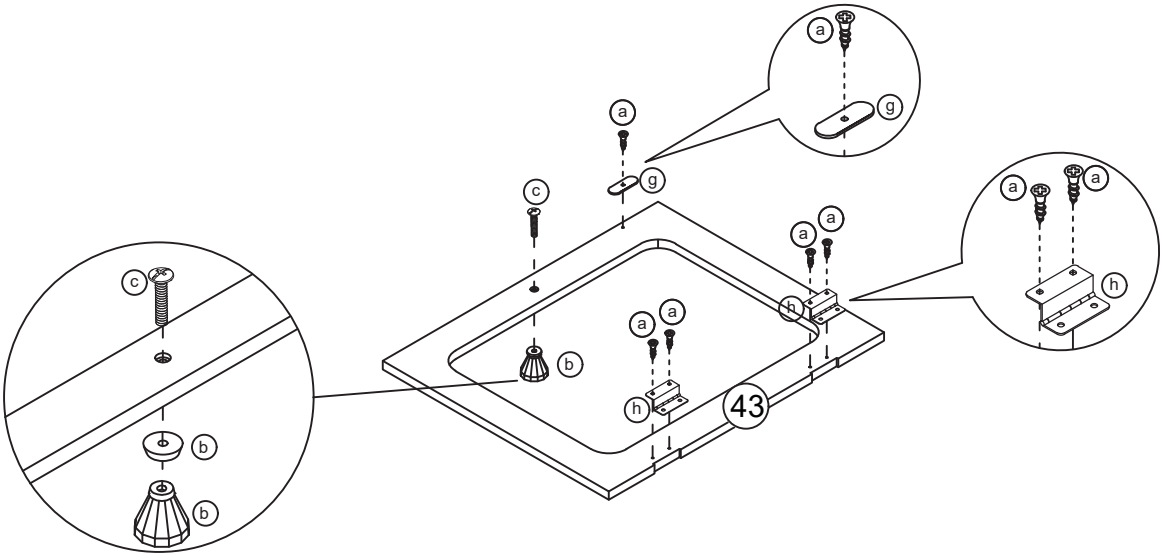


step 19

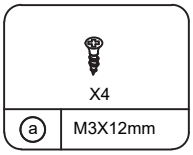


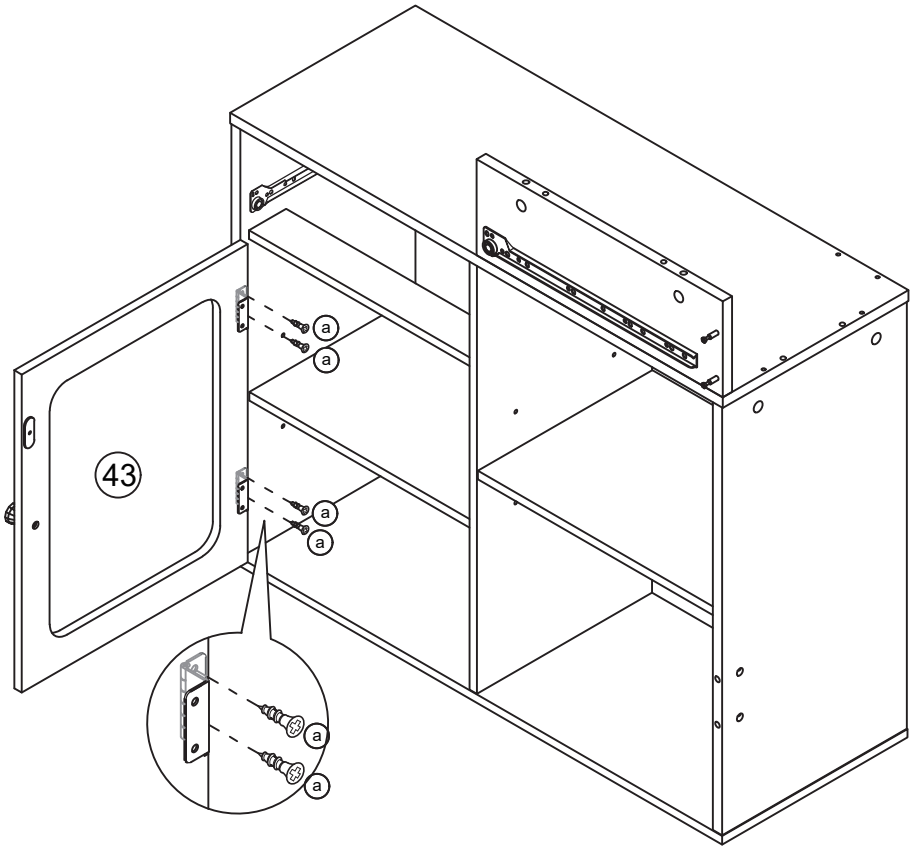


step 20




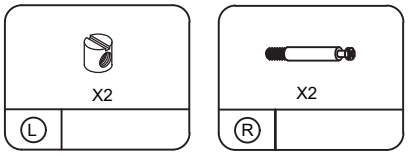


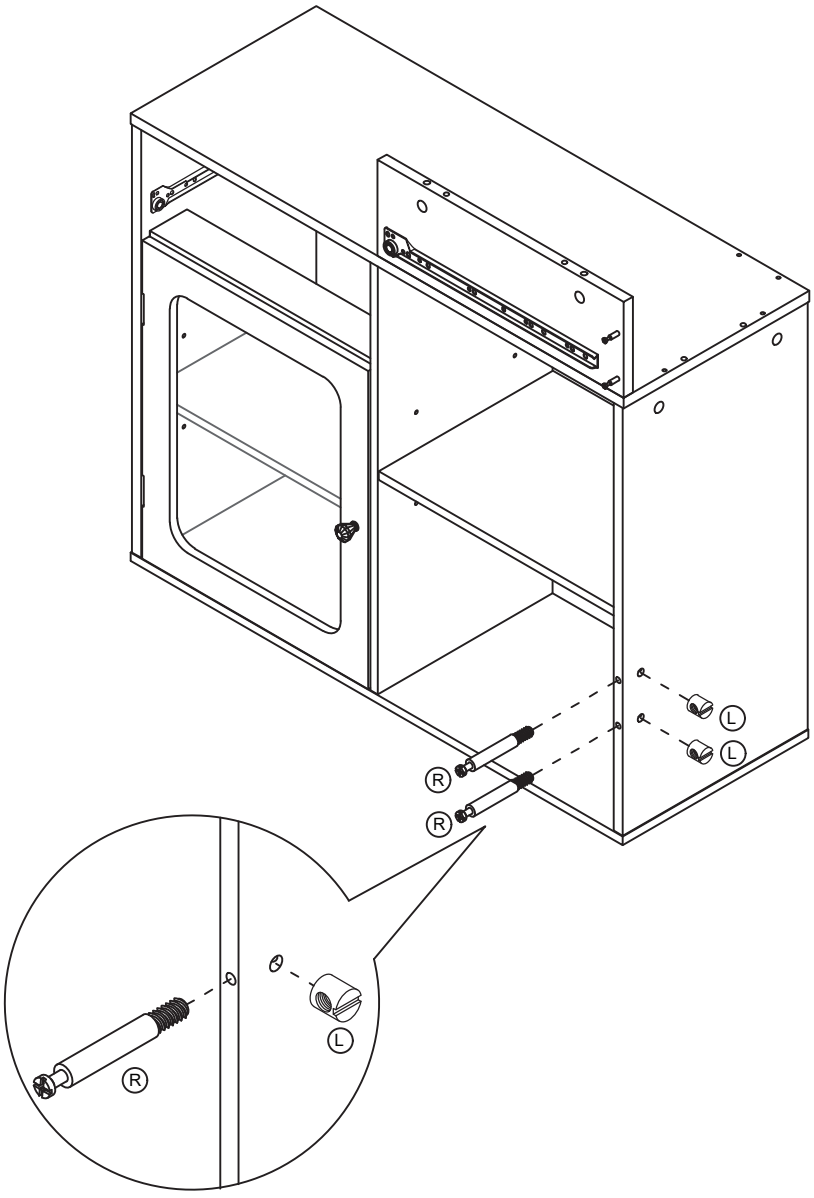





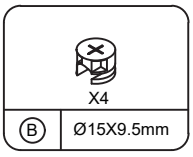

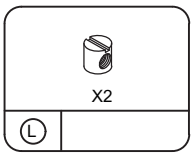


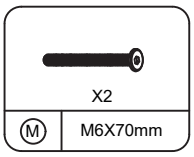

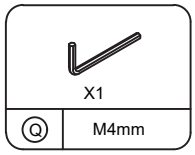

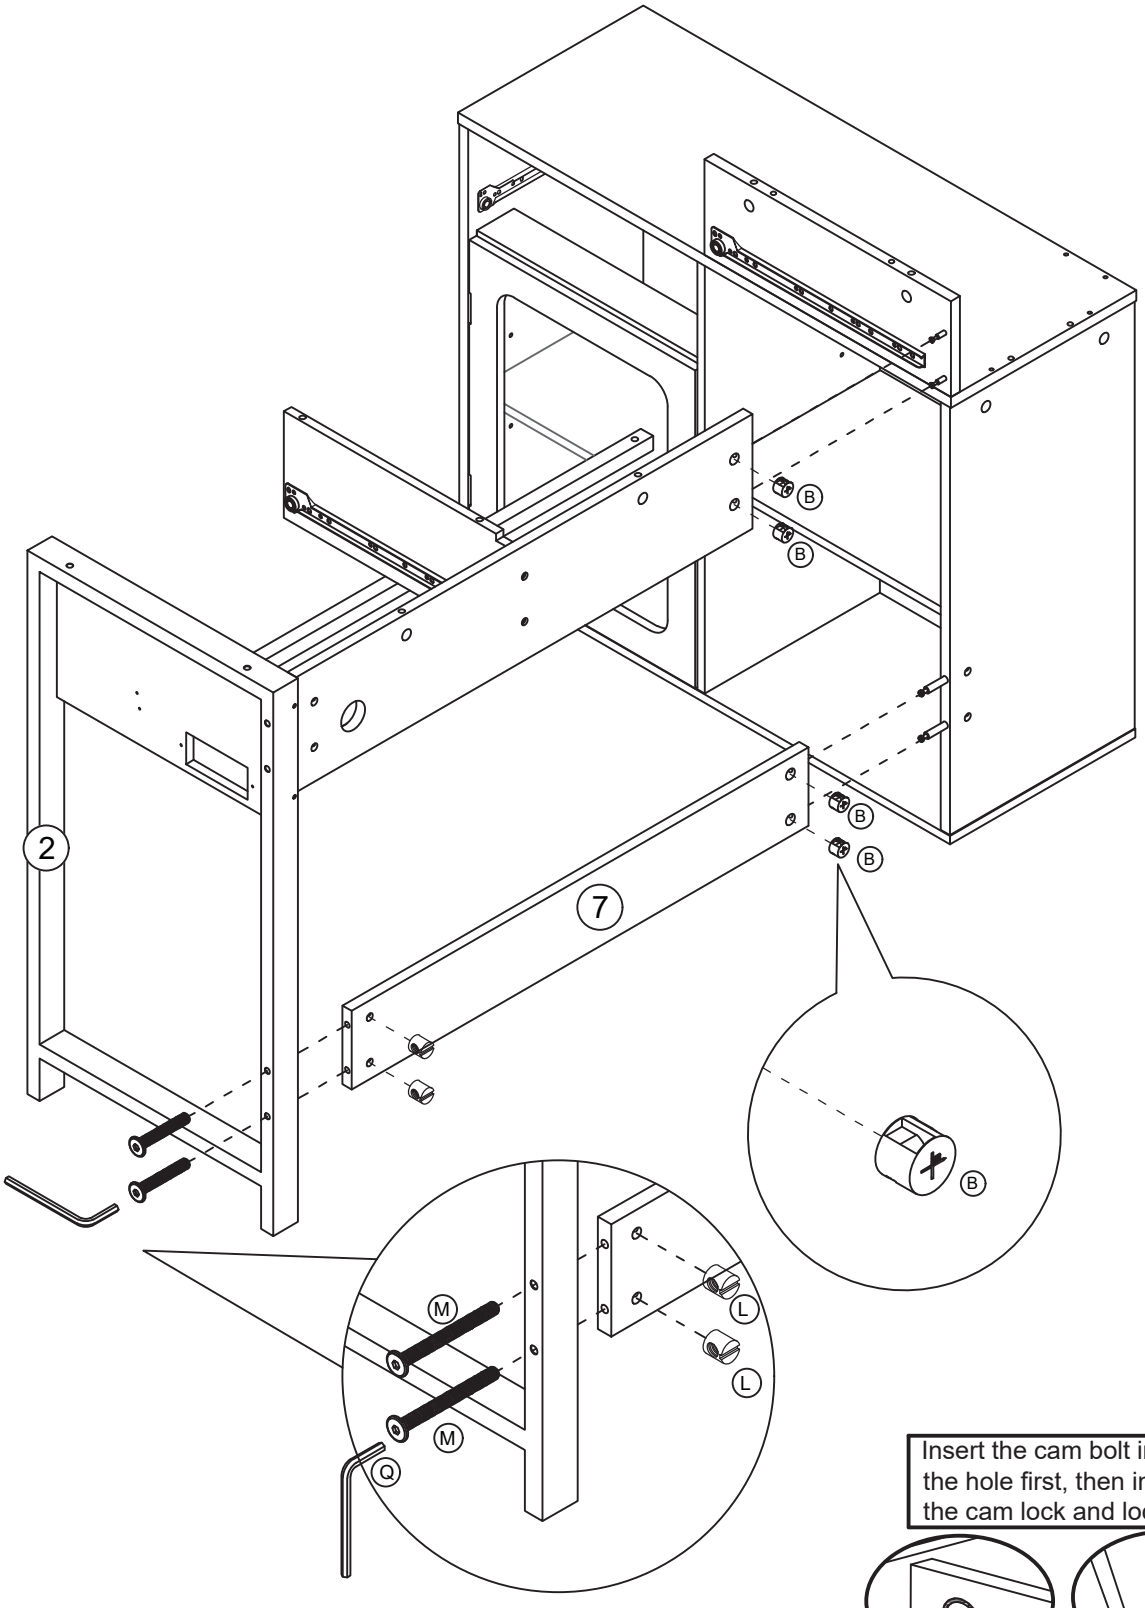



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

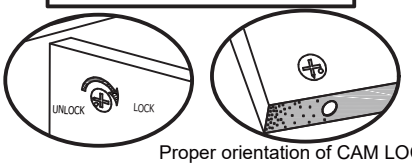


Proper orientation of CAM LOCK


step 22

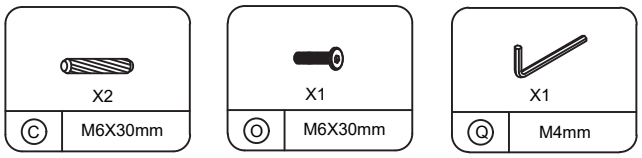


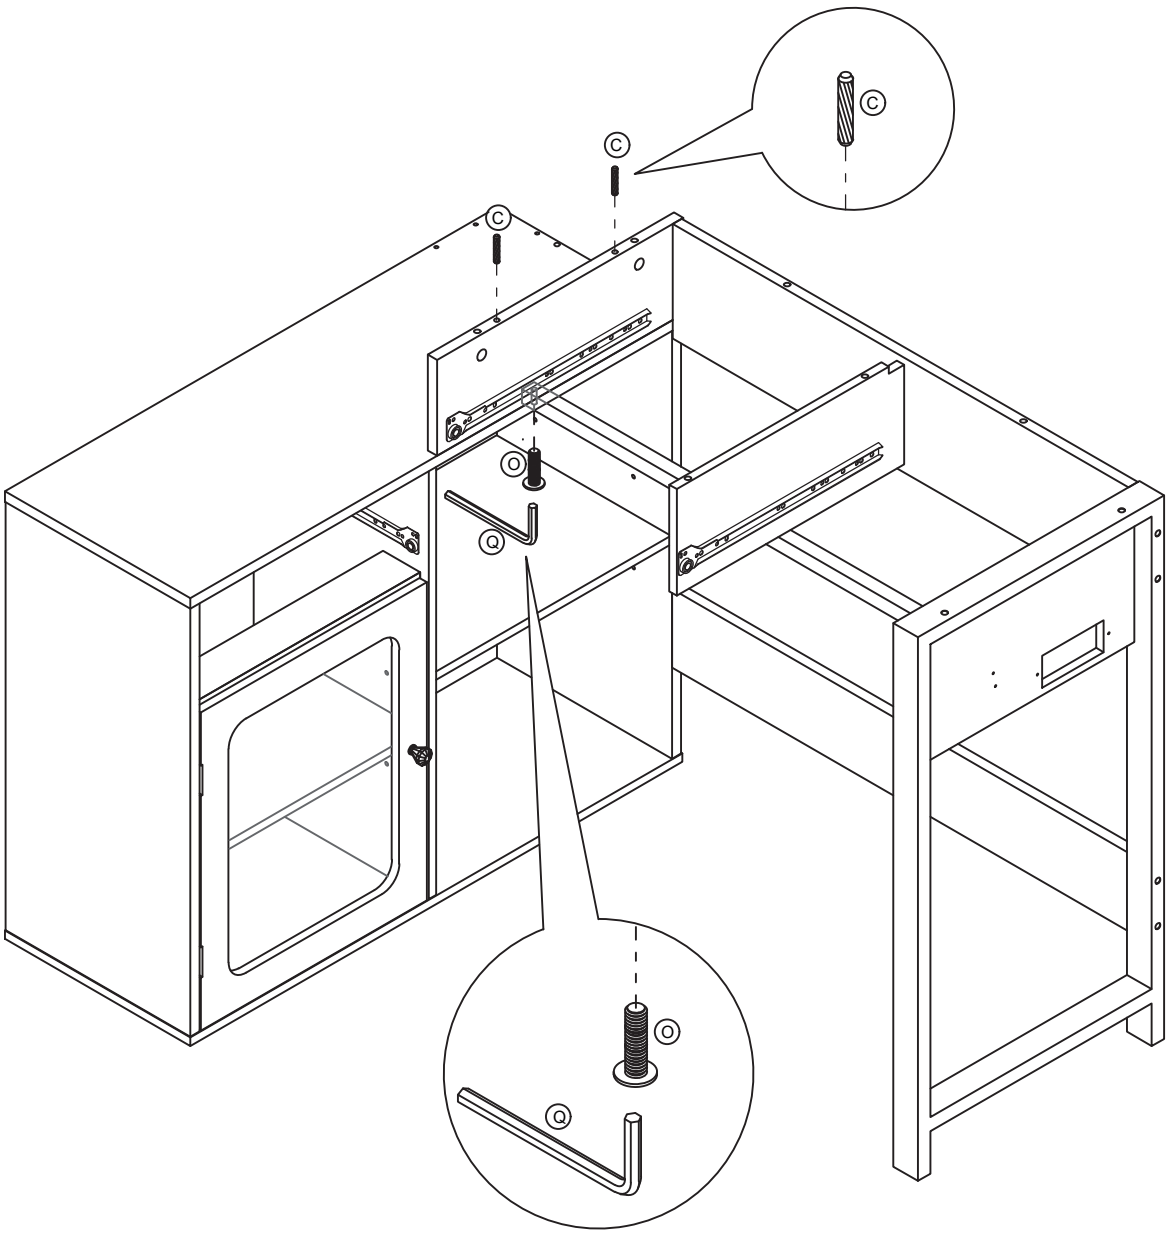



step 23

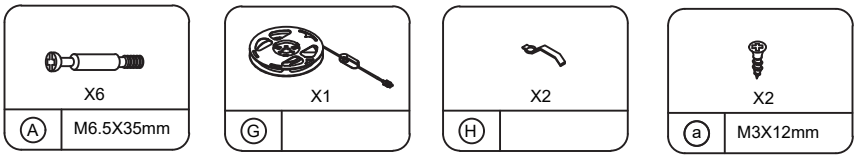
X6
A
M6.5X35mm
X1
G
X2
H
X2
a
M3X12mm

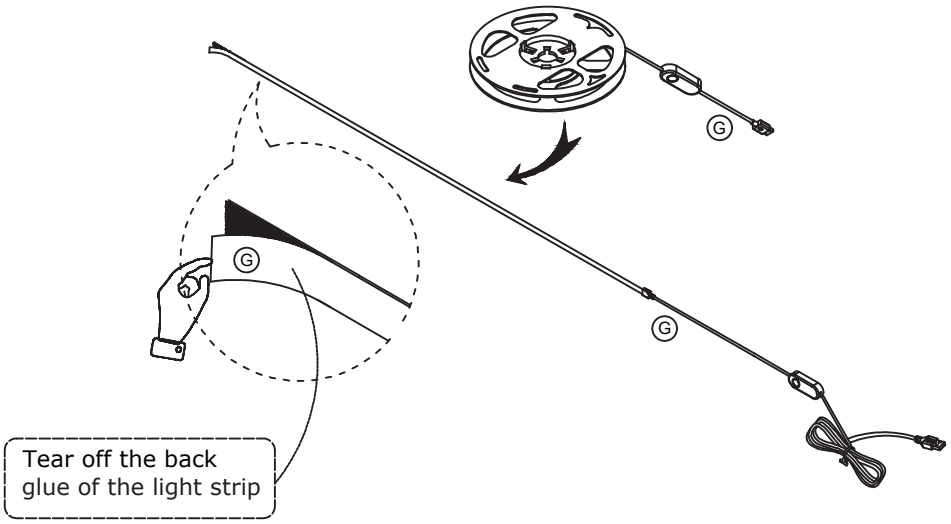
G
G
G
Tear off the back
glue of the light strip

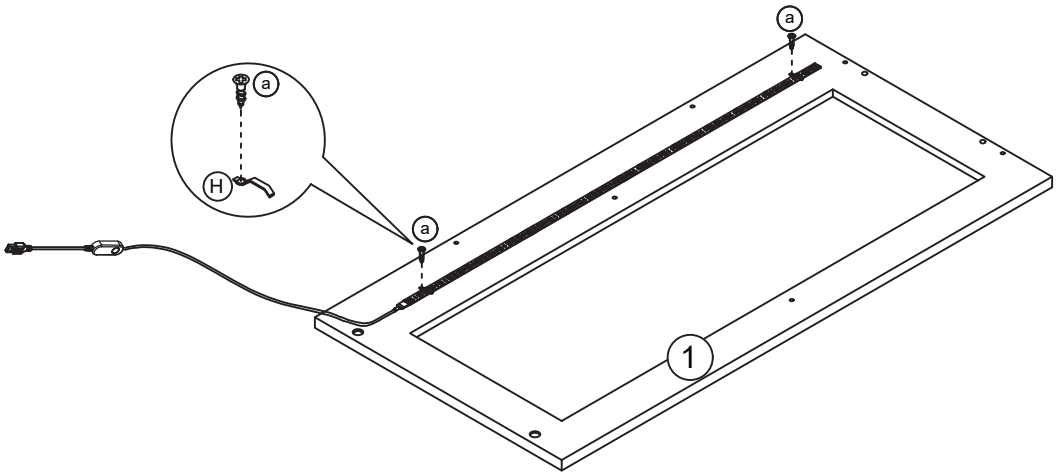

a
a
H
a
1

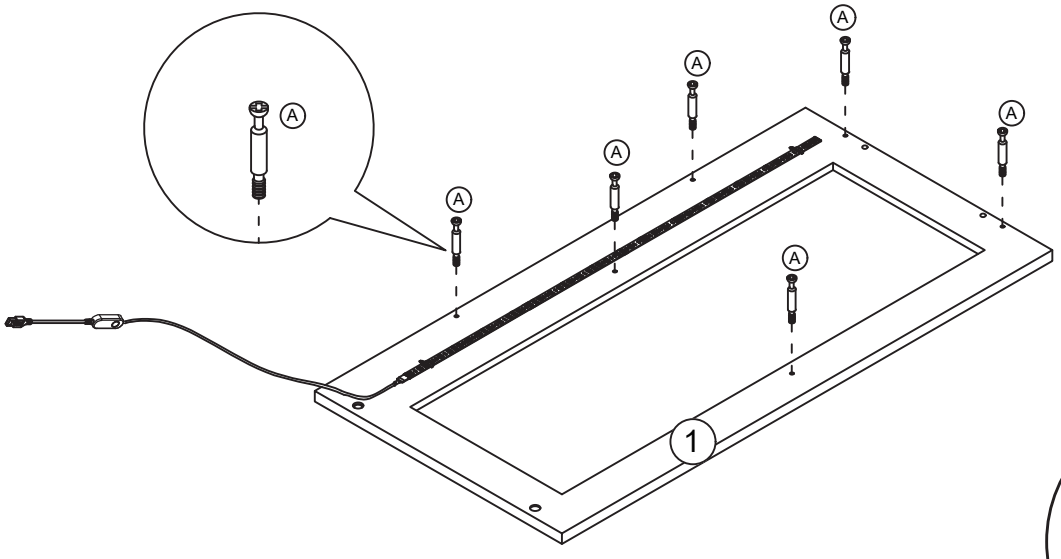

A
A
A
A
A
A
A
1

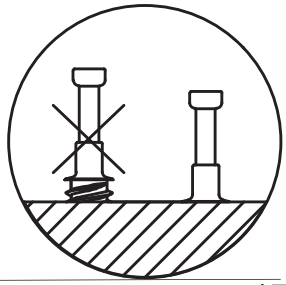



step 24



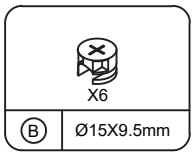


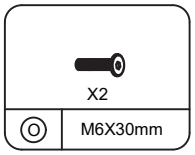

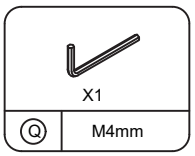

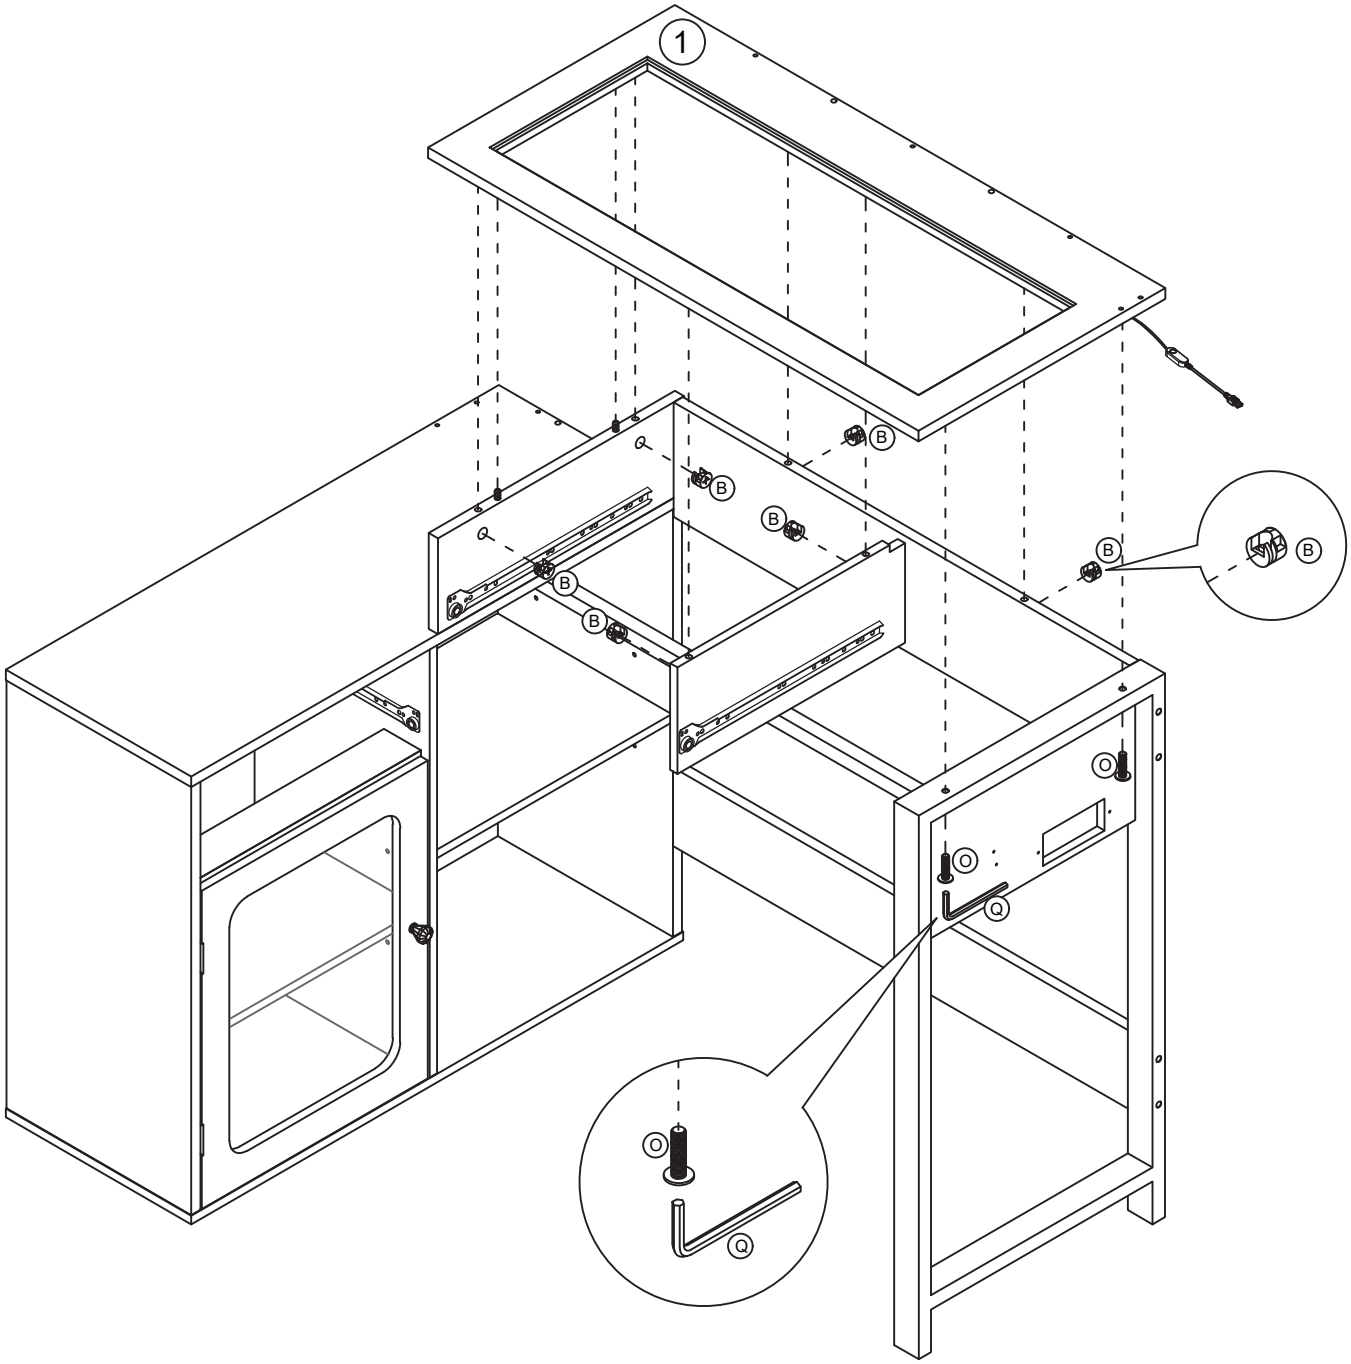



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

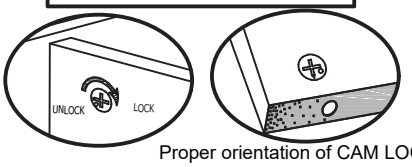


Proper orientation of CAM LOCK

step 25

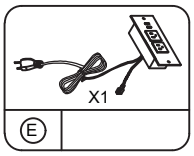

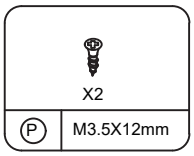





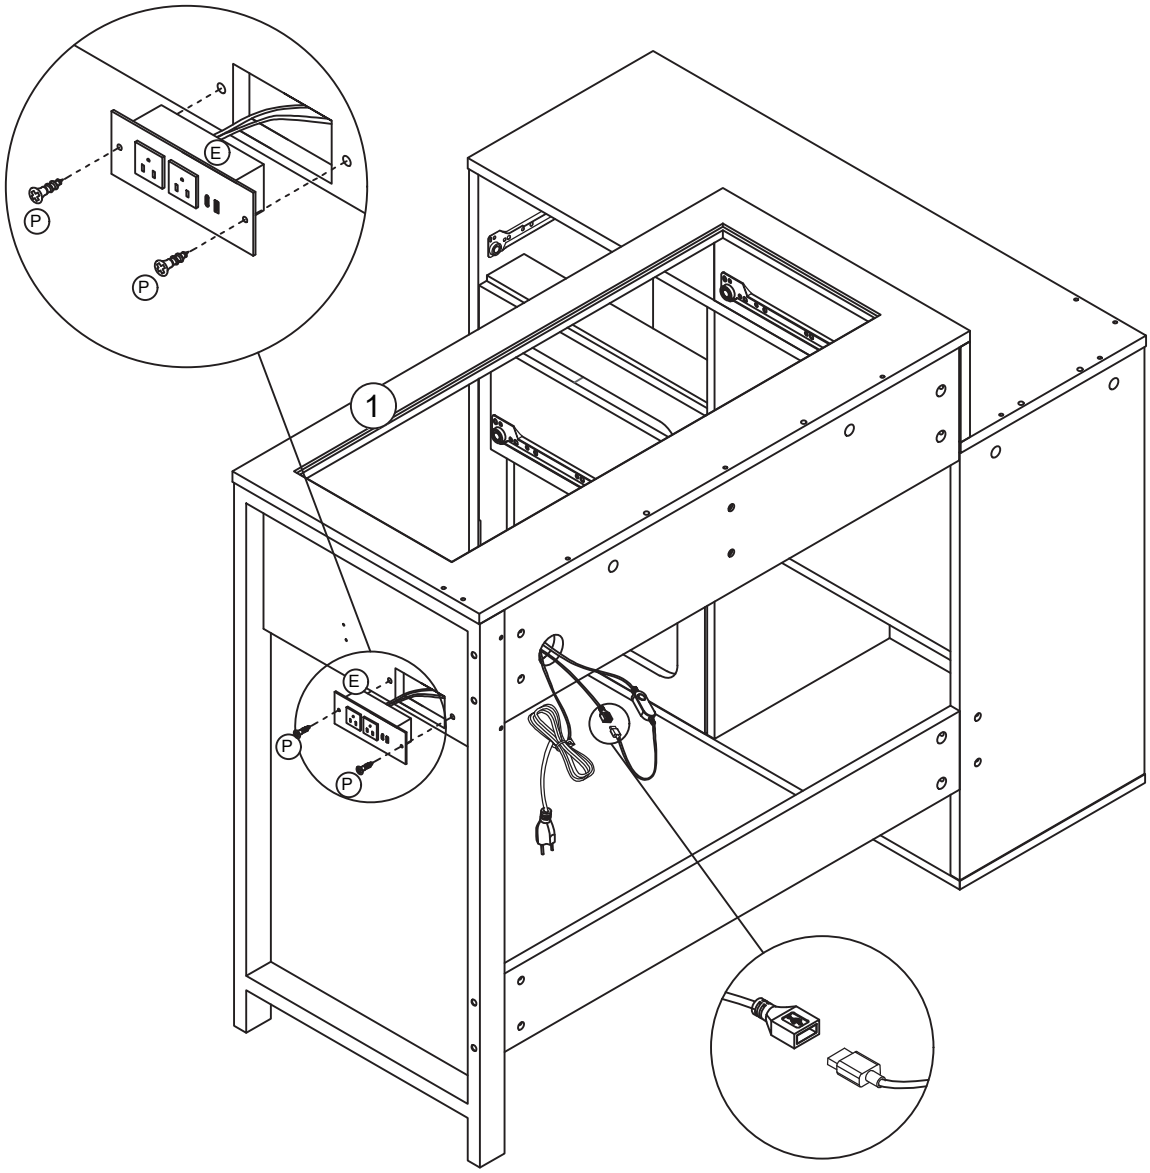


step 26




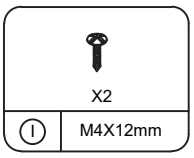

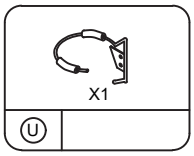


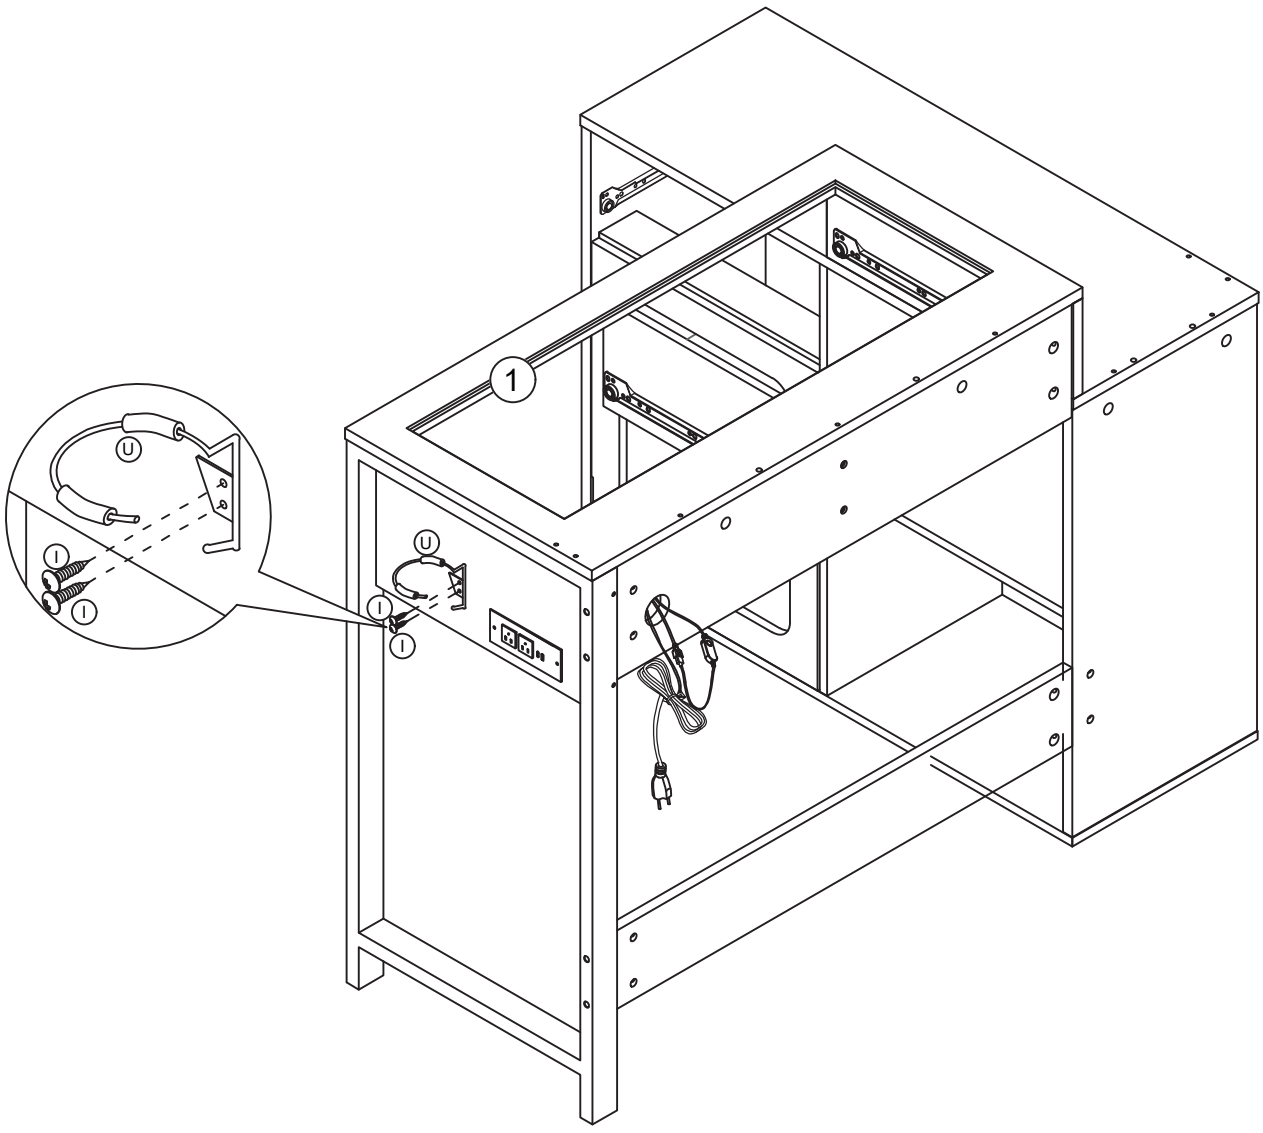


step 27

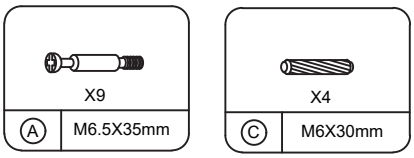





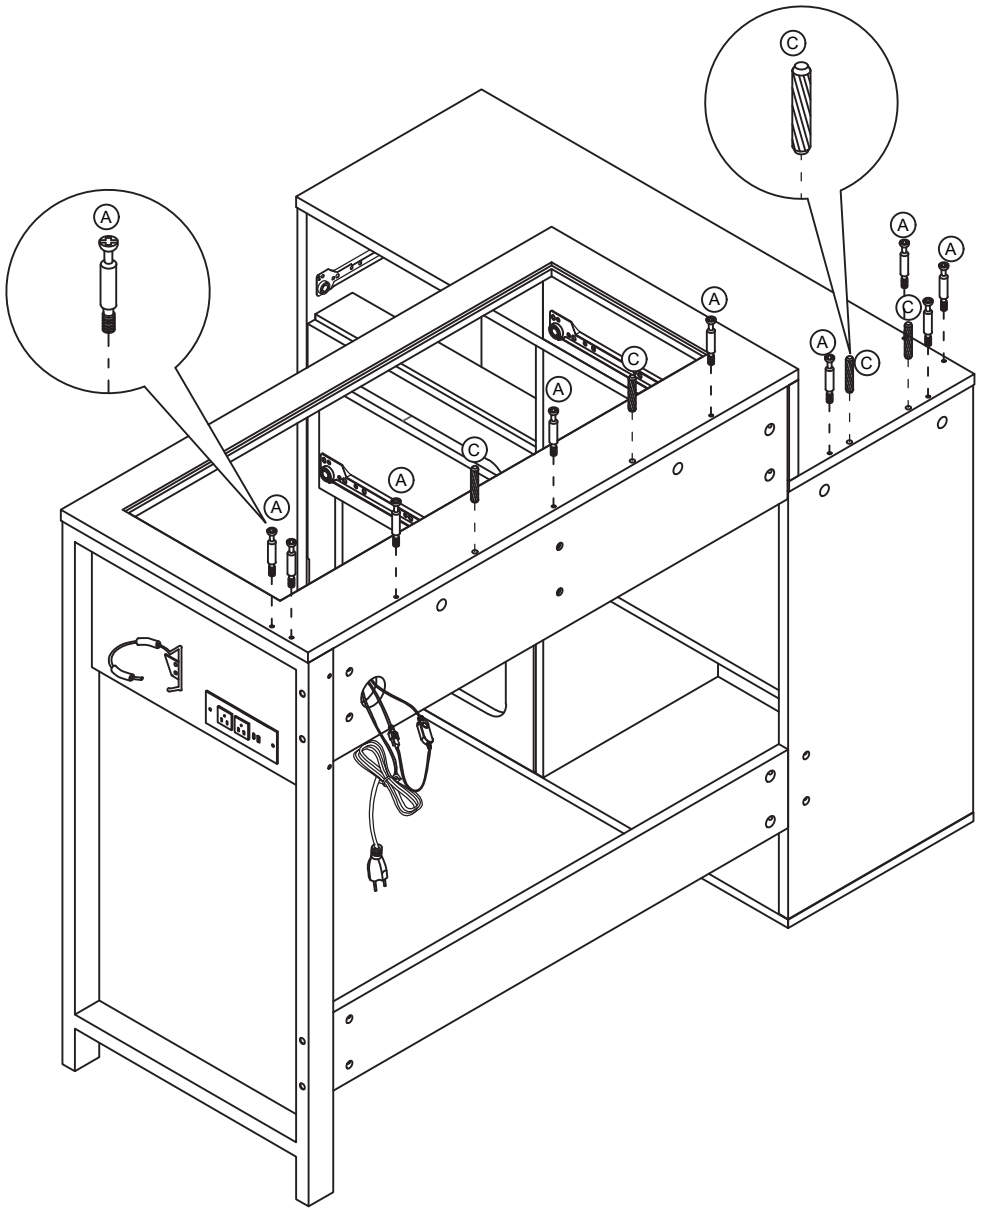


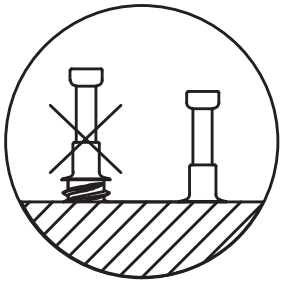

step 28

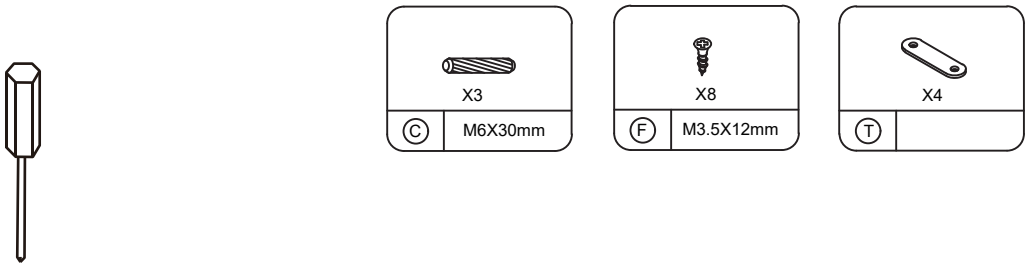


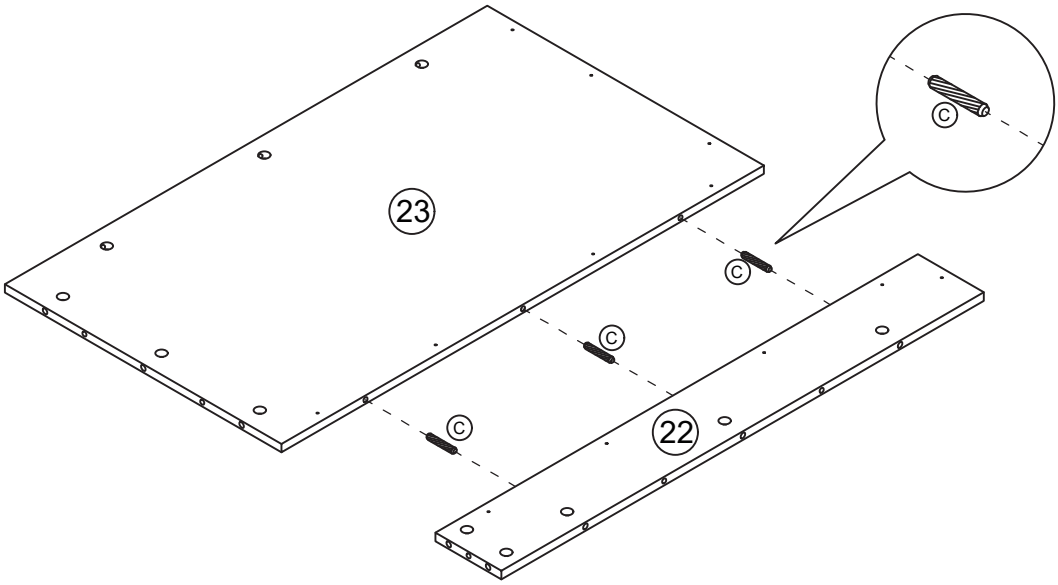


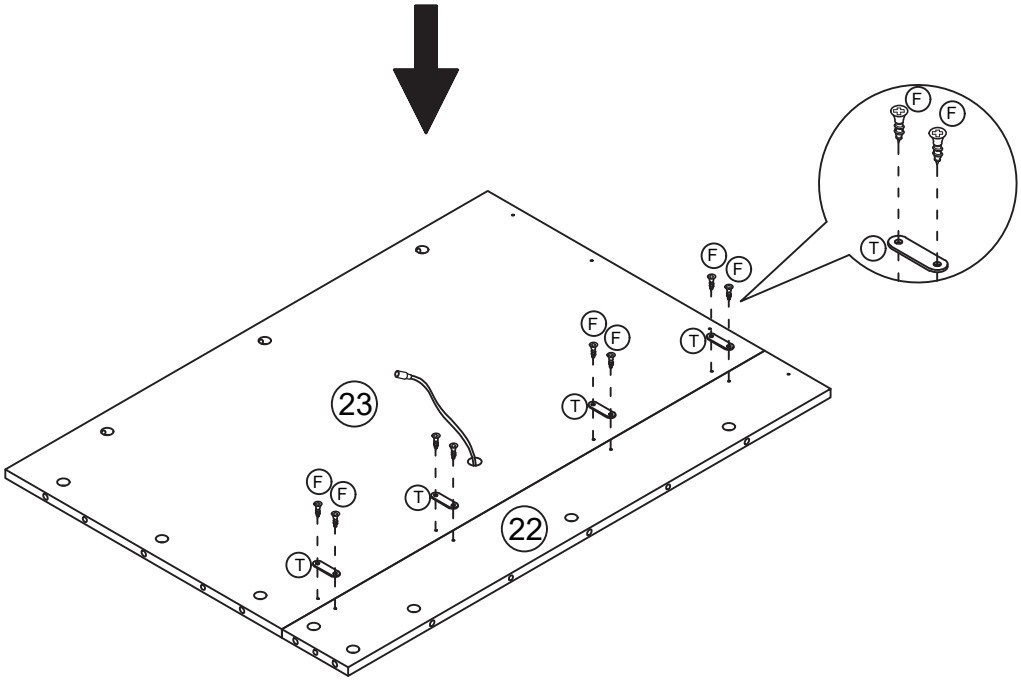


step 29




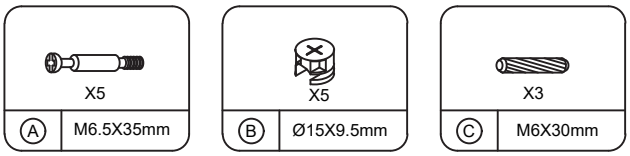

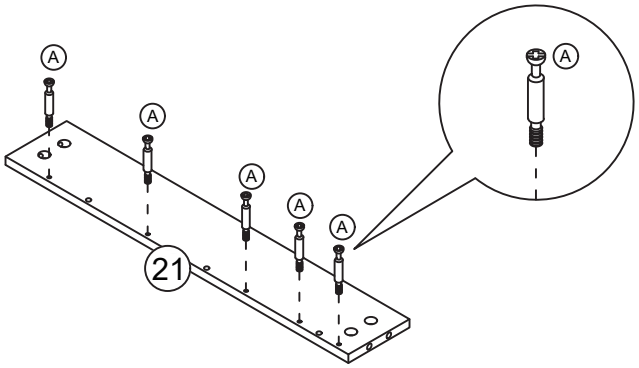


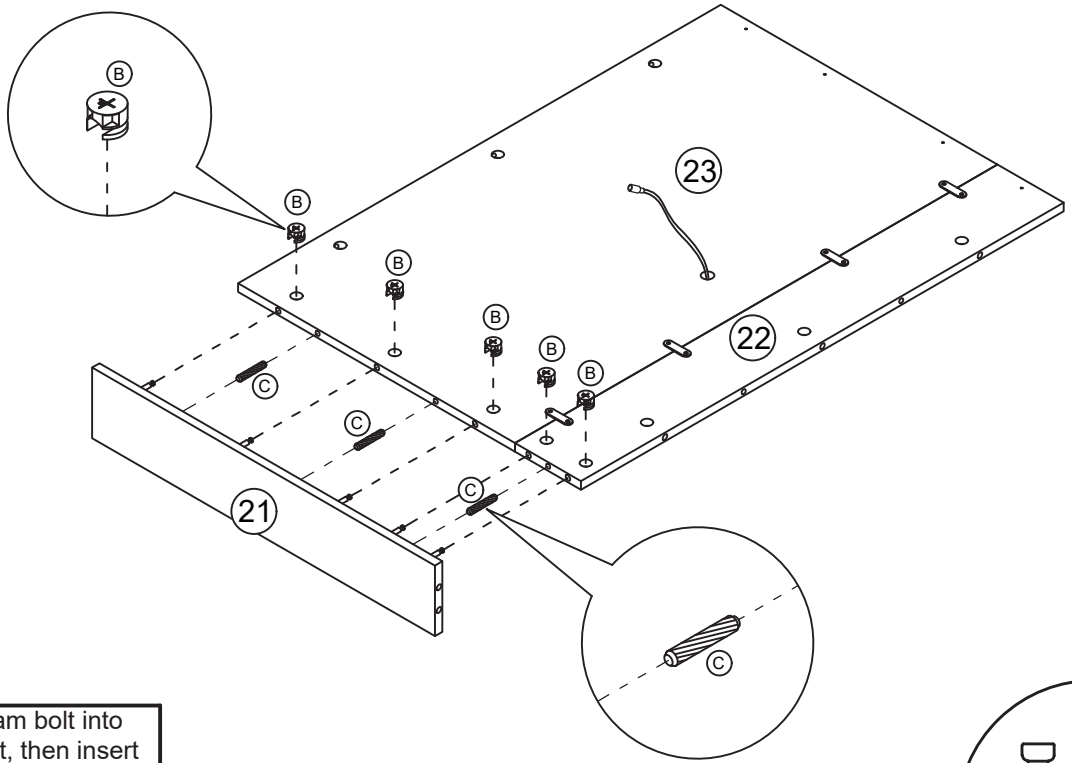

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

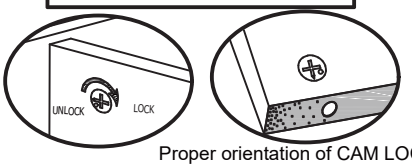



Proper orientation of CAM LOCK

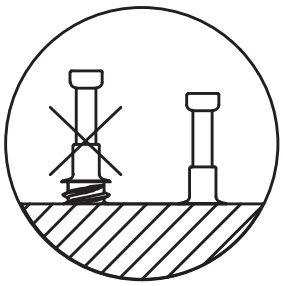


step 30




 X5	 X3	 X2
A M6.5X35mm	B Ø15X9.5mm	C M6X30mm

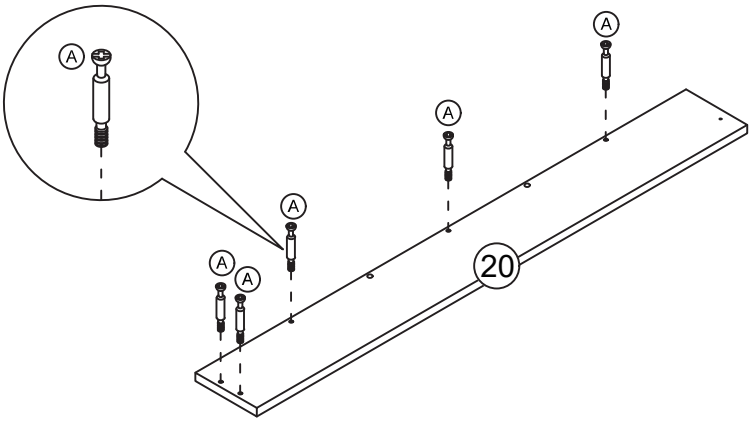


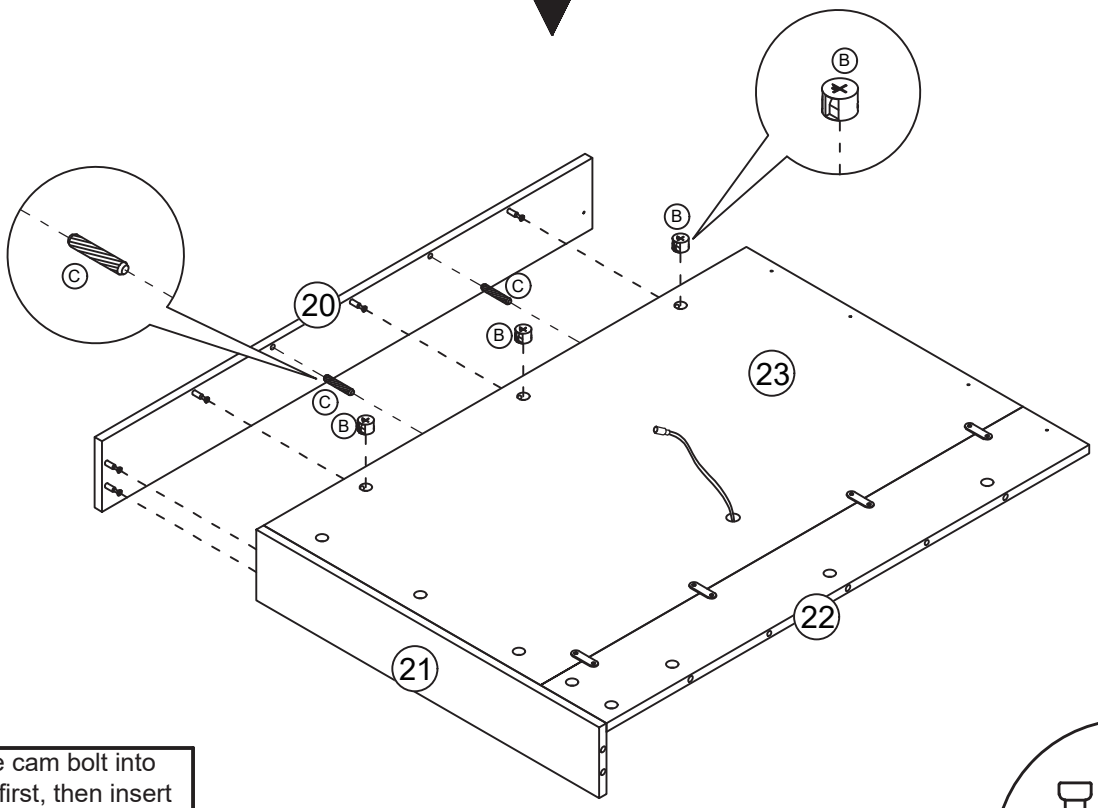


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

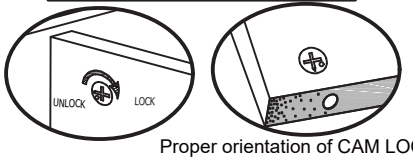


Proper orientation of CAM LOCK

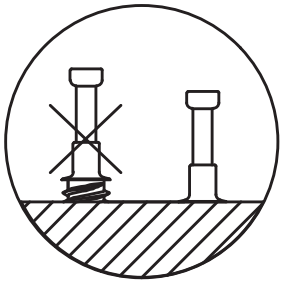




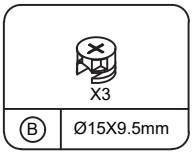

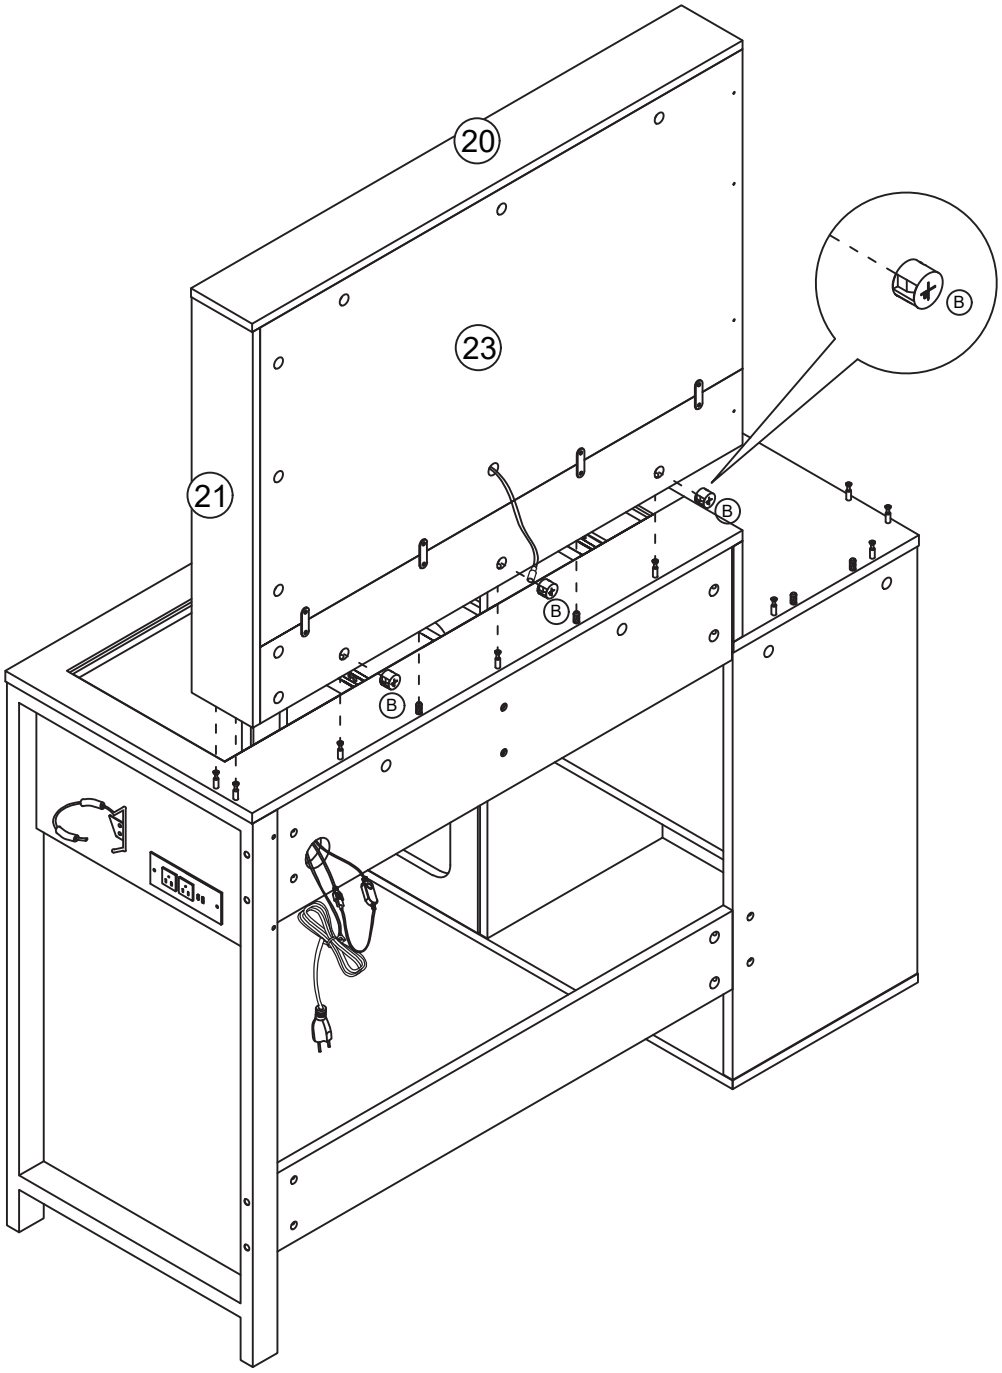



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

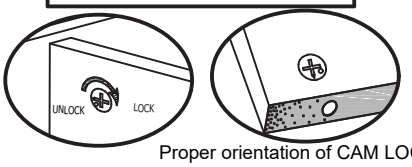


Proper orientation of CAM LOCK


step 32

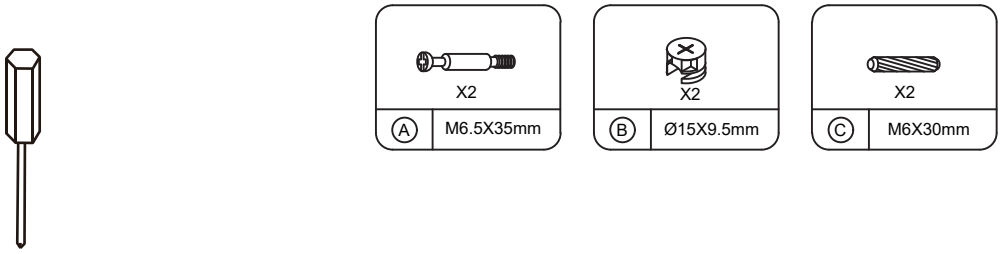

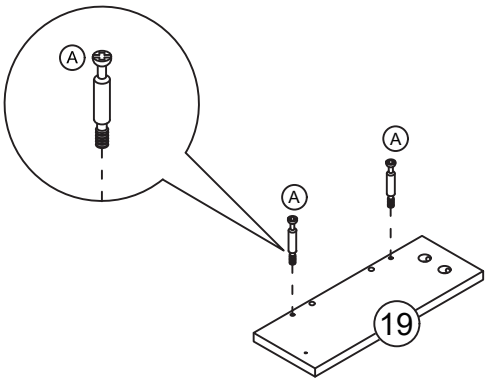


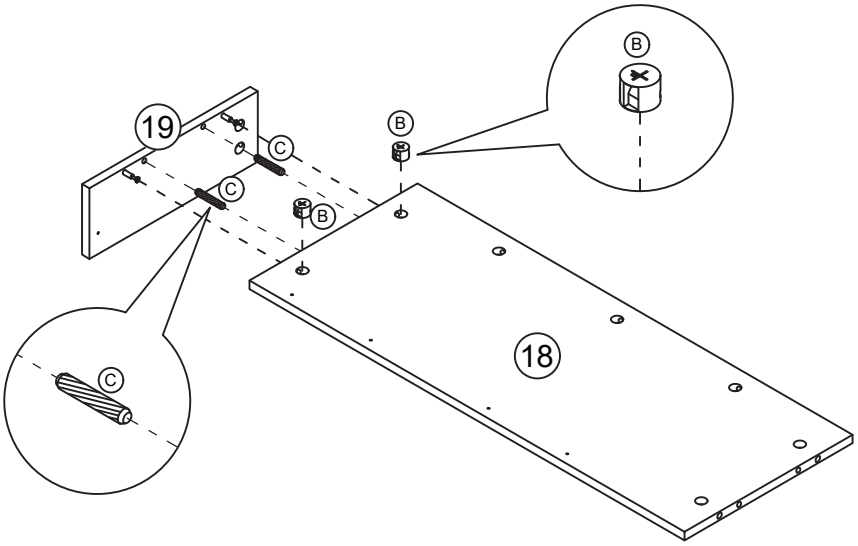

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

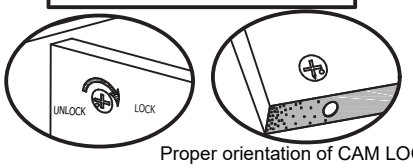



Proper orientation of CAM LOCK

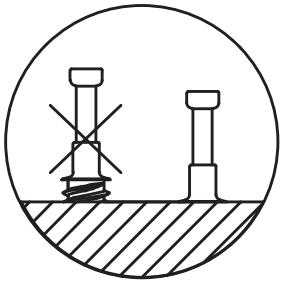


step 33




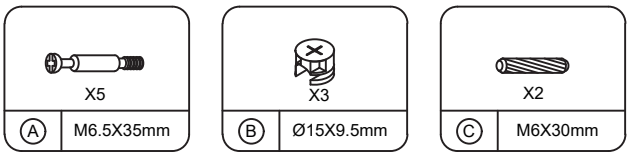

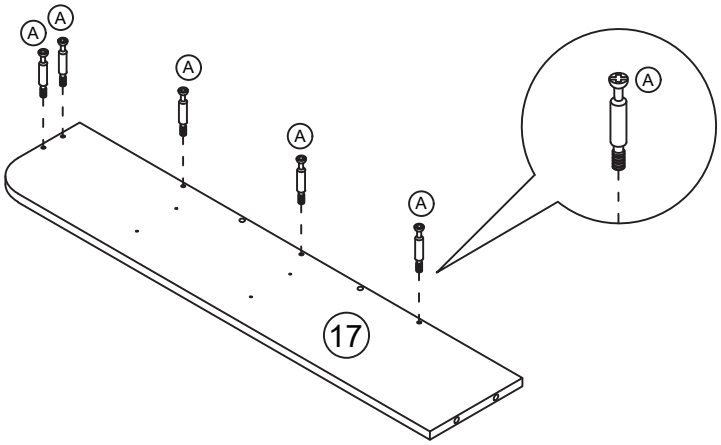


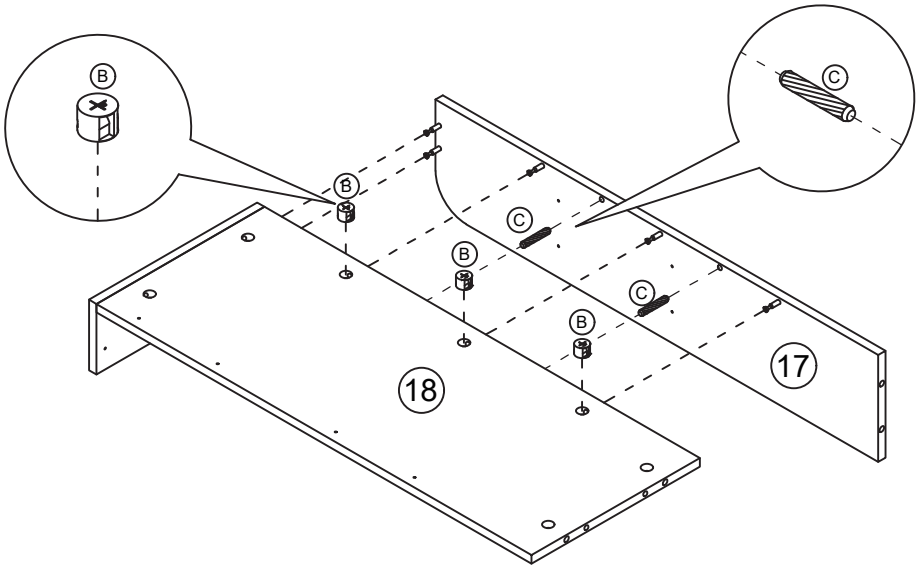


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

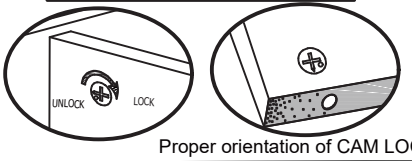


Proper orientation of CAM LOCK

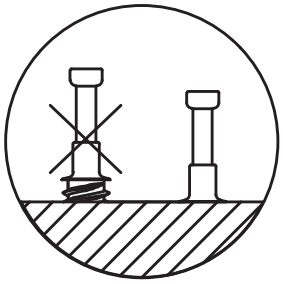




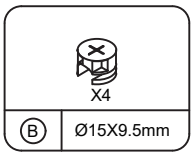


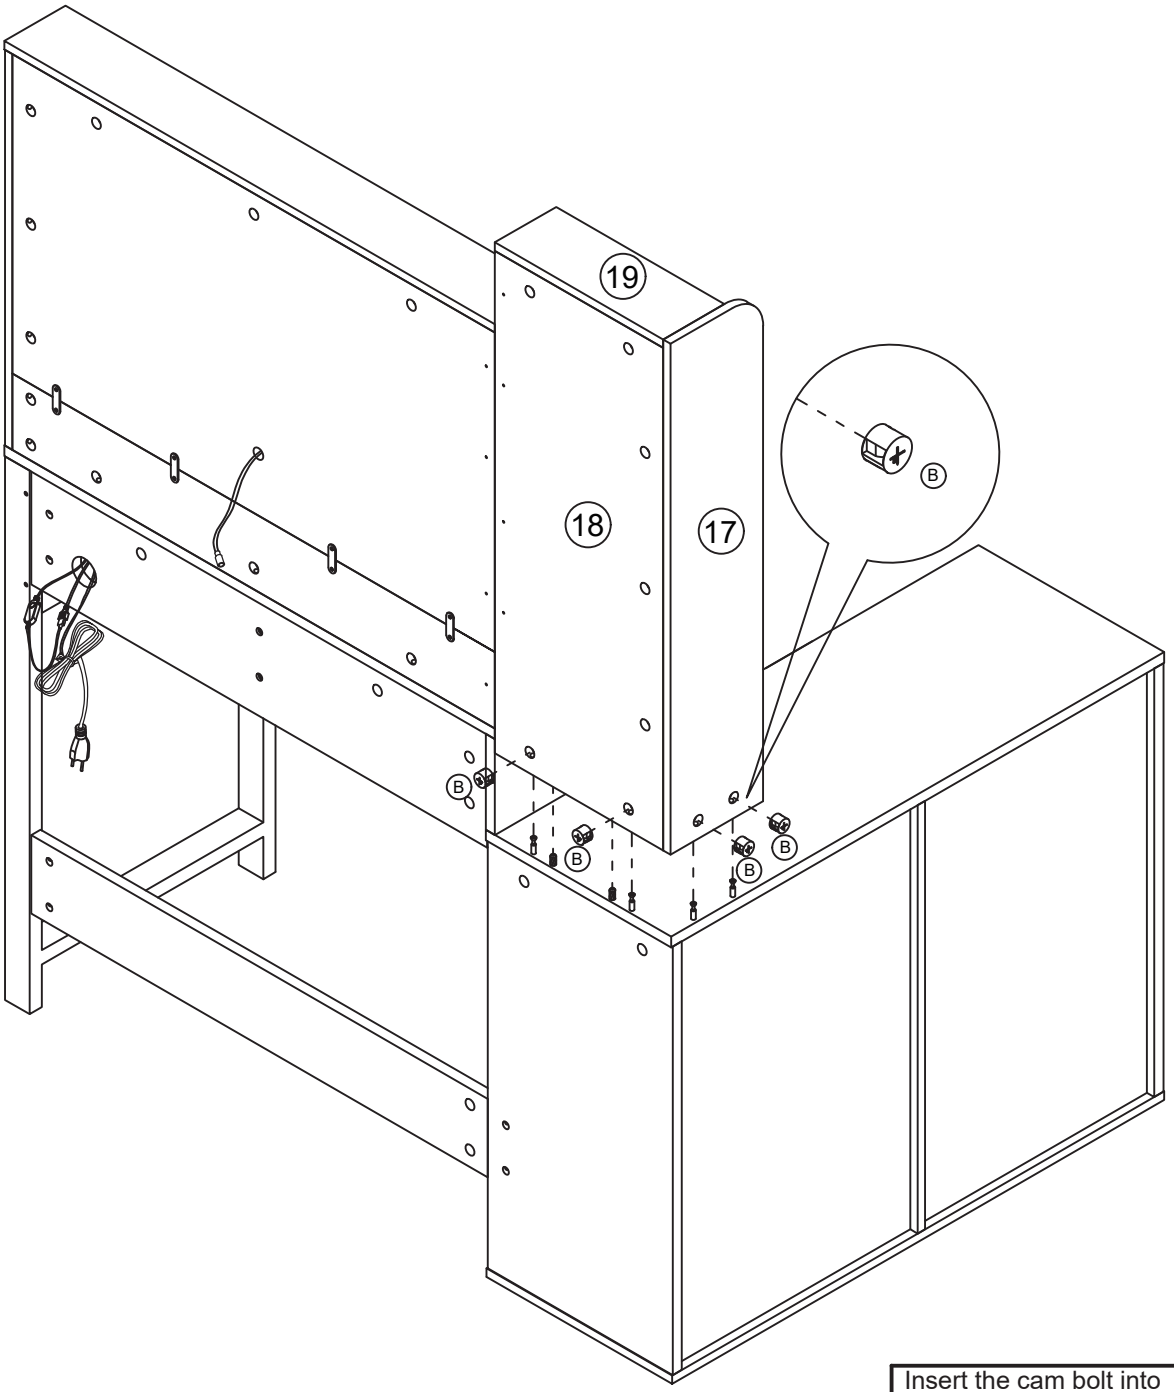

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

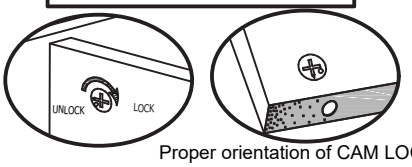


Proper orientation of CAM LOCK

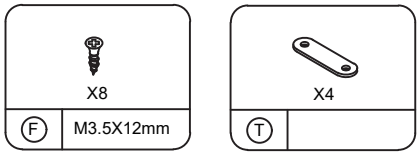

X8
F
M3.5X12mm


X4
T

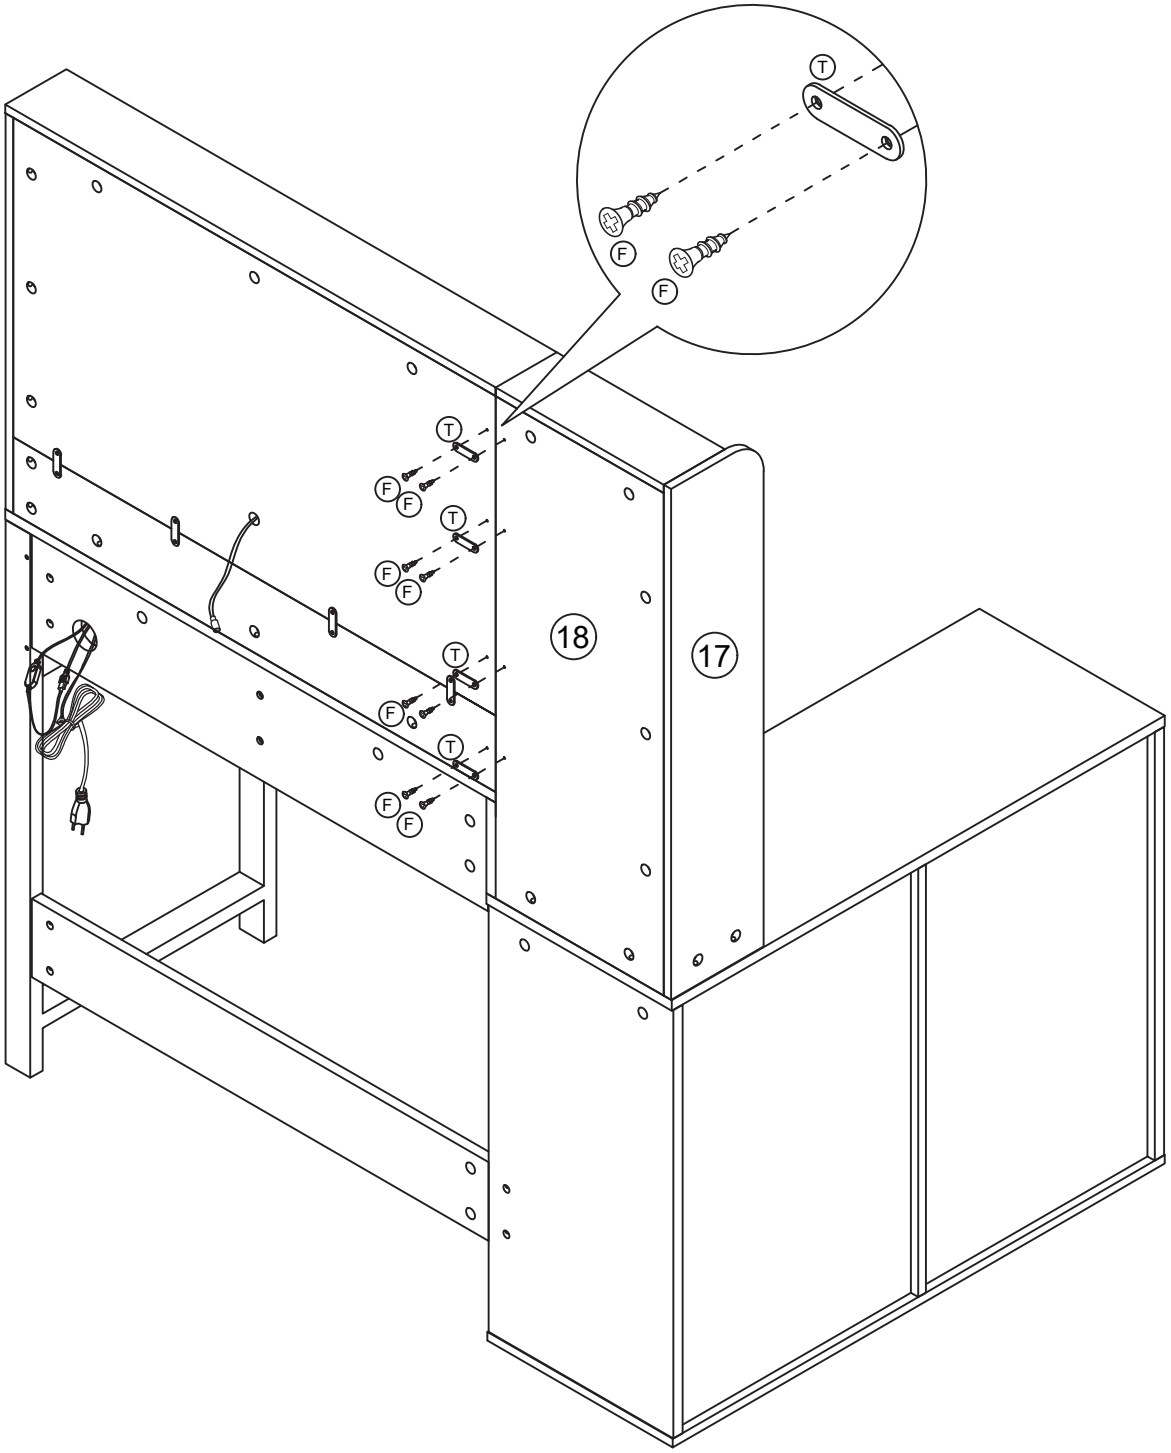



T
F
F
T
F
F
T
F
F
T
F
F
18
17

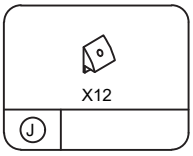



X12
J

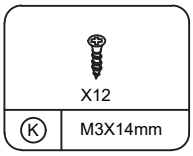
X12
K
M3X14mm

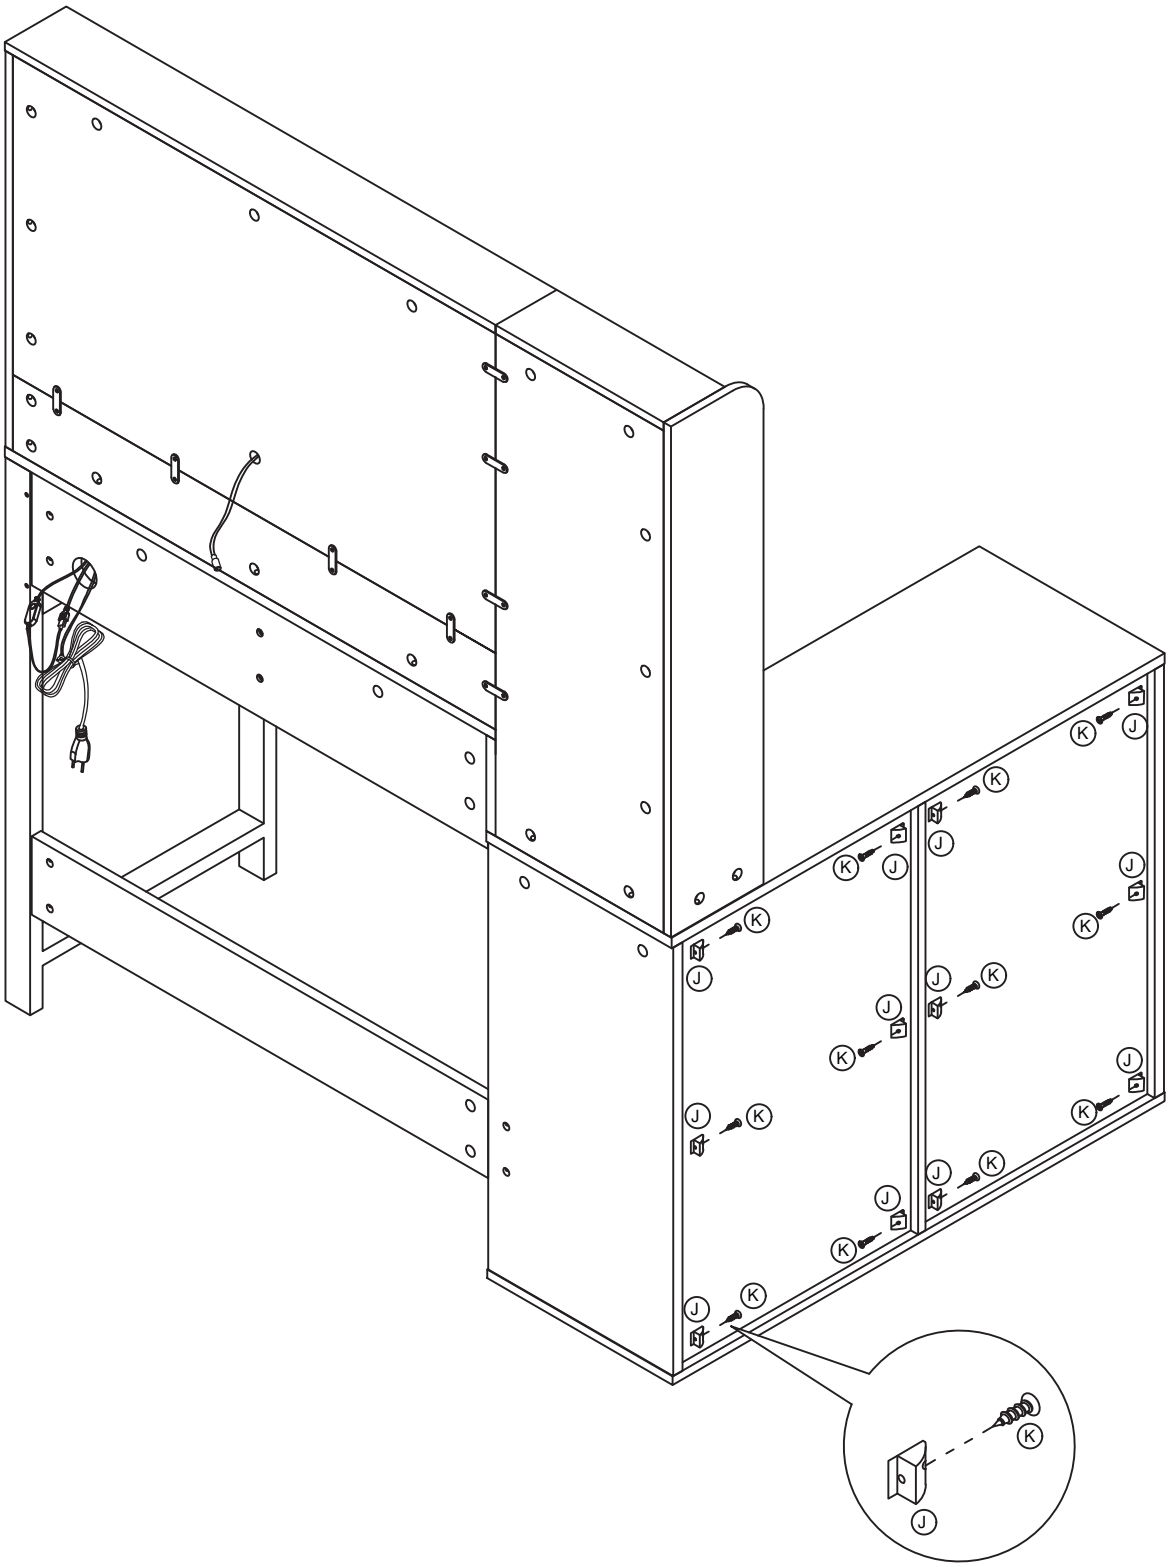

K
J

step 37

X6	X8	X2	X1
Ⓑ Ø15X9.5mm	Ⓦ Ø20mm	Ⓕ M3.5X12mm	Ⓣ

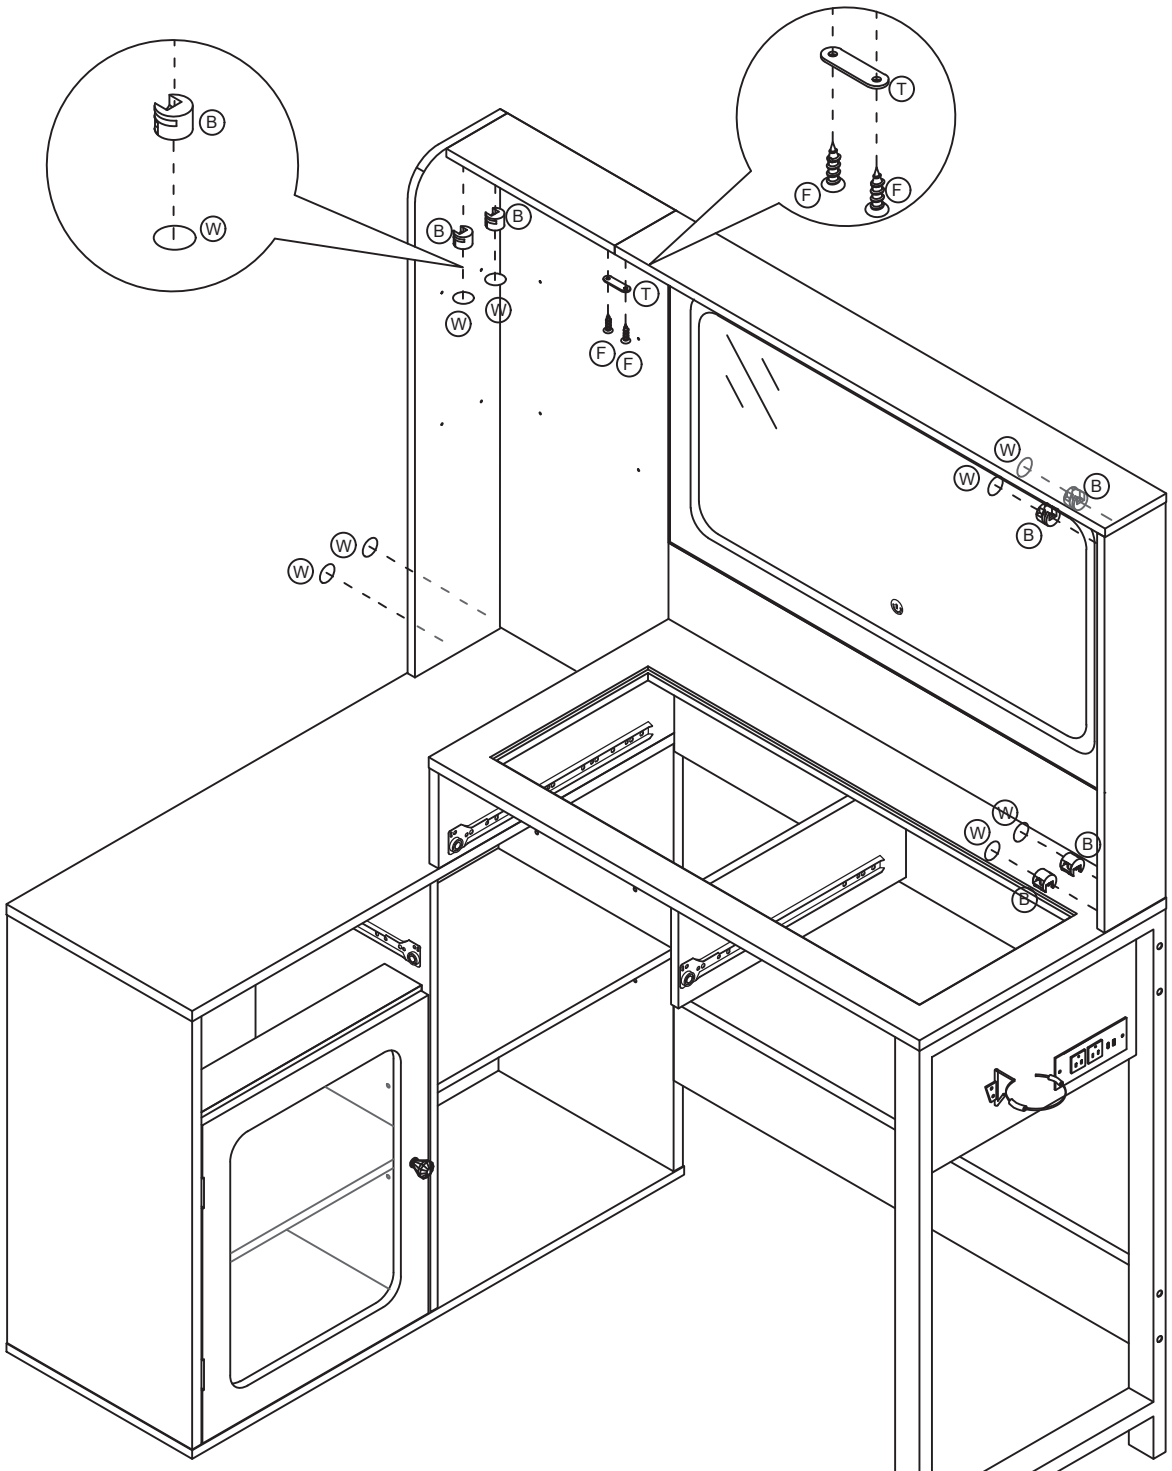



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

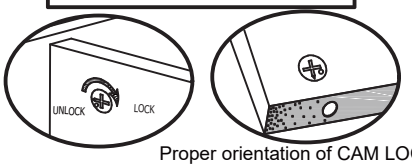


Proper orientation of CAM LOCK

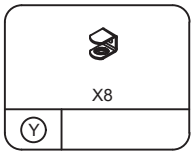



X8
Y

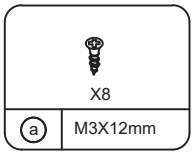

X8
a
M3X12mm

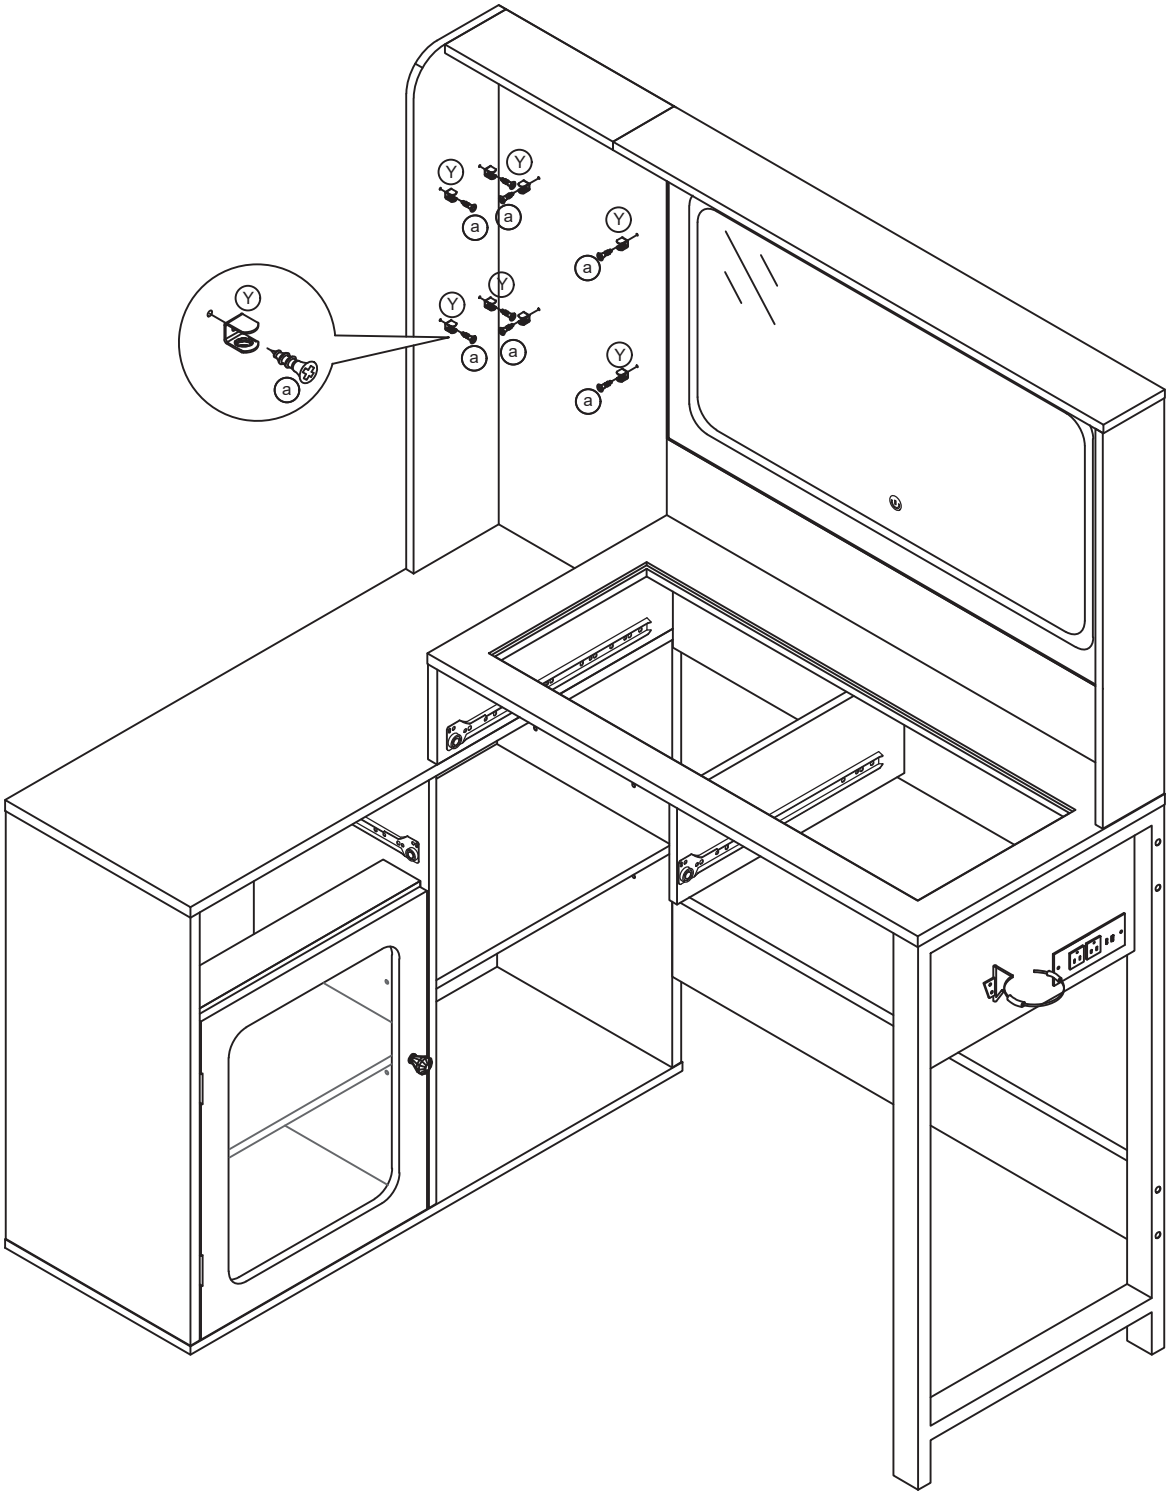

Y
a



X8
Y

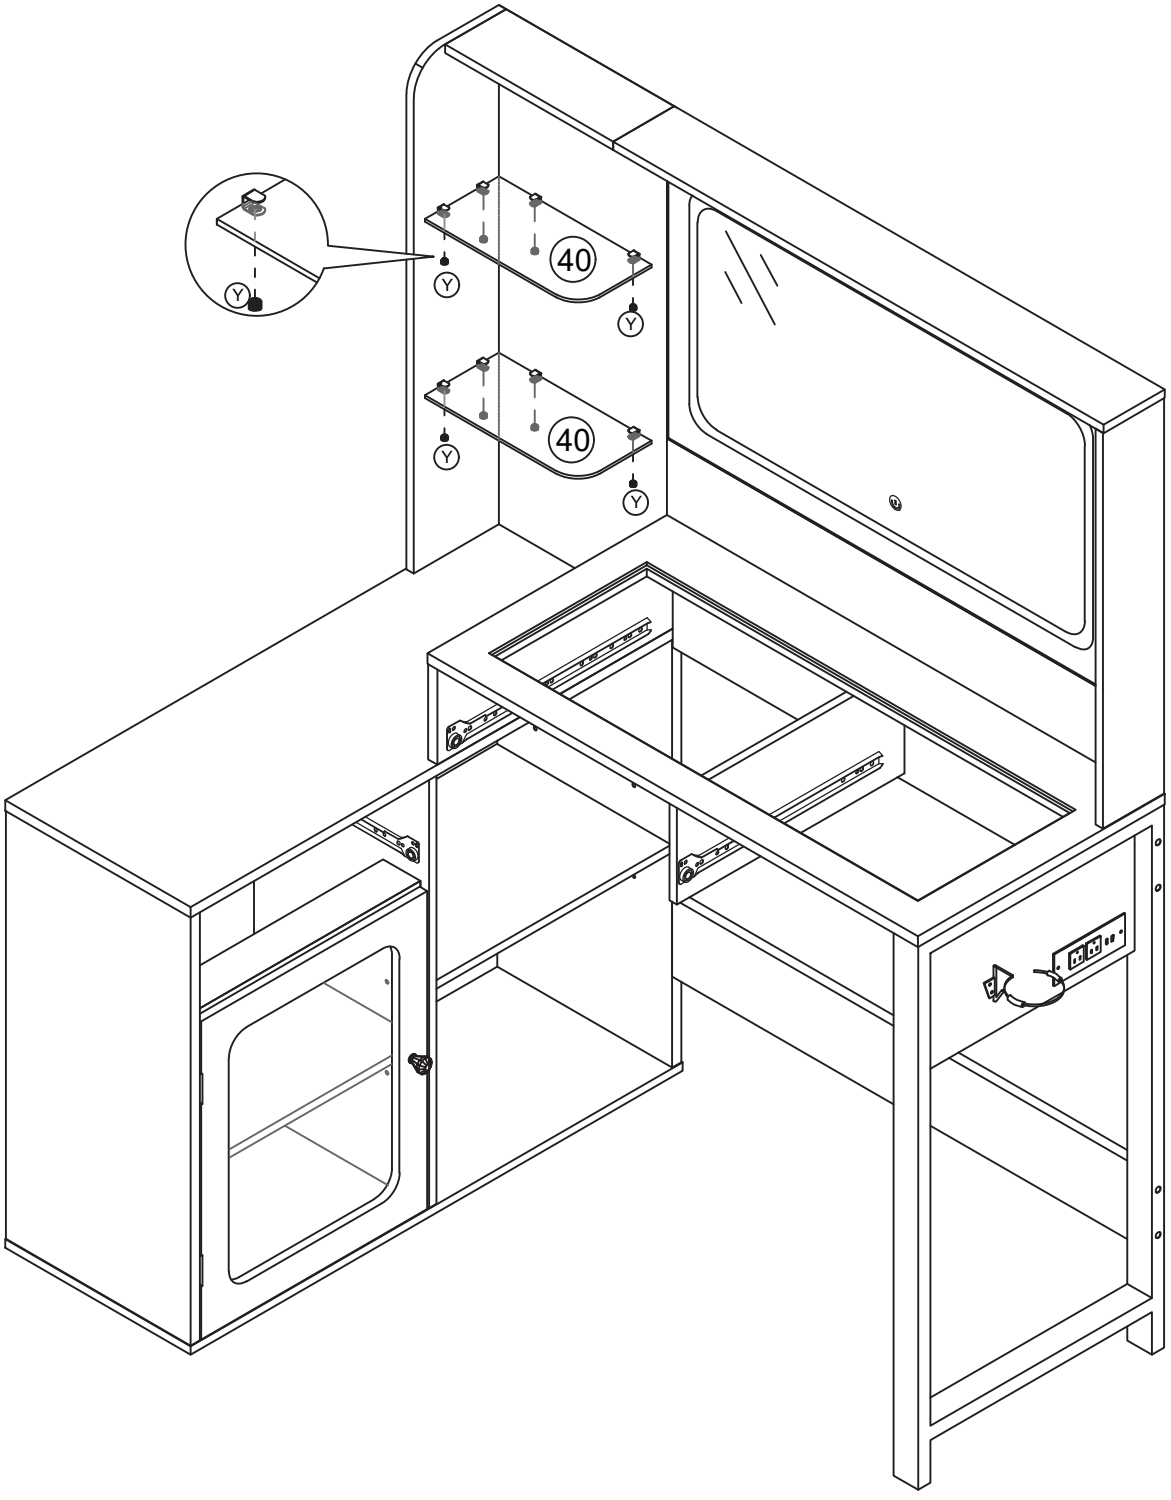

40
40
Y

step 40

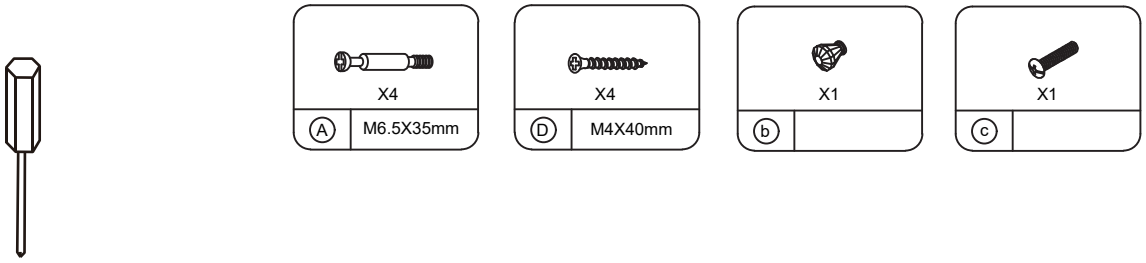


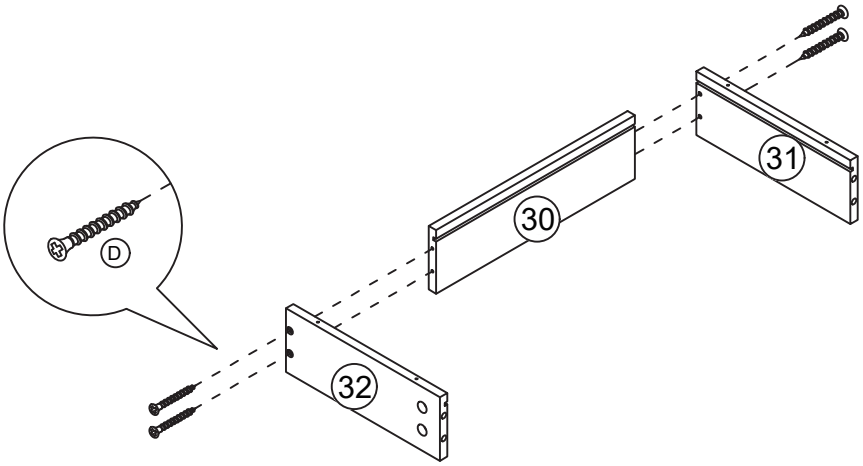


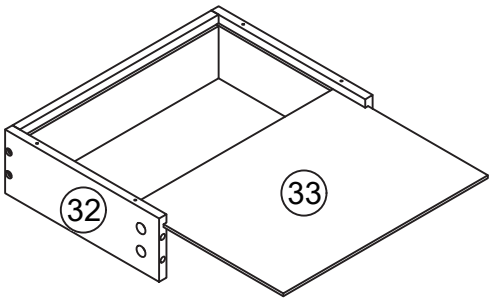

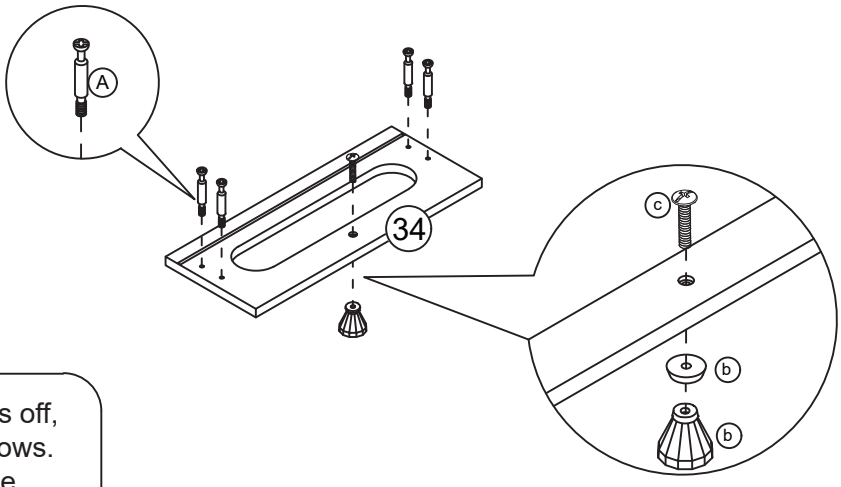



If the handle base falls off,
please install it as follows.
It will not affect the use.

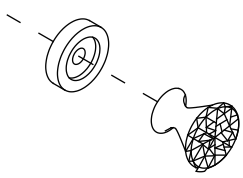


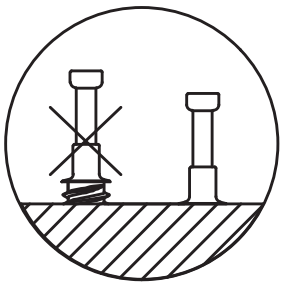


step 41

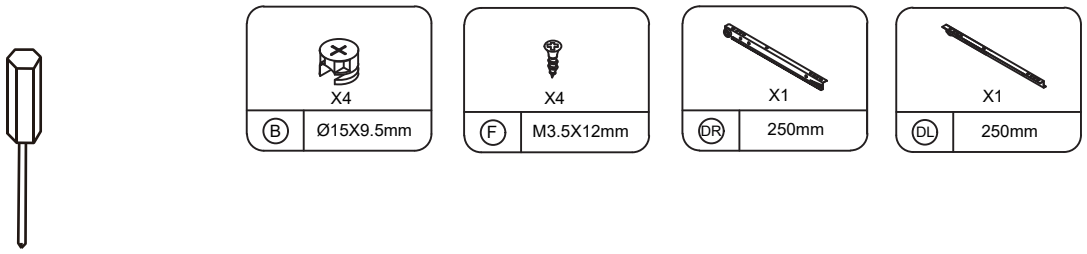

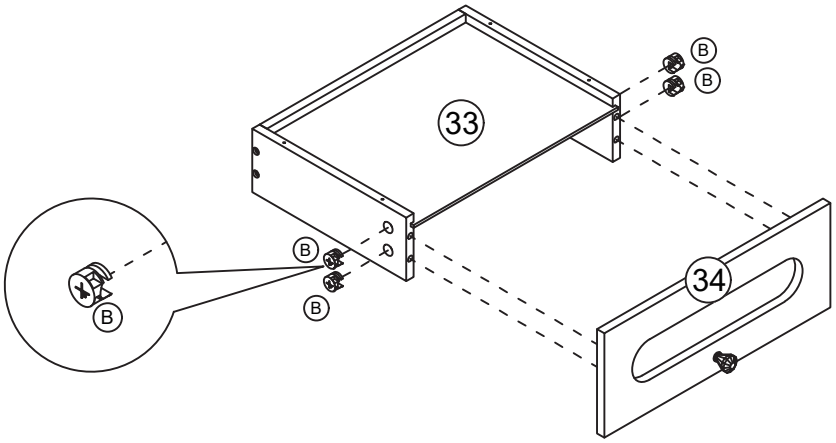

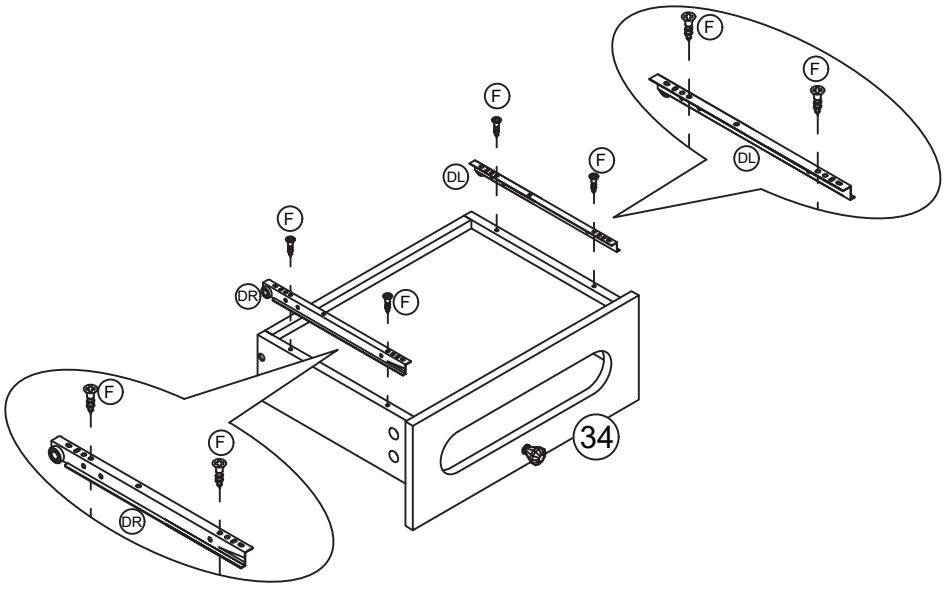

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

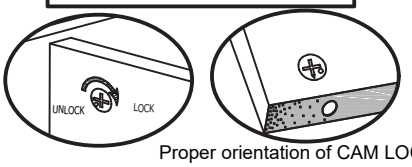


Proper orientation of CAM LOCK


step 42


x2




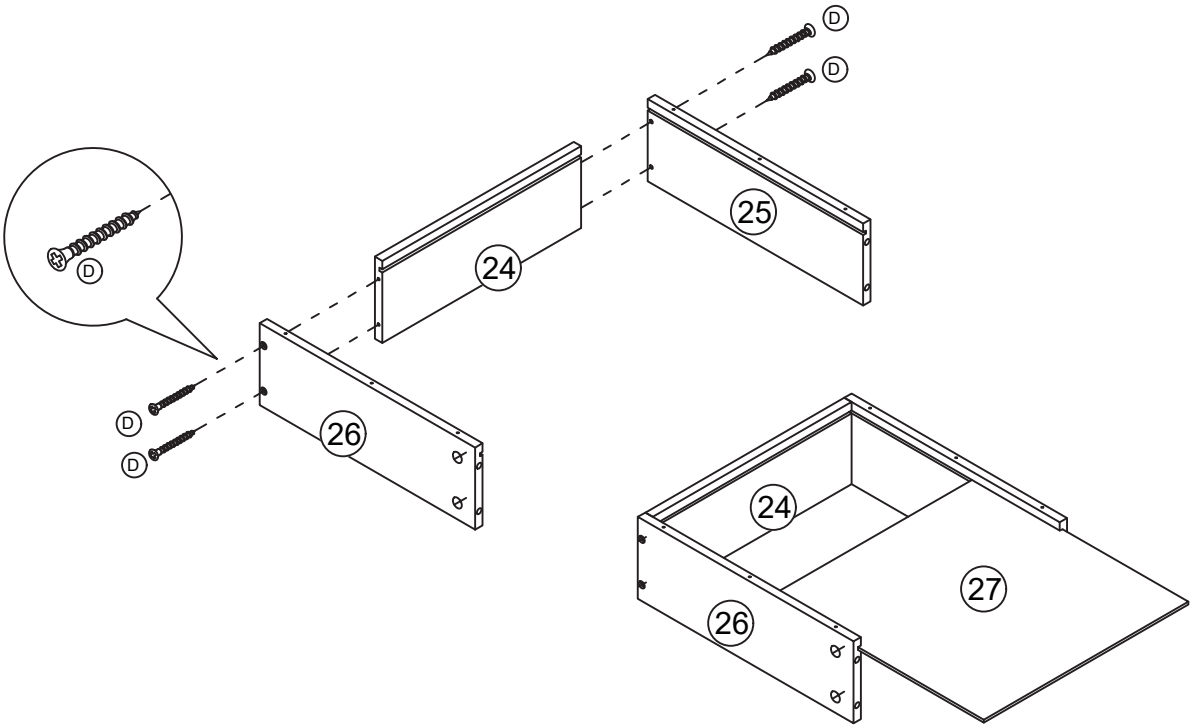


step 43

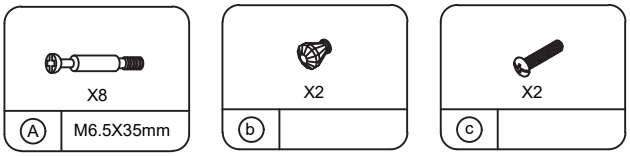

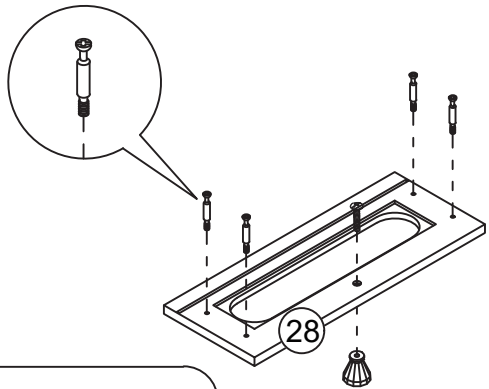

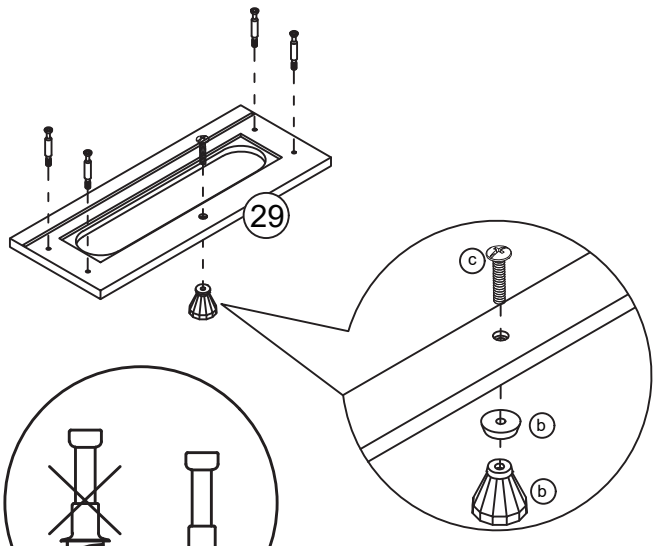



If the handle base falls off,
please install it as follows.
It will not affect the use.

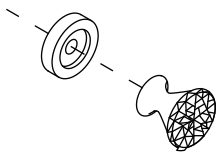





x2

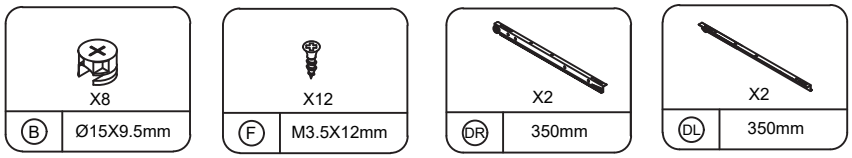

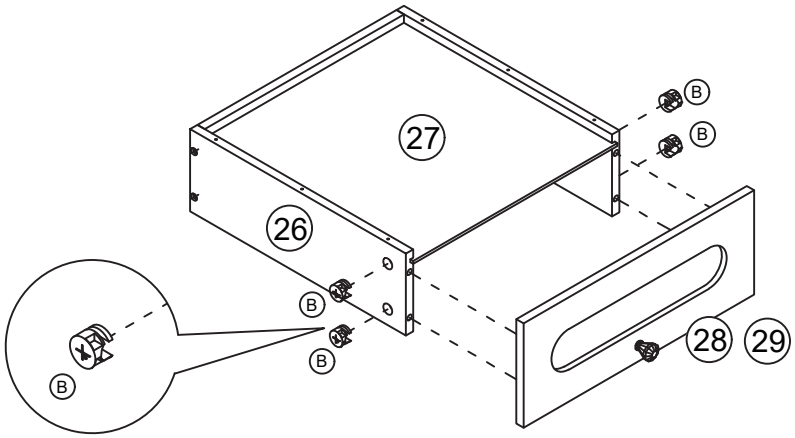

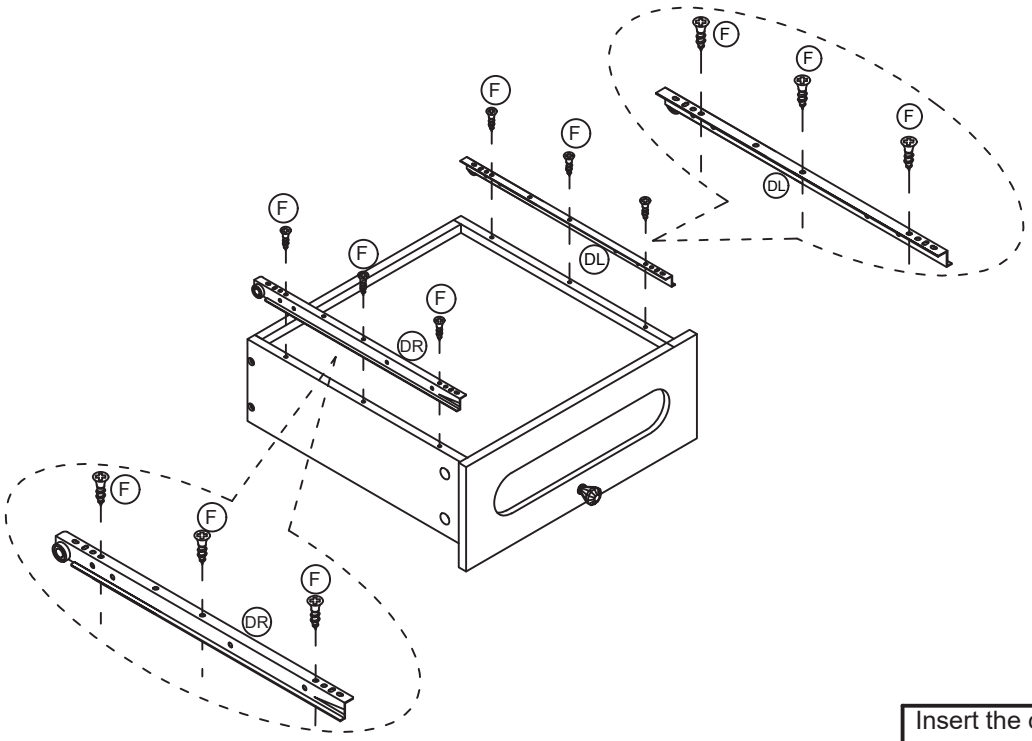



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

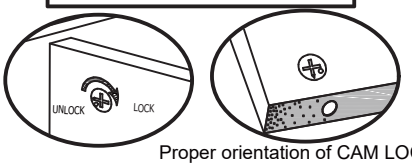



Proper orientation of CAM LOCK

x2

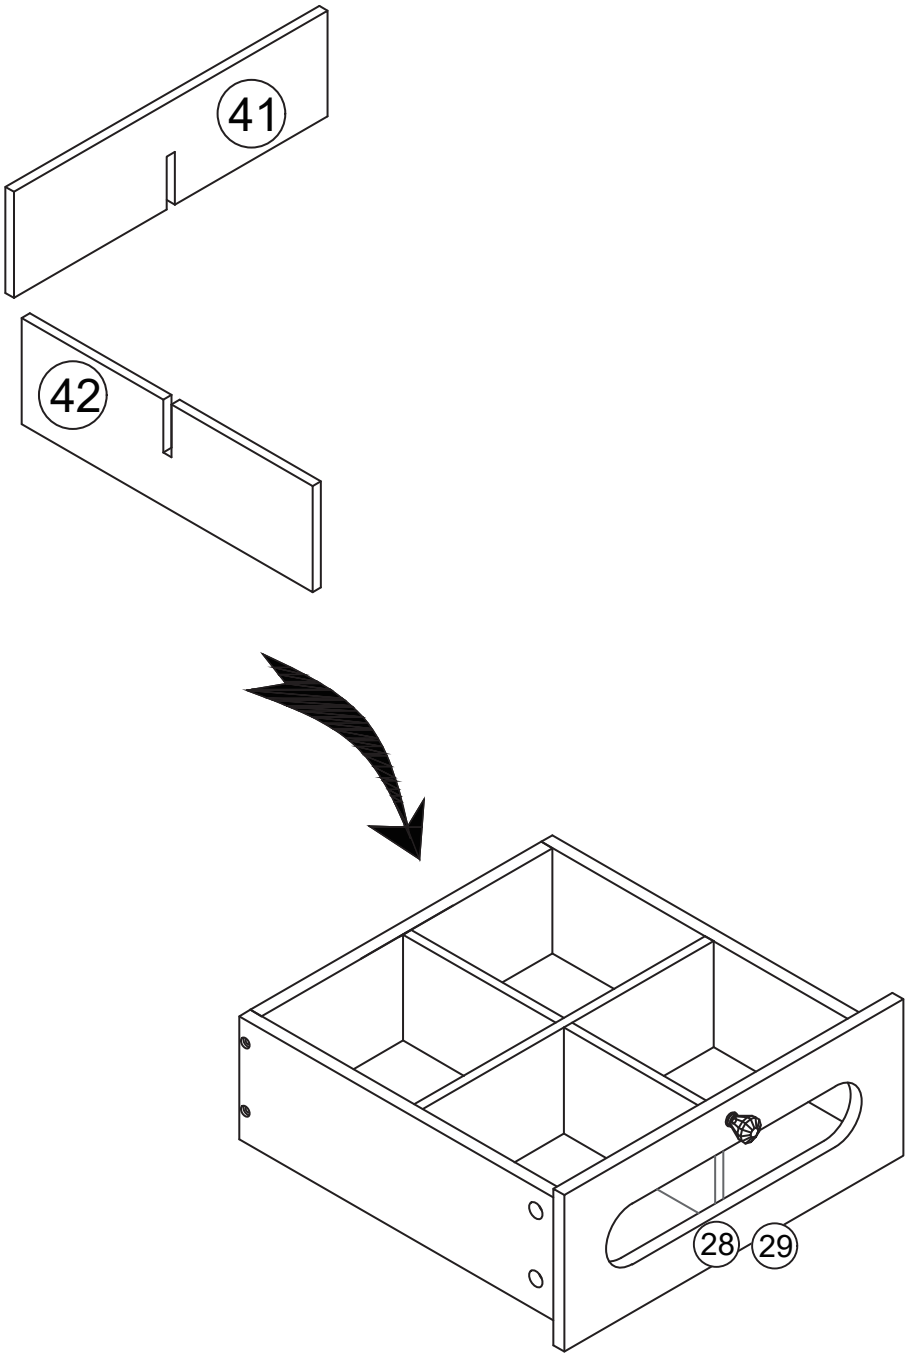


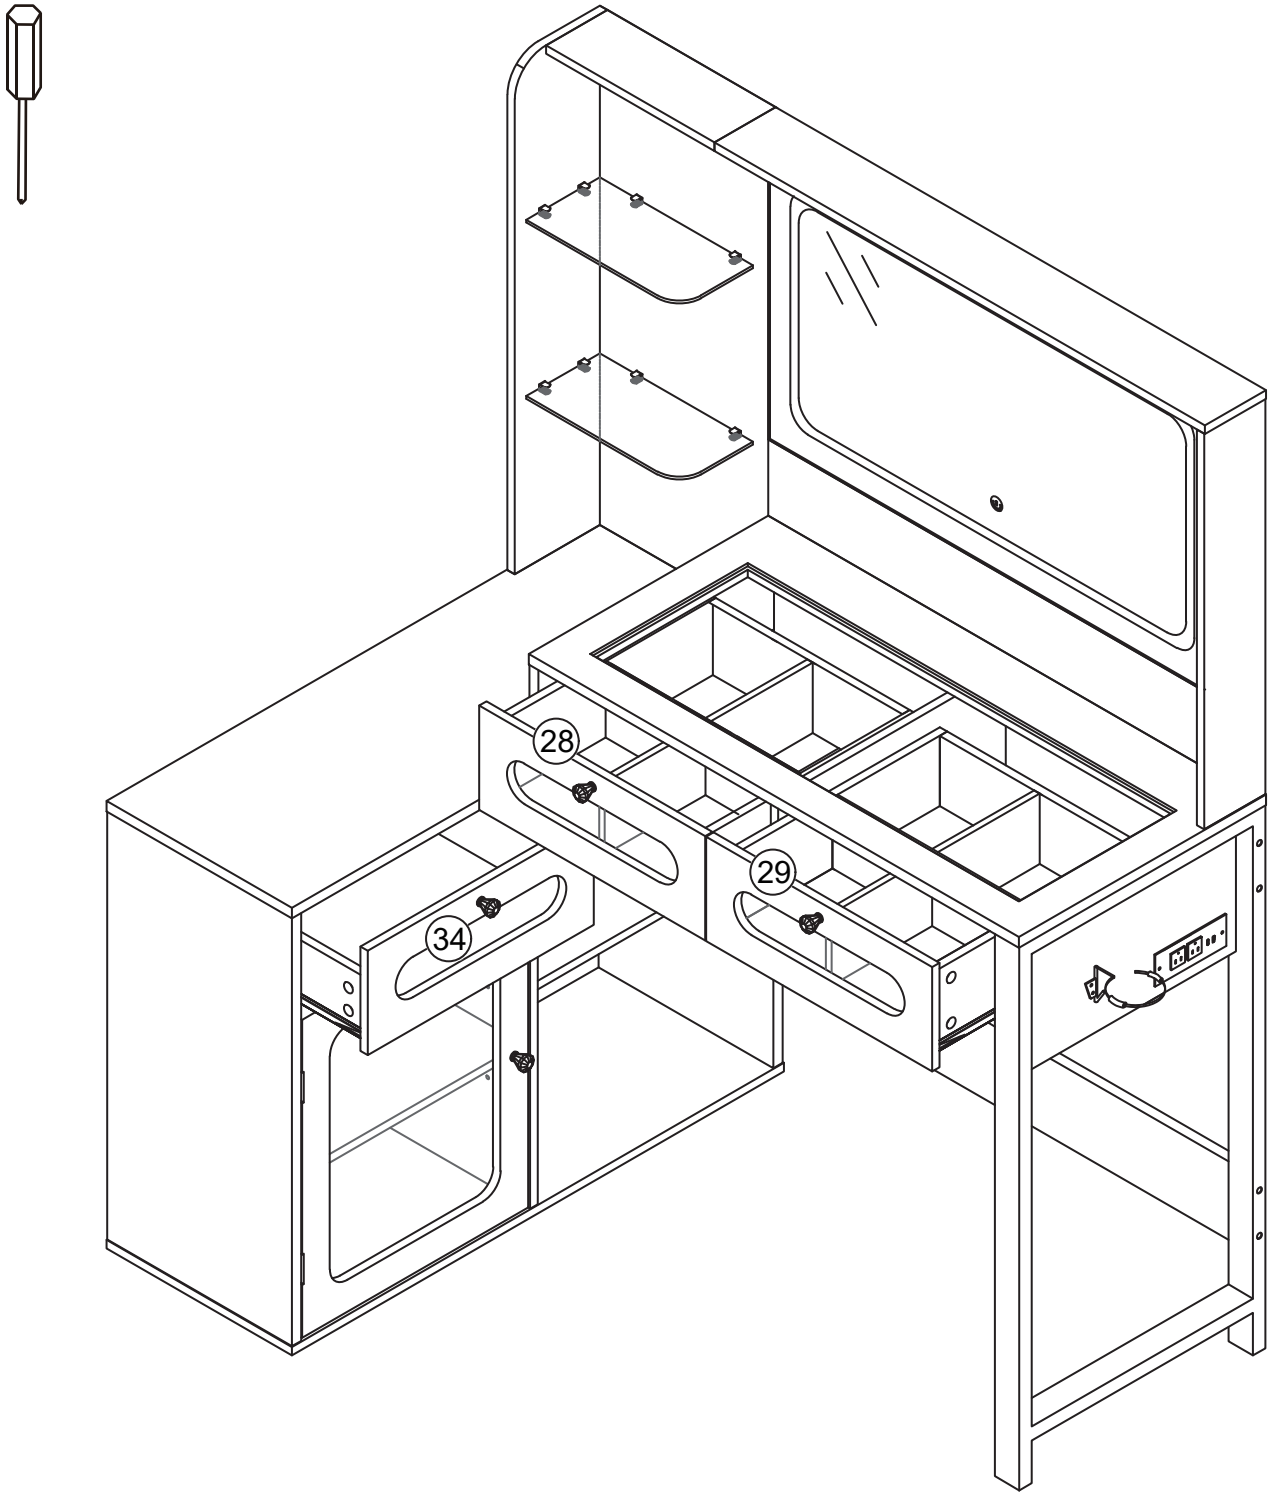

28
29
34

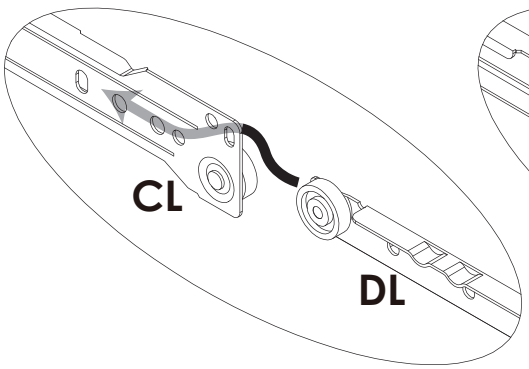
CL
DL

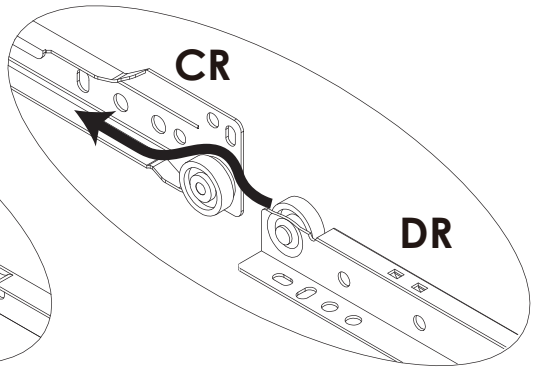
CR
DR


step 47

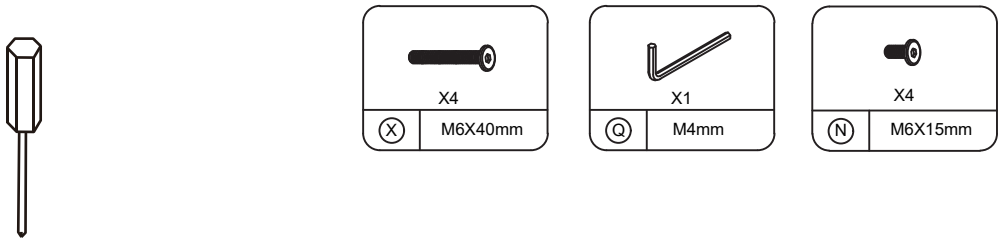


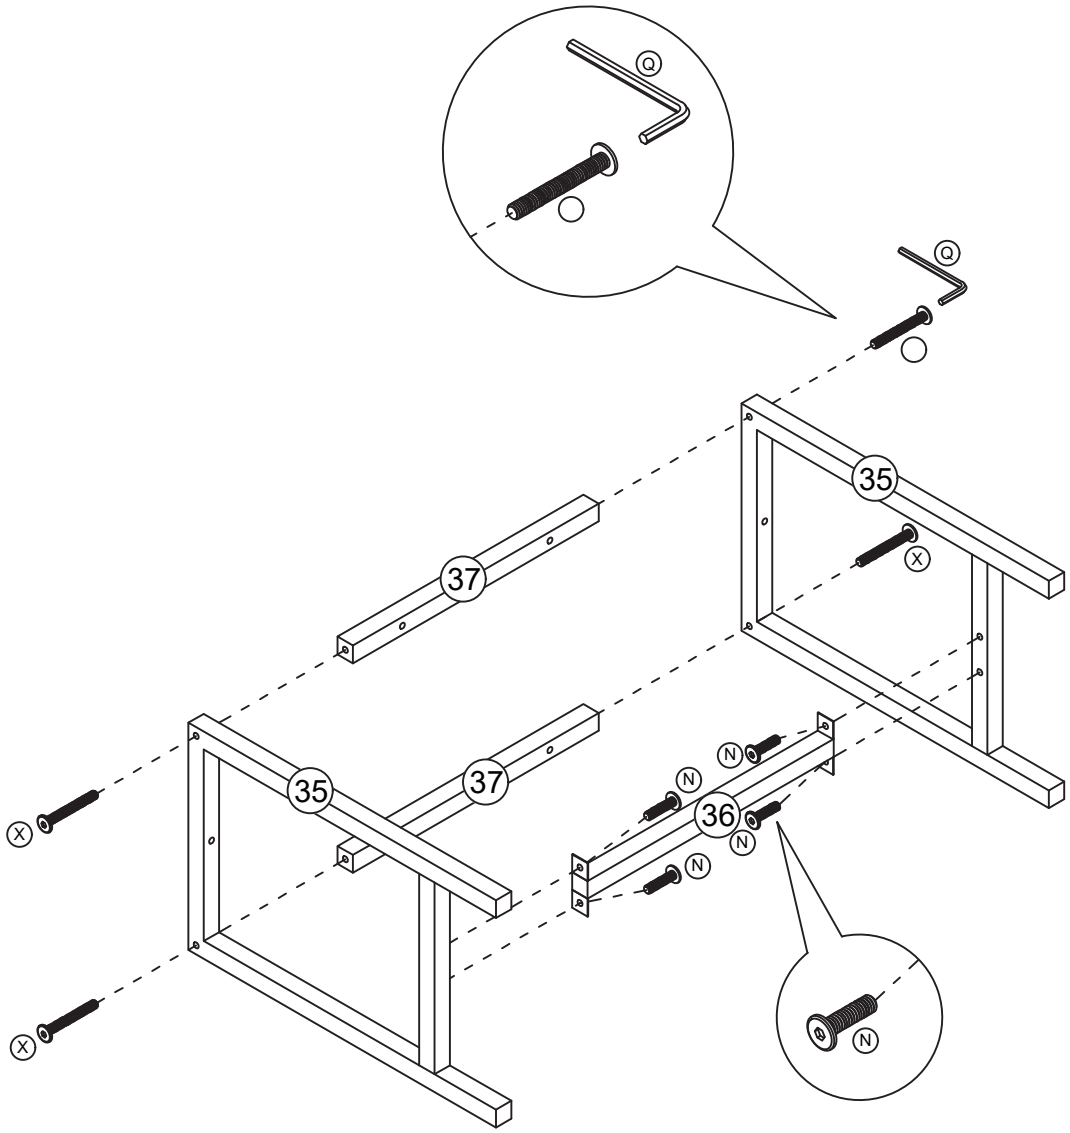


step 49




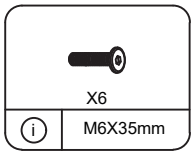

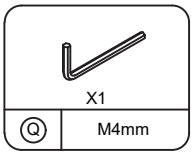


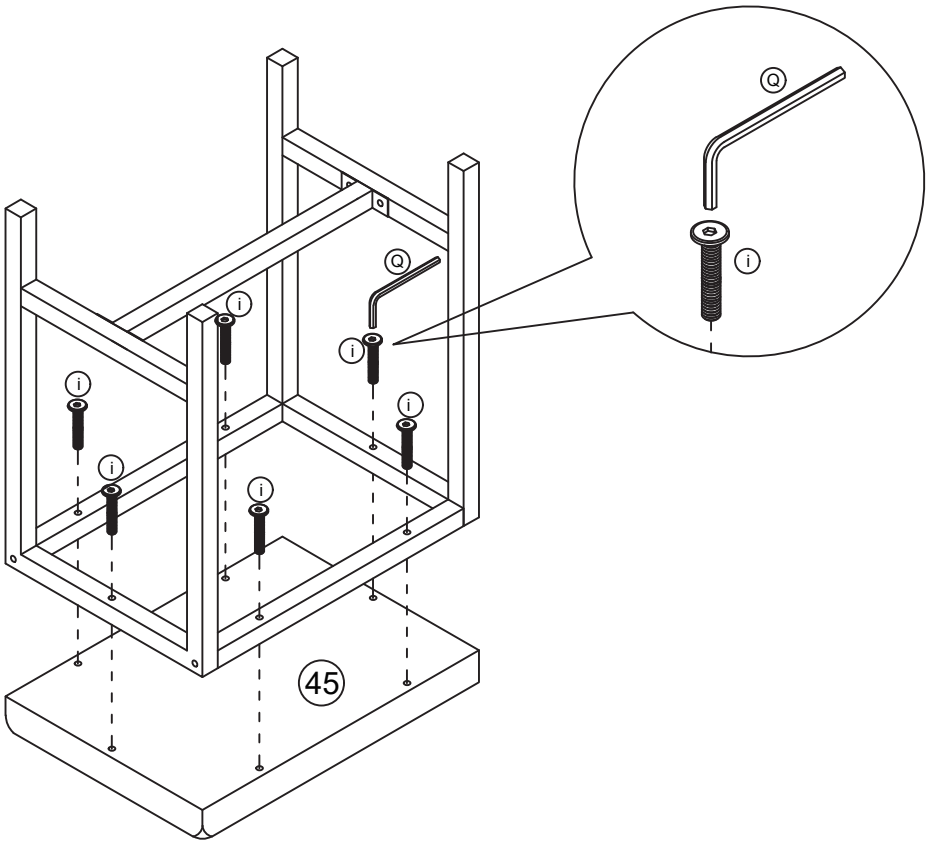

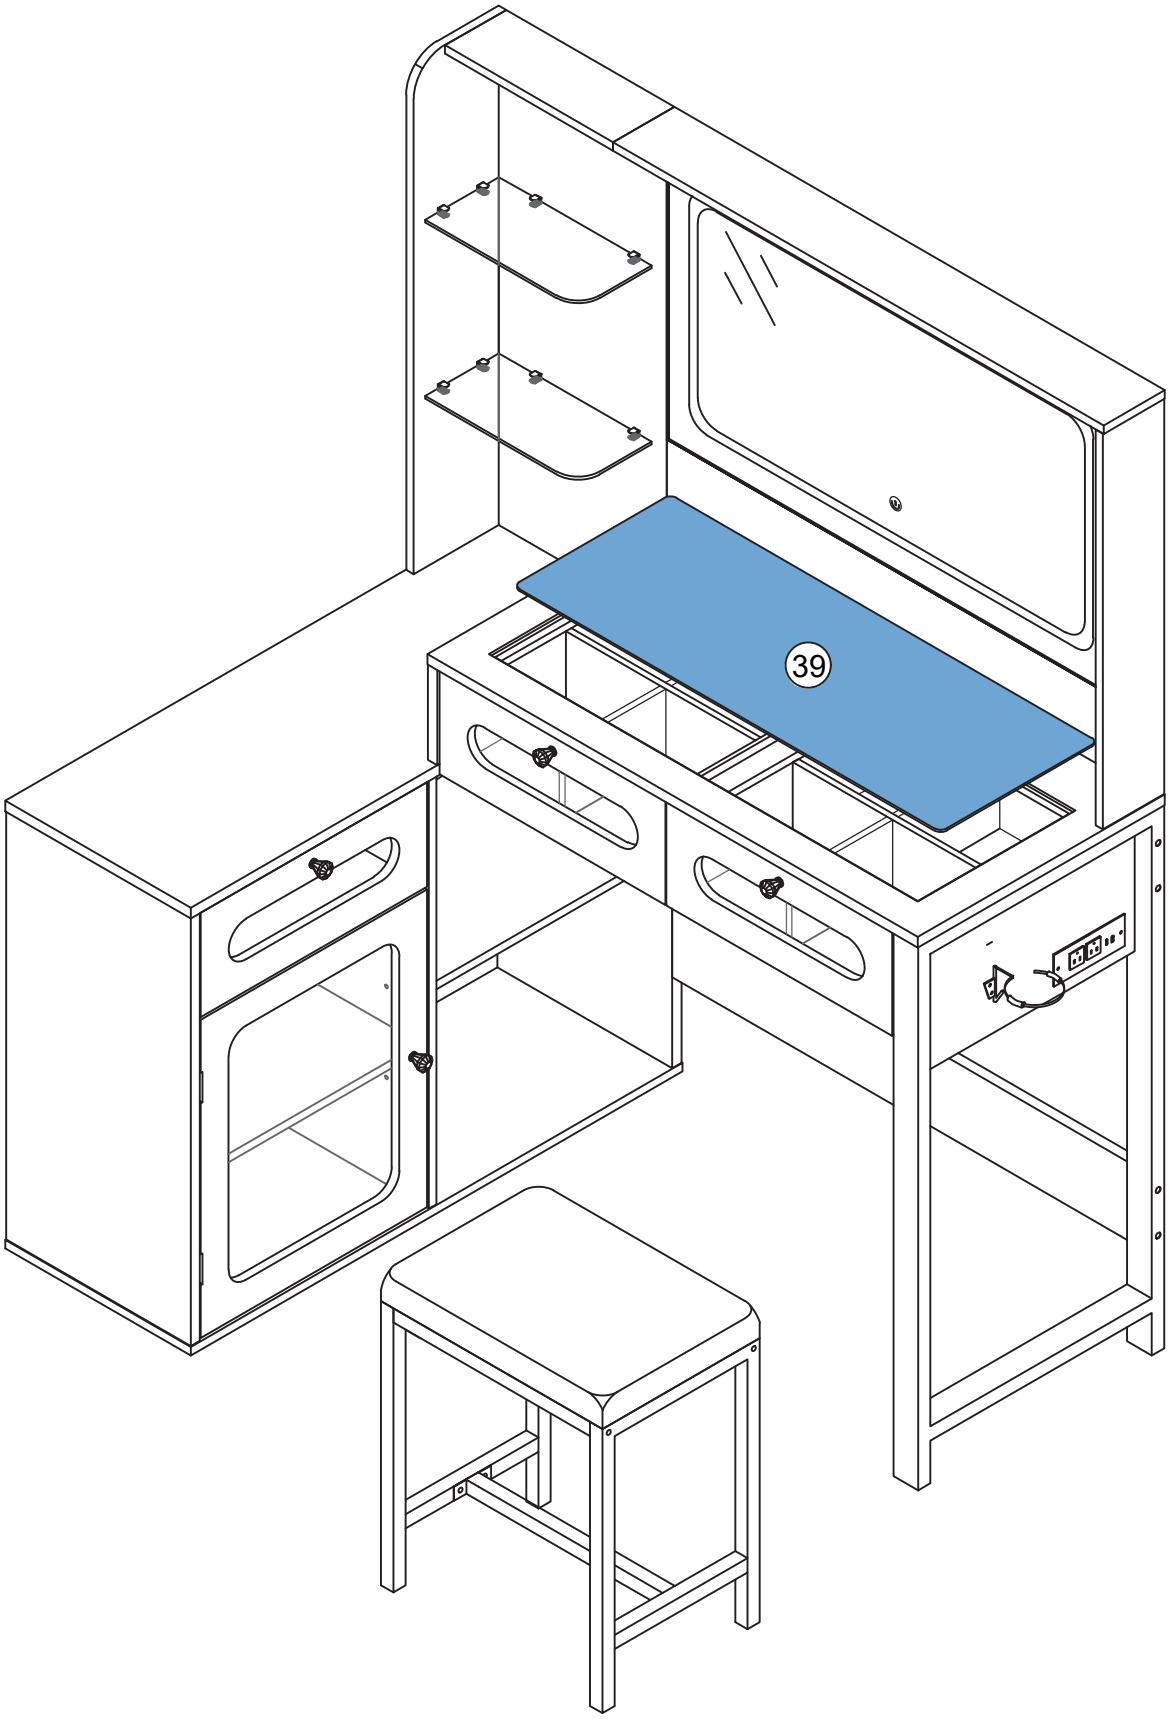




39

step 52

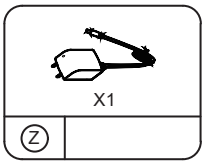



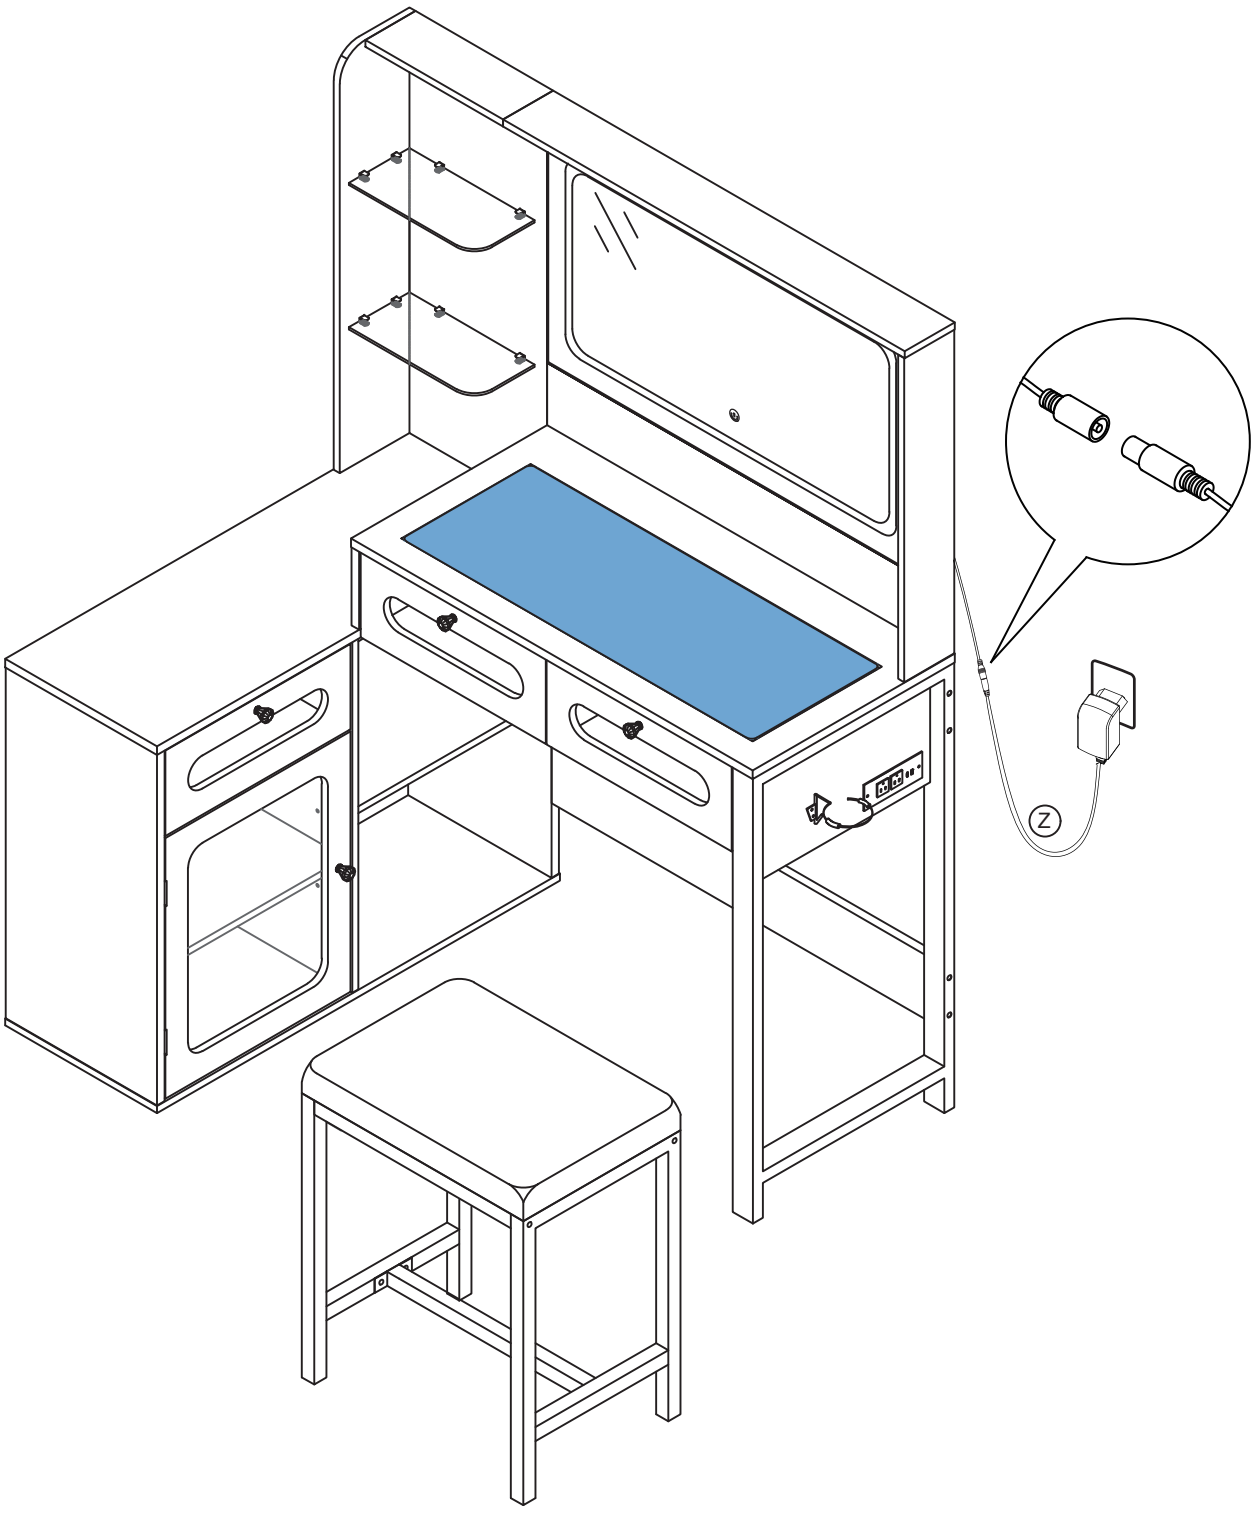

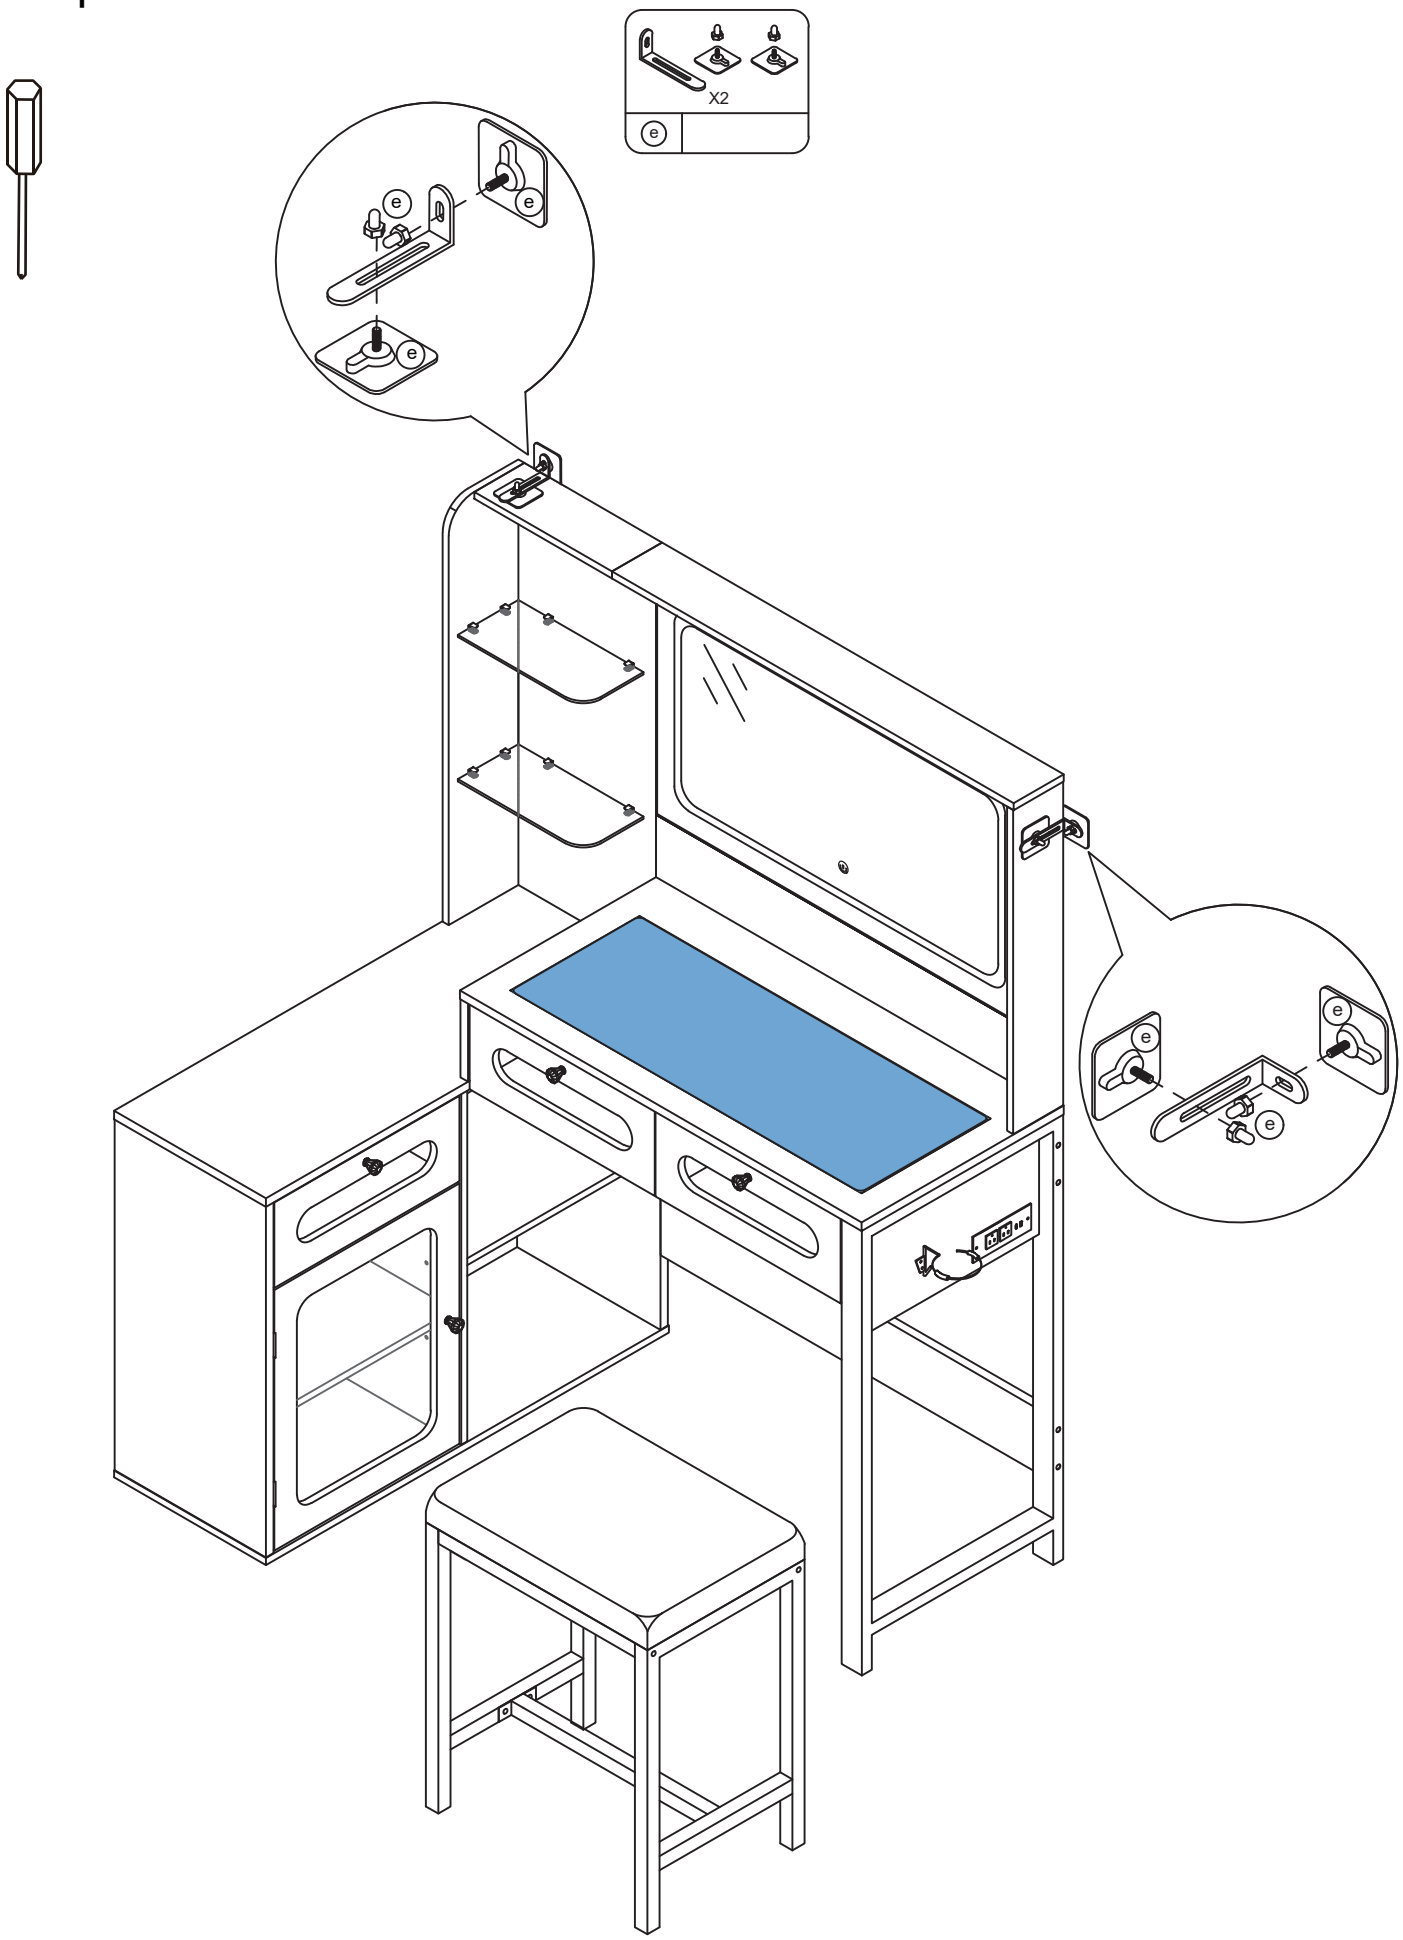
X2
e