

ASSEMBLY INTRODUCTION

Needed for Assembly:




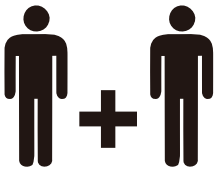


2 People

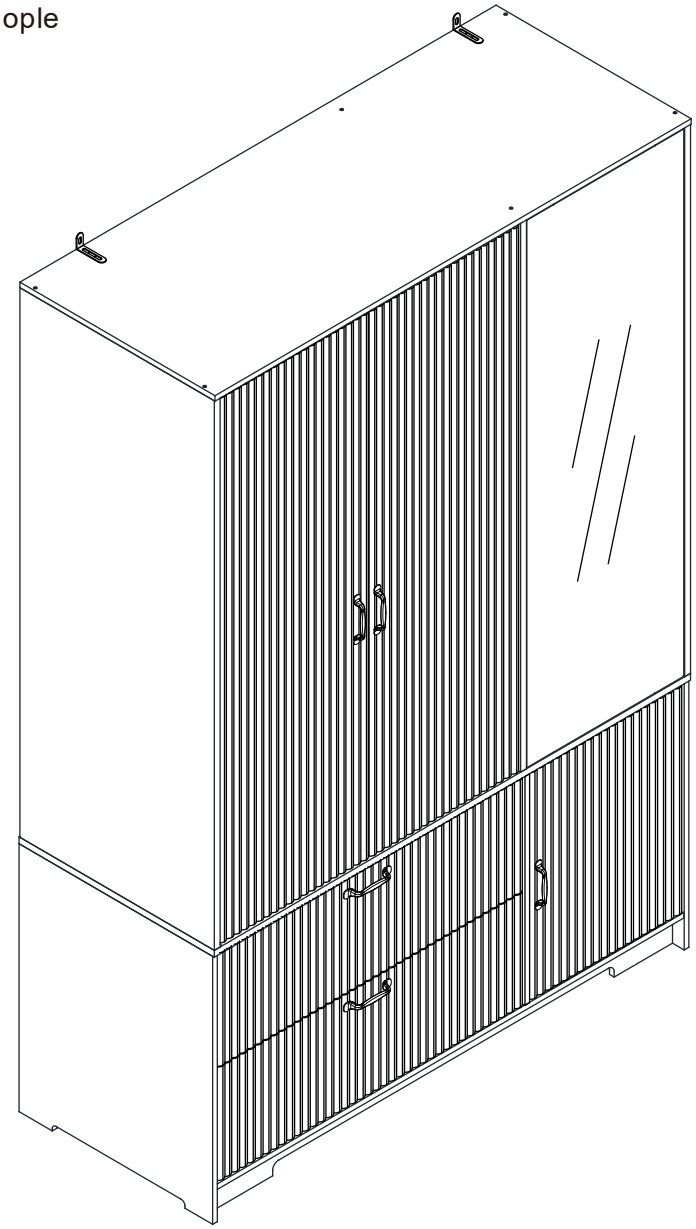

Exploded View

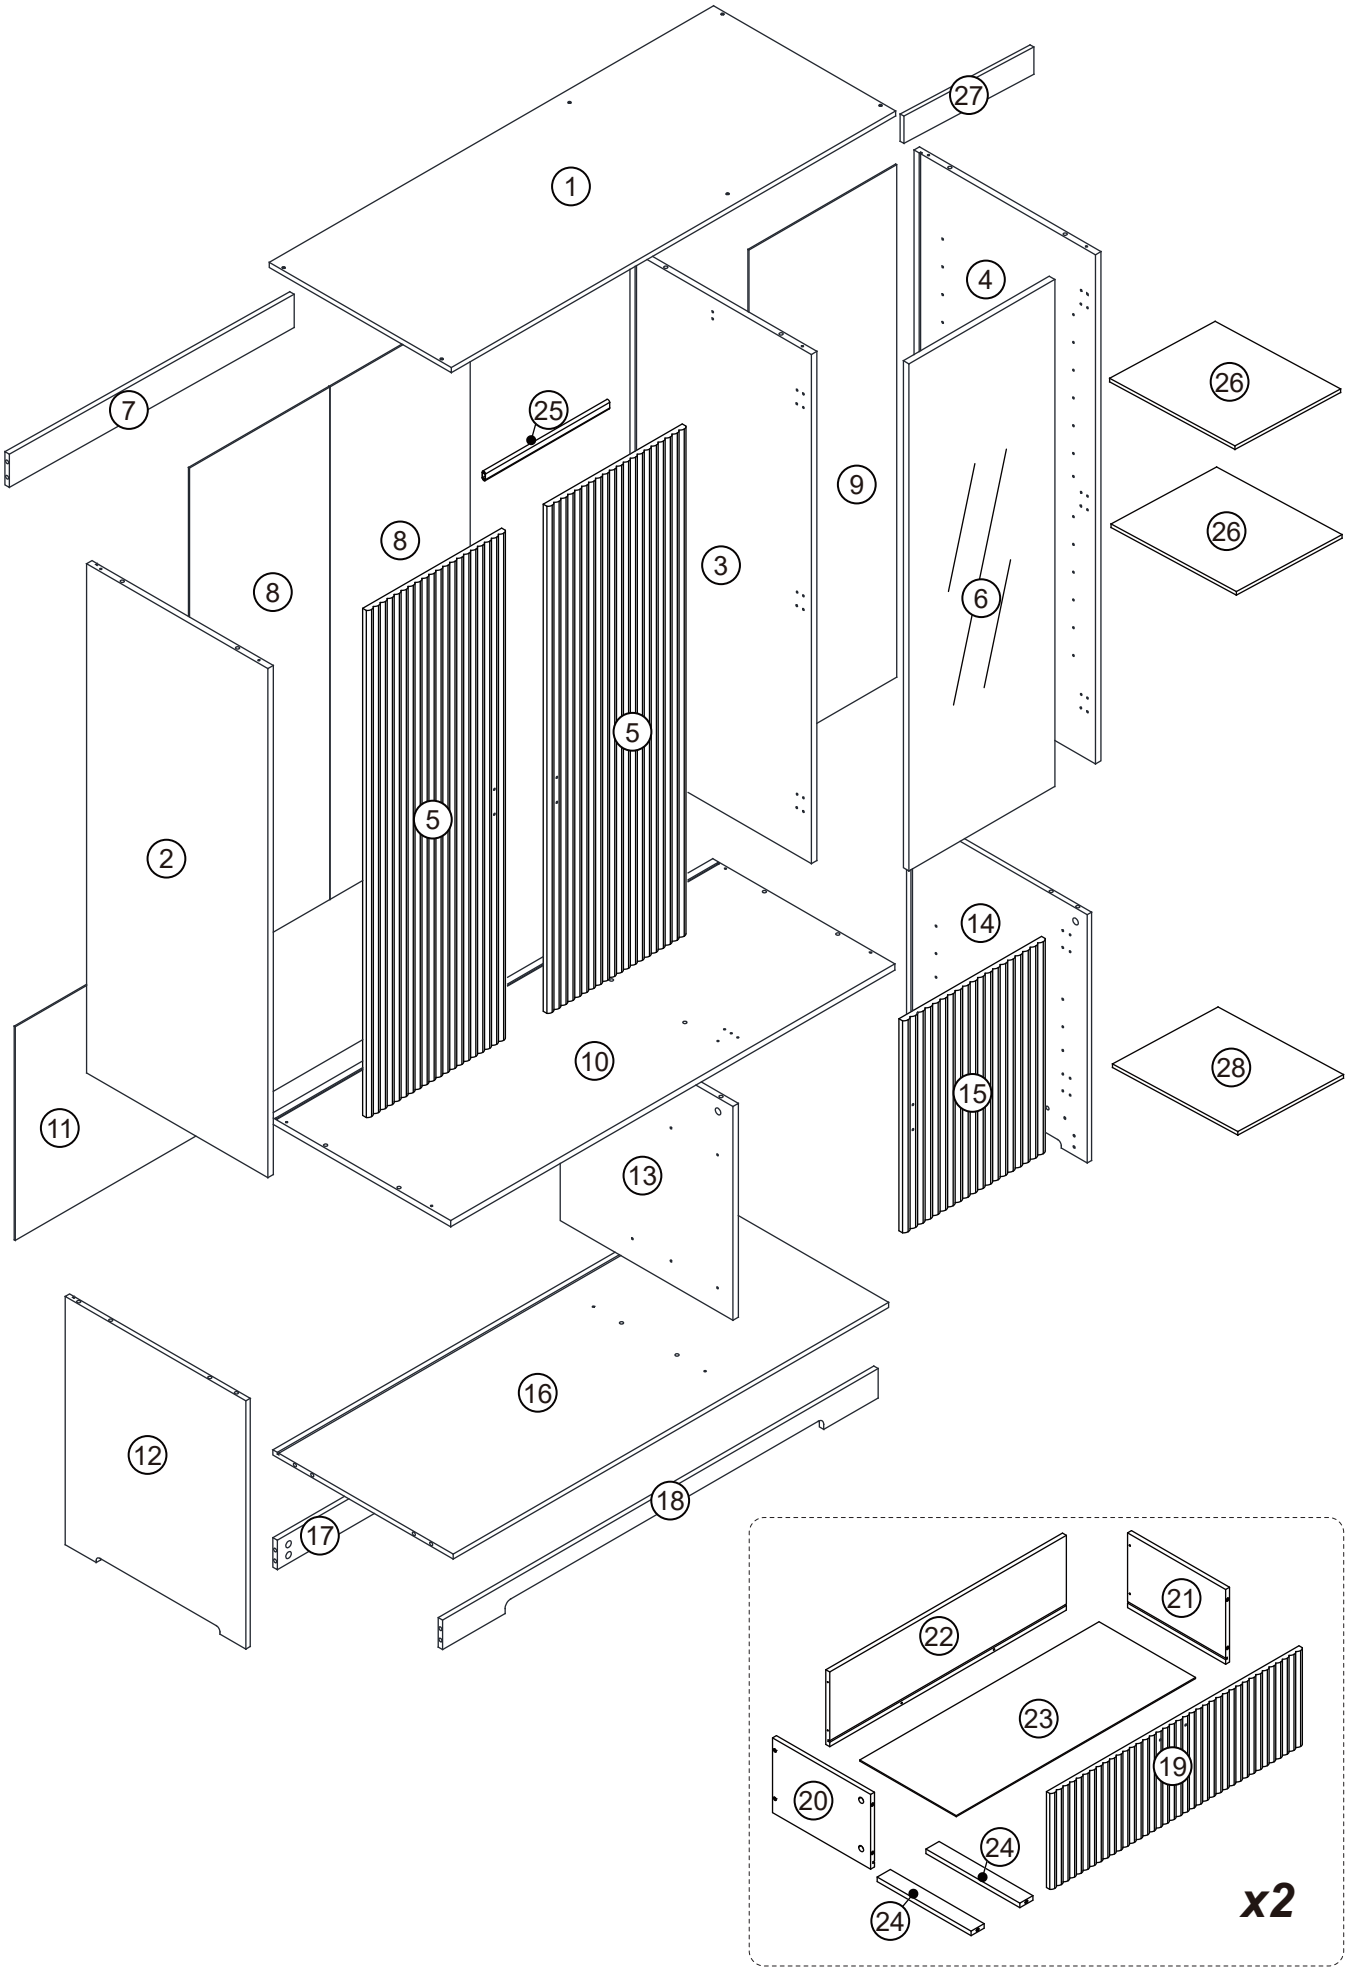



Fittings

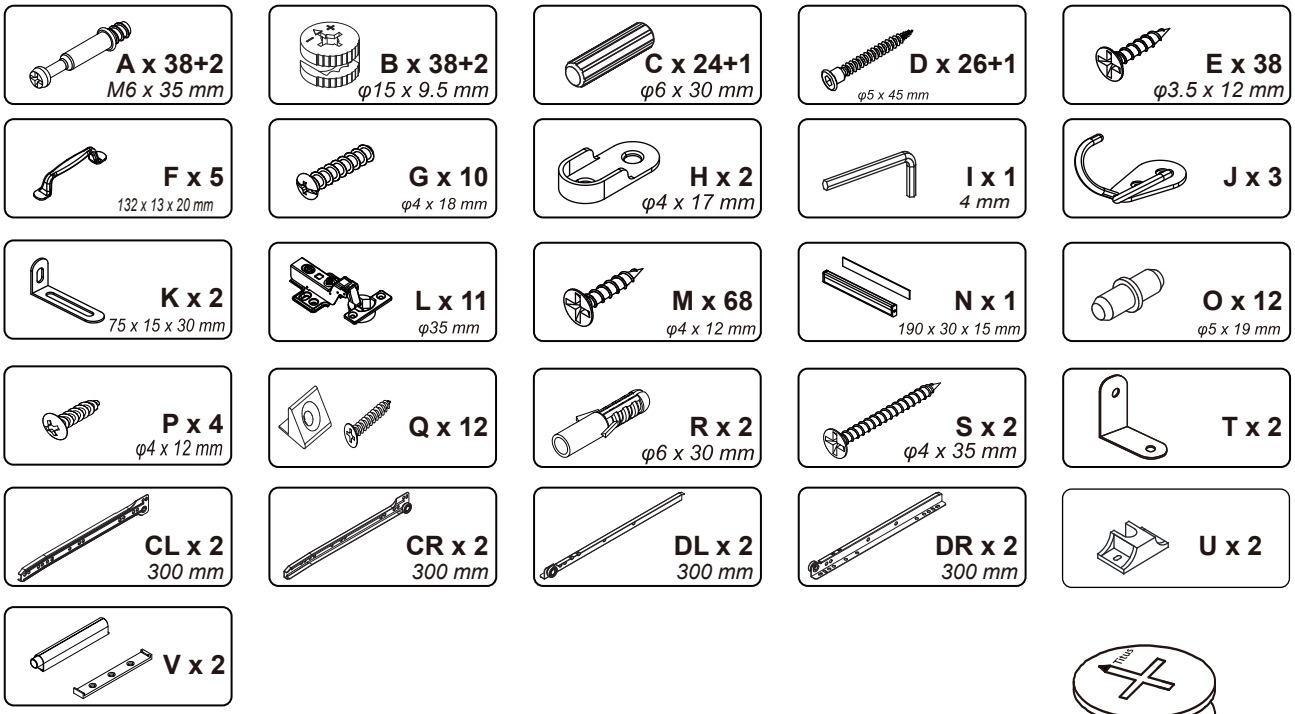

CAM-LOCK



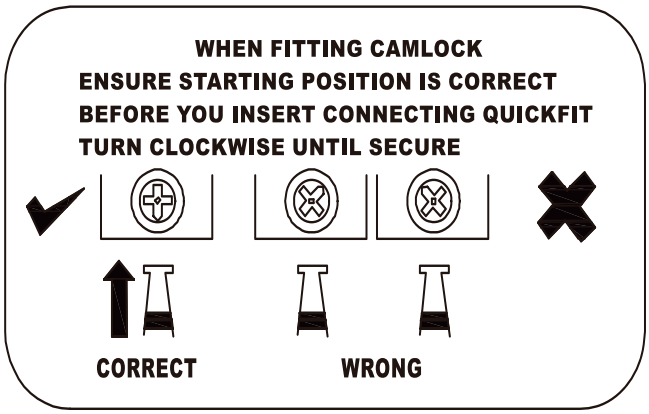


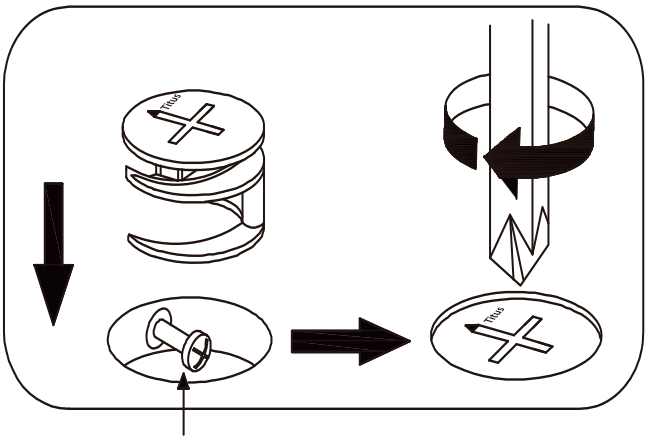


Quickfit head needs to be in centre


QUICKFIT

Tighten until shoulder is flush with panel.DO not overtighten or undertighten (see example below

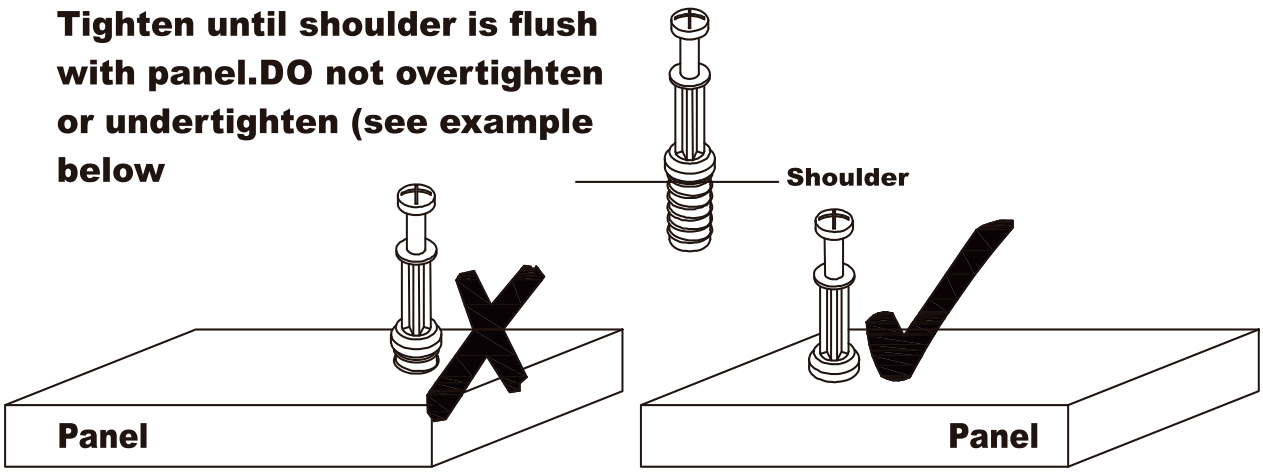

Step 1

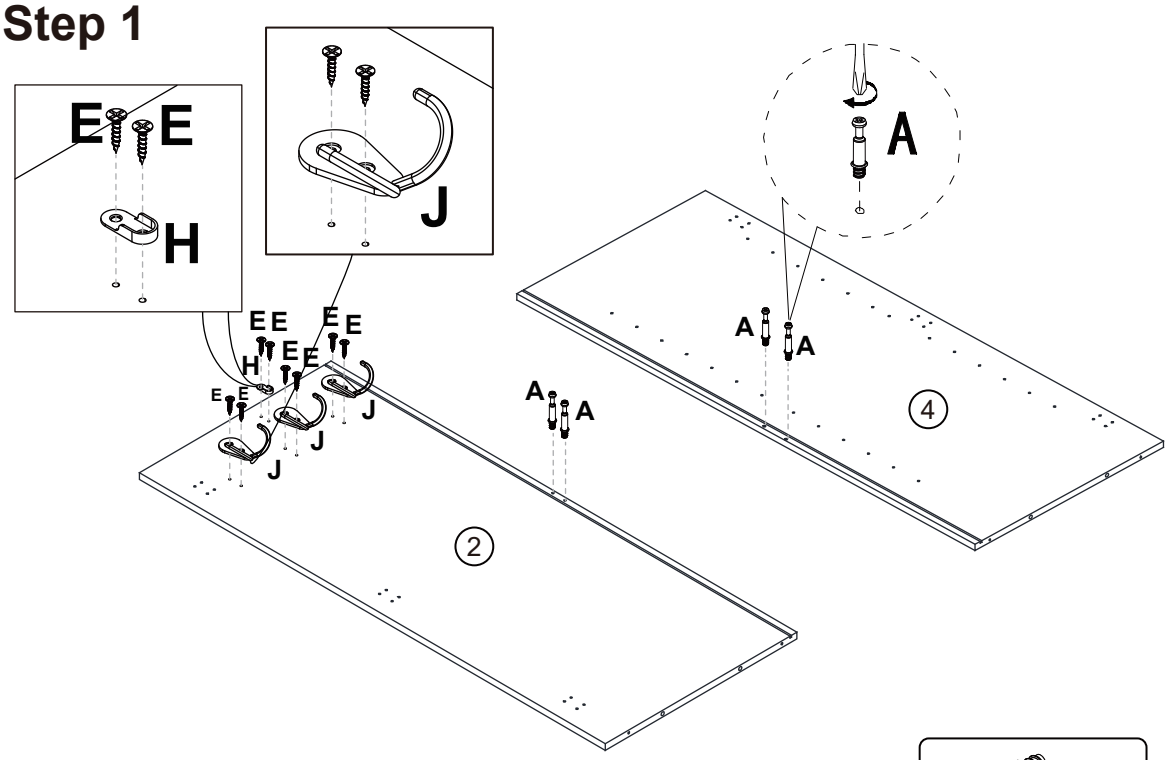
E E
H
J
A
E E
E E
H
E E
E E
J
J
J
A A
A A
2
4



A x 4
M6 x 35 mm



E x 8
φ3.5 x 12 mm



H x 1


J x 3

Step 2

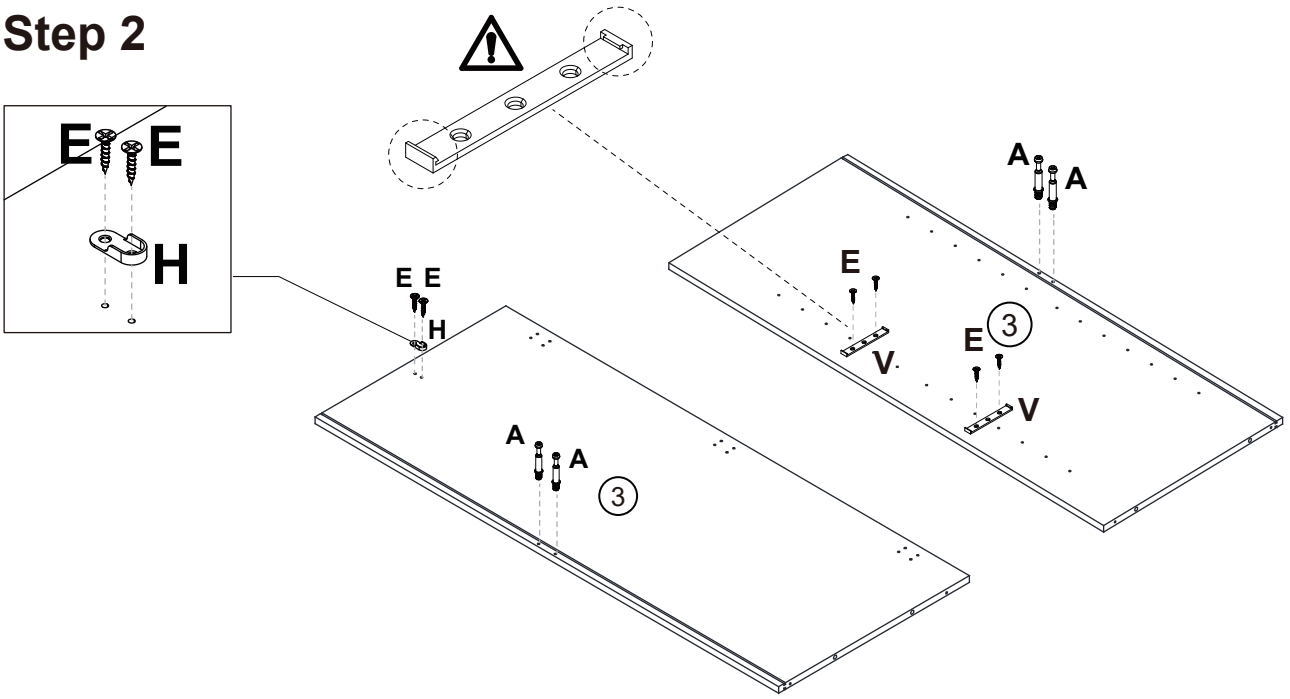

E E
H
E E
H
A A
E
V
E
3
V
A A
3

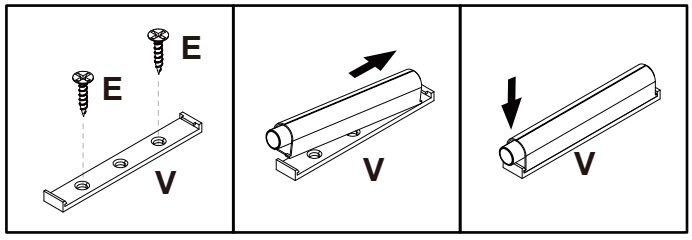
E
E
V
V
V


A x 4
M6 x 35 mm



E x 6
φ3.5 x 12 mm



H x 1


V x 2


Step 3

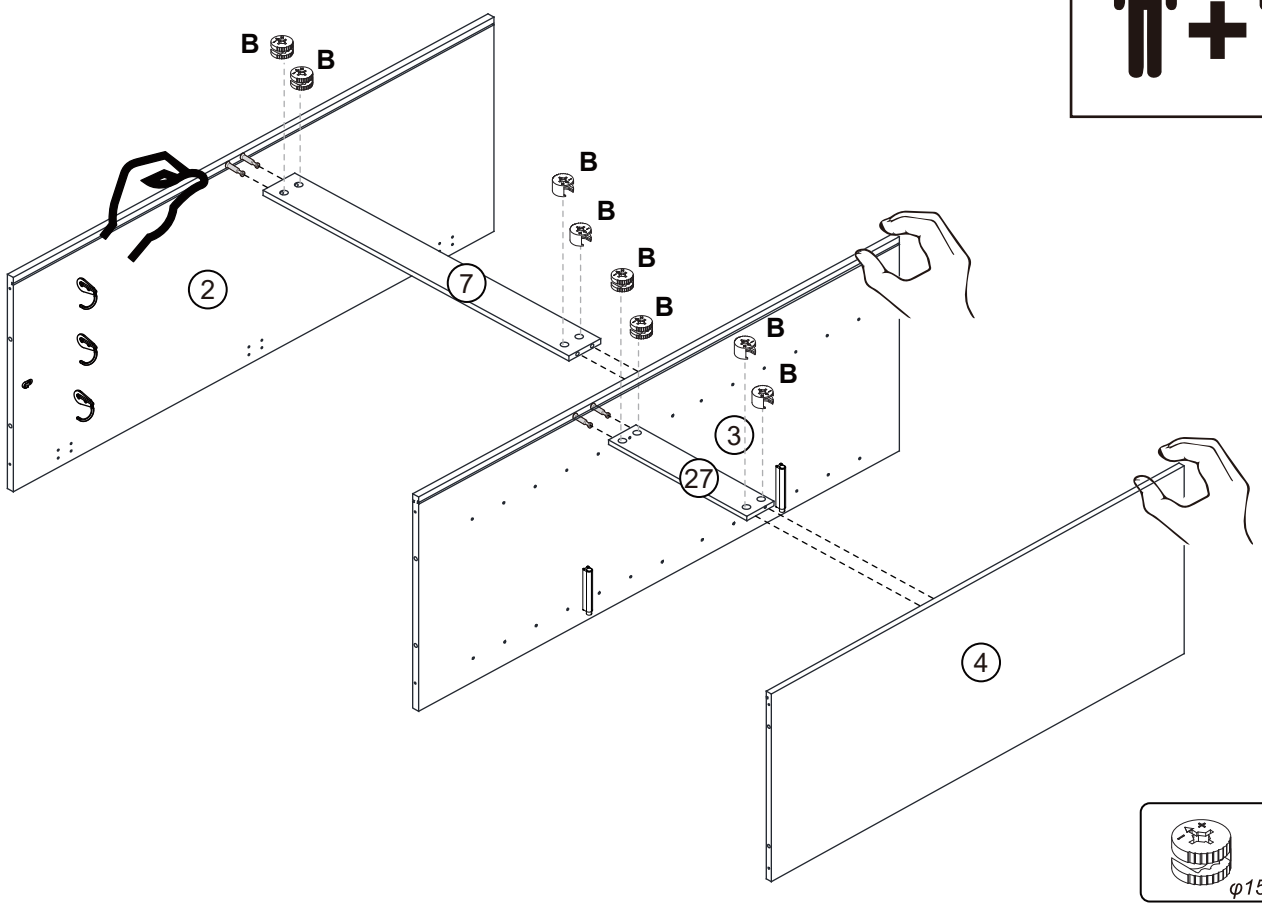



B
B
B
B
B
B
B
B
2
7
3
27
4


B x 8
φ15 x 9.5 mm

Step 4

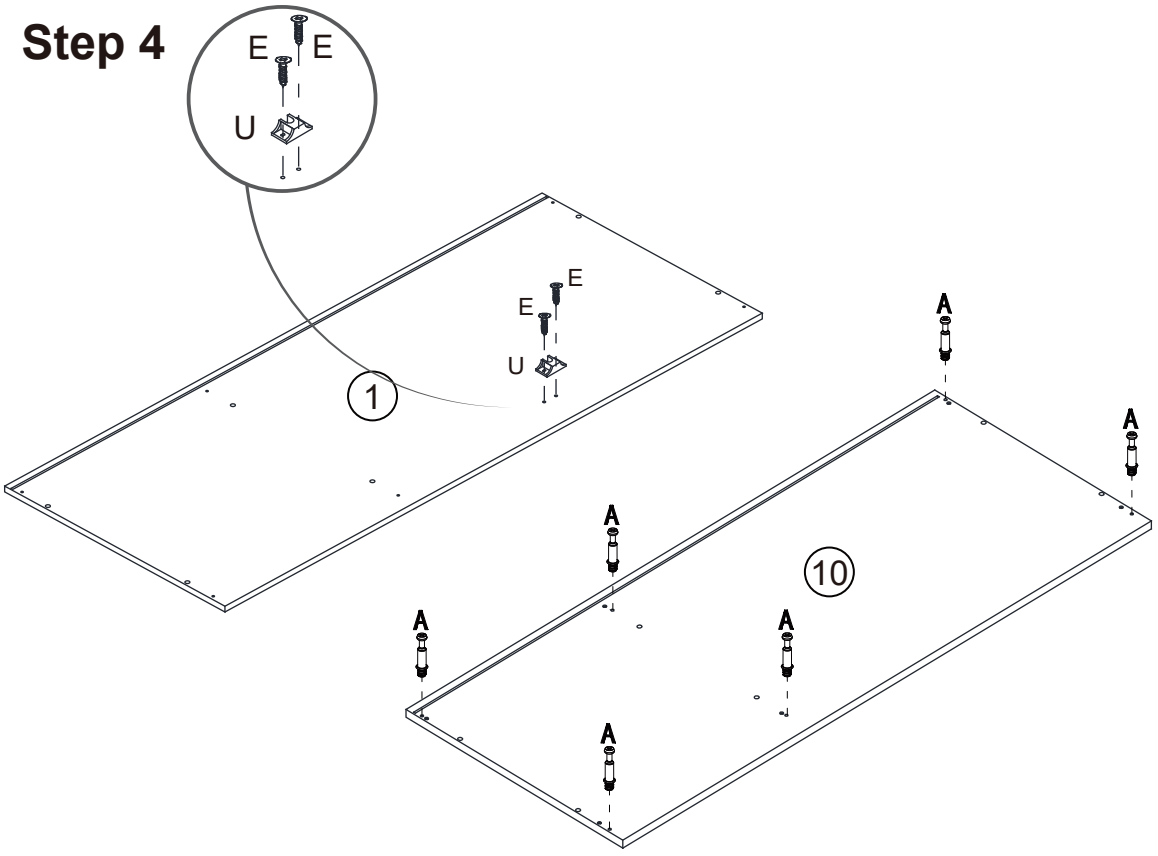

E
E
U
E
E
U
1
A
A
A
A
A
A
10


A x 6
M6 x 35 mm



U x 1


E x 2
φ3.5 x 12 mm


Step 5

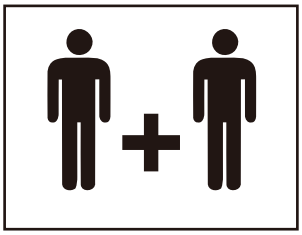


Turn Over
90° **Step 5**




Step 6

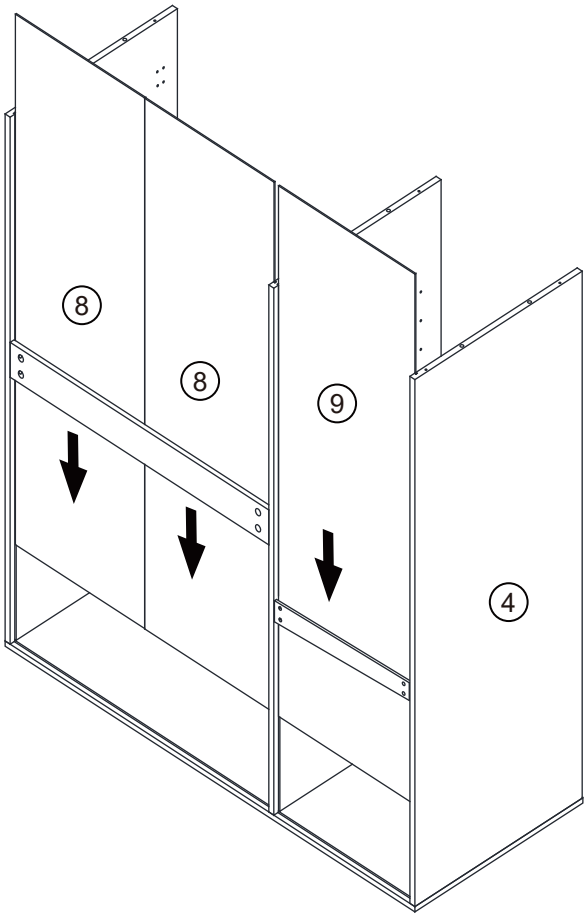

Step 7

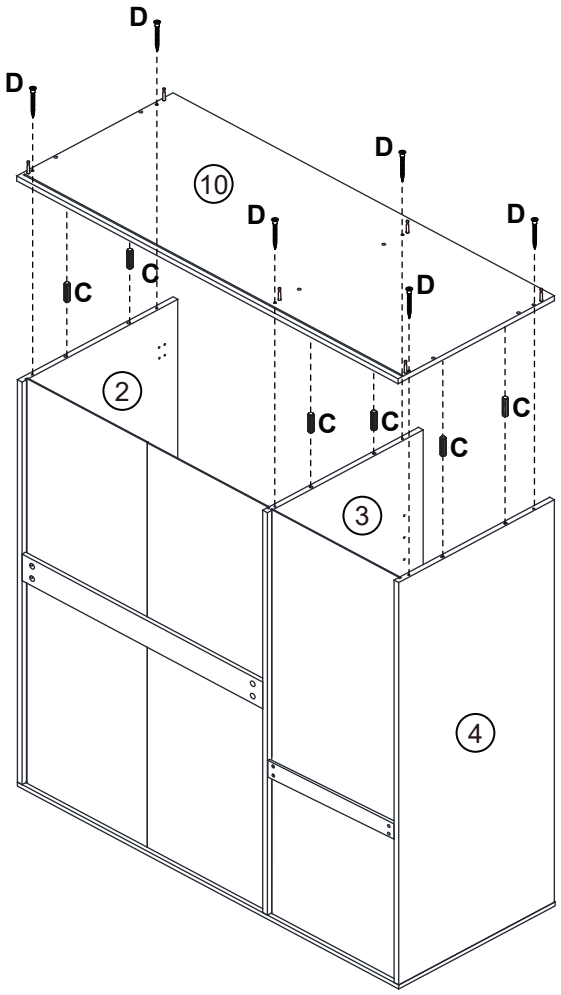

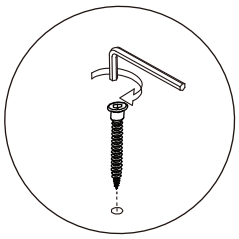


C x 6
φ6 x 30 mm

D x 6
φ5 x 45 mm

I x 1

Step8

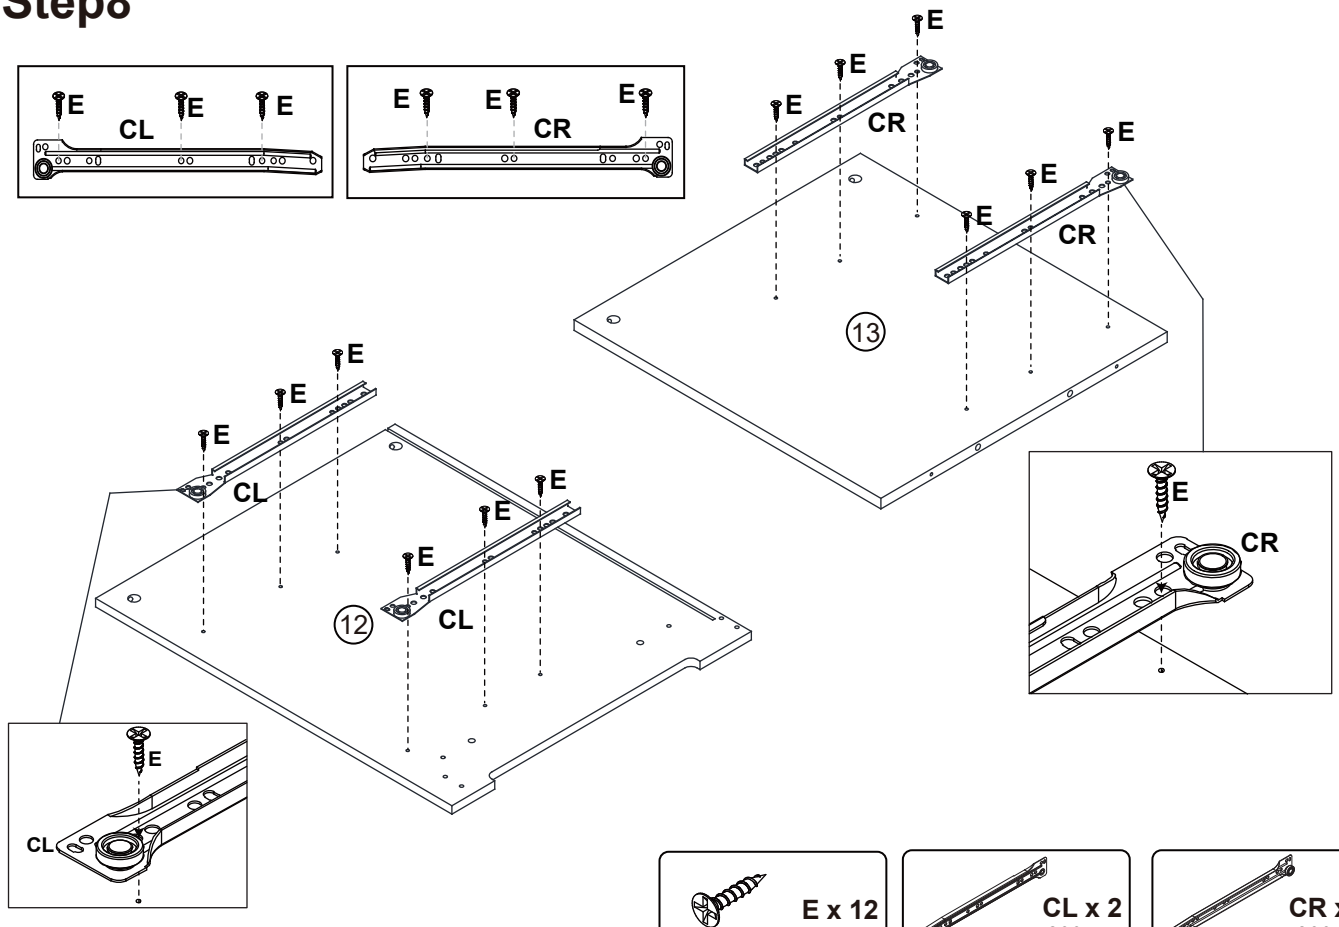



E x 12
φ3.5 x 12 mm

CL x 2
300 mm


CR x 2
300 mm

Step 9

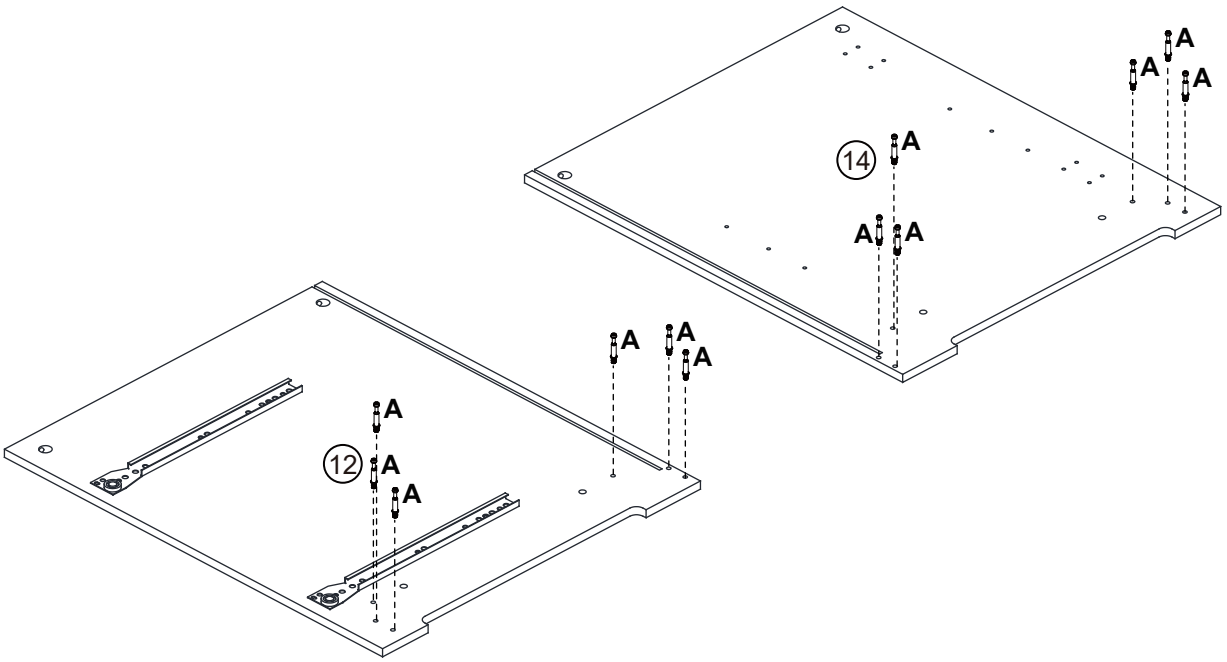





Step10

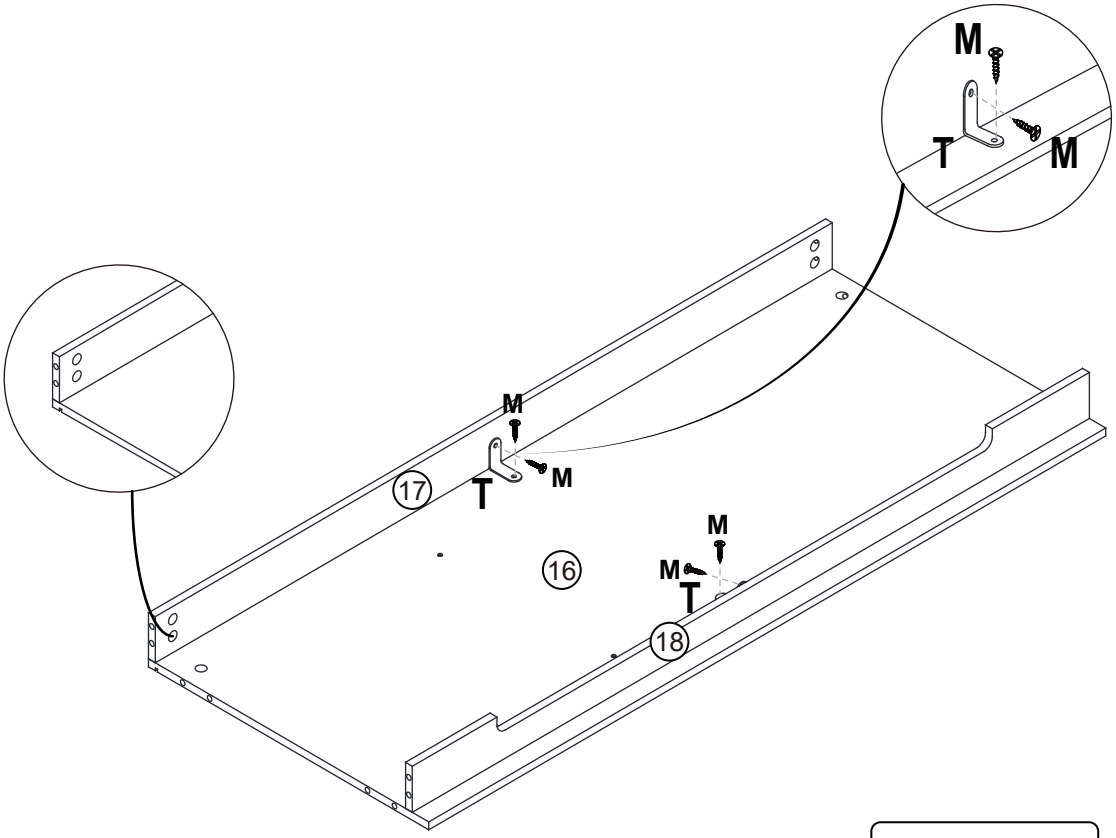








Step 11

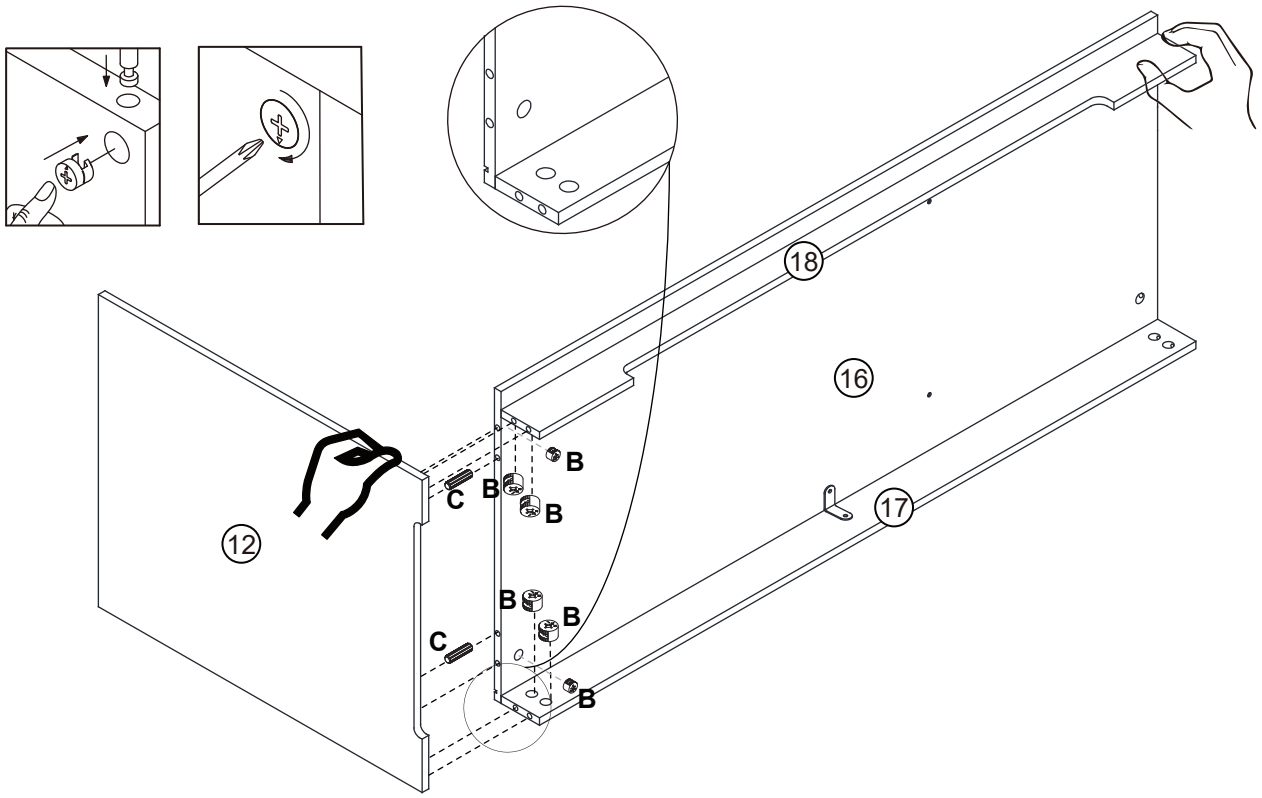





Step 12

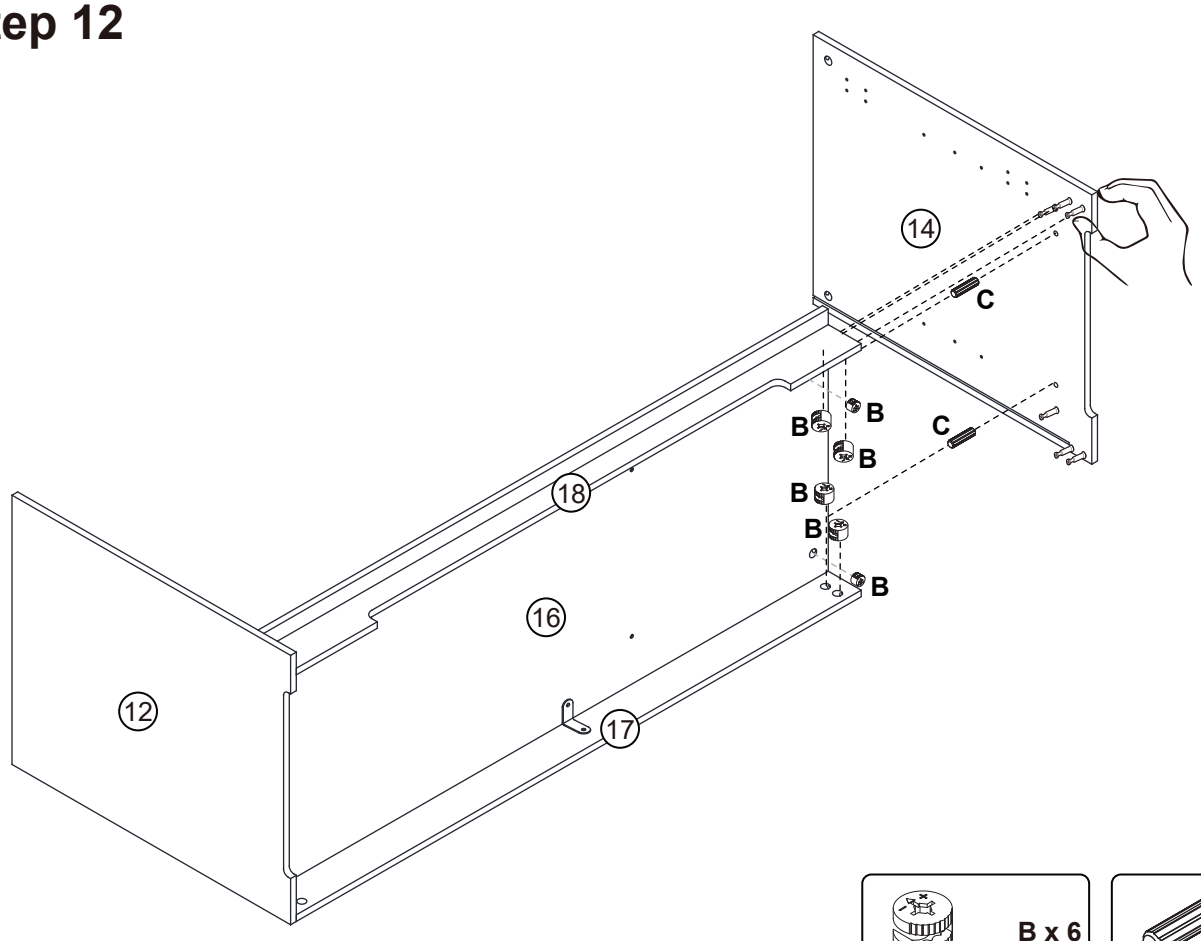




Step 13

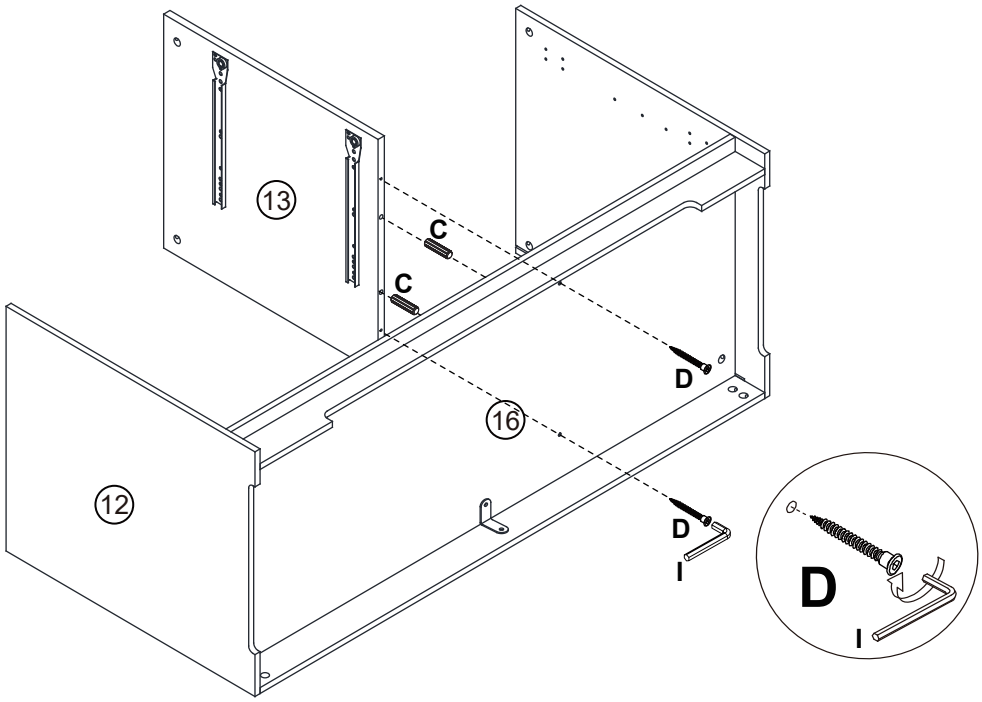




Step 14

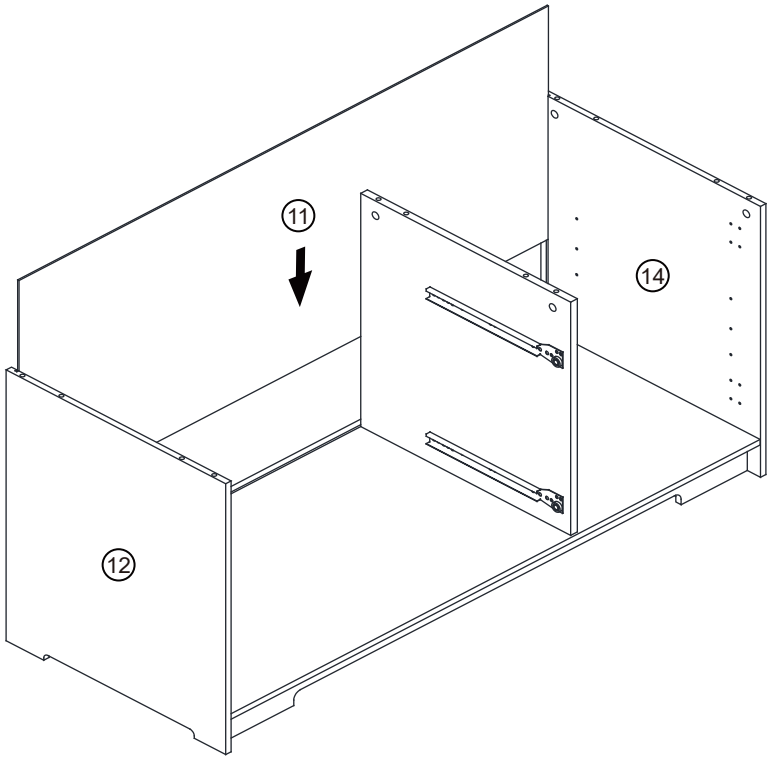

Step 15

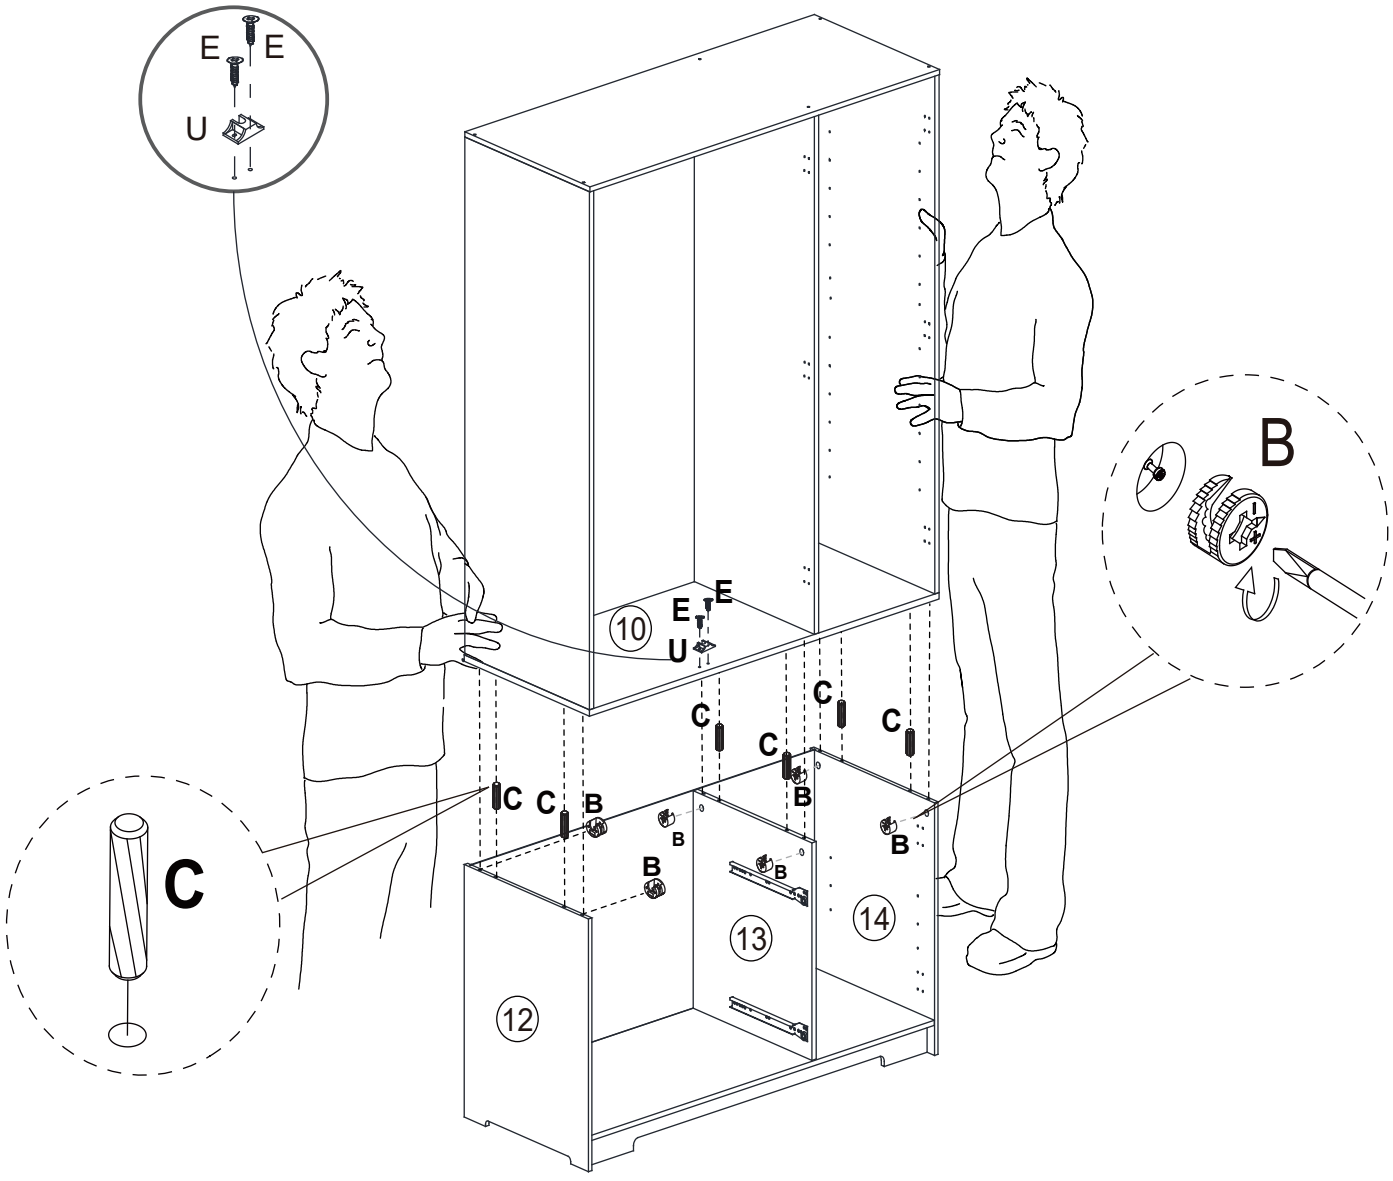


U x 1


E x 2
φ3.5 x 12 mm

B x 6
φ15 x 9.5 mm


C x 6
φ6 x 30 mm

Step 16

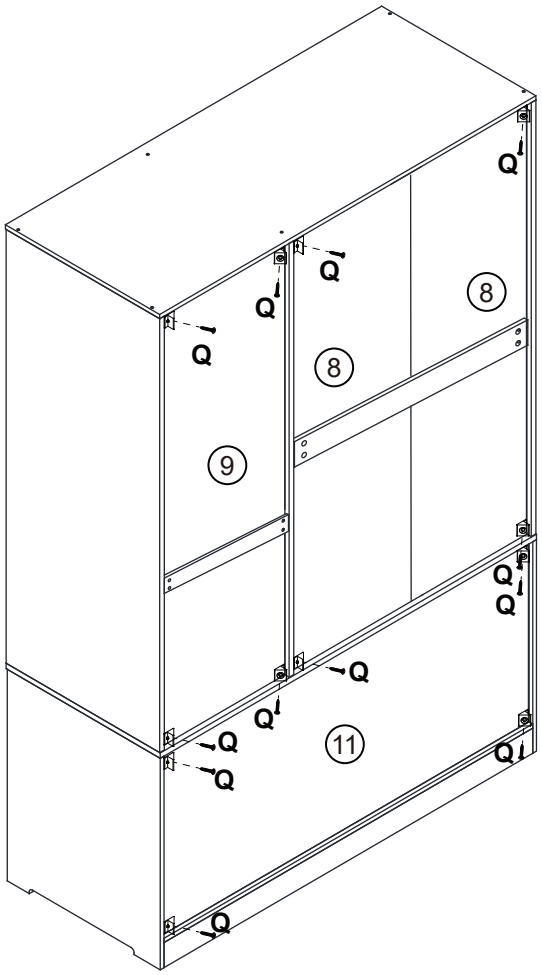





Step 17

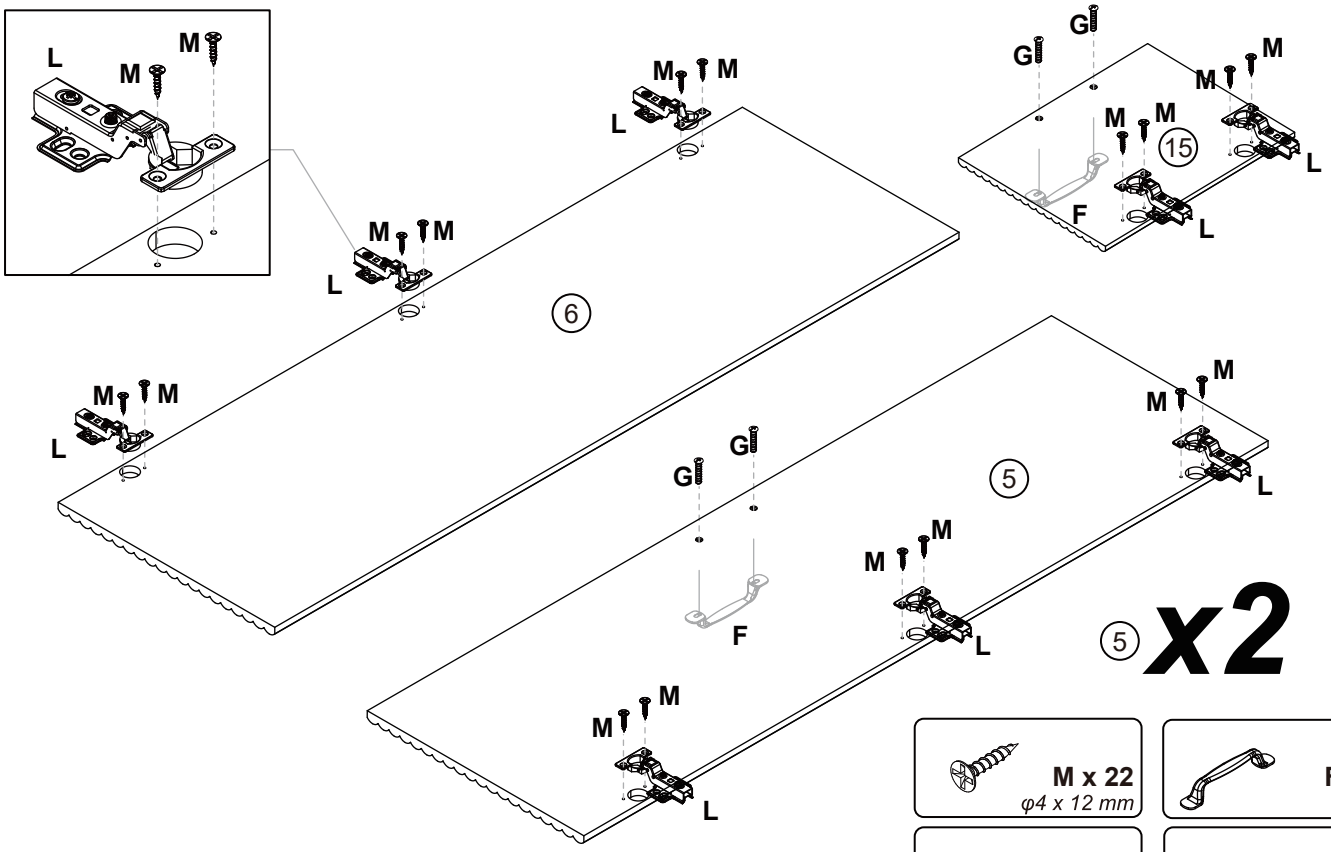



Step 18

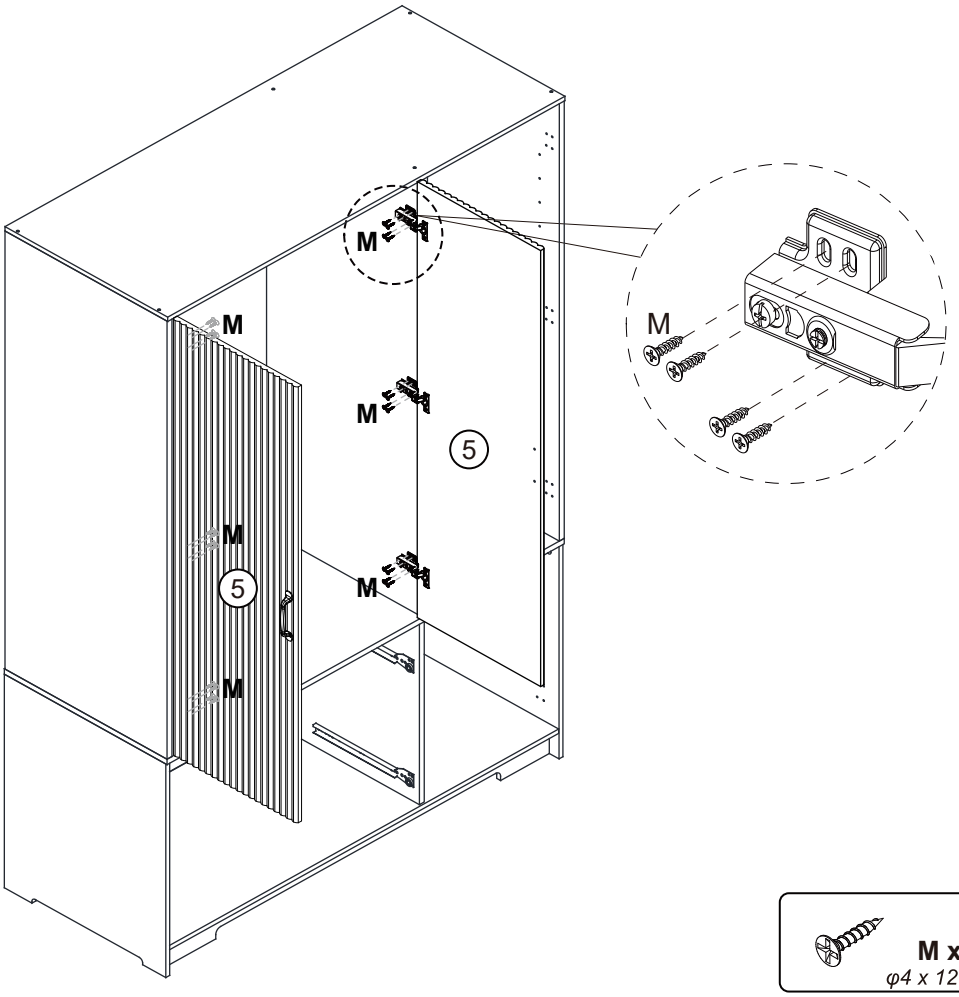


Step 19

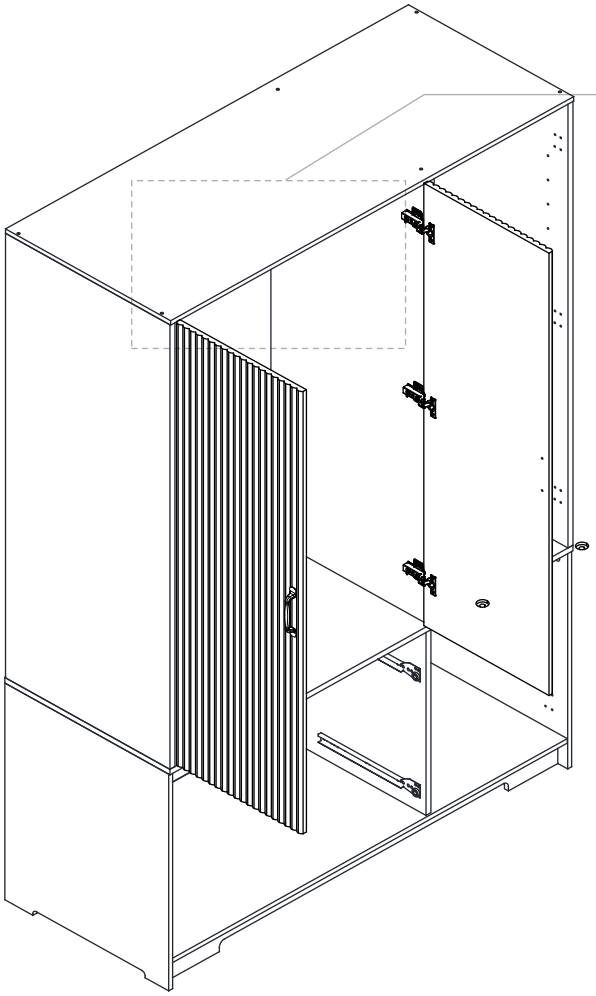

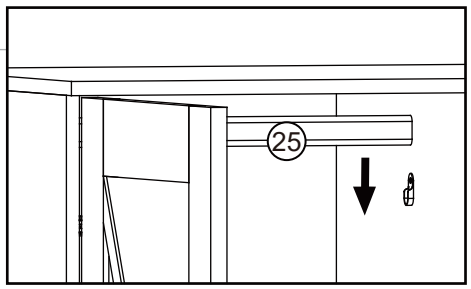


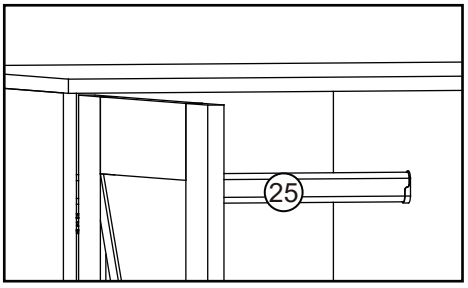

Step 20

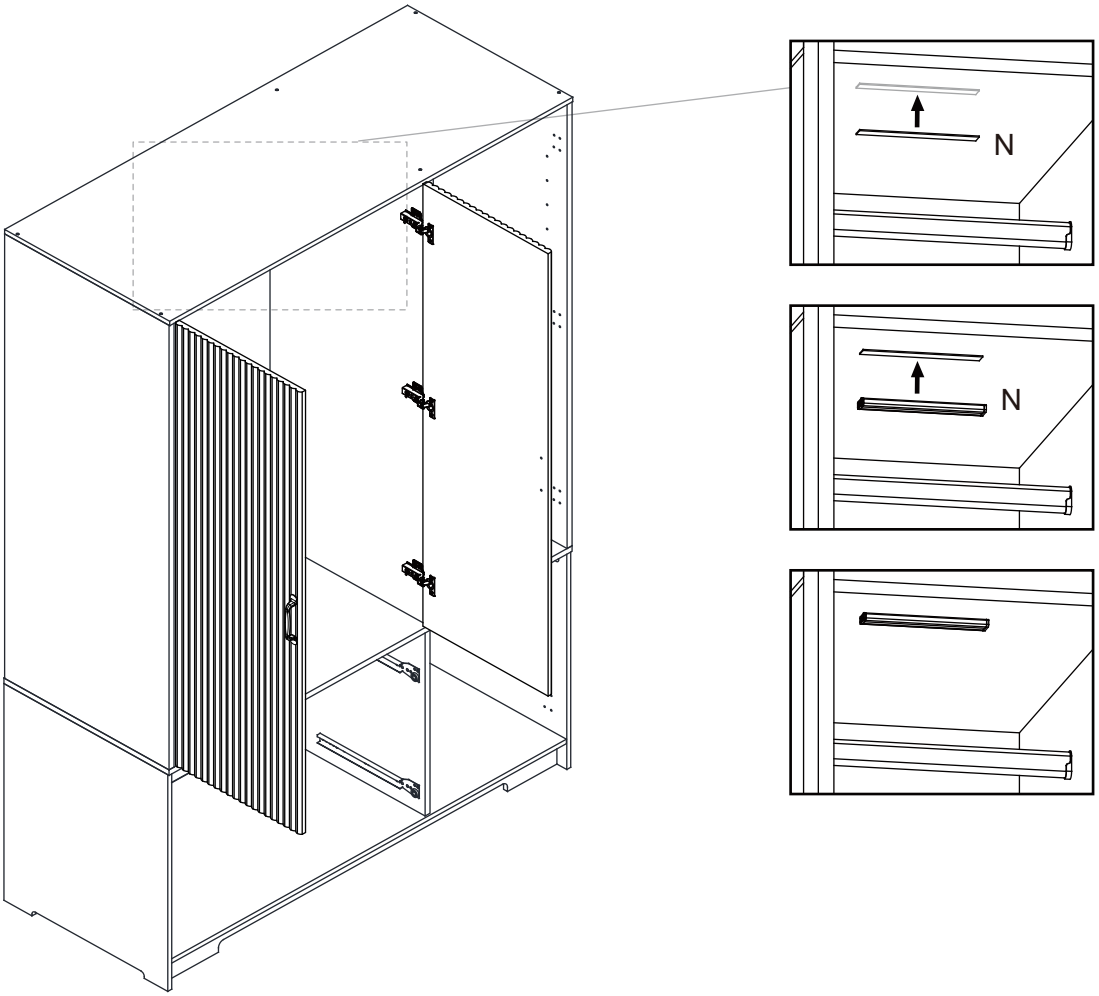


Step 21

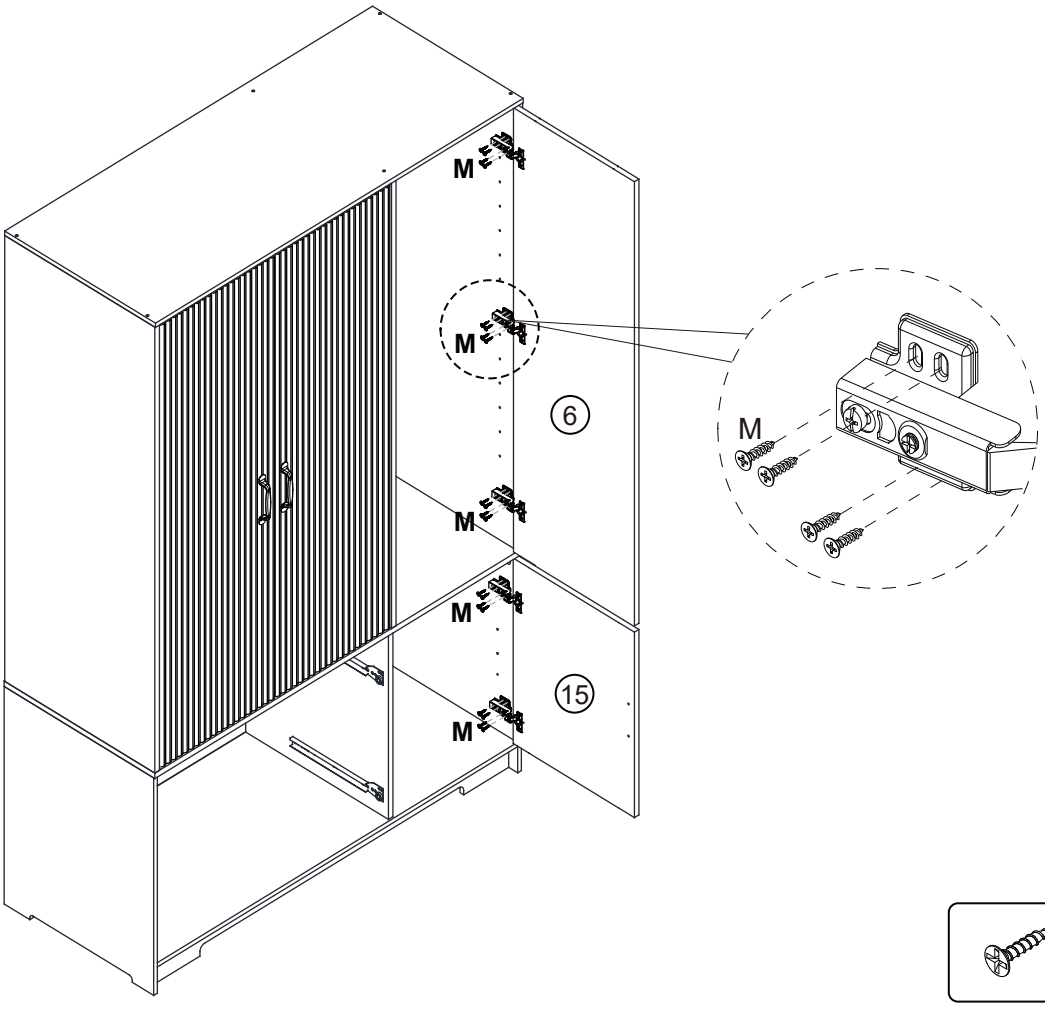


M x 20
φ4 x 12 mm


Step 22

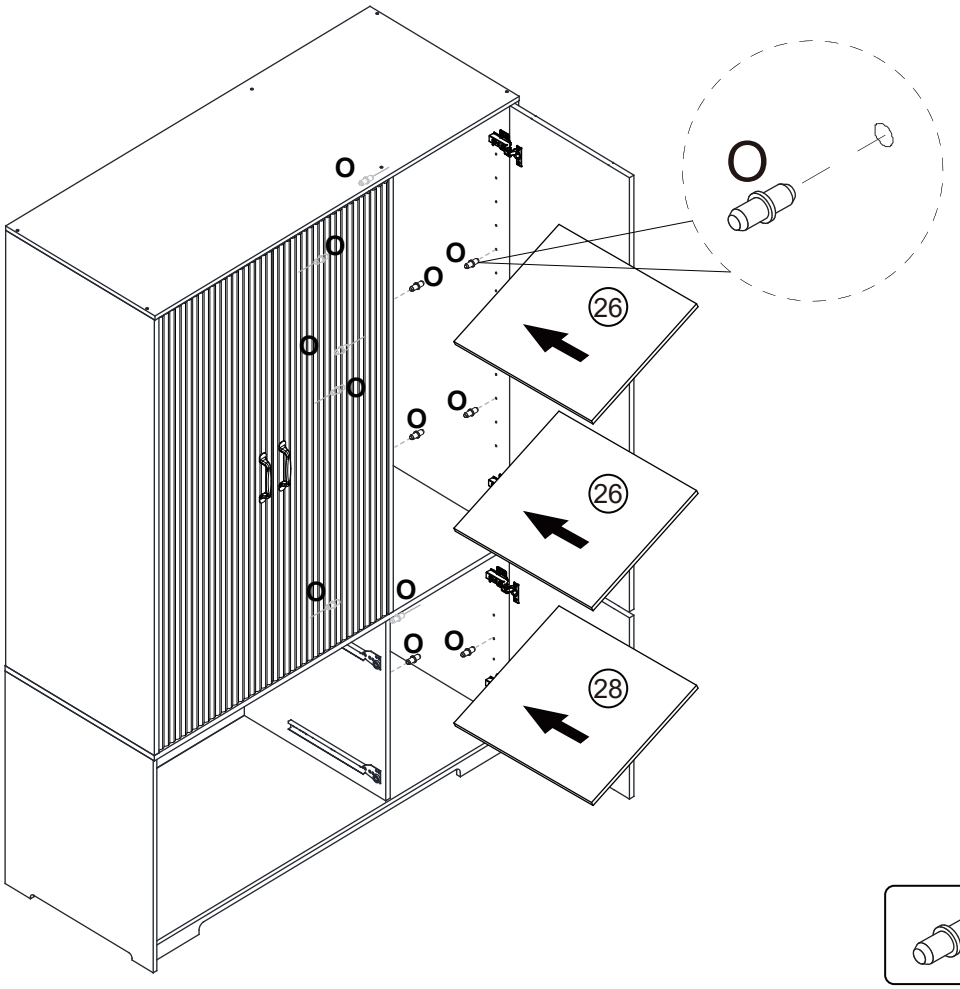


O x 12

Step 23

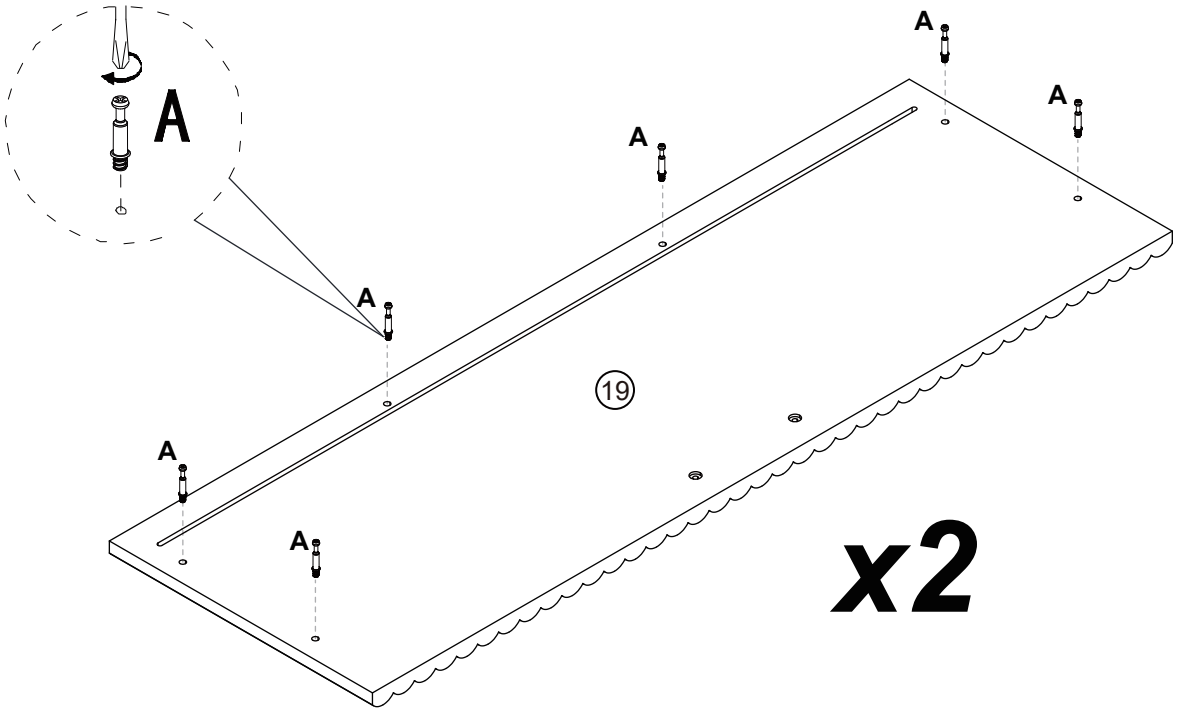



A x 12
M6 x 35 mm


Step 24

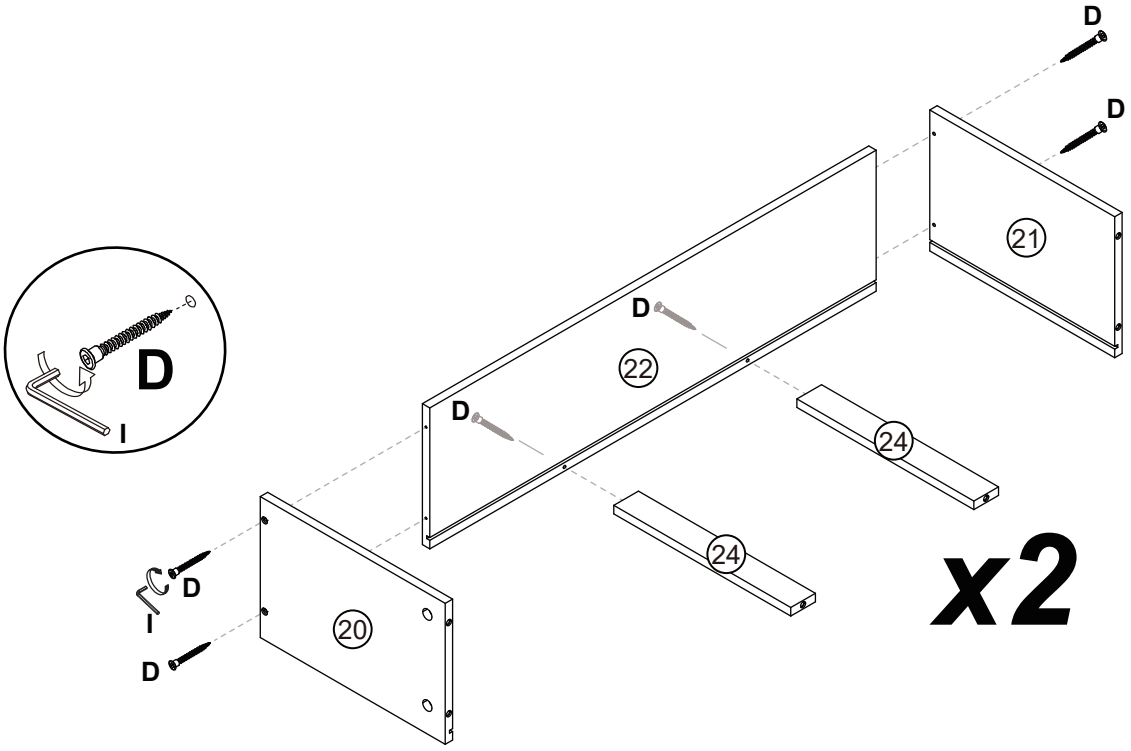






Step 25

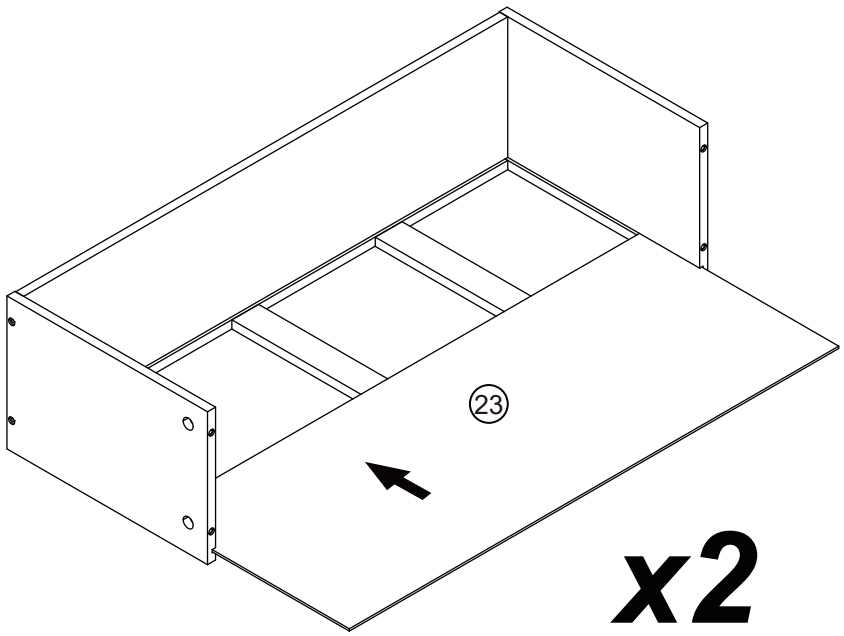


Step 26

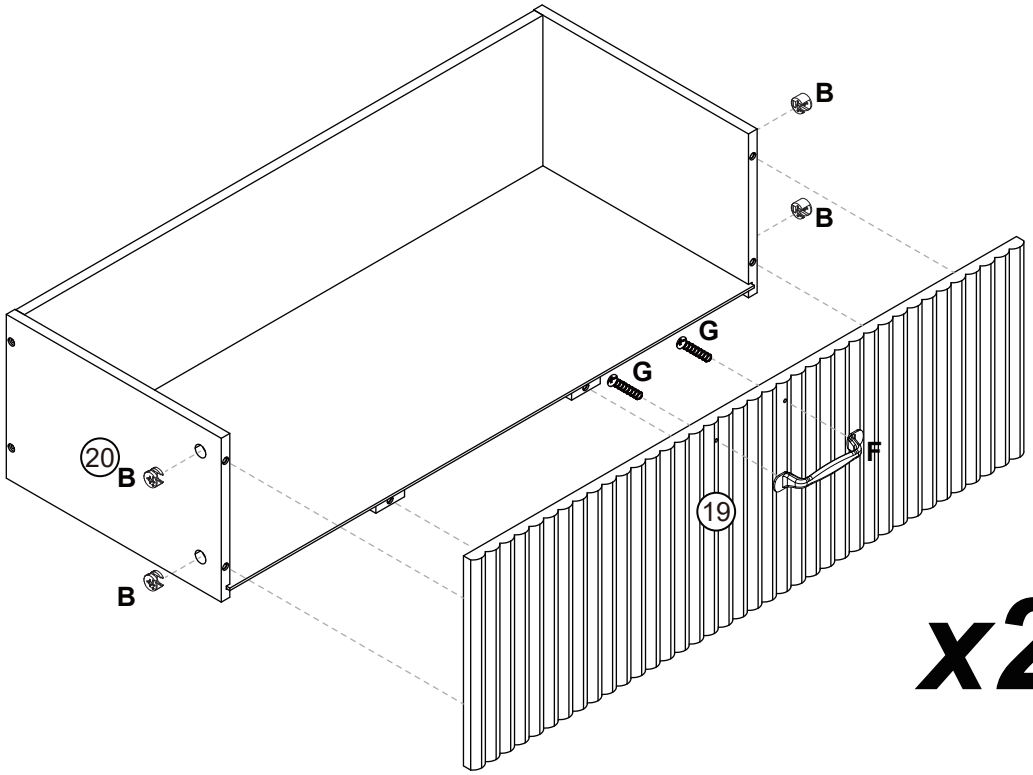

x2

B x 8 *φ15 x 9.5 mm*	**F x 2**	**G x 4**


Step 27

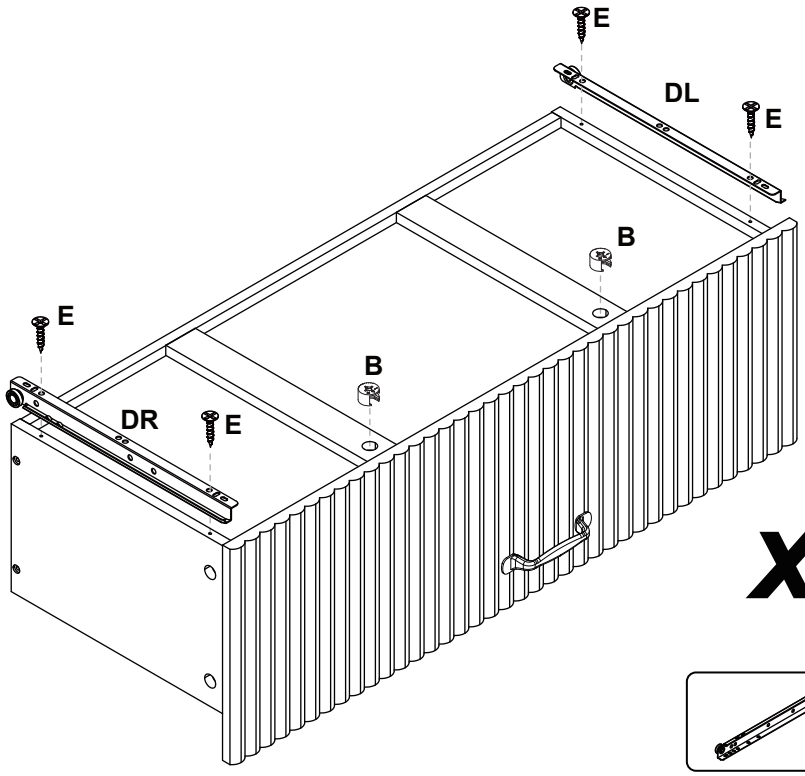



x2


DR x 2	**DL x 2**
B x 4 *φ15 x 9.5 mm*	**E x 8** *φ3.5 x 12 mm*

Step 28

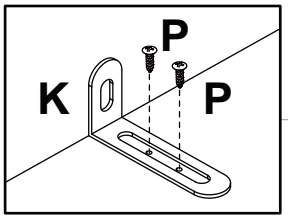

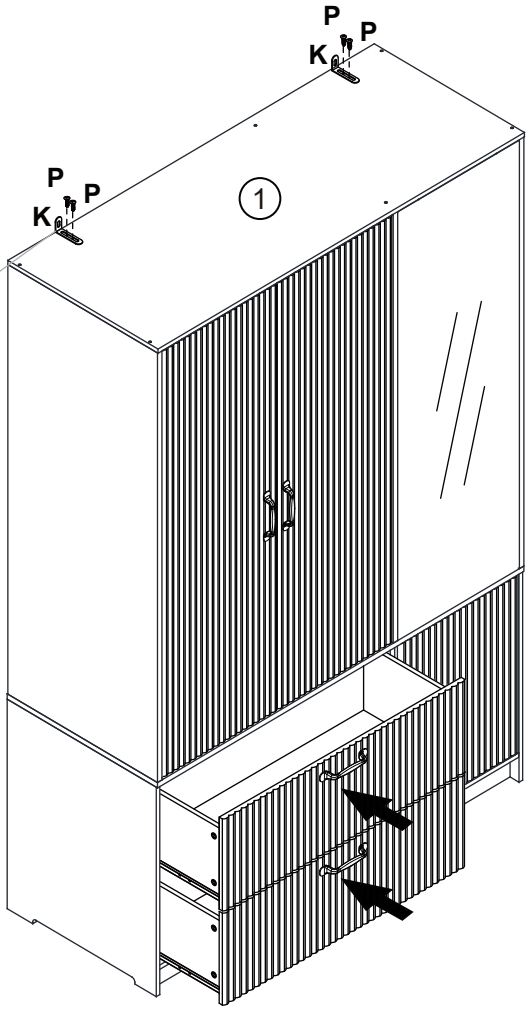

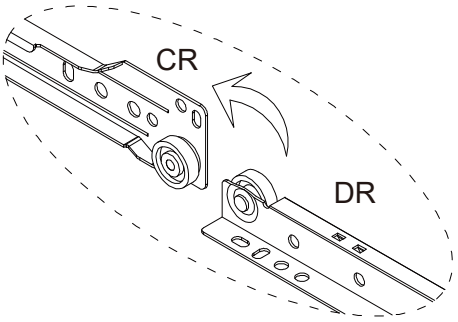


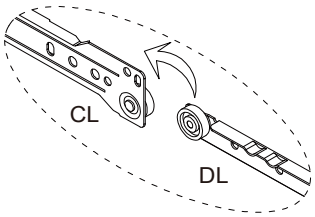


K x 2


P x 4

Step 29

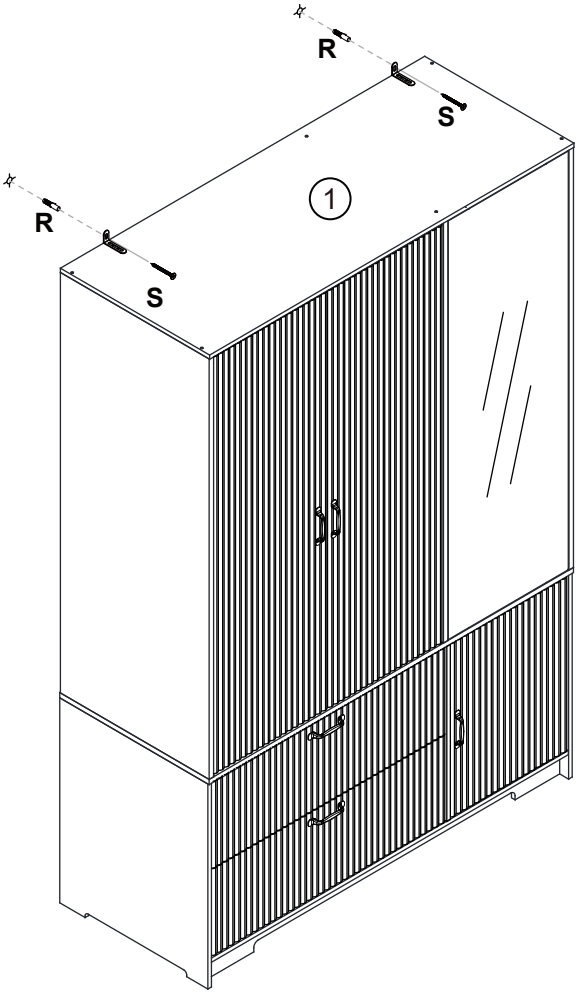




R x 2


S x 2


Step 30


Customer Attention:
To align doors and control gap in between doors. Product doors may need adjusting during and after assembly.
This can be done by adjusting appropriate screws. See below illustration.

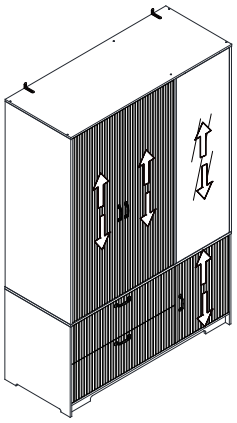

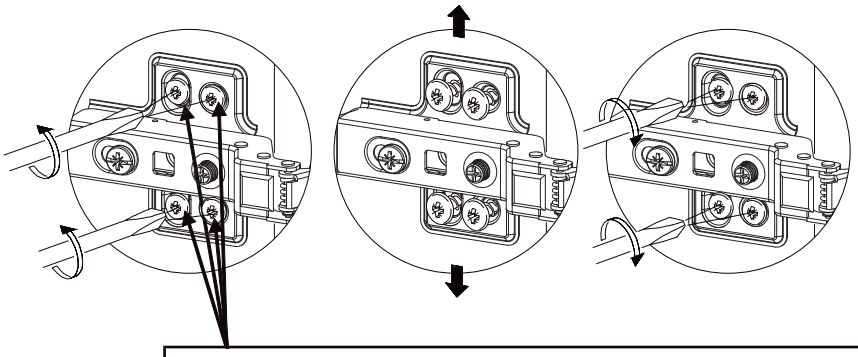



Vertical Door Adjustment:
Loosen both screws on all hinges and lift the door to the desired height.
This allows an even space at the top and bottom between the door and frame.

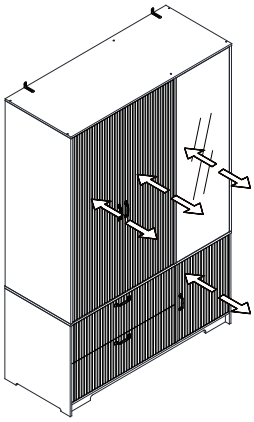

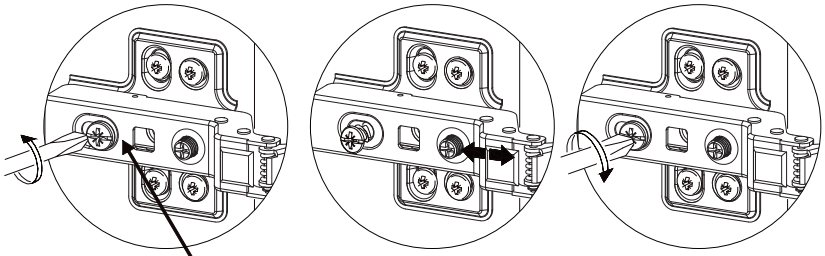

Lateral Door Adjustment:
If door is hinge bound, (rubbing on frame as you close or open door) loosening screw shown and move the door in approriate direction. (In or out)

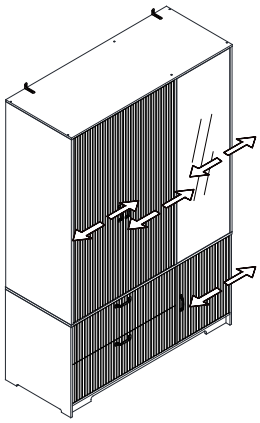

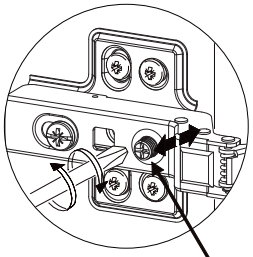

Horizontal Door Adjustment:
Rotate Screw clockwise or anticlockwise.
This will produce an even gap between doors and frame.