Instruction Sheet

Step 4– Assembly of Wood Slats and Drawer Handle.

- Carefully place assembled drawer into footboard panel (2). SEE FIGURE 7
- Align pilot holes on drawer front panel (8) with threaded inserts on drawer handle (20). SEE FIGURE 8
- Secure drawer handle (20) with screws (19). Use phillips screwdriver to tighten.
- Place wood slats (9) between side rails (10 & 11). SEE FIGURE 7
- Secure wood slats (9) with screws (18). Use phillips screwdriver to tighten. SEE FIGURE 9

FIGURE 7

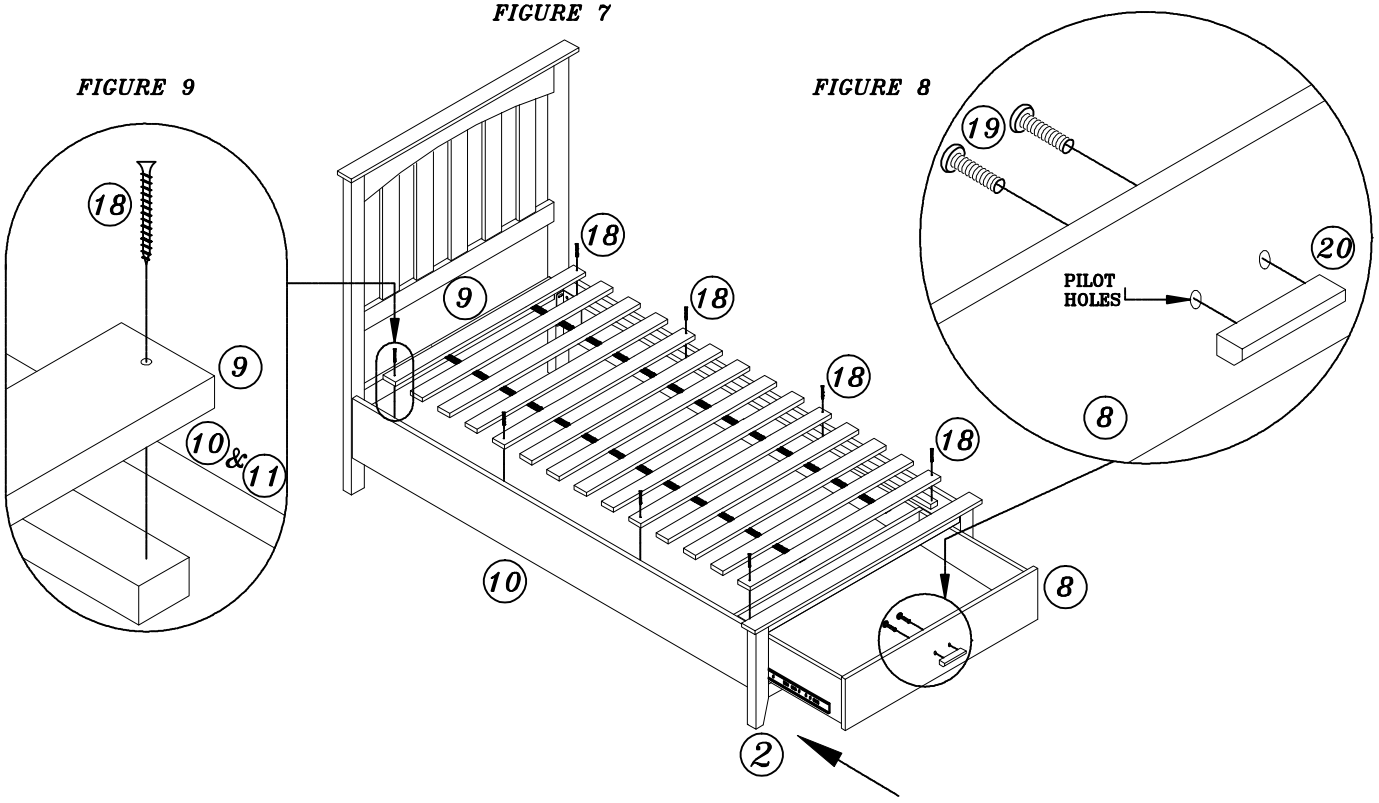

FIGURE 9

FIGURE 8

PRODUCT FULLY ASSEMBLED

FOR ASSISTANCE IN ASSEMBLY ONLY OF THIS PRODUCT. CALL OUR HELP DESK –

PLEASE

HAVE THE STYLE NUMBER AVAILABLE BEFORE YOU CALL. (STYLE # OR NAME CAN BE FOUND ON PACKING CARTON OR SALES RECEIPT.)
OUR PRODUCT IS INSPECTED TO ENSURE IT IS IN GOOD CONDITION. IF YOUR FURNITURE APPEARS TO HAVE BEEN DAMAGED IN SHIPMENT OR YOU ARE IN NEED OF REPLACEMENT PARTS PLEASE CONTACT THE DEALER FROM WHOM YOU PURCHASED THE PRODUCT.