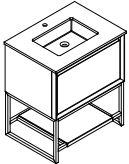







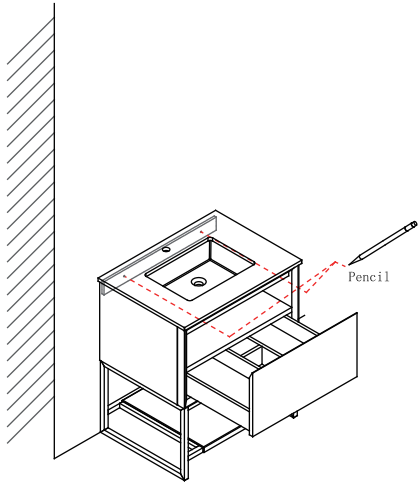
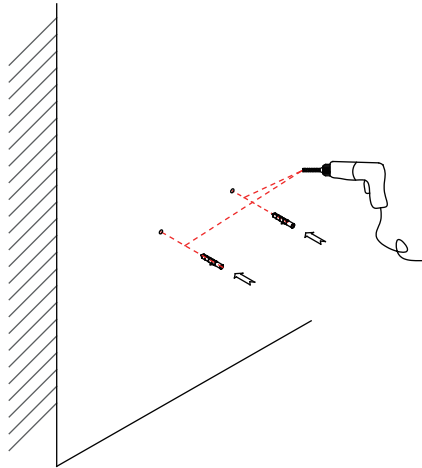
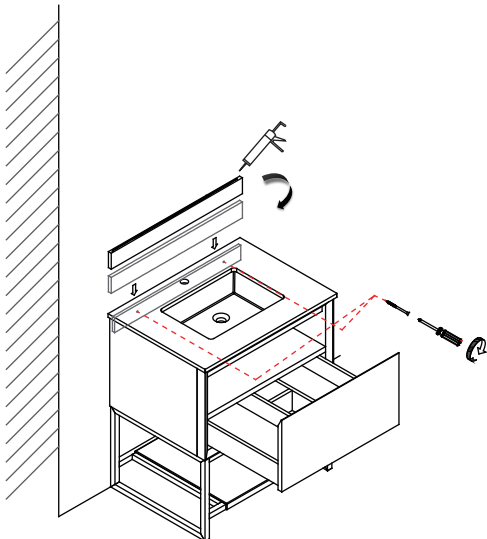
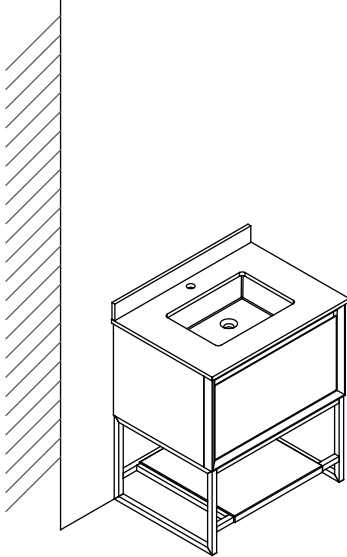



30"

Installation Instructions

Notes: We recommend that you rough-in the drain and water lines after receiving the unit.
 The vanity should be installed by a professional plumber.
 Drainer pipe and trap are not included.
 If you experience any difficulties with this product, do not return to the point of purchase. Please contact us and we will help resolve your issue.

Part List	A (cabinet)  x1	B (backsplash)  x1	C (Screw)  x2	D (Expansion plastic)  x2
Tools required	 screwdriver(phillips)	 silicone	 level	 tape measure
<h3>Step 1</h3> 				
<h3>Step 2</h3> 				
<h3>Step 3</h3> 				
<h3>Step 4</h3>  <div data-bbox="1326 2000 1457 2089">  24h </div>				