



Assembly Instruction

WF314706 / WF314707
WF314700 / WF314701








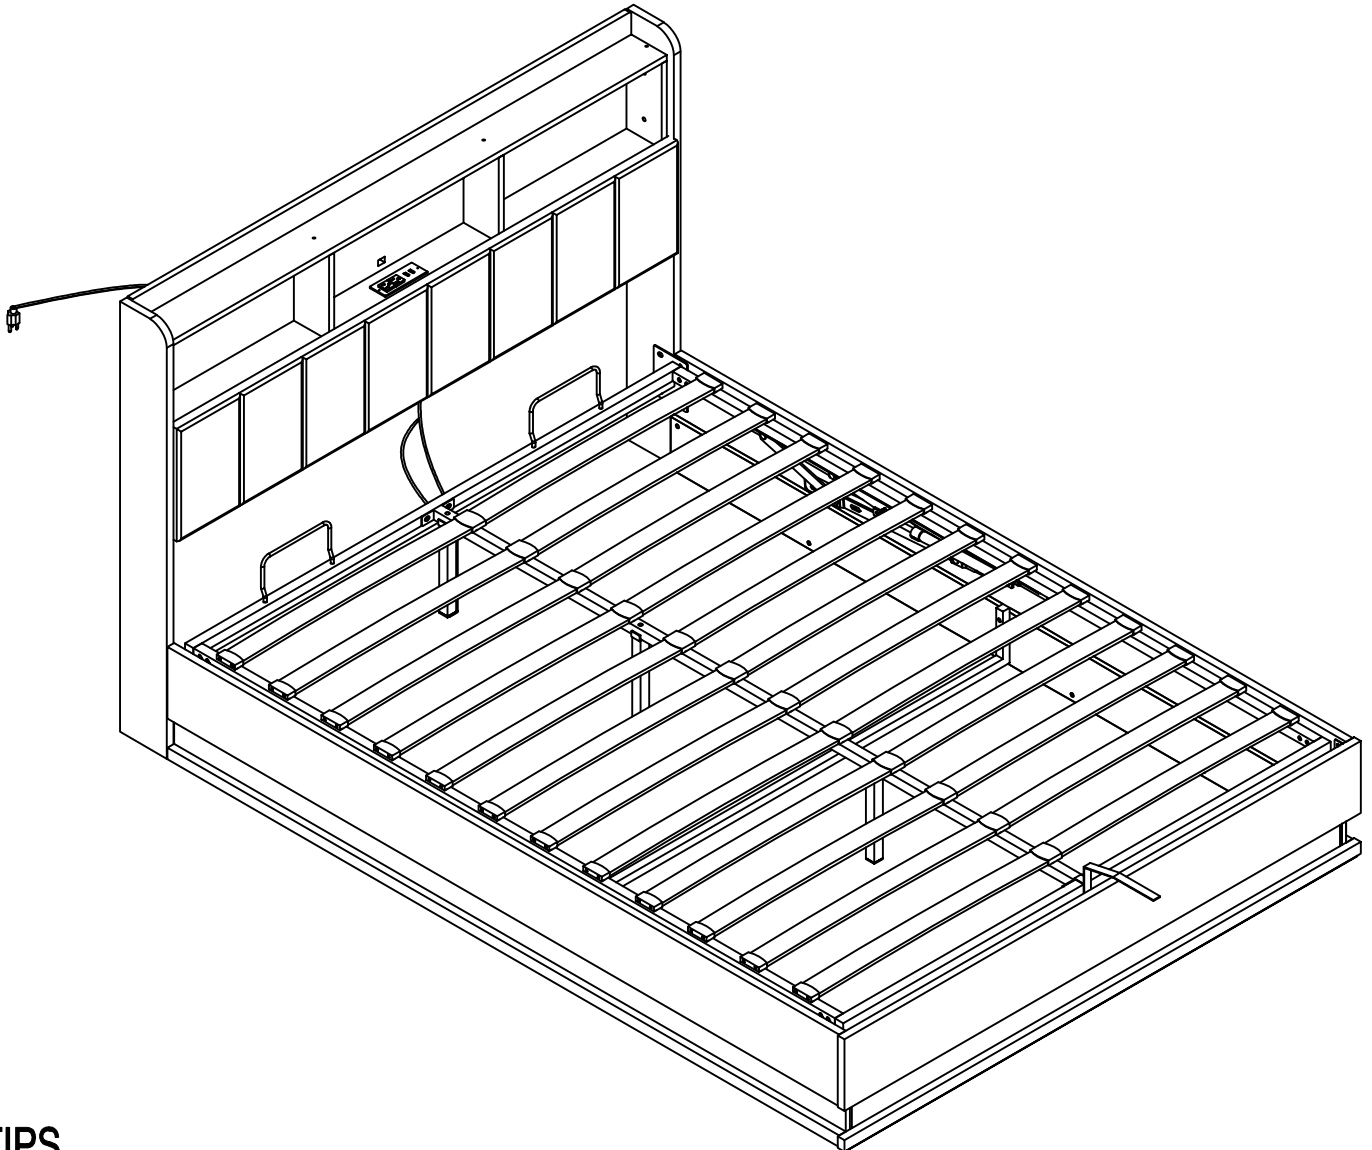


TIPS





















1. Please read the instructions fully before assembly. These instructions include important information which could ensure correct assembly. We have been working on providing high quality products for you. However, in the rare instance that your product is defective, missing parts or there are some issues, please don't hesitate to contact our customer service to submit parts requirements, assembly suggestion, or warranty claims, and we will give the best solution as soon as possible. If necessary, we need you to provide some more clear pictures of the issue.
2. Insert the screws in holes and tighten the screws, but not too tight, 70%~80% is ok, finally tighten all the screws. If some issues happened that some screws cannot target to the hole or some parts are difficult to install, please adjust the tightness of the screws.
3. 2 people are recommended to finish

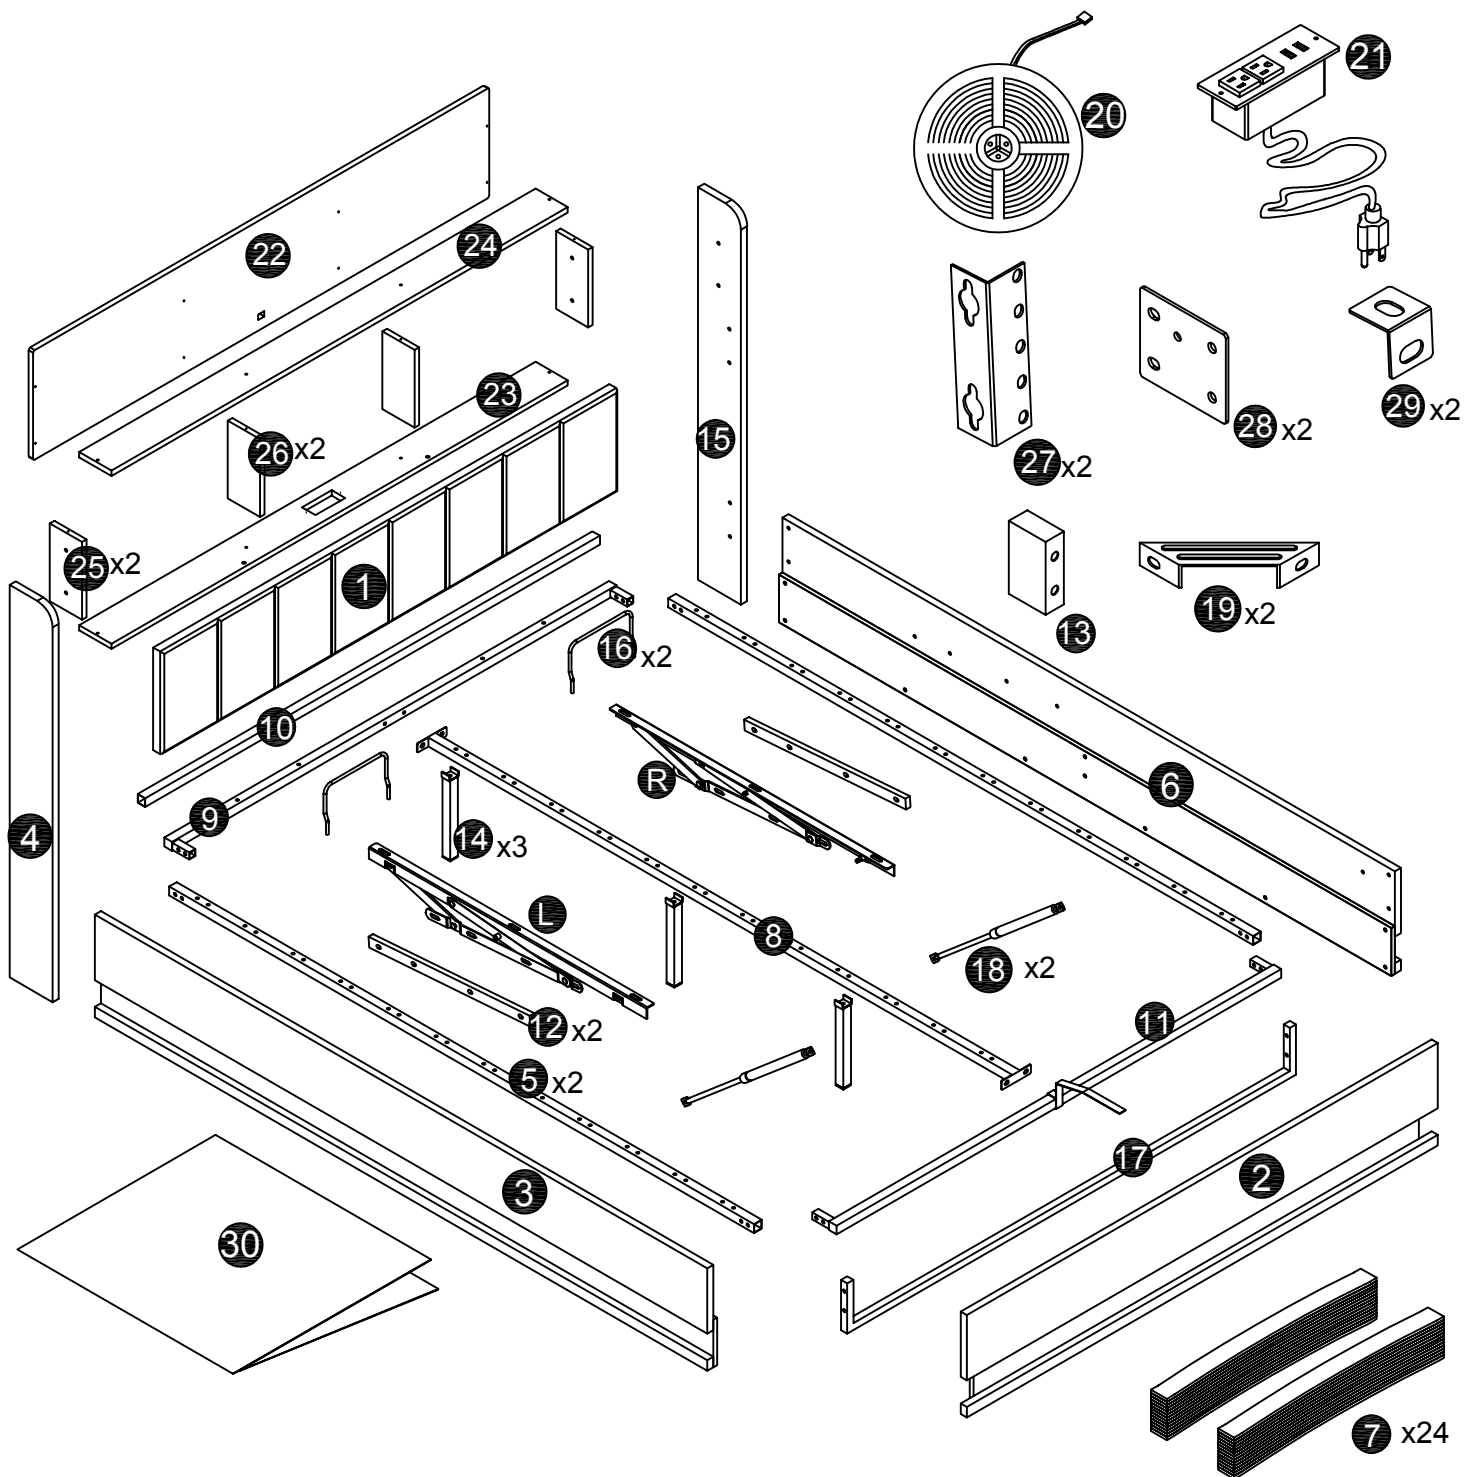








Part List WF314706AAB / AAK
WF314700AAB / AAK

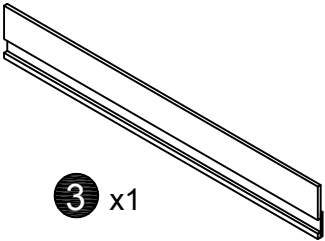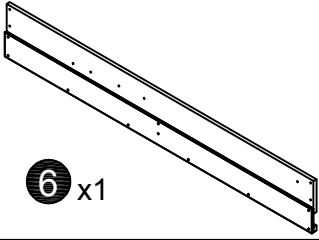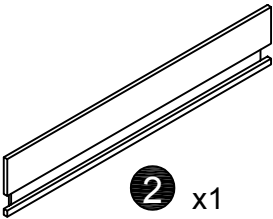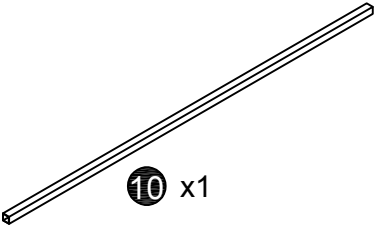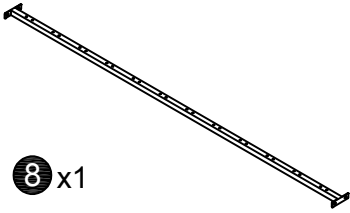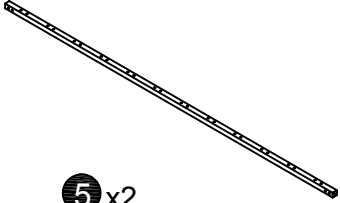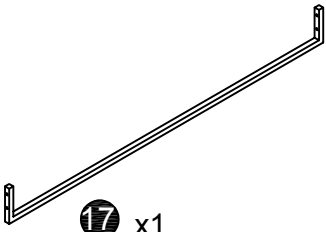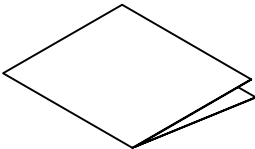
 3 x1	 6 x1	 2 x1	 10 x1
 8 x1	 5 x2	 17 x1	 30 x1

Part List WF314707AAB / AAK WF314701AAB / AAK

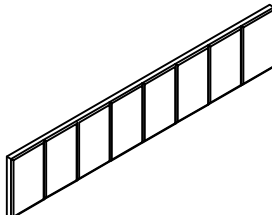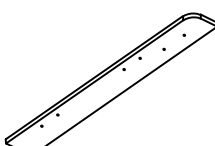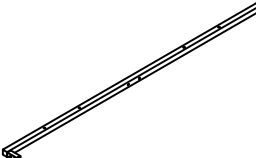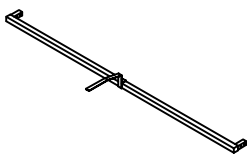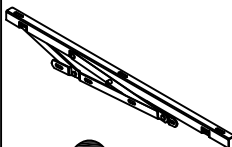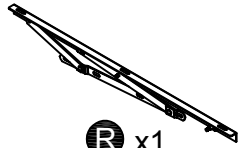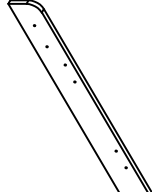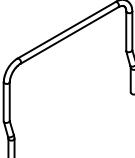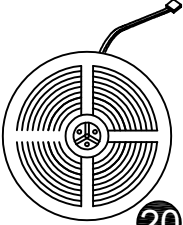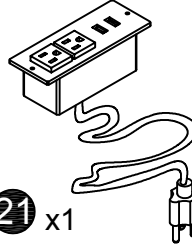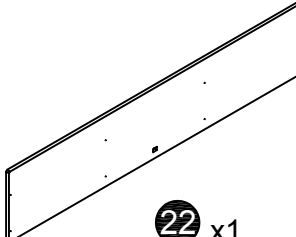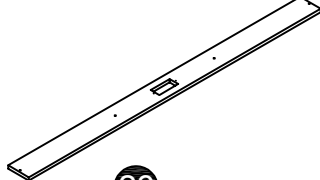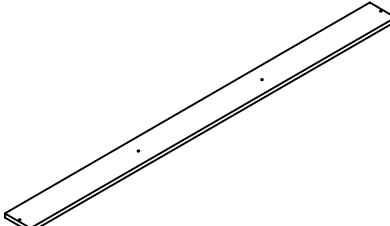
 1 x1	 4 x1	 7 x24	 9 x1	 11 x1	 12 x2
 13 x1	 L x1	 R x1	 14 x3	 15 x1	 16 x2
 18 x2	 19 x2	 20 x1	 21 x1	 22 x1	 23 x1
 24 x1	 25 x2	 26 x2	 27 x2	 28 x2	 29 x2

Hardware List WF314707AAB / AAK WF314701AAB / AAK

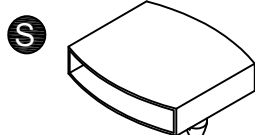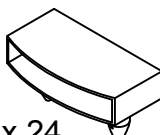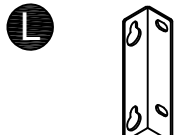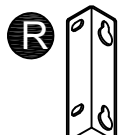 A 18mm M8 Bolt x 42	 B 30mm M6 Bolt x 6	 C 40mm M8 Bolt x 3	 D 32mm M8 Bolt x 12	 E 40mm Bolt x 16	 F Flat washer x 4
 G 65mm M6 Bolt x 2	 H 15mm M6 Bolt x 4	 I 20mm M6 Bolt x 4	 J x 1 M8	 K x 1 M6	 P x 2
 U x 1	 M  Unplug the battery separator of the remote control before use			 N x 1	 O x 4
 Q NUT M8 x 4	 S x 12	 T x 24	 L x 1	 R x 1	

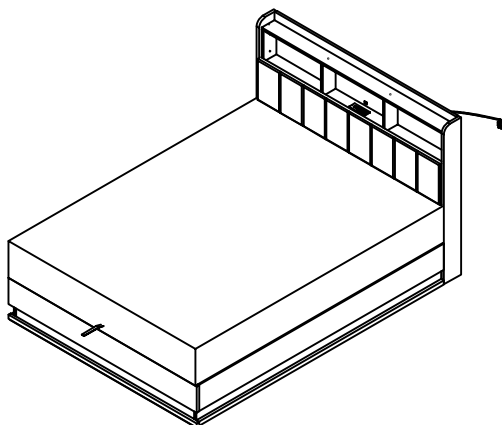

This product is not suitable for mattress recessed type.

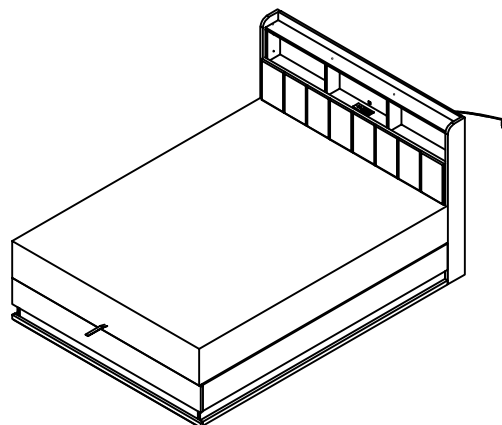

This product is suitable for placing mattresses on the top.

IMPORTANT NOTICE OTTOMAN OPERATING INSTRUCTIONS

Once your bed frame is completely assembled, the slat unit will not operate correctly unless a mattress is placed on the slat frame. Position the mattress on the slat frame whilst it is in the closed position.

PLEASE NOTE - It takes a lot of force to make the initial movement of the ottoman. This is a design feature of the product so that it does not fall shut-the nearer to being closed the ottoman is, the easier it is to move. When the ottoman is almost shut, it will close completely under its own weight.



When lowering the slat unit for the first time, take care to make sure it does not rub unevenly on the inside face of the side rails. If it does, the bed has been assembled slightly out of square. This can be rectified by moving the foot end of the bed slightly to the left or right whilst leaving the headend stationary.

PISTONS

The pistons used in the construction of this product are extremely strong and cannot be operated by hand when taken off the ottoman. All pistons are tested for correct pressure and operation before being attached to the slat unit. Initially it might appear that the pistons are very stiff when opening and closing the ottoman.

THIS IS PERFECTLY NORMAL





When fully assembled and the mattress is in position, please raise and lower the ottoman 4/5 times to ensure the gas piston are fully lubricated.

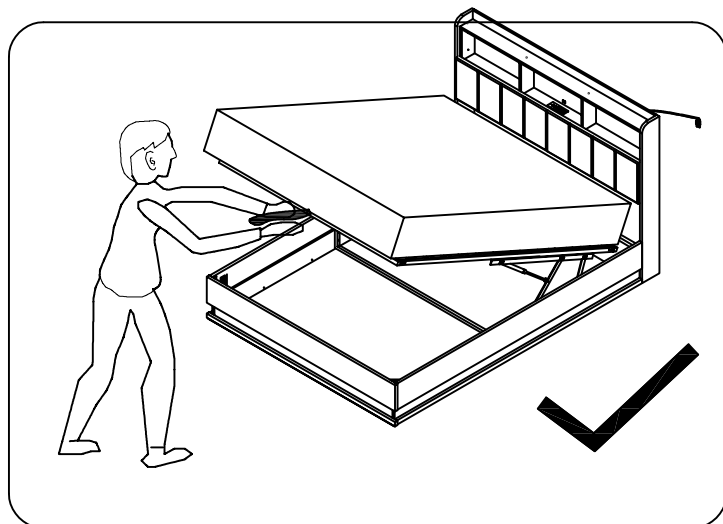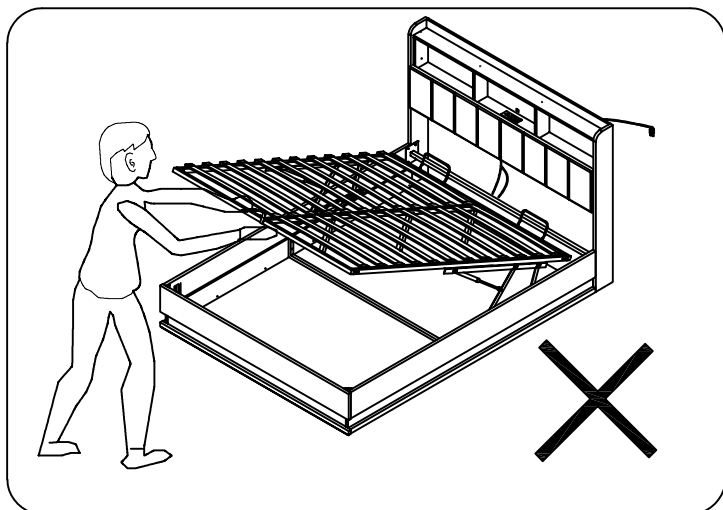


E



40mm Bolt x 16

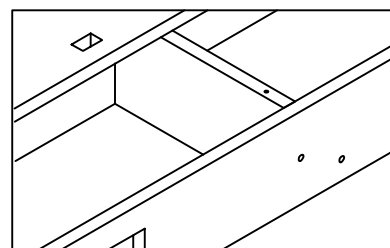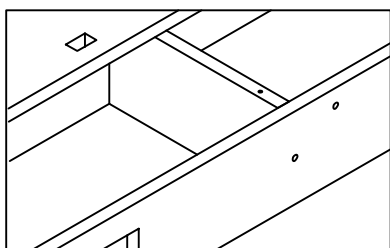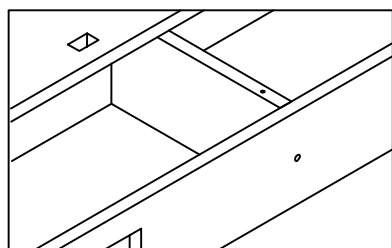
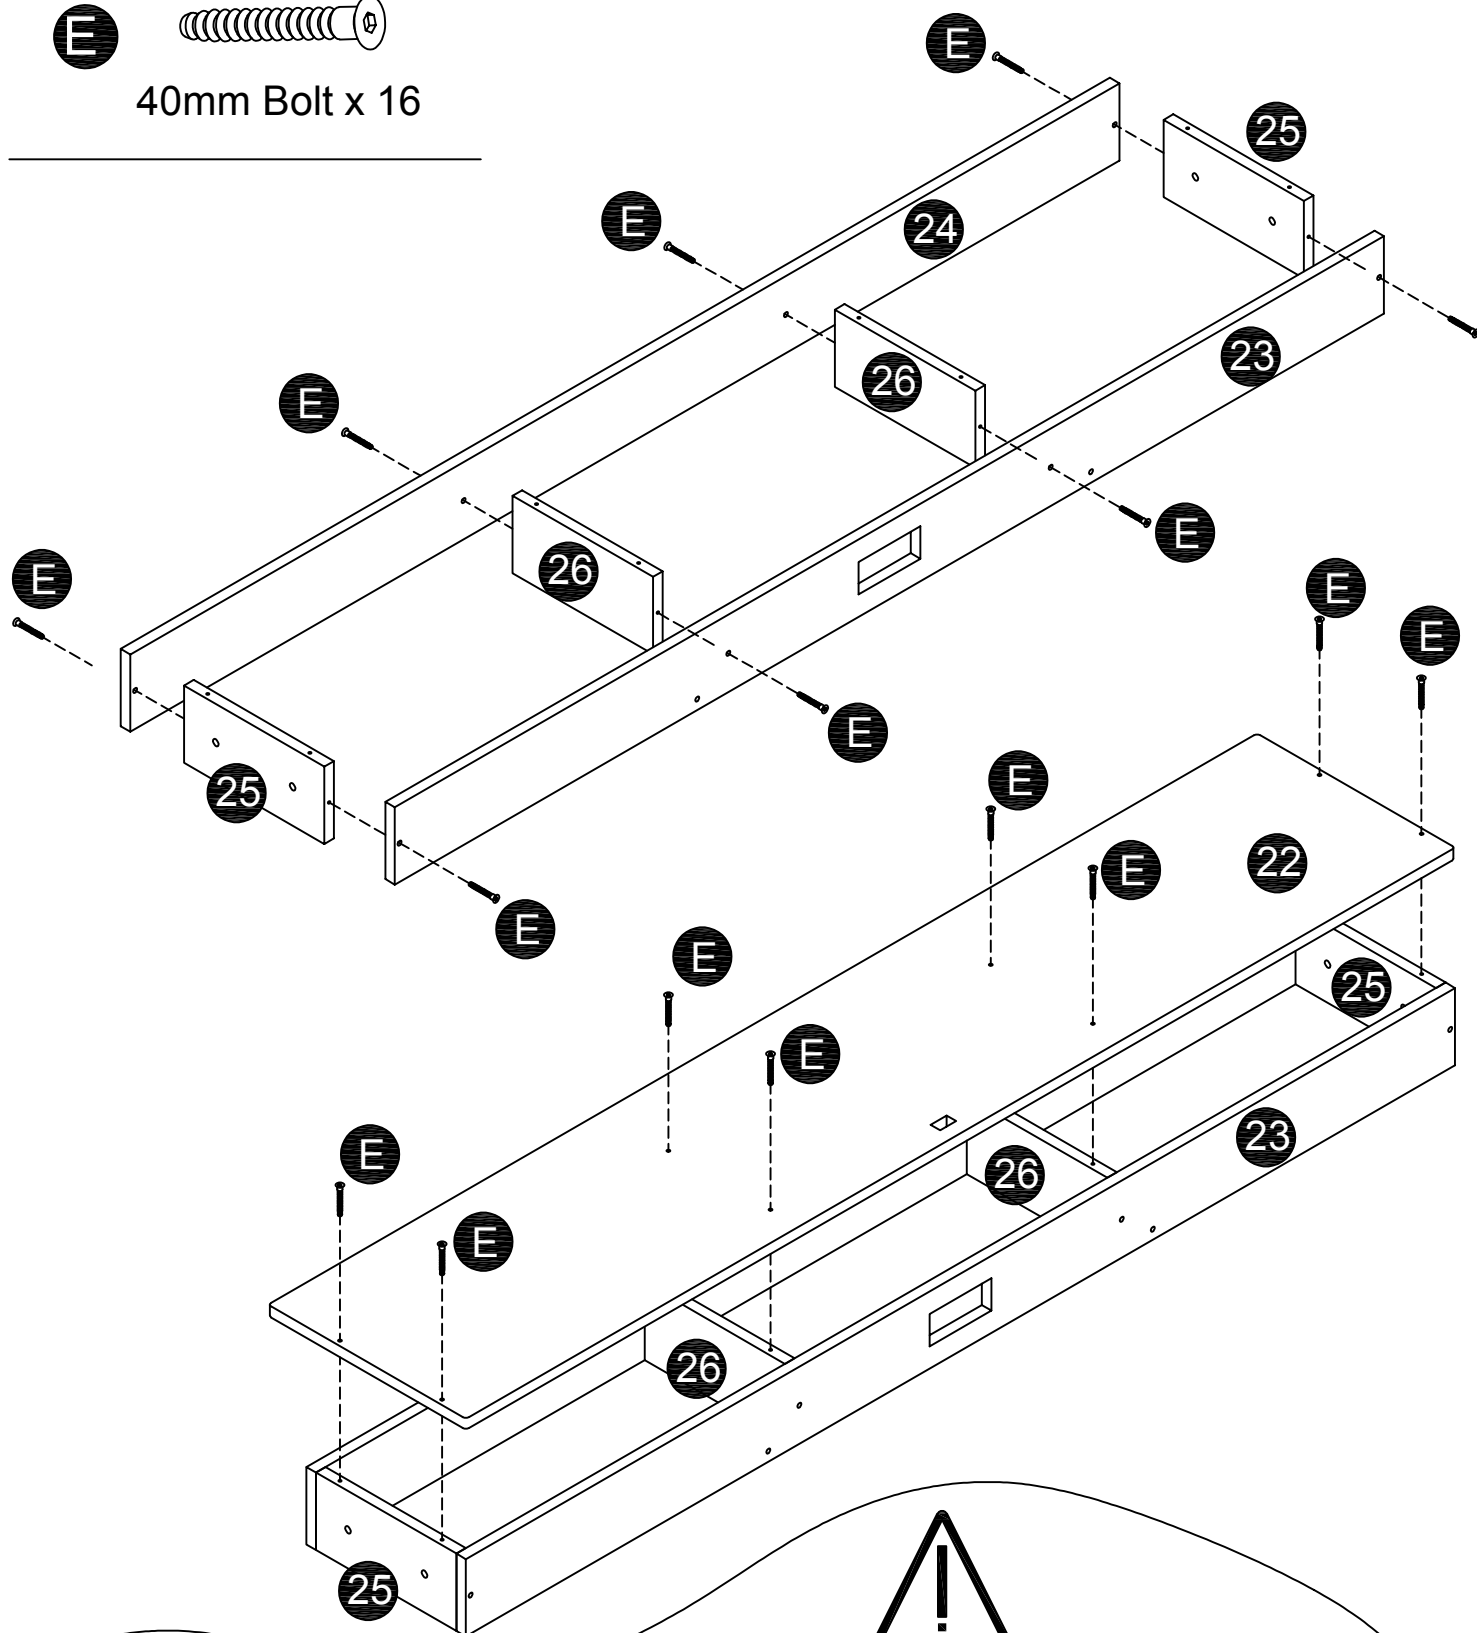







32mm M8 Bolt x 4




Flat washer x 4

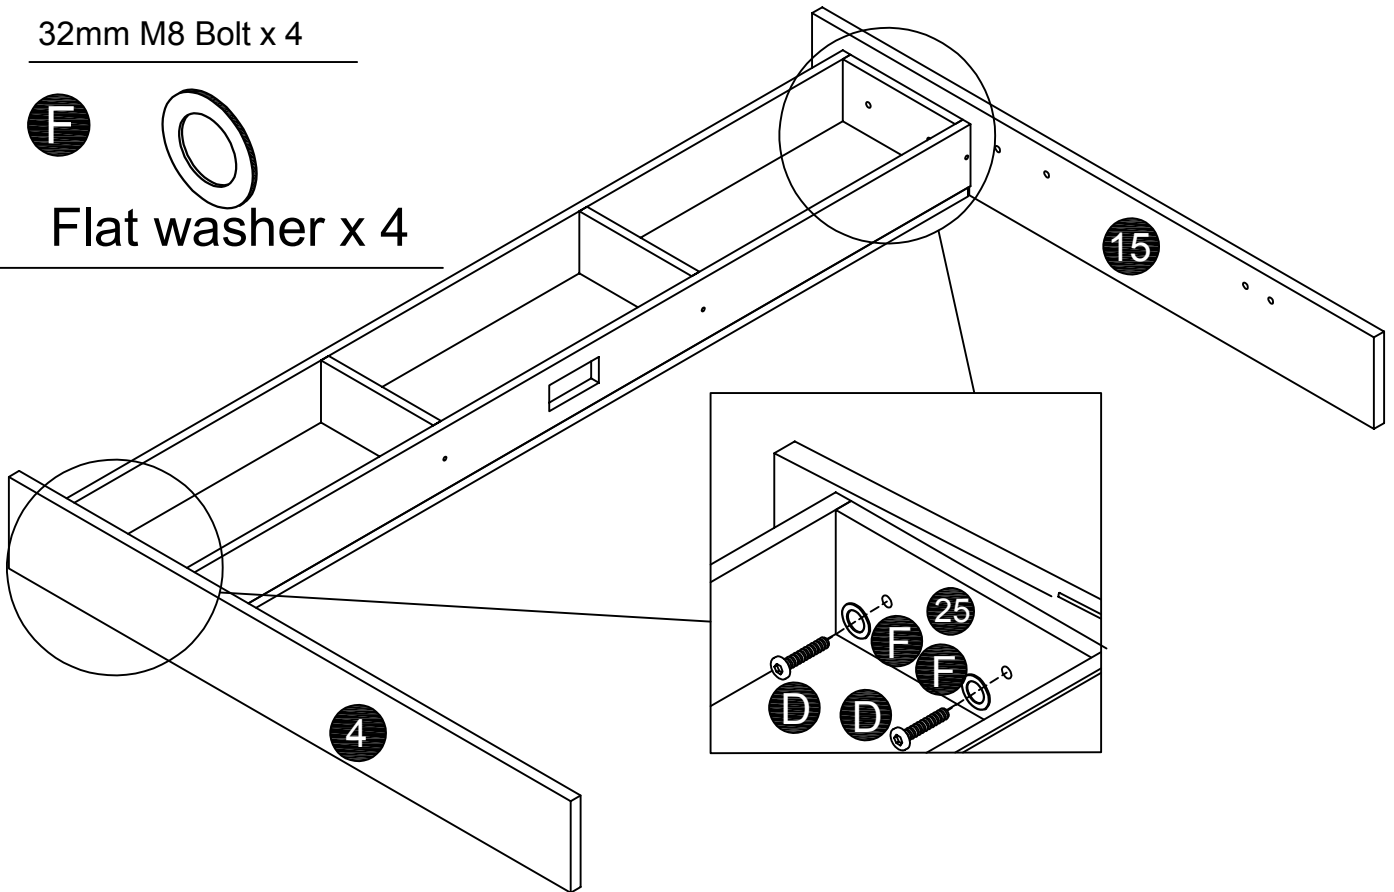


18mm M8 Bolt x 4

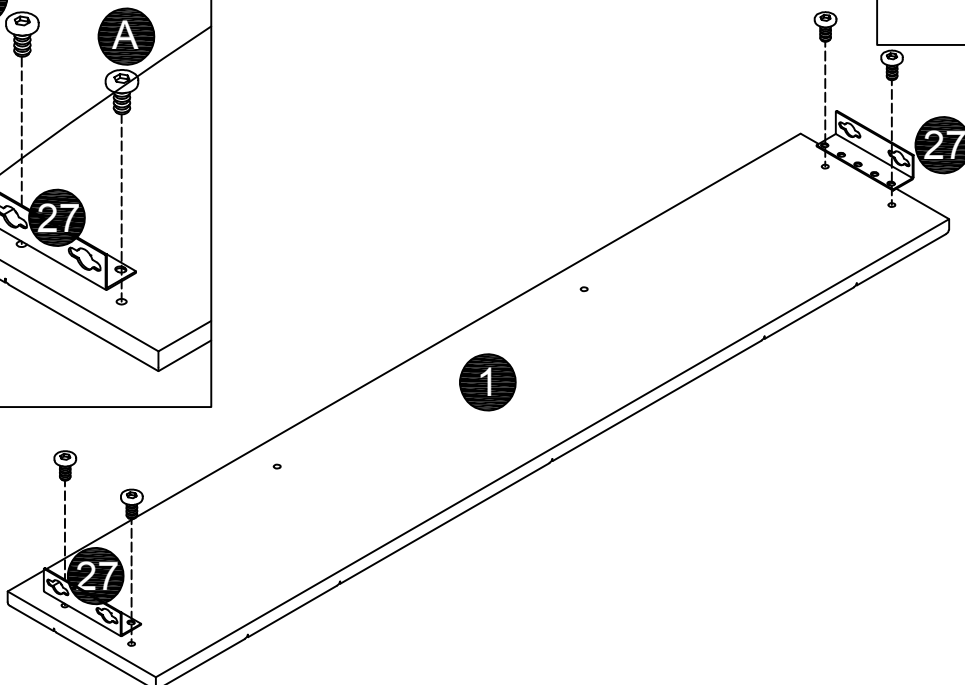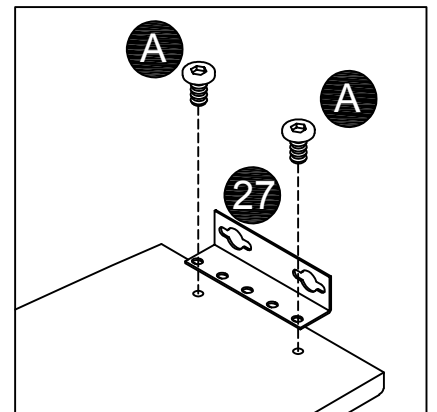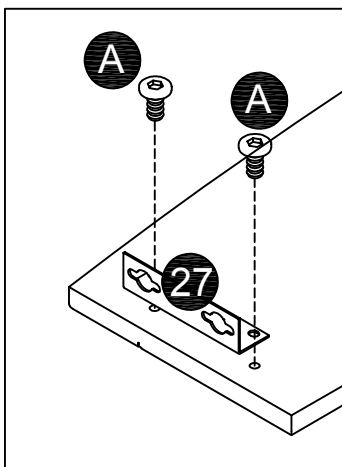





18mm M8 Bolt x 4

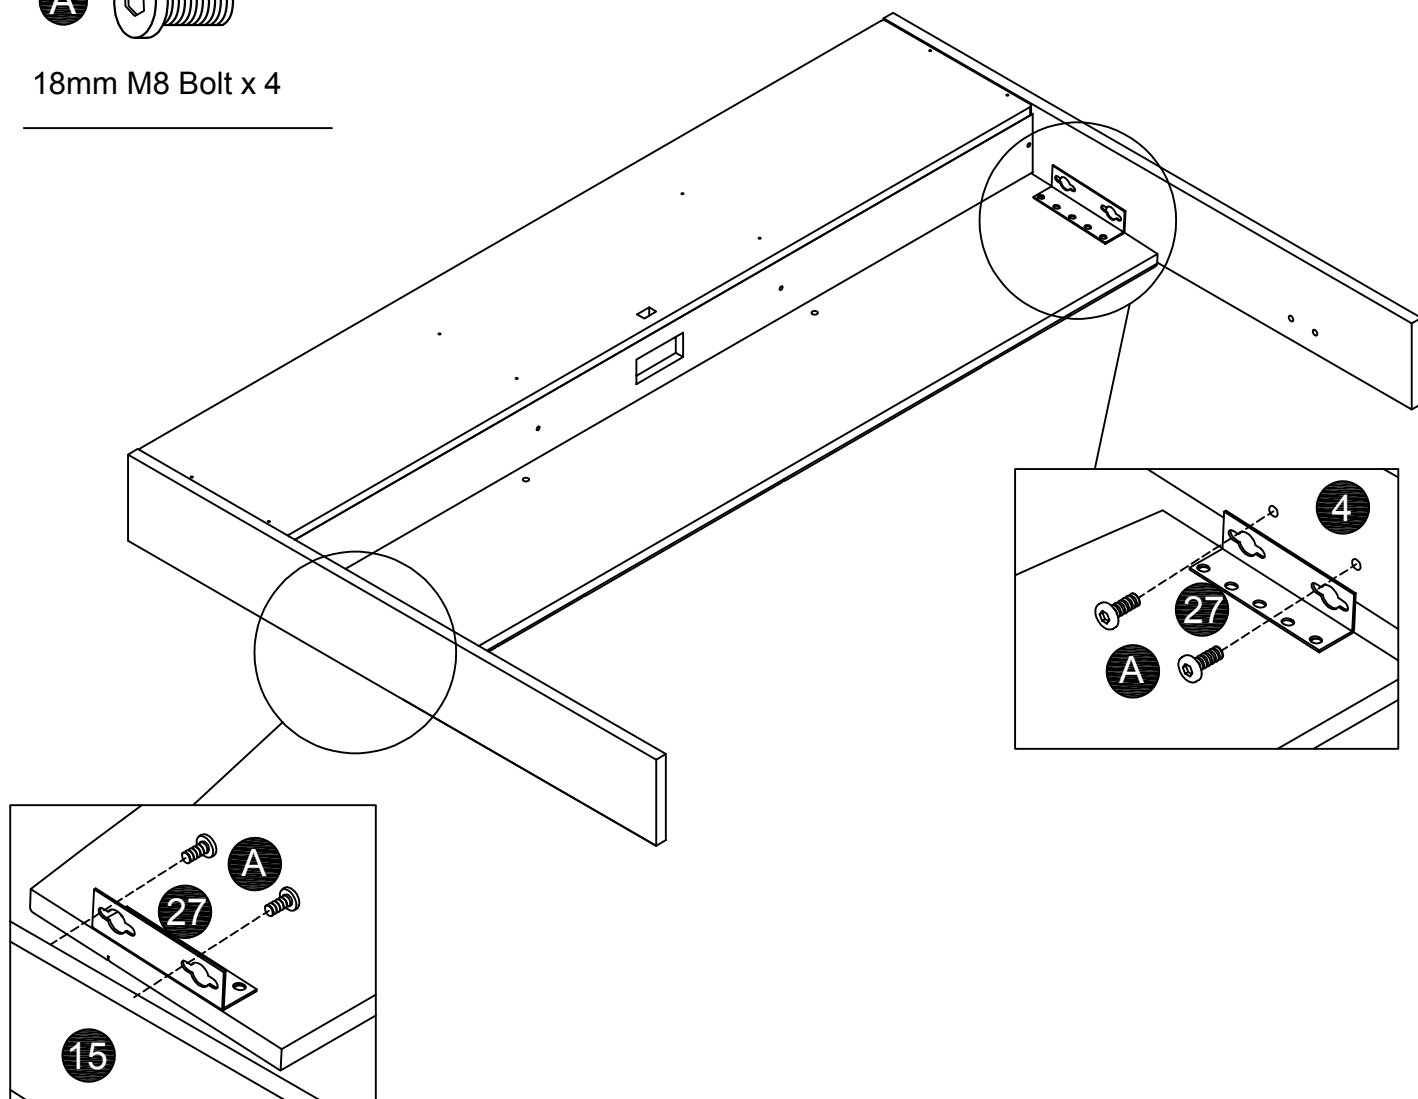

15mm M6 Bolt x 4

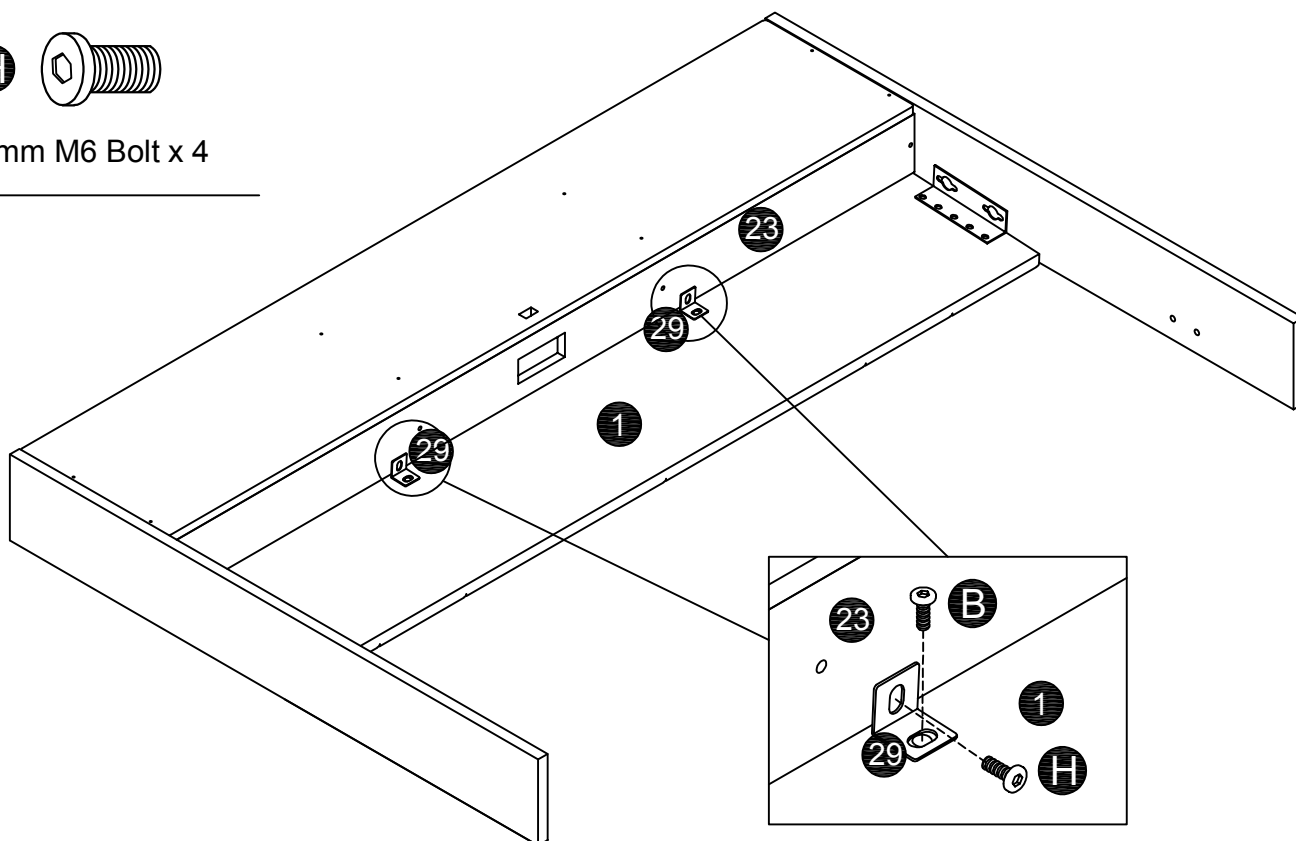



A




18mm M8 Bolt x 6

Installation position diagram

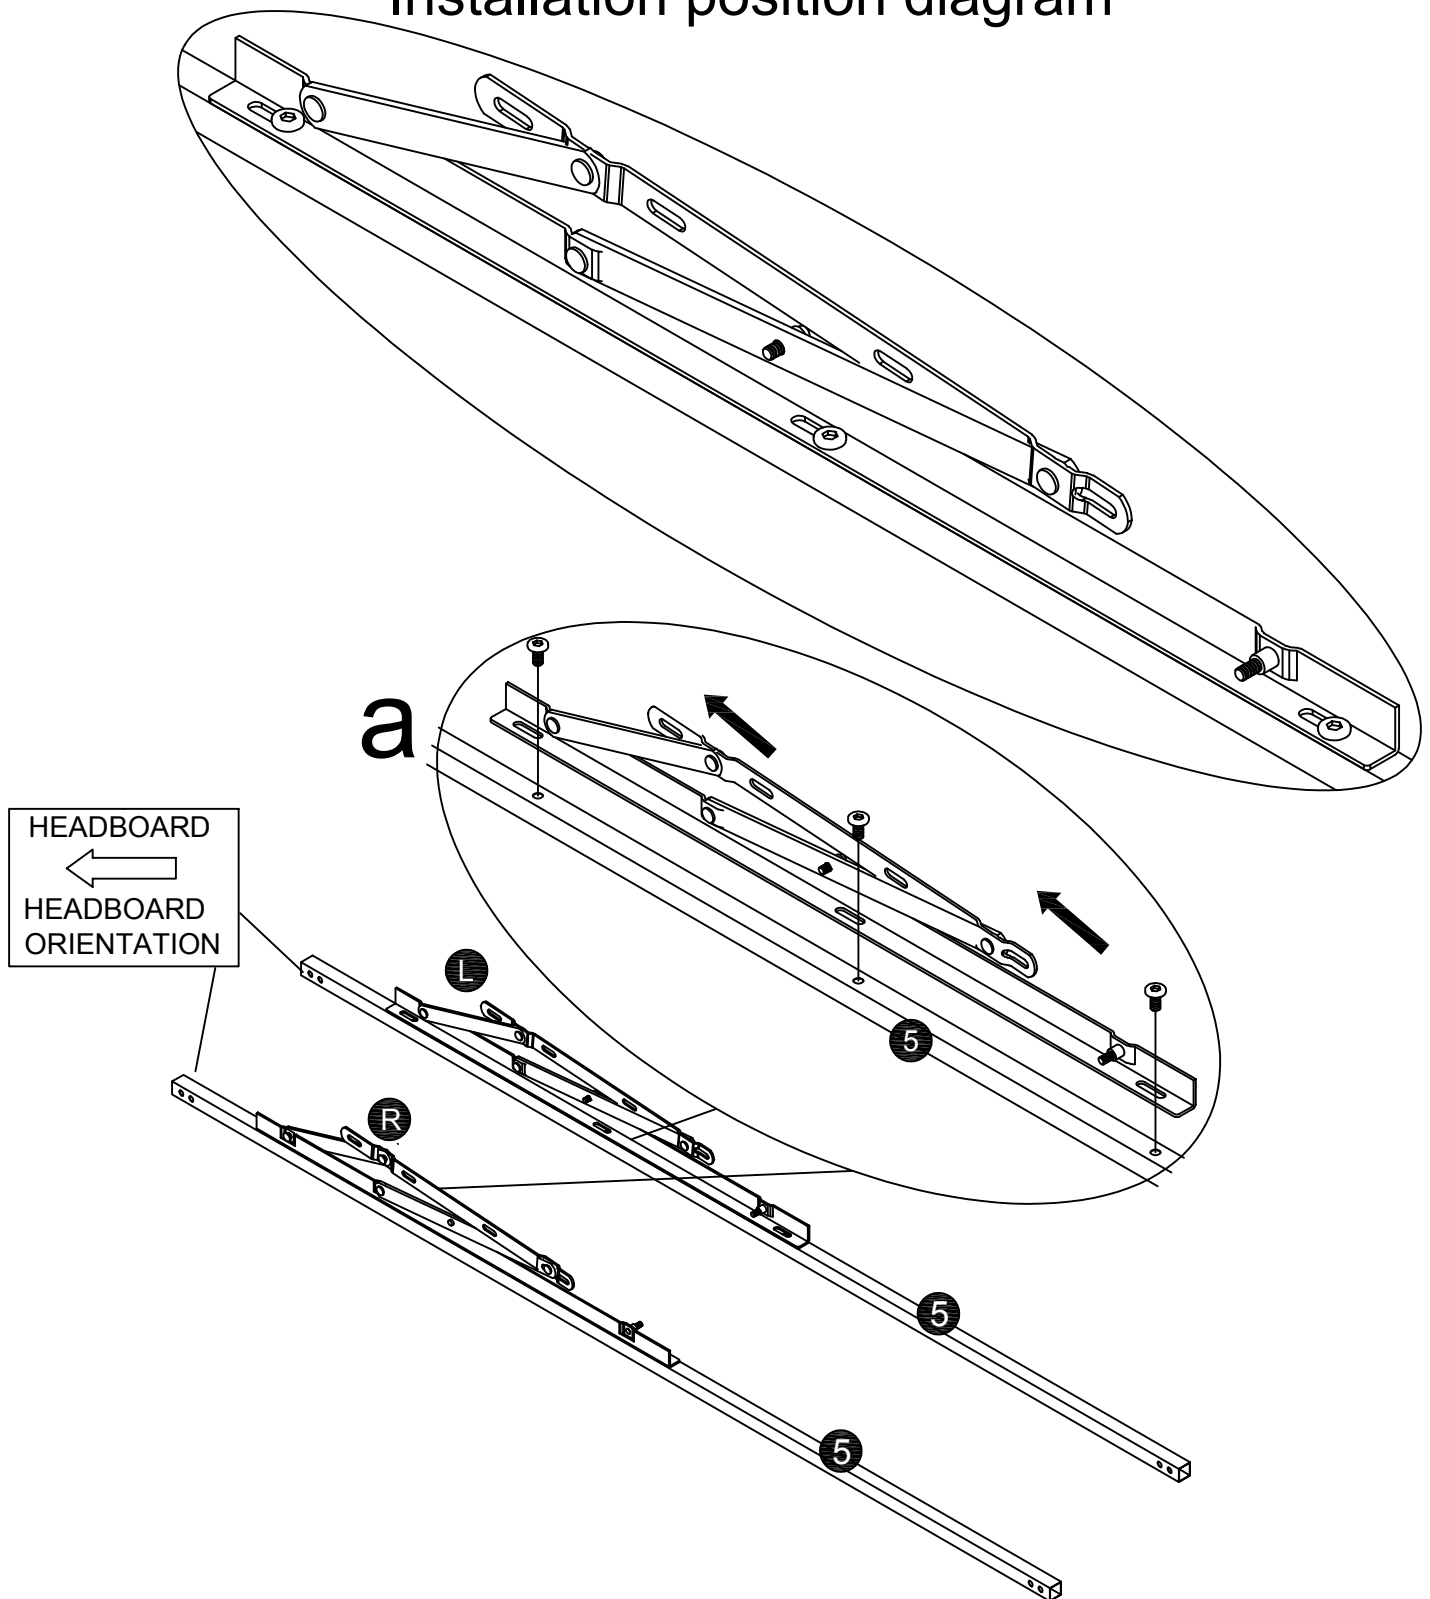




40mm M8 Bolt x 3

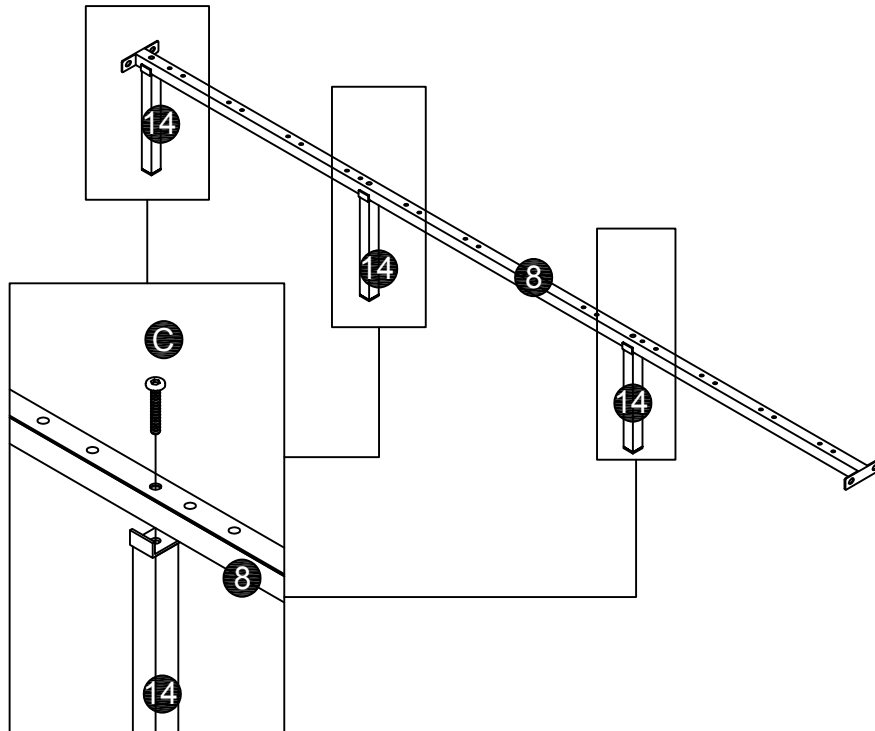


18mm M8 Bolt x 8

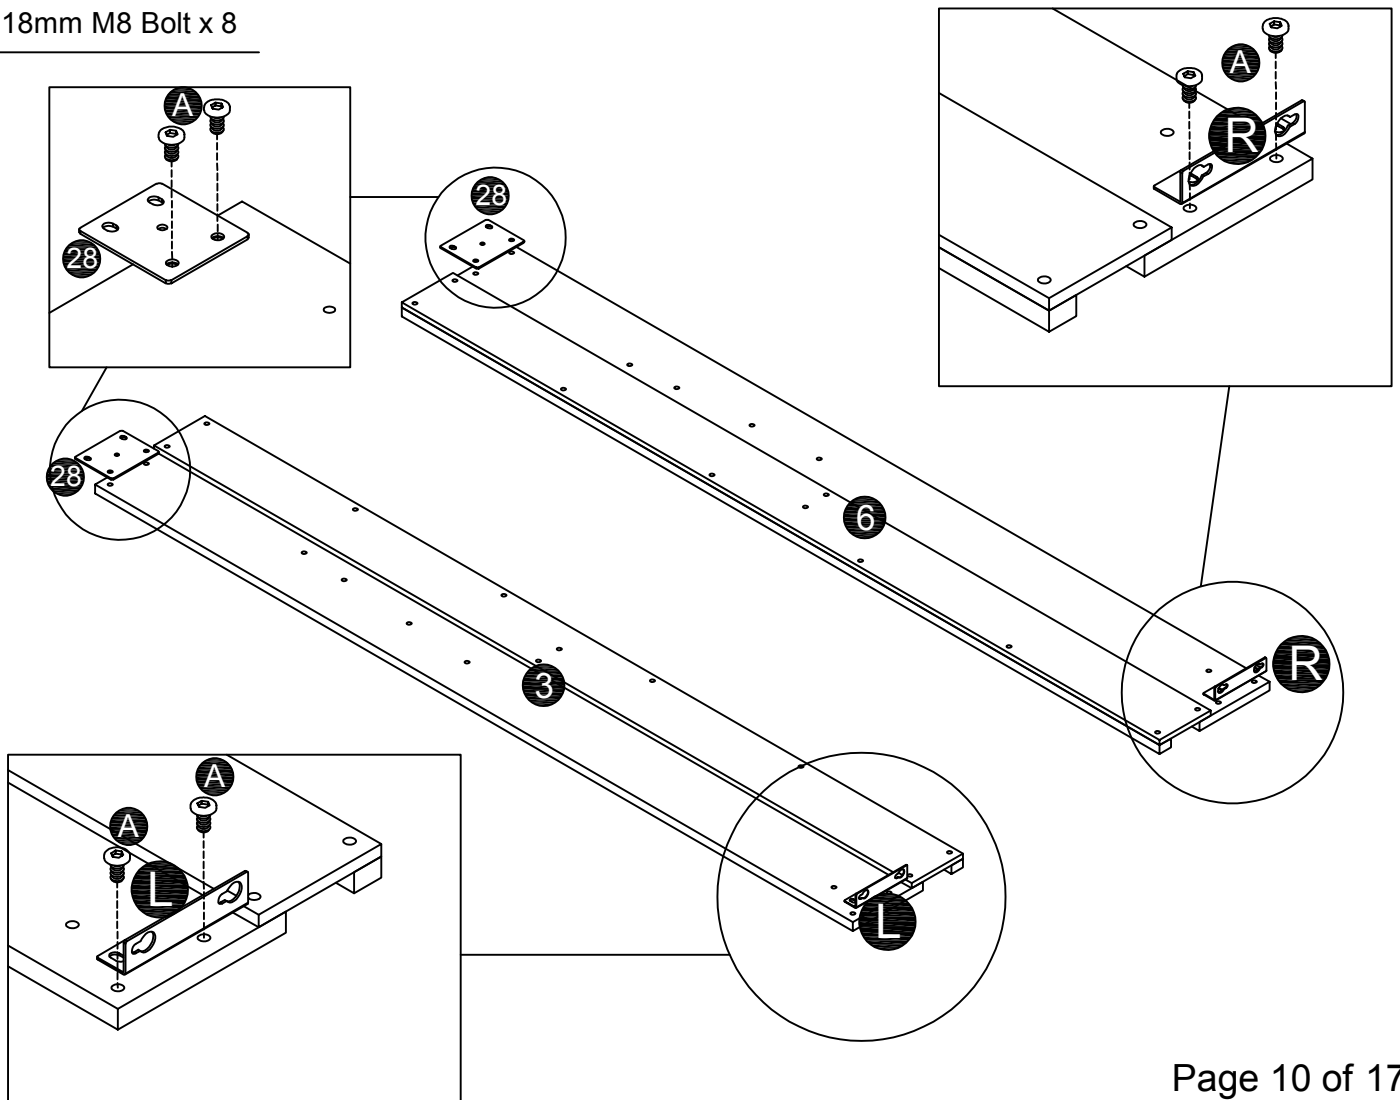





32mm M8 Bolt x 8

Installation position diagram

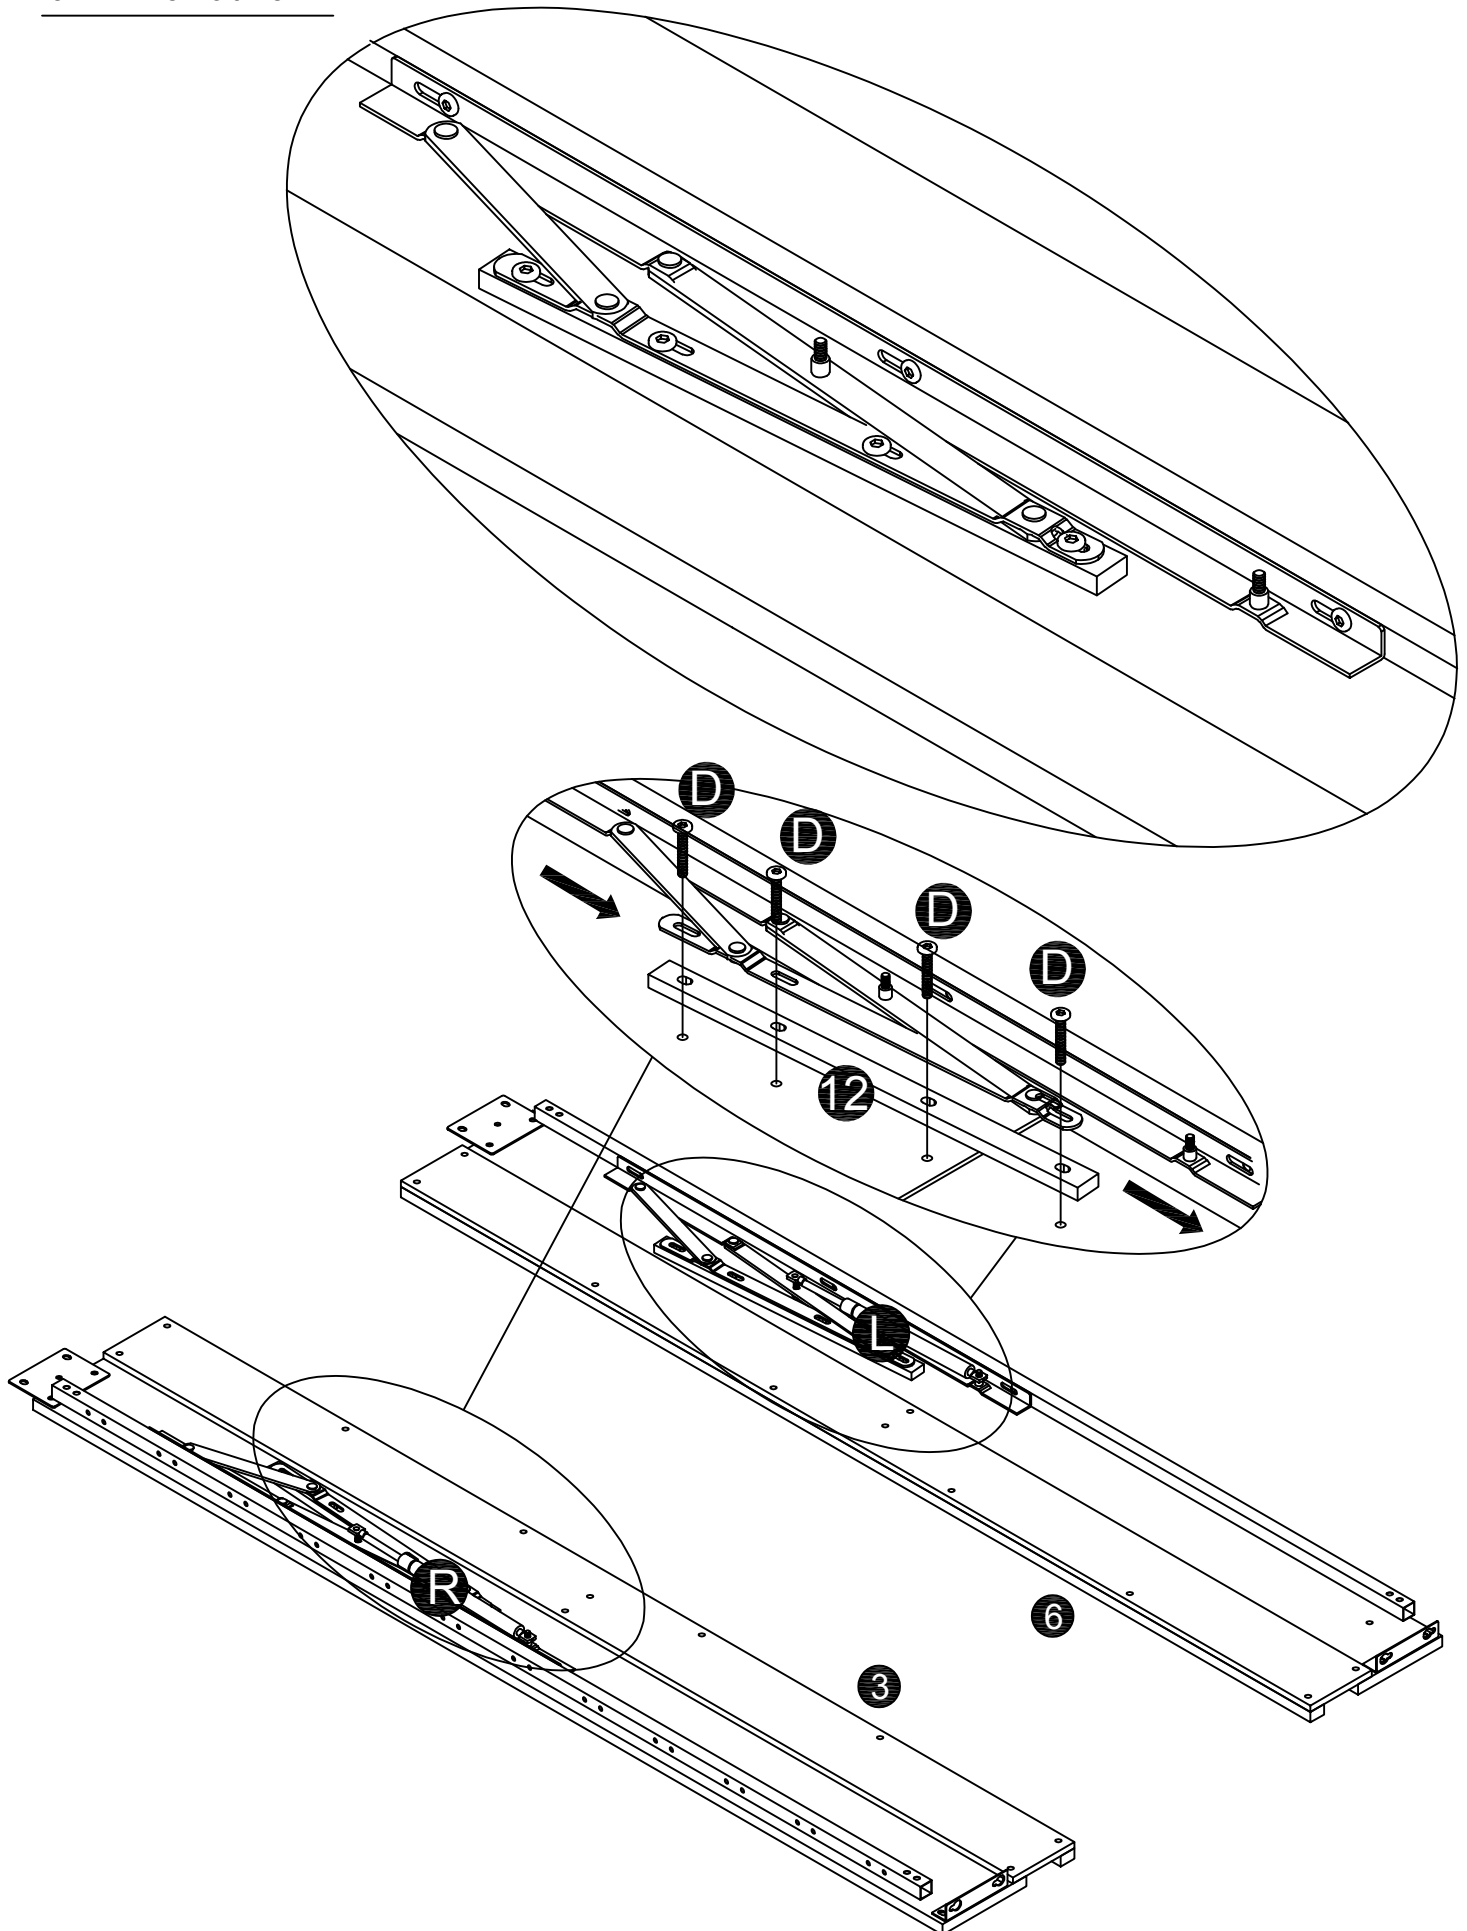




18mm M8 Bolt x 4




30mm M6 Bolt x 2

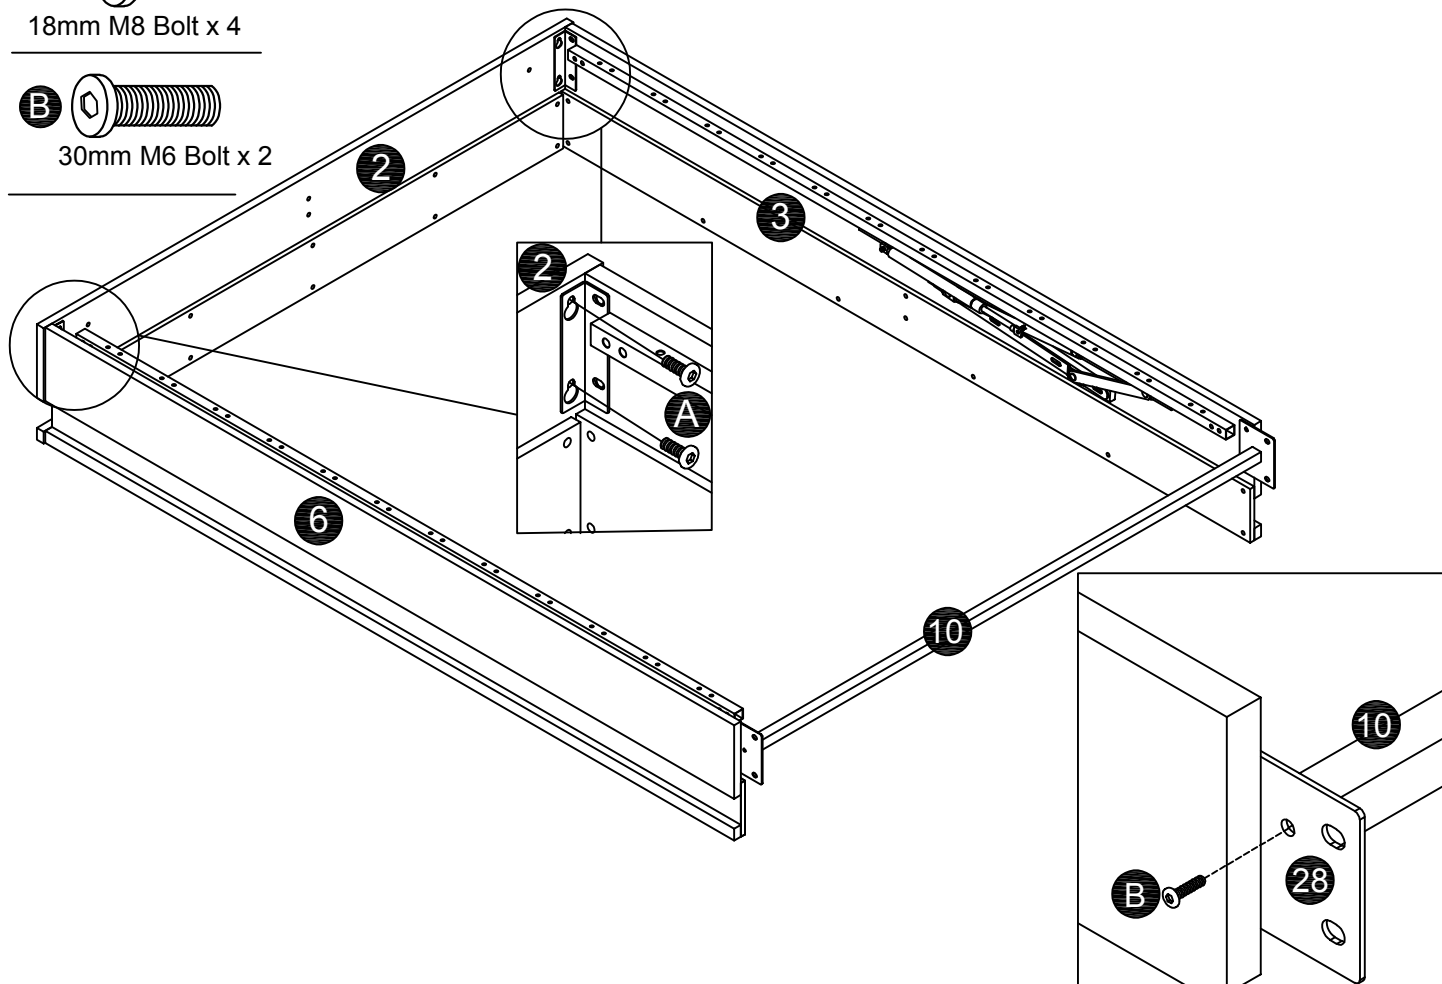


65mm M6 Bolt x 2




20mm M6 Bolt x 4


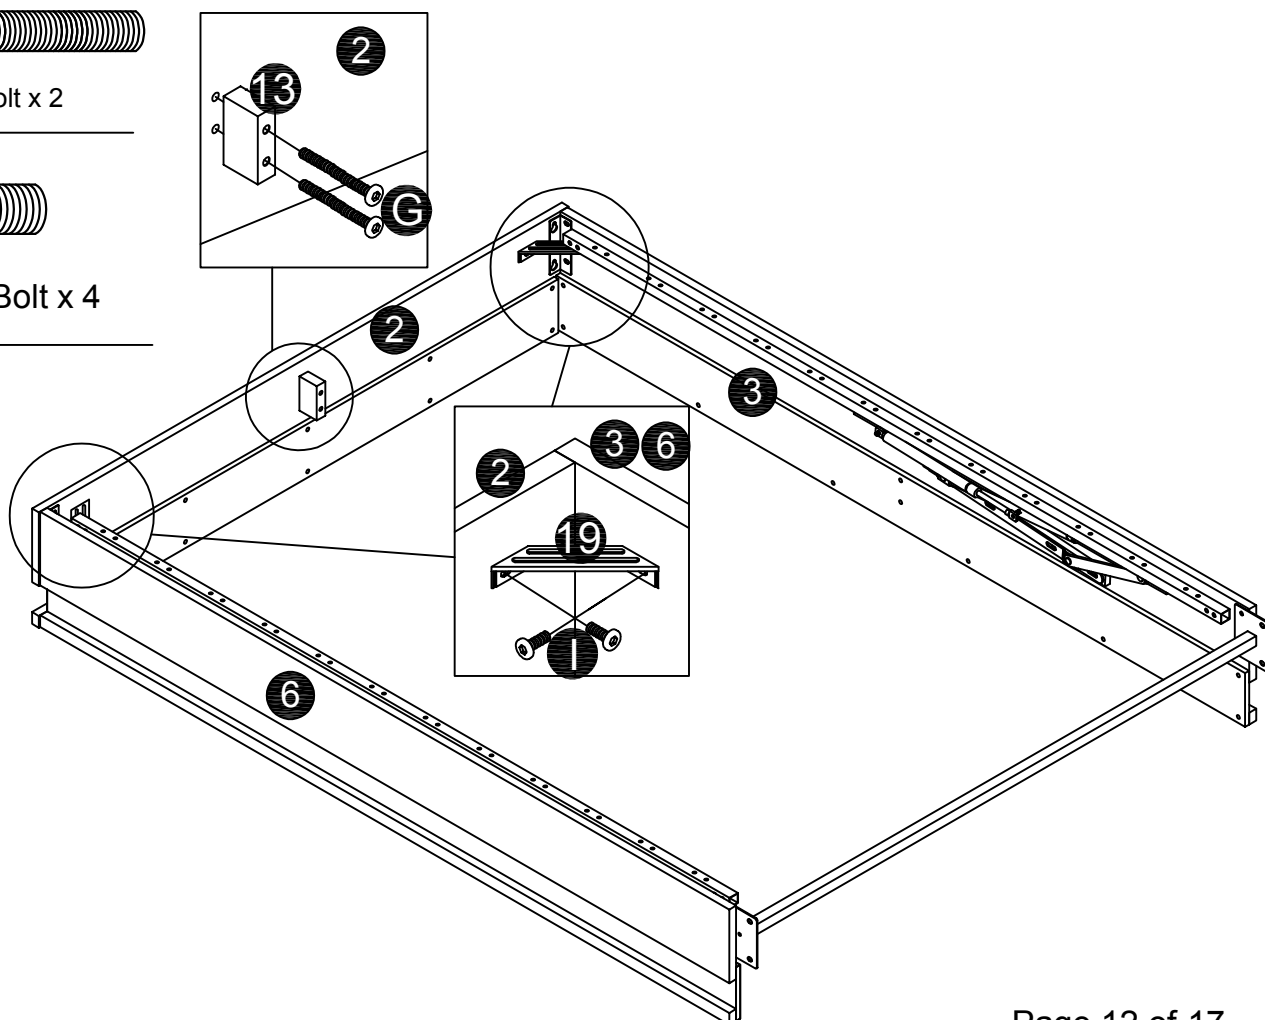


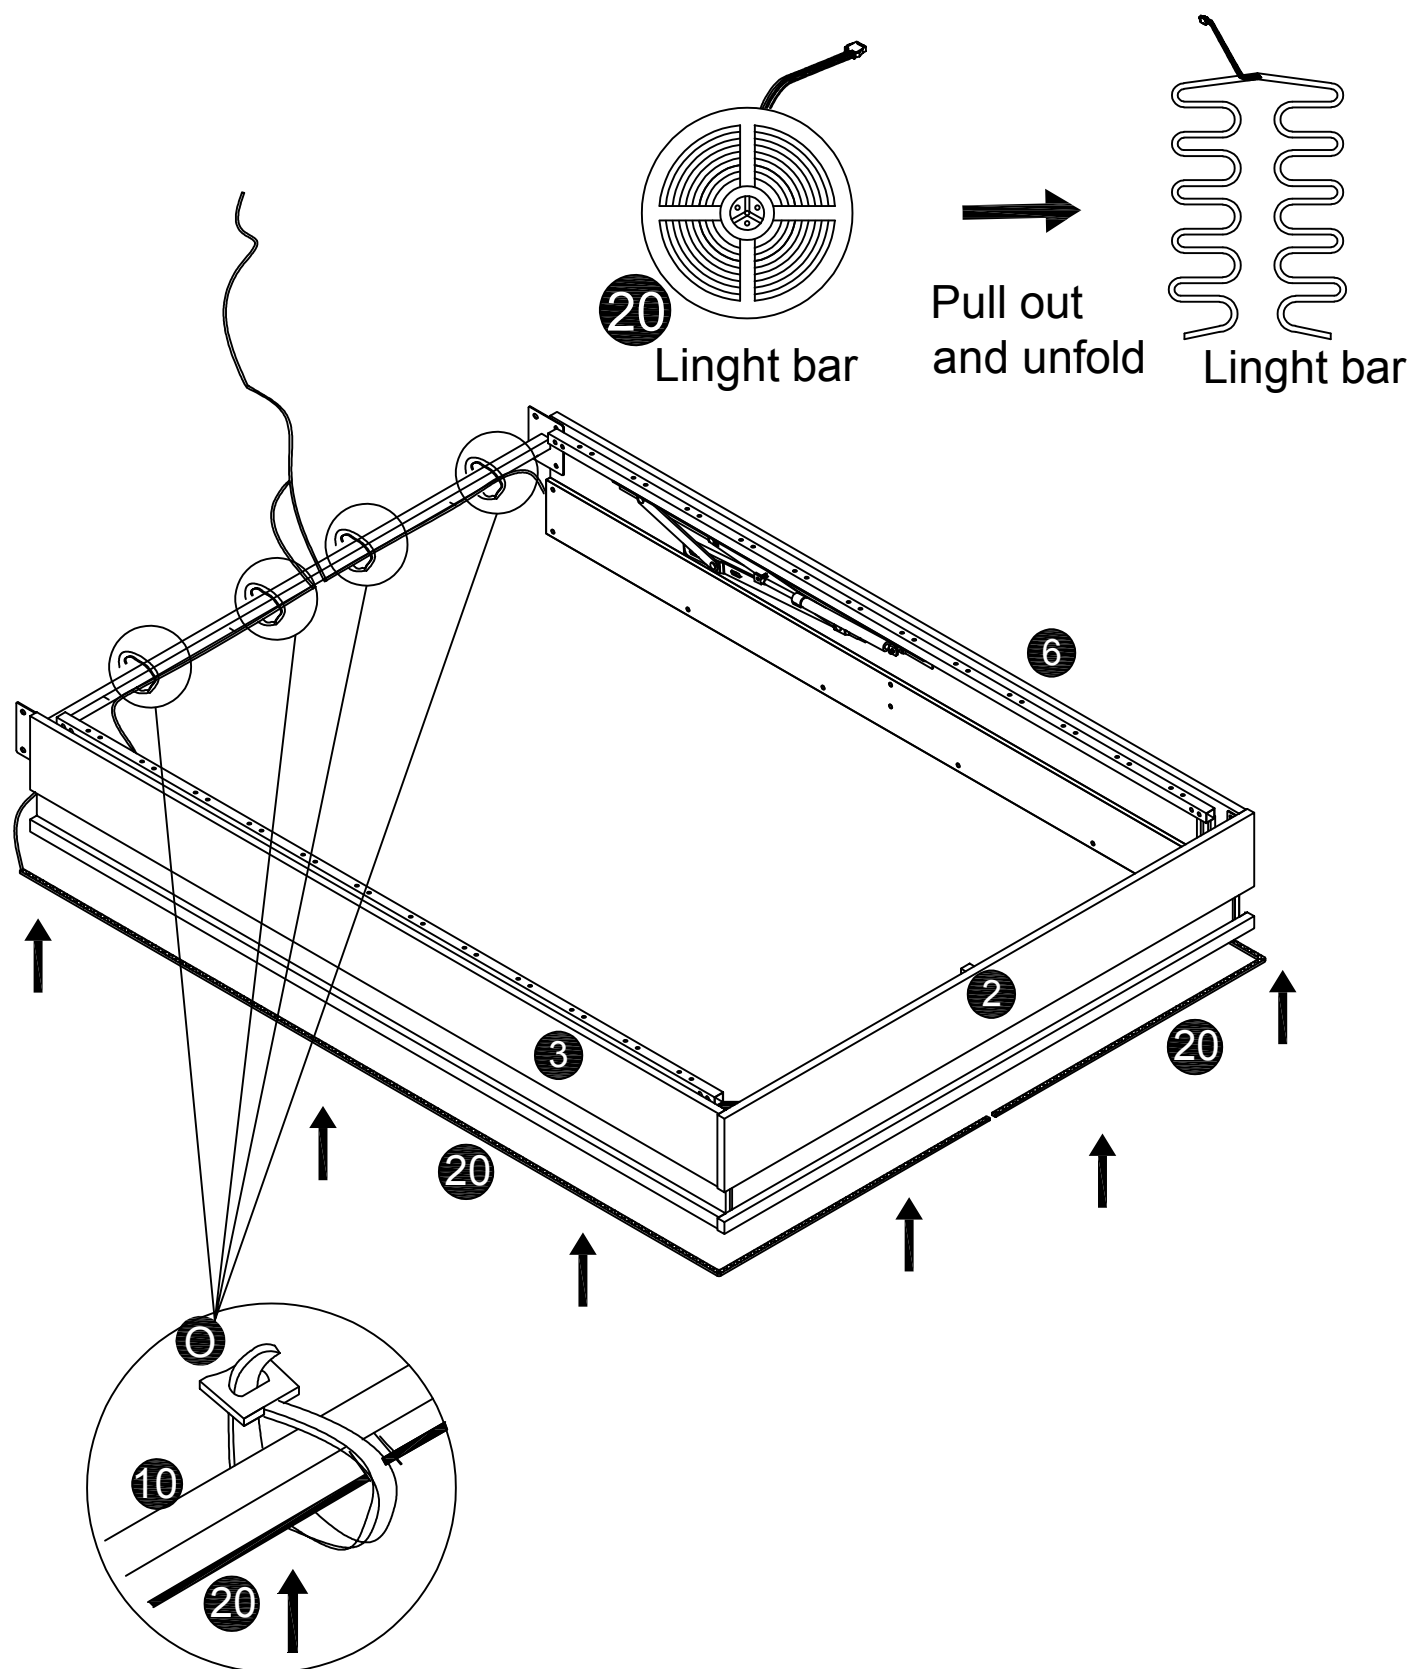



1. One side of the light bar is the luminous surface, and the other side is the velcro tape A.
 2. There are corresponding velcro tape B under the bed side and under the bed tail, which can be firmly bonded
- Please fit the light belt to the bottom of the bed side



18mm M8 Bolt x 4

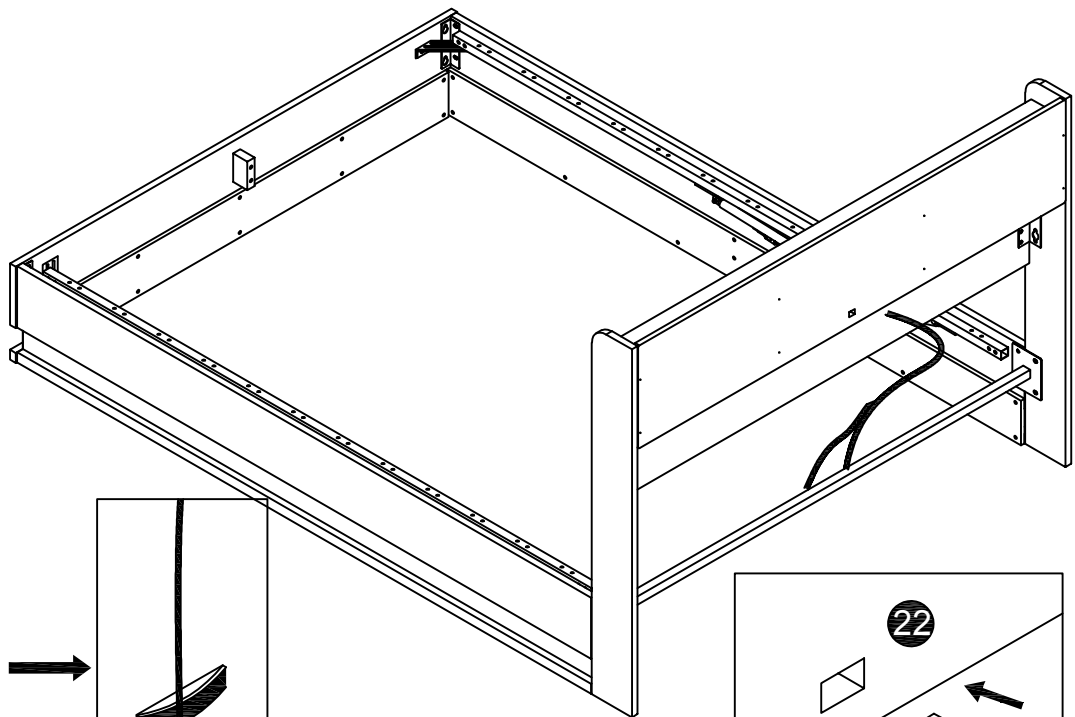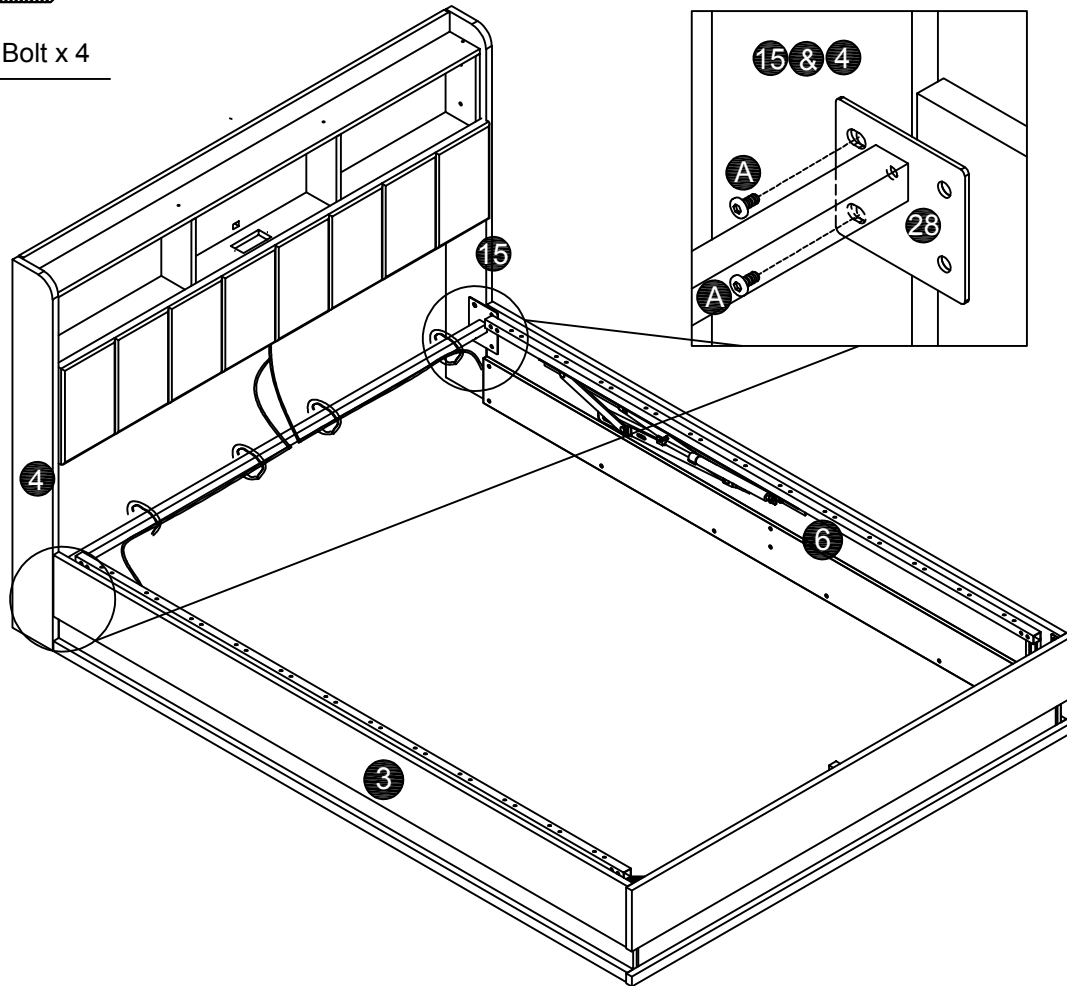


I

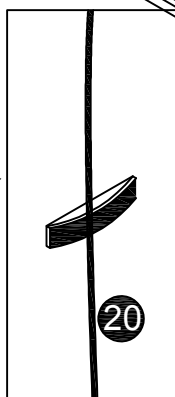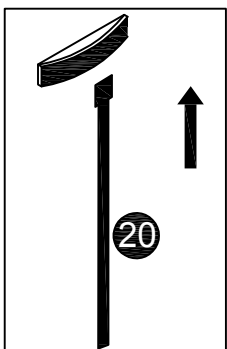


Please string
the thread
to the elastic
band


II

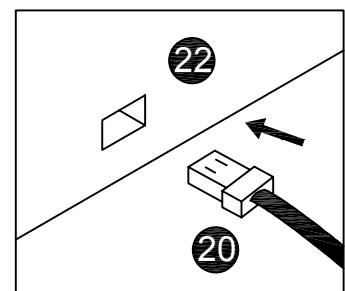

come through the hole




30mm M6 Bolt x 4




x 2


I

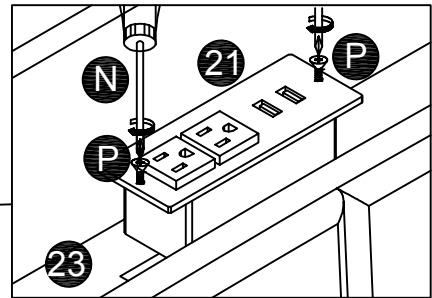

III

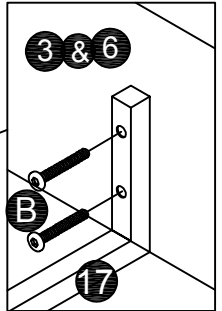

II

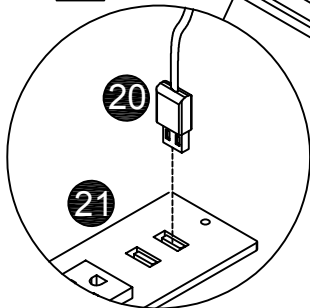


18mm M8 Bolt x 8



x 4


II

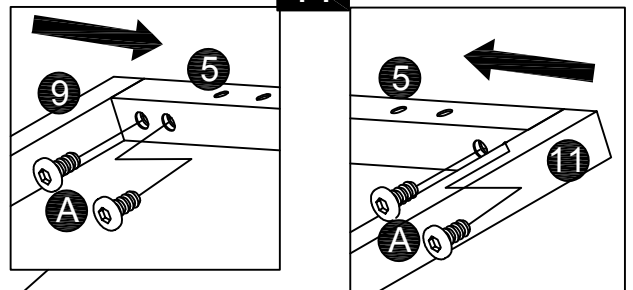


I

NOTE:

Do Not Overtighten

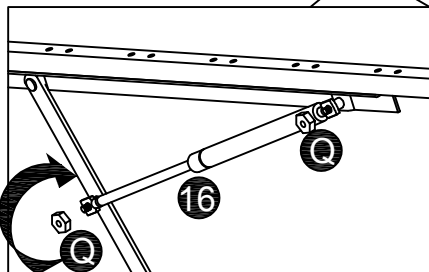

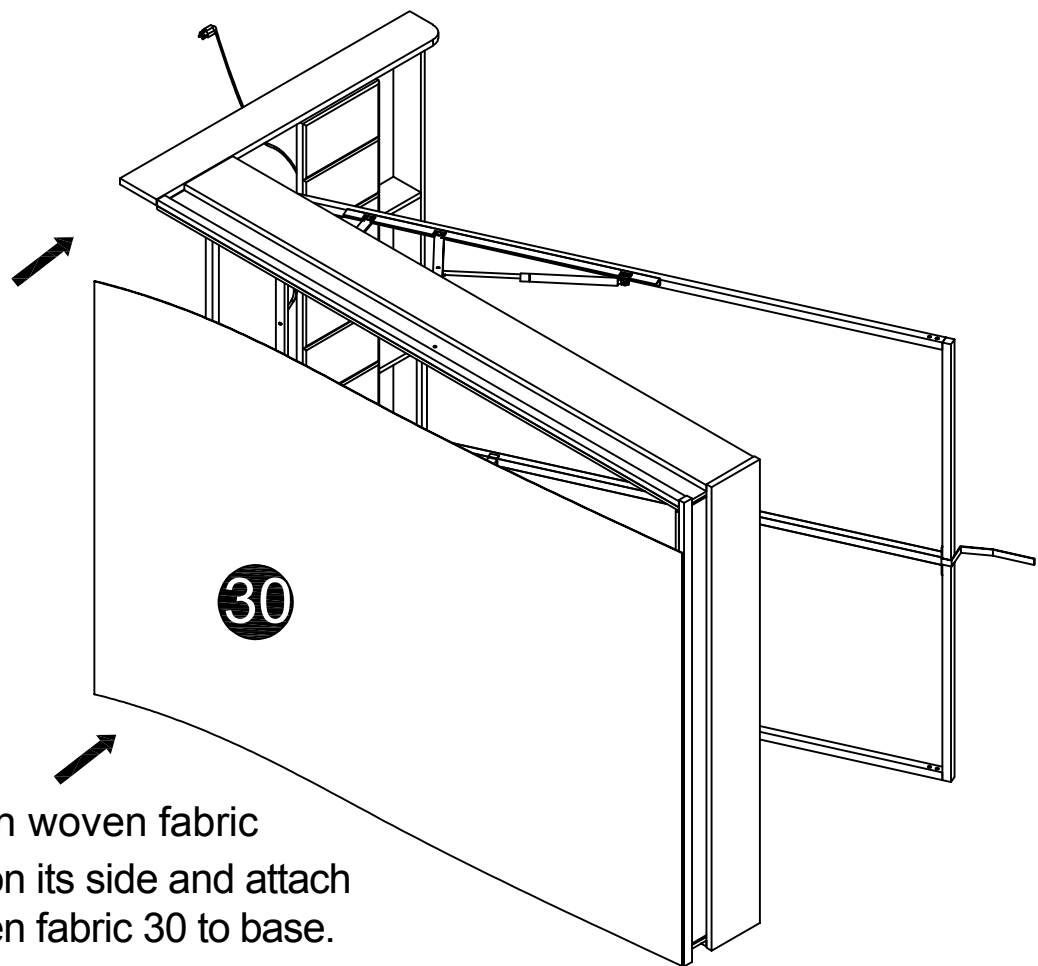

Attach Non woven fabric
Turn bed on its side and attach
Non-woven fabric 30 to base.

