

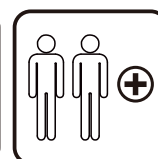
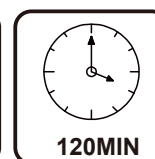
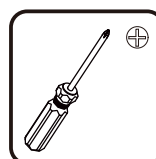
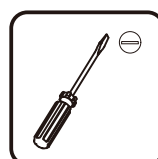


HLG105


Version: 1.0

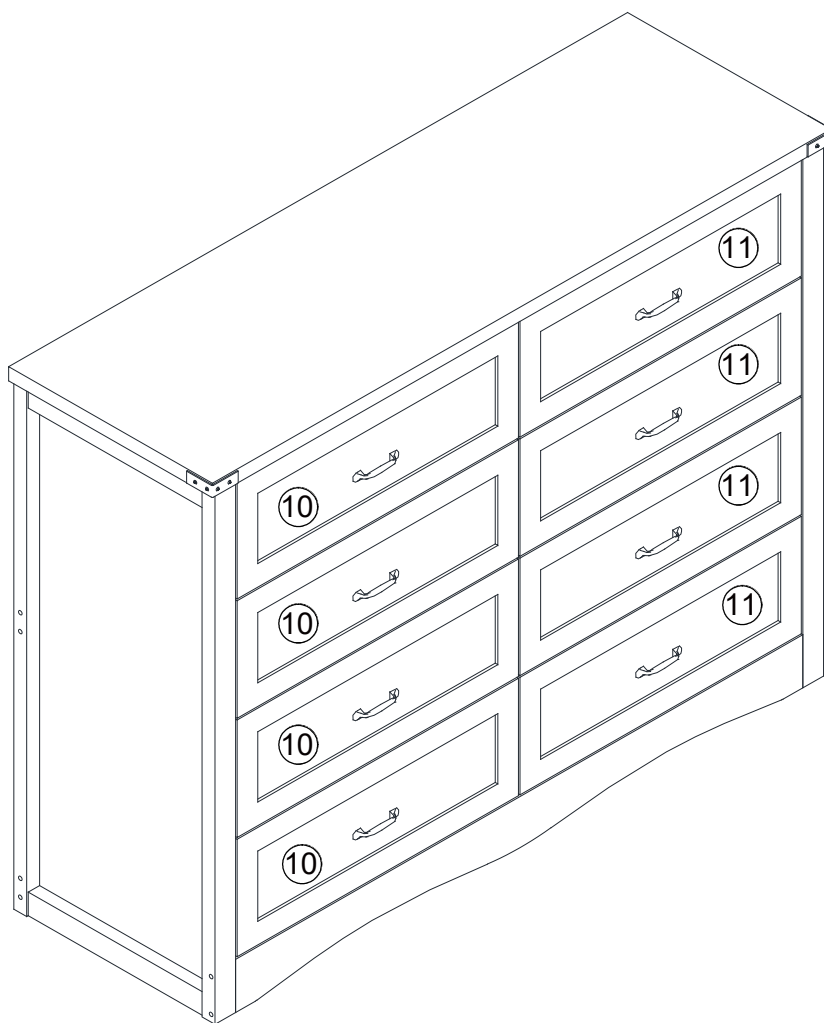


EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

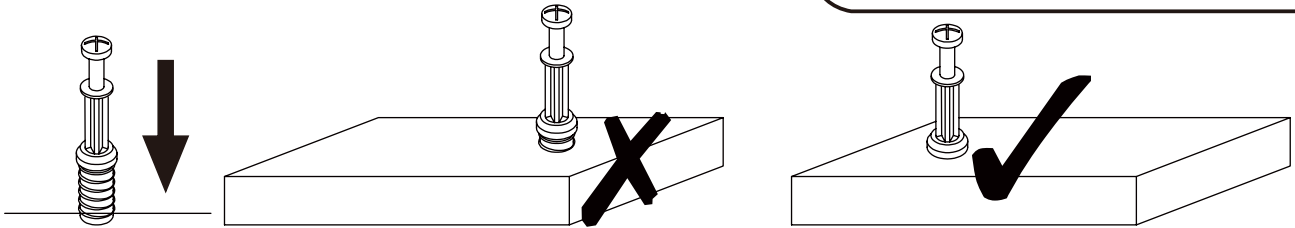


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

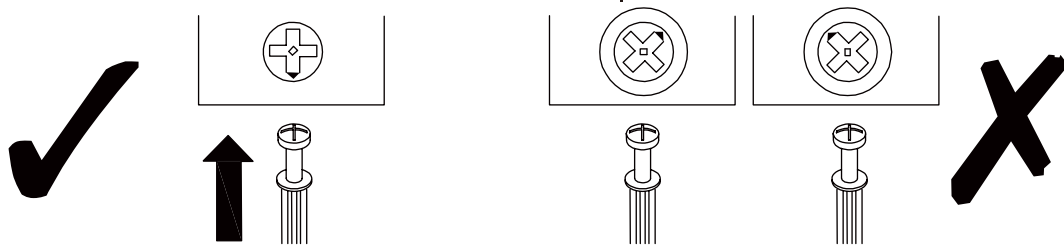











EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.






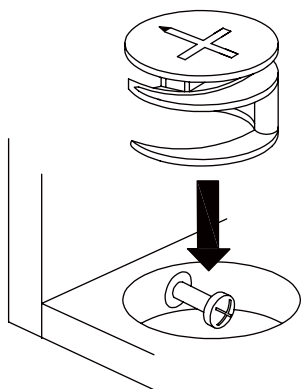





EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.

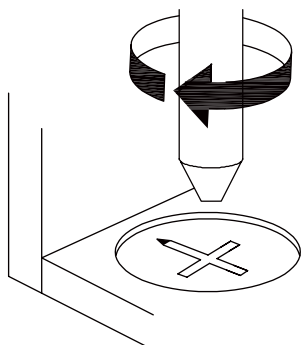

EN_Turn cam lock clockwise to tighten.

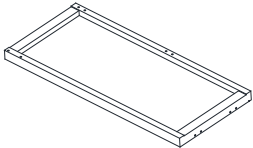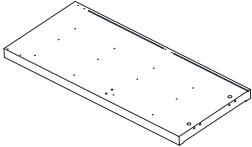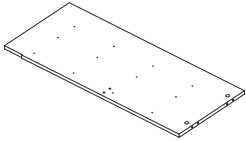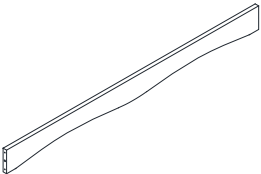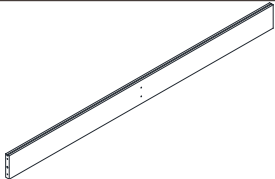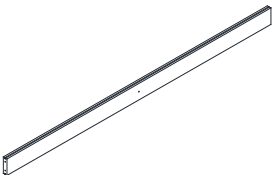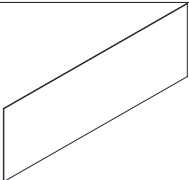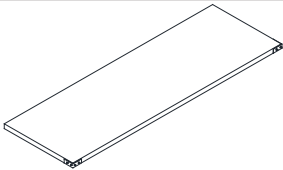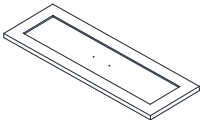NO.	PARTS	QTY	SPARE
①		x1	
②		x1	
③		x1	
④		x1	
⑤		x1	
⑥		x1	
⑦		x2	
⑧		x2	
⑨		x1	
⑩		x4	

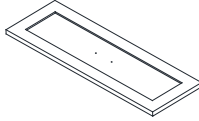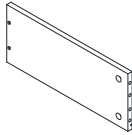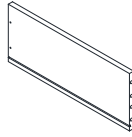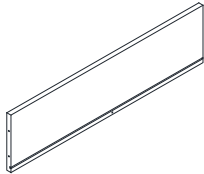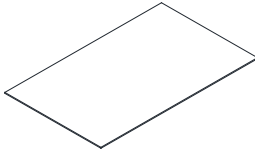
NO.	PARTS	QTY	SPARE
⑪		x4	
⑫		x8	
⑬		x8	
⑭		x8	
⑮		x8	
⑯		x8	
	 Hardware Kit		

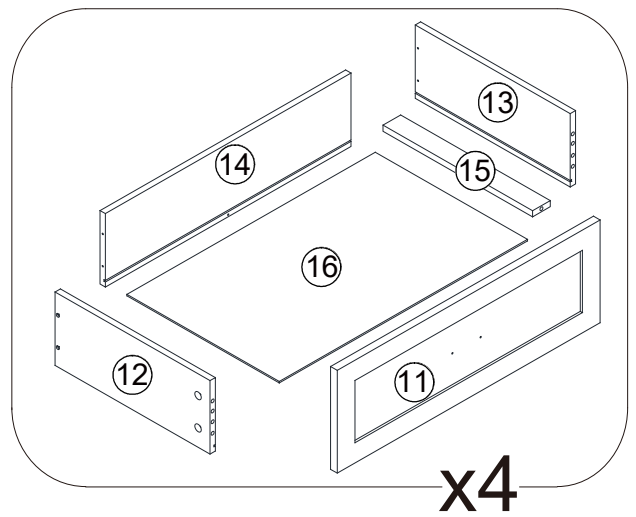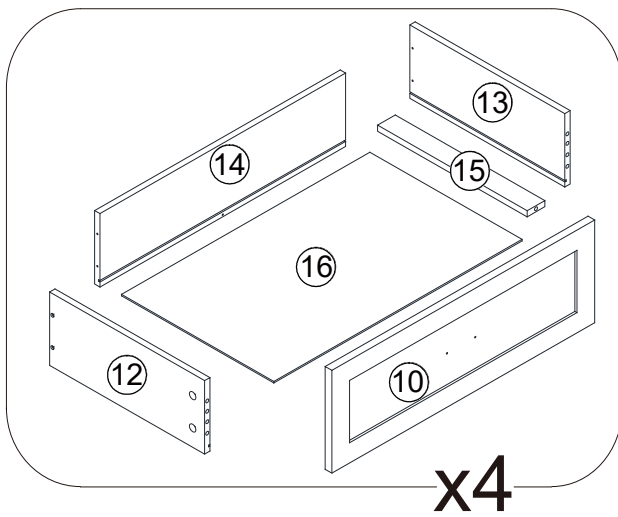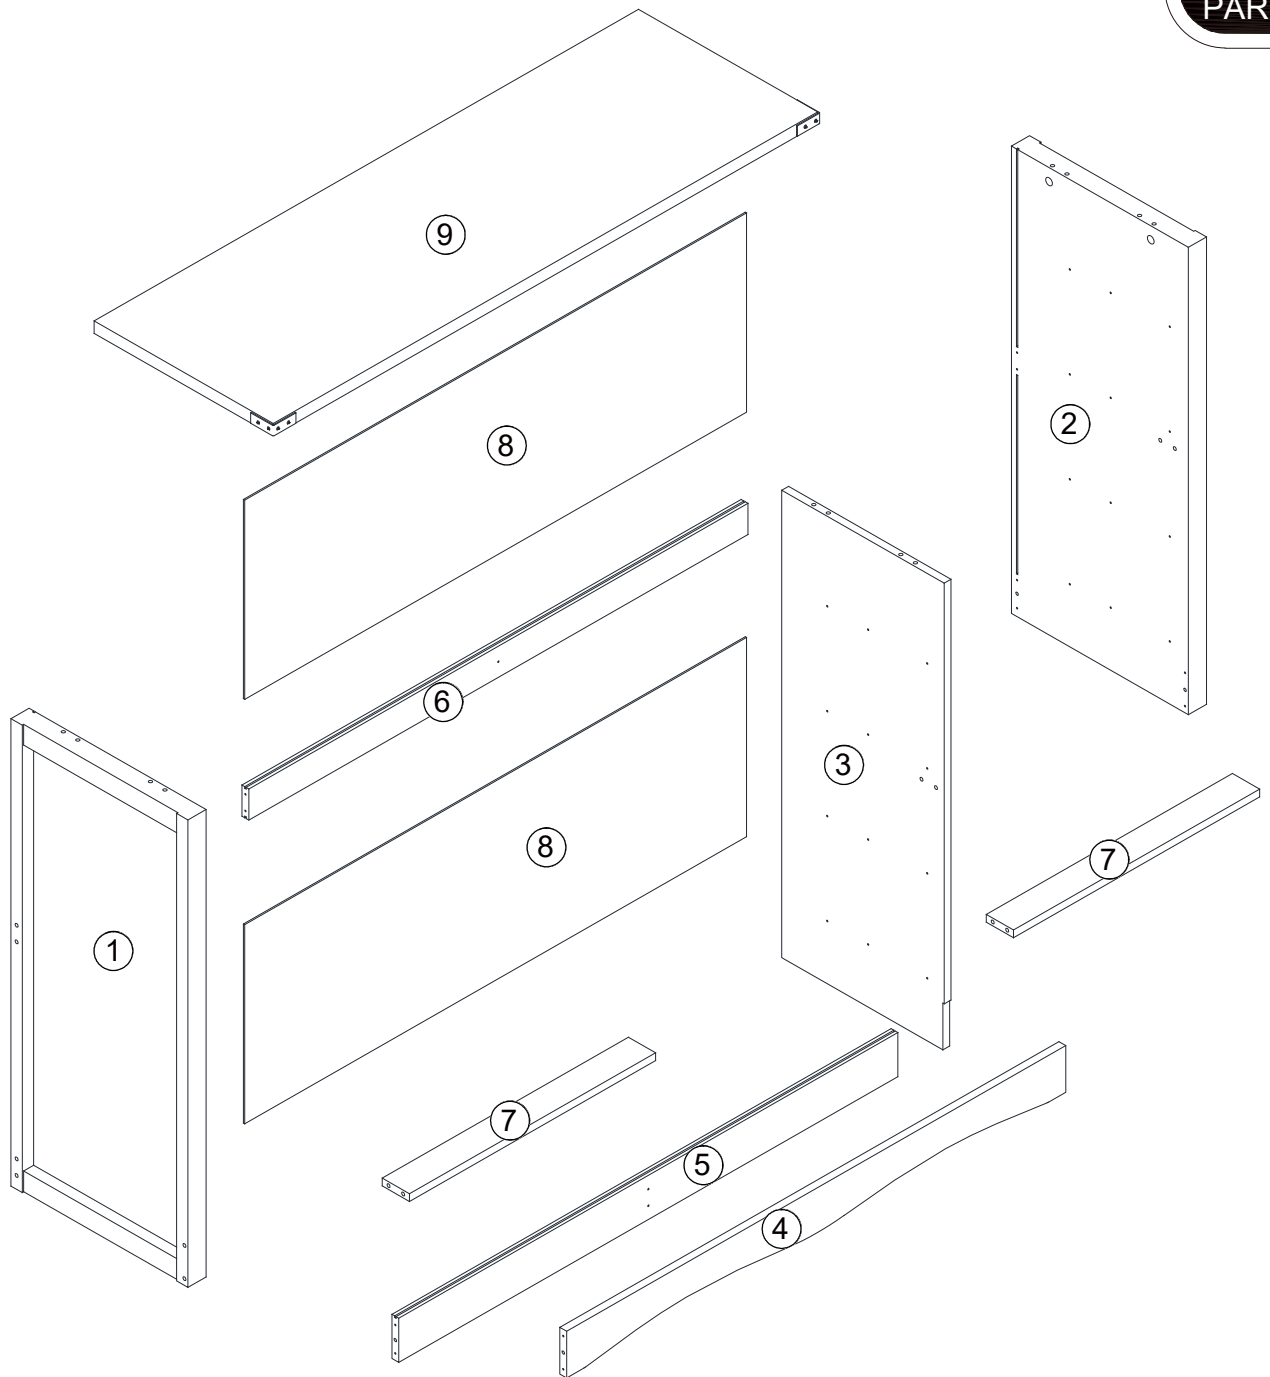


A x50 Ø6x35mm +2(spare)	B x50 Ø15x10mm +2(spare)	C x46 Ø6x30mm	D x45 Ø4x35mm +2(spare)	E x96 Ø3.5x12mm +3(spare)	F x8
G x10 +1(spare)	H x12 Ø5x50mm	I x12	J x4 Ø4x12mm	K x2 Ø4x14mm	L x2 Ø6x30mm
M x2	CL x8 L350mm	CR x8 L350mm	DL x8 L350mm	DR x8 L350mm	

E x24	CL x4	CR x4
--------------	--------------	--------------



01


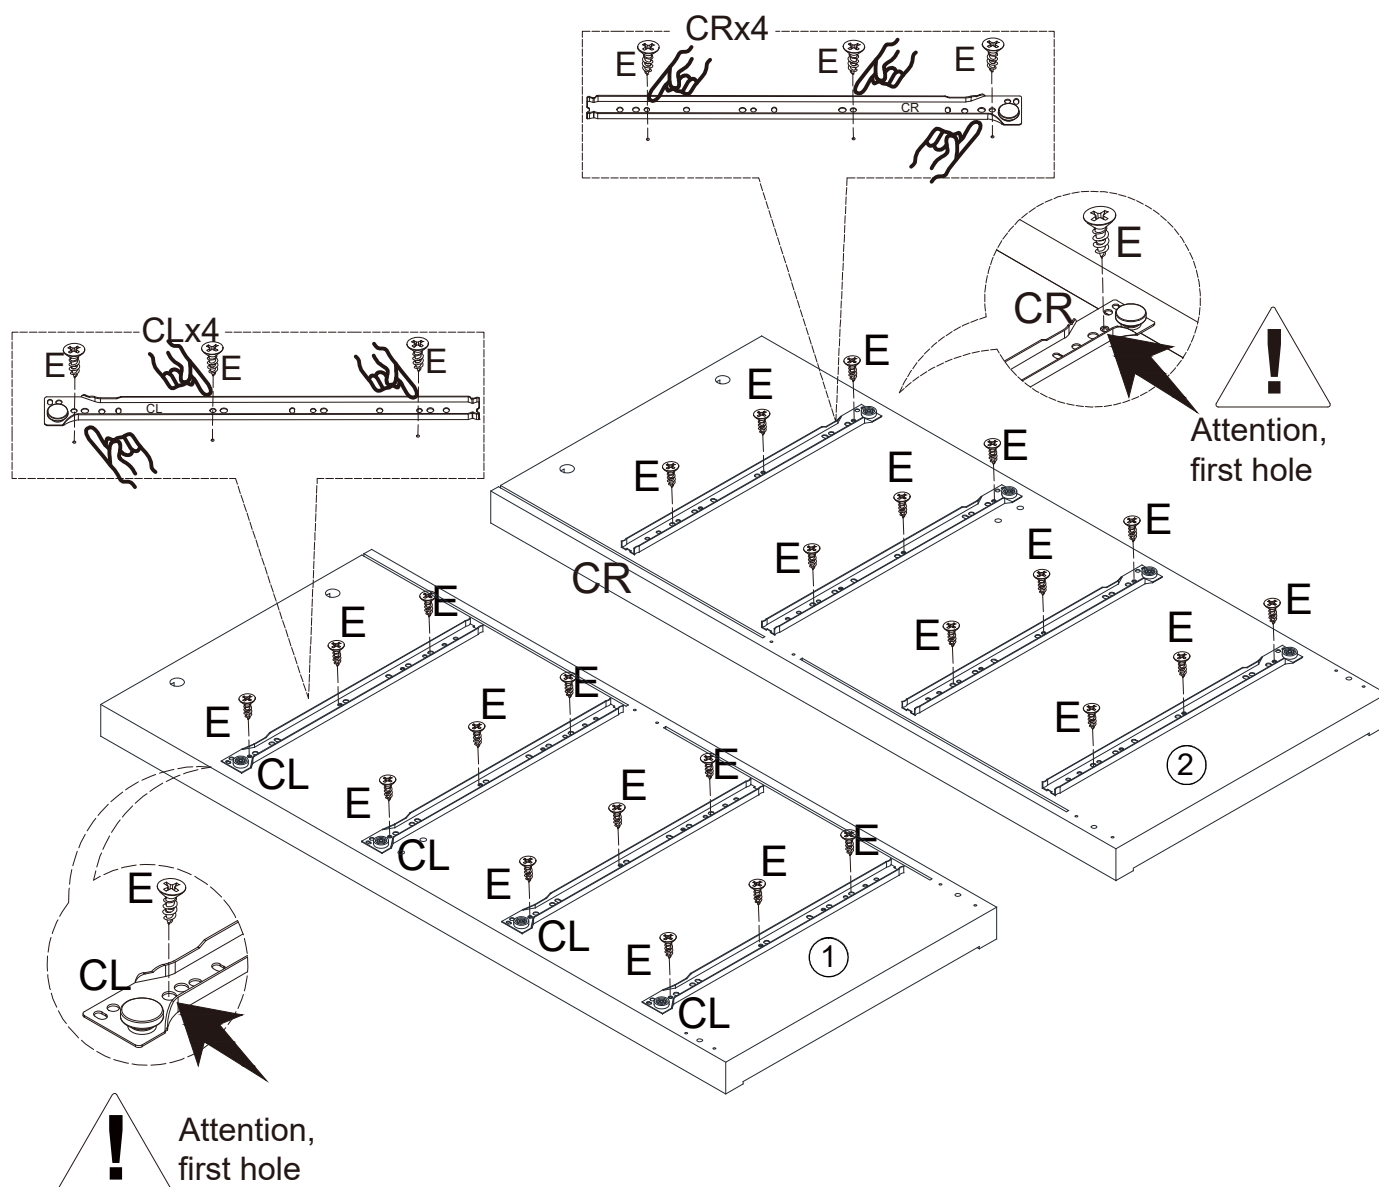


A x1

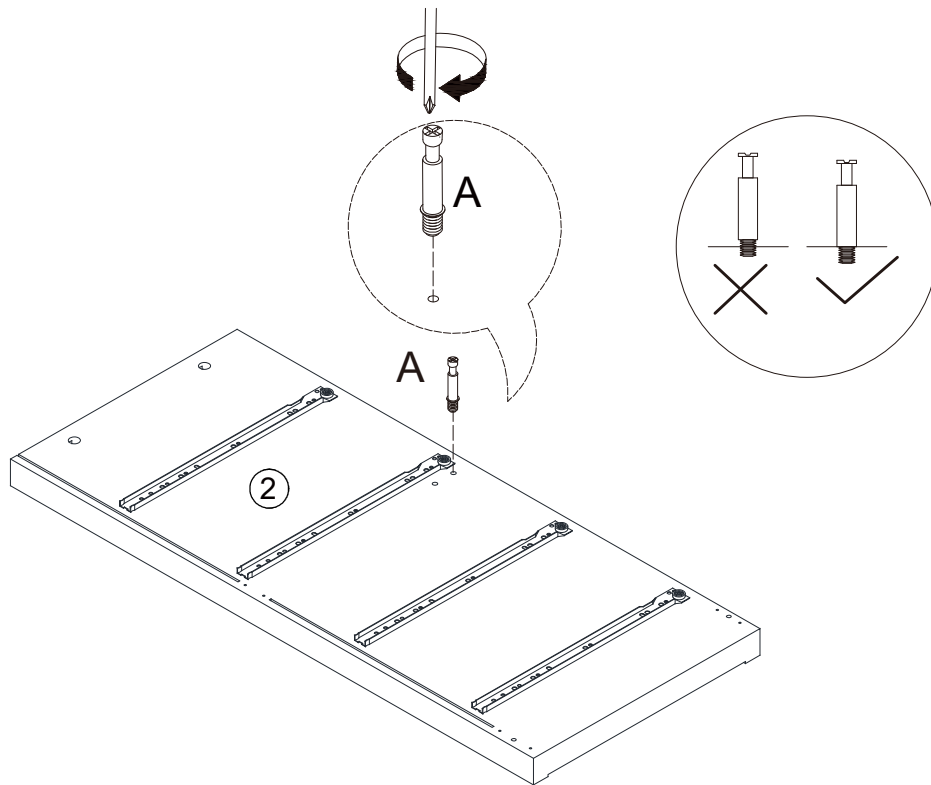

A x1


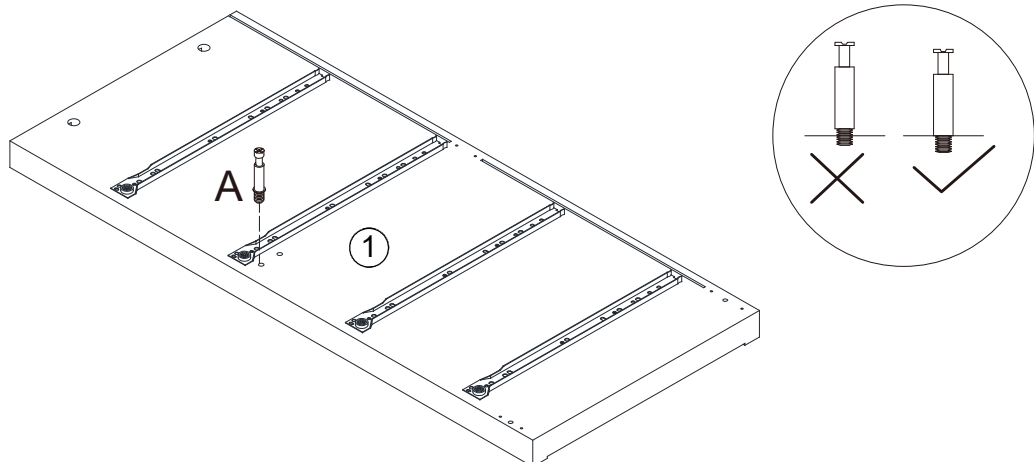



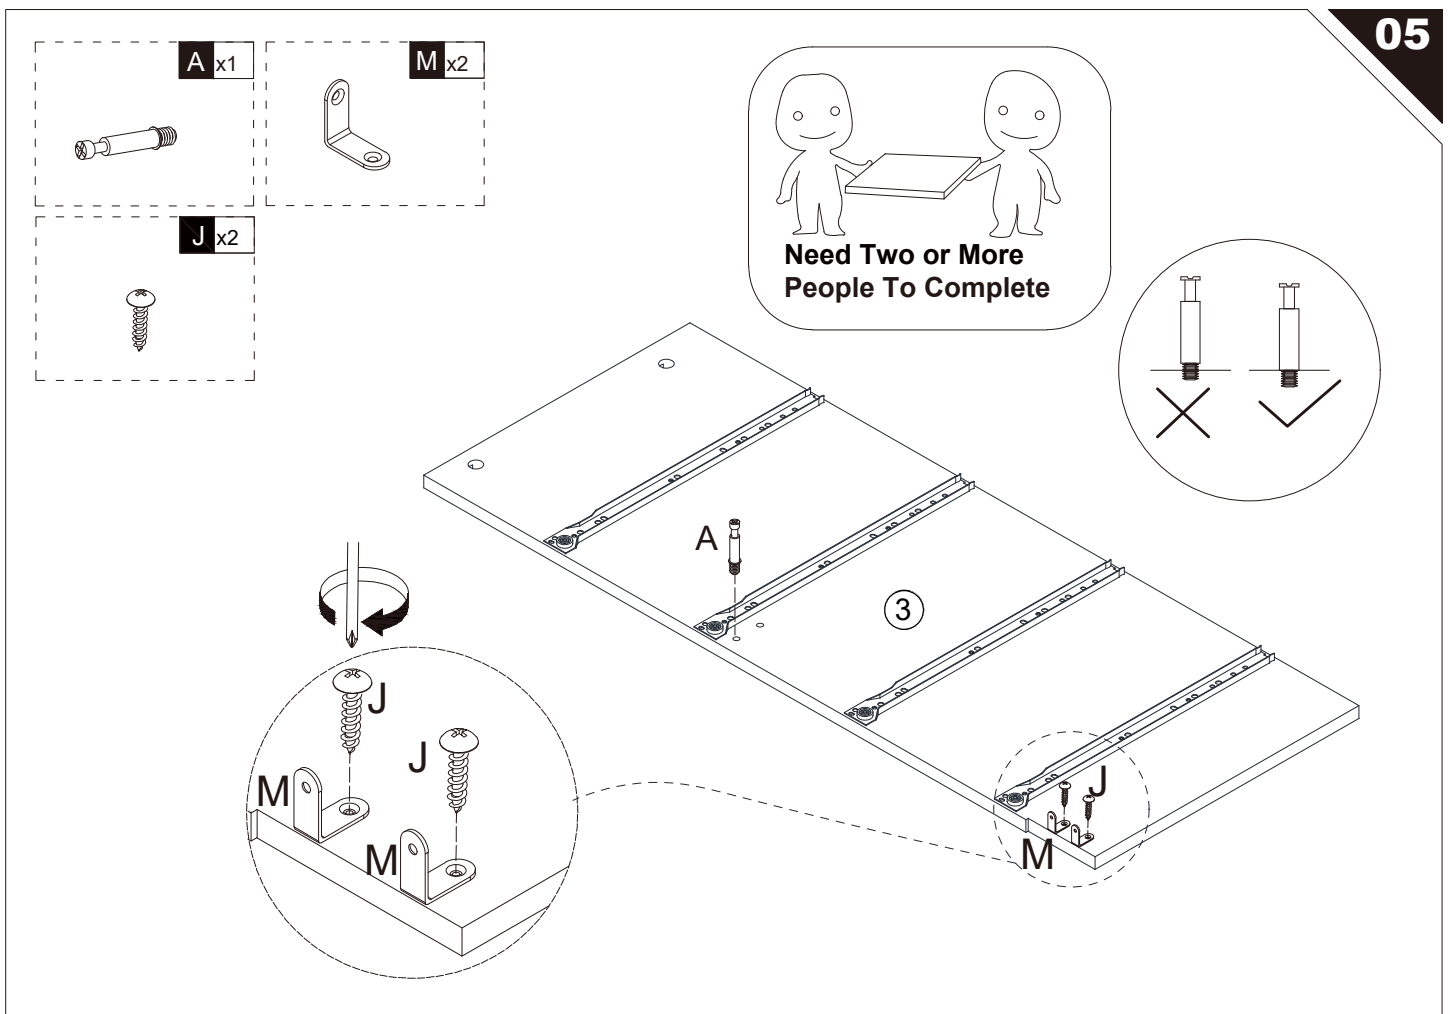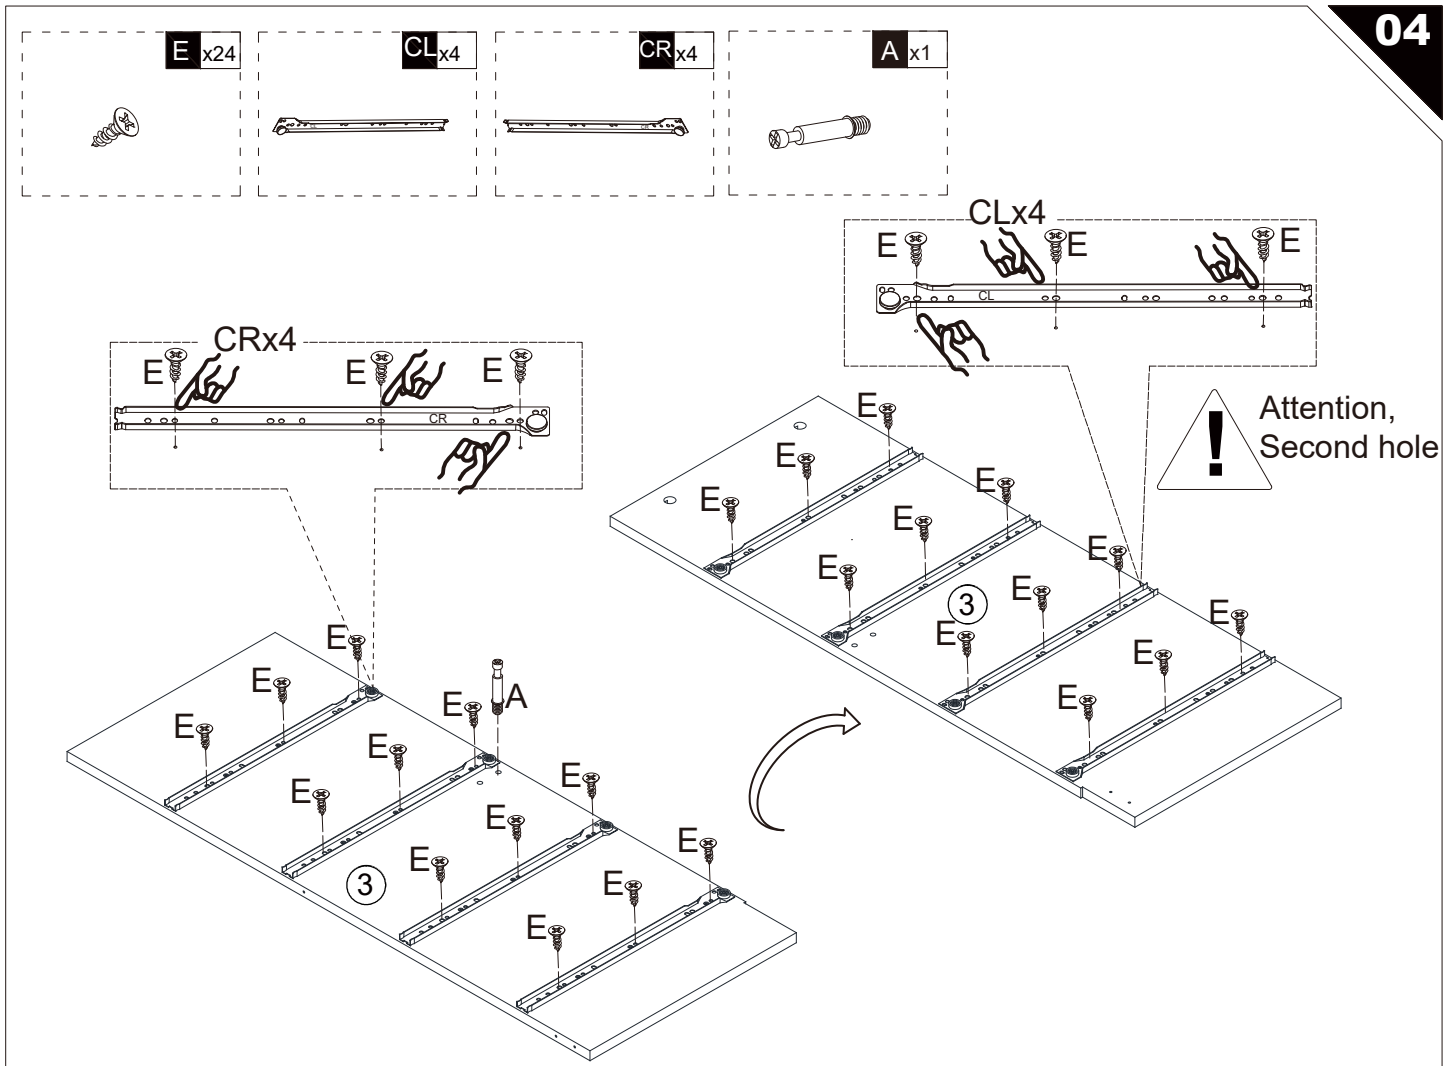

J x2





Note: Due to the sinking of the upper part of board 3 during installation with board 4, a plate from board 5 can be used as a cushion to prevent board 3 from sinking, as shown in the figure.

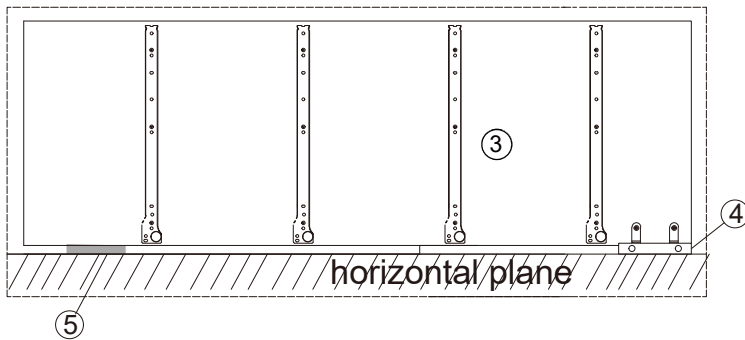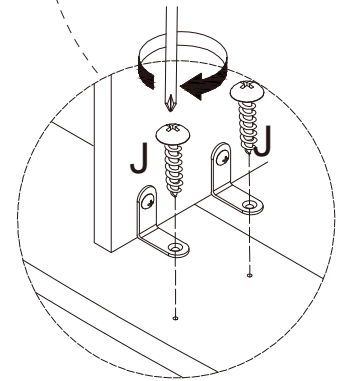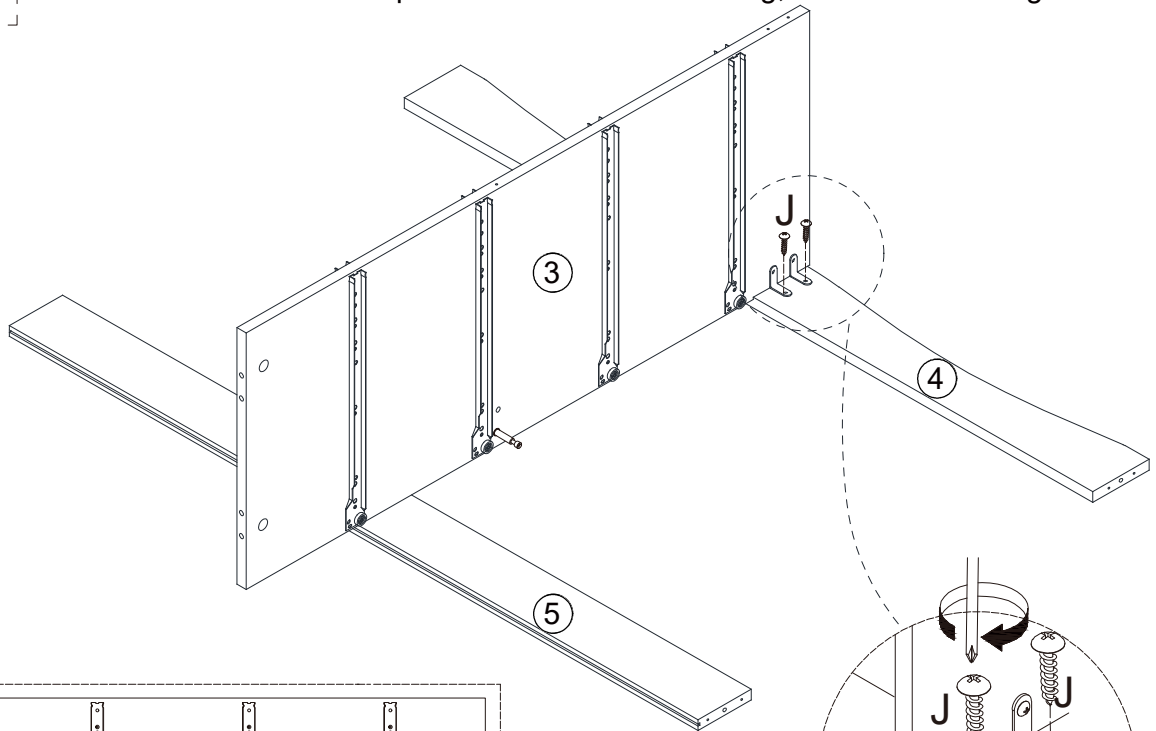

B x1



C x1

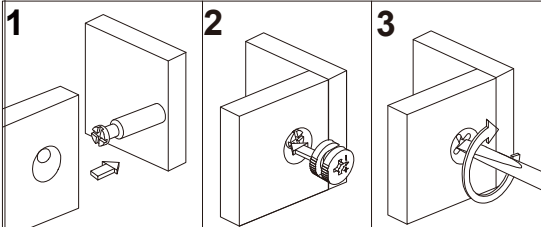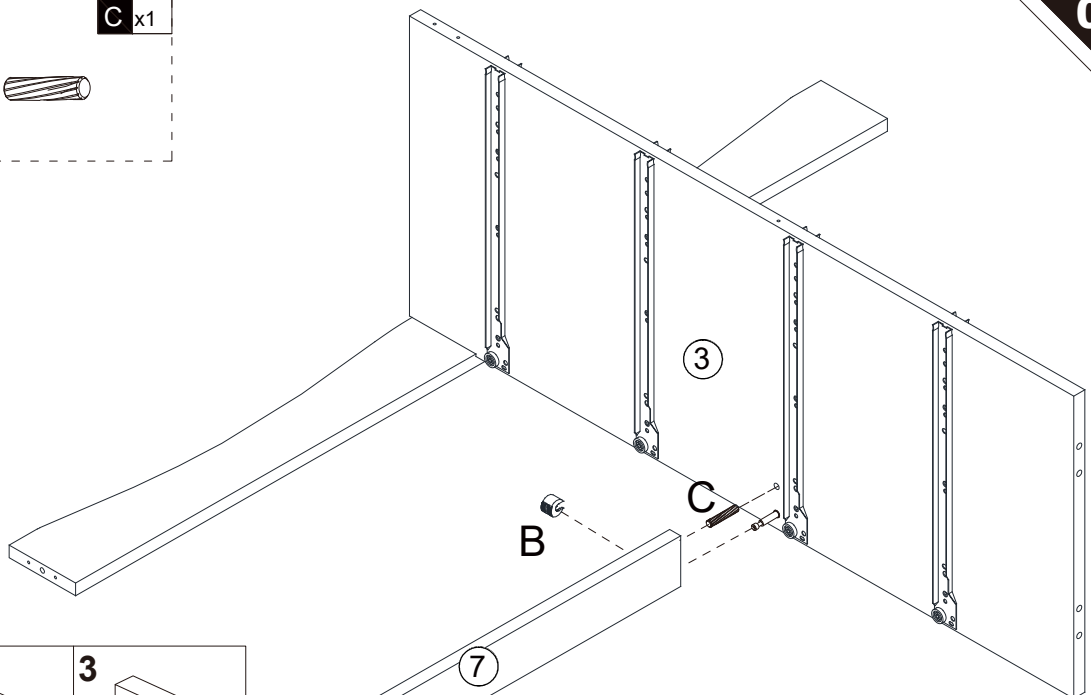

B x1




C x3



H x6



D x3

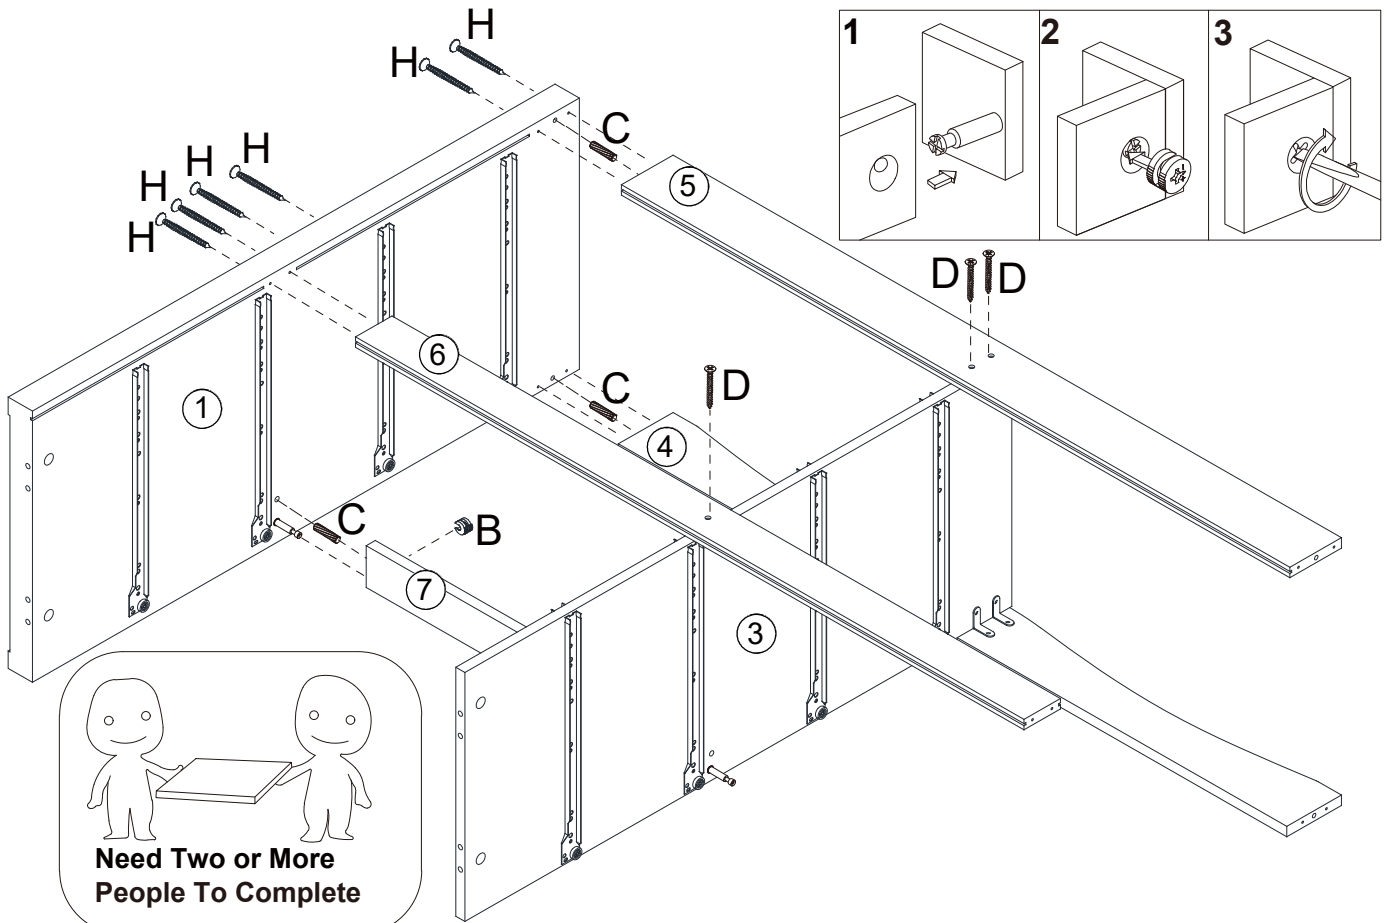

1

2


3

D D D

B x1



C x1

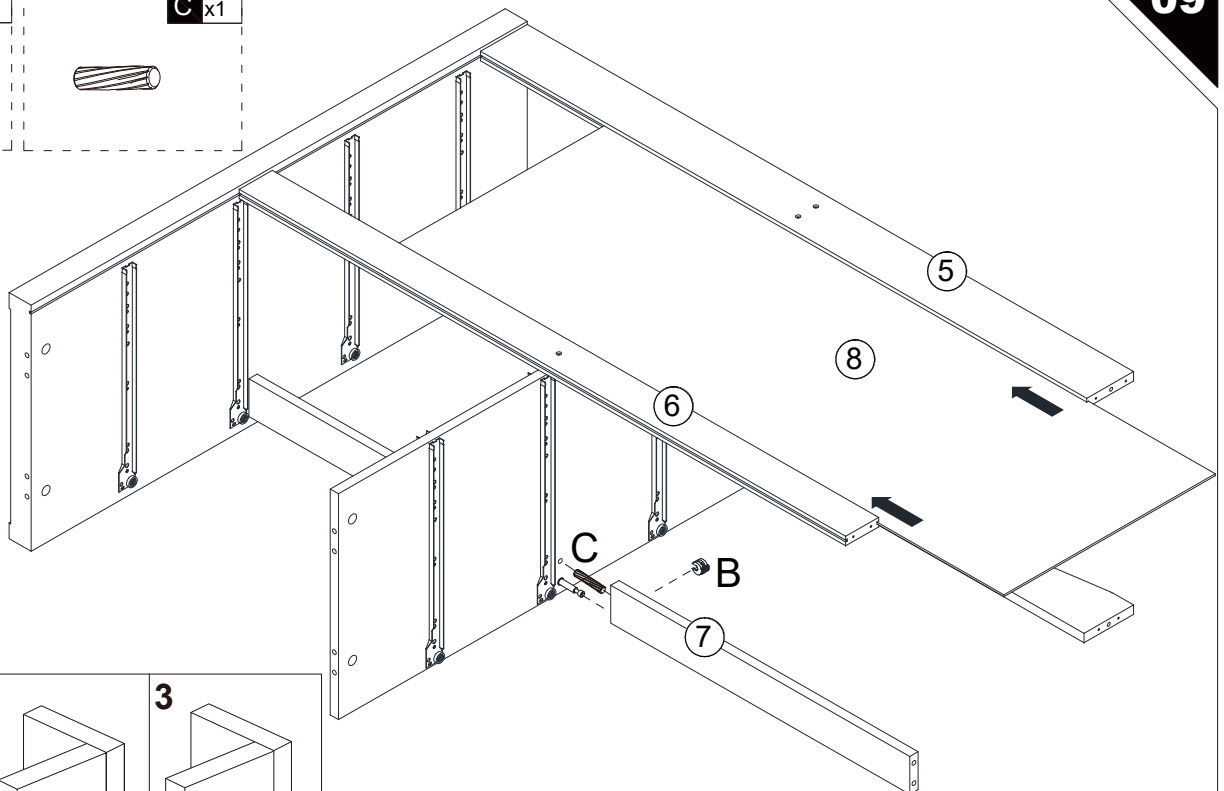

1

2

3


B x1





C x3





H x6

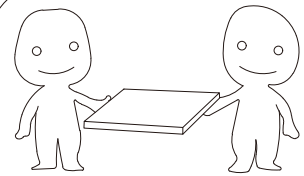

Need Two or More
People To Complete



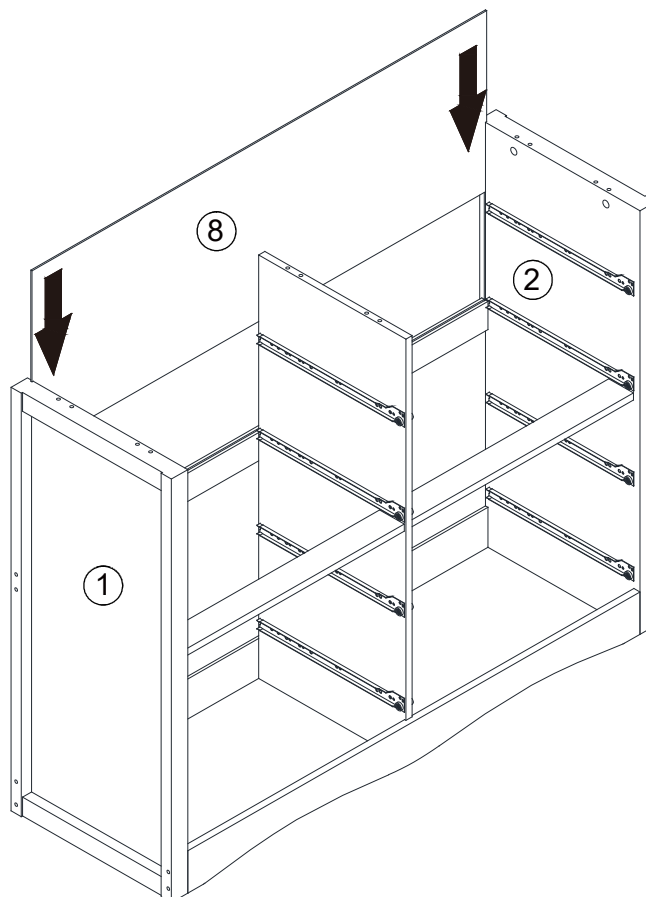
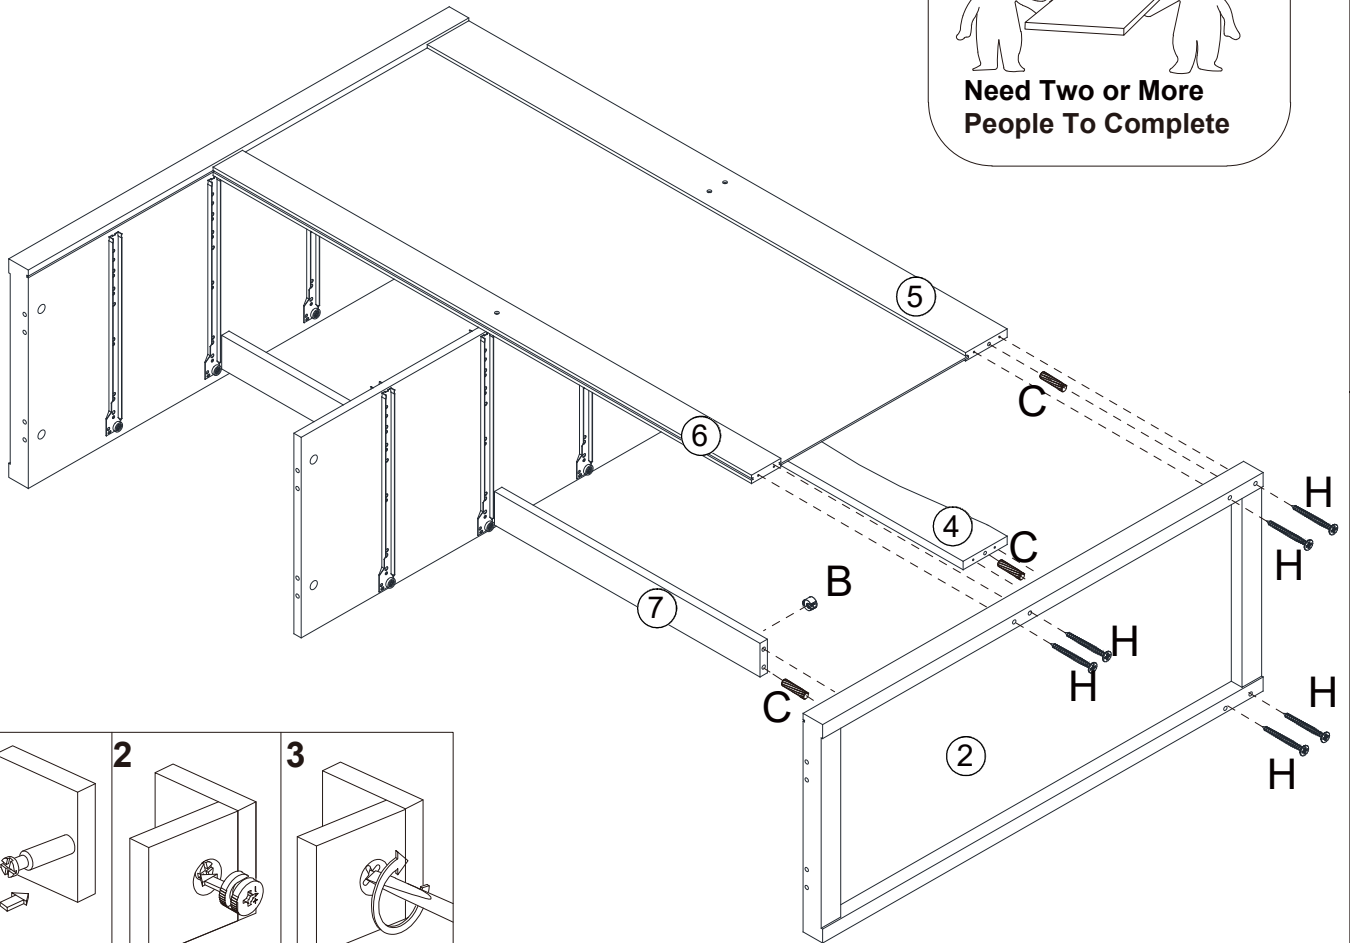


A x6

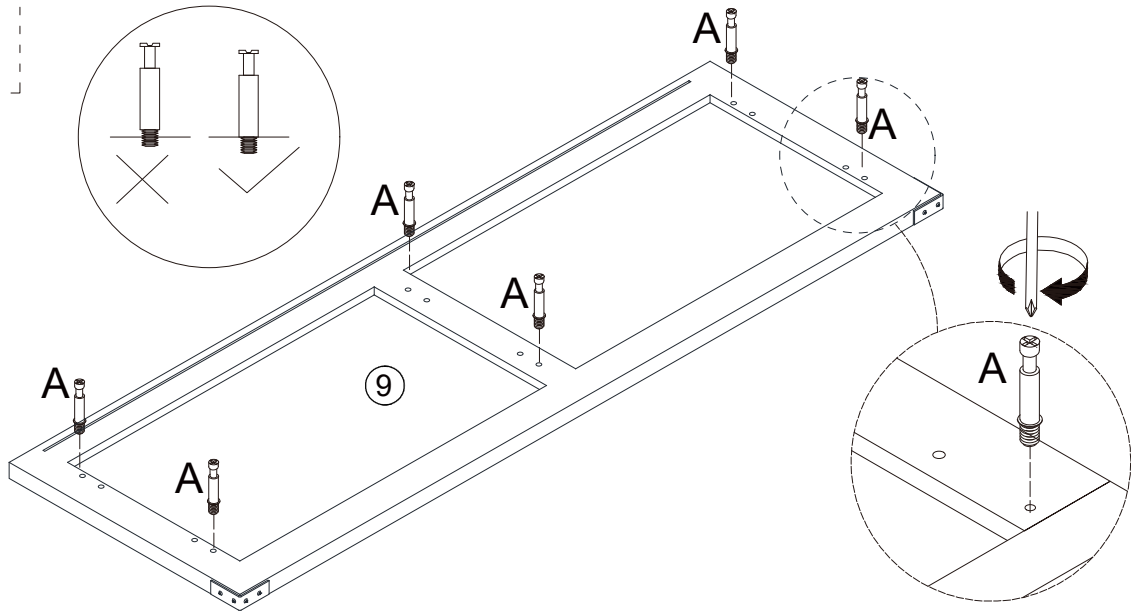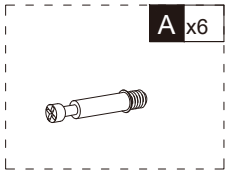


B x6


C x6

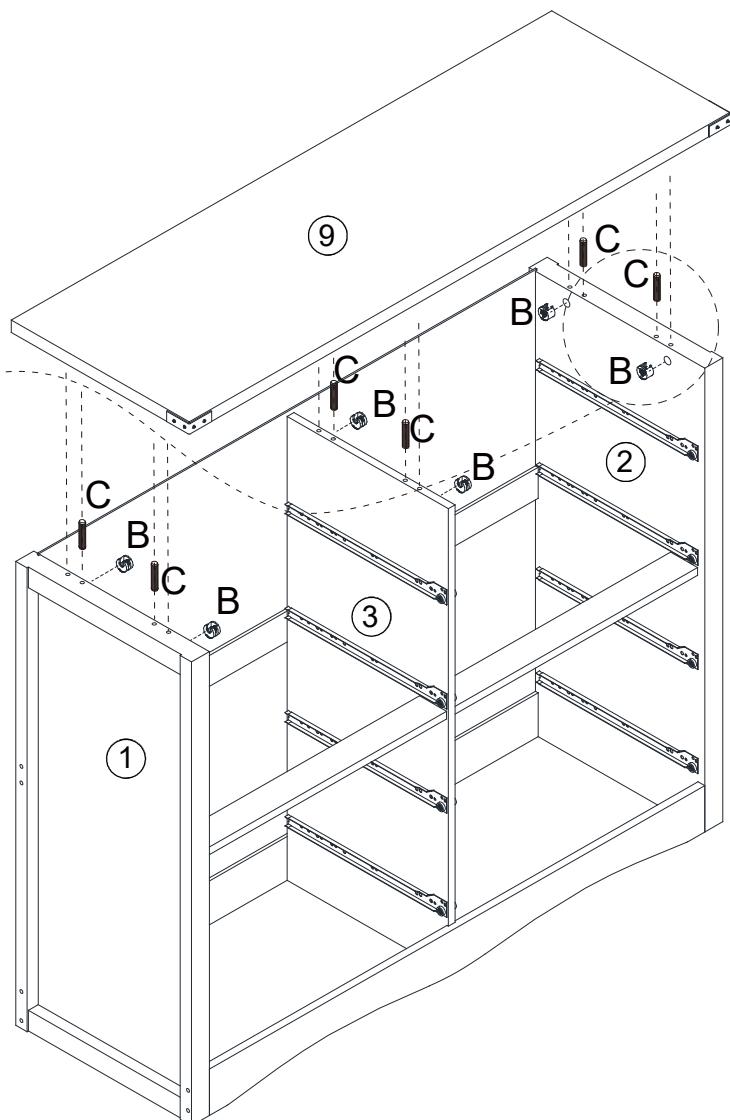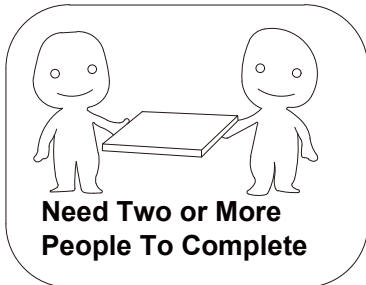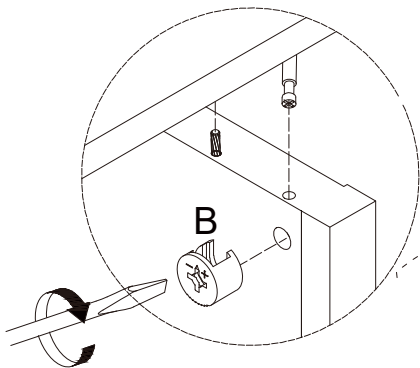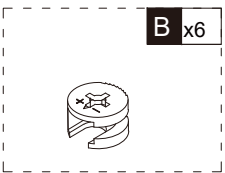


1





2

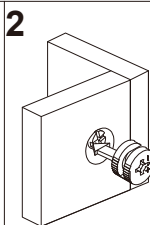


3

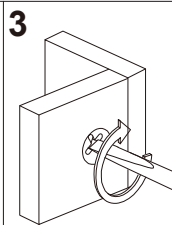

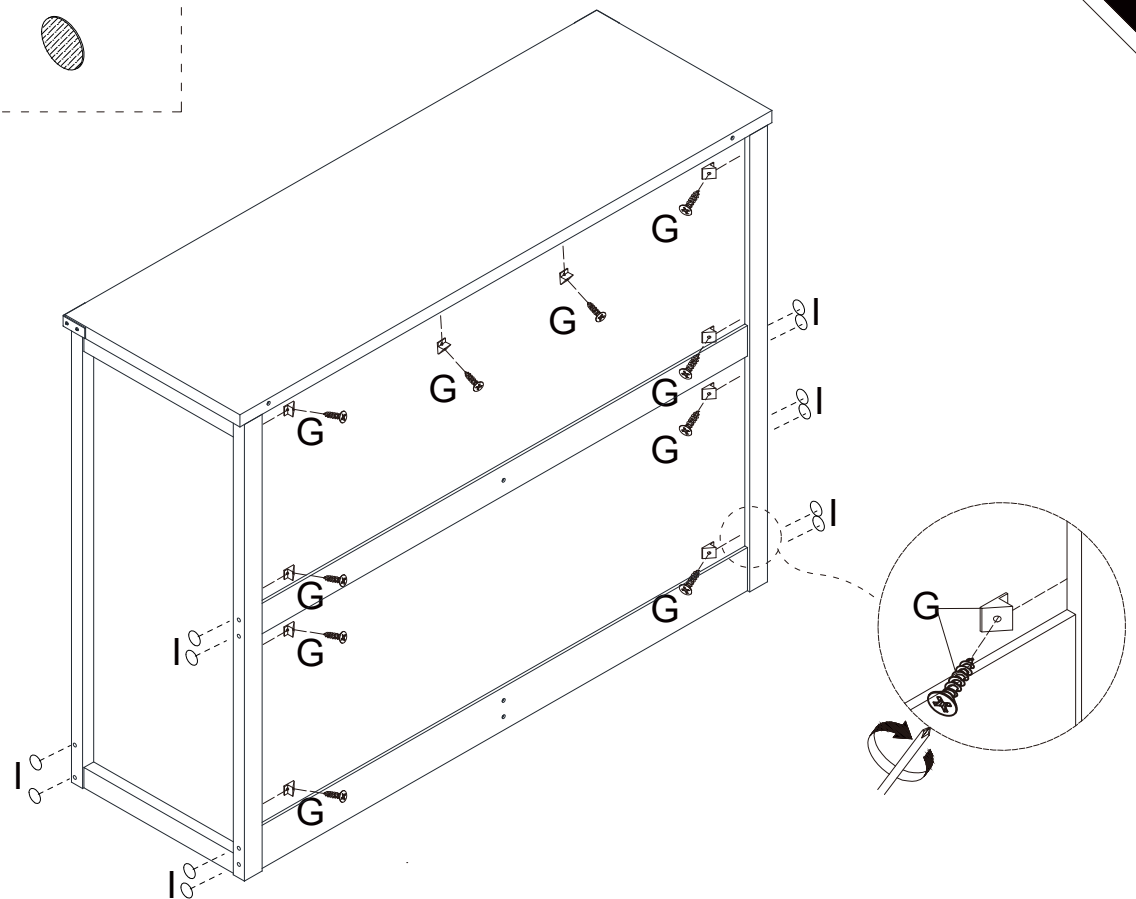


x4

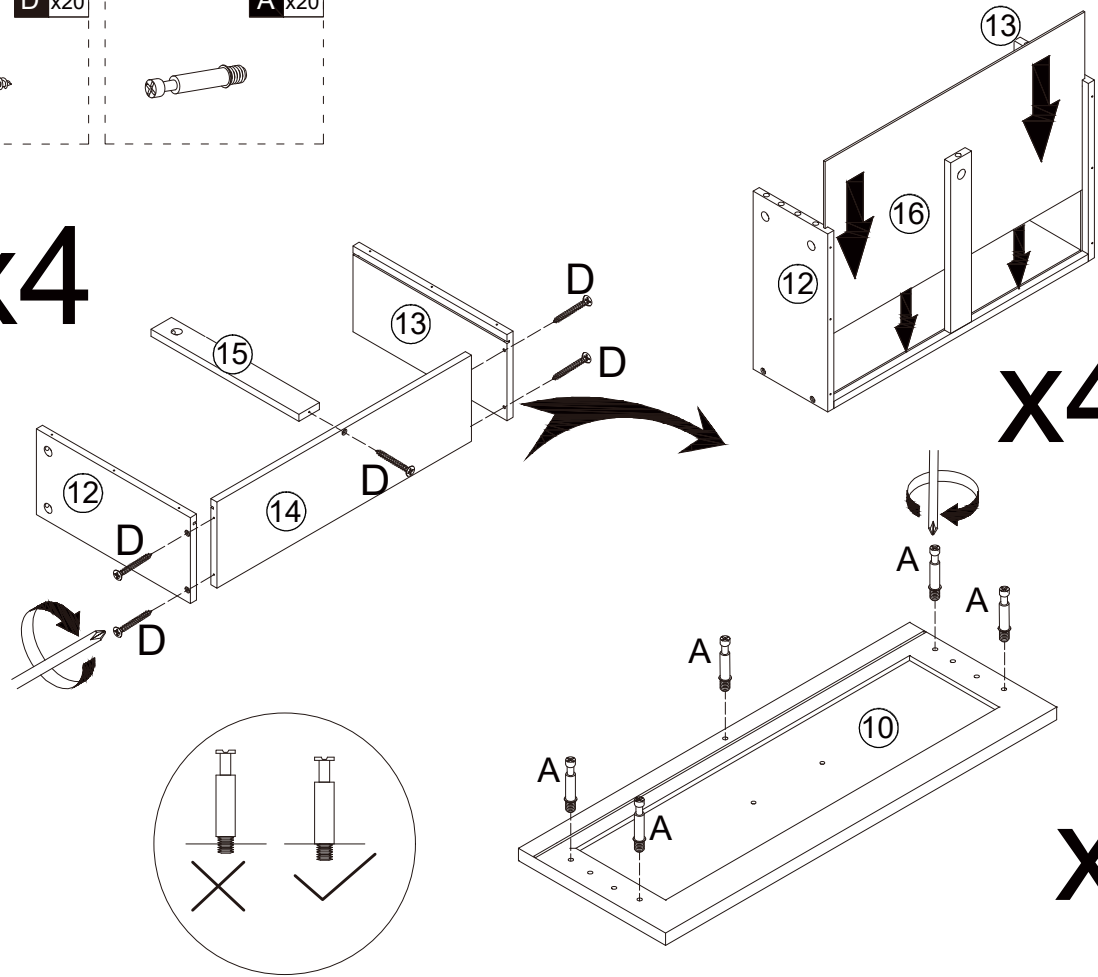



x4

D x20

A x20




x4

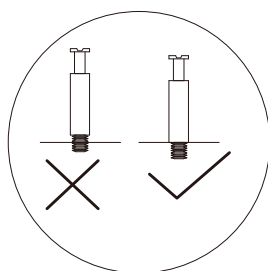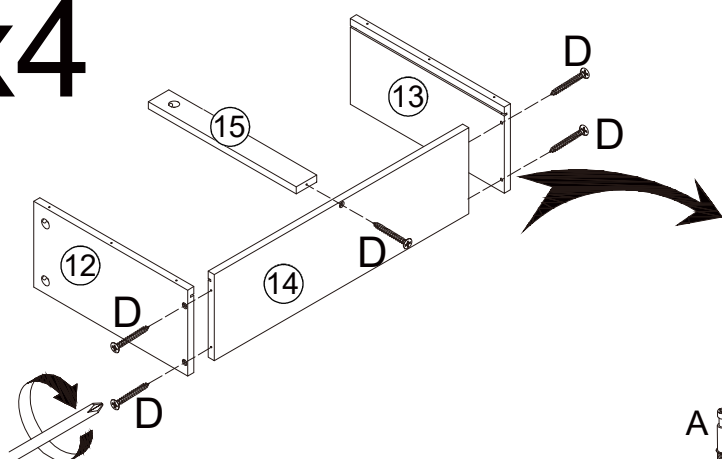


x4

x4


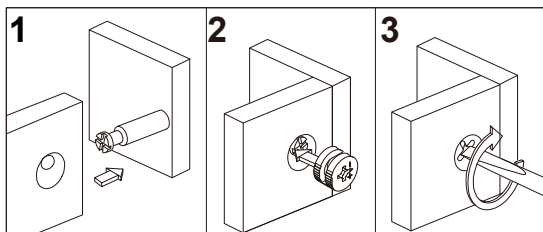


B x40


C x32

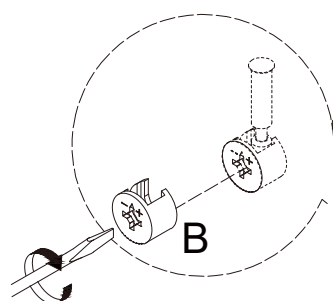




x4

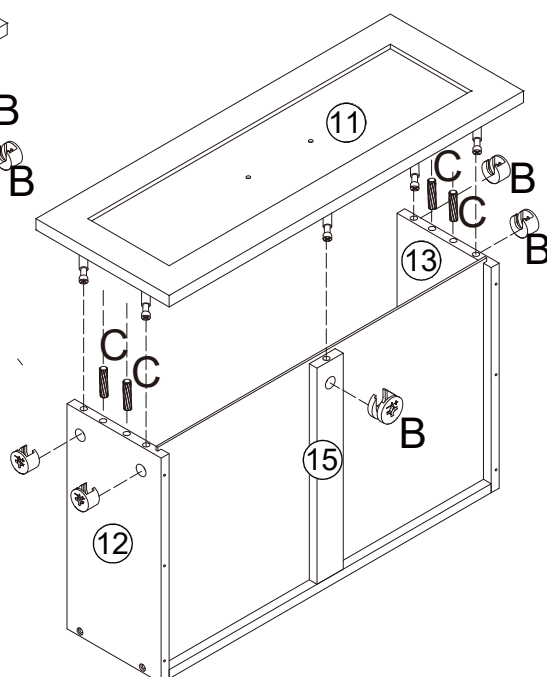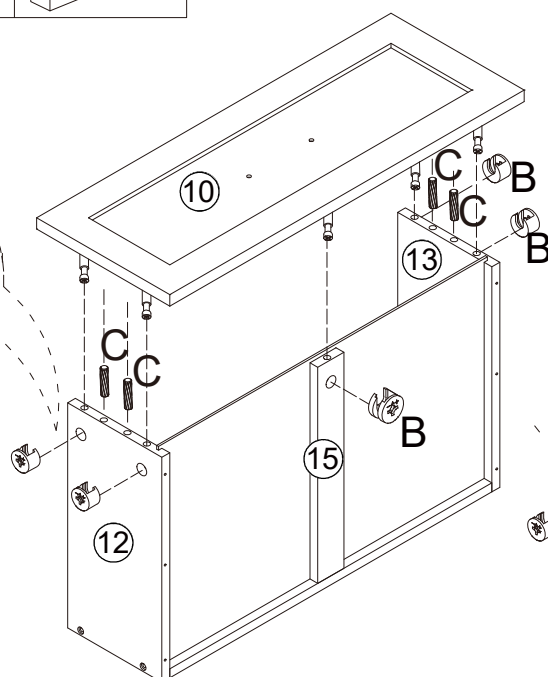

F x8



x4

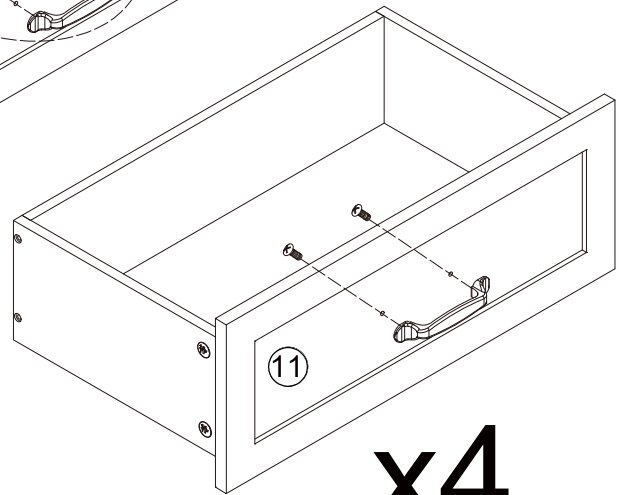
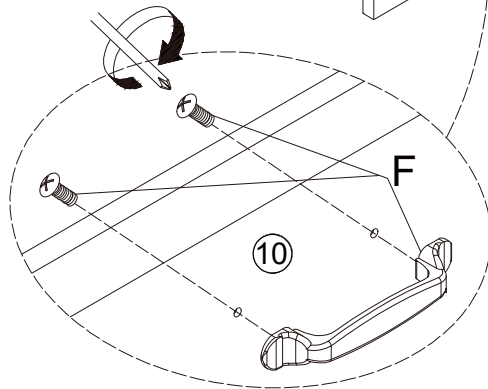
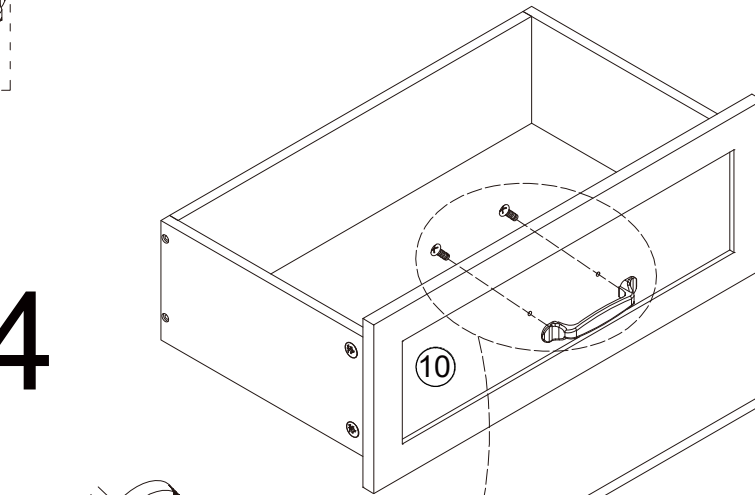


x4



E x48

DL x8

DR x8

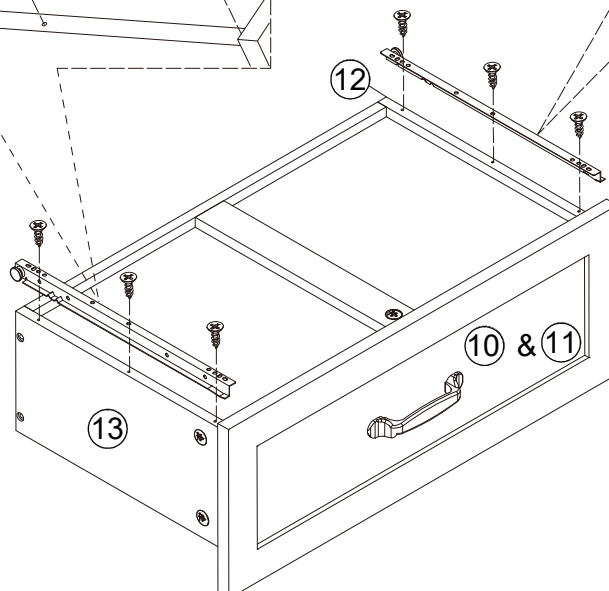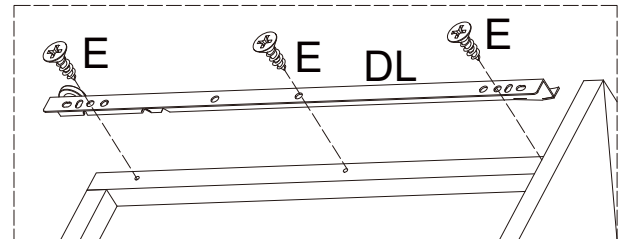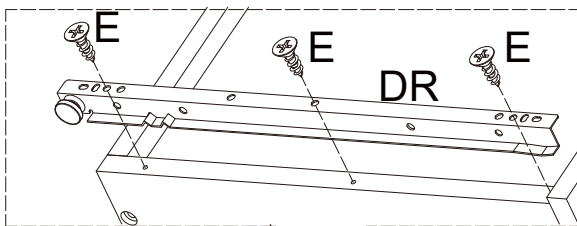

x4

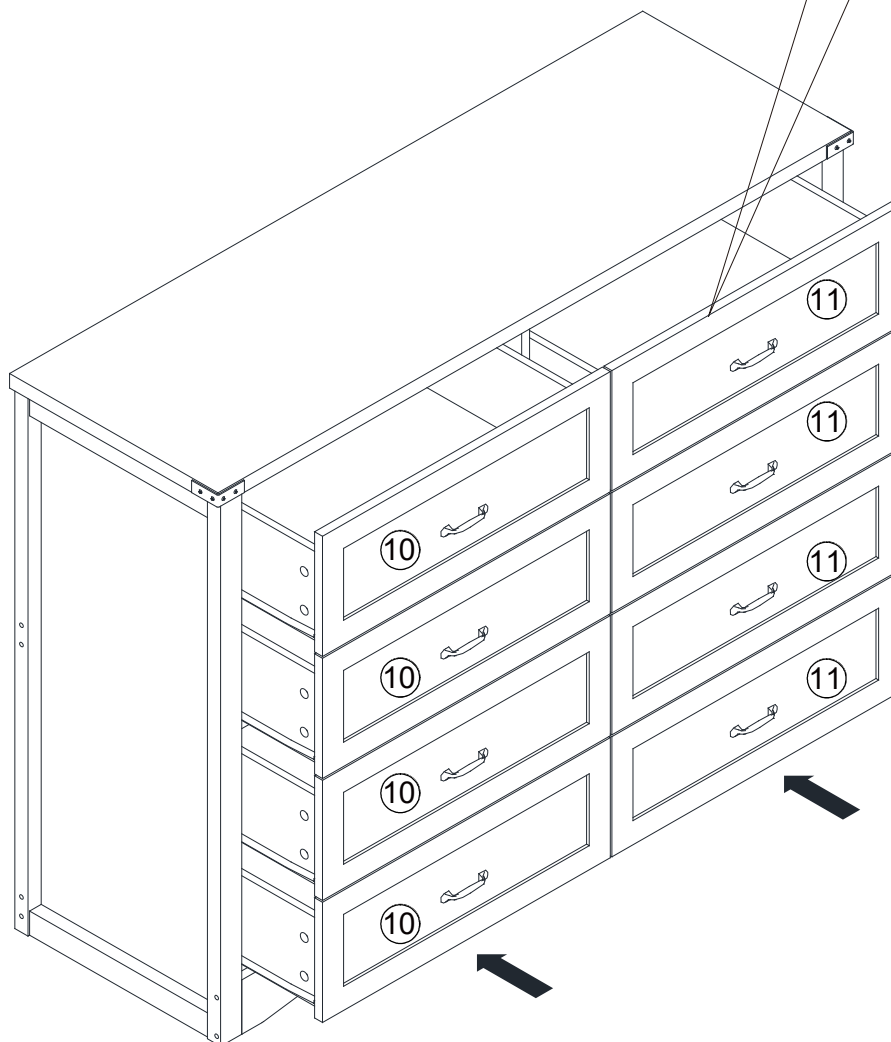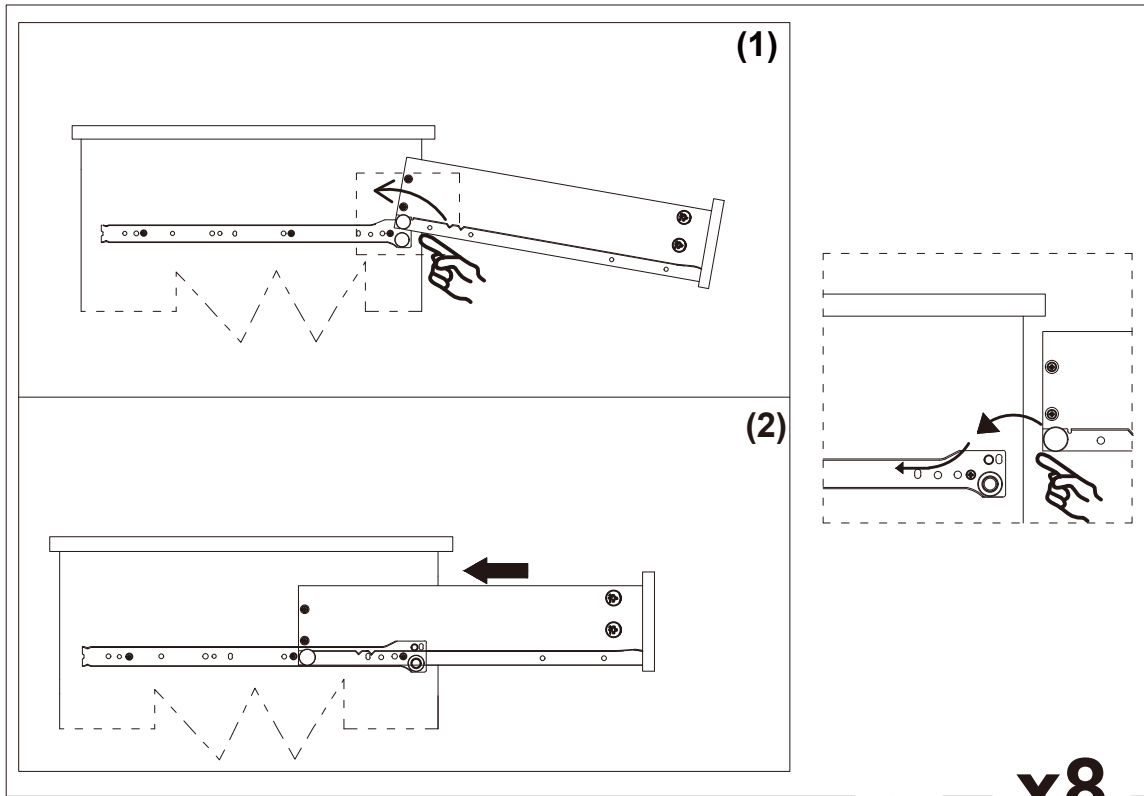

D x2



L x2



K1 x2



K2 x2




K2

K1

(1)x2

First fix the anti-rewind screw in the reserved hole of the product.


WALL

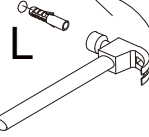

Then, put the expansion bolt into the hole

(4)x2

WALL

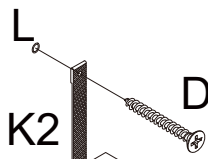

Finally, pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

(5)x2

WALL


+
drilling hole
Ø6x30mm



(3)x2

Then use a tape drill to make holes in the wall that are suitable for the product screws.

WALL

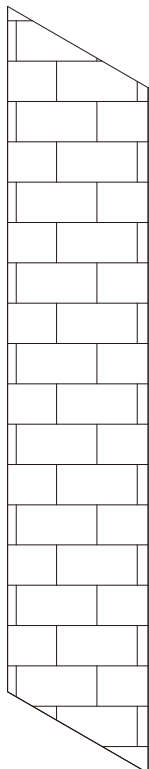

L

K2

D

K2

D

