


How to assemble your 86"-120" curtain rod for maximum length.


Can leave curtain rod in original two rod assembly if shorter length is desired.

4 Thread **Thin Rod** between **Thick Rod 1** and **Thick Rod 2**

1 Open box and remove all pieces

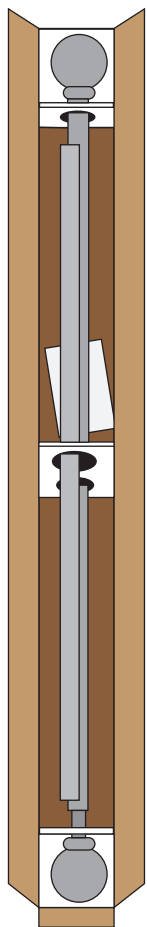

2
1. Thick Rod 1
2. Thick Rod 2
3. Thin Rod
4. Finial 1
5. Finial 2

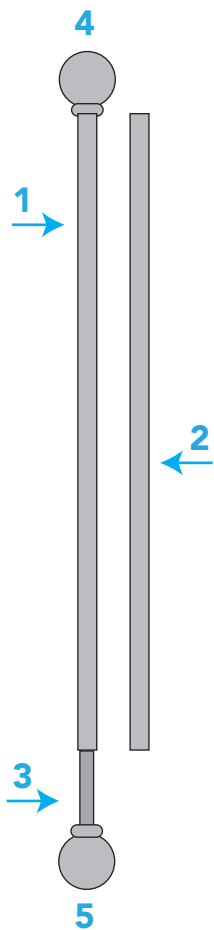

3 Unscrew **Finial 2** from **Thin Rod** and screw it onto **Thick Rod 2**

