Installation & Assembly

Notice:

1.Follow the installation instructions. Please confrm all accessories are preset before installation.

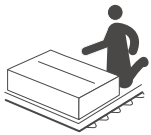
2. Do not fully tighten the screws during initial assembly. Fully tighten screws only once all pieces which are correctly assembled.

3. If you encounter any problems during installation, please contact our customer service.


4. Please unbox the item from the side with an open-label and put a carpet on the foor to avoid scratching it.










Recommended installers : 2








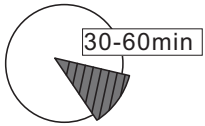
Put a carpet on the floor before unpacking





Estimate installation time: 30 minutes

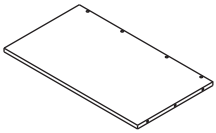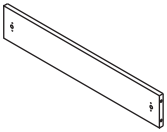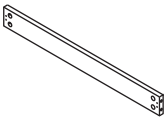1		x1
2		x1
3		x1
4		x1
5		x1
6		x1
7		x1

8		x1
9		x1
10		x1
11		x1
12		x1
13		x1

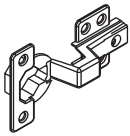
A	 Ø6x26mm	x44
B	 Ø15x9mm	x48
C	 Ø3.5x14mm	x52
D		x4
E		x4
F		x4
G		x4
H		x1

I		x2
J		x2
K		x8
L		x1


Use the Cam Lock and Eccentric Wheel

ECCENTRIC WHEEL

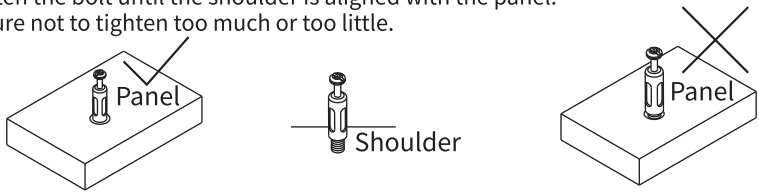
Tighten the bolt until the shoulder is aligned with the panel.
Be sure not to tighten too much or too little.



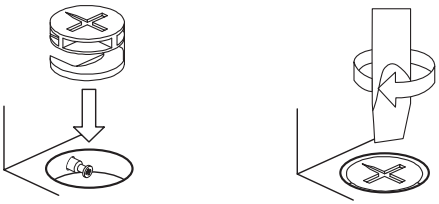The pre-inserted nut should align with the center of the cam lock when joining two panels. The cam lock should be inserted before the eccentric wheel.



Turn the cam lock clockwise to tighten

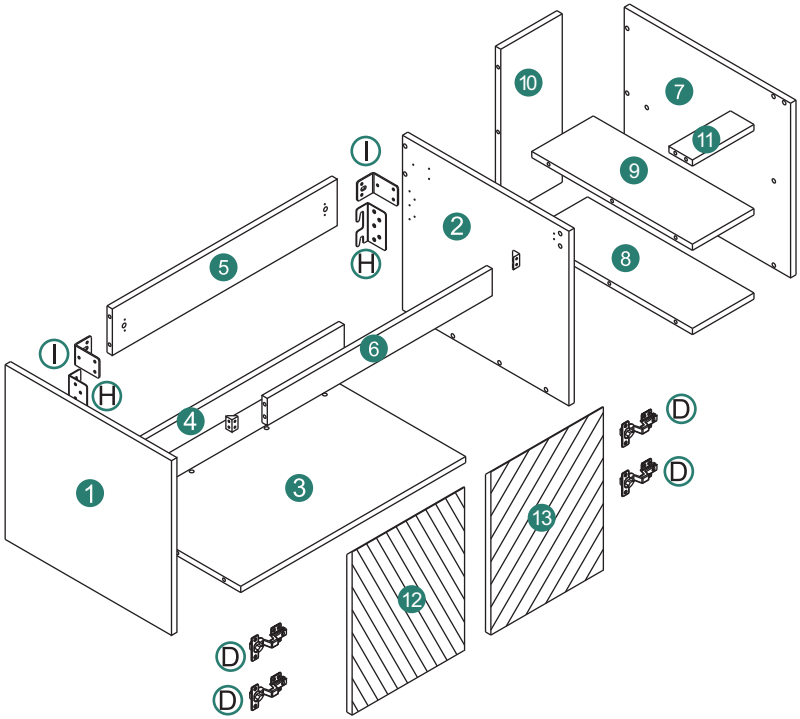


1

1 1pc 2 1pc 3 1pc 4 1pc 7 1pc 8 1pc 10 1pc

A 44pcs B 4pcs

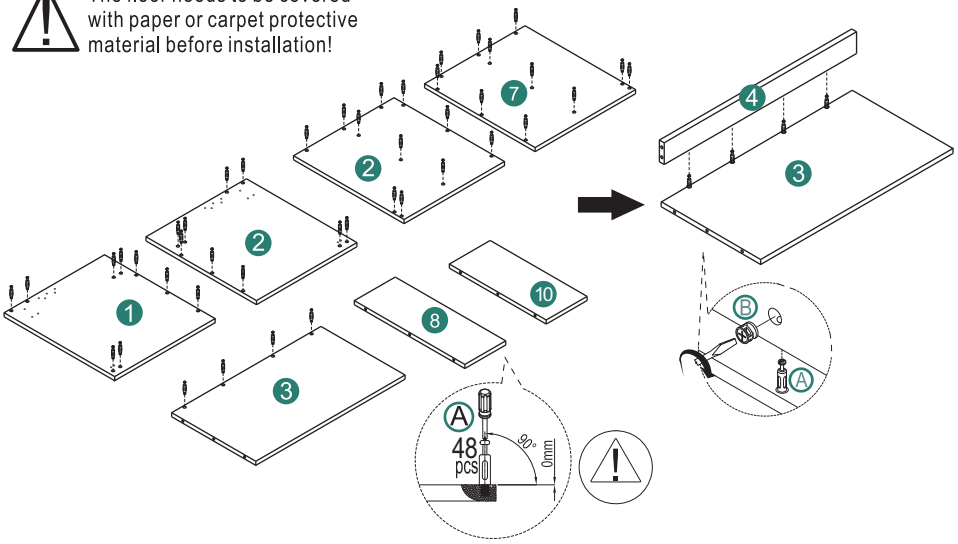
The floor needs to be covered with paper or carpet protective material before installation!




2

1 1pc 2 1pc 5 1pc 6 1pc 7 1pc 8 1pc 9 1pc 10 1pc 11 1pc

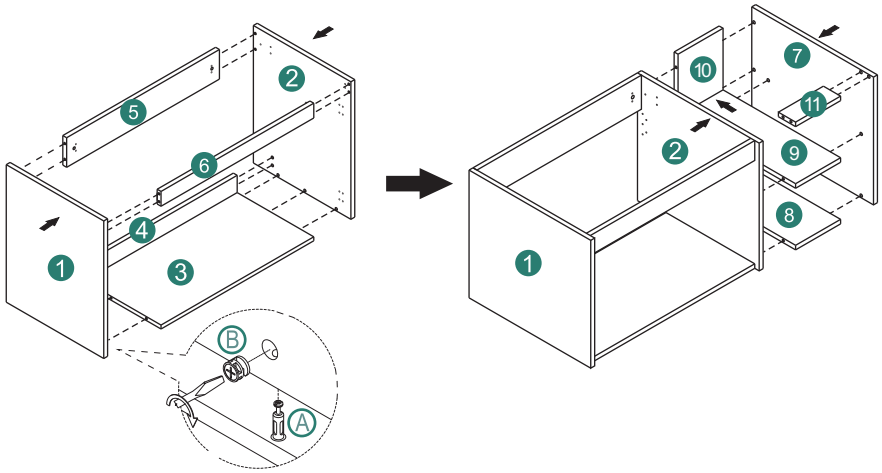B 44 pcs





3

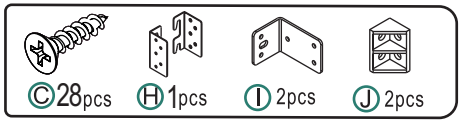
C 28pcs
H 1pcs
I 2pcs
J 2pcs


E
5
C
H
C
J
C
C
1

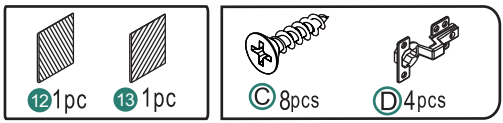4


12 1pc
13 1pc
C 8pcs
D 4pcs

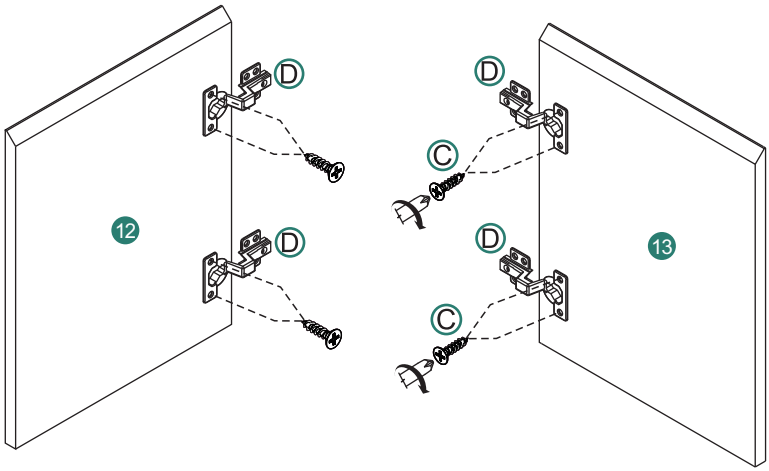

D
12
D
D
C
D
13
C

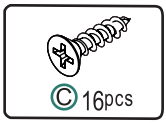
5



6




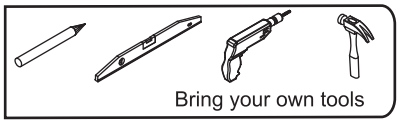

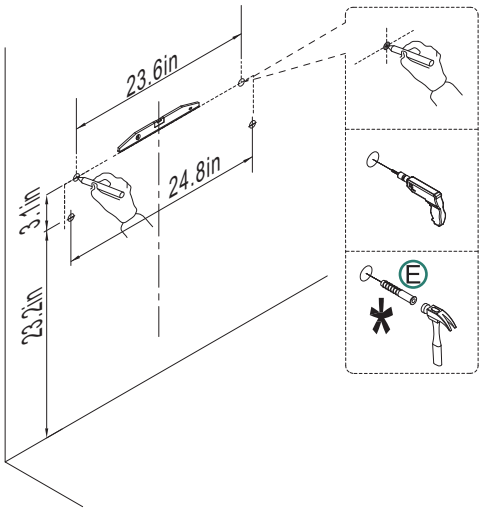

7



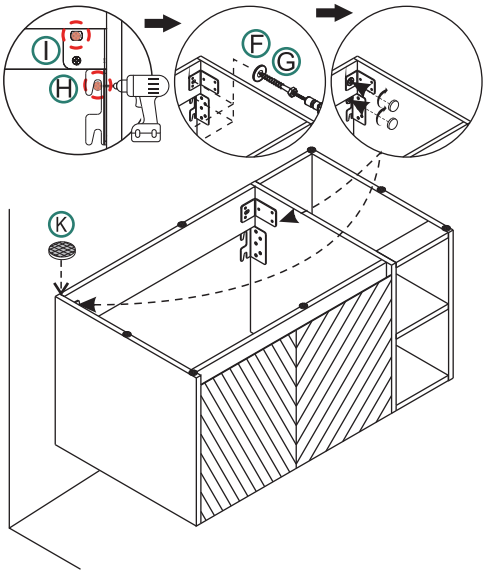

8

