#### **FIVE YEAR WARRANTY**

We warrant: their Furniture Products to be free from manufacturing and workmanship defects for five years from date of purchase.

In the event of a missing or damaged part, please email us

Upon review of the information, we will contact you to notify you if the part is covered under warranty.

This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state.

## **AWARNING** Safety Information

- Read all of the instructions in this manual before you begin assembly. Failure to do so may result in faulty assembly and potential injury!
- Check that you have all required parts: Do not attempt to assemble if any parts are missing. Call

# **BARSTOOL**

# WEIĞHT LIMIT 250 LBS. ASSEMBLY MANUAL



# BARSTOOL


Labeled Diagram

#### Parts List per Barstool:

- · Leg (4, connected)
- Foot Rest
- Seat

Tools Required:
• Rubber Mallet

- Utility Knife

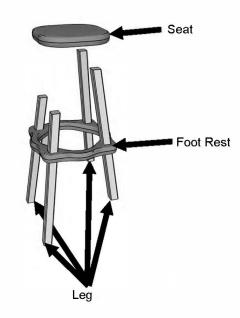


### Safe Installation

### **AWARNING**

- Read all of the instructions in this manual before you begin assembly. Failure to do so may result in faulty assembly and potential injury!
- Check that you have all required parts: Do not attempt to assemble if any parts are missing. Call
- Use product for intended purpose only: DO NOT stand on furniture
- Double check after installation: Before using the product, after assembly and installation, review instructions and procedures again to make sure nothing has been overlooked


Retain this manual for future use

### **ASSEMBLY:**

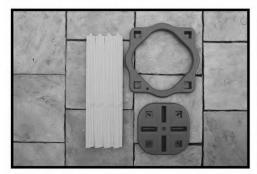




1. Using a utility knife, carefully separate the barstool legs. WARNING - Never cut towards yourself!

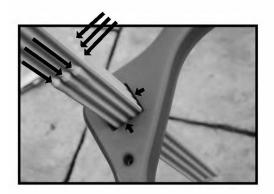



2. Place the barstool leg through the bottom of the foot rest such that the arrows molded into the bottom of the foot rest are pointing at the locking nubs on the barstool leg. Tap the footrest down until the arrows on the footrest meet the locking nubs on the leg. Repeat this step for all 4 barstool legs.

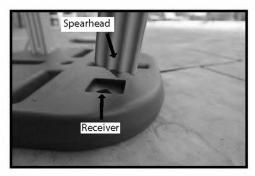



3. Place the seat upside down on the installation surface. Line the spearheads on the barstool legs with the receivers on the barstool seat. Hit the bottom of the barstool legs with the rubber mallet, engaging the legs into the seat. Refer to the image to the right most image to see the proper hole and lug location.