

Maintenance and Care

- Clean with a soft cloth. Use mild soap and water if needed.
- Do not use abrasive cleaners or harsh chemicals.
- Avoid prolonged contact with standing water or constantly wet soil.
- If the surface coating is scratched, touch up promptly with rust-resistant outdoor metal paint.
- At the end of the season or during harsh weather conditions, clean the trellis, allow it to dry completely, and store it indoors.
- Periodically check the trellis for stability as needed.

Warranty

Warranty: 3 Years Structural Guarantee

Exclusions: Damage caused by misuse, improper installation, or modifications is not covered.



**Gardening
Made Easier.
Anytime,
Anywhere.**

Contact Us



+1 (866) 597-1888



Vego Garden Academy



hello@vegogarden.com



vegogarden.com



vego_garden



Houston, TX



FlexGrow A-Frame Trellis ProMax User Manual


Models: VPSSATPMDG, VPSSATPMDG-2

Gardening Made Easier. Anytime, Anywhere.

Copyright © 2026 Vego





vegogarden.com

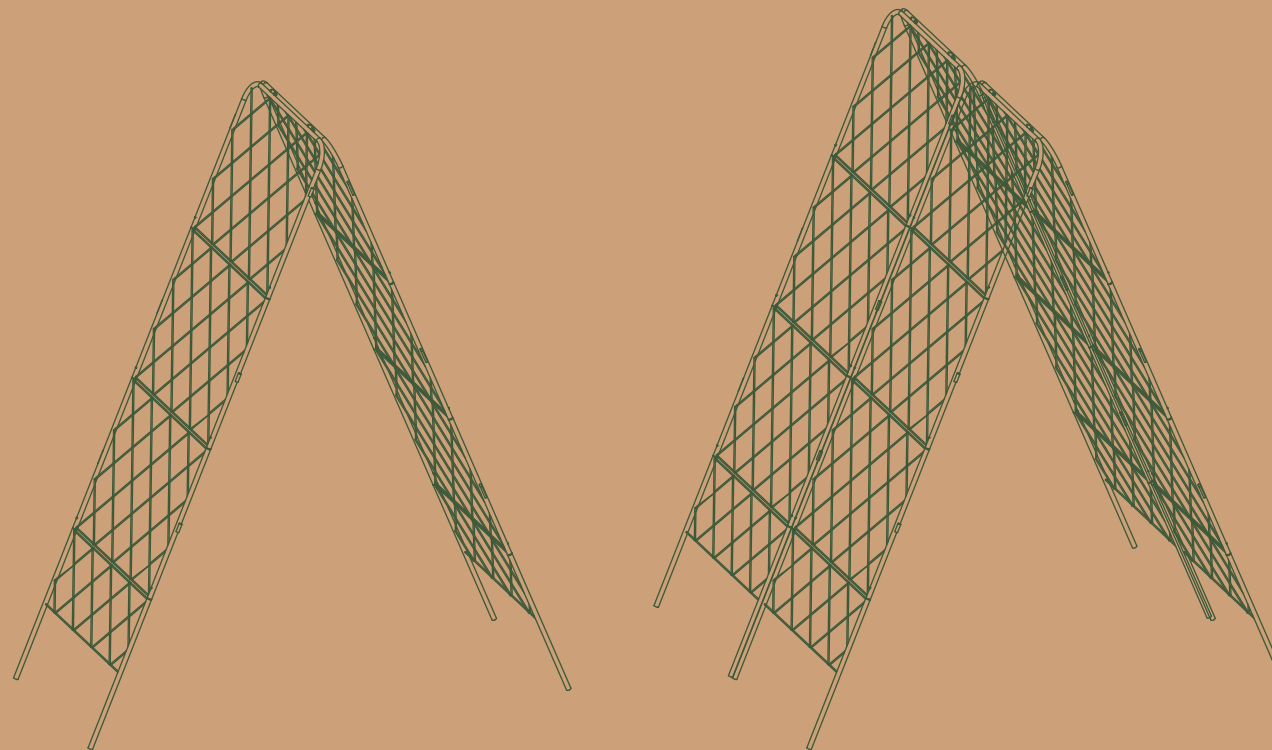

VEGOGARDEN.COM

V1.0 01/15/2026

Parts List

Models Part Name	VPSSATPMDG	VPSSATPMDG-2
 P1	2	4
 P2	4	8
 P3	2	4
 F1 R-shaped pin (Includes 2 spare parts)	4	6

Safety Precautions

This product may contain sharp corners and edges. To prevent injury:

- Handle with care at all times
- Wear gloves, closed-toe shoes & long pants when handling
- Work on a stable, clean surface away from children and pets
- Follow all instructions carefully and use tools only as directed



If you are unsure about any step, pause and seek assistance.




Installation Instructions

- 1 Assemble the Panels
- Assemble P1, P2, P2 and P3 panels in sequence. Insert P2 into P3 while pressing the button. Continue pushing until the button pops out of the hole to lock the connection as shown in the diagram. (The installation method for other panels is the same.)

Note: Make sure each panel is fully inserted for a secure fit.

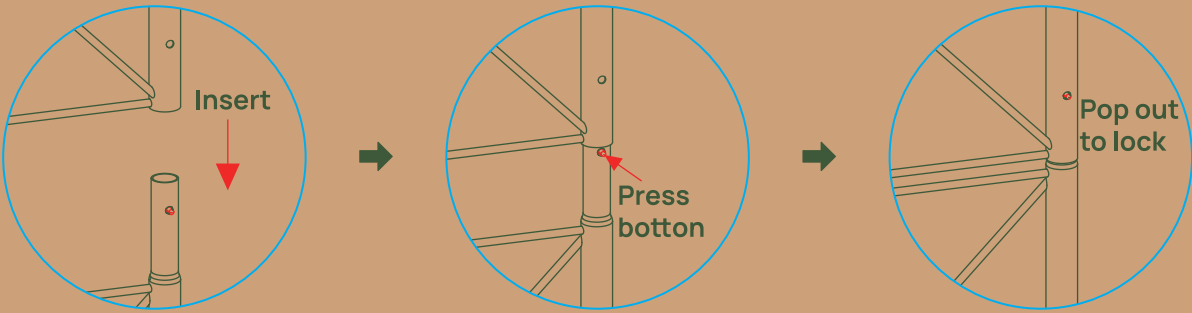
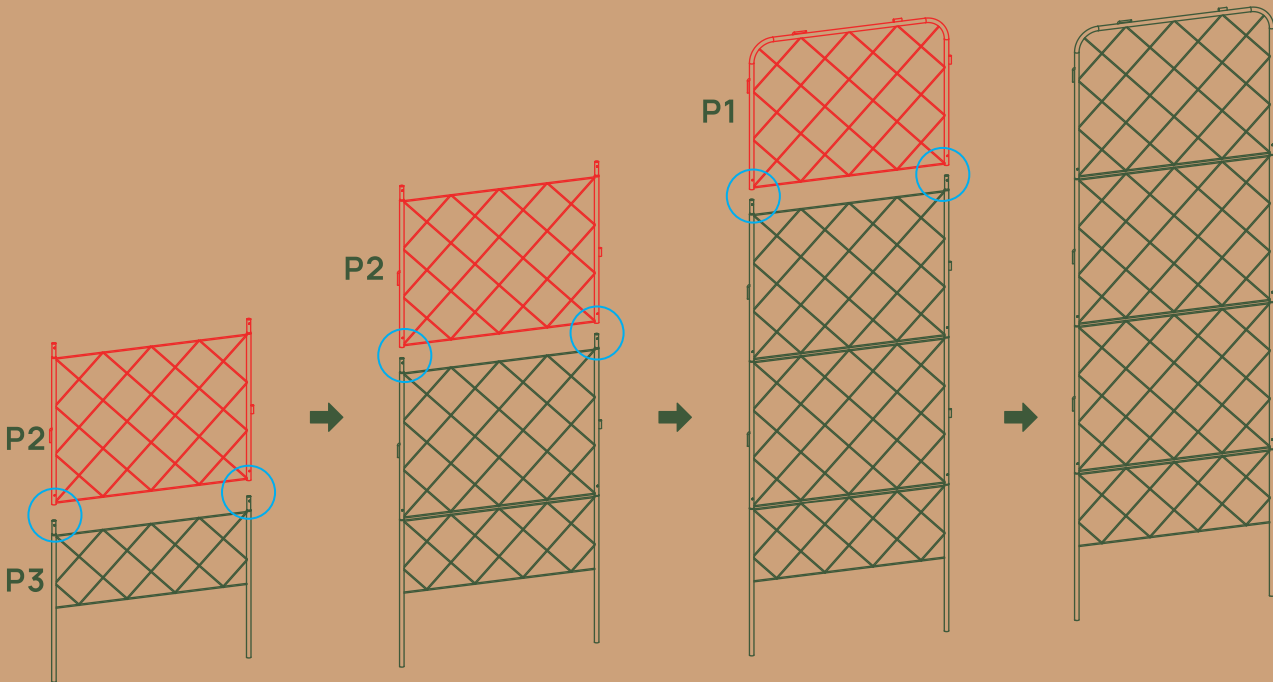


If a lower height is desired, you may assemble P1, P2 and P3 panels together instead.

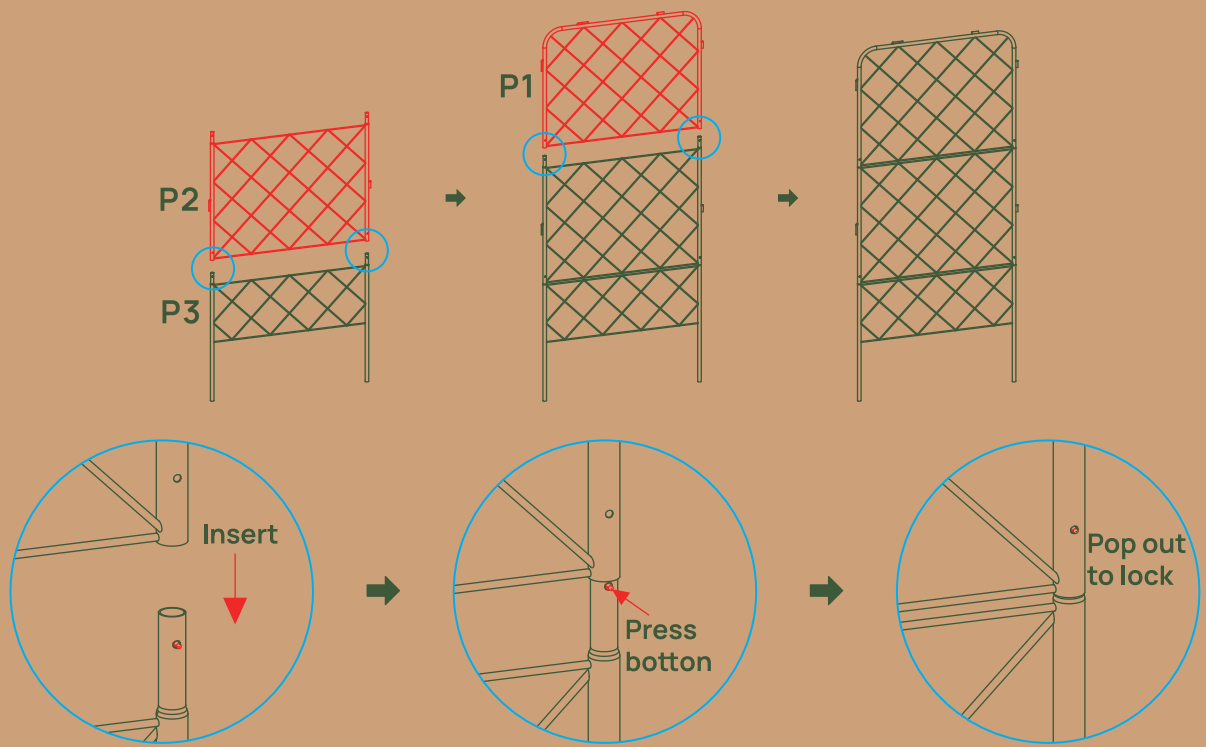


3 Lift the assembled trellis into the upright position.


Note: The locking stops are directional. If the trellis can't be lifted smoothly, flip the entire assembly over, then lift again.

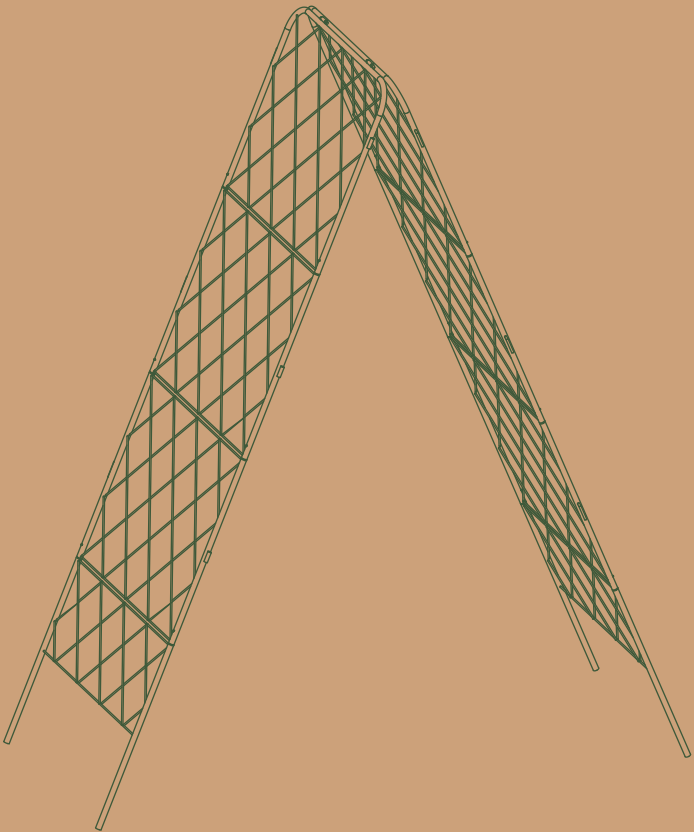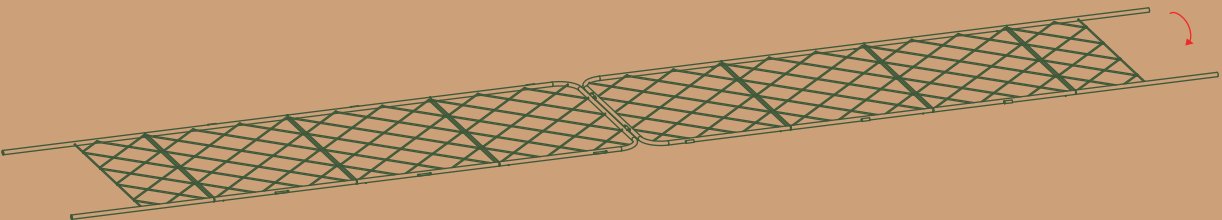

2 Lay the assembled panels flat on the ground, with the top ends facing each other as shown in the diagram. Align the L-hooks with the sleeves and insert them fully.

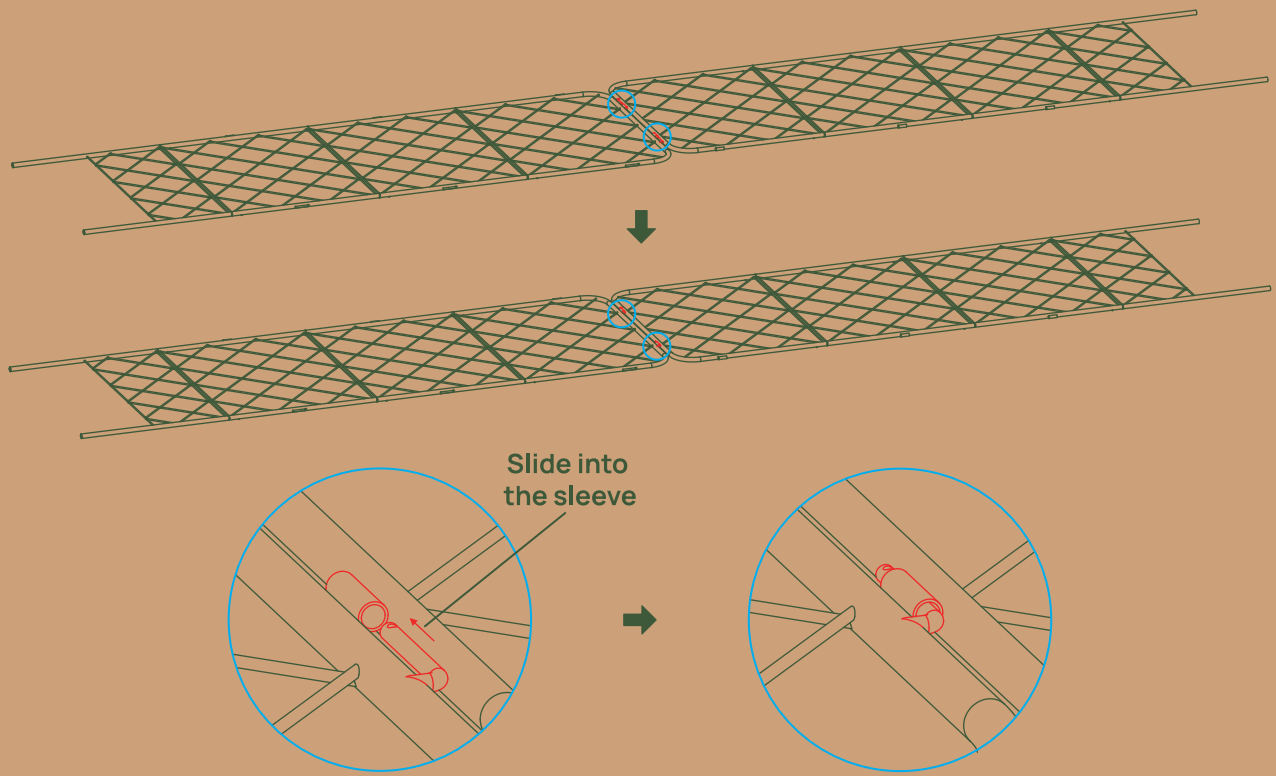

- 4** Lay the assembled A-frame trellis on its side as shown in the diagram. Insert the F1 R-shaped pin into the hole above the L-hook at the top to prevent the trellis from coming loose.

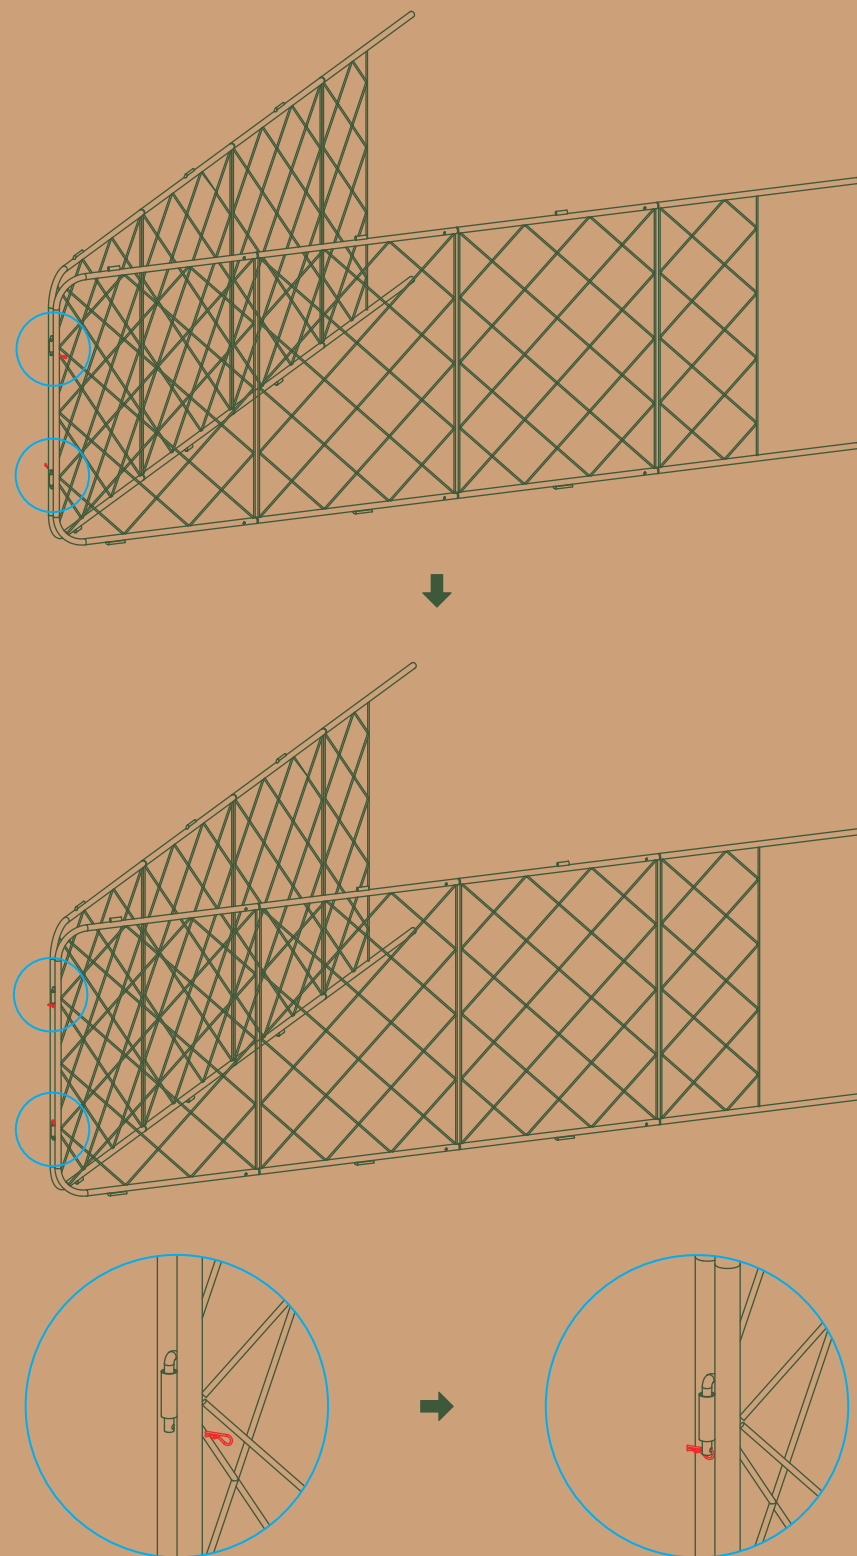

Note: Ensure F1 is fully inserted until the large ring is completely engaged with the pin.

- 5** For side-by-side installation, place two trellis units next to each other on the ground as shown in the diagram. Align the L-hooks with the sleeves between the trellises and insert them fully. Lift the entire assembly upright to complete installation.

