

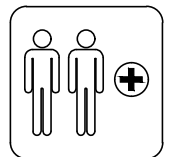
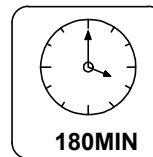
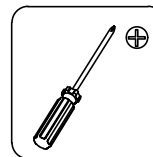
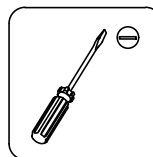


HLG187


Version:1.0

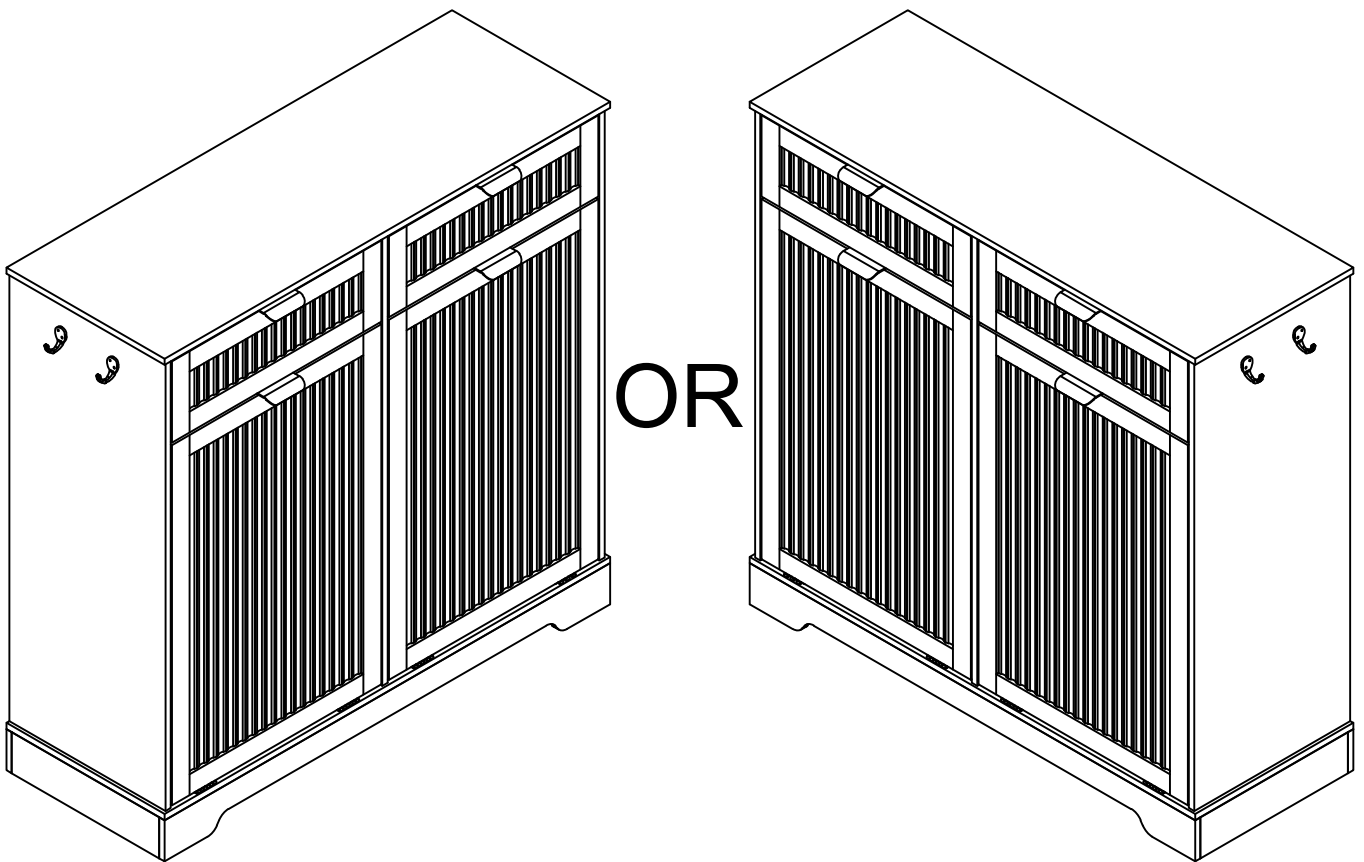


EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

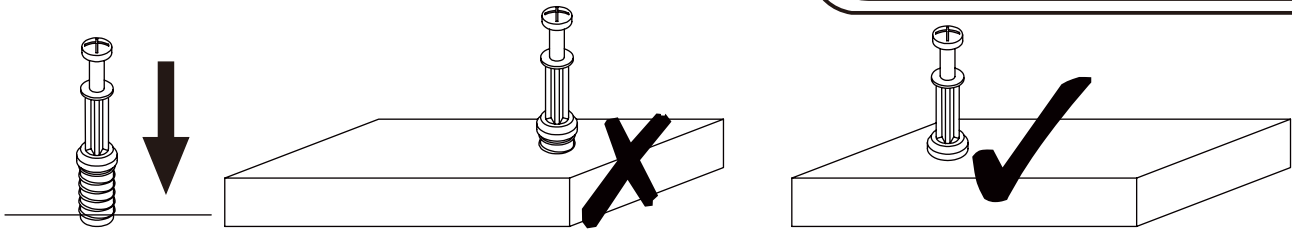


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

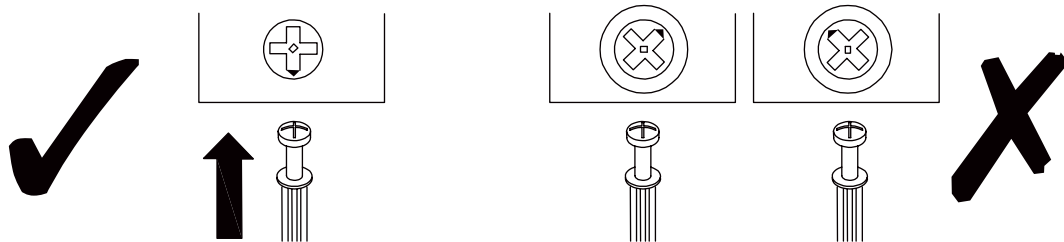











EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.










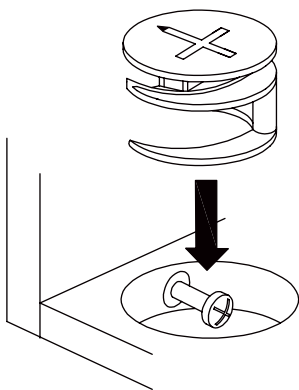





EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.



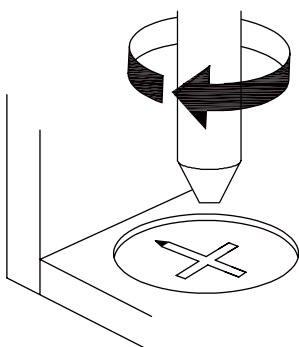


EN_Turn cam lock clockwise to tighten.

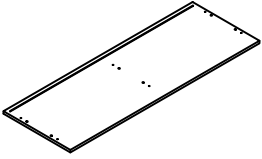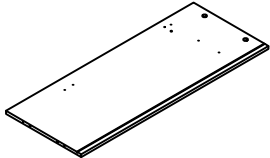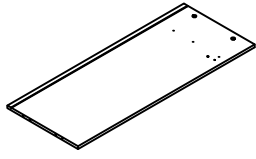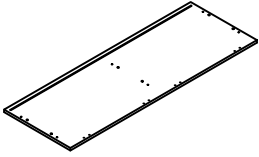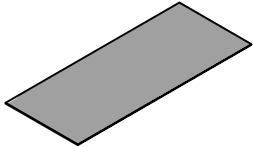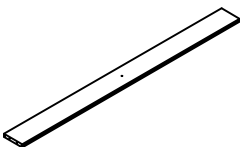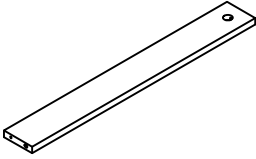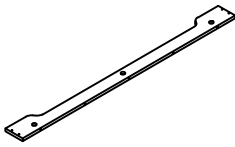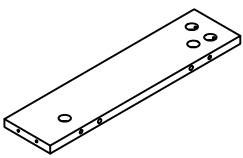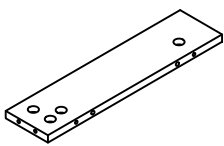
NO.	PARTS	QTY	SPARE
①		x1	
②		x1	
③		x1	
④		x1	
⑤		x2	
⑥		x1	
⑦		x1	
⑧		x1	
⑨		x1	
⑩		x1	

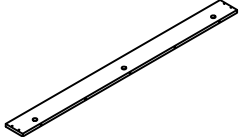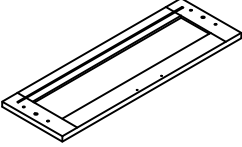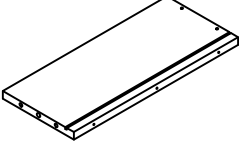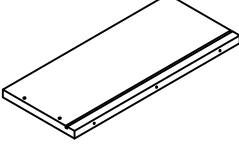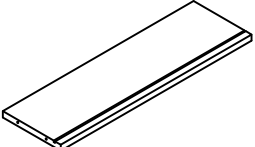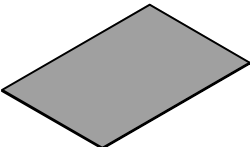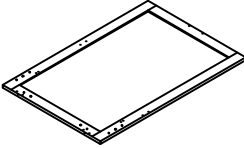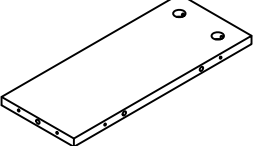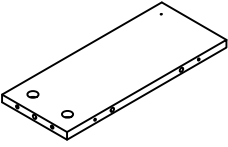
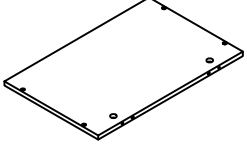
NO.		QTY	SPARE
⑪		x1	
⑫		x2	
⑬		x2	
⑭		x2	
⑮		x2	
⑯		x2	
⑰		x2	
⑱		x2	
⑲		x2	
⑳		x2	

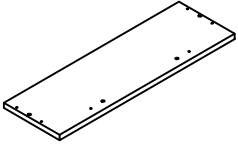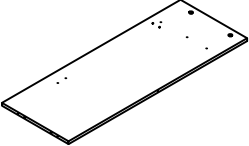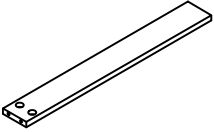
NO.		QTY	SPARE
②1		x2	
②2		x1	
②3		x1	
	 Hardware Kit	x1	

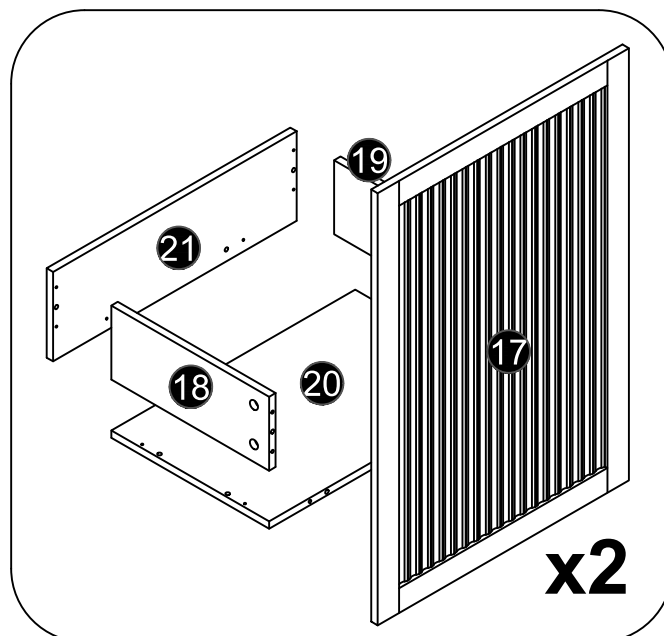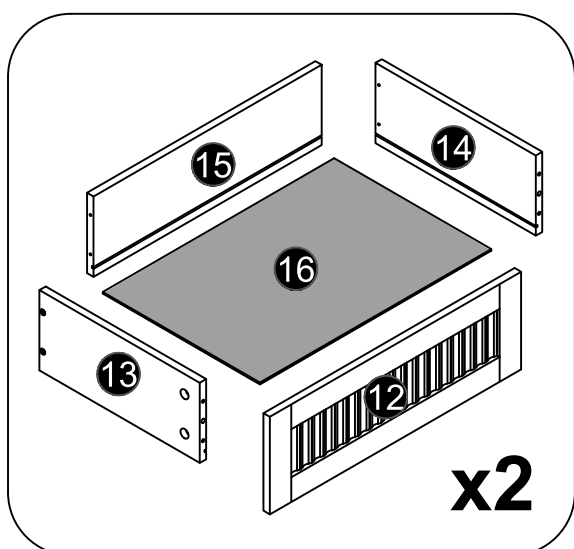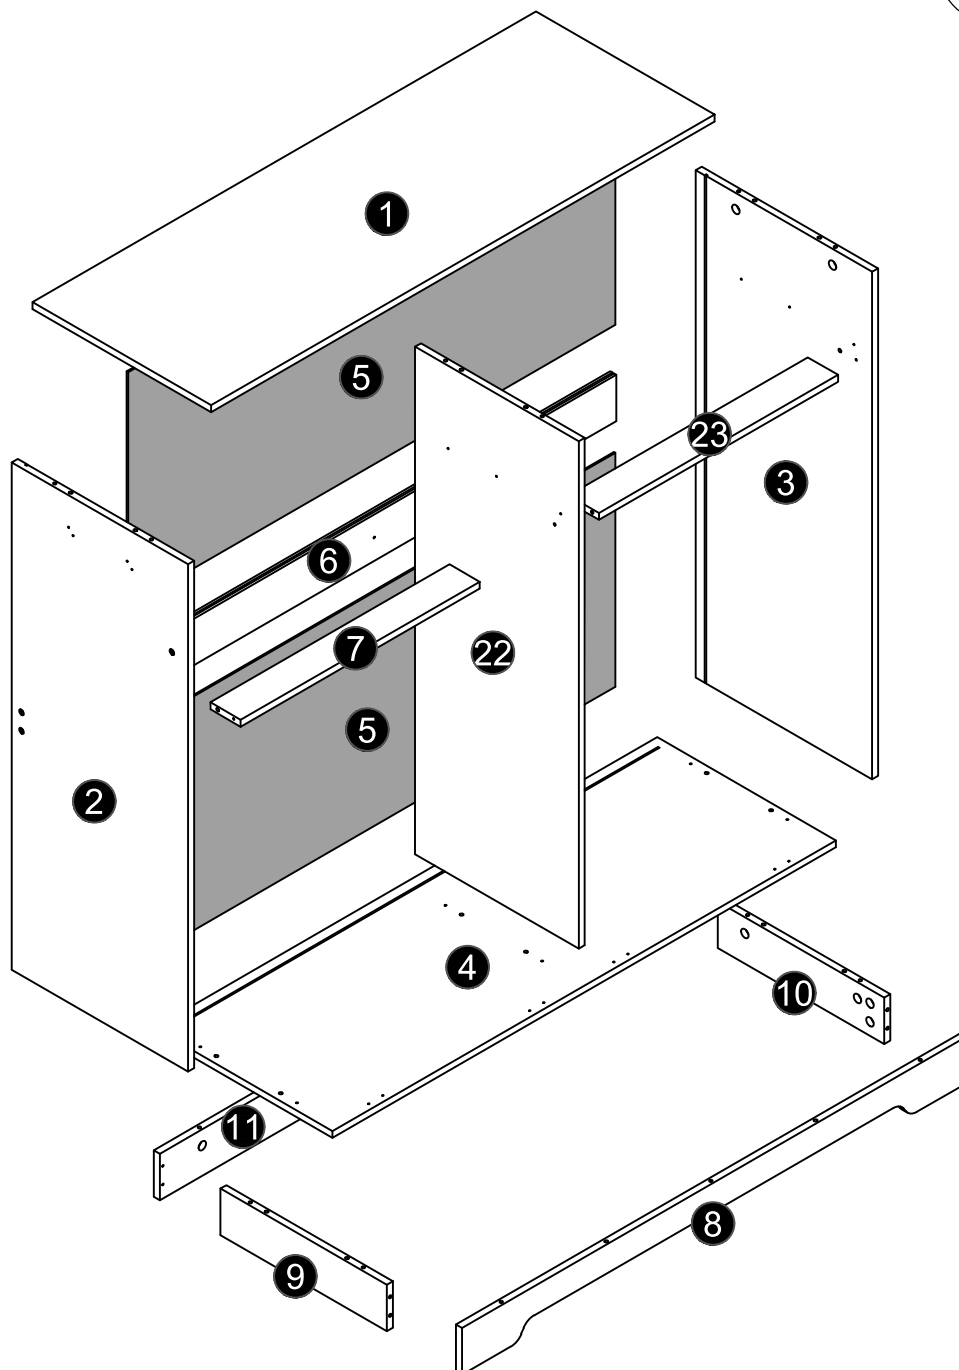

A x43 Ø6x35mm +3(spare)	B x43 Ø15x10mm +3(spare)	C x50 Ø6x30mm +3(spare)	D x47 Ø4x35mm +3(spare)	E x74 Ø3.5x12mm +4(spare)	F x4 F-1 F-2
G x2	H x4	I x4	J x8 Ø3x16mm +1(spare) J-1 J-2	K x10 +1(spare)	L x2 Ø6x30mm
M x2 Ø4x14mm M-1 M-2	N x2 N-1 N-2	O x2			
CL x2 L300mm	CR x2 L300mm	DL x2 L300mm	DR x2 L300mm		

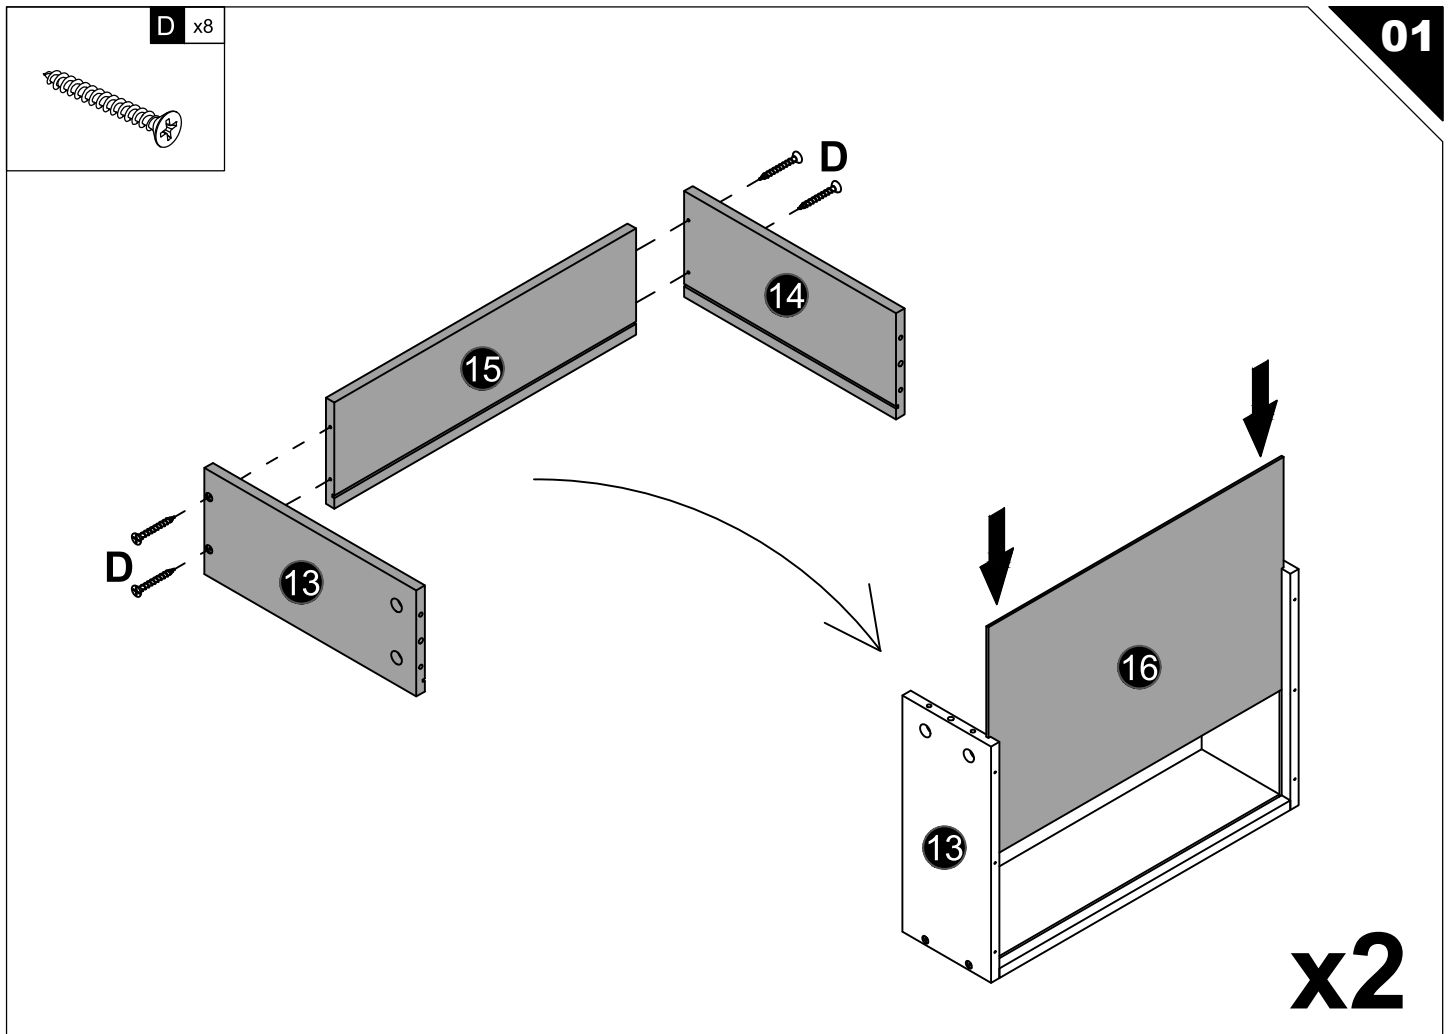

A x8	B x8	C x4	E x12	F x2
				 F-1  F-2
DR x2	DL x2			
				

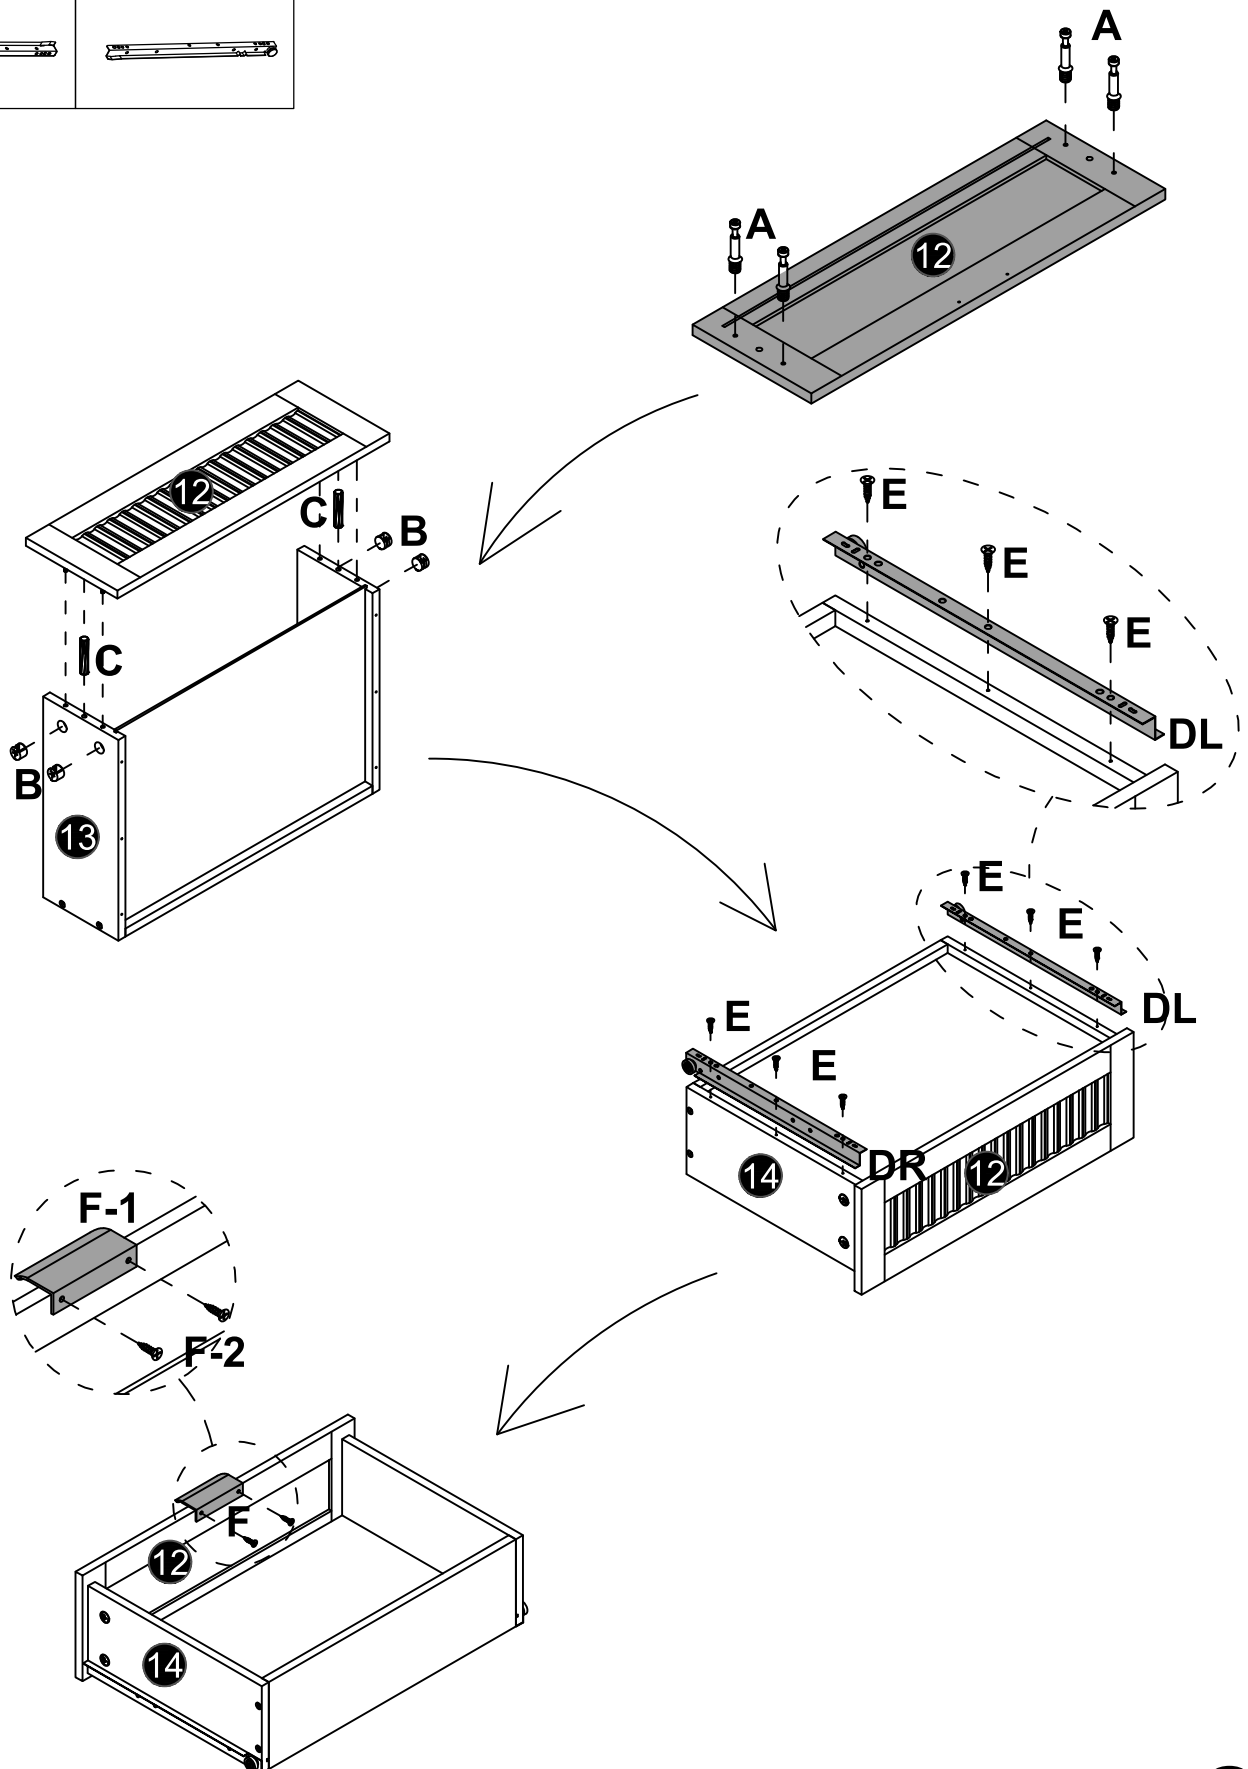



x2

E x5

CL x1





G x1

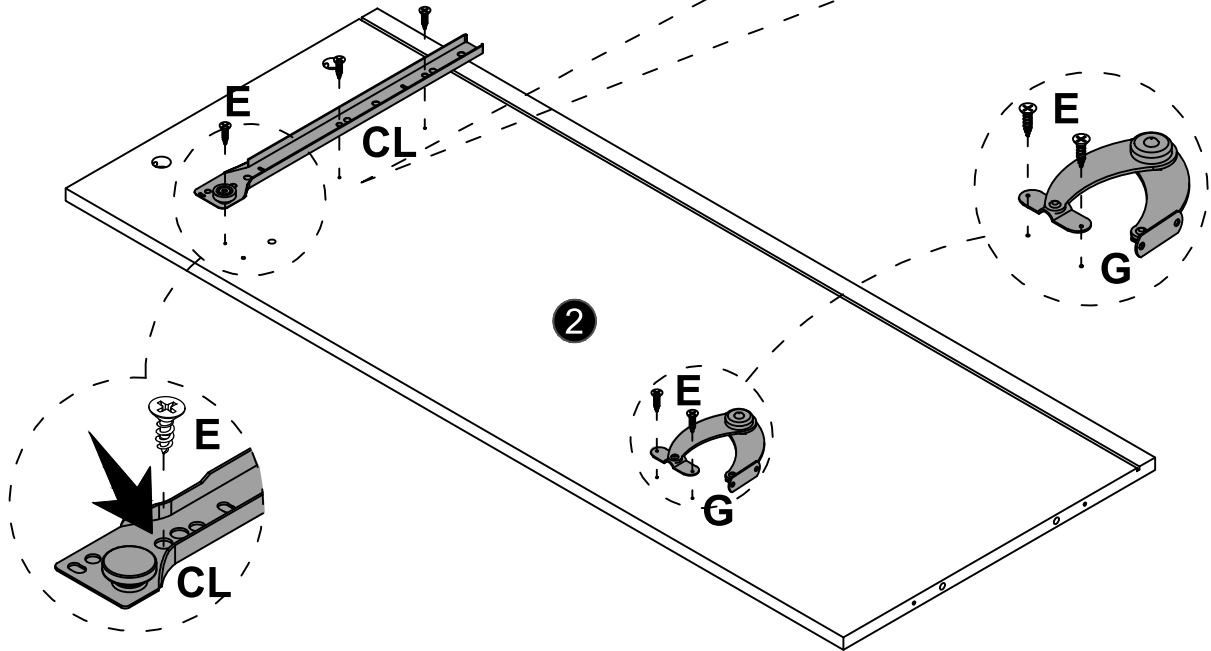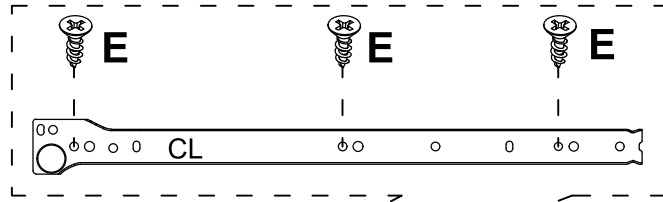

E x3

CR x1

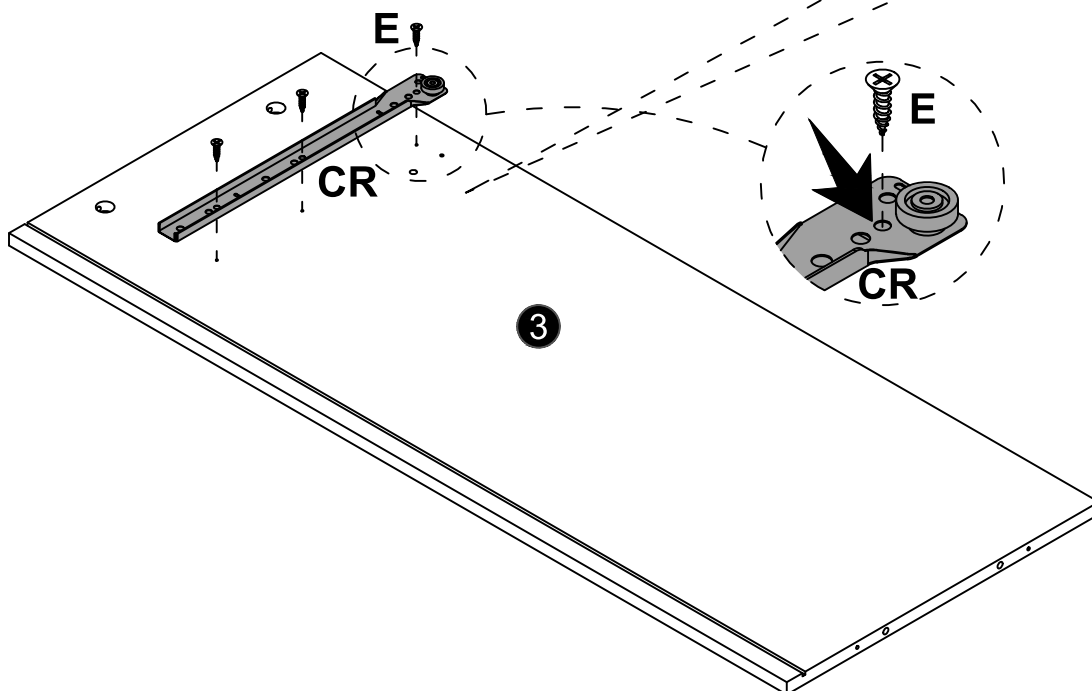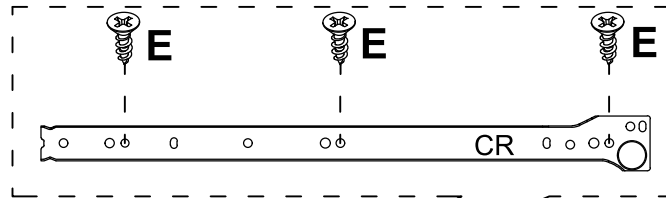




A x3

E x8


G x1

CL x1



CR x1

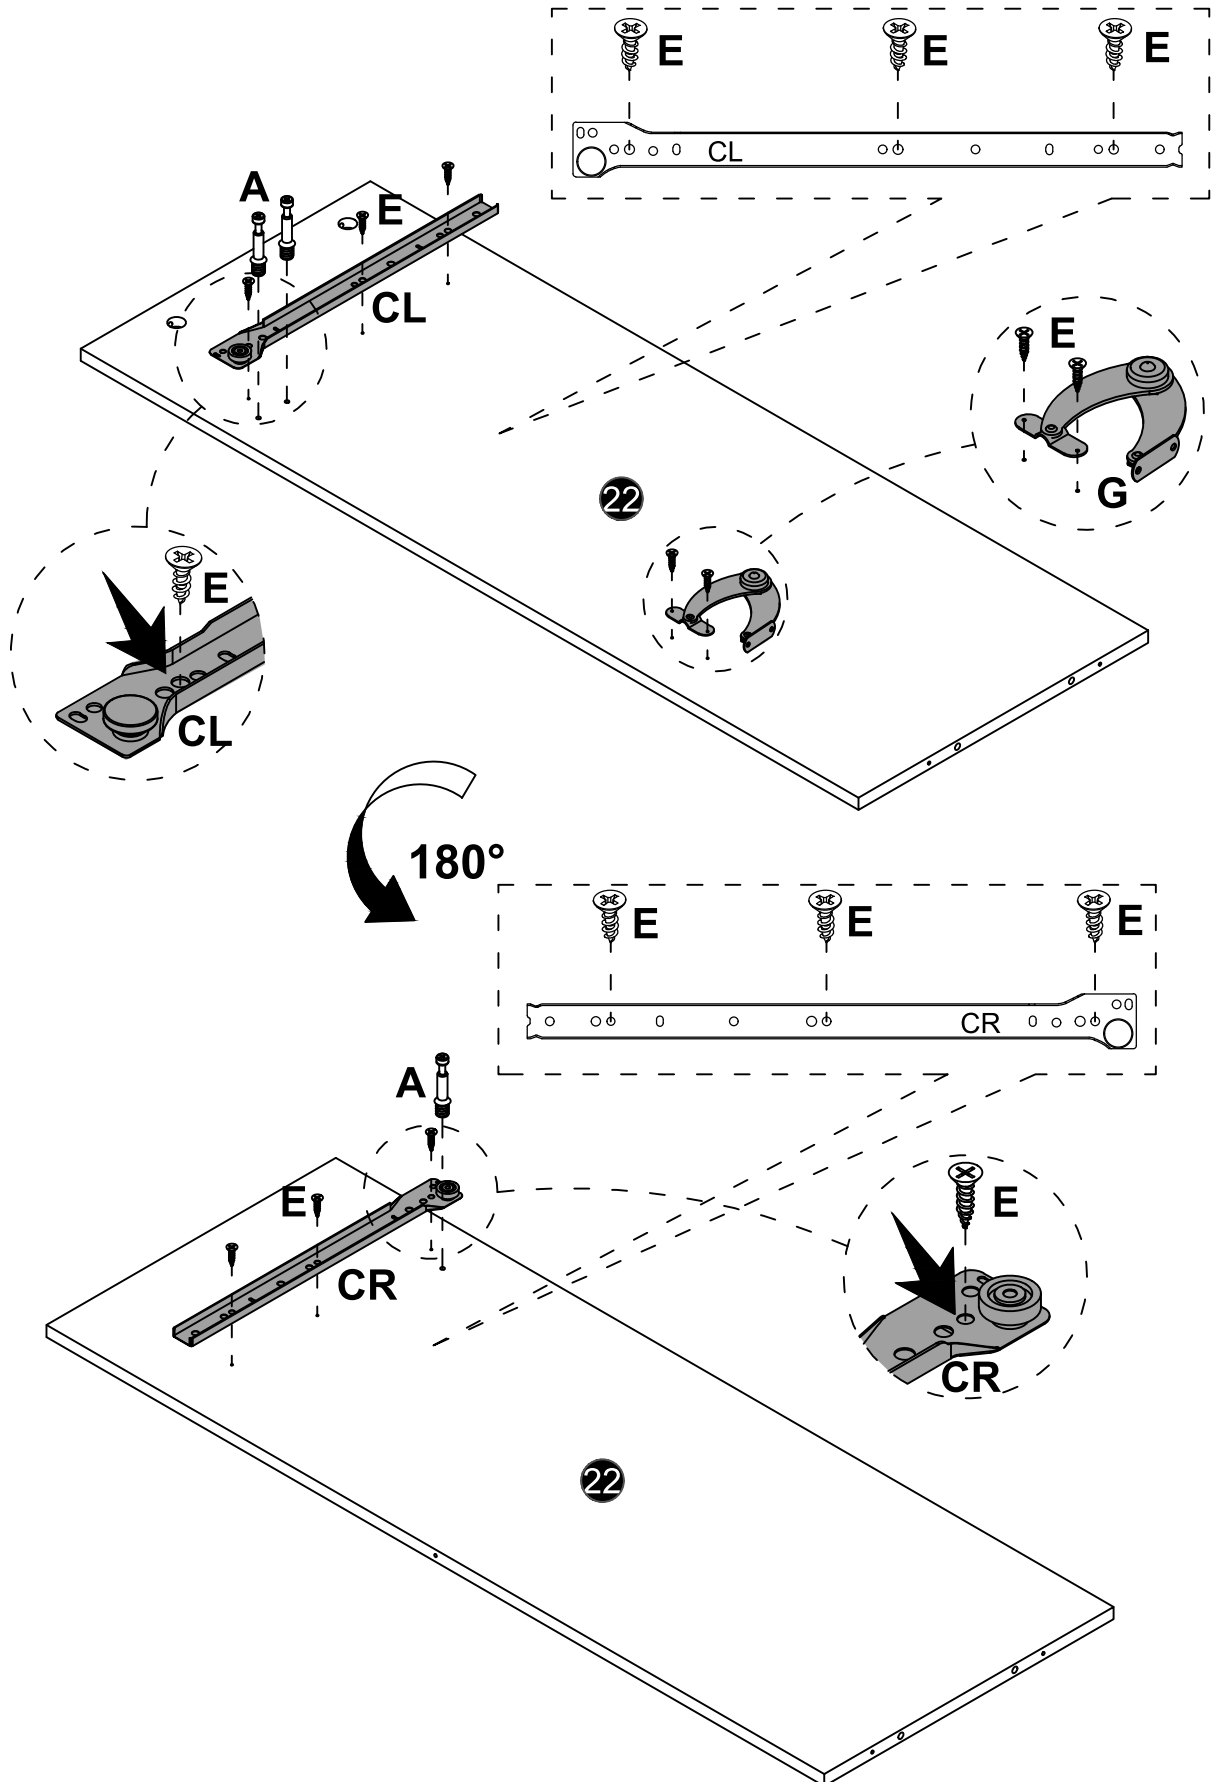

C x1




D x1

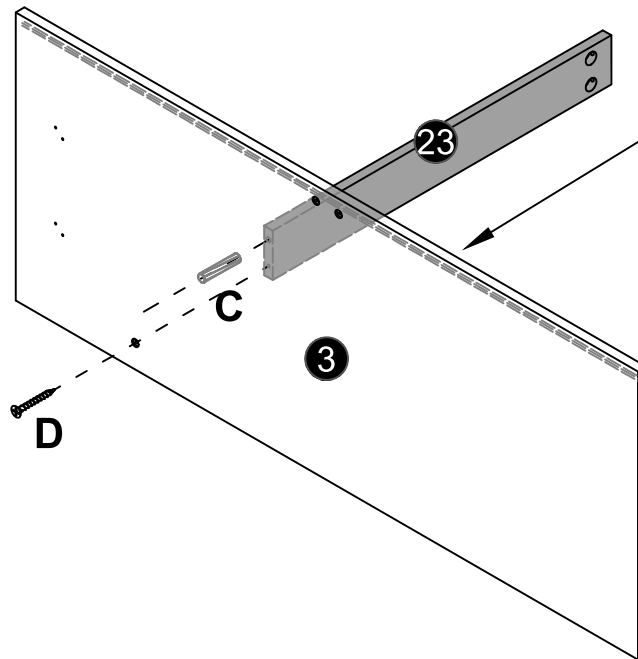

Pay attention to the direction of the back panel groove.



B x2

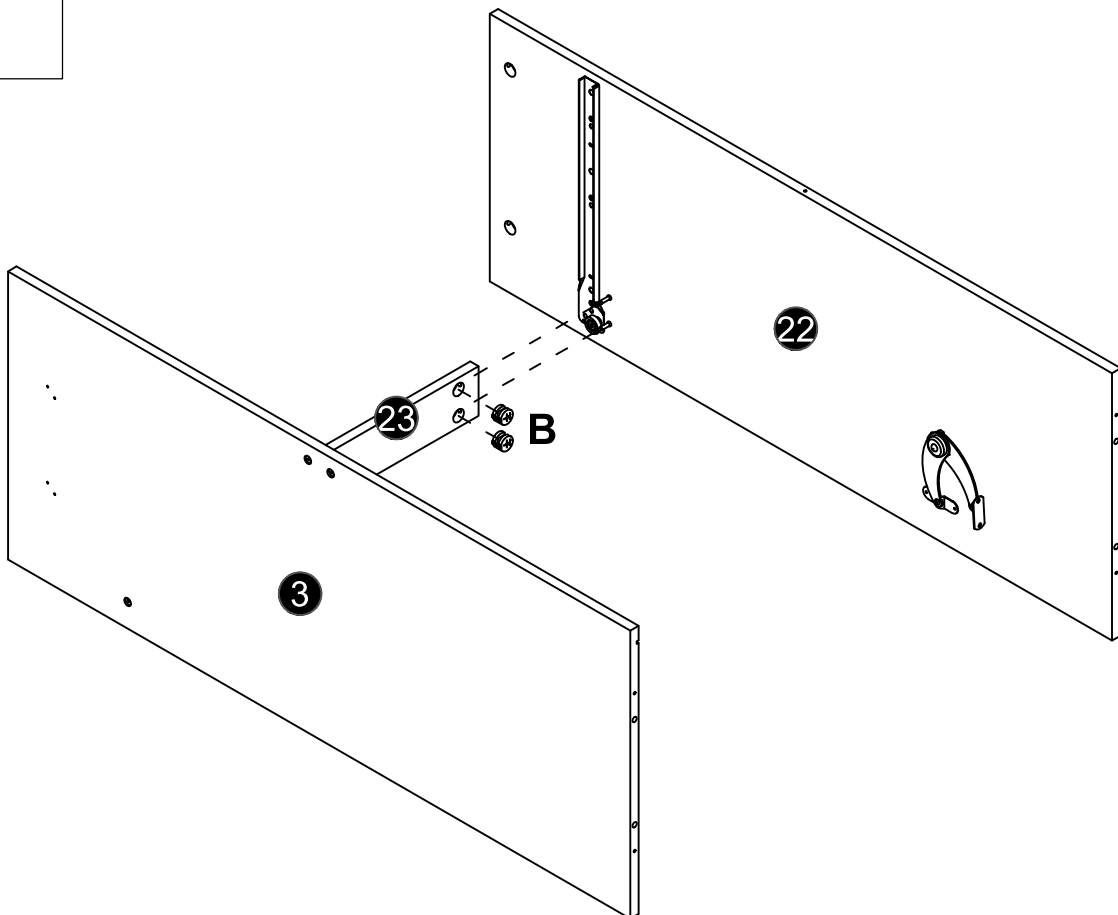

B x1





D x3

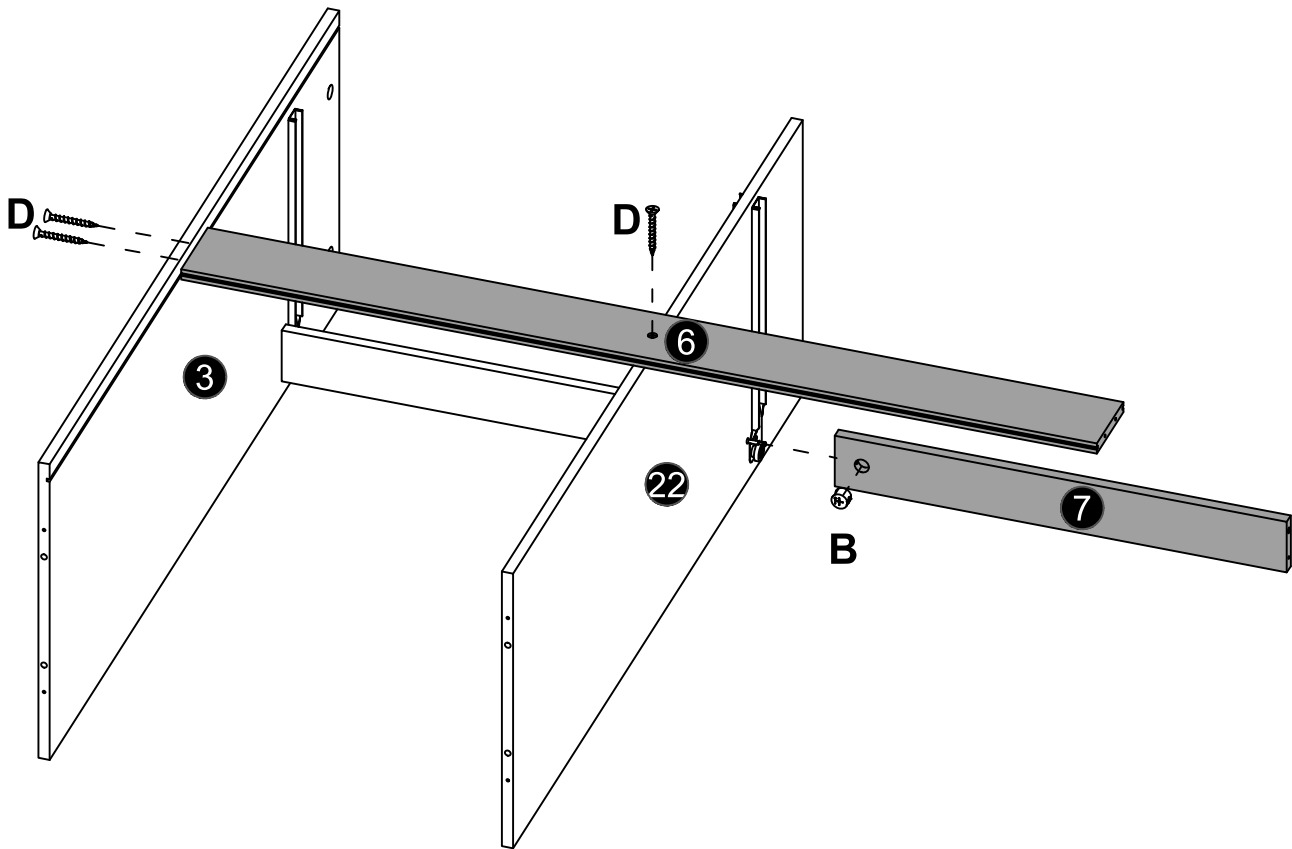



C x1




D x3

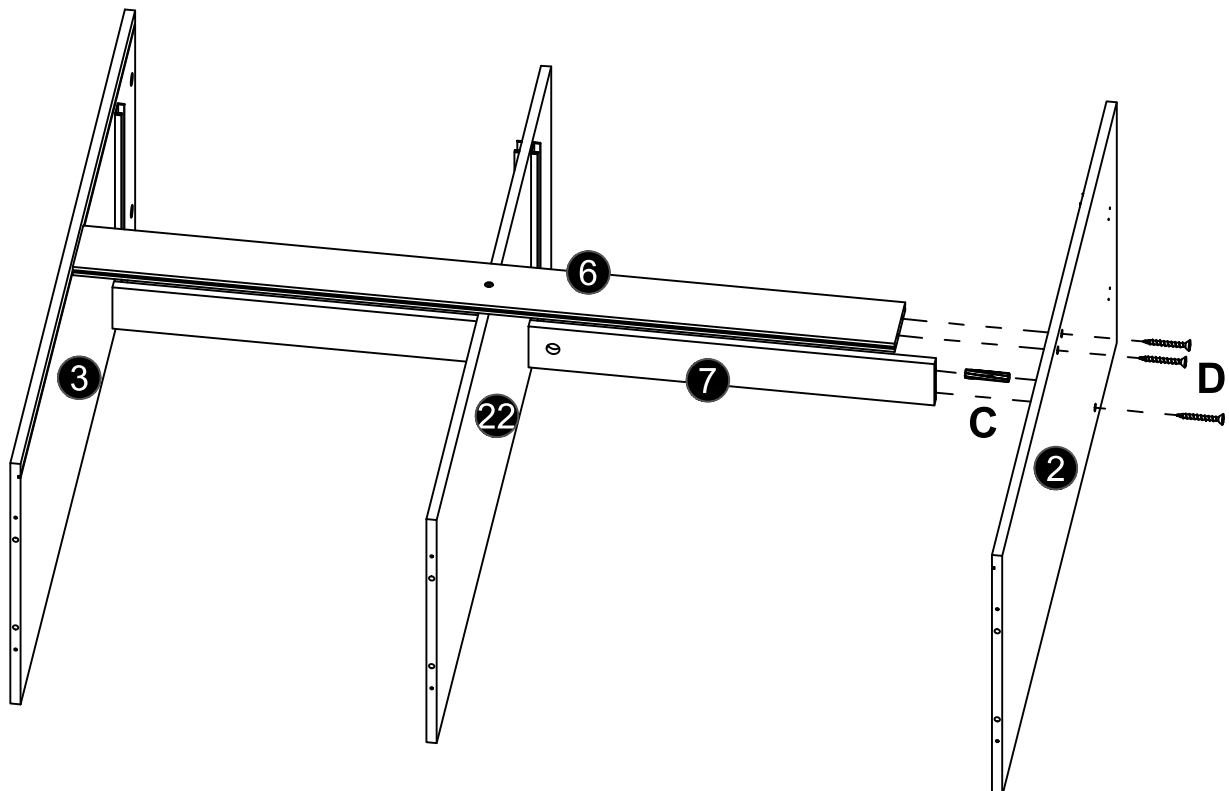


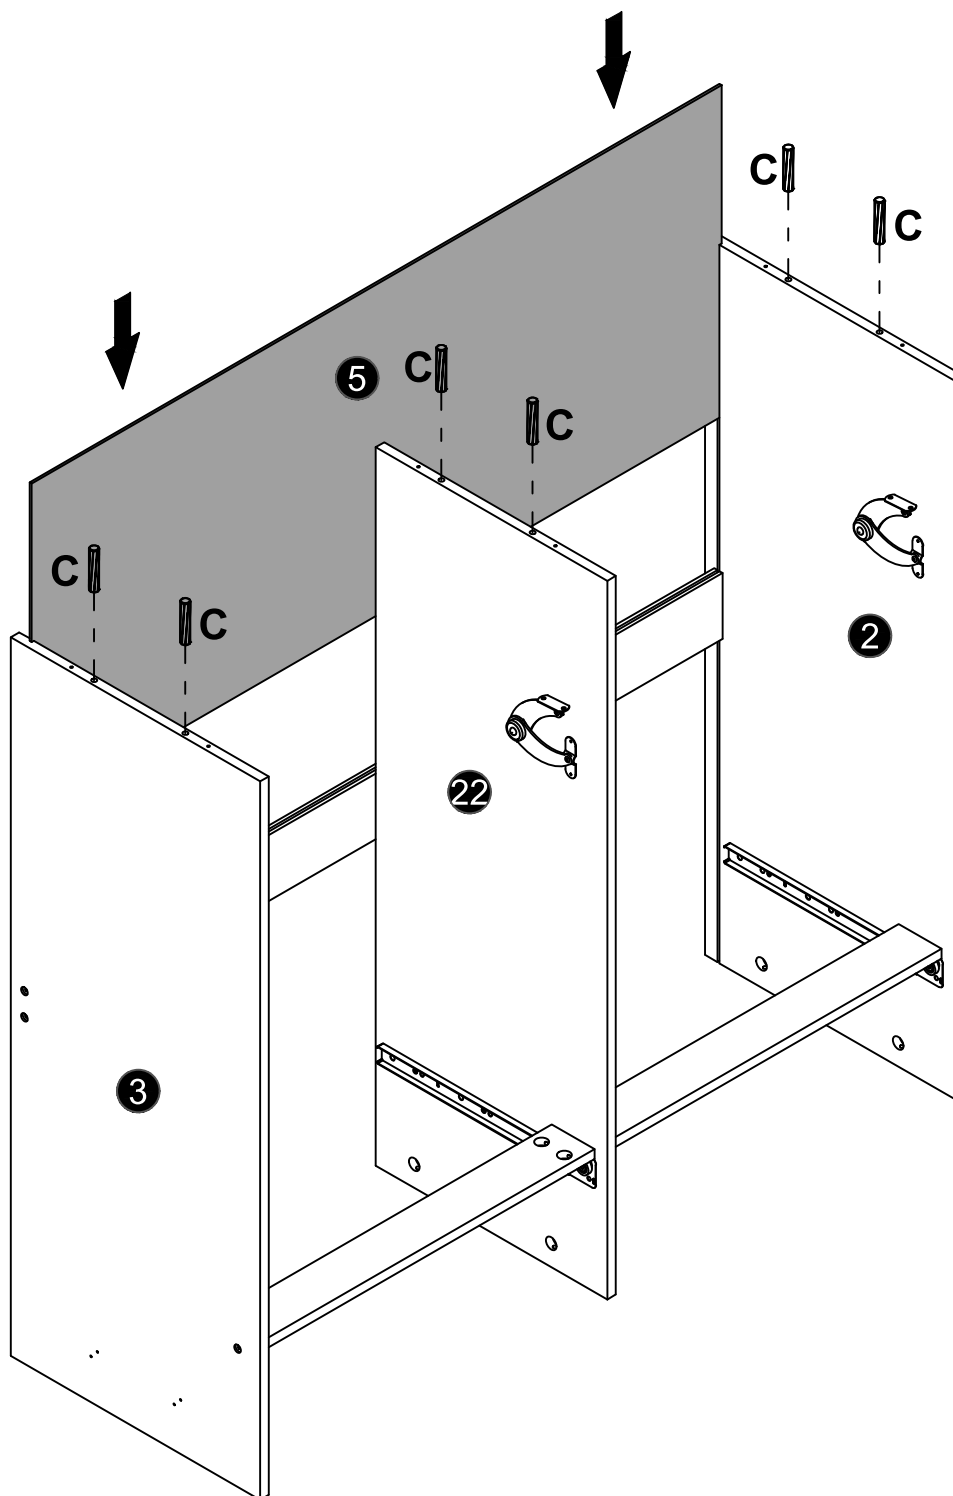





Pay attention to the
direction of the
back panel groove.

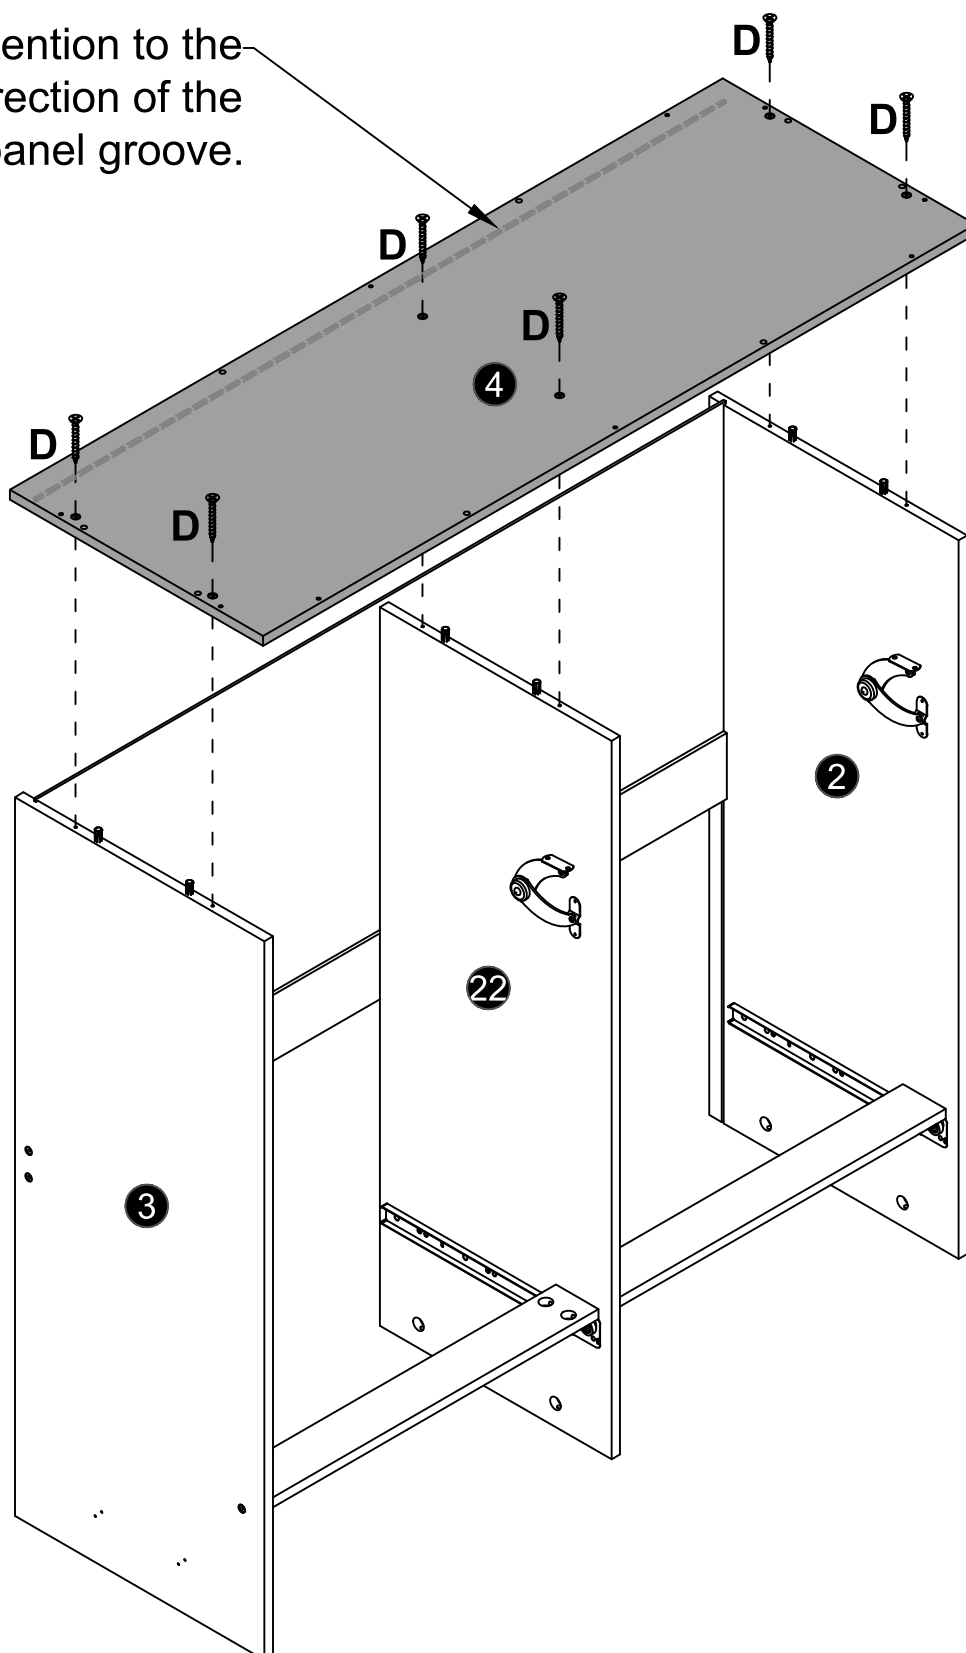

A x10

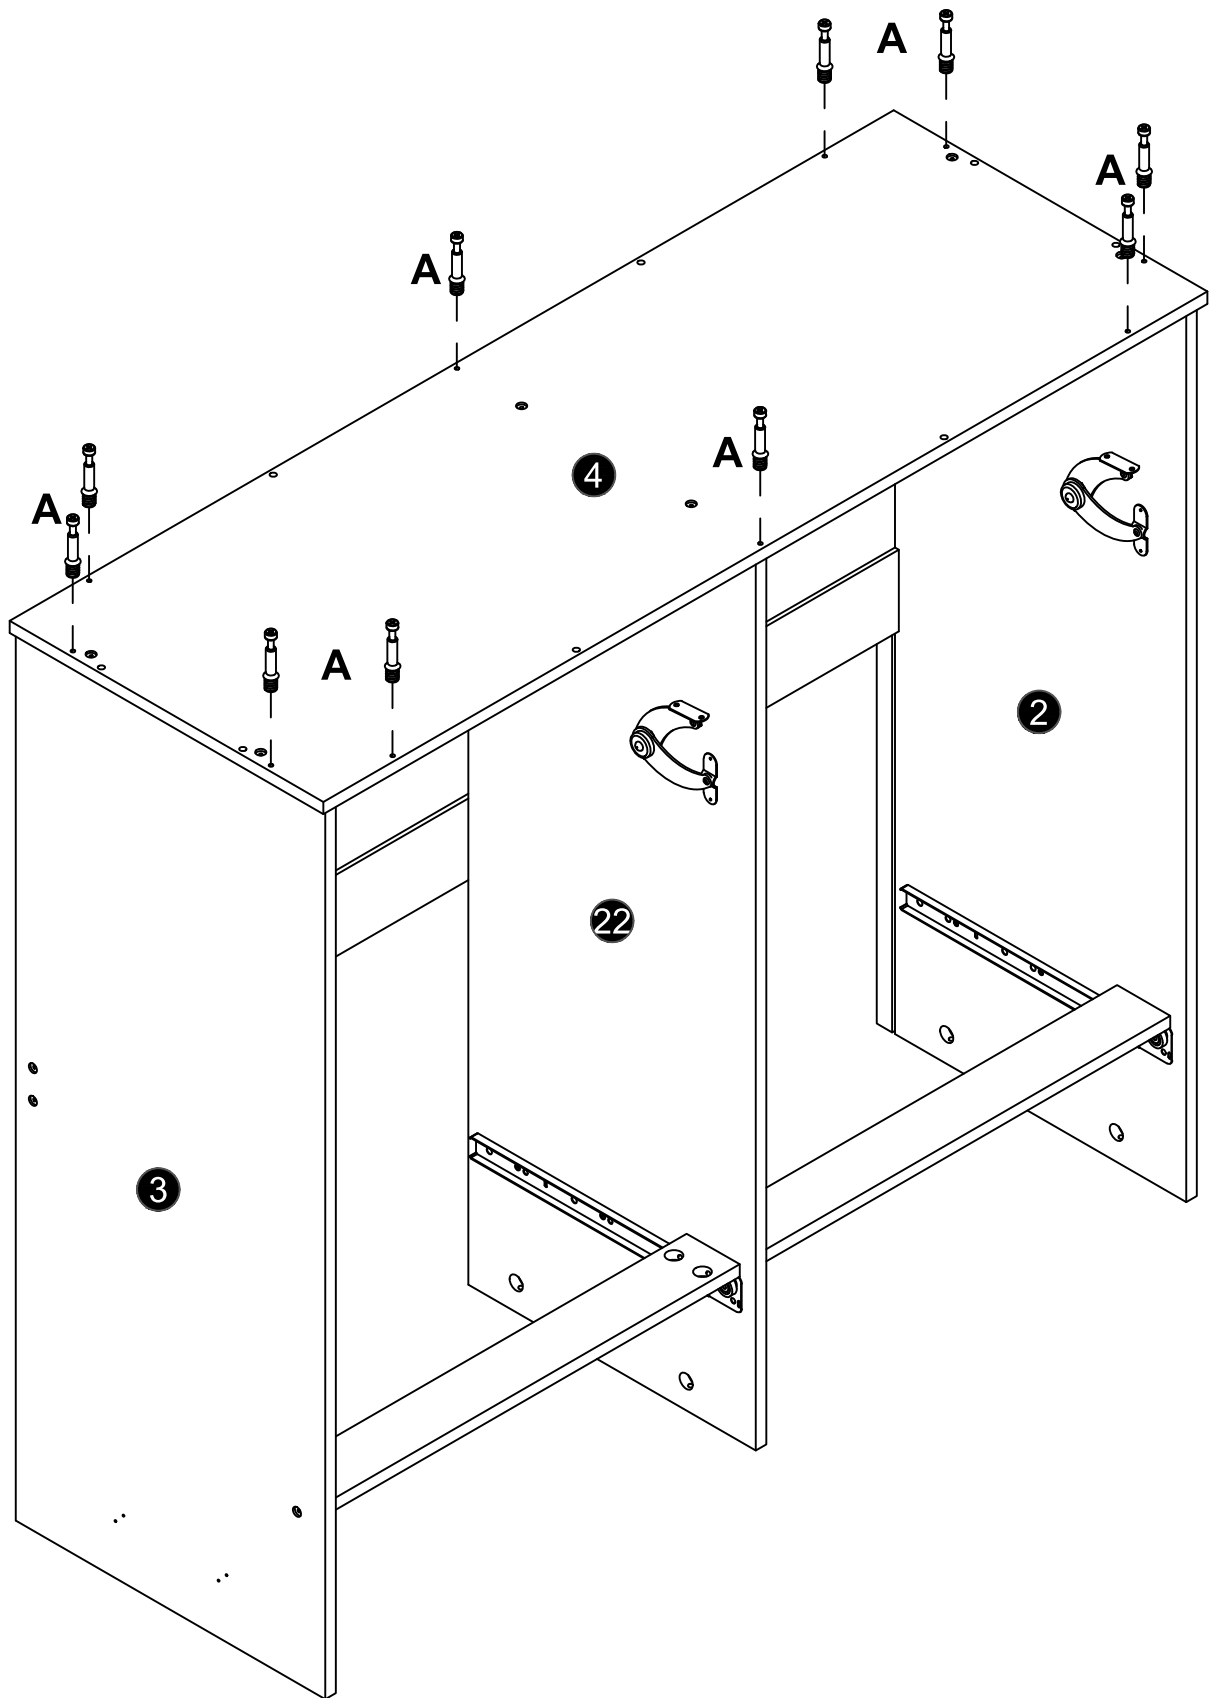



A x4



B x4





D x4

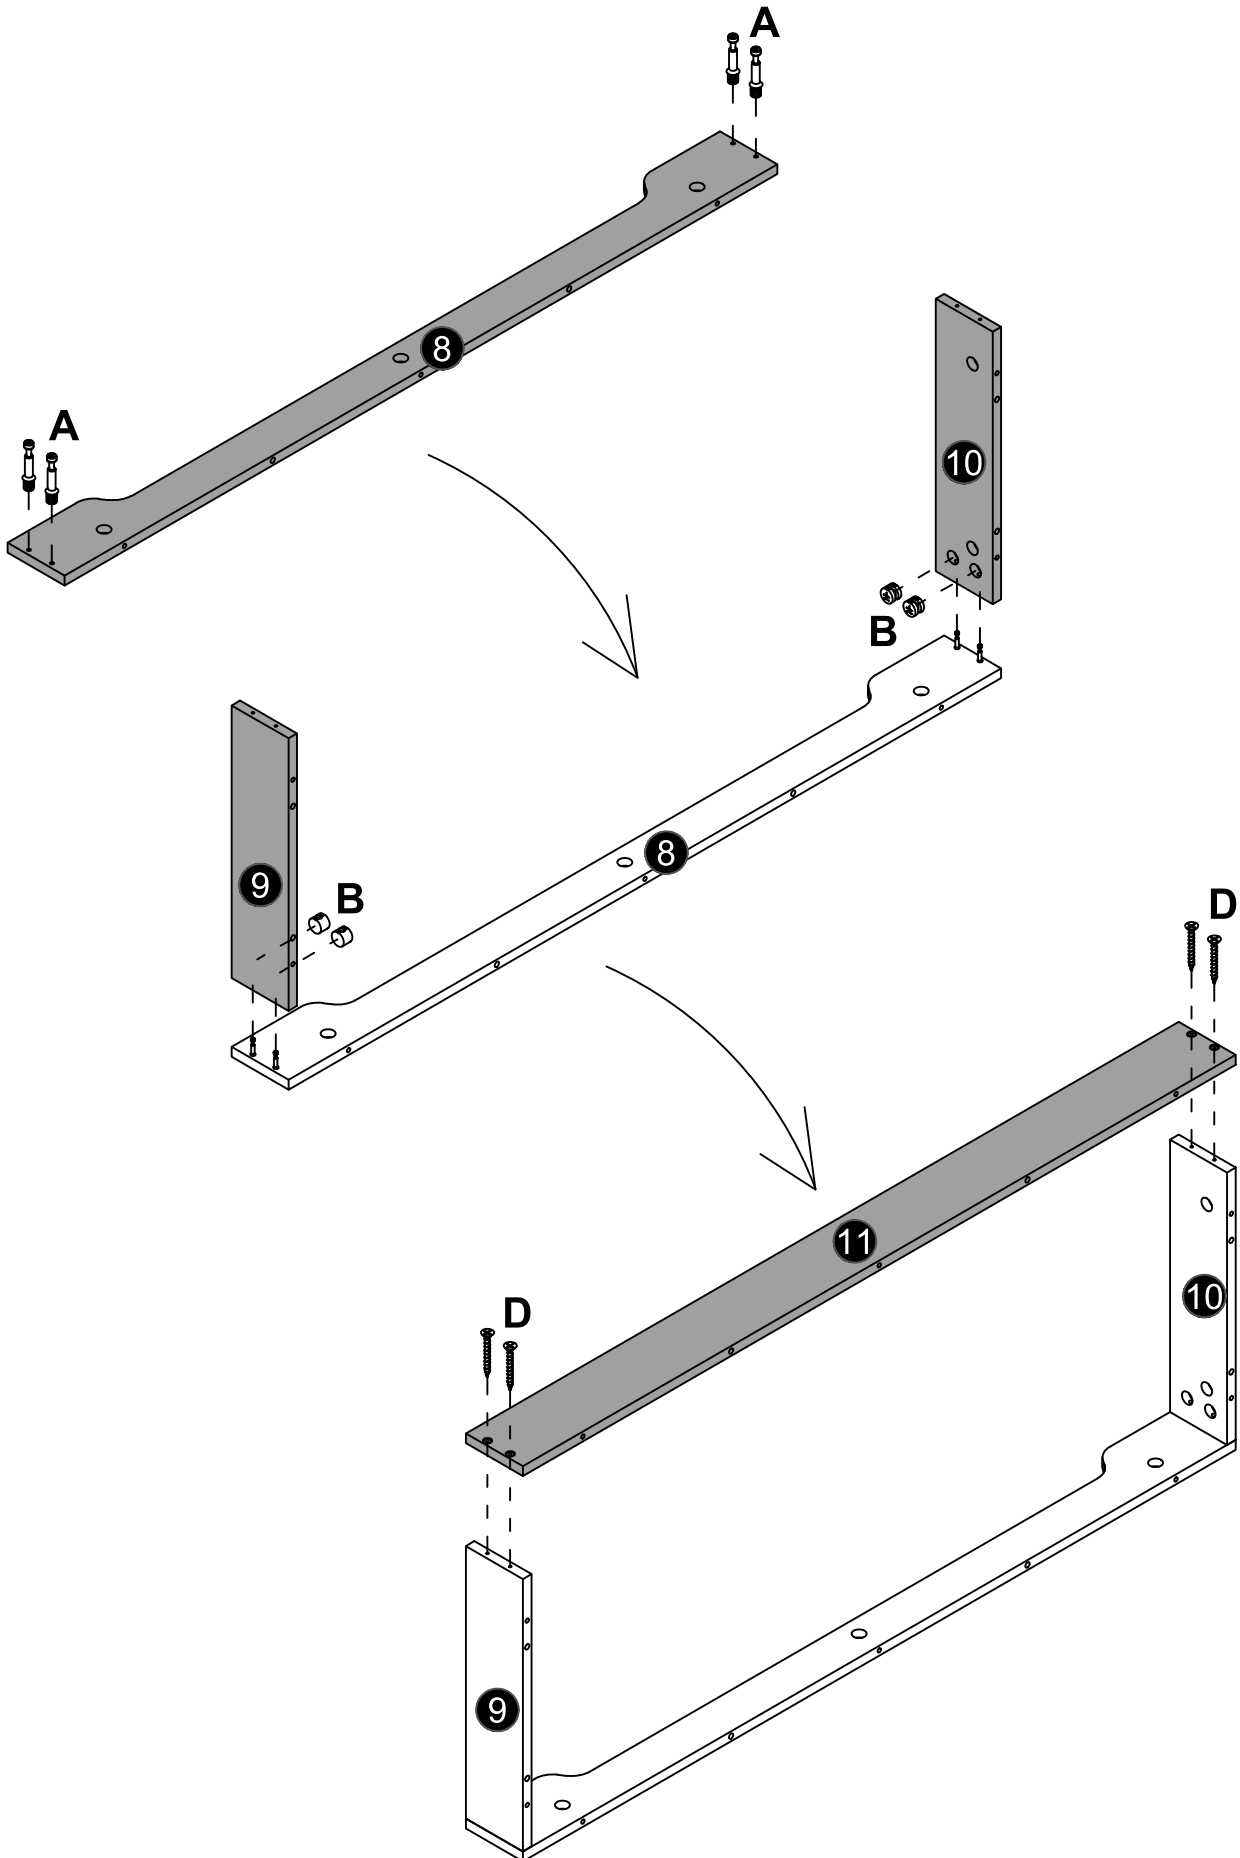



B x10


C x8

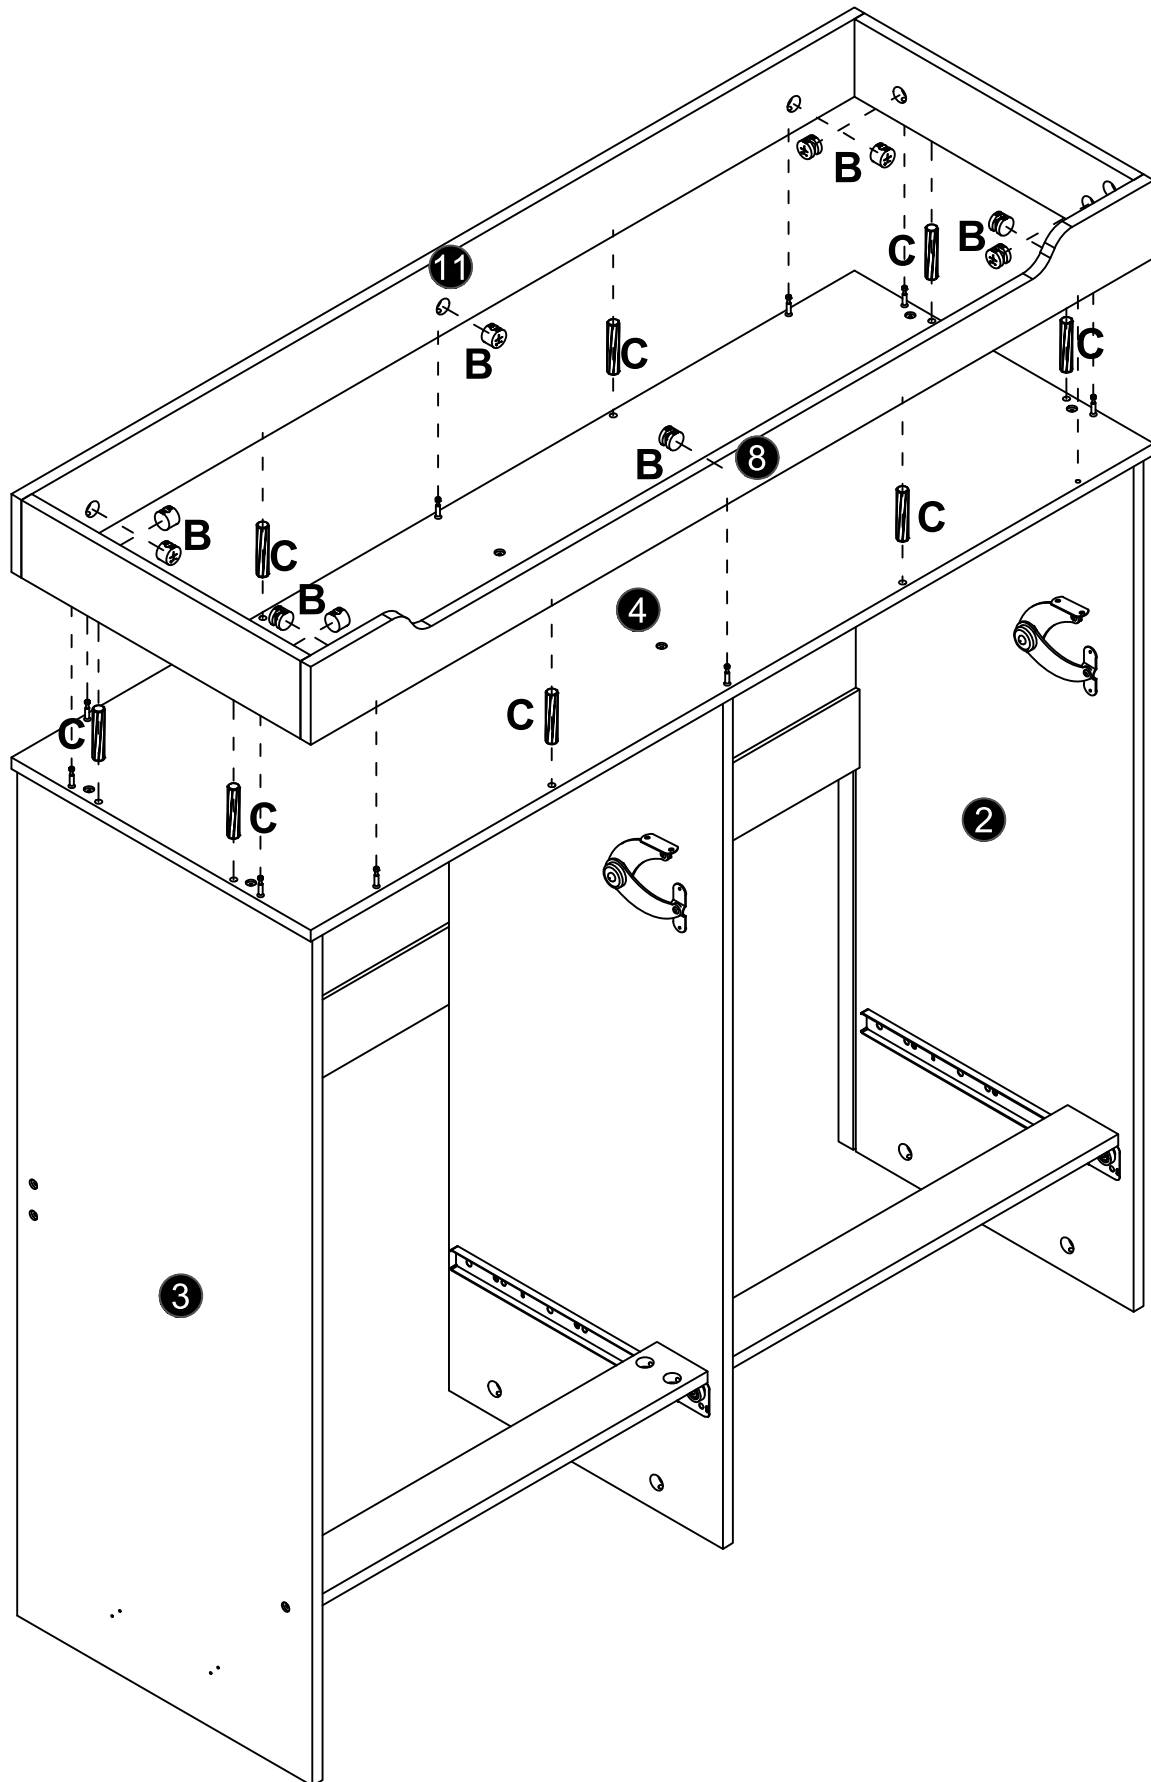

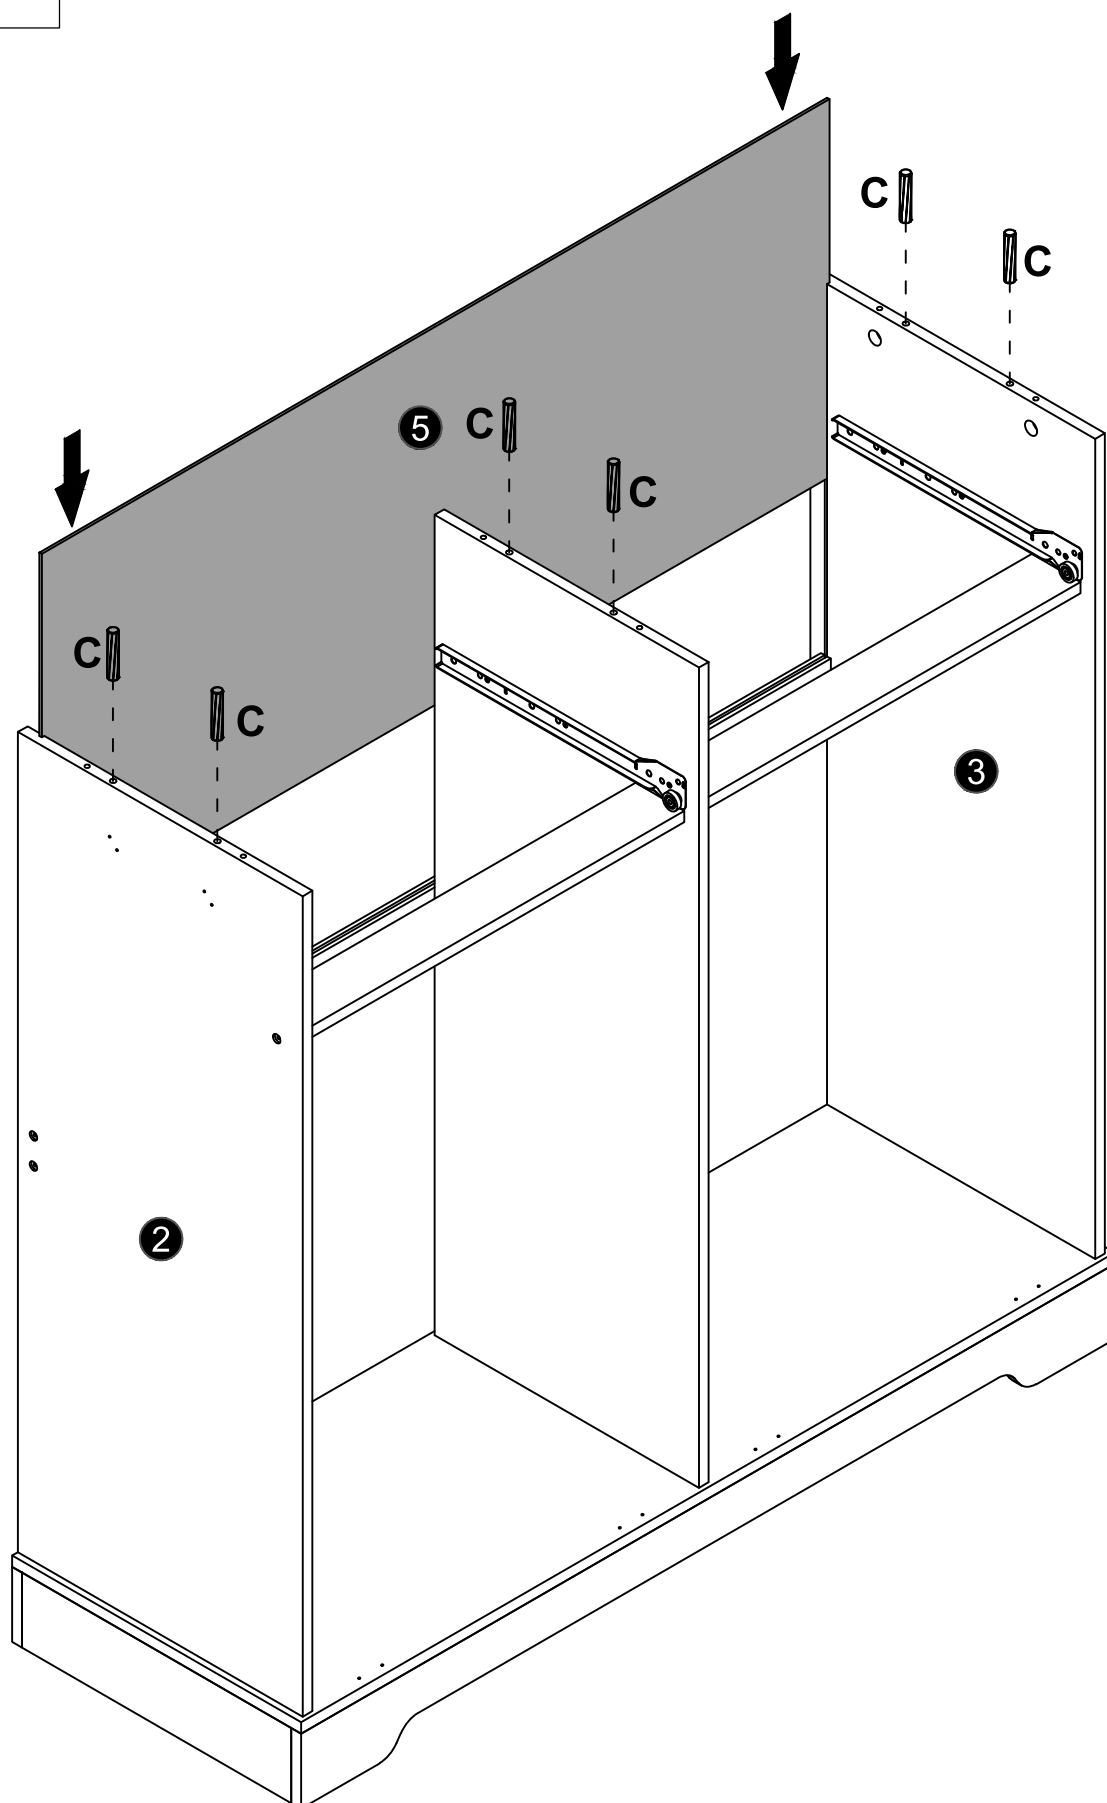


A x6

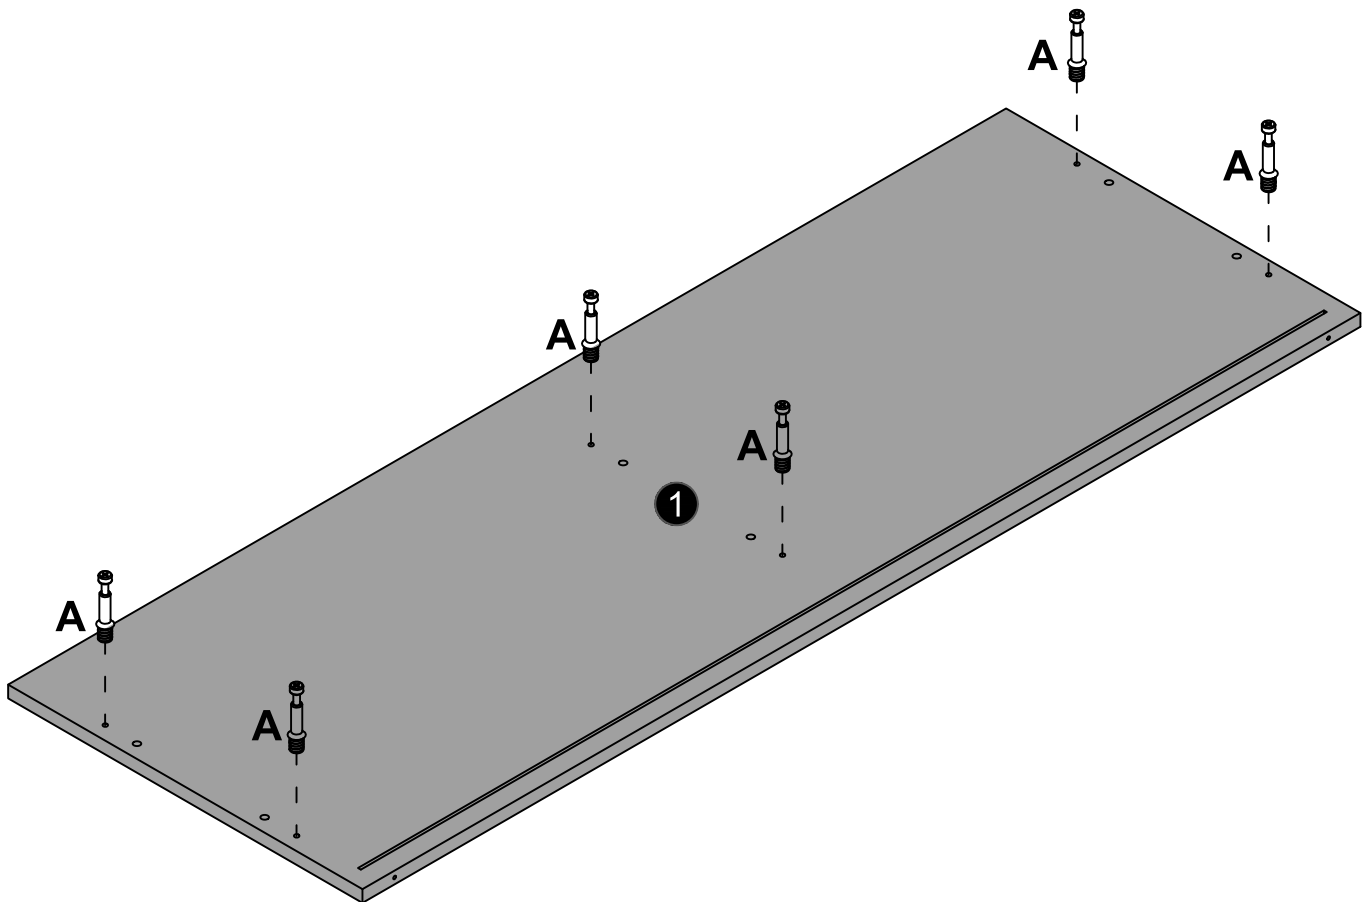


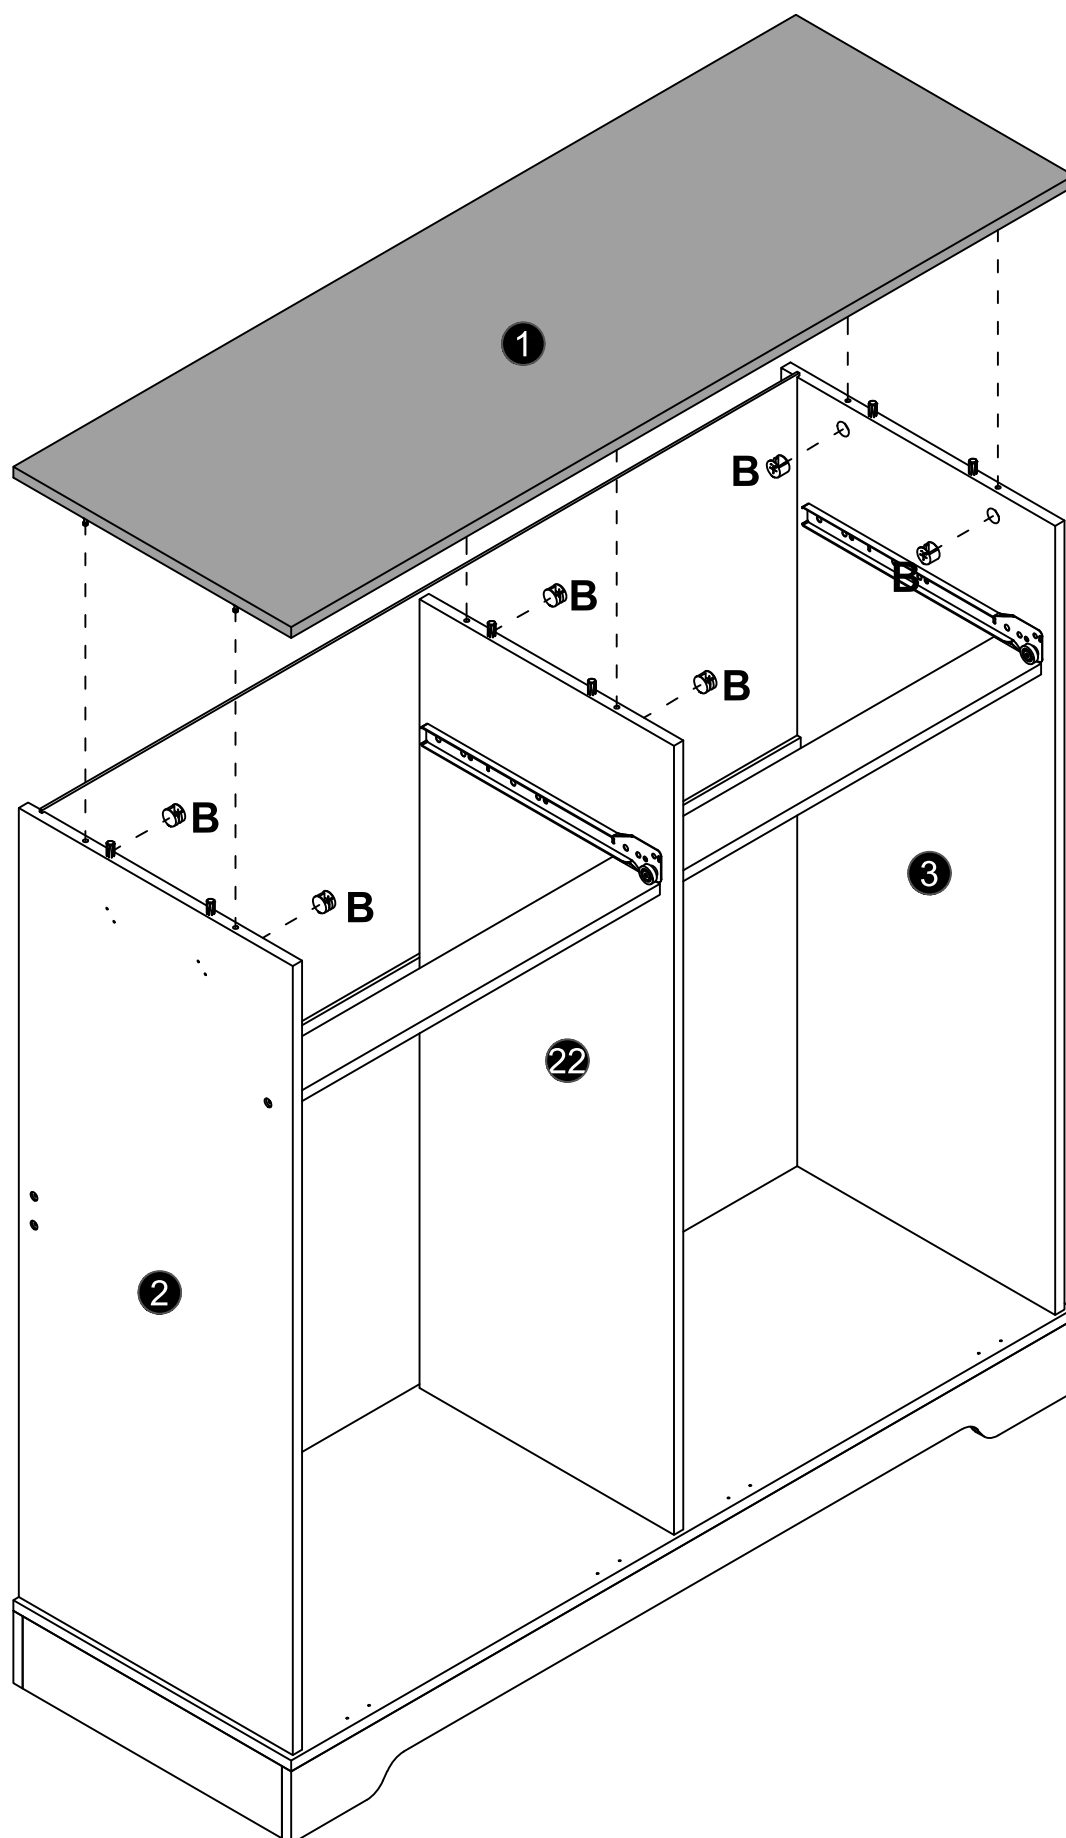

A x12



18

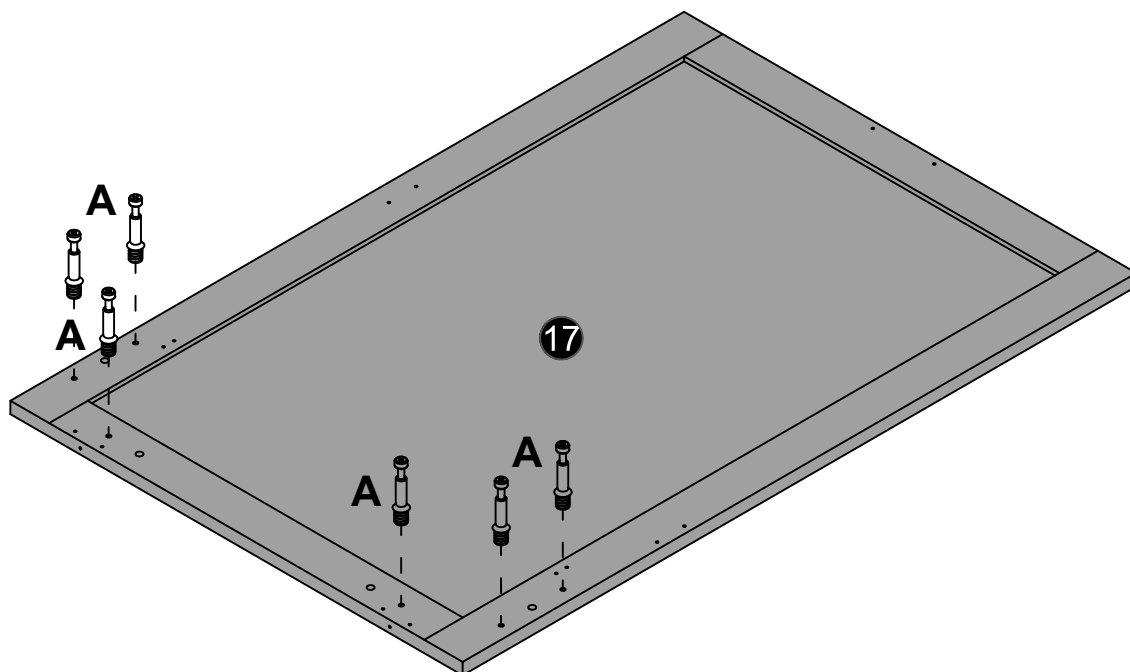


x2

E x12




F x2





H x4



19

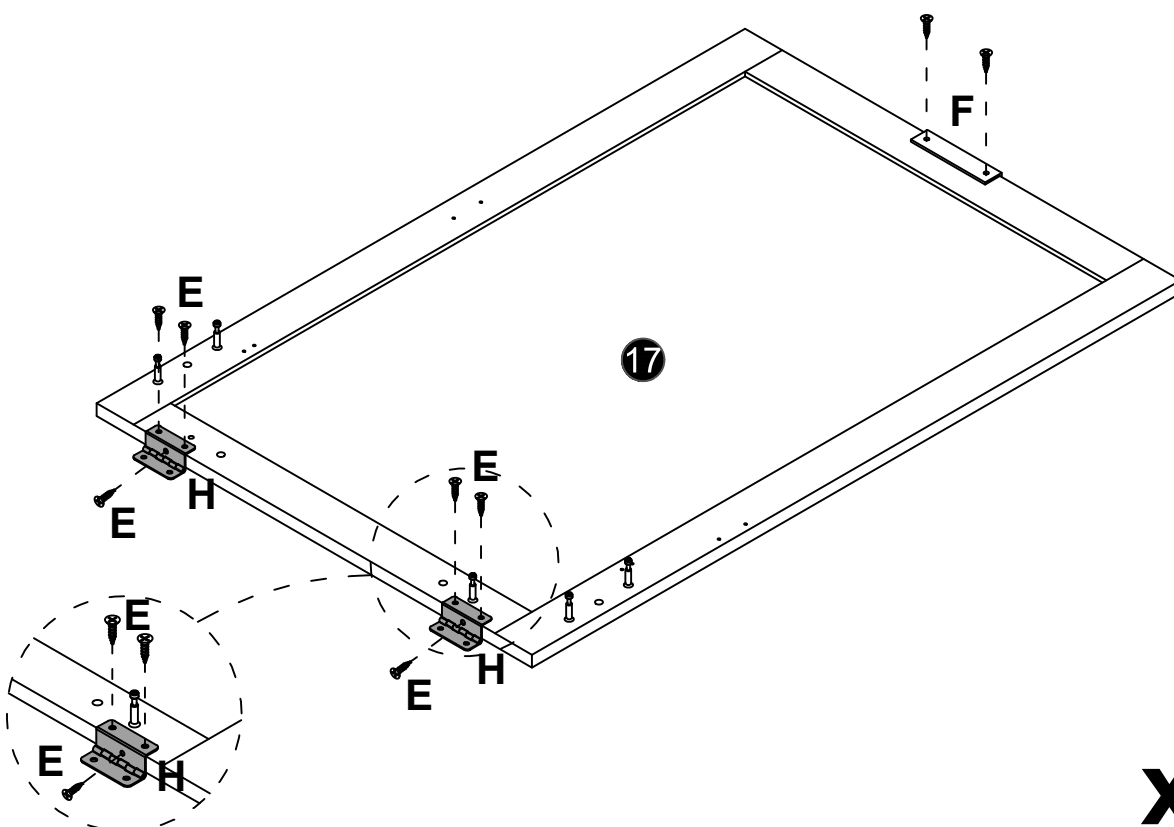


x2

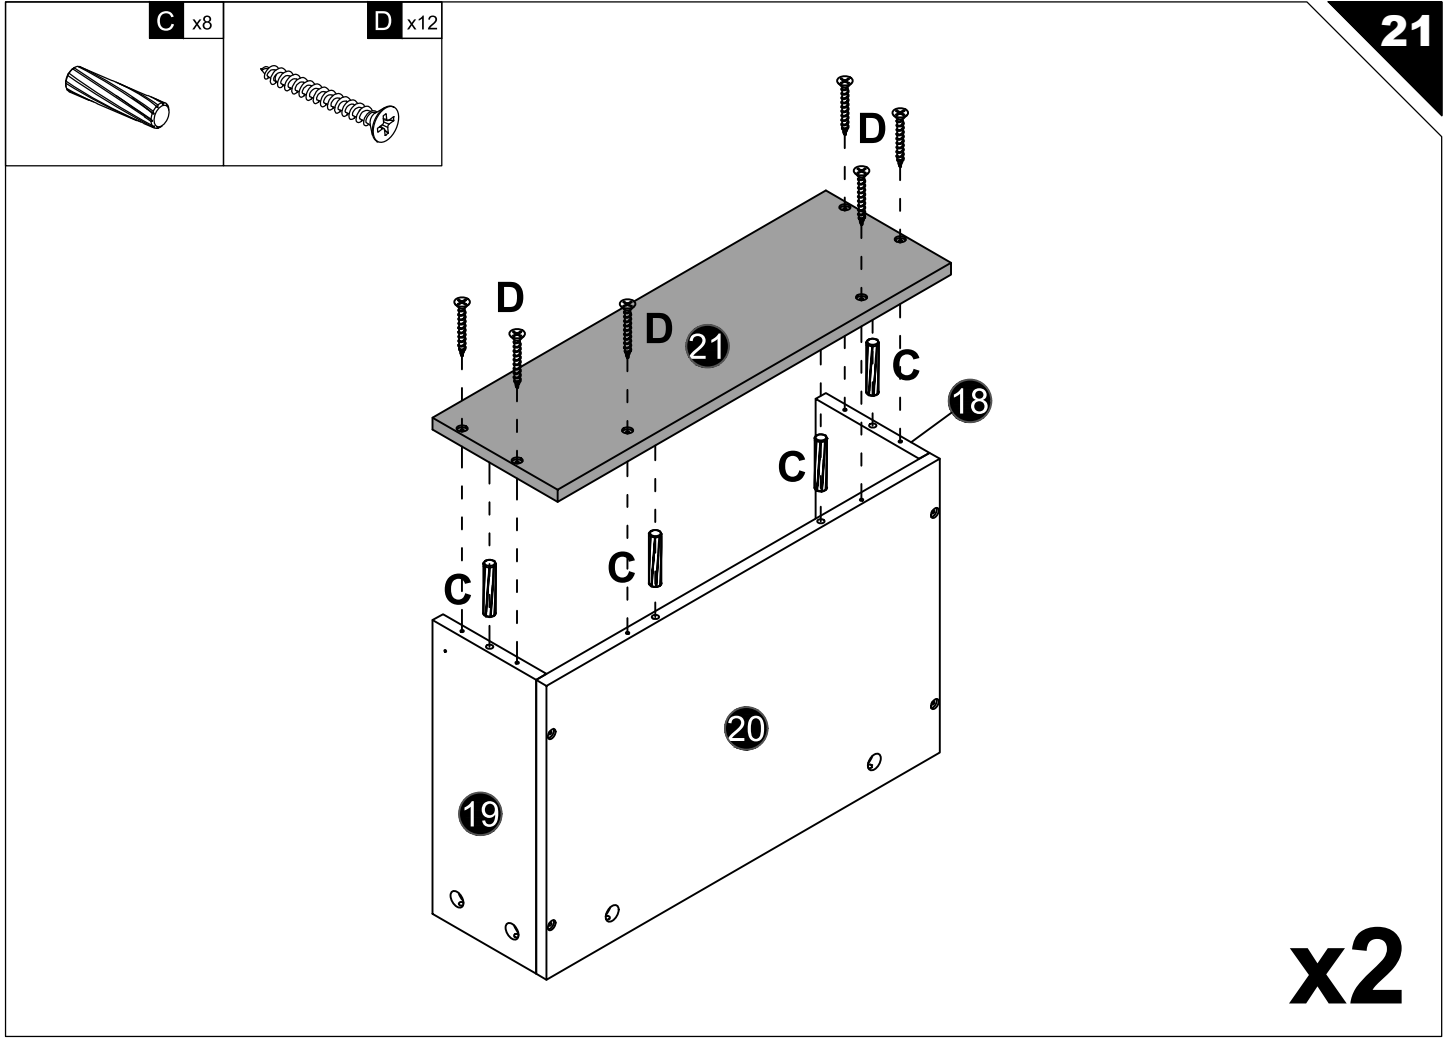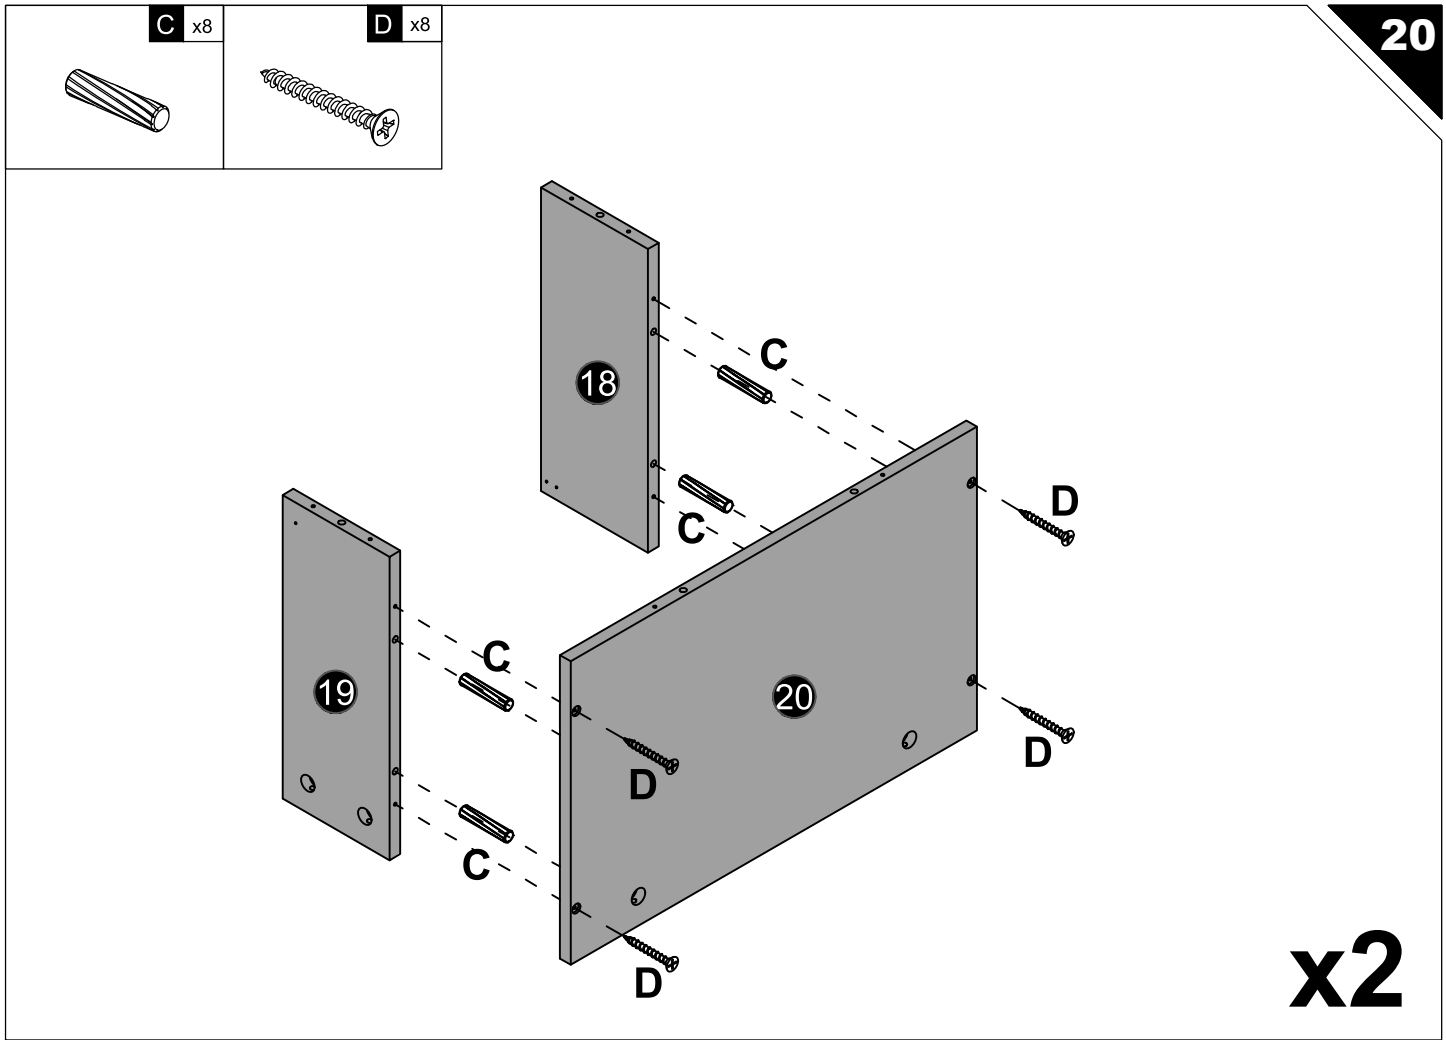

B x12



C x8

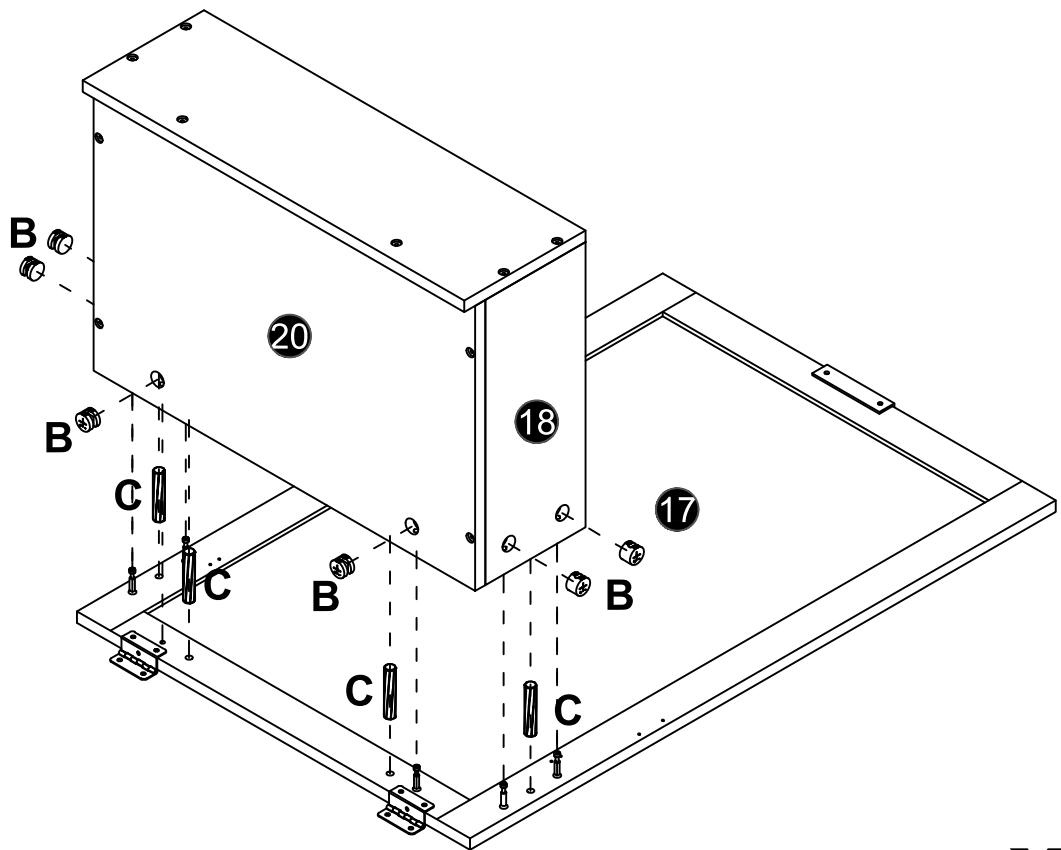

x2



E x22




I x4






O x2

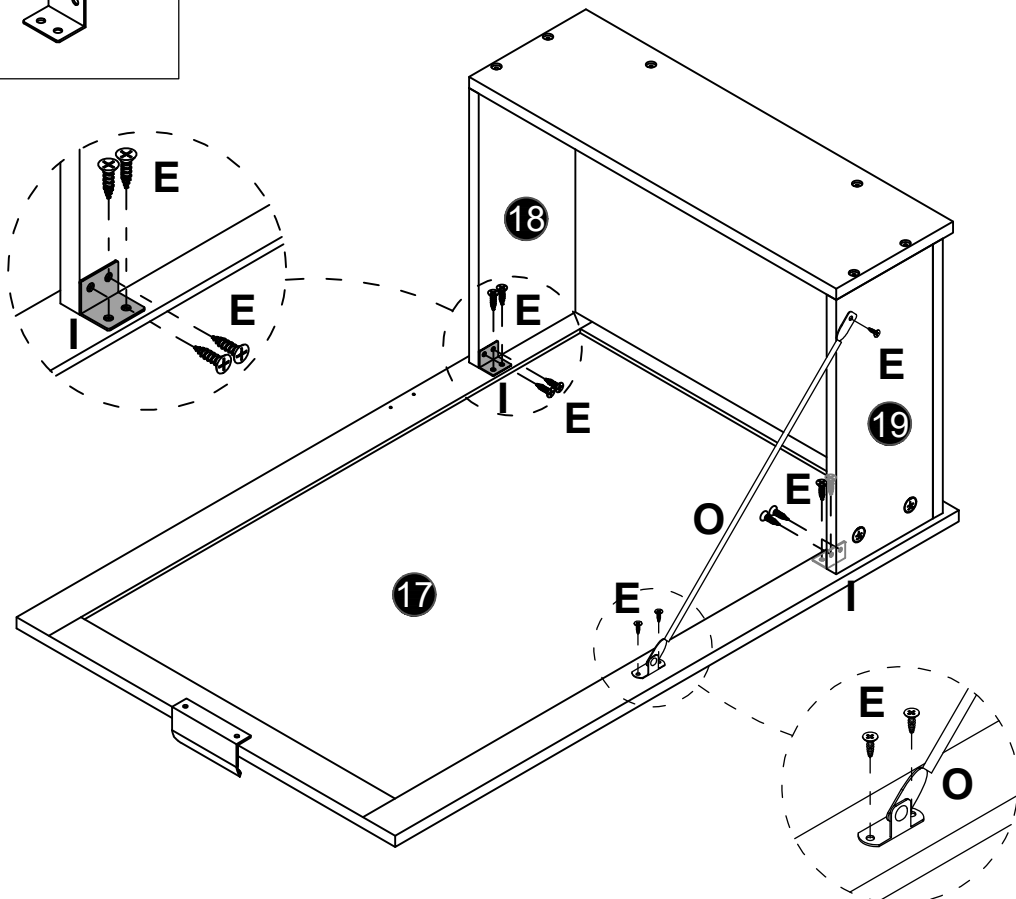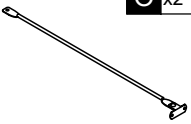

x2

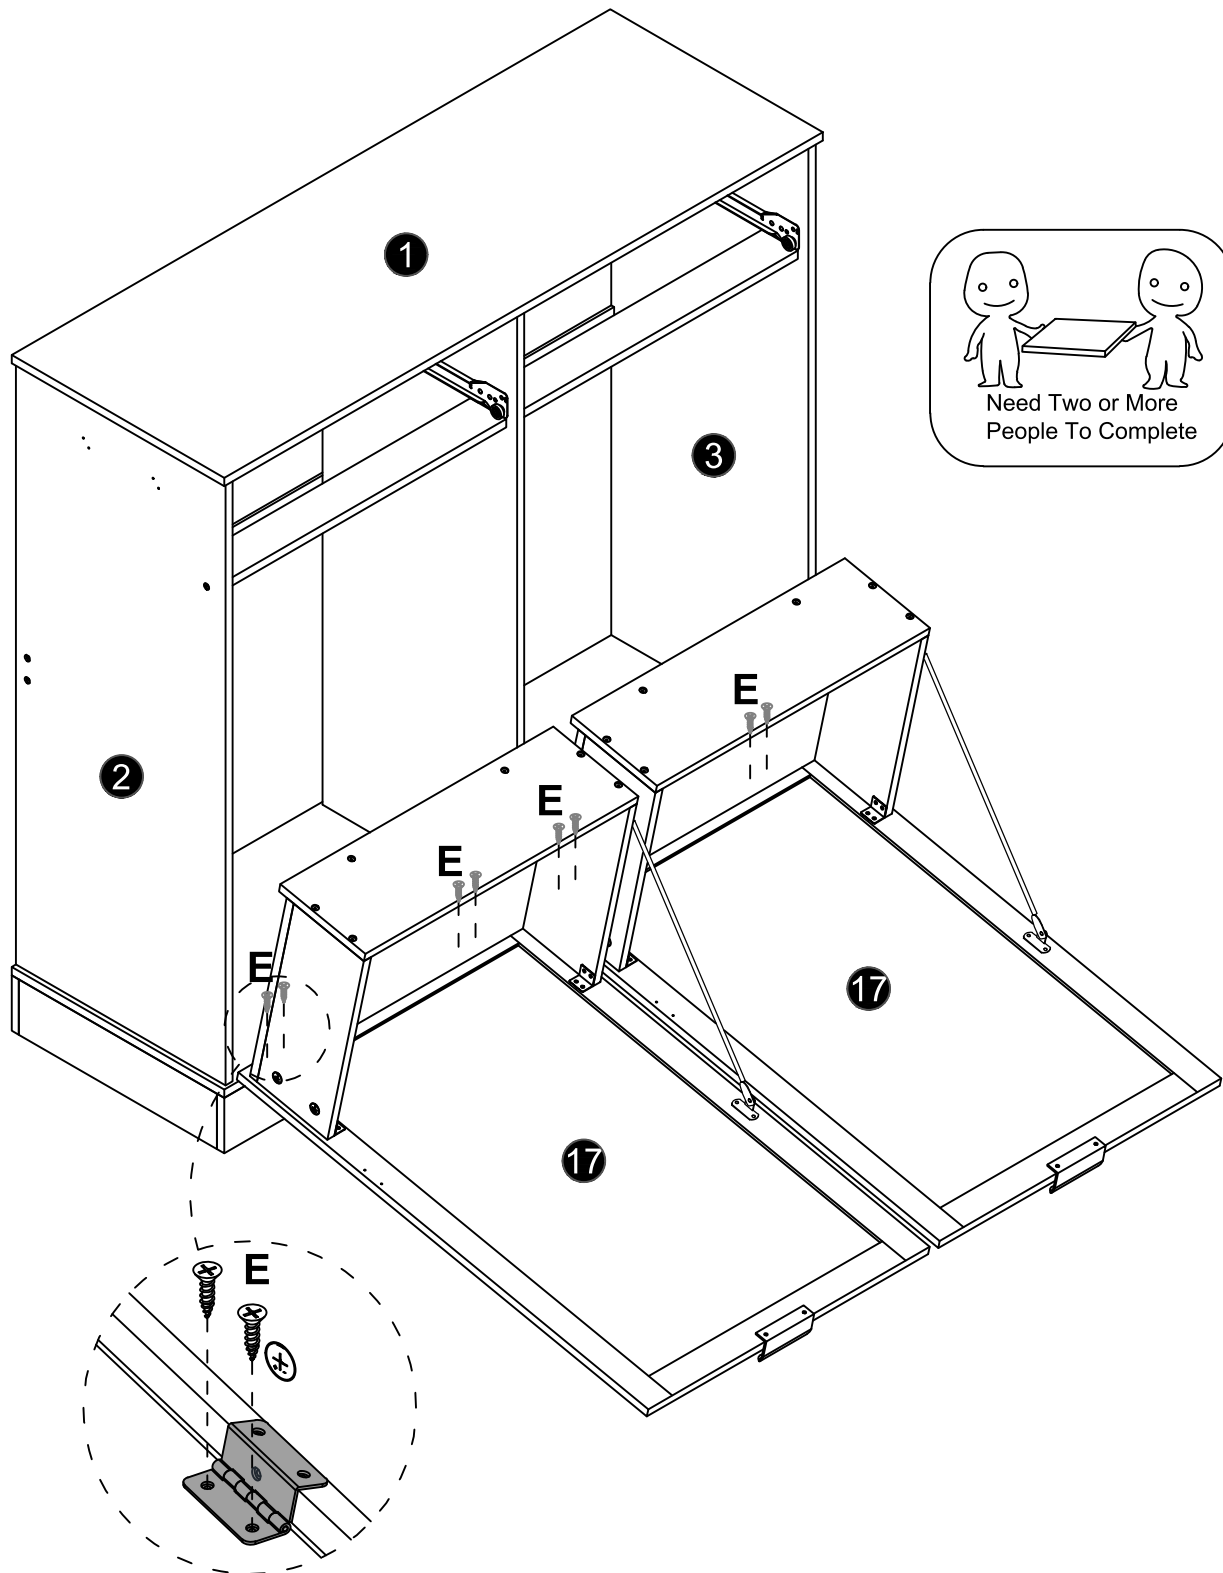

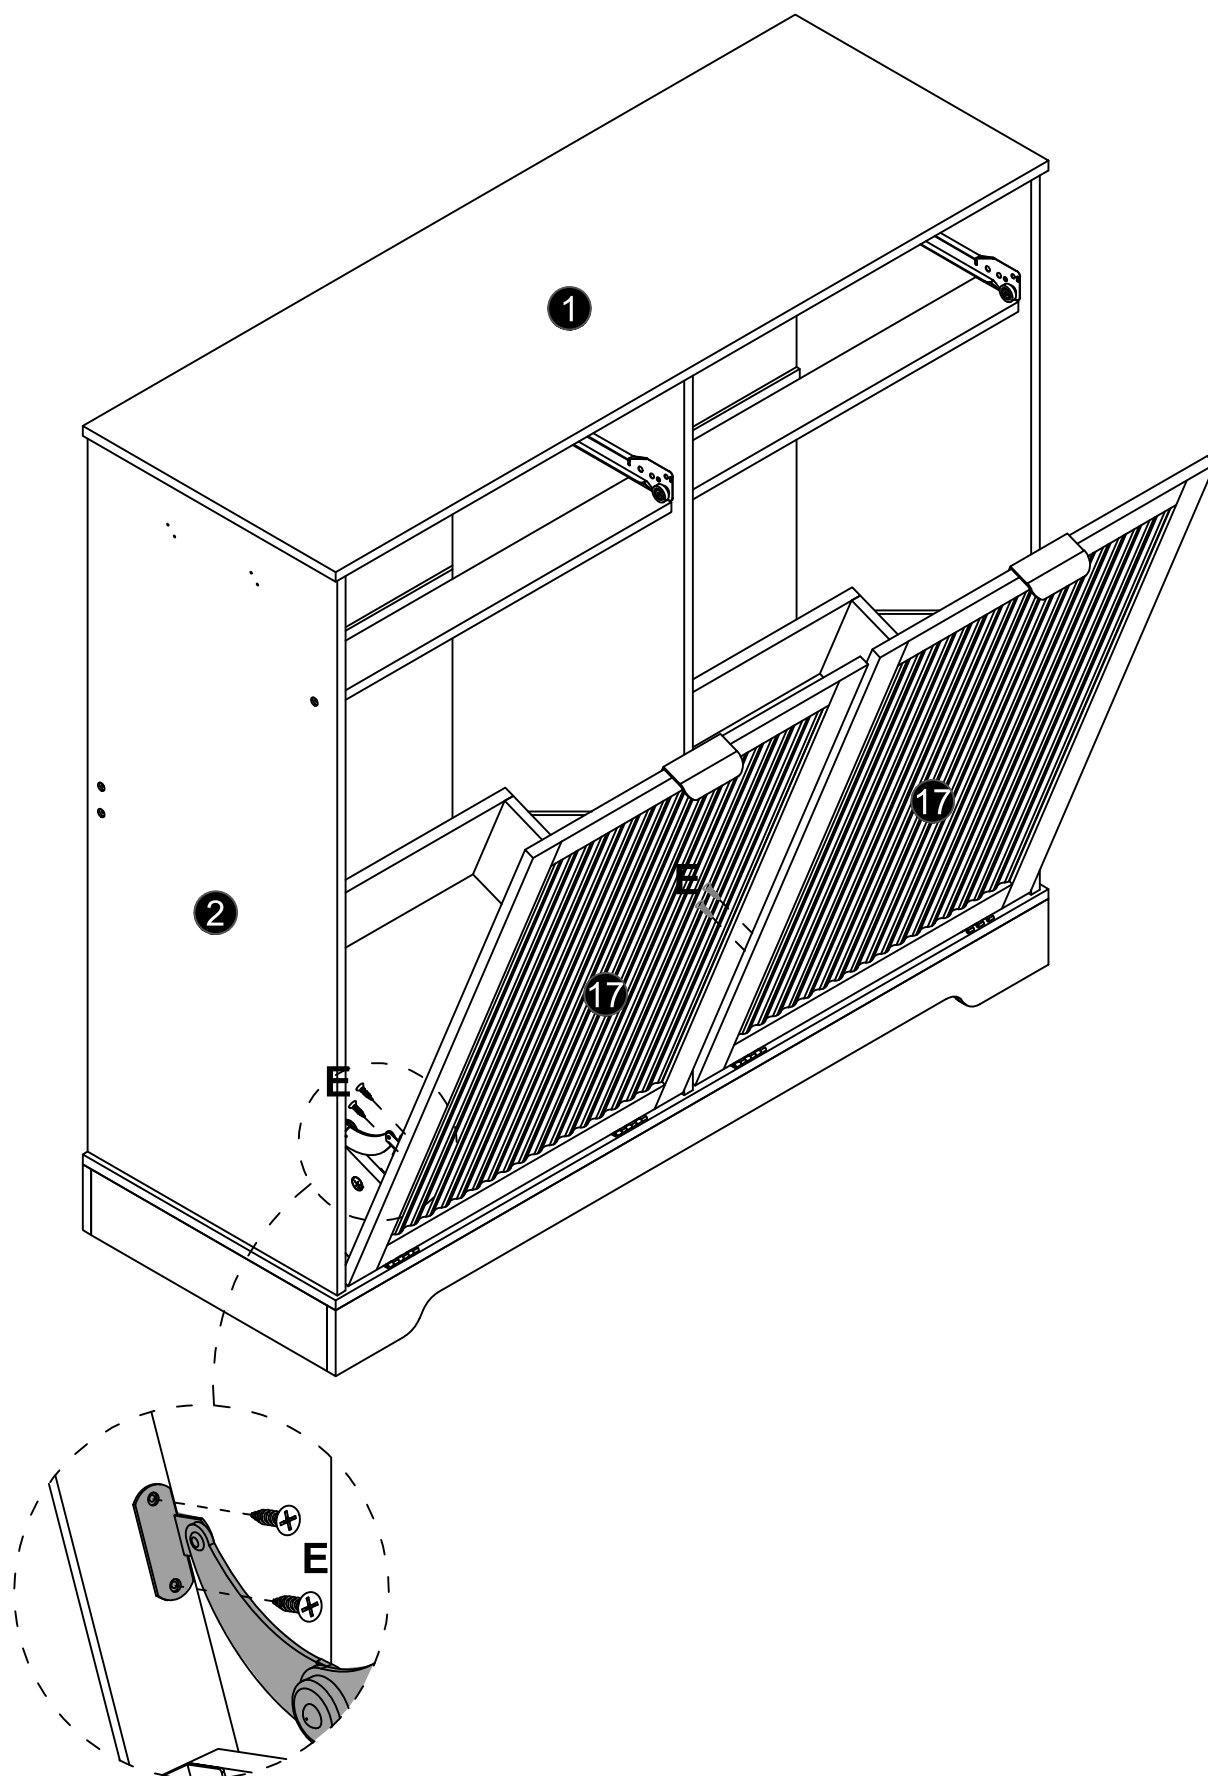

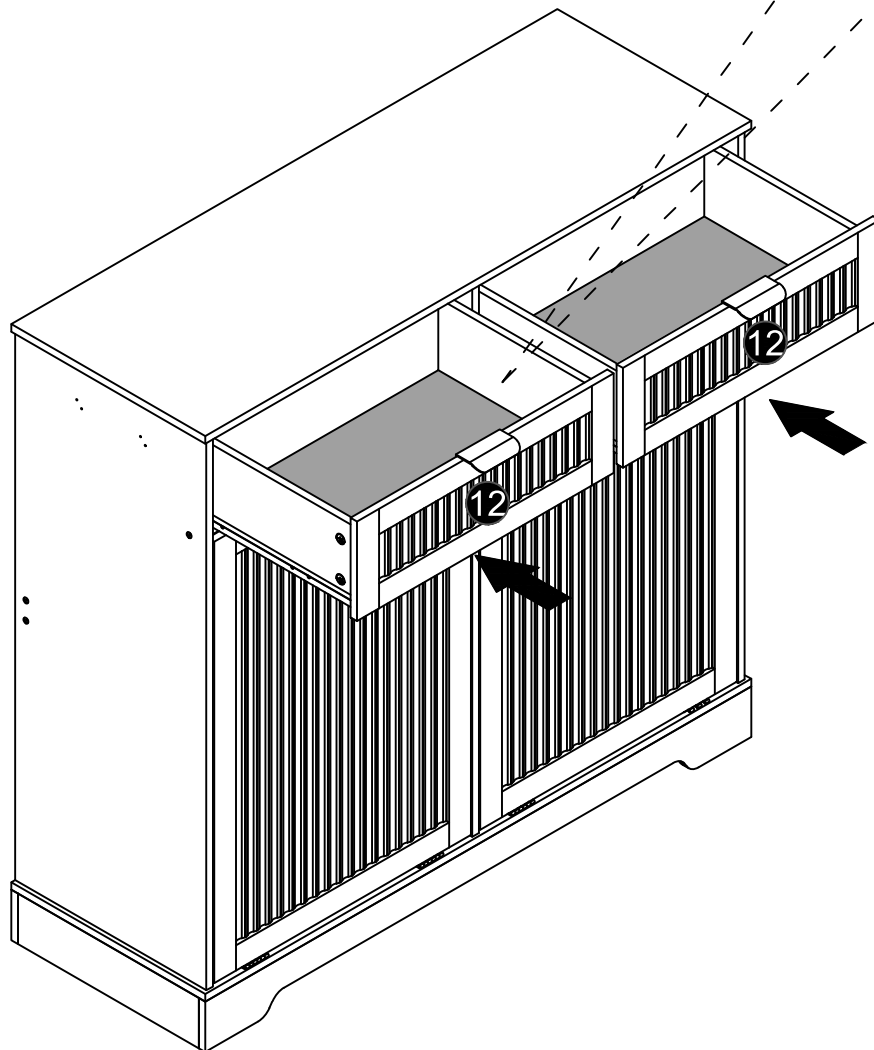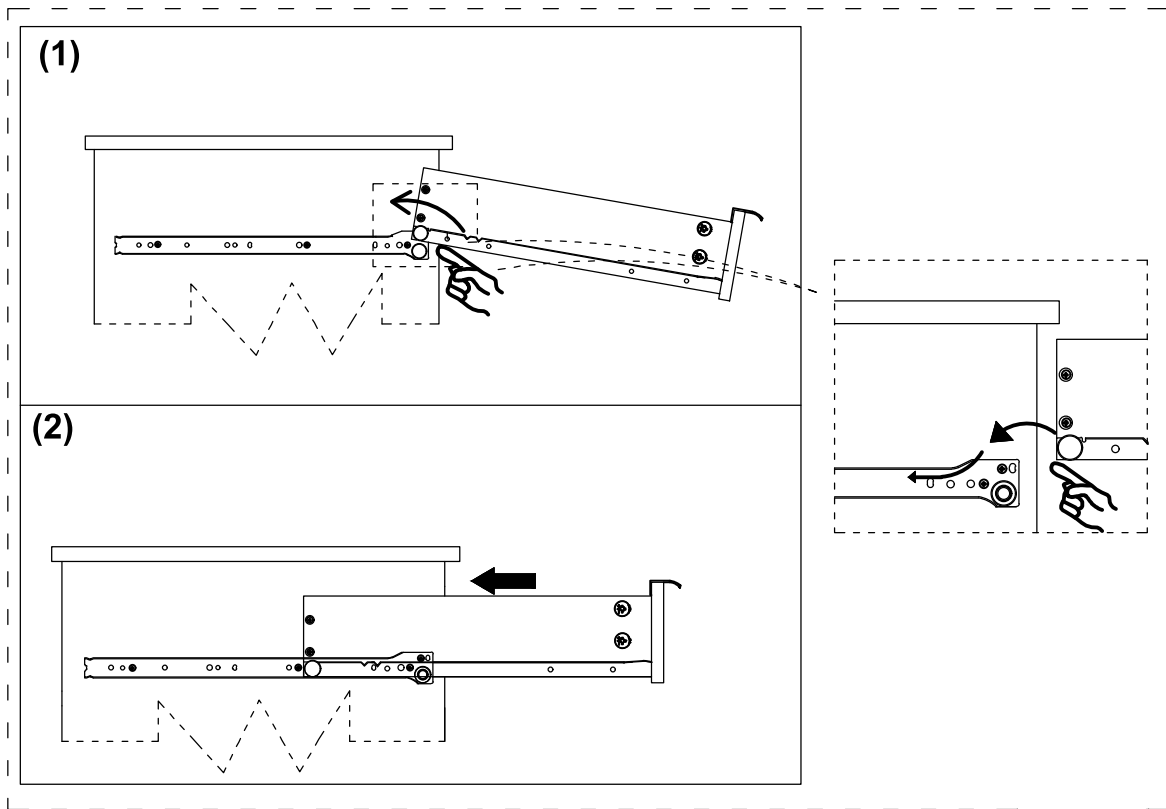


J x8



J-1

J-2

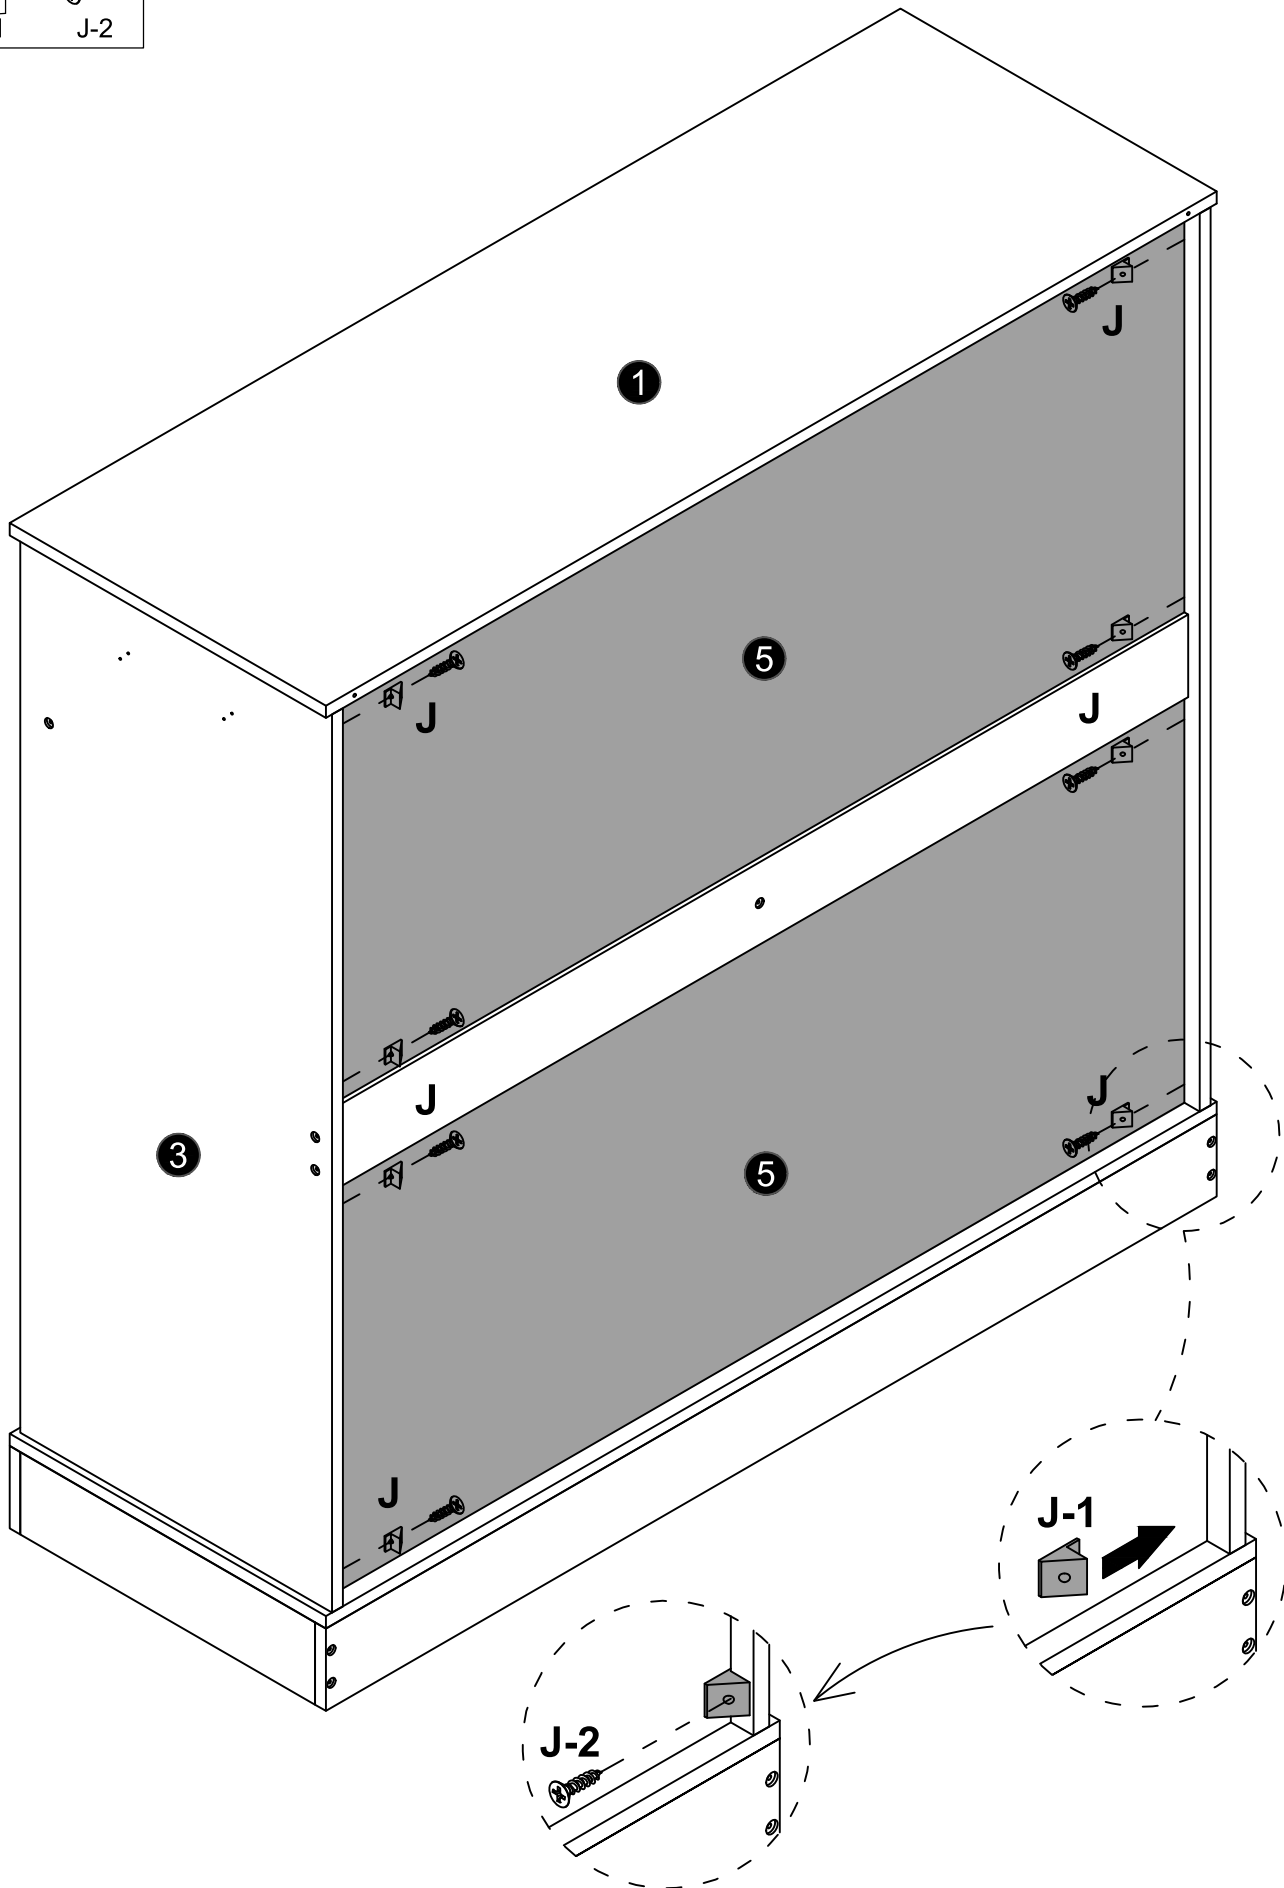

K x10

N x2




N-1



N-2


Please install the hook "N" according to your actual needs, either on the left Scheme 1 or on the right Scheme 2, and choose one of the options for installation, as shown .

Scheme 1

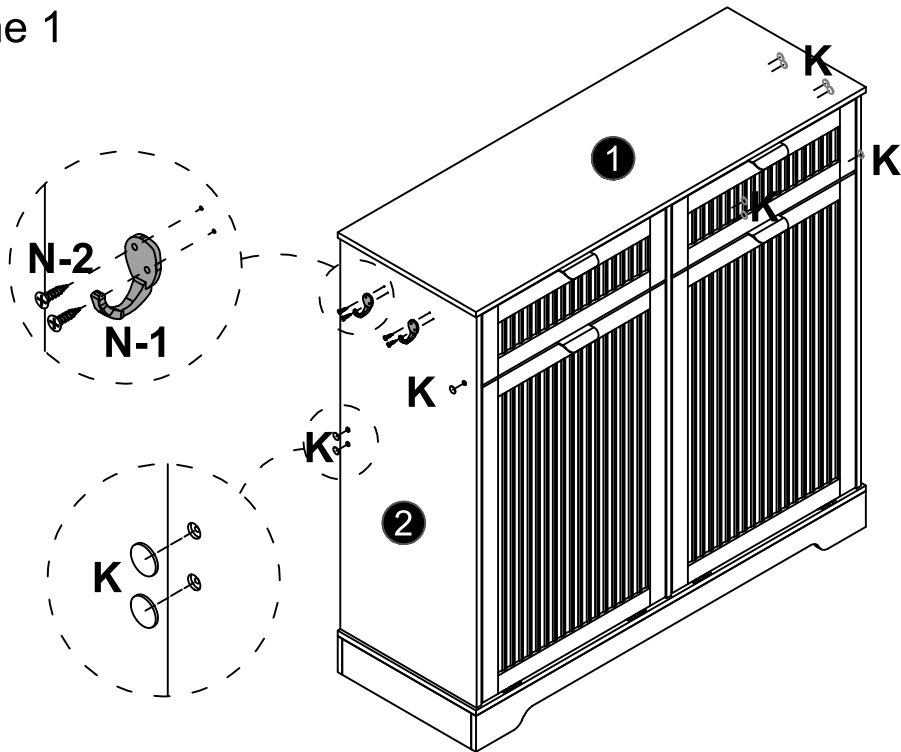

Scheme 2

OR

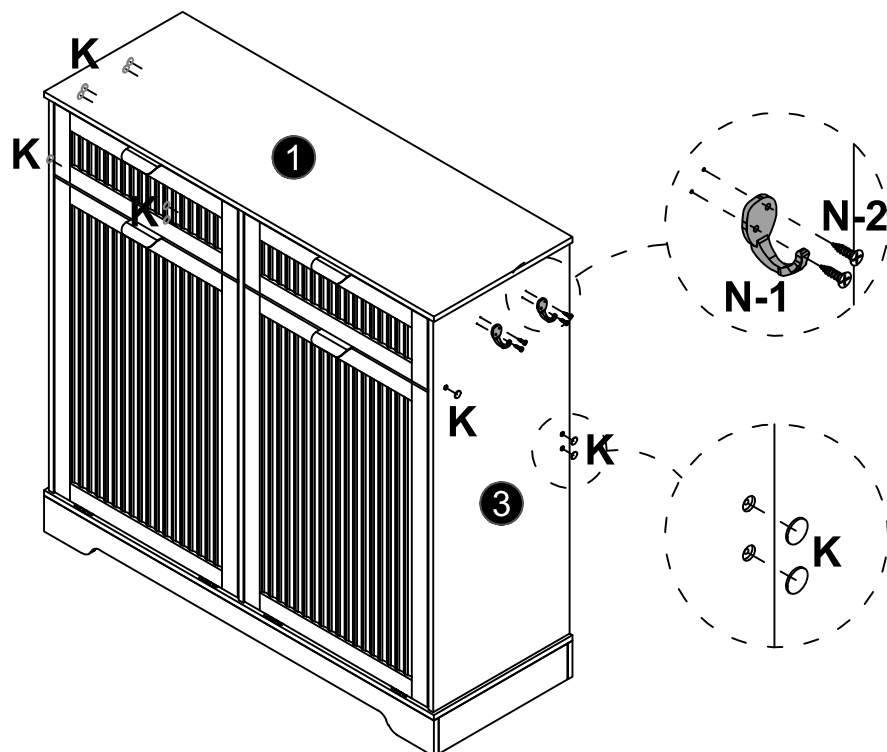


M x2

D x2


L x2



M-1 M-2

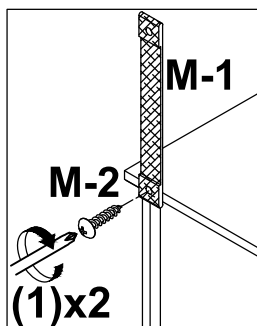


First fix the anti-rewind screw in the reserved hole of the product.

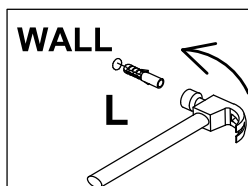


Then, put the expansion bolt into the hole


(4)x2

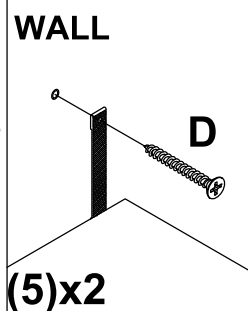

Finally, pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

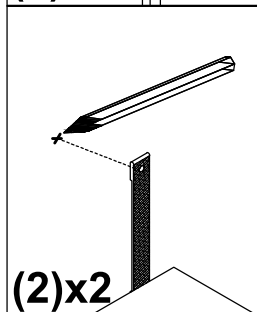

then, use a ruler to measure the approximate height of the product on the wall, and then mark it with a pen.

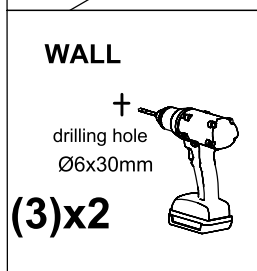

Then use a tape drill to make holes in the wall that are suitable for the product screws.

