


CTG065

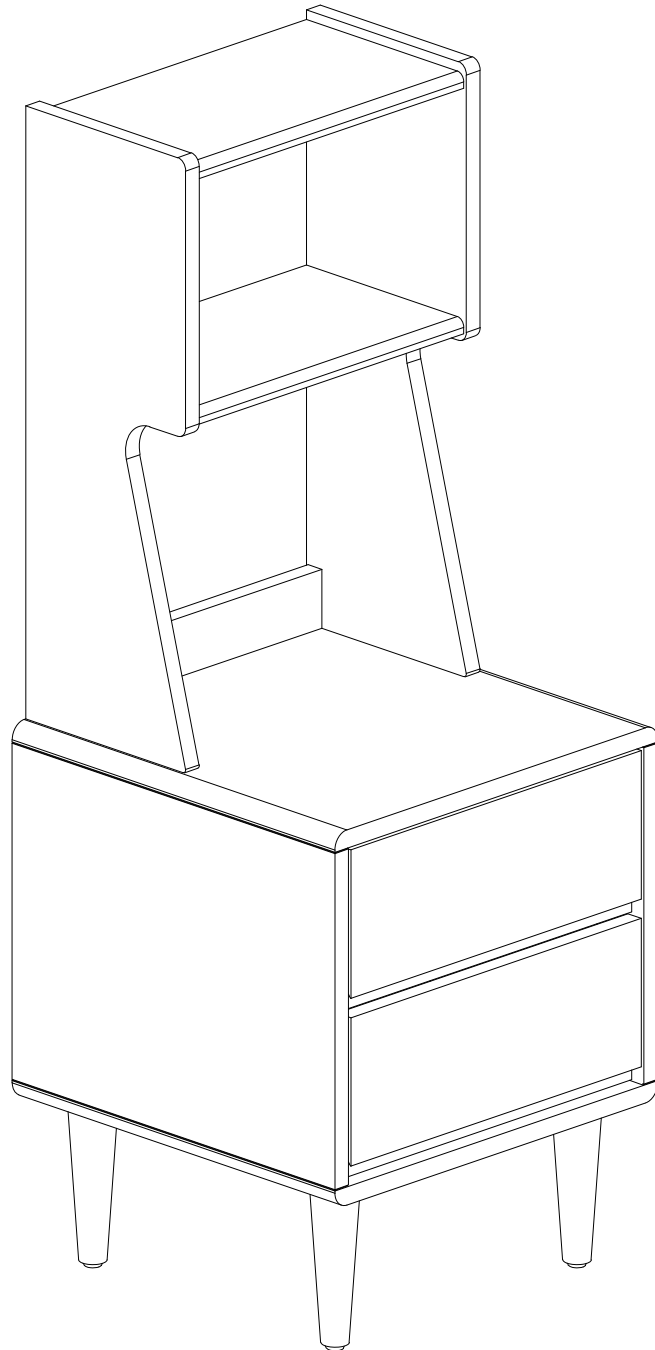


Installation Diagram

NO

CTG065

















NAME

Two Drawers Nightstand

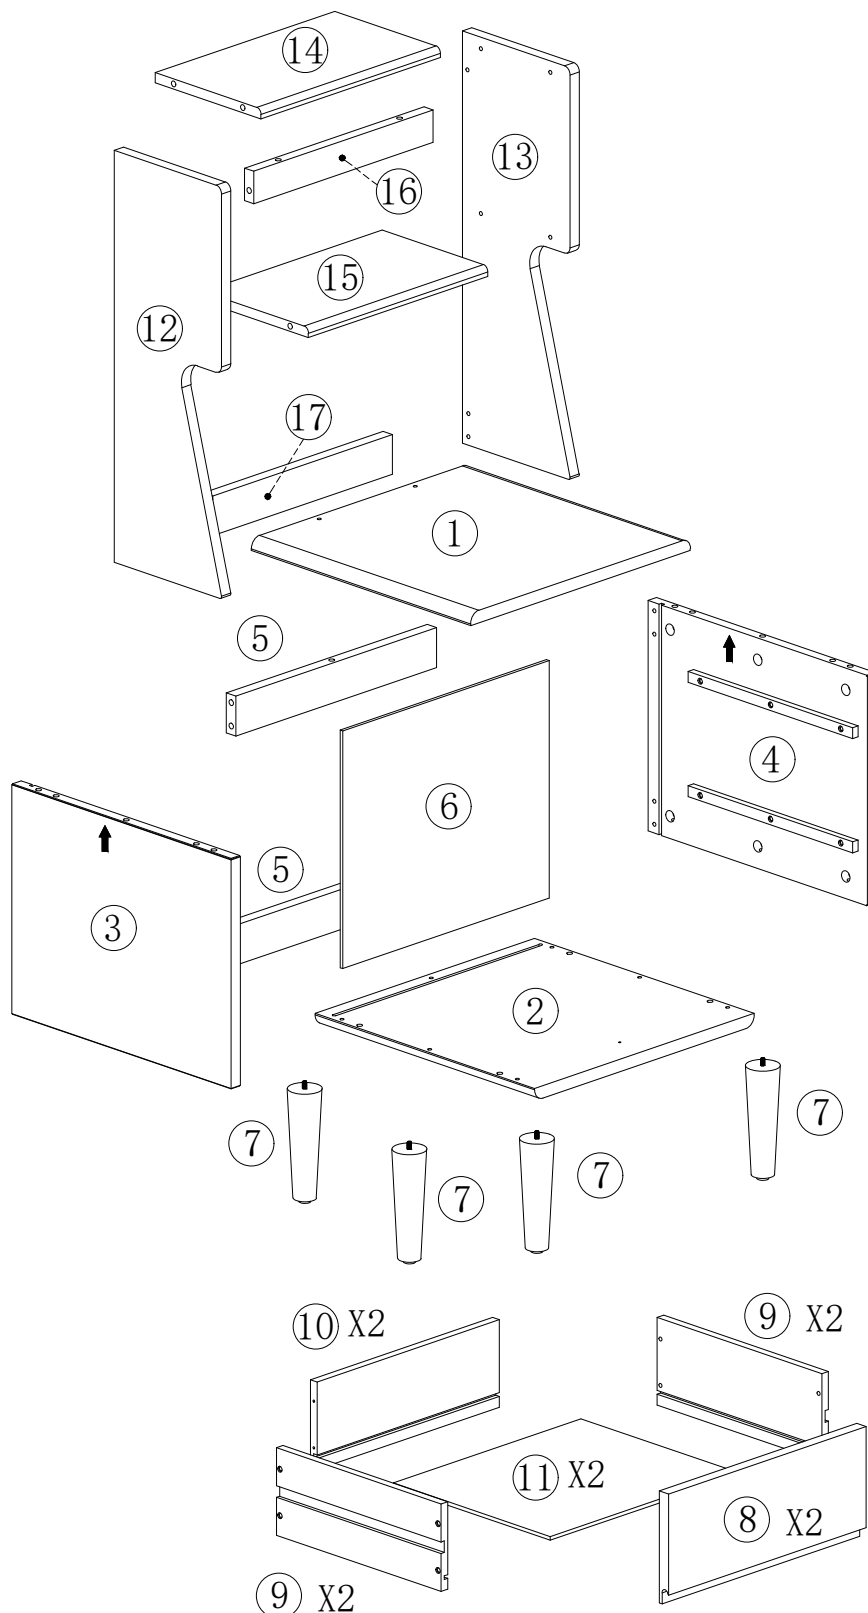

Specification name: two drawers nightstand


Parts List

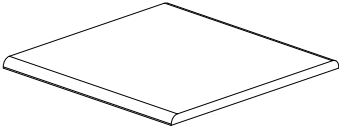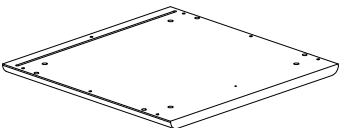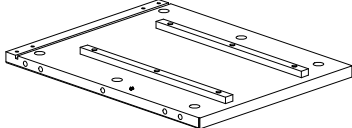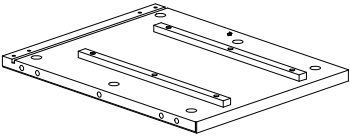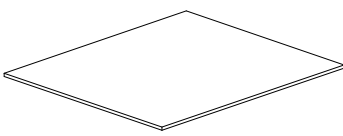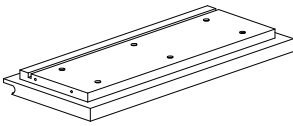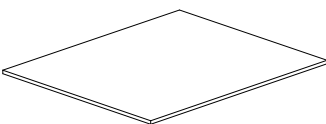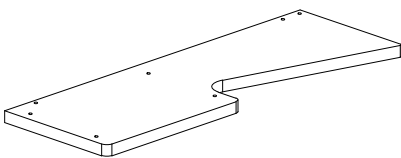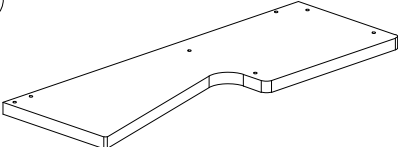
①  400*400*17MM1PC	②  400*400*17MM1PC	③  316*400*27MM1PC
④  316*400*27MM1PC	⑤  366*55*17MM2PCS	⑥  326*376*5MM1PC
⑦  150*Ø45MM4PCS	⑧  360*153.5*29MM2PCS	⑨  300*120*12MM4PCS
⑩  332*120*12MM2PCS	⑪  342*286*5MM2PCS	⑫  572*198*17MM1PC
⑬  572*198*17MM1PC	⑭  331*195*14MM1PC	⑮  331*195*14MM1PC
⑯  331*45*17MM1PC	⑰  331*55*17MM1PC	


Note

Using the right screws can prevent damage to these components

Example

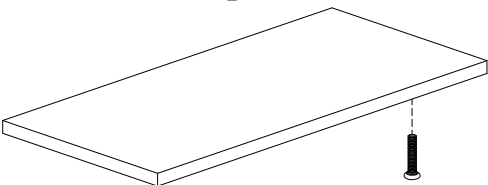

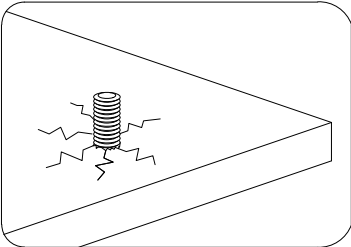







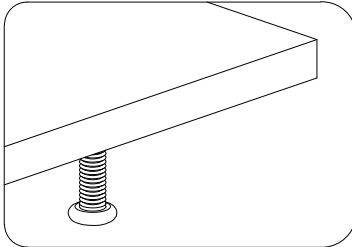


Mistake: Screws can cause boards to split


Correct: screws are the correct size

Specification name: two drawers nightstand


Hardware Table

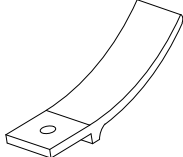A  L=40MM40+4PCS	B  Ø15*11MM40+4PCS	C  Ø8*30MM8+1PCS
D  #8*25MM16+2PCS	E  L=50MM2PCS	F  #3.5*15MM2+1PCS
G  M6*136MM1PC	H  Ø20MM28+3PCS	I  1PCS
J Installed  M6*Φ19*15MM4PCS		


All-in-one Ratchet Screwdriver Instruction Manual

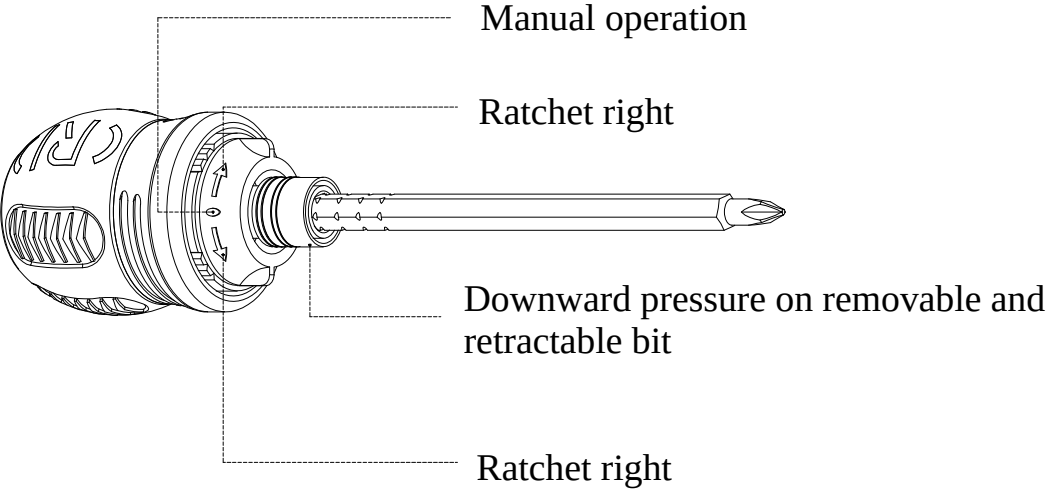


How to use the cam lock system

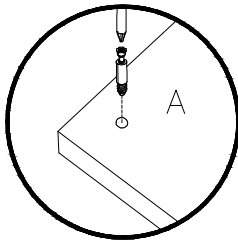


1. Screw cam bolt into panel

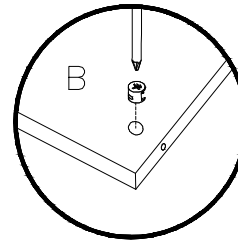


2. Push cam into panel - arrow feature on cam top points to panel edge

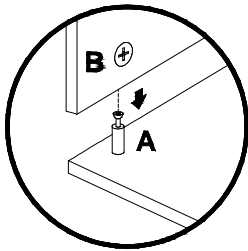

3. Align cam bolt(s) with cam(s) and insert all the way into cross-bored hole(s)

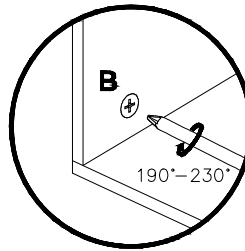


4. Rotate cam(s) clockwise 190°-230° to lock panels together

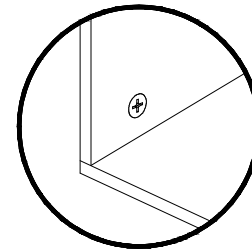

5. Panels should be tight against each other and connection should be rigid

Insert the wood dowel (A) at least half way by tapping lightly with a rubber mallet, IF NECESSARY

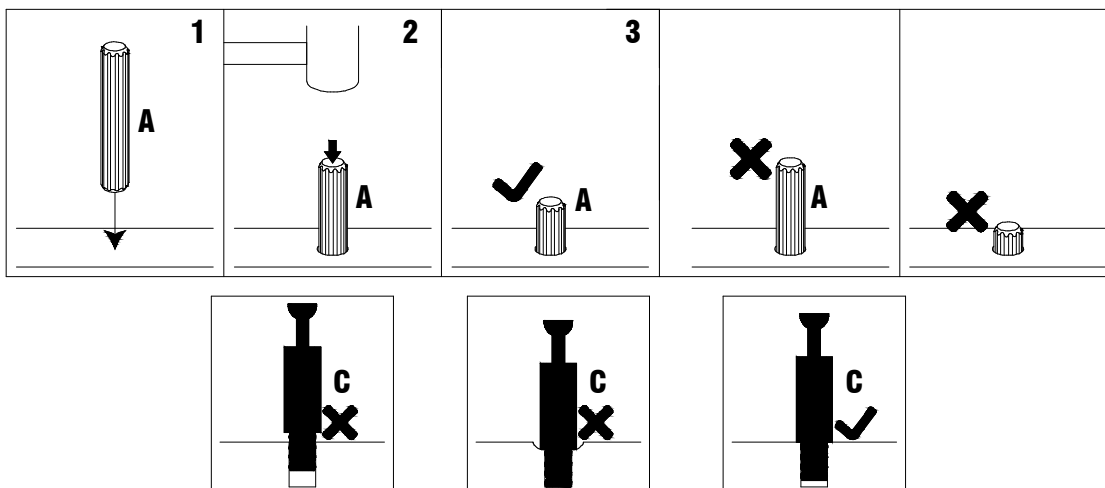


⚠ WARNING


- Unit must be placed on a level surface or leveled with included hardware (when applicable).
- Do not sit or stand on or allow children to climb, sit or stand on the assembled product.
- For safety reasons, it is imperative that this unit be mounted to the wall.
- Do not use without installing the tip restraint.
- Unit can tip over causing severe injury or death.
- Do not exceed the recommended weight limits.
- Evenly distribute the weight on each level and always keep the heavier loads on the bottom.
- Before cutting, drilling or hammering into any wall or floor surface, verify the location of electrical, plumbing and gas lines. Cutting may cause serious injury.

Specification name: two drawers nightstand


Step 1

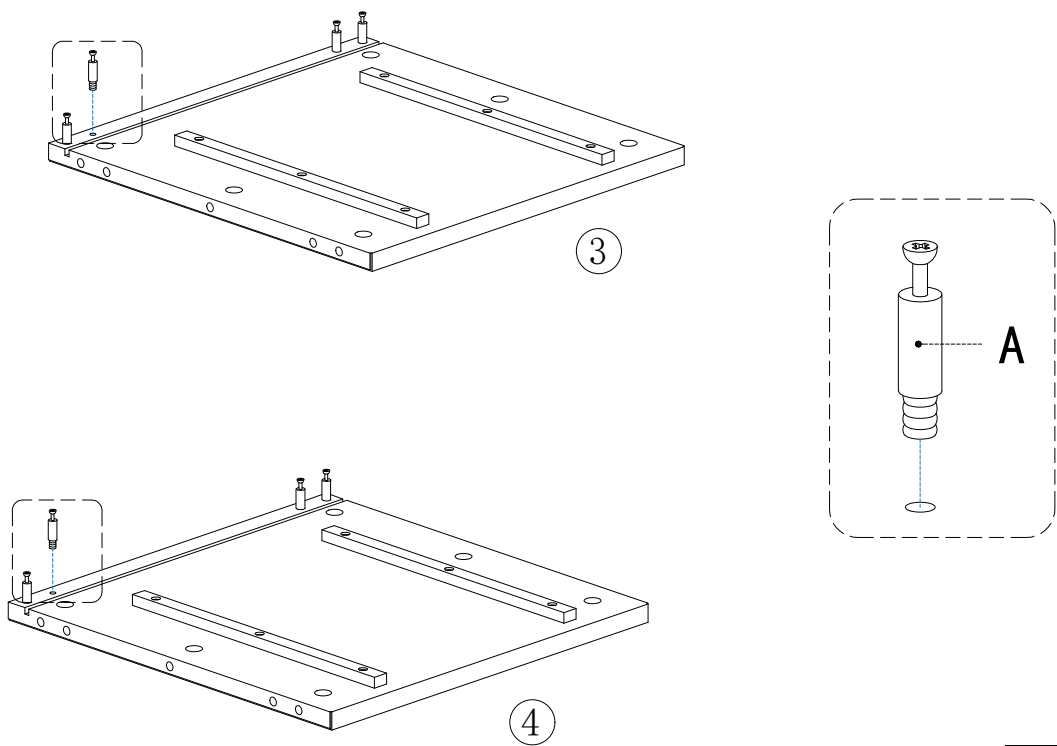

As shown, hardware A is secured to part 3/4 with tool G

A		8PCS
G		1PC

Step 2

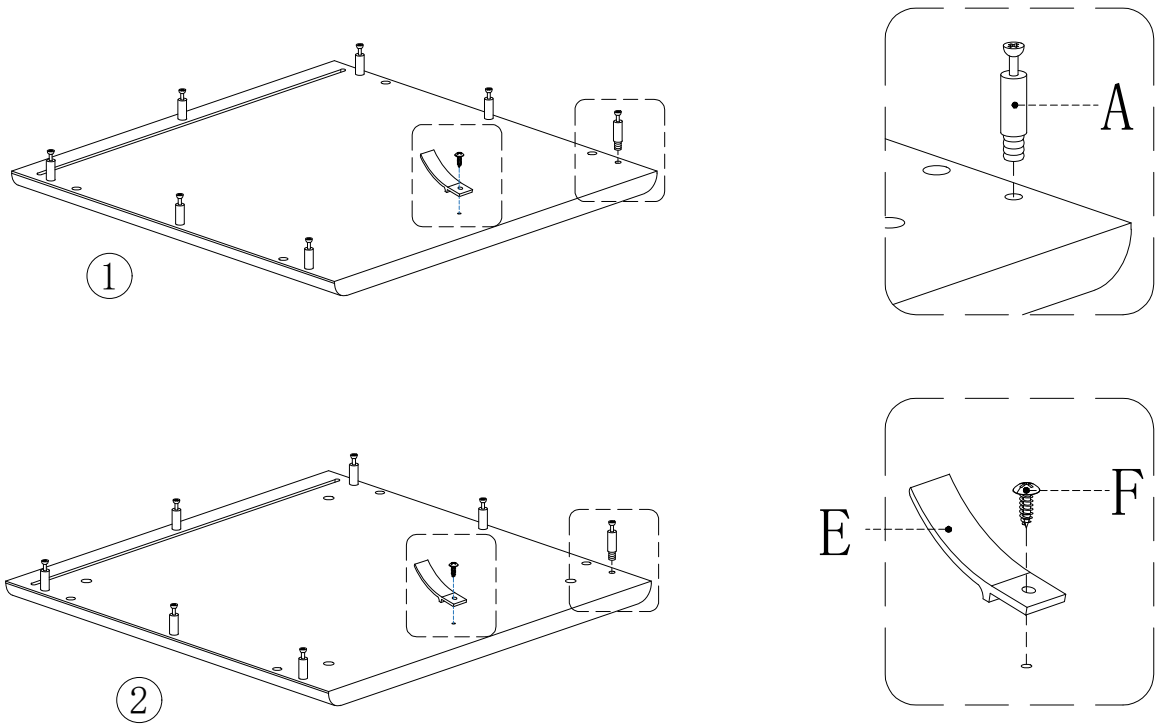


As shown, attach hardware A to part 1/2 with tool G.
Attach hardware E/F to part 1/2 with tool G.

A		14PCS	E		2PCS
G		1PC	F		2PCS

Specification name: two drawers nightstand


Step 3

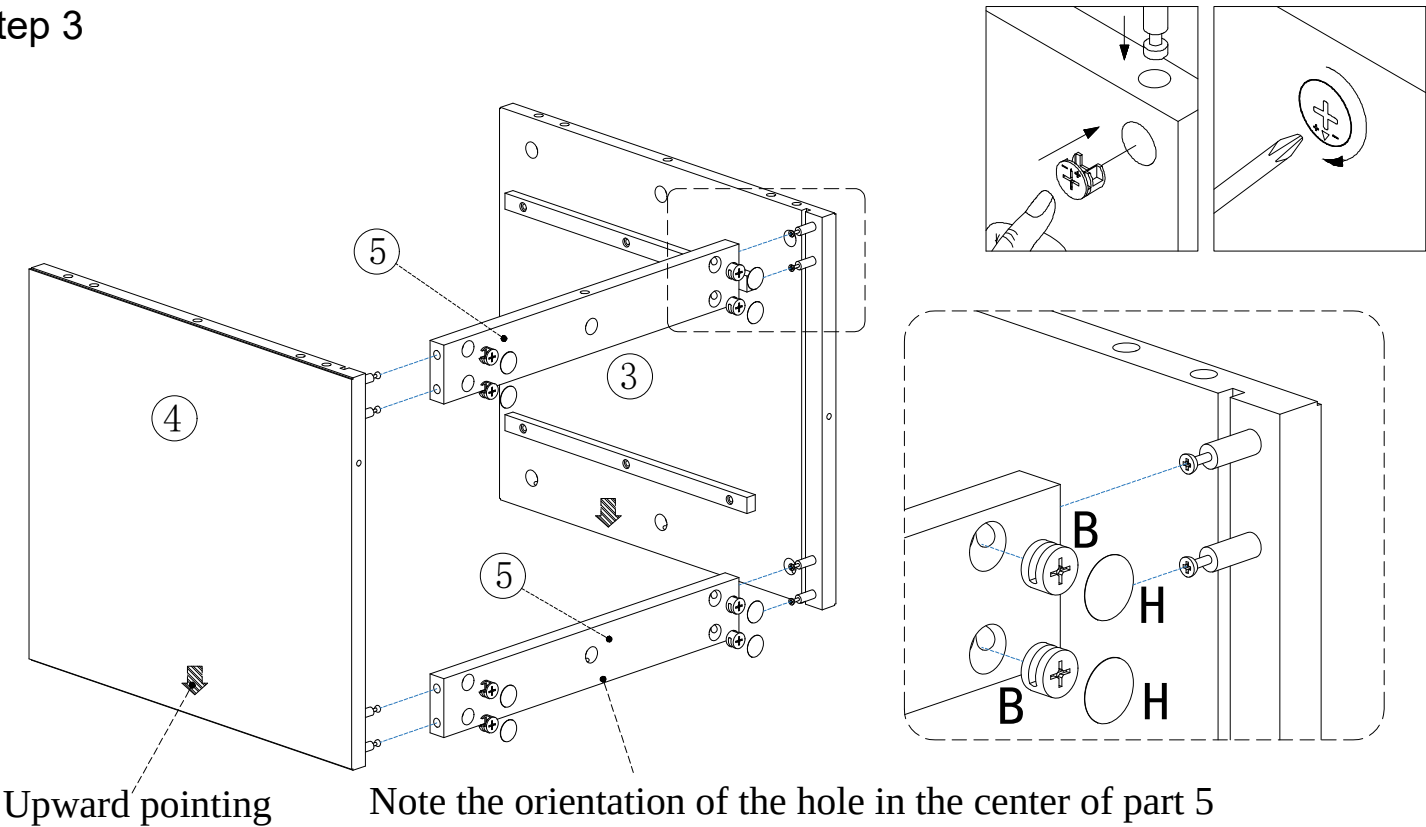

Attach parts 3/4/5 together with hardware B/G. Note the orientation of the hole in the center of part 5, and then cover the hole where part 5 is mounted with hardware H.

B	 Ø15*9MM	8PCS
G	 M6*136MM	1PC
H	 Ø20MM	8PCS


Step 4

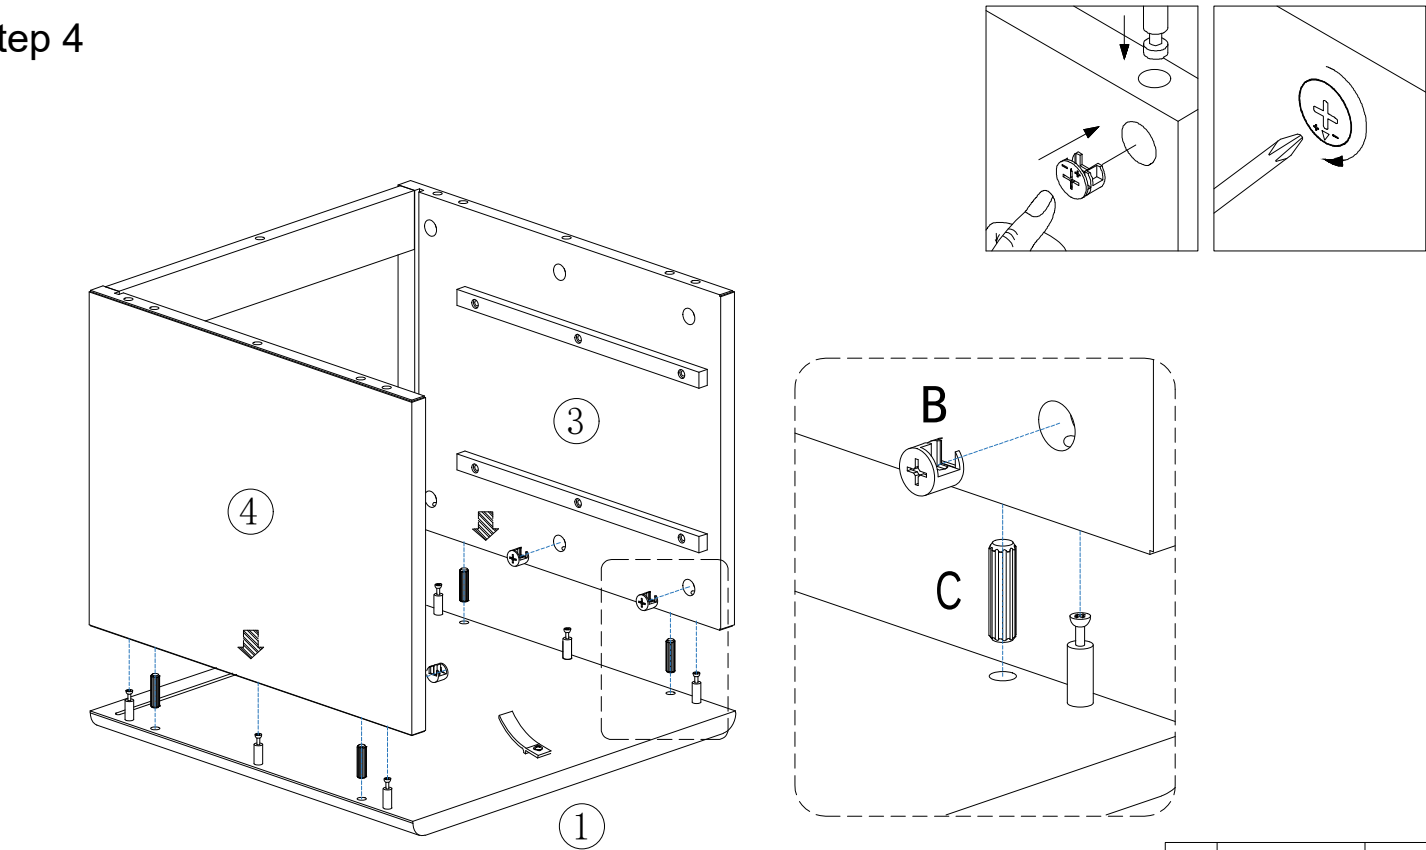

B	 Ø15*9MM	6PCS
C	 Ø8*30MM	4PCS
G	 M6*136MM	1PC


Specification name: two drawers nightstand

Step 5

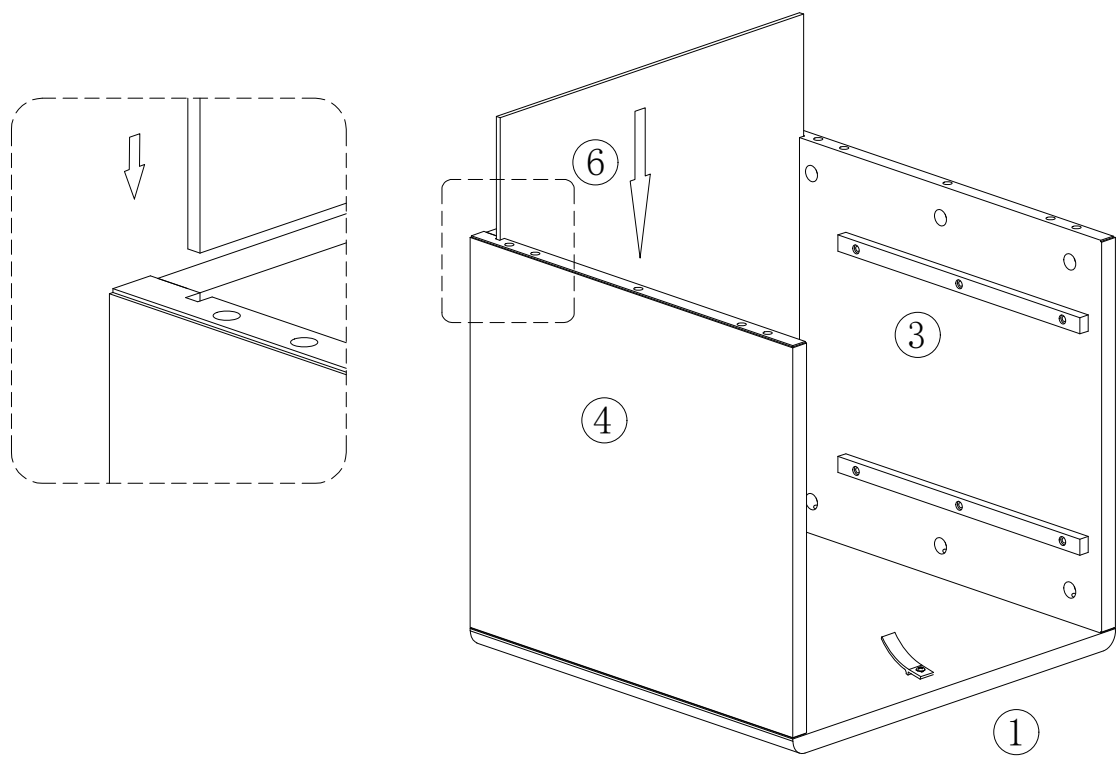

Insert part 6 into the grouped parts of Step 4 as shown

Step 6



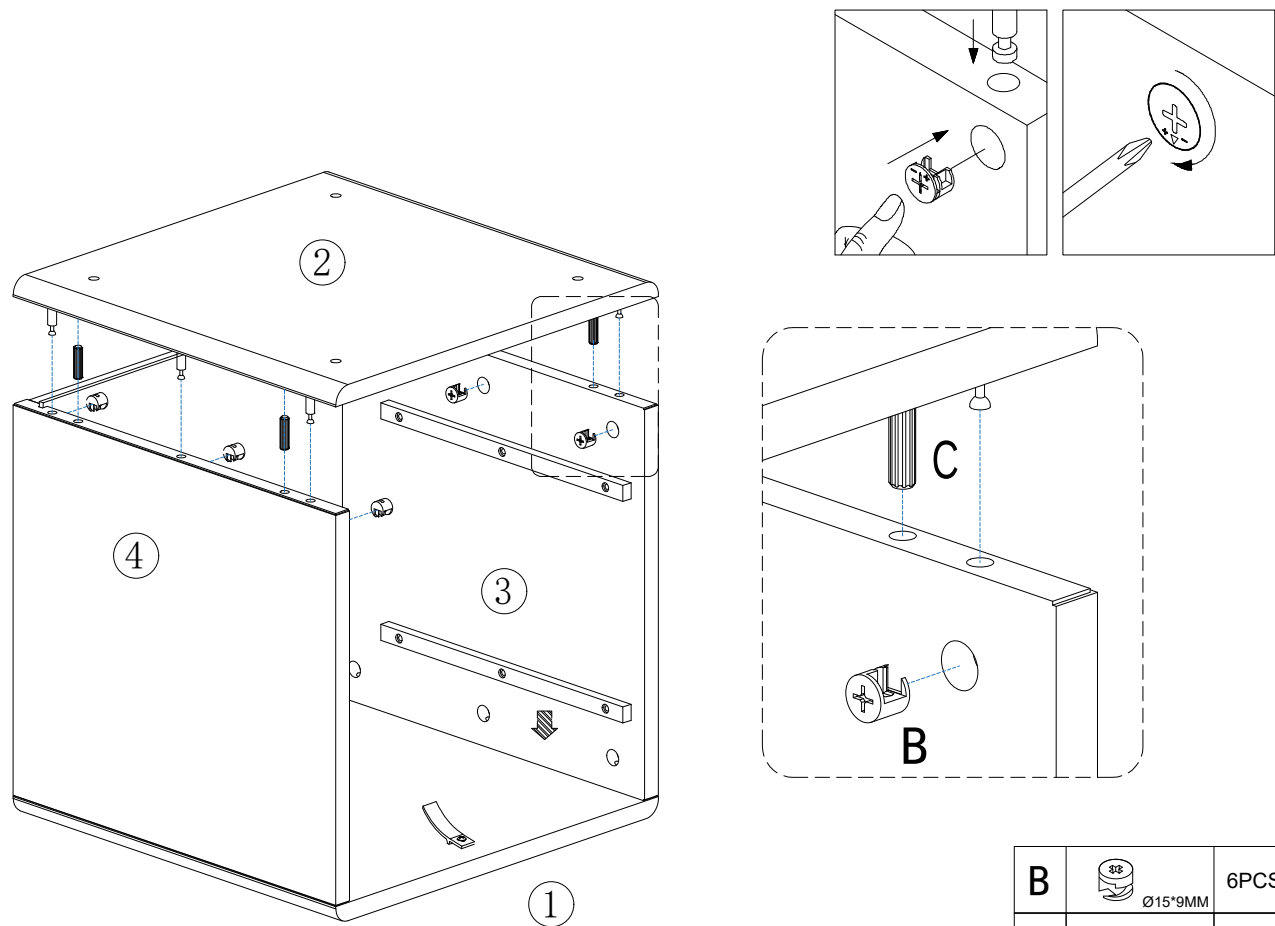


As shown, use hardware B/C/G to attach part 2 to the Step 5 grouped parts.

B	 Ø15*9MM	6PCS
C	 Ø8*30MM	4PCS
G	 M6*136MM	1PC

Specification name: two drawers nightstand



Step 7

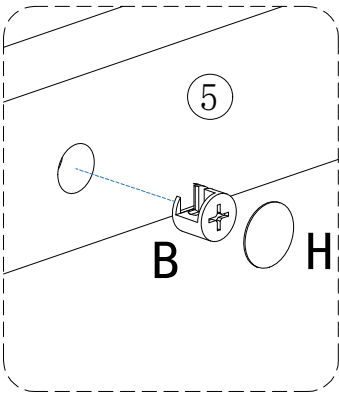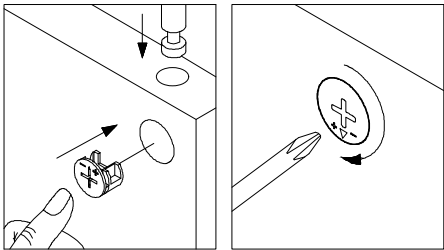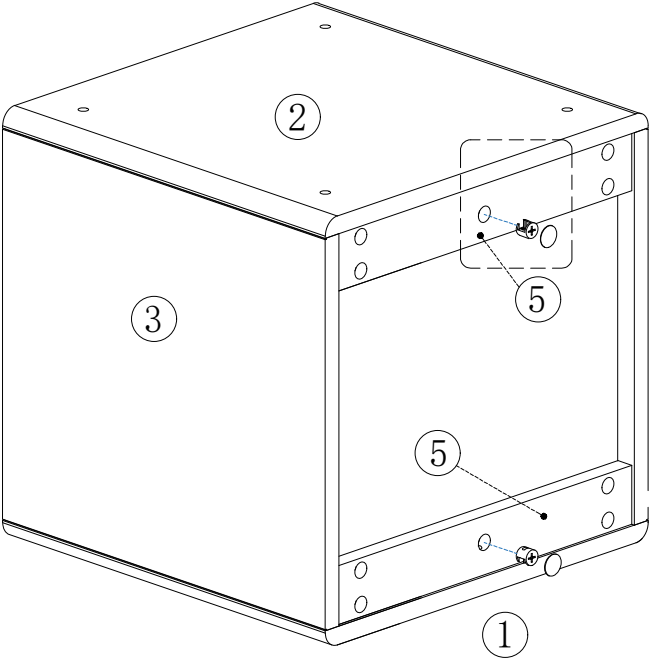

Attach parts 1/2/5 parts with hardware B/G and cover with hardware H as shown.

B	 Ø15*9MM	2PCS
G	 M6*136MM	1PC
H	 Ø20MM	2PCS



Step 8

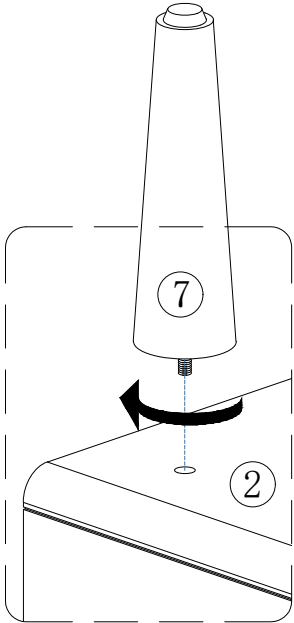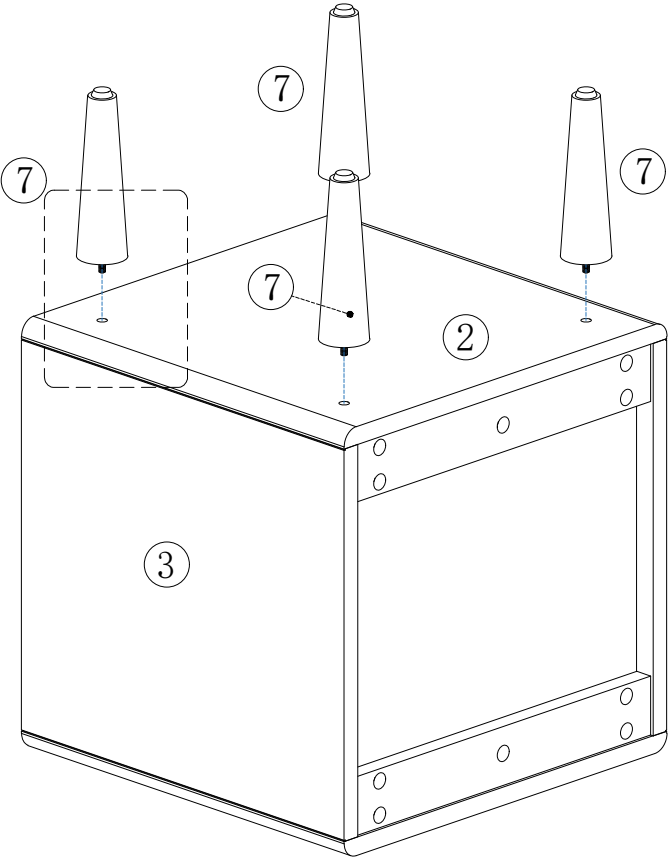

Tighten part 7 clockwise onto part 2 as shown.

Specification name: two drawers nightstand



Step 9

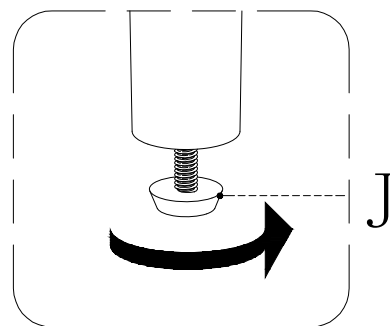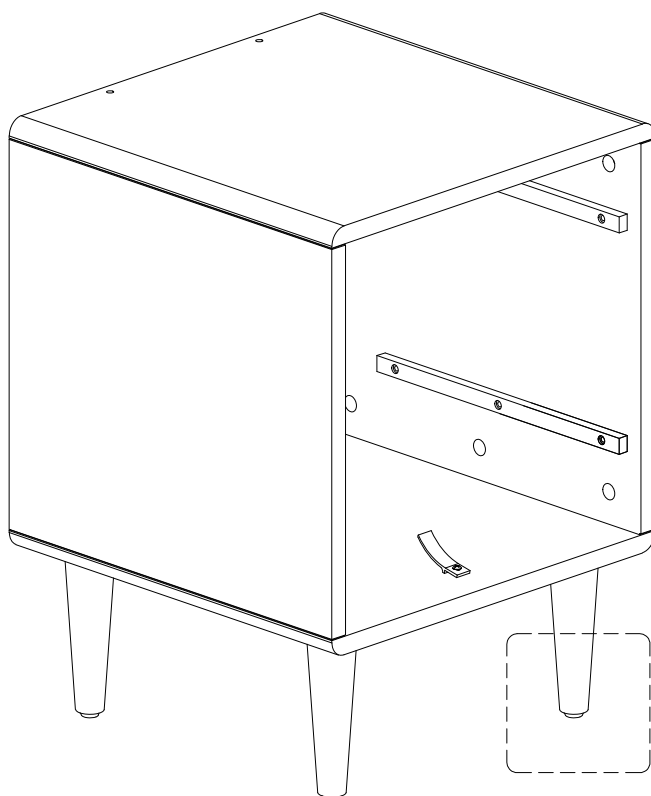

►As shown, rotate the appropriate hardware J to adjust the two drawer nightstand to level.

Step 10

Note that there are 2 identical drawers.

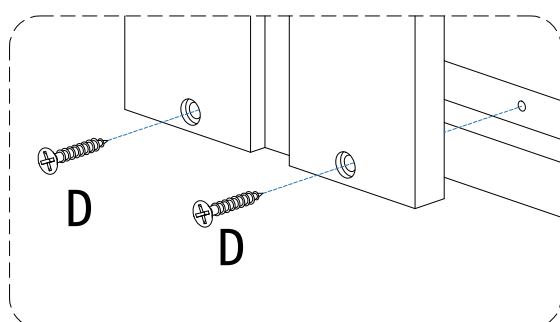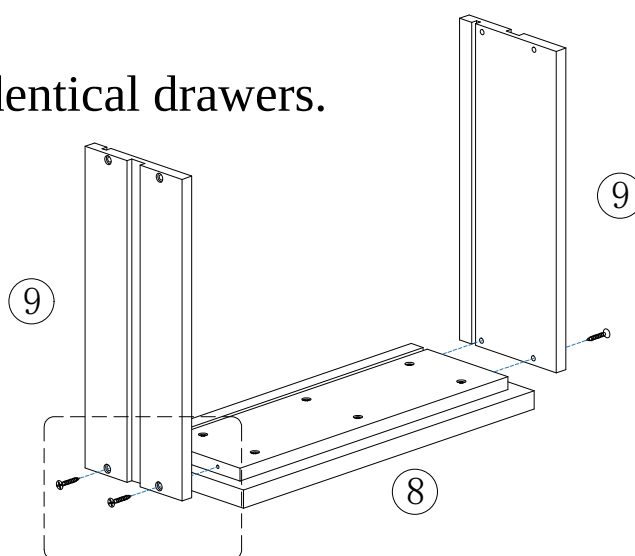


Attach parts 8/9 together with hardware D/G as shown.
Note that the same drawer has 2 .

D	 #8*25MM	8PCS
G	 M6*136MM	1PC

Specification name: two drawers nightstand

Step 11




▲ Note that there are 2 identical drawers.

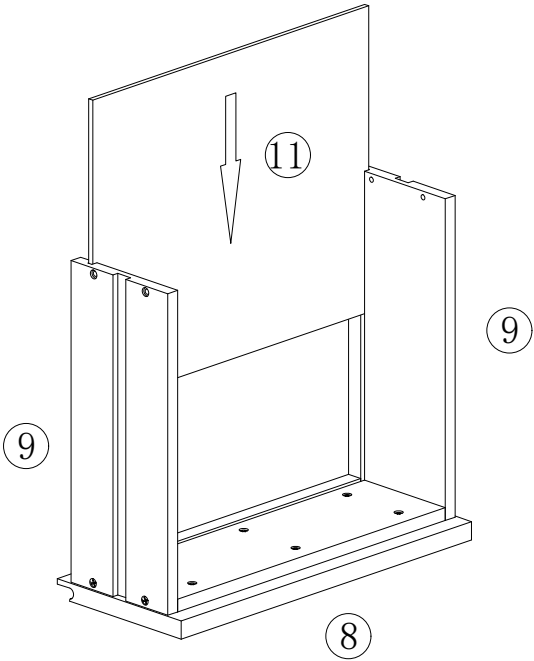

Insert part 11 into Step8 grouped parts as shown. Note that the same drawer has 2 .

Step 12

Note that there are 2 identical drawers.

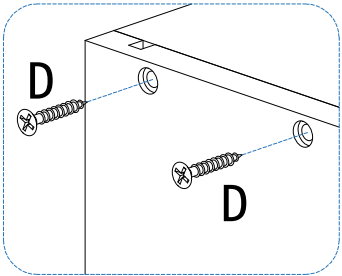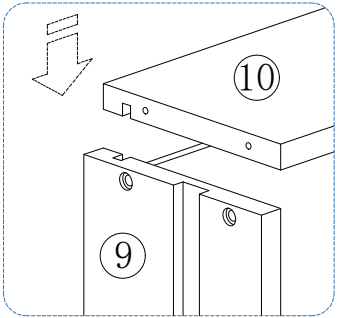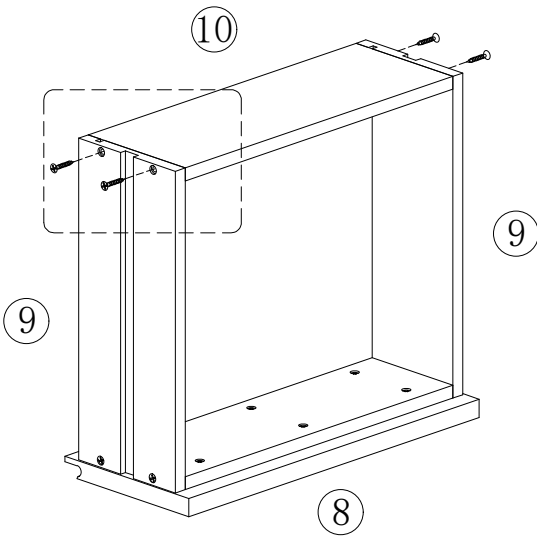


Attach parts 9/10 together with hardware D/G as shown.
Note that the same drawer has 2.

D	 #8*25MM	8PCS
G	 M6*136MM	1PC


Specification name: two drawers nightstand

Step 13

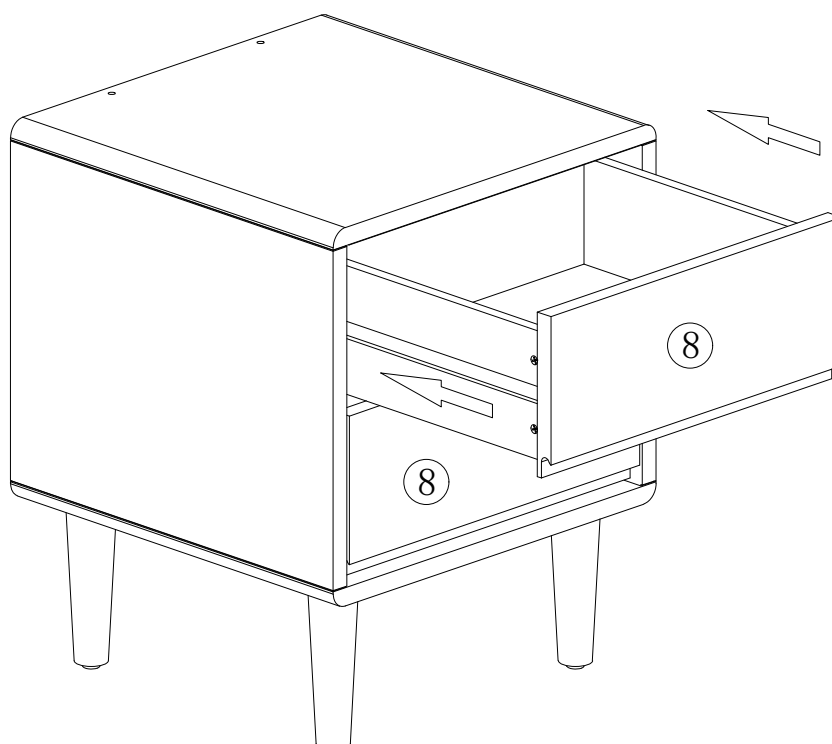

As shown in the picture, put the assembled drawers into the cabinet assembled in Step 9.

Step 14


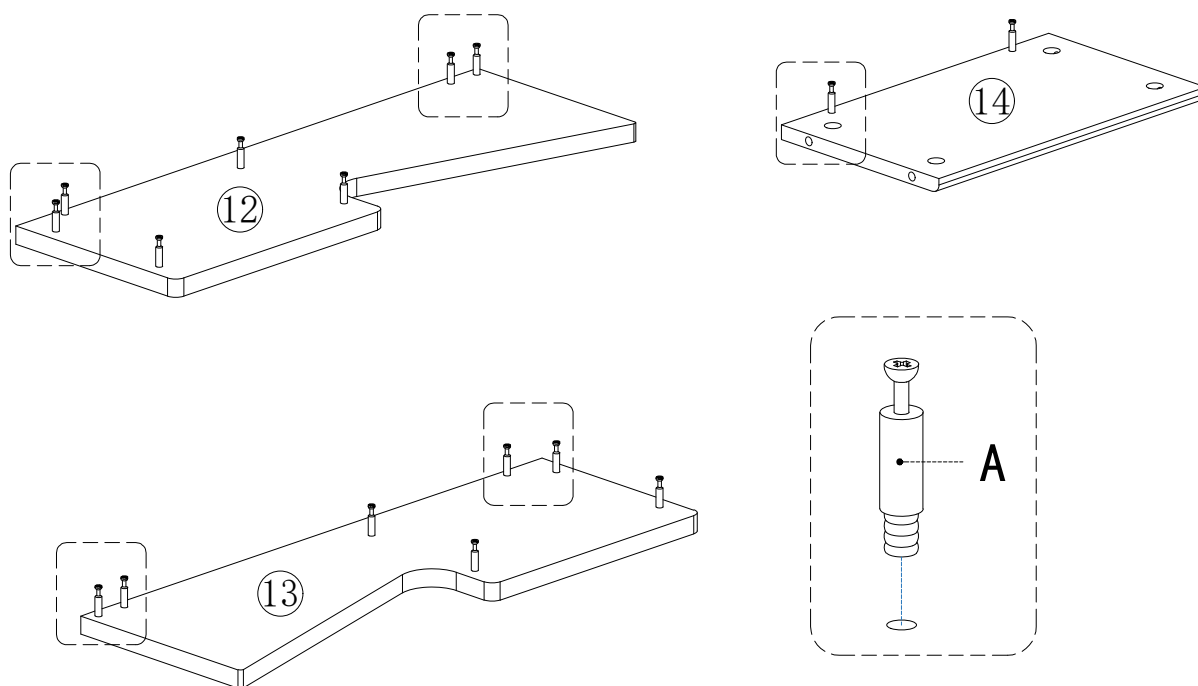


As shown, attach hardware A to part 12/13/14 with tool G


A	 L=40MM	16PCS
G	 M6*136MM	1PC

Specification name: two drawers nightstand



Step 15

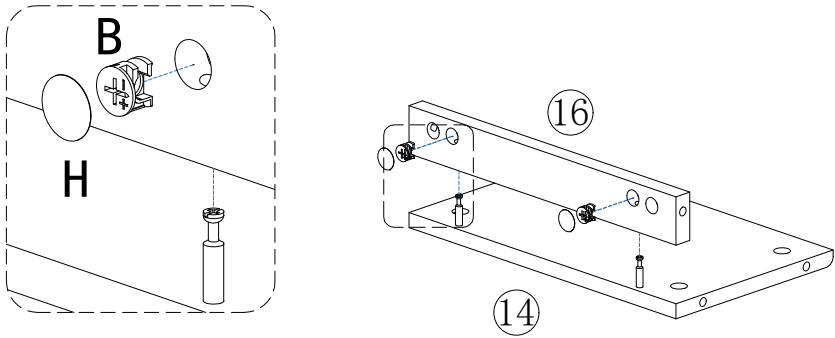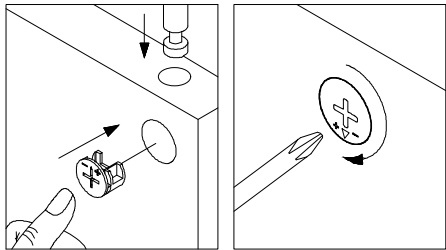


Attach parts #14/16 with hardware B/G and cover with hardware H as shown.

B	 Ø15*9MM	2PCS
G	 M6*136MM	1PC
H	 Ø20MM	2PCS

Step 16


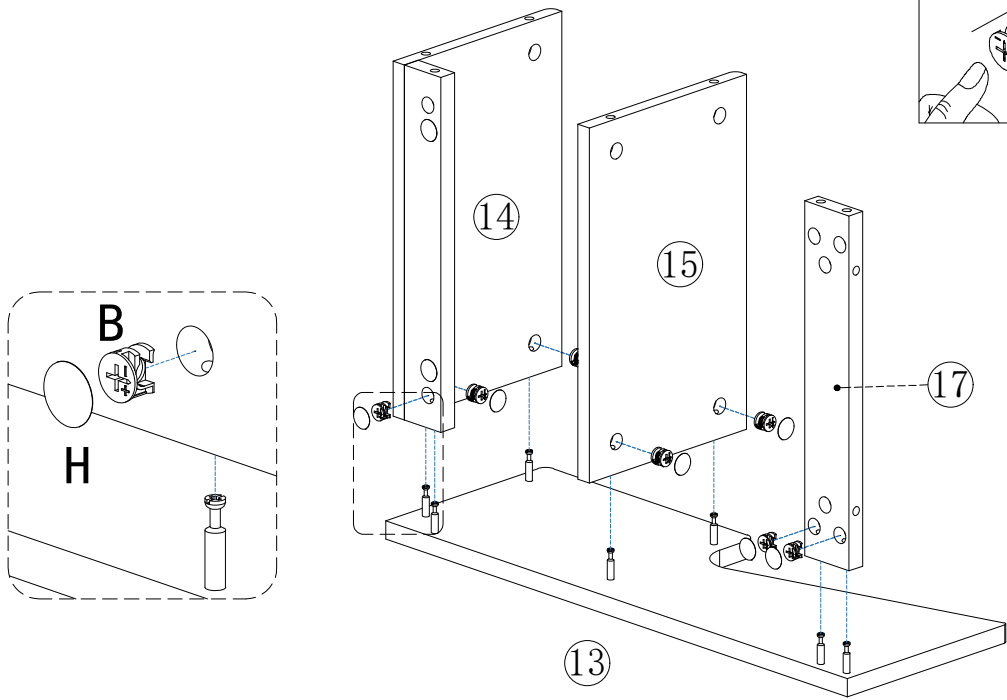
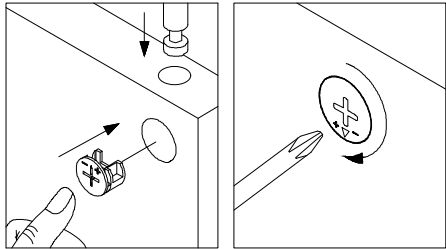


Attach the Step 15 grouped parts #13/15/17 with hardware B/G as shown, and cover with hardware H.

B	 Ø15*9MM	7PCS
G	 M6*136MM	1PC
H	 Ø20MM	7PCS

Specification name: two drawers nightstand



Step 17

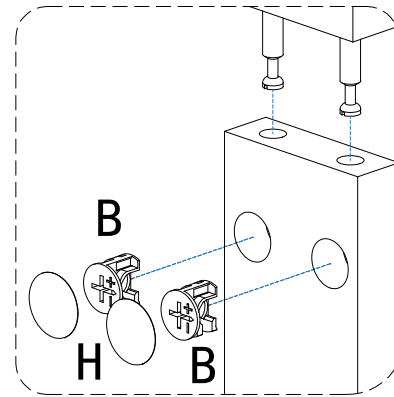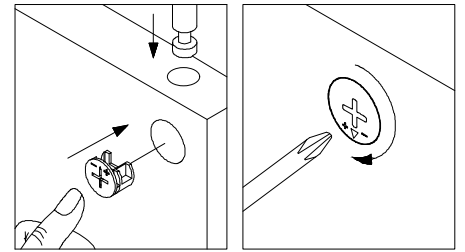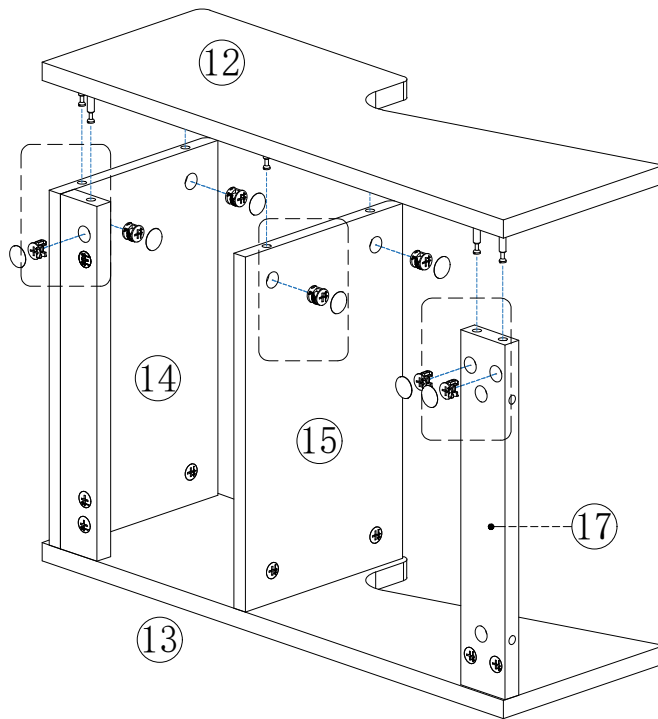

As shown, attach Step 16 grouped parts 12 with hardware B/G, and cover with hardware H

B	 Ø15*9MM	7PCS
G	 M6*136MM	1PC
H	 Ø20MM	7PCS

Step 18


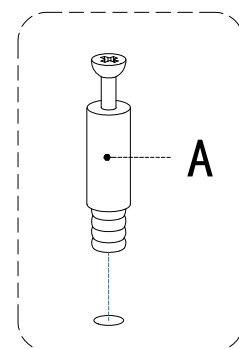
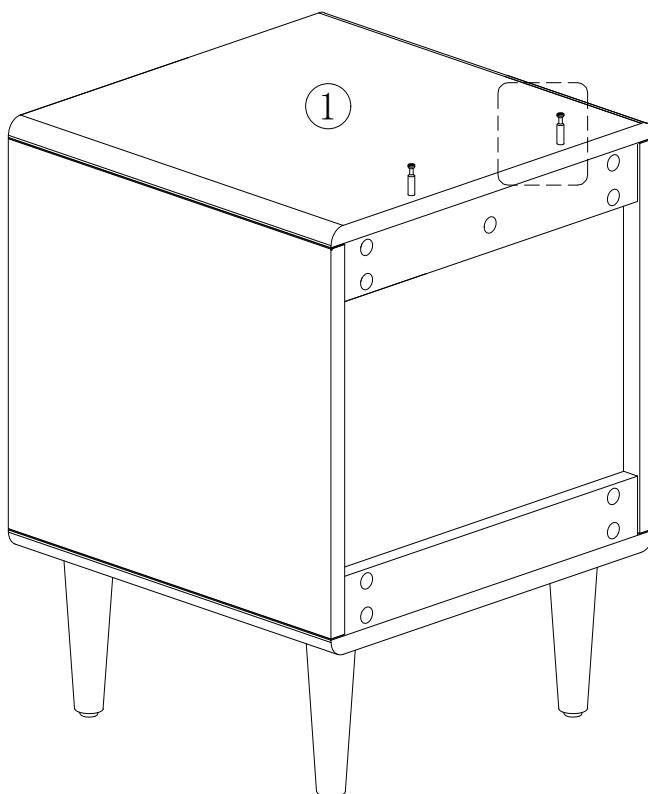


As shown in the figure, assemble the hardware A with tools in the position shown in Step 13 assembled parts

A	 L=40MM	2PCS
G	 M6*136MM	1PC

Specification name: two drawers nightstand

Step 19

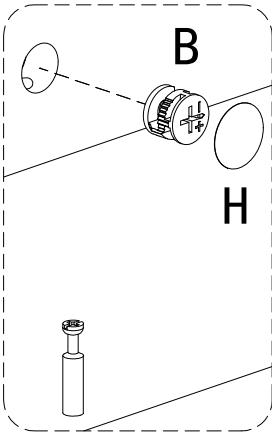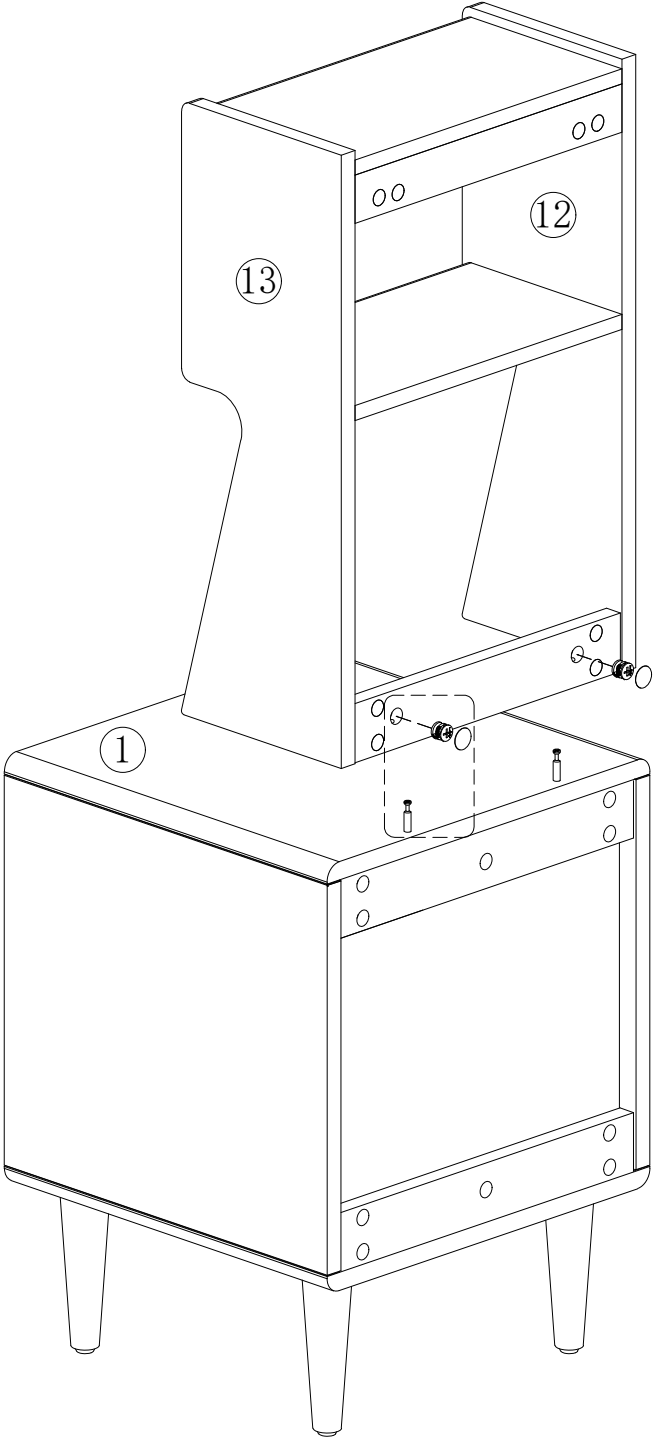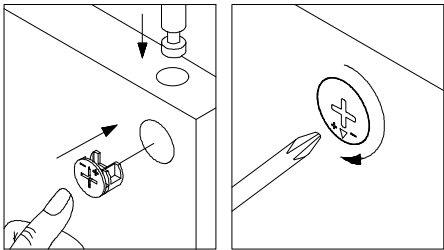


As shown, assemble the Step 17/Step 18 grouped parts with hardware B/G and cover with hardware H.


B	 Ø15*9MM	2PCS
G	 M6*136MM	1PC
H	 Ø20MM	2PCS

Specification name: two drawers nightstand

Step 20

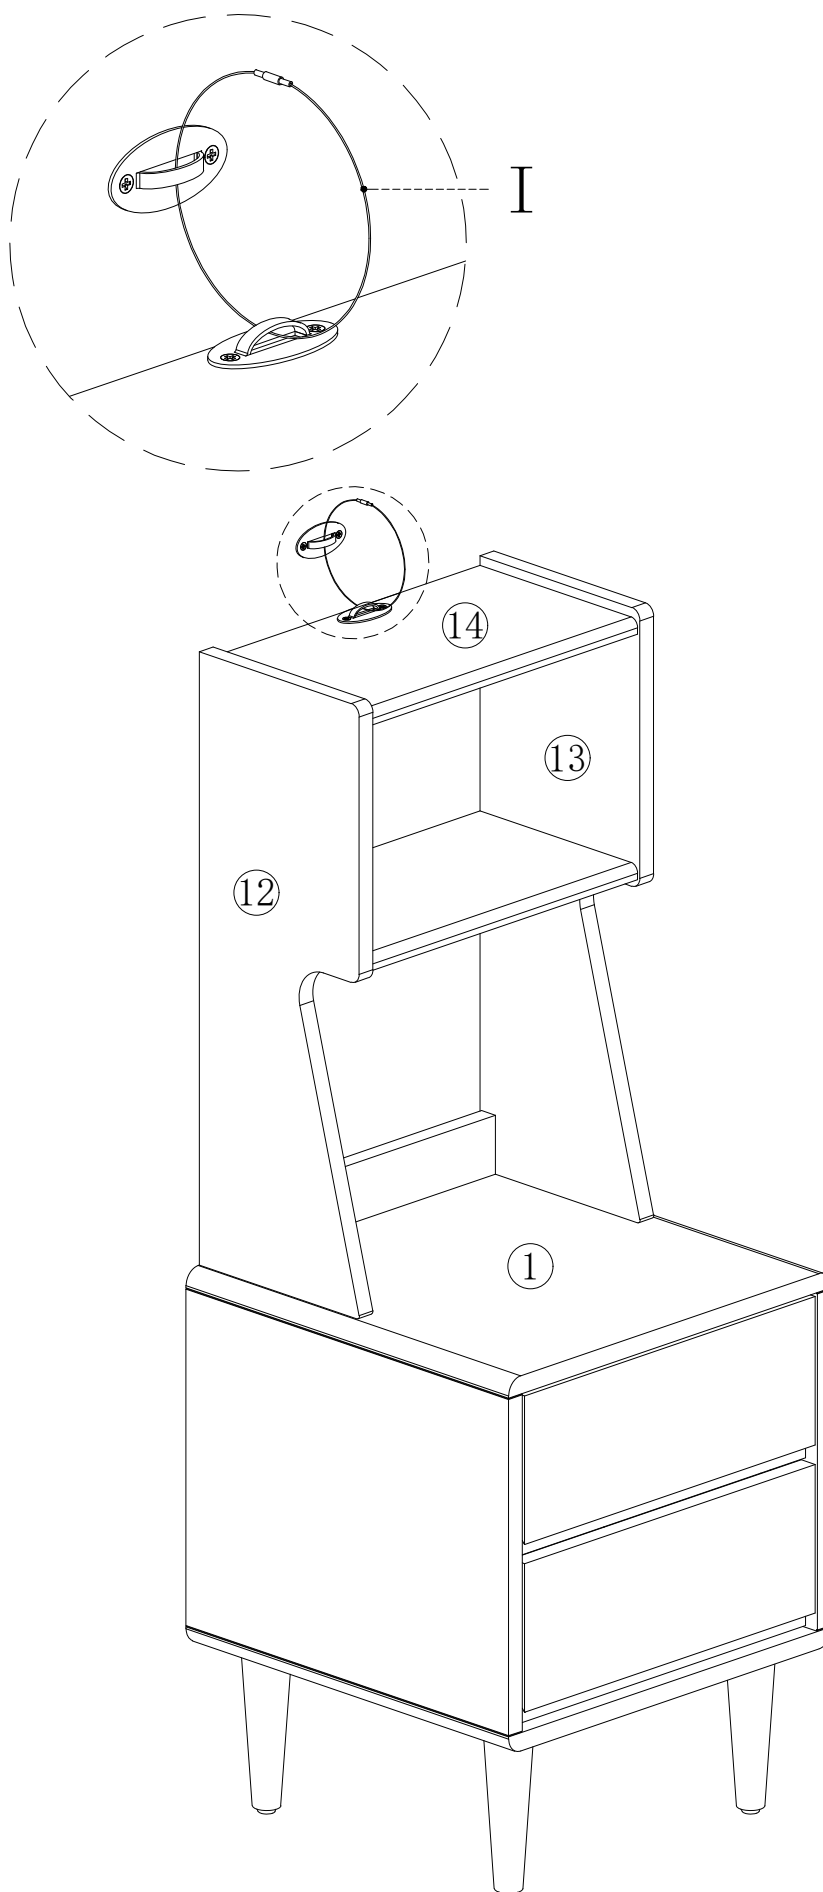

As shown, use hardware I to secure the Step19 grouped pieces to the wall.

G	 M6*136MM	1PC
I		1PCS