

NOTICE

- * Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 60 minutes.
- * Tools Required for Assembly (included): Allen Key.

CARE AND MAINTENANCE


Always use felt pads under all articles to prevent discoloration or softening of the lacquer. Plastic and rubber bases on items can discolor wood. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide.

Part list and Hardware list

PIECE	DESCRIPTION	PICTURE	QUANTITY
1	Top Panel		1X
2	Bottom Panel		1X
3	Left Panel		1X
4	Right Panel		1X
5	Rear Panel		1X
6	Drawer Support Panel		1X



Item ID : NST7701
Product Dimensions: W 35.4" x D 17.9 x H 30.4"

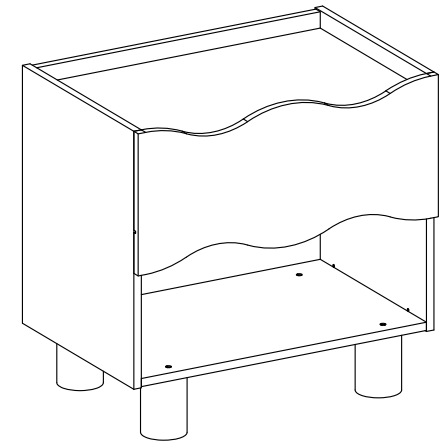

WEIGHT CAPACITY


Top : 52 Lbs




Drawer : 38 Lbs

Warning : Do not stand on the product.

Warning : Do not over torque bolts.


Part list and Hardware list

PIECE	DESCRIPTION	PICTURE	QUANTITY
7	Top Panel Support		1X
8	Leg		4X
9	Front Drawer		1X
10	Rear Drawer		1X
11	Left Drawer		1X
12	Right Drawer		1X
13	Drawer Support Panel		1X
14	Base Drawer		1X


PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Camlock Ø15 x 12 mm		15X
B	Cambolt M6 x 32 mm		15X
C	Cam Sticker		18X
D	Plastic Dowel M8 x 32 mm		30X
E	Screw M10 x 33.5 mm		7X
F	Screw M6.3 x50 mm		4X
G	Allen Key		1X
H	Felt Pad		4X
I	Supporting Pin		4X
J	Screw M3 x 12 mm		4X
K	Nylon Cable Ties		2X
L	Wall Bracket Plate		4X
M	Wall Fisher		4X
N	Screw M6 x 31 mm		4X

PREPARATION


- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 60 minutes.
- * Tools Required for Assembly (included): Allen Key
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

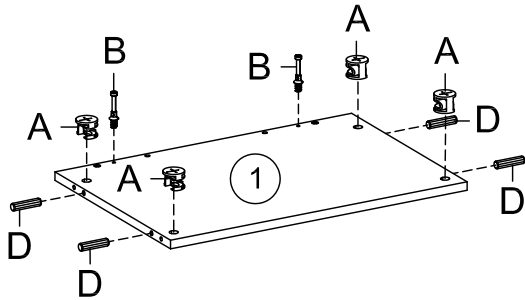


STEP1: Insert Camlock (A) and Plastic Dowel (D) into Top panel (1). Insert Cambolt (B) into Top panel (1) using Screwdriver.

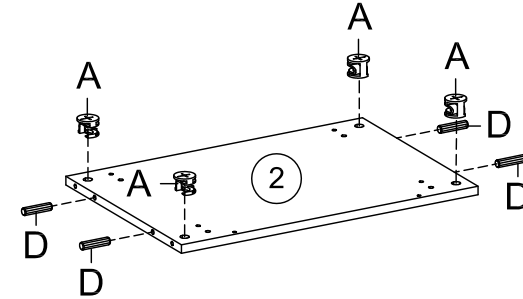


STEP2: Insert Camlock (A) and Plastic Dowel (D) into Bottom Panel (2).

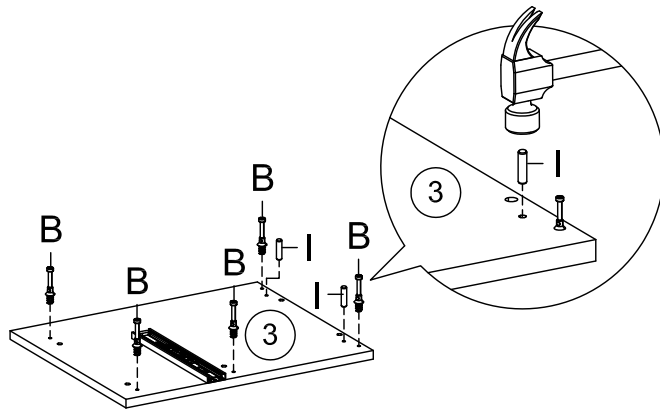


STEP3: Insert Supporting Pin (I) into Left Panel (3). Insert Cambolt (B) into Left Panel (3) using Screwdriver.

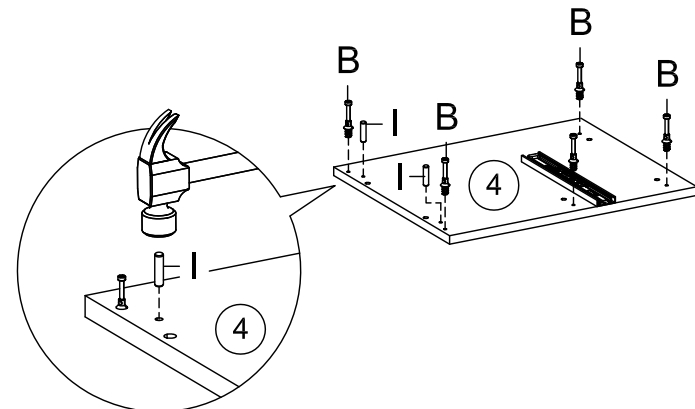


STEP4: Insert Supporting Pin (I) into Right Panel (4). Insert Cambolt (B) into Right Panel (4) using Screwdriver.

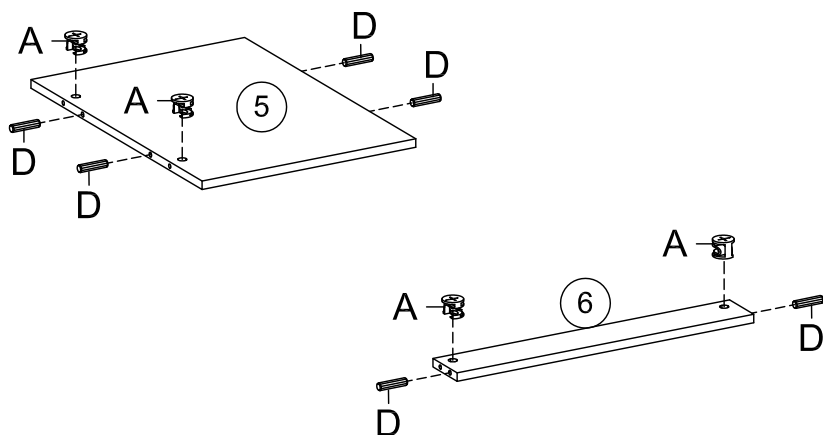


STEP5: Insert Plastic Dowel (D) and Camlock (A) into Rear Panel (5) and Drawer Support Panel (6).

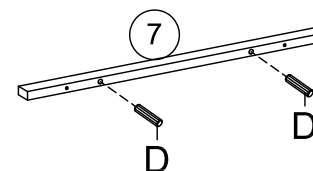


STEP6: Insert Plastic Dowel (D) into Top Panel Support (7).

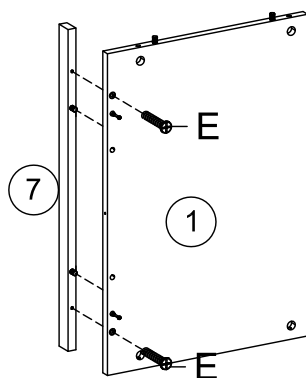


STEP7: Attach Top Panel Support (7) to Top Panel (1) using Screw (E).

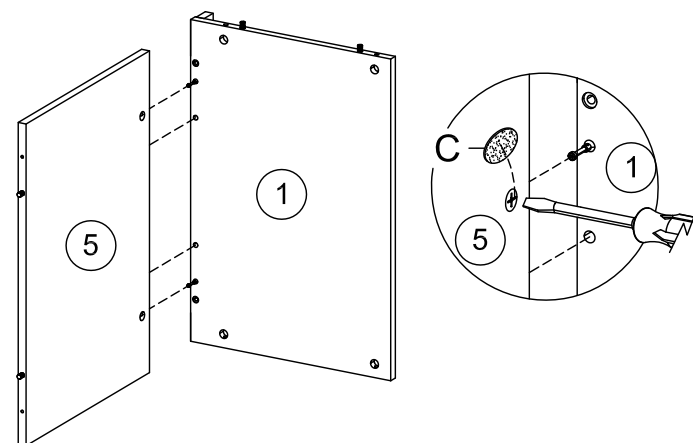


STEP8: Attach Rear Panel (5) to Top Panel (1) as shown. Tighten Camlock (A) using Screwdriver, then paste Cam Sticker (C) to cover it.

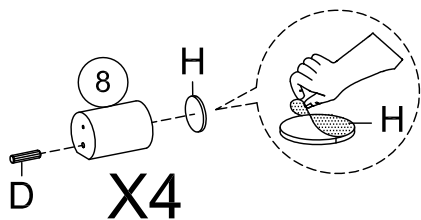


STEP9: Insert Plastic Dowel (D) into four Leg (8). Peel off and paste Felt Pad (H) to each Leg (8) as shown.

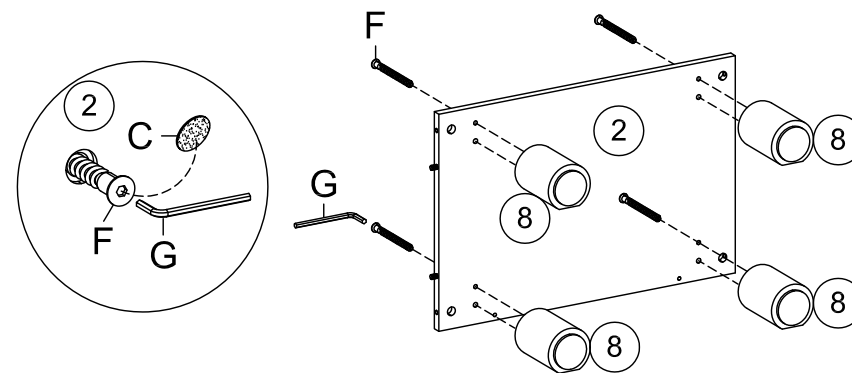


STEP10: Attach four Leg (8) to Bottom Panel (2) using Screw (F). Tighten Screw (F) using Allen Key (G), then paste Cam Sticker (C) to cover it.

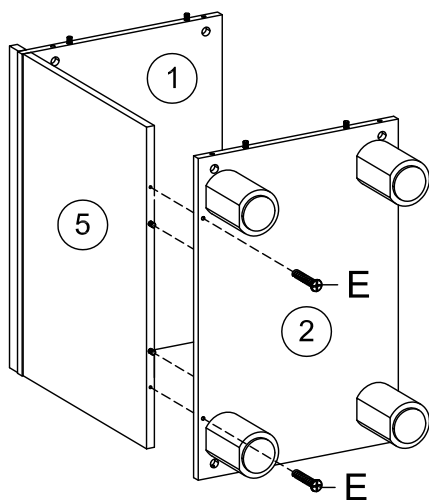


STEP11: Attach Bottom Panel (2) to Rear Panel (5) using Screw (E).

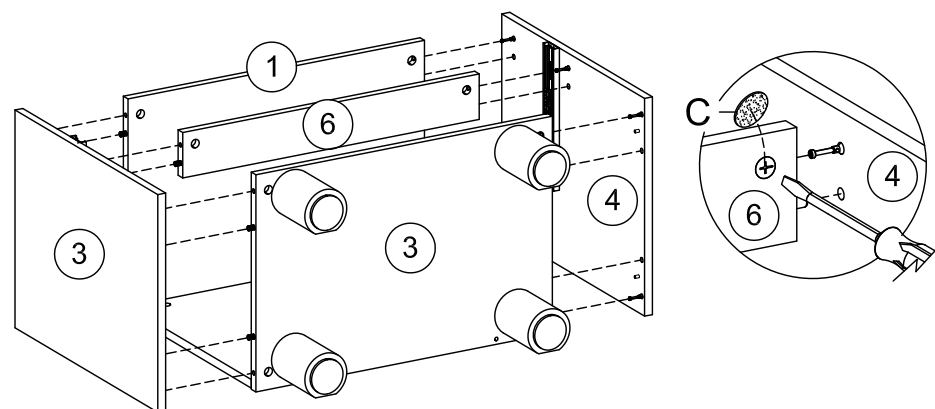


STEP12: Attach Left Panel (3) and Right Panel (4) to the assembled unit. Tighten Camlock (A) using Screwdriver, then paste Cam Sticker (C) to cover it.

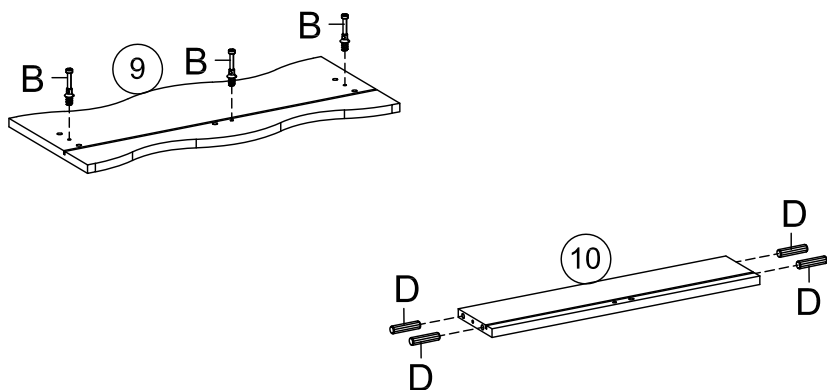


STEP13: Insert Cambolt (B) into Front Drawer (9) using Screwdriver.
Insert Plastic Dowel (D) into Rear Drawer (10).

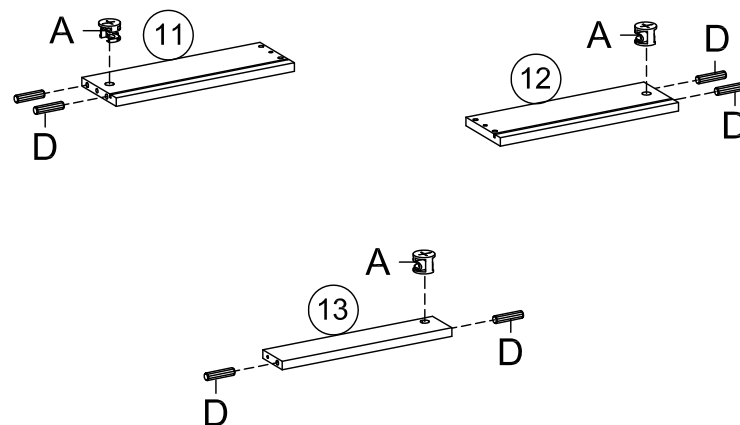


STEP14: Insert Camlock (A) and Plastic Dowel (D) into Left Drawer (11), Right Drawer (12) and Drawer Support Panel (13).

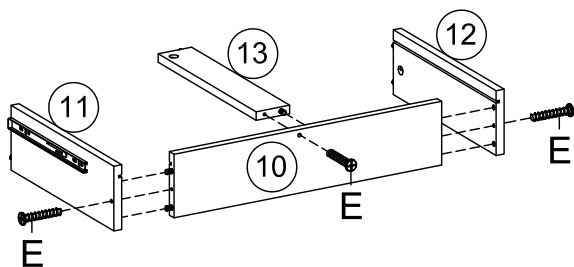


STEP15: Attach Left Drawer (11), Right Drawer (12) and Base Drawer Support (13) to Rear Drawer (10) using Screw (E).

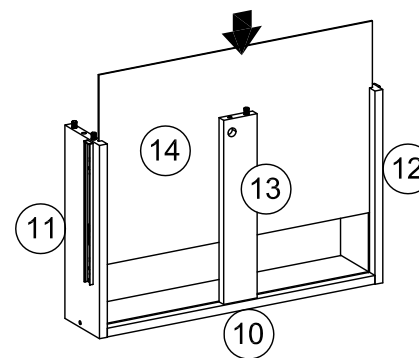


STEP16: Insert Base Drawer (14) into the assembled drawer as shown.

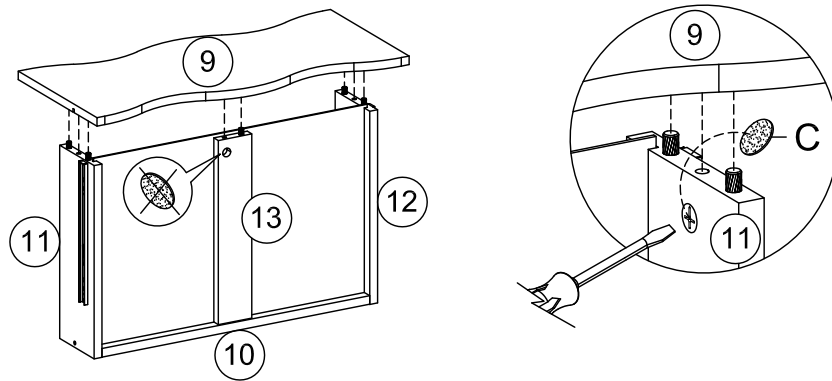

STEP17: Attach Front Drawer (9) to the assembled drawer as shown. Tighten Camlock (A) using Screwdriver, then paste Cam Sticker (C) to cover it.

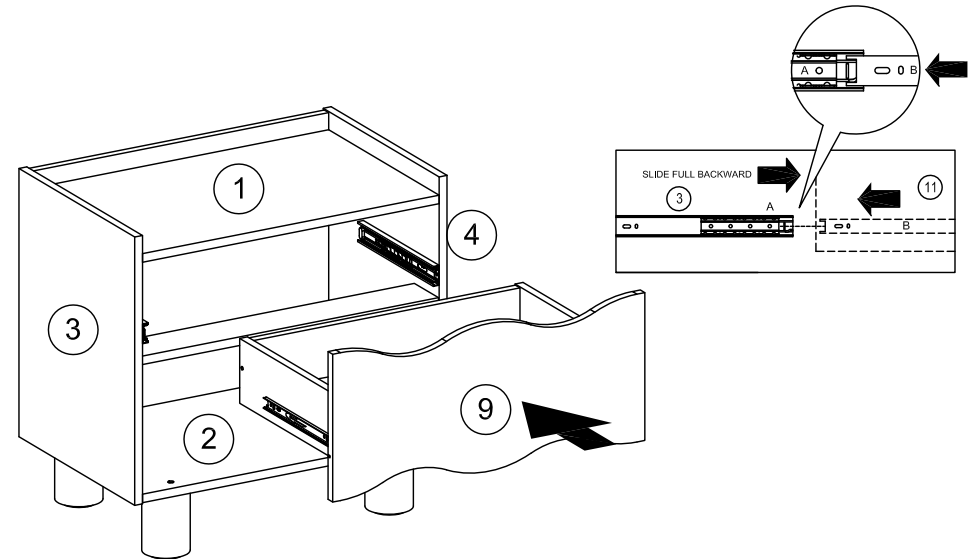

STEP18: Insert all drawers into the cabinet as shown.

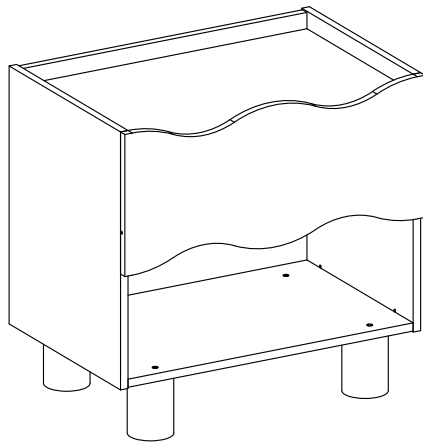

STEP19: Assembly is complete.


TIPPING RESTRAINTS KIT INSTALLATION GUIDANCE

Different wall materials require unique wall fasteners.


Please consult your local hardware store to ensure you are using the correct hardware for you wall type.




J x 4




K x 2








L x 4



M x 4



N x 4

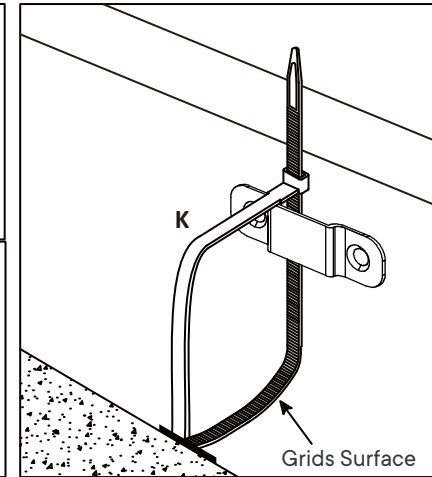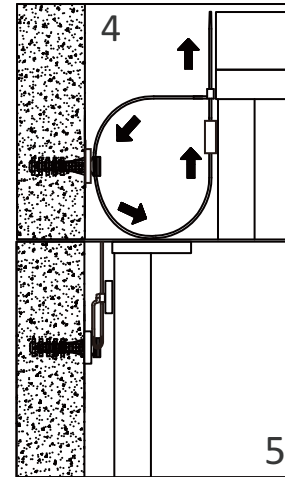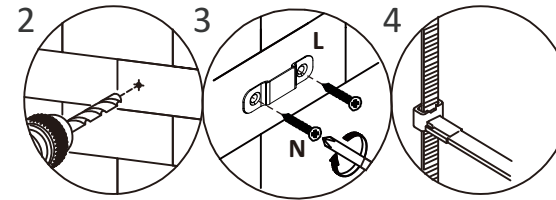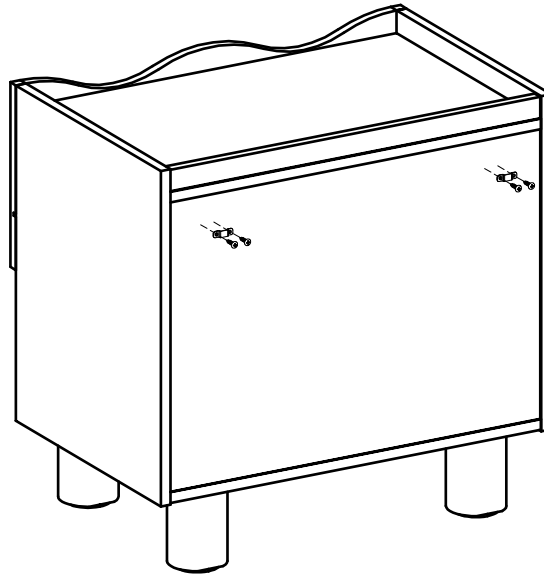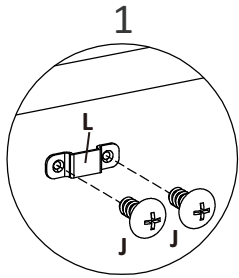

Installation Instructions :

1. Attach wall bracket plate (L) securely to the back top of the furniture using short screw (J) provided.
2. Please make a hole on the wall for attach the wall bracket plate (L) to the back of unit.
3. Attach wall bracket plate (L) on the wall using long screw (N) as shown.
Locate the other wall bracket plate (L) on the wall. Place furniture into position so both wall brackets (L) as shown.
4. Lace the end of the restraints strap through the larger hole in each bracket. Ensure the restraints strap with grids surface facing the inner loops. Bring both ends together and slide the flat end through the locking end and draw it through until all slack is removed.
5. Make sure that the strap is securely laced & locked.