


Assembly Instruction

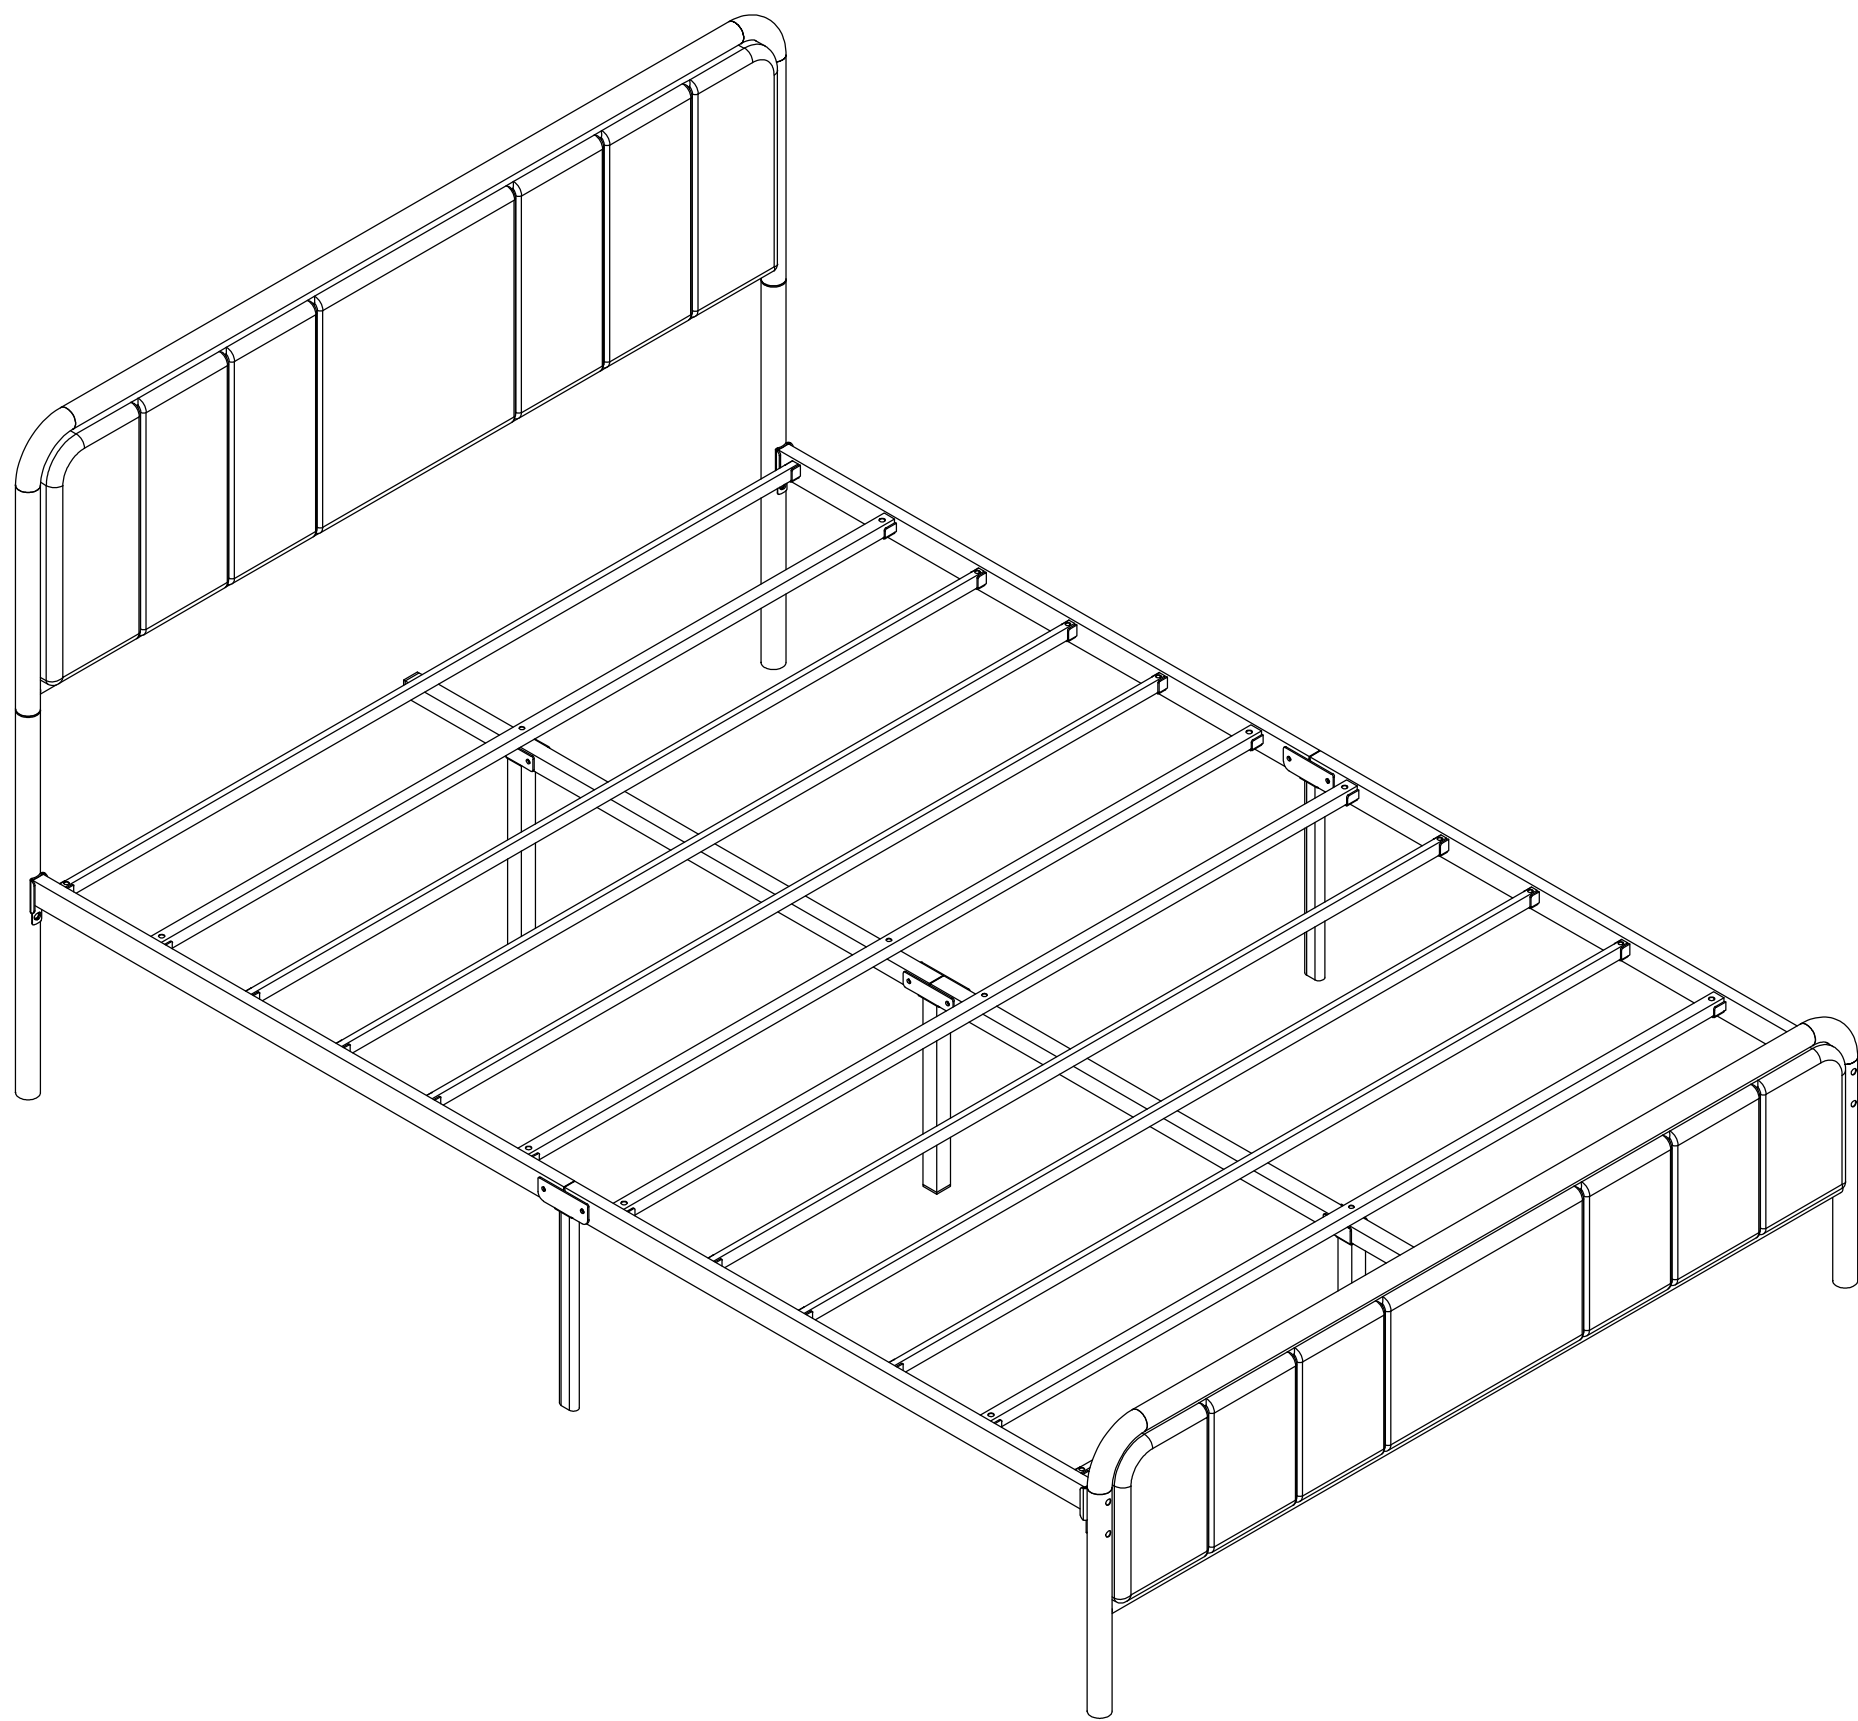


Instruction Manual

Thank you for shopping with us!

We appreciate your purchase and are ready to be at your service!


if you find parts missing, broken, or hard to put together or when you are not satisfied or have any valuable suggestions, please do not hesitate to contact us first!

We will definitely give you a satisfactory solution or answer then!

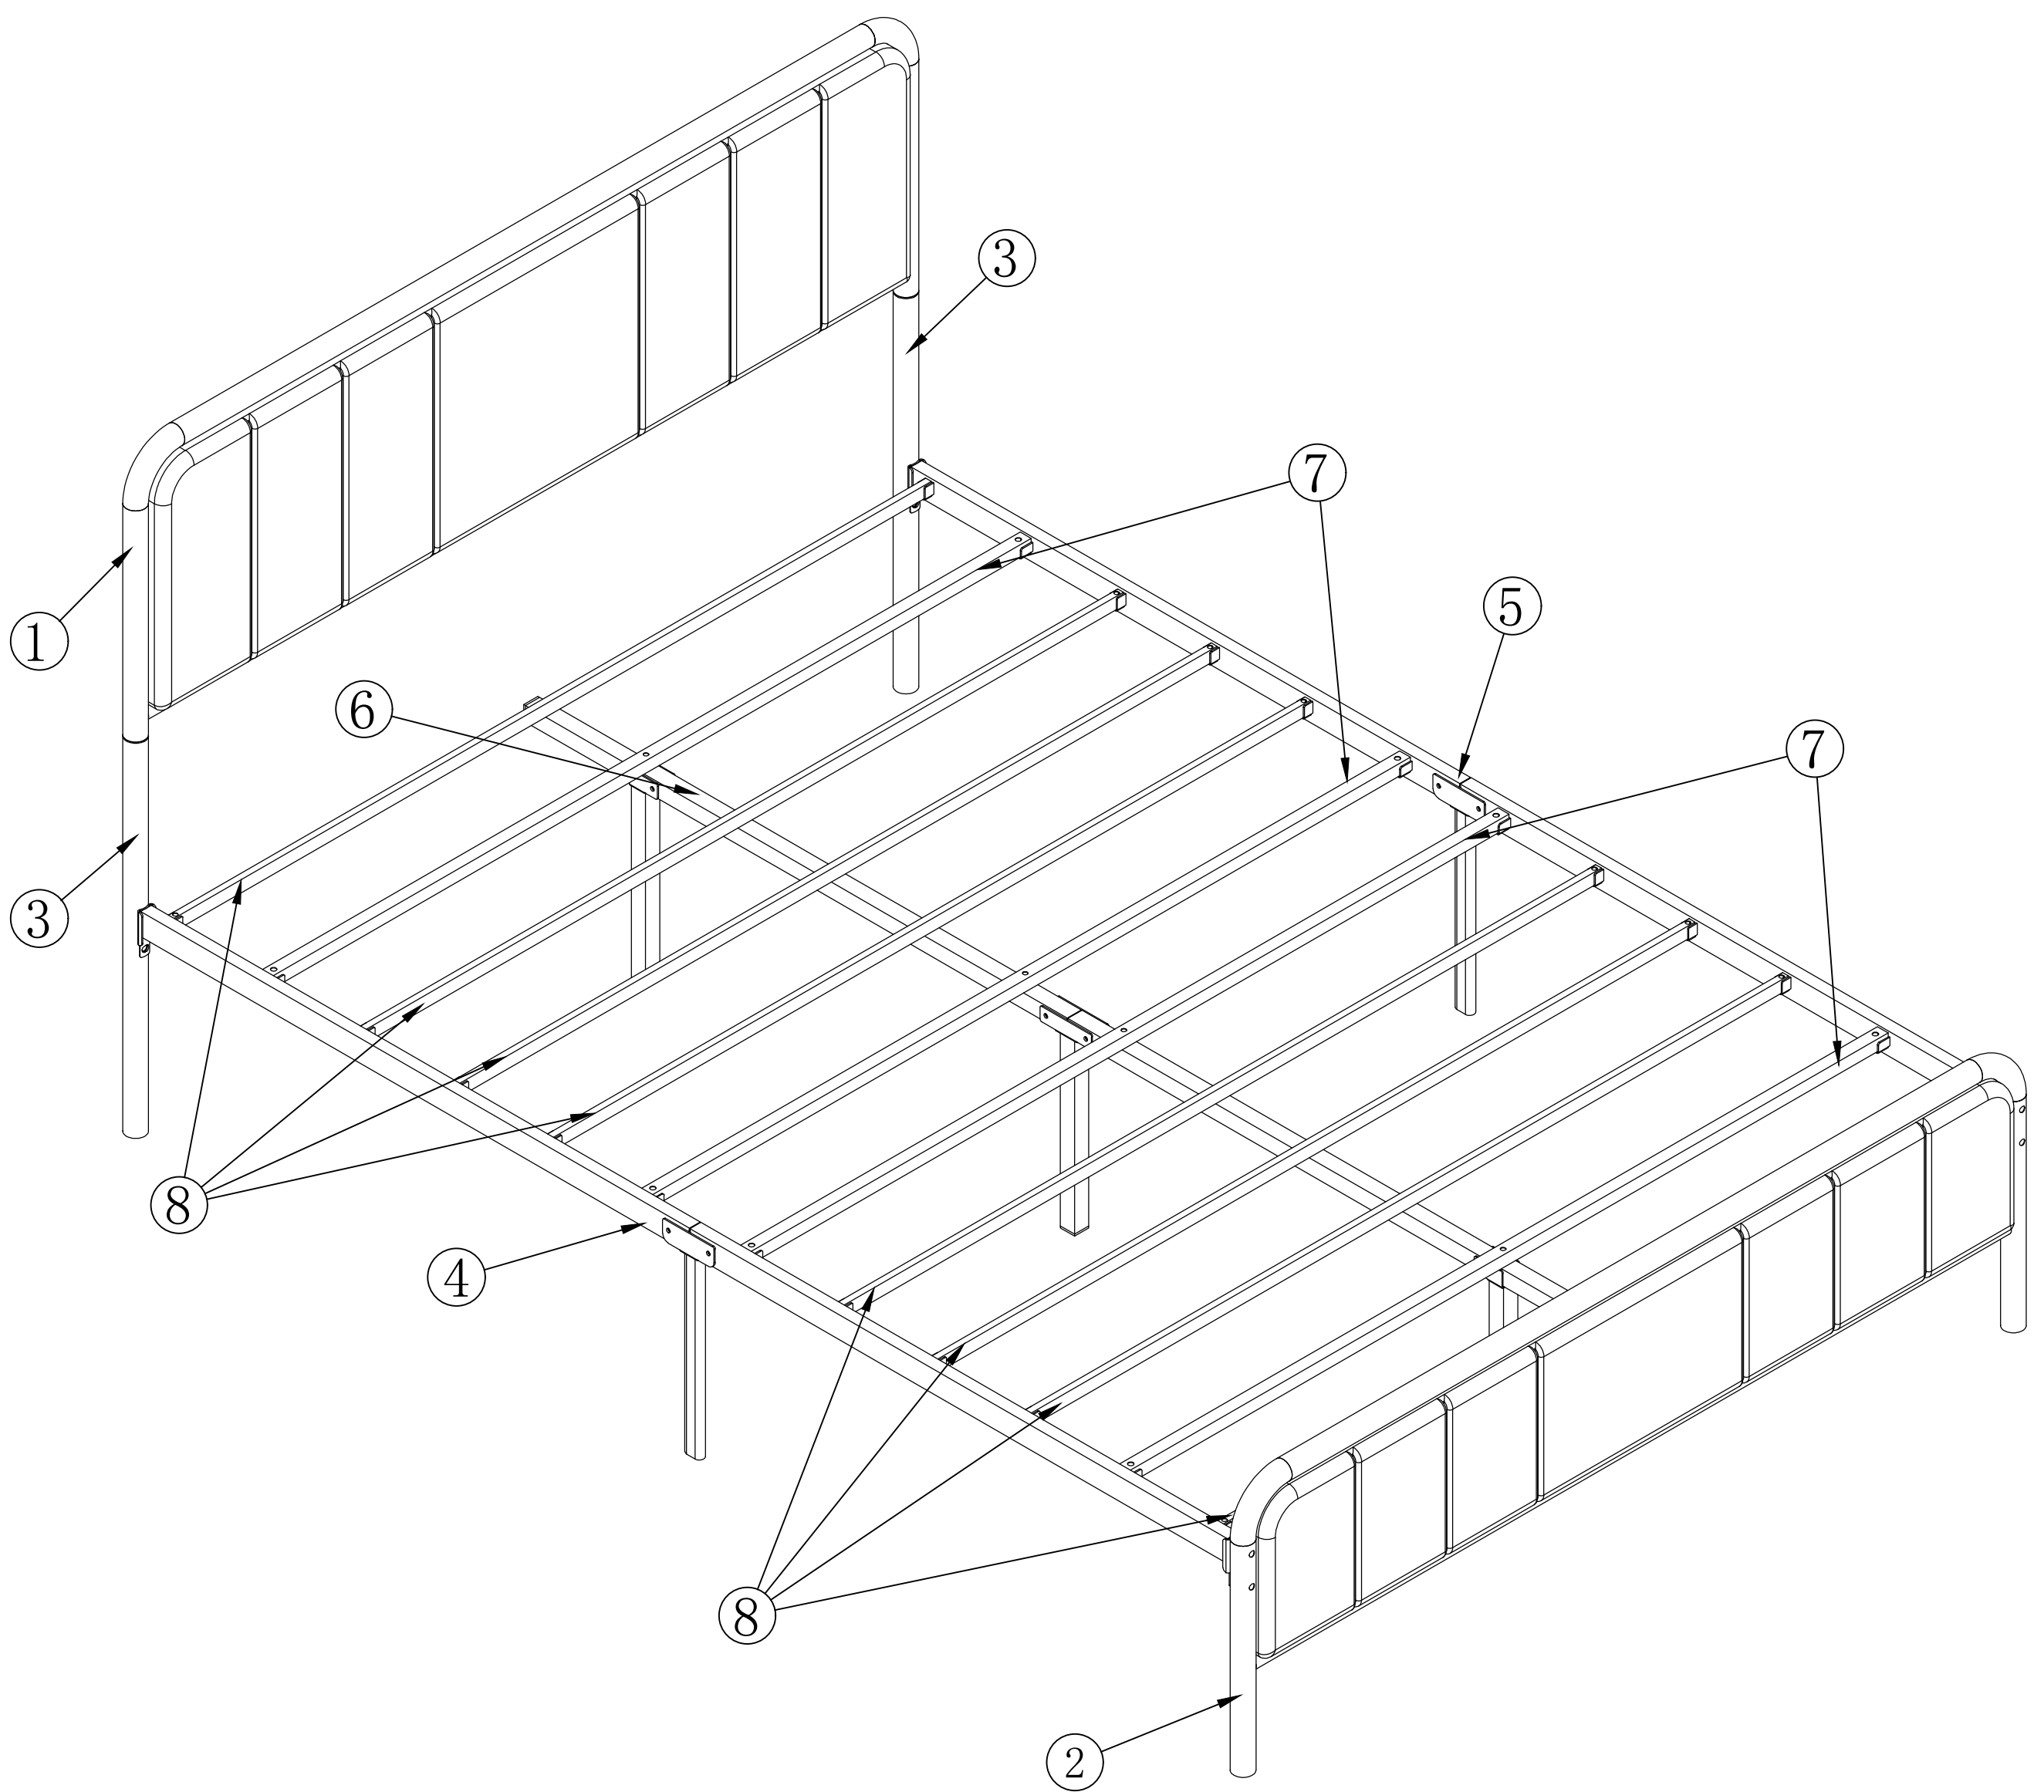


Parts List


- 1

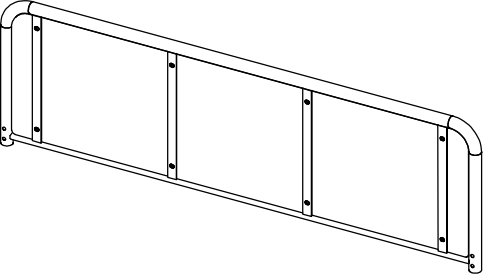


1PC
- 2

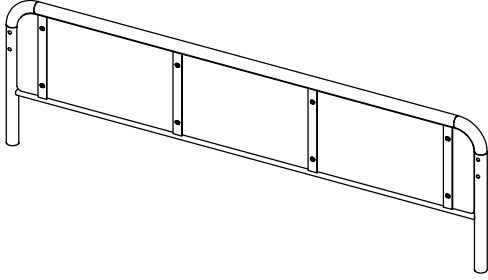


1PC
- 3

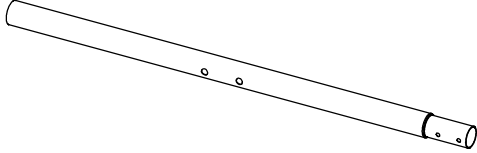


2PCS
- 4




LEFT-1PC
- 5




RIGHT-1PC
- 6

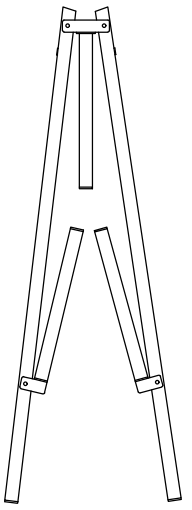

1PC
- 7

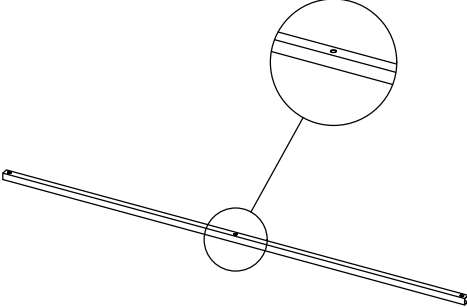

4PCS
- 8

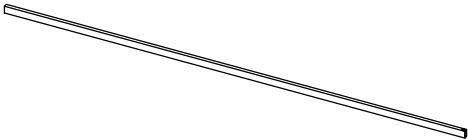


8PCS

Hardware List


- A

M6x60mm

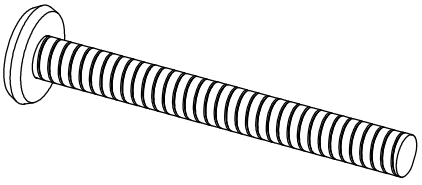


2PCS
- B

M8x45mm

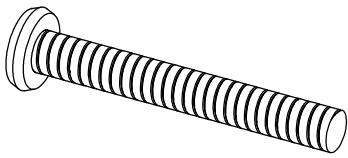


8PCS
- C

M6x35mm

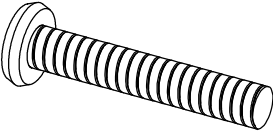


2PCS
- D

M6x15mm




4PCS
- E

M6x25mm




8PCS
- F


M8




4PCS
- G

Φ 8

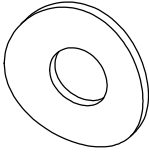


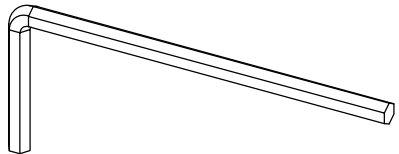8PCS
- 

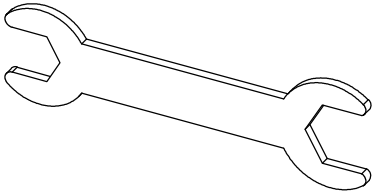1PC
- 

1PC



Install the headboard

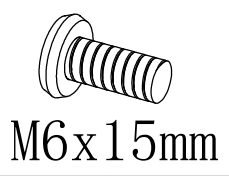


M6x15mm

D

4PCS

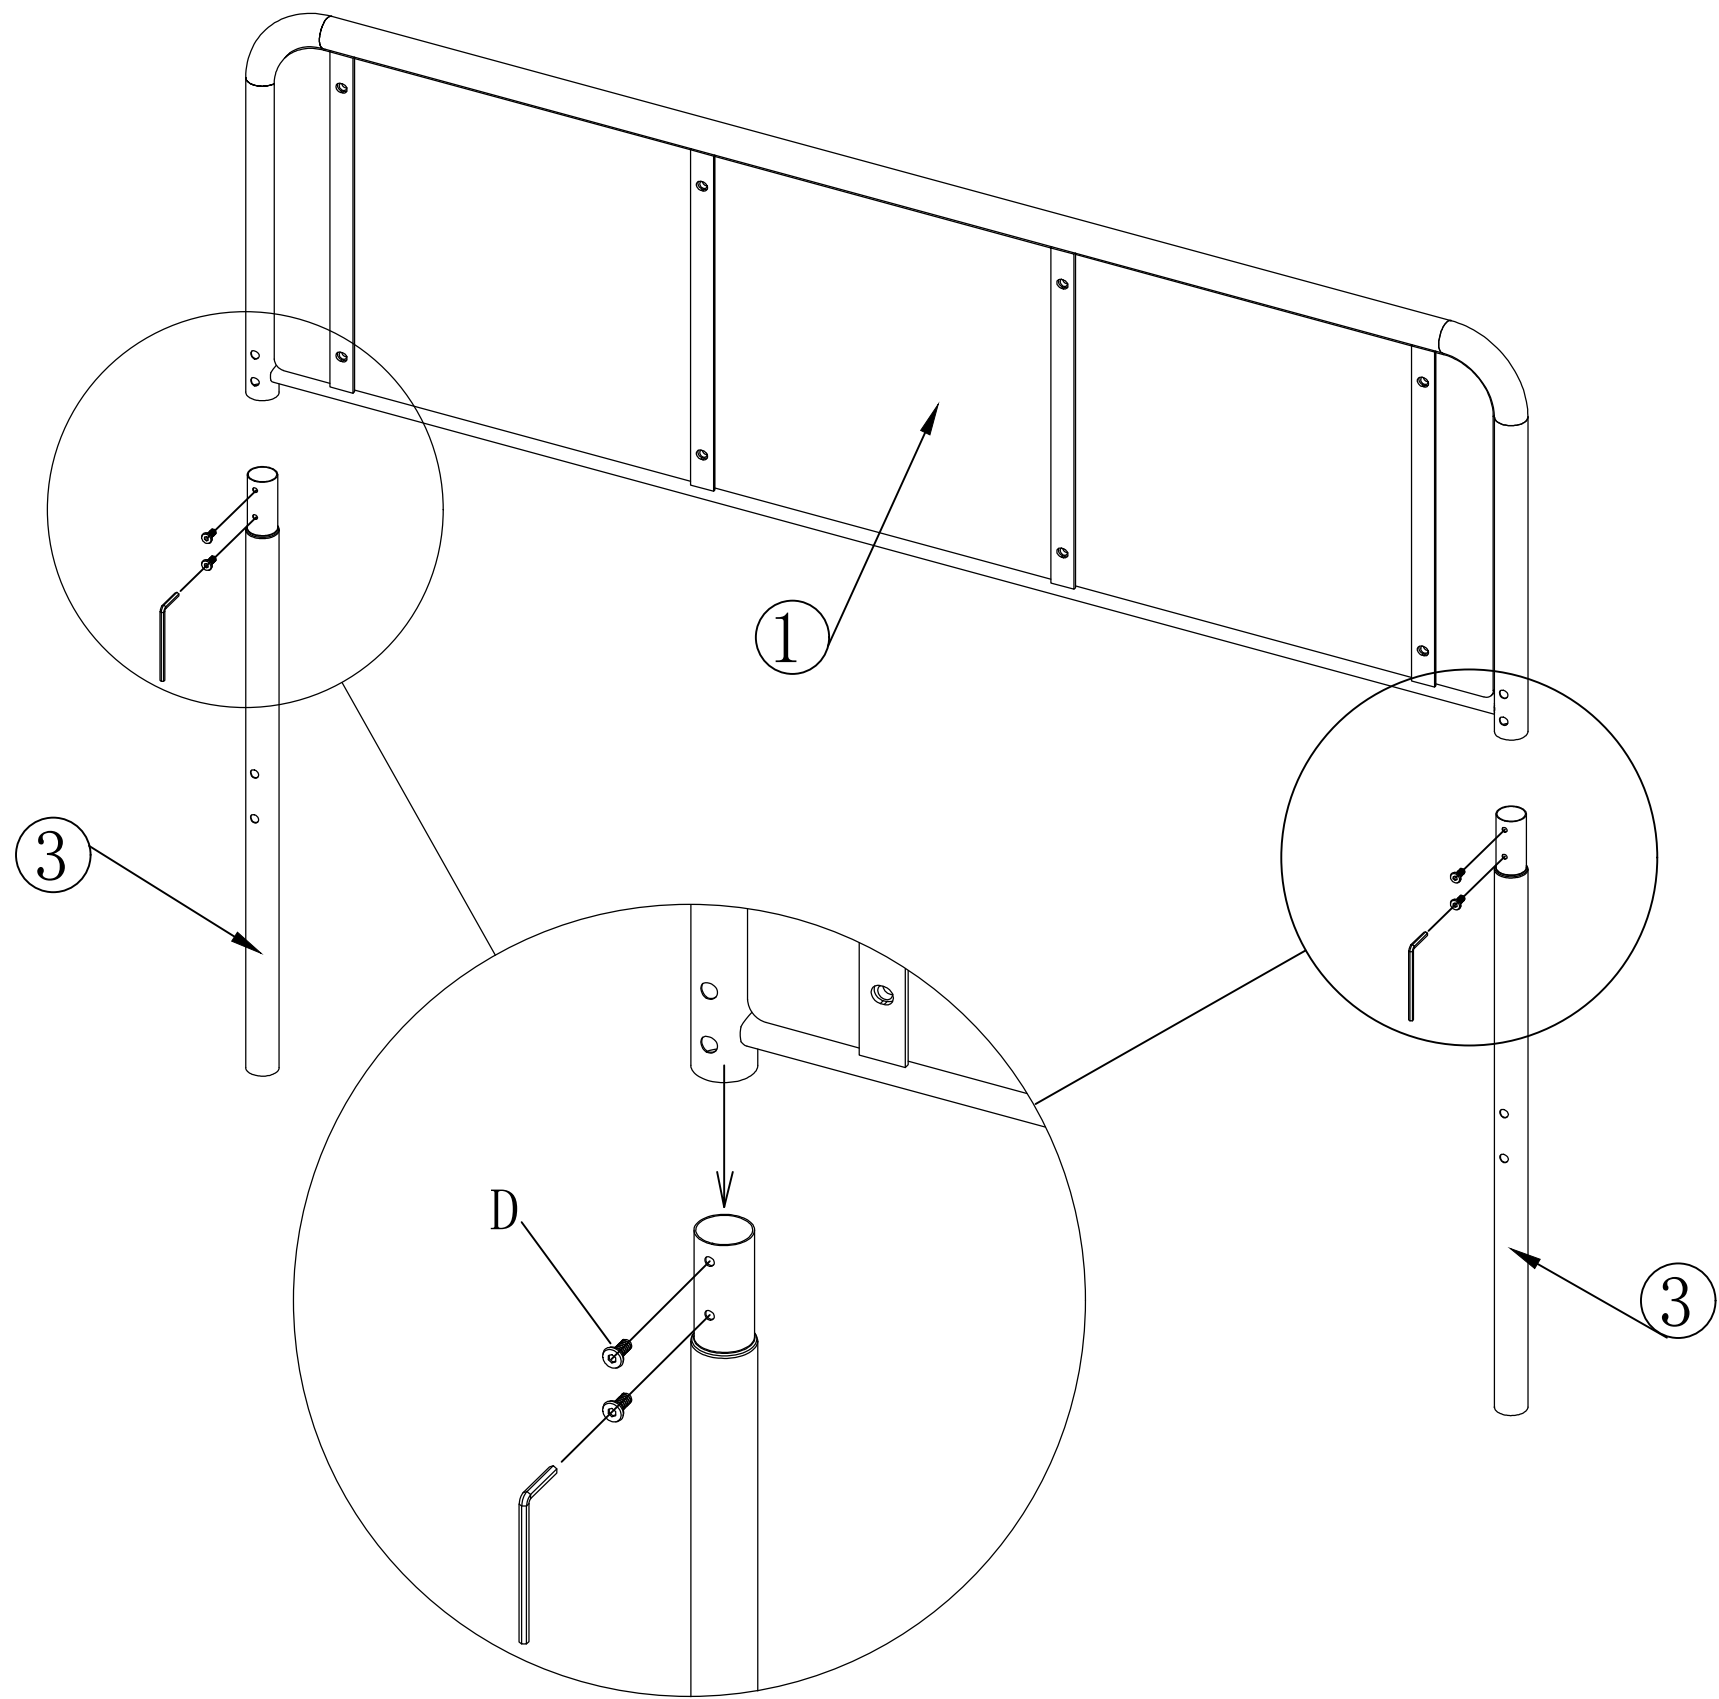

Connect the headboard and the footboard by fixing the side rail ④、⑤ on them

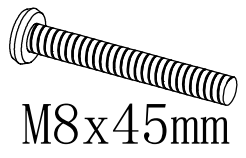

M8x45mm

B



8PCS



M8

F


4PCS

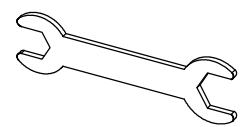


Φ8

G


8PCS

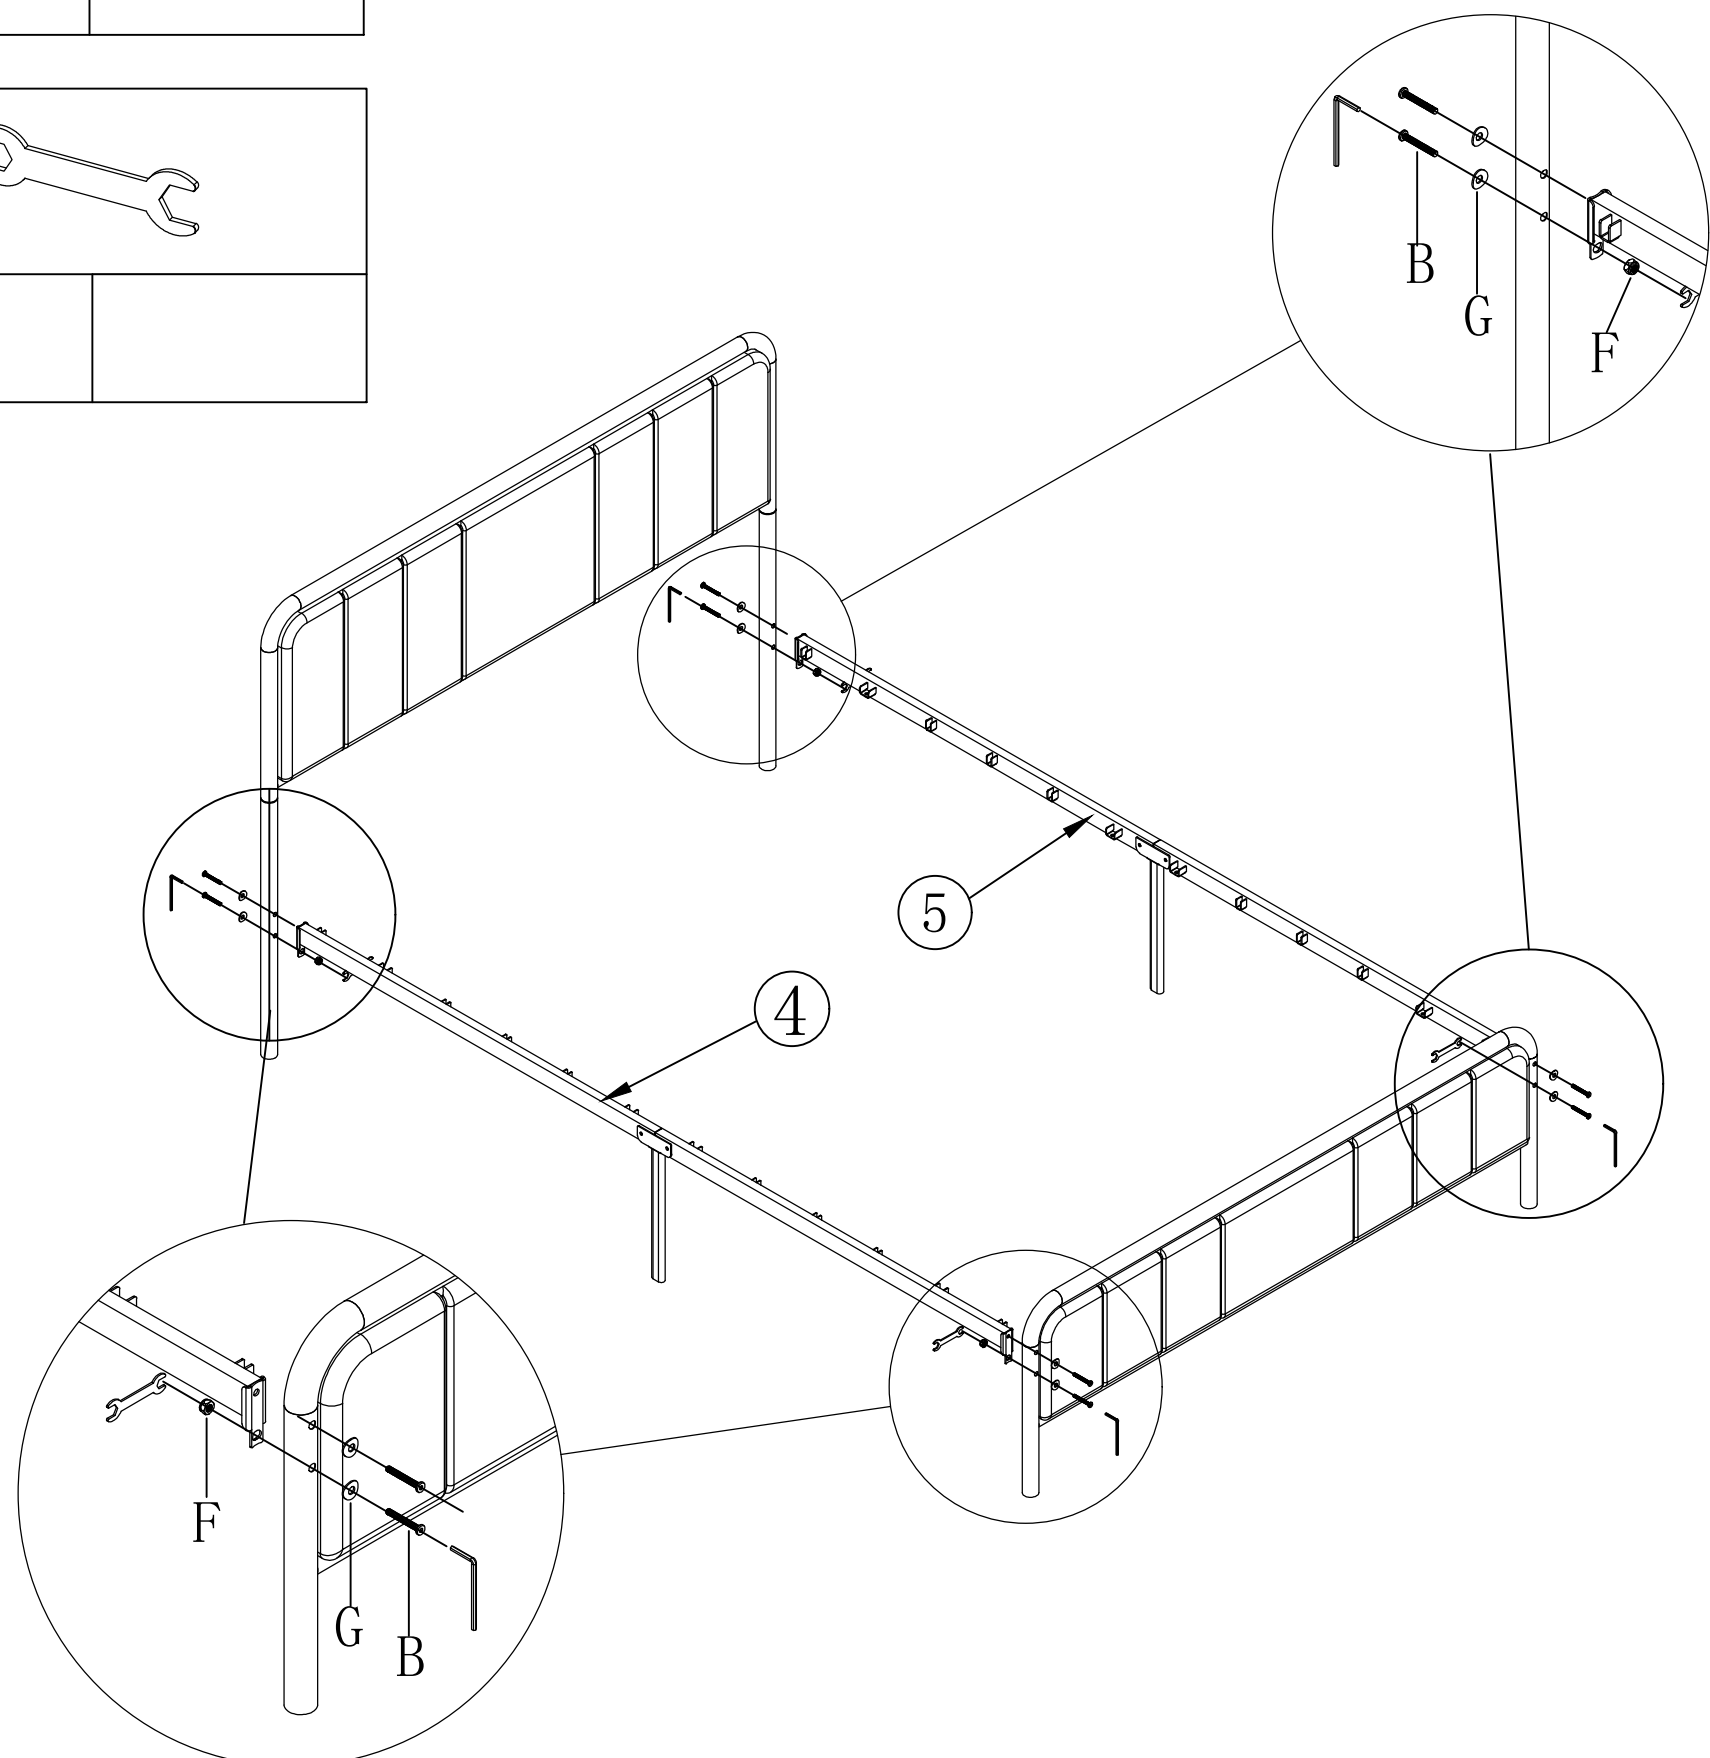


④



⑤








M6x25mm

E

4PCS



Put the beam ⑦ into the side rails and screw them.
DO NOT FULLY TIGHTEN because we need to put the middle rail under them in step 4.


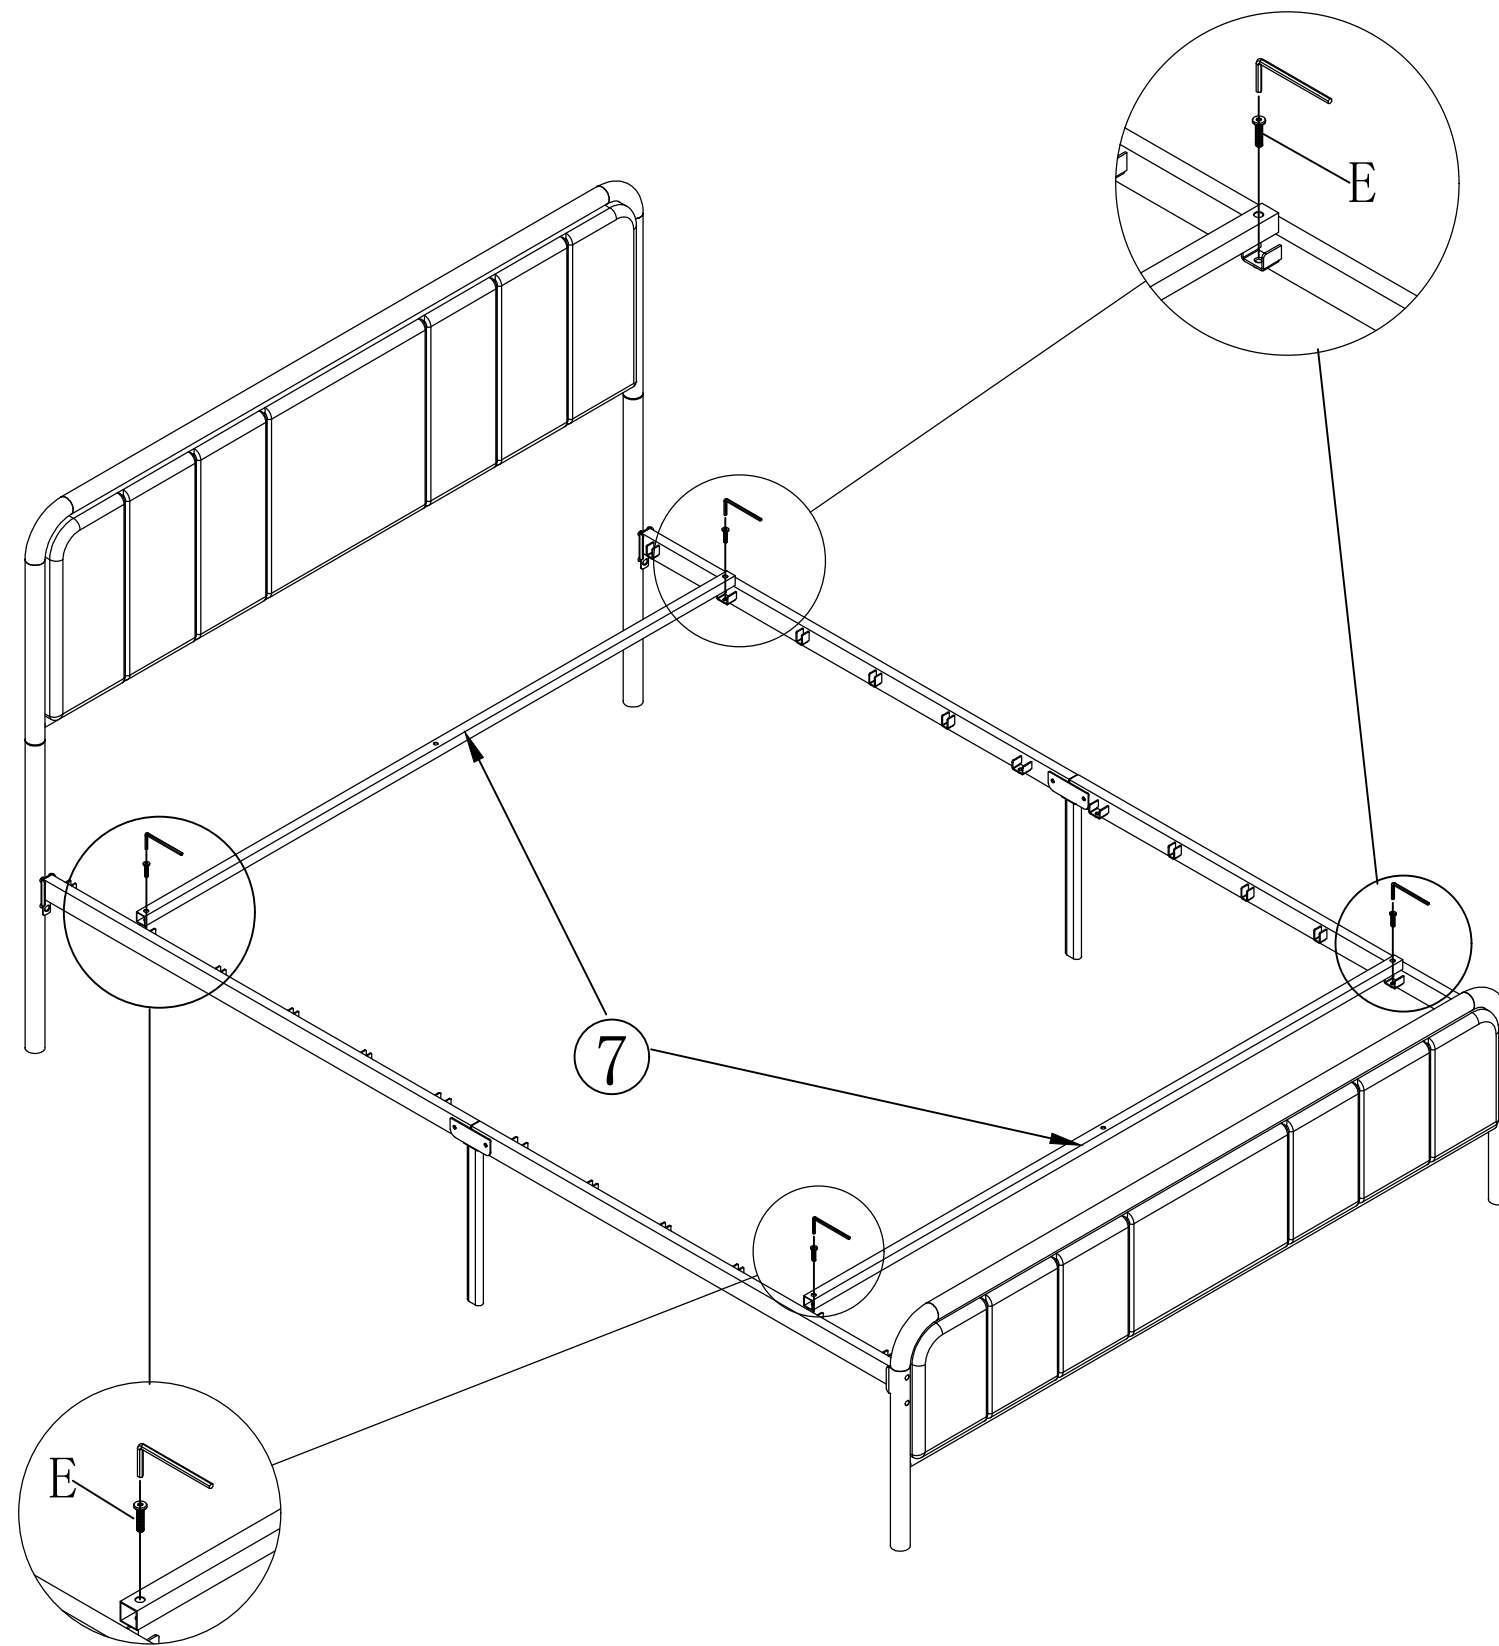
M6x60mm

A



2PCS




Put the middle rail under the beams and fix them.
FULLY TIGHTEN the beams in Step 3 now.

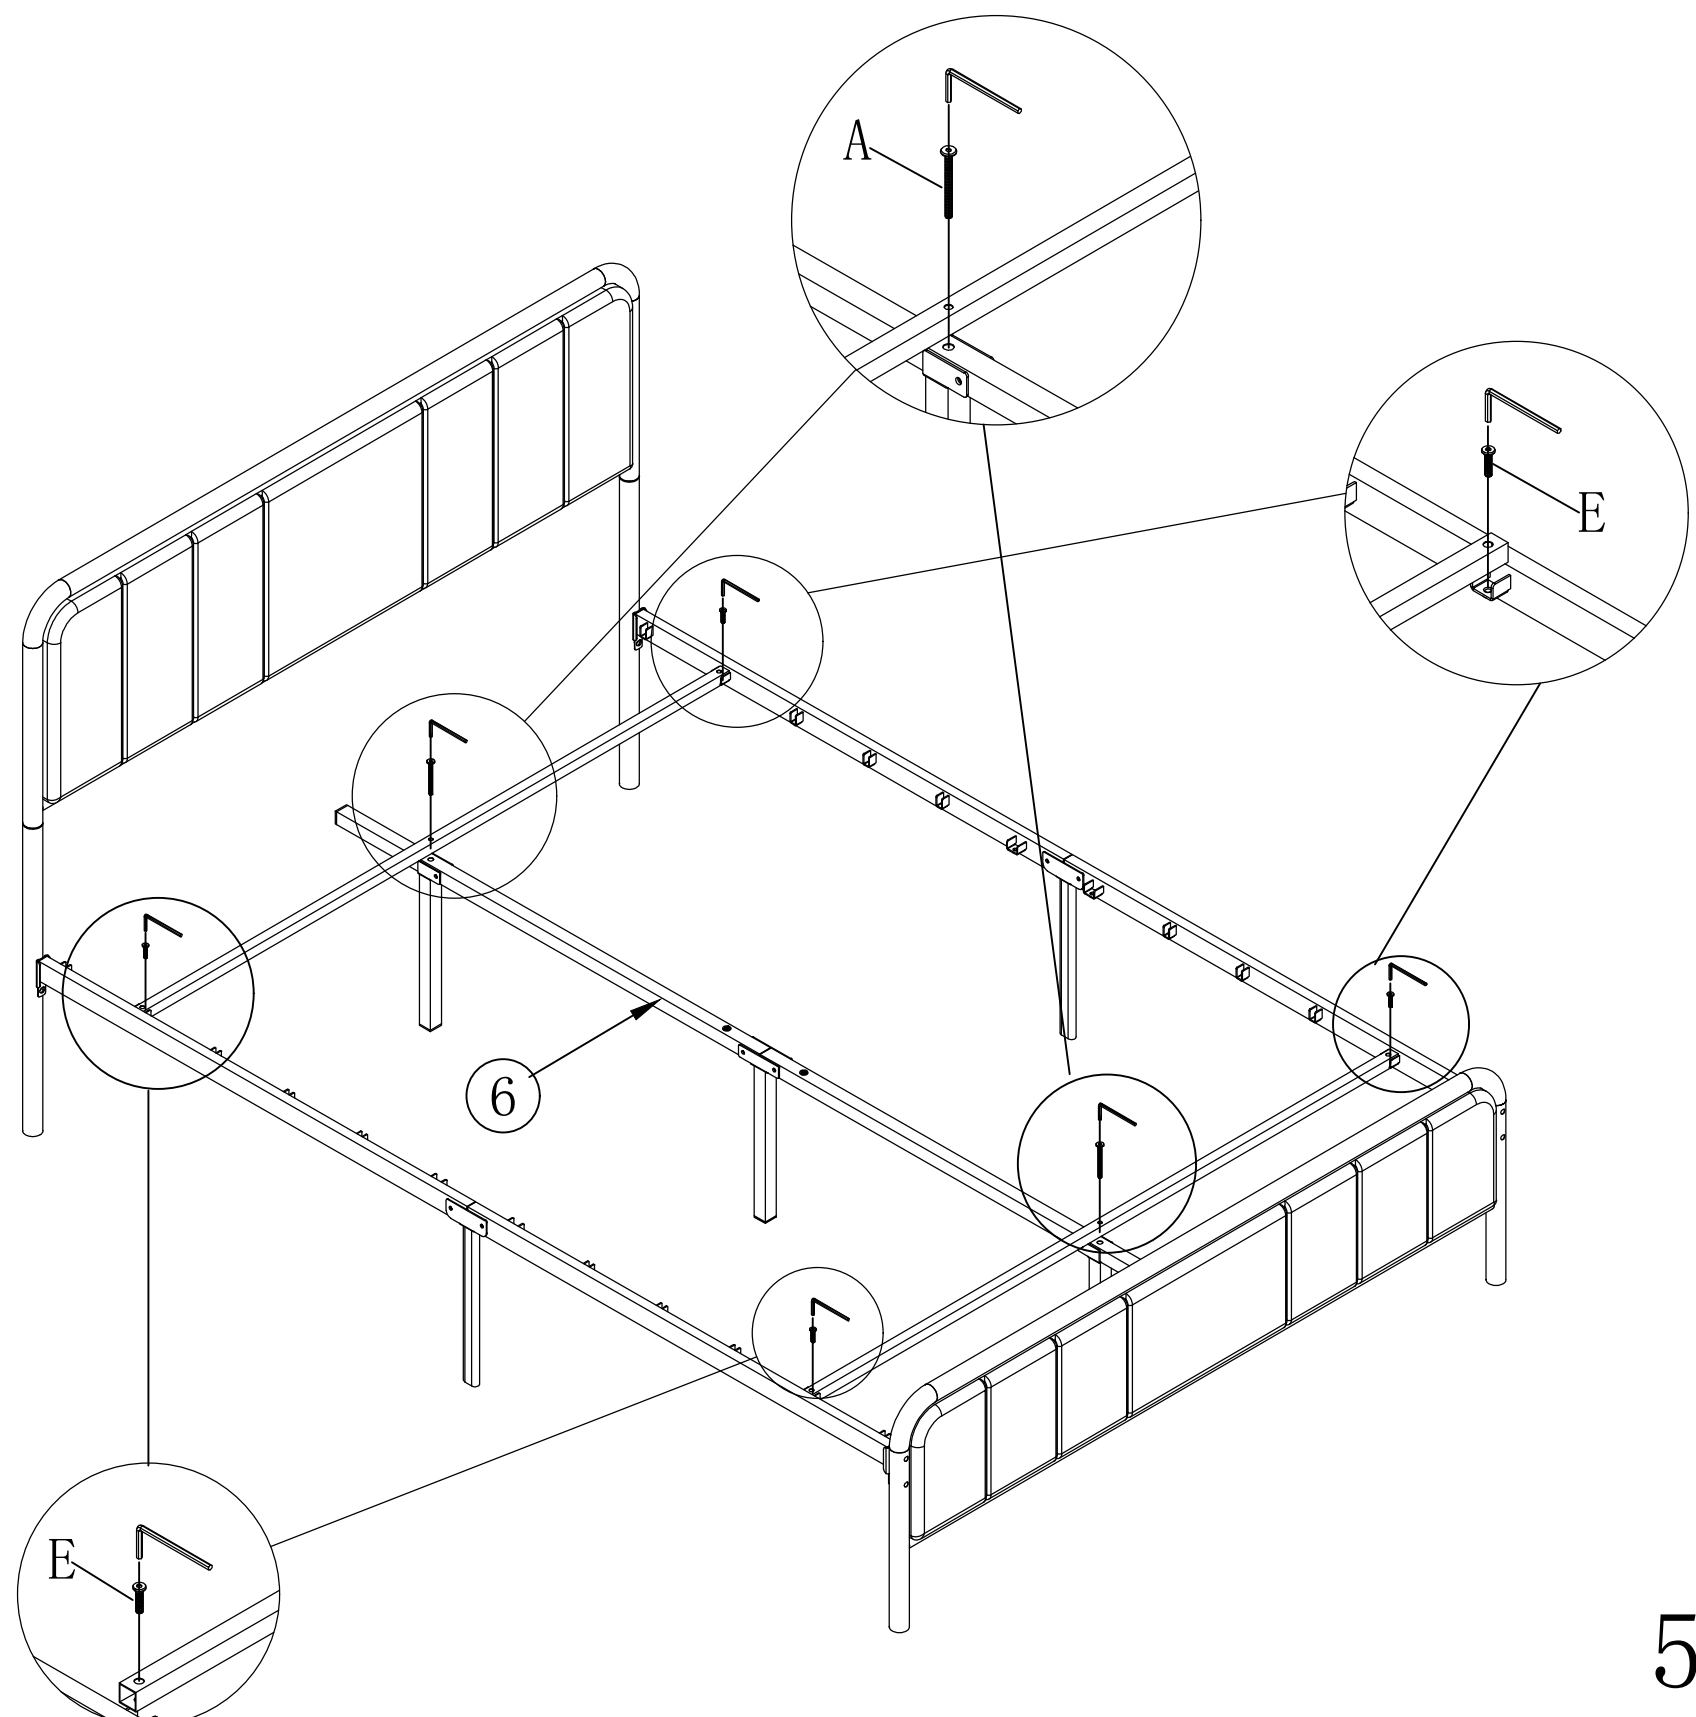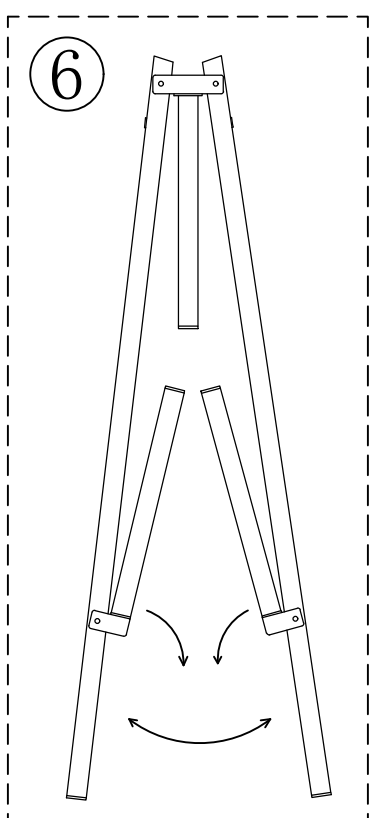

Fix the rest 2 beam ⑦ into place and tighten them

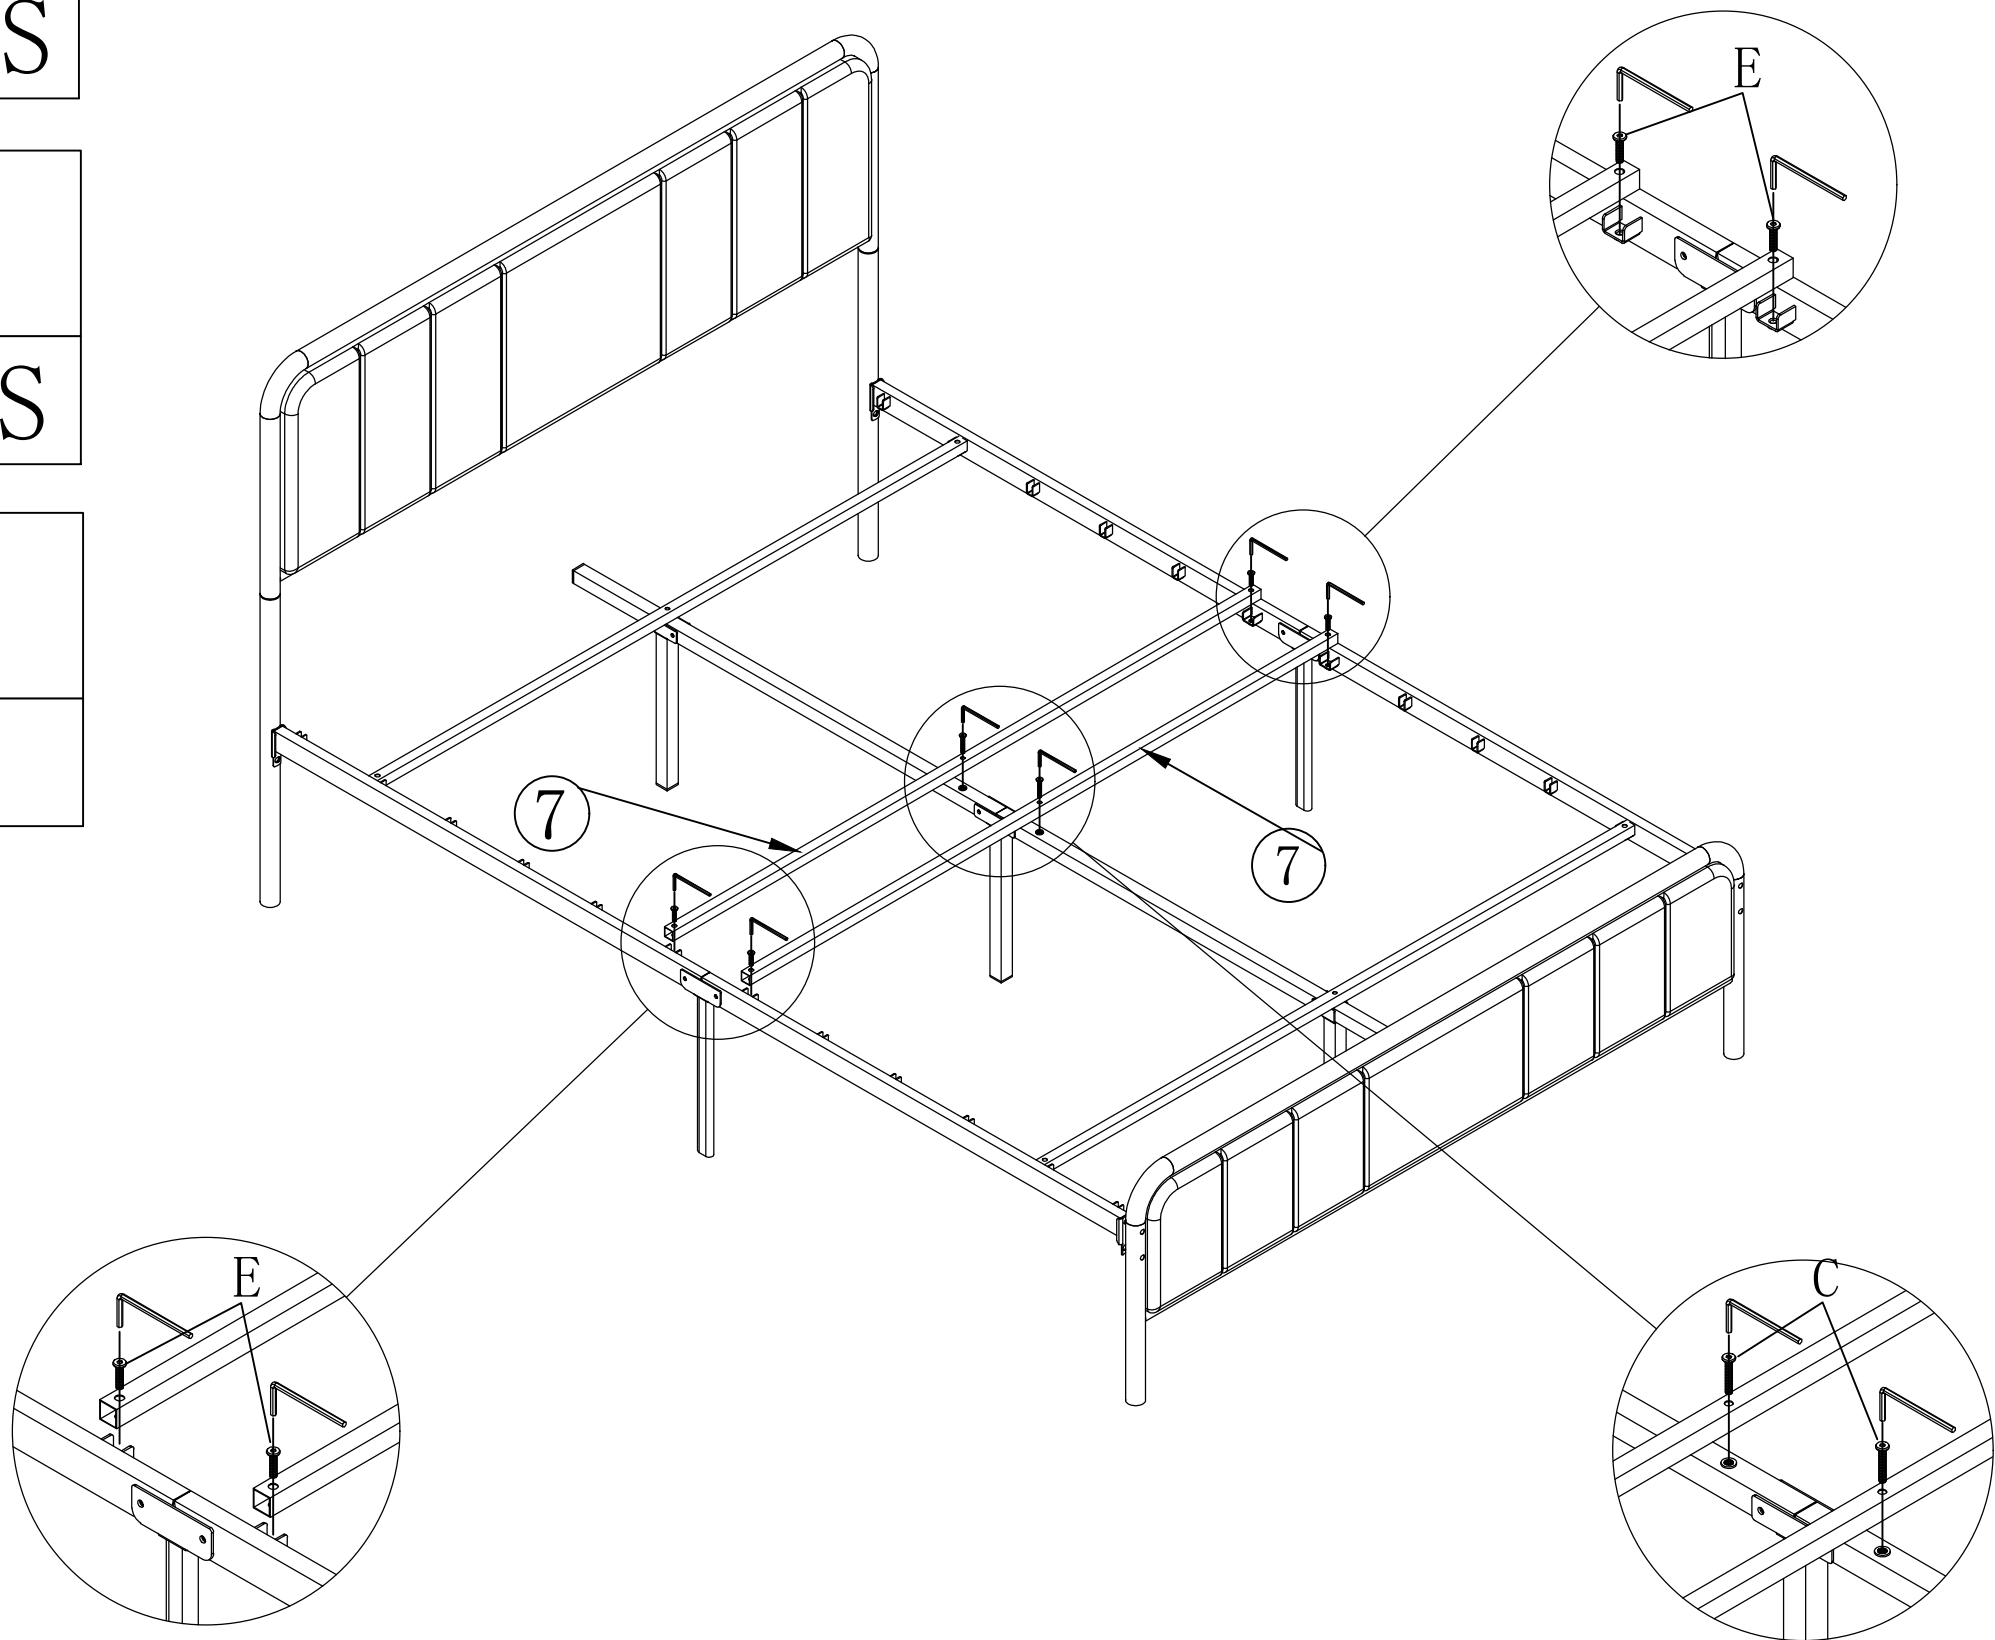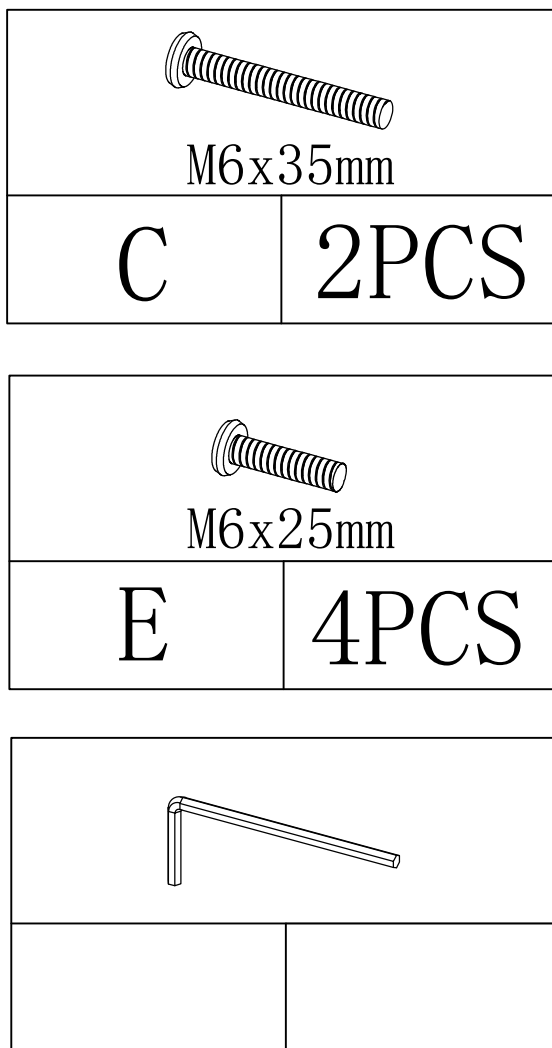

Insert the slats into the slots

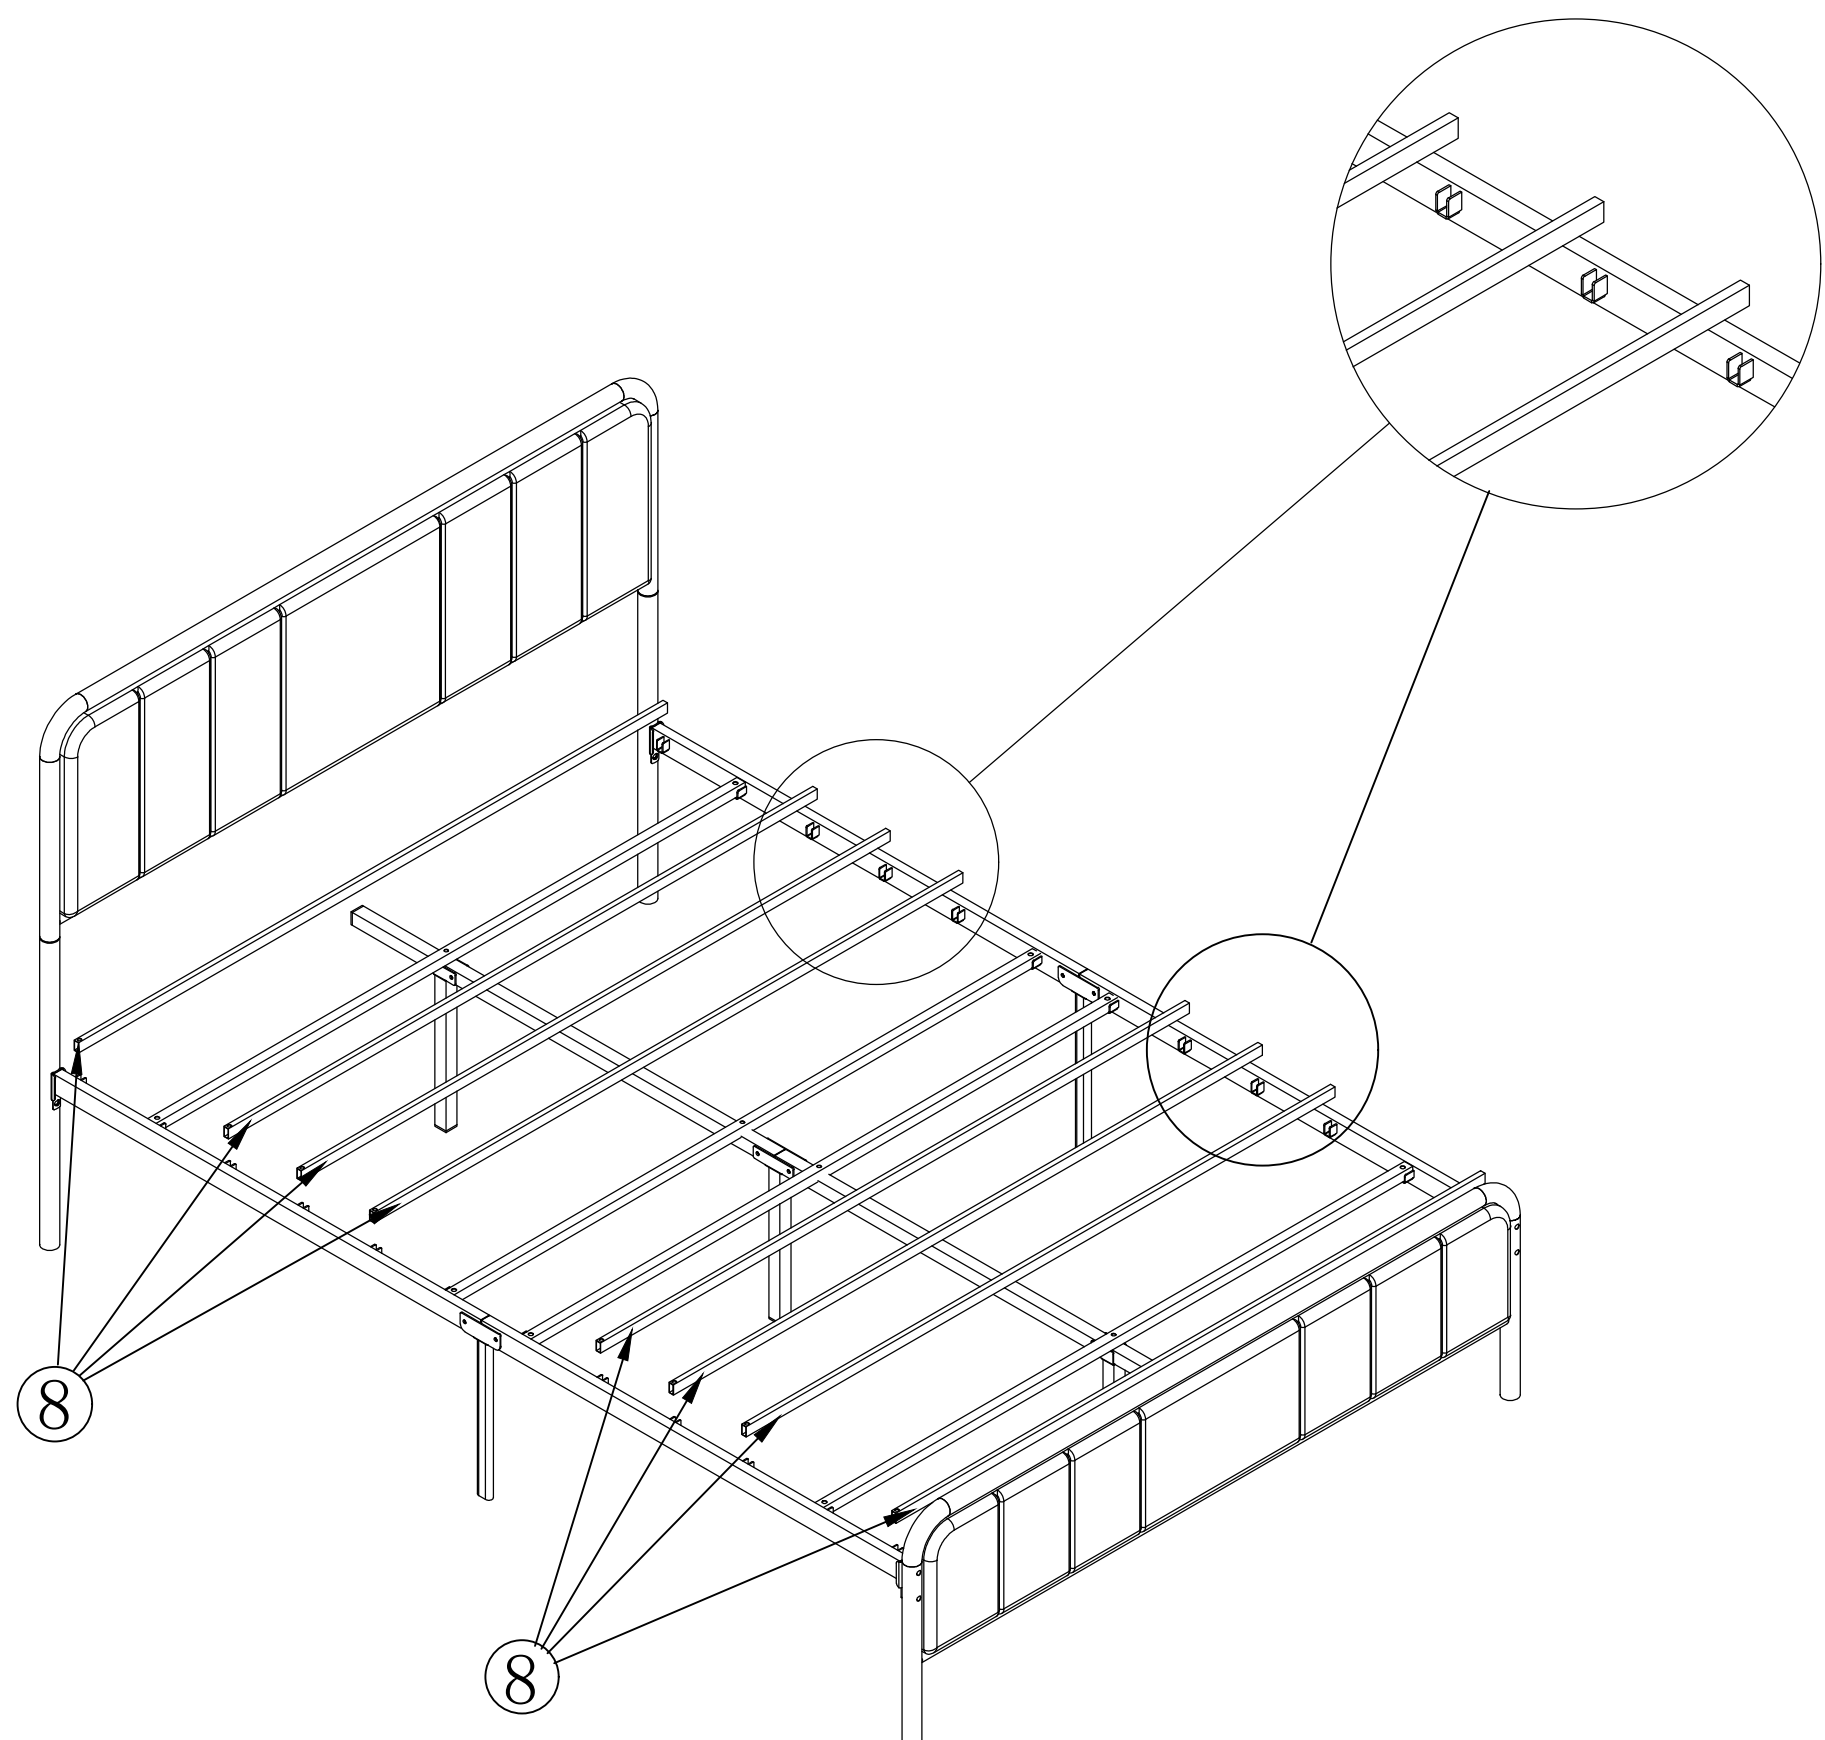

Finished assembly

