



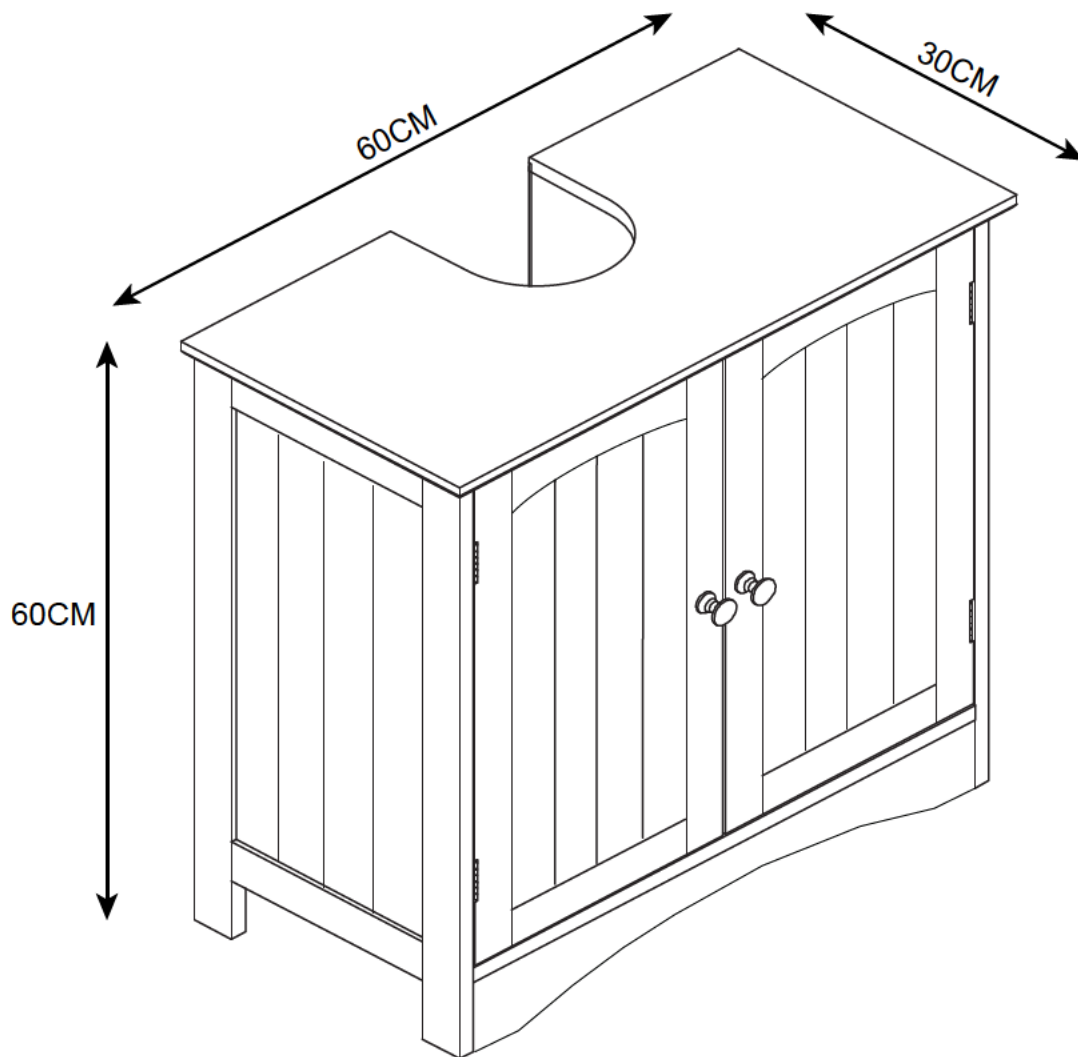











Montageanleitung

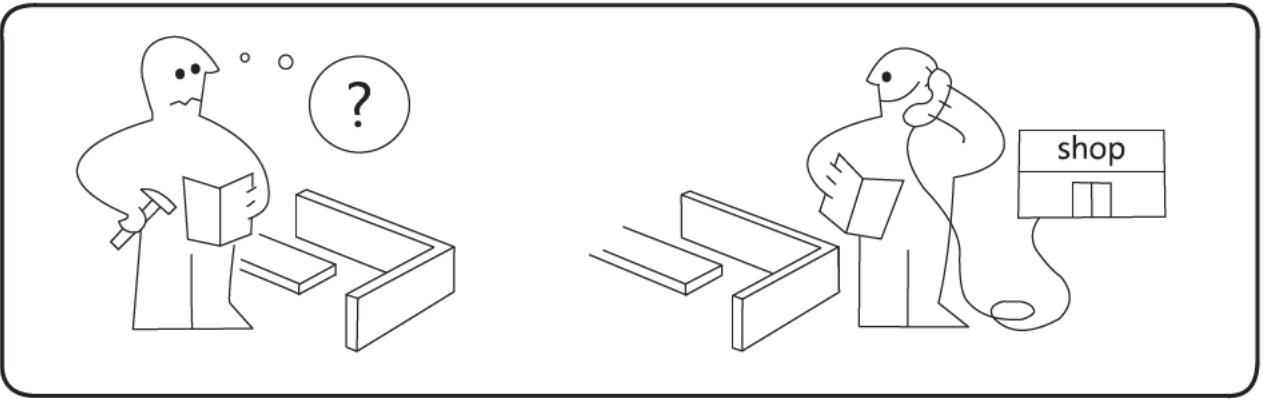

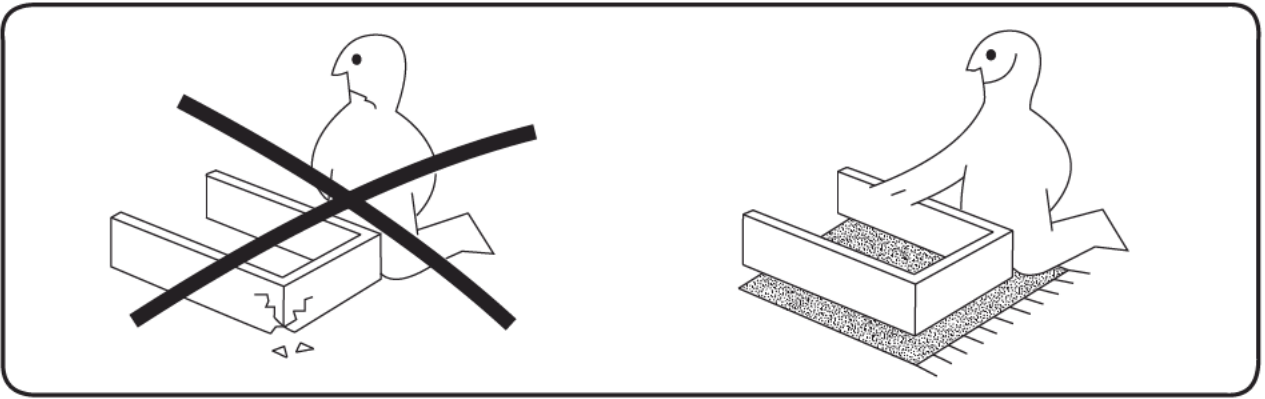

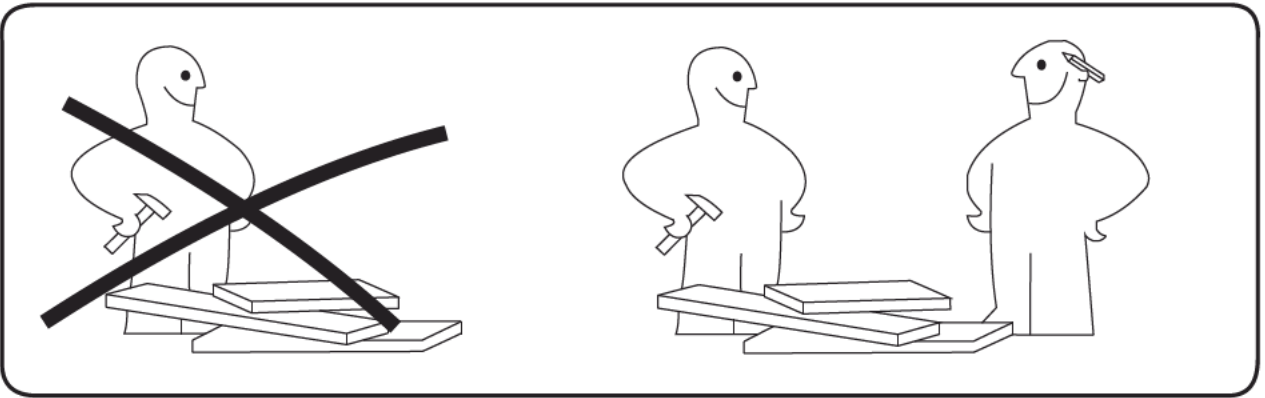

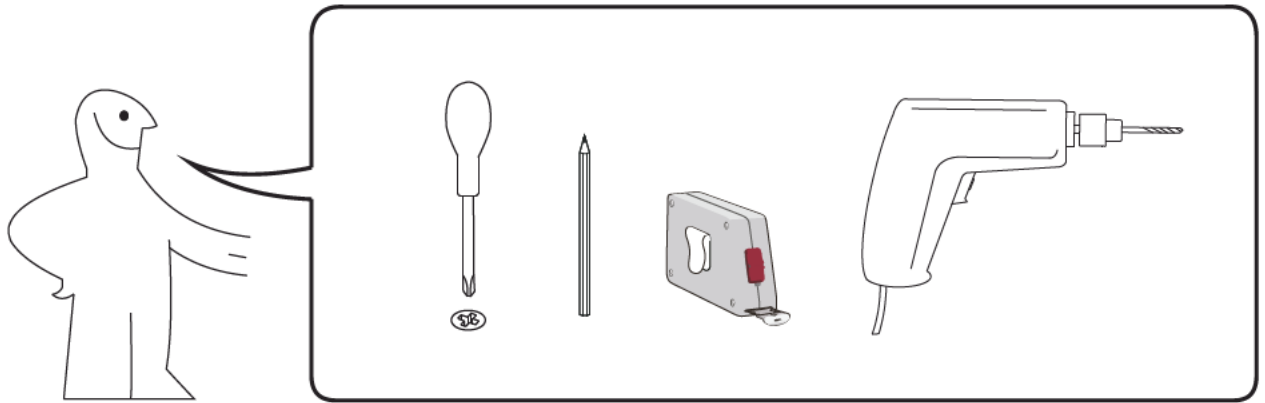

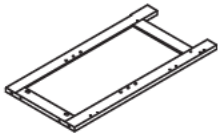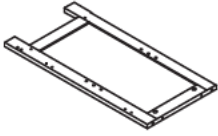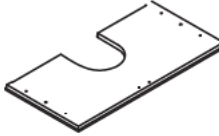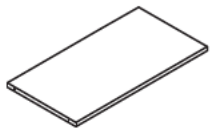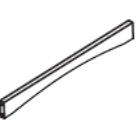



Badunterschrank Bianco Weiß






Parts List/Teile Liste


				
A 1pc	B 1pc	C 1pc	D 1pc	E 1pc
				
G 1pc	H 1pc	I 1pc	F 2pcs	

			
8pcs	1pc	2pcs	8pcs
			
8pcs	16pcs	4pcs	18pcs
			
2pcs	2pcs	2pcs	4pcs


STEP 1

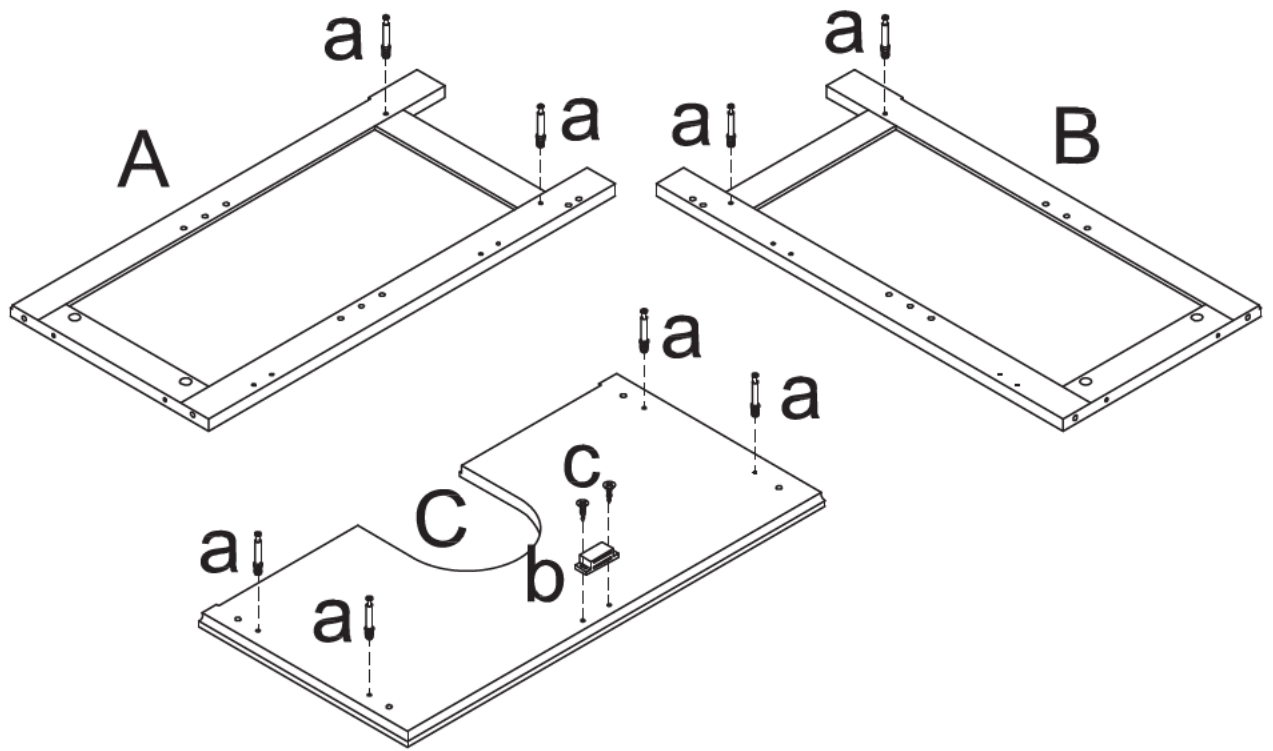


STEP 2

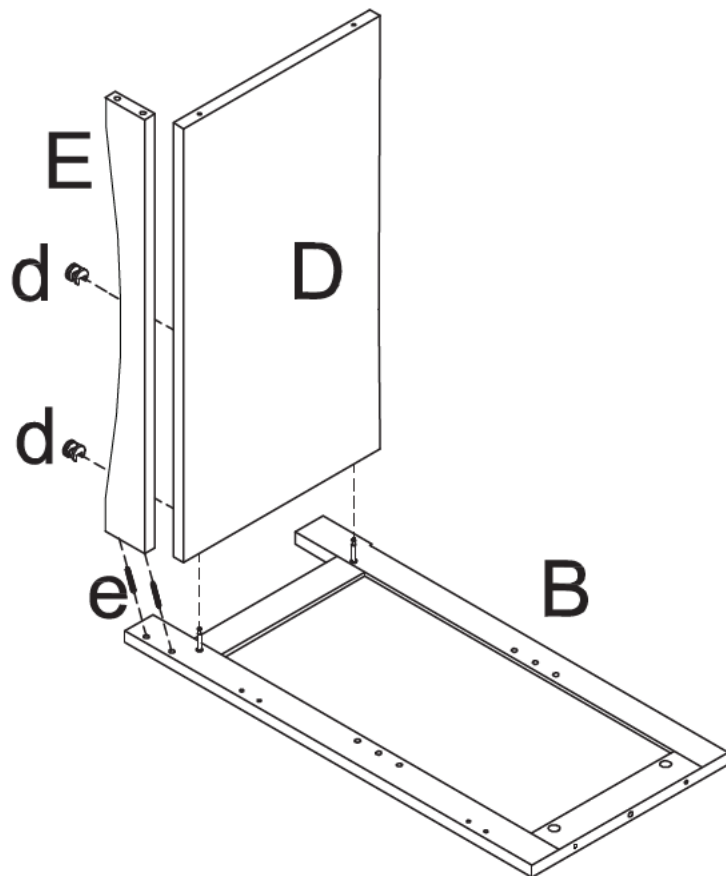


STEP 3

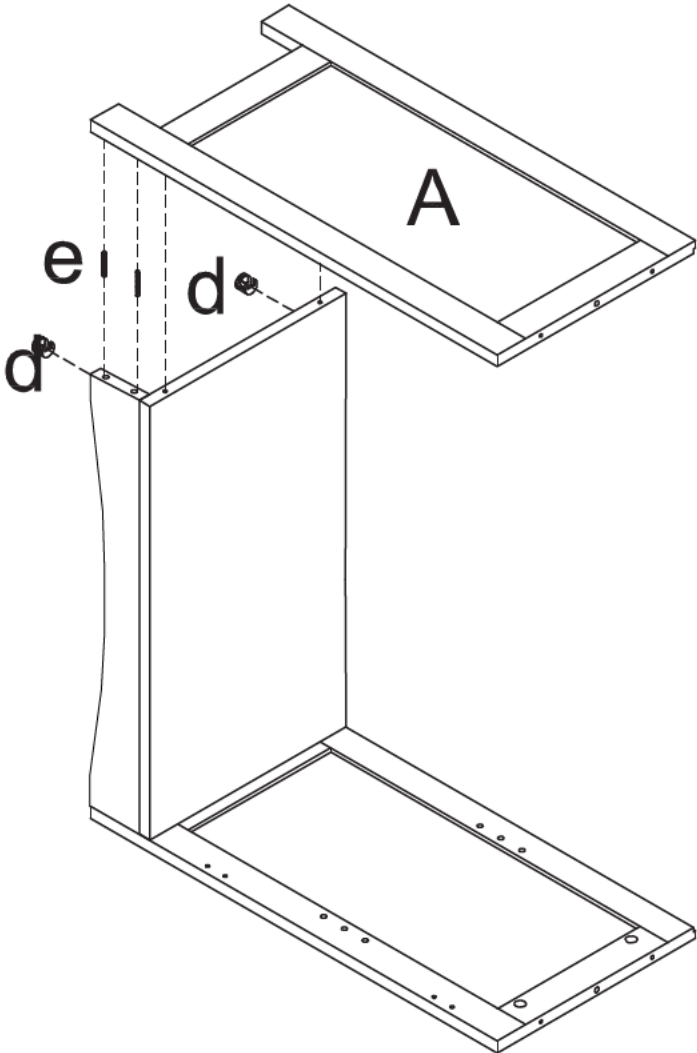


STEP 4

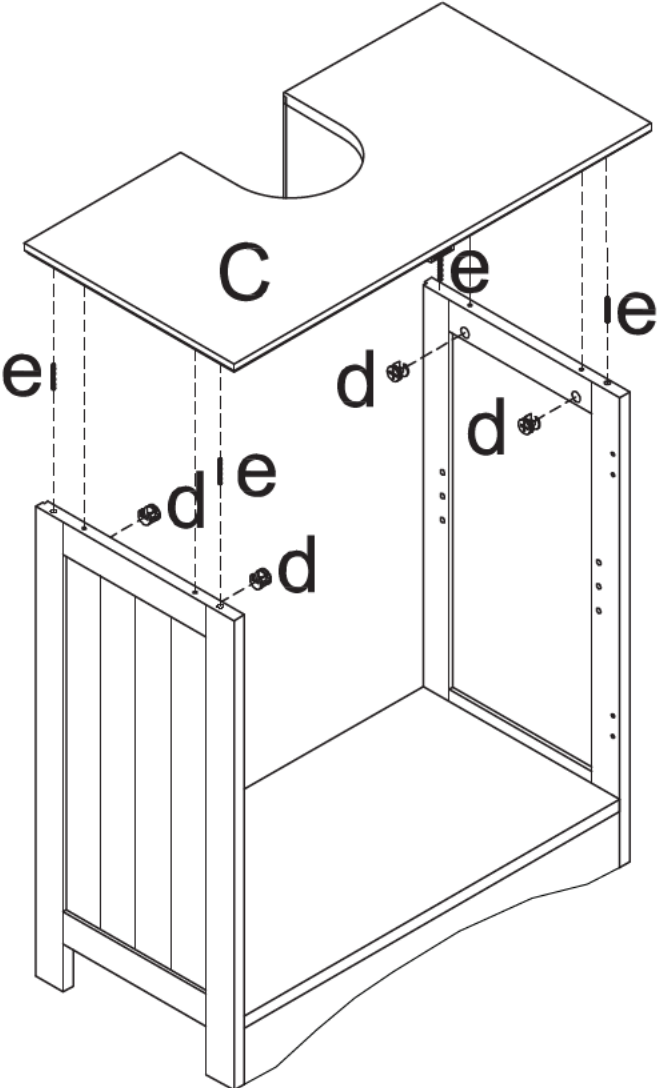

STEP 5

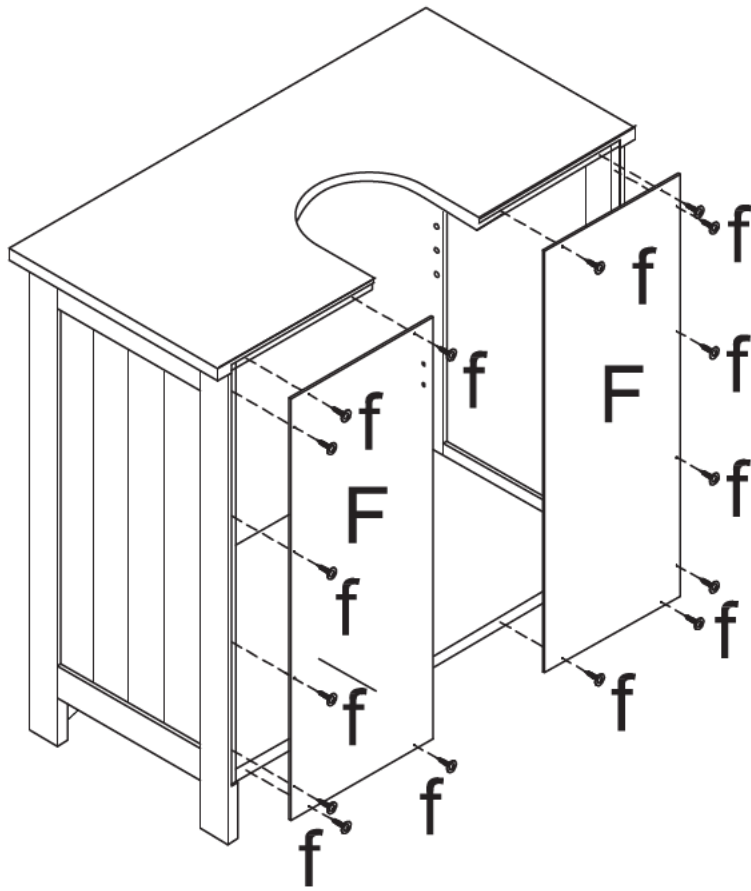

STEP 6

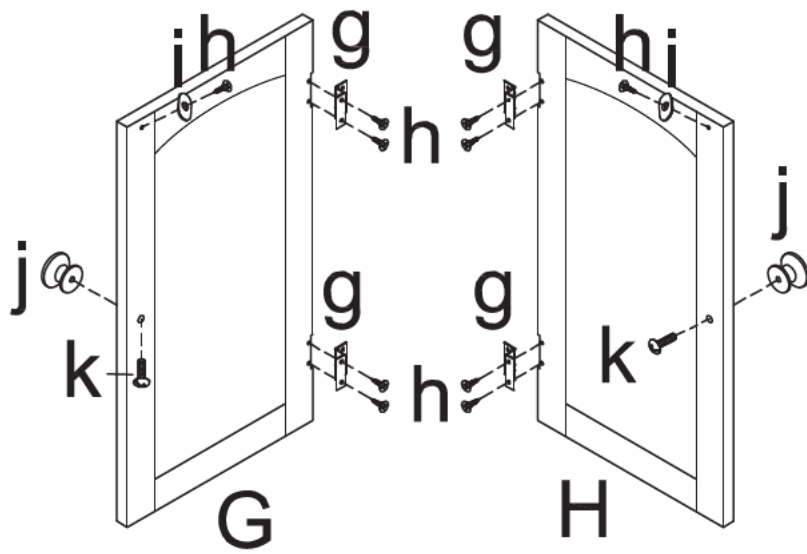

STEP 7

