



ASSEMBLY INSTRUCTIONS

TWIN DAYBED





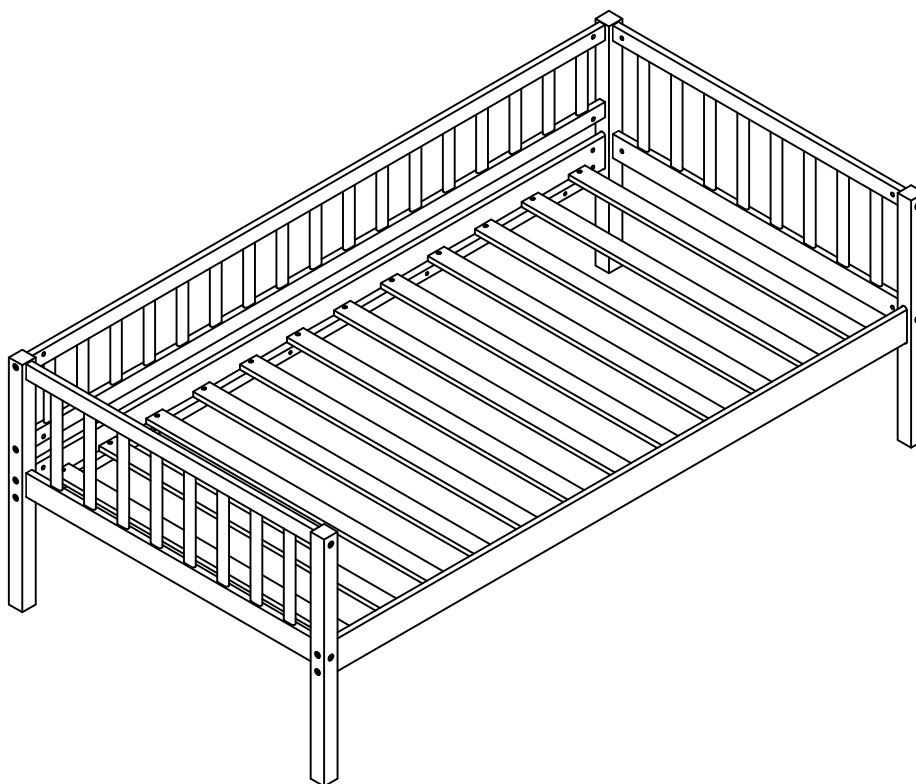


US-BED273AT08/US-BED273AT77




Detail View

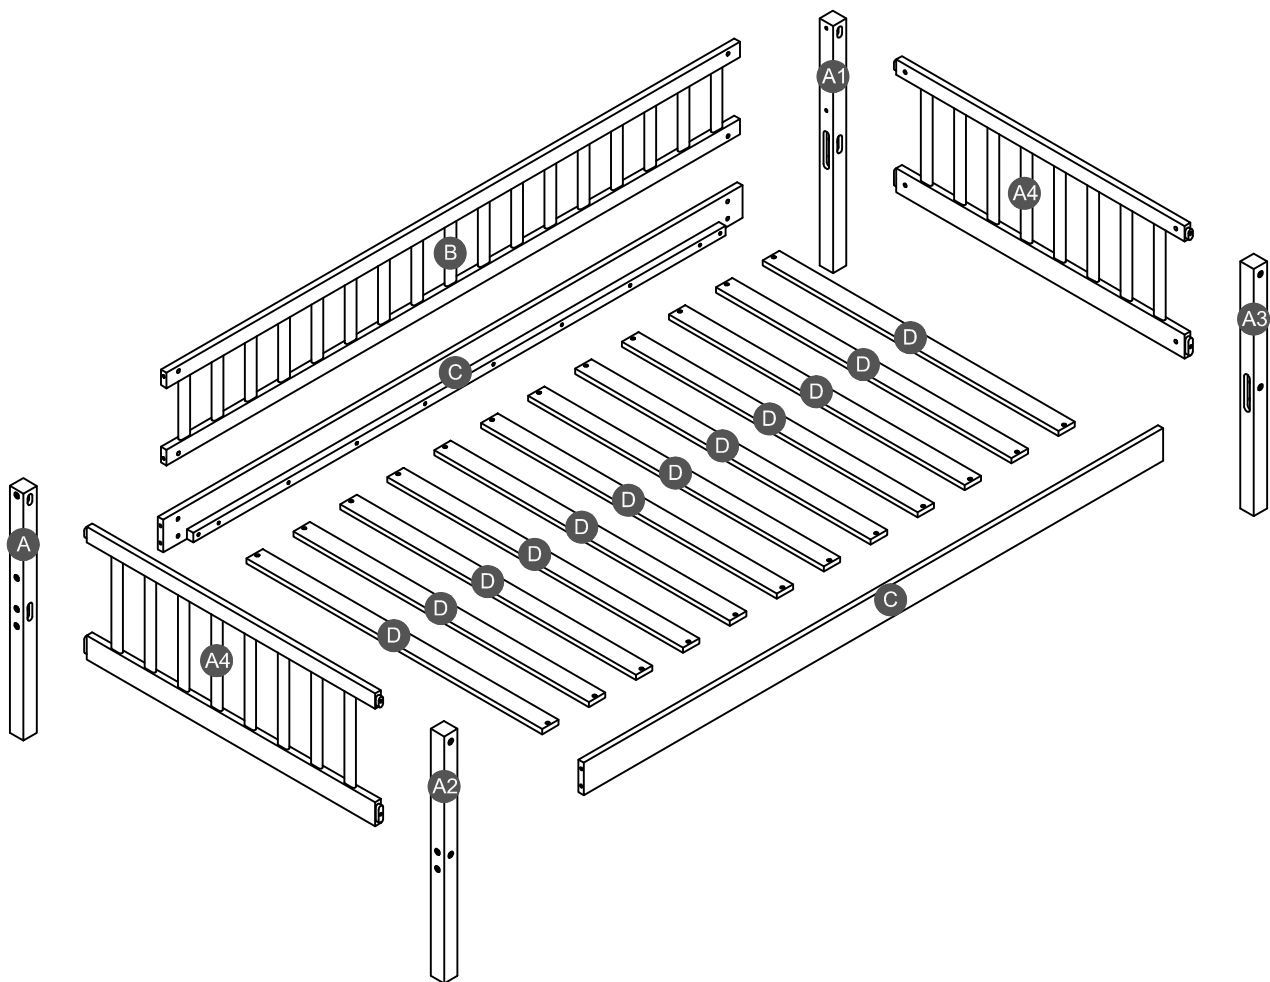



Part List

A  Leg (Left back) - 1pc	A1  Leg (Right back) - 1pc	A2  Leg (Left front) - 1pc
A3  Leg (Right front) - 1pc	A4  Frame HB/FB - 2pcs	B  Guard rail (Back) - 1pc
C  Side rail - 2pcs	D  Slats - 12pcs	

Hardware List

1  (Ø15)1/4"*100mm Hex-Head bolts (12pcs)	2  (Ø15)1/4"*80mm Hex-Head bolts (8pcs)	3  1/4"*15 (9.5mm) Horizontal-Hole bolts(20pcs)
4  Ø4*30mm Wood screws (24pcs)	5  (1/4")4.5*58mm Allen key (1pc)	

OPTIONAL TOOLS FOR ASSEMBLY (NOT INCLUDED)




Electric
Screwdriver


PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

STEP 1:

2		3	
8PCS		8PCS	

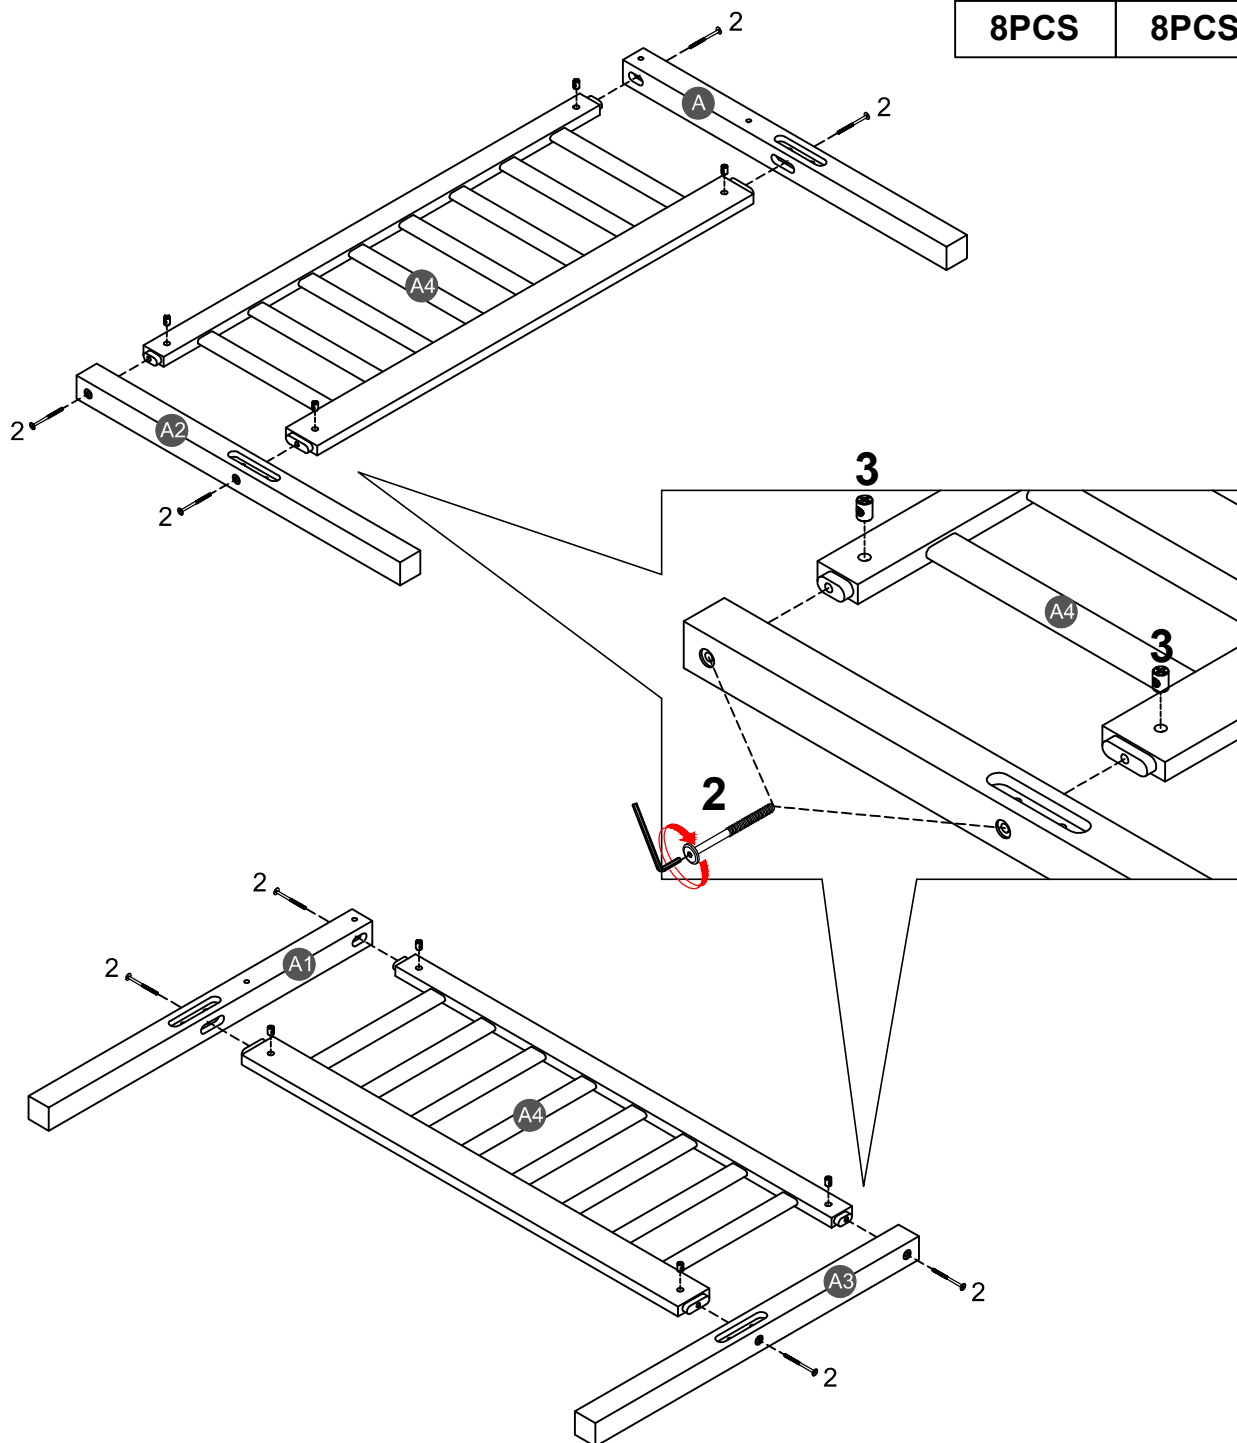


Note: Part 3 will face up with the "x" mark on it, otherwise it cannot be tightened

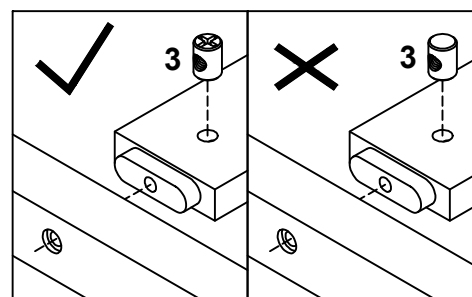

STEP 2:

1		3	
12PCS		12PCS	

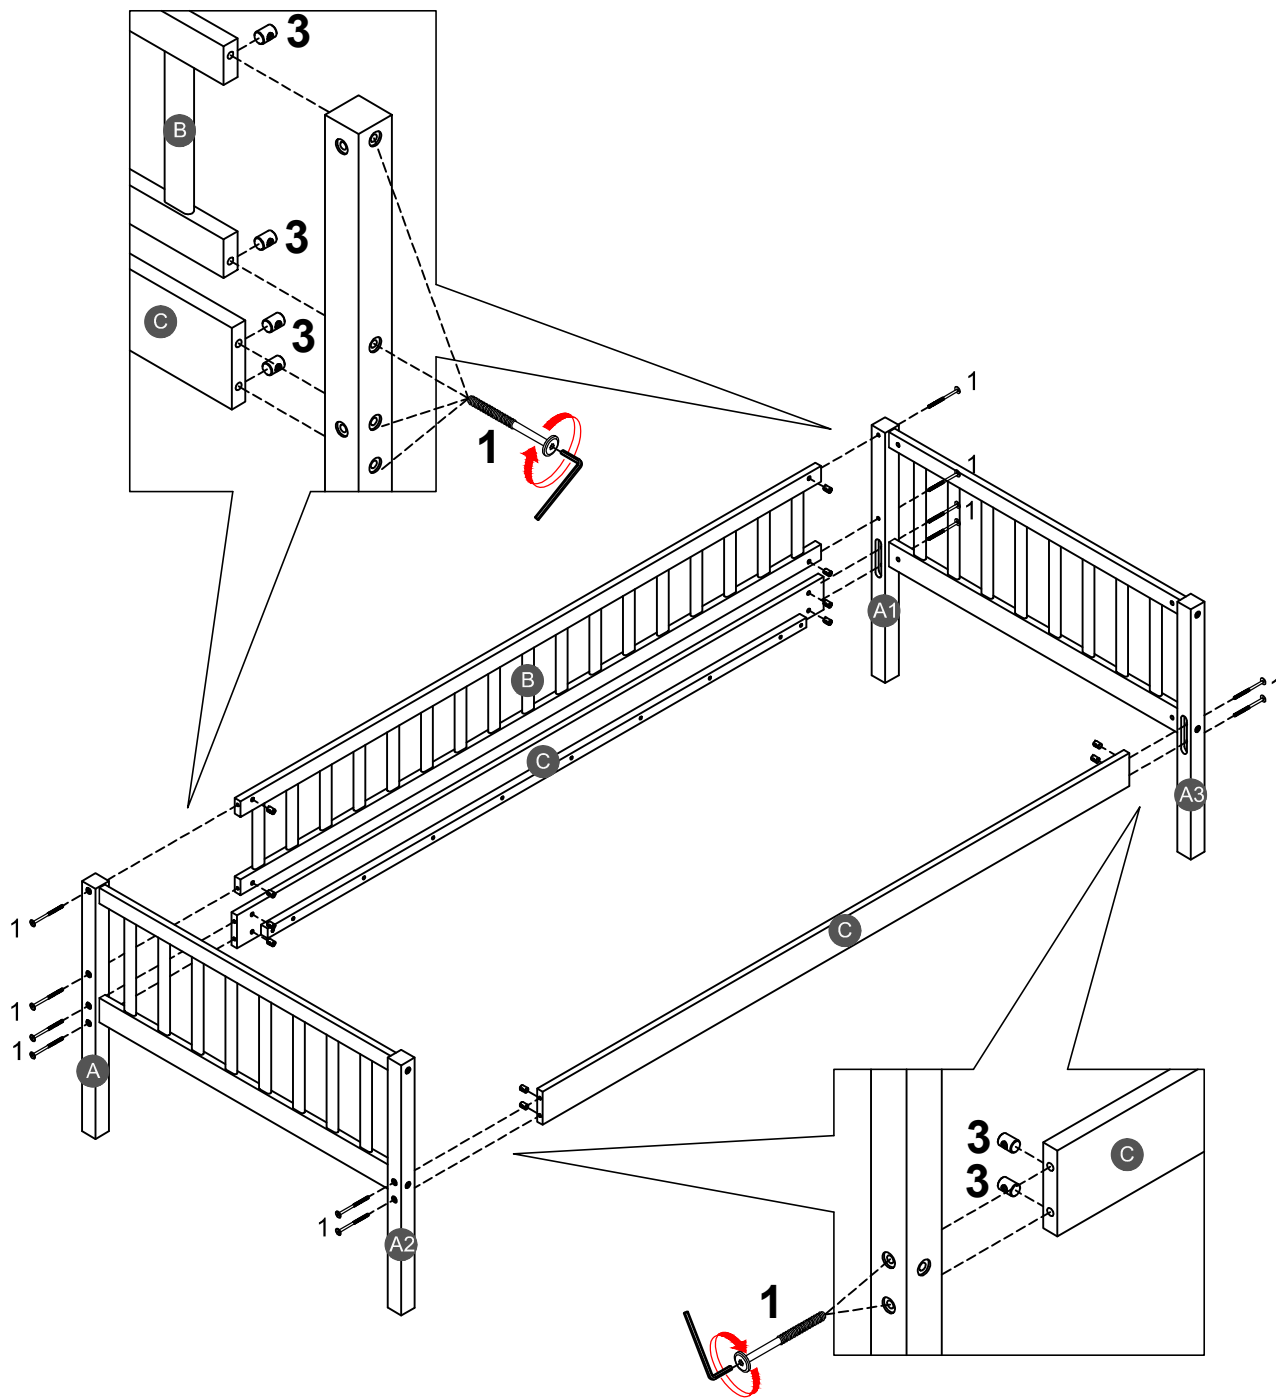





STEP 3:

For better fixing effect, there is no pre-drilled hole on the side rails. Please use self-tapping screws to fix it.

4



24PCS

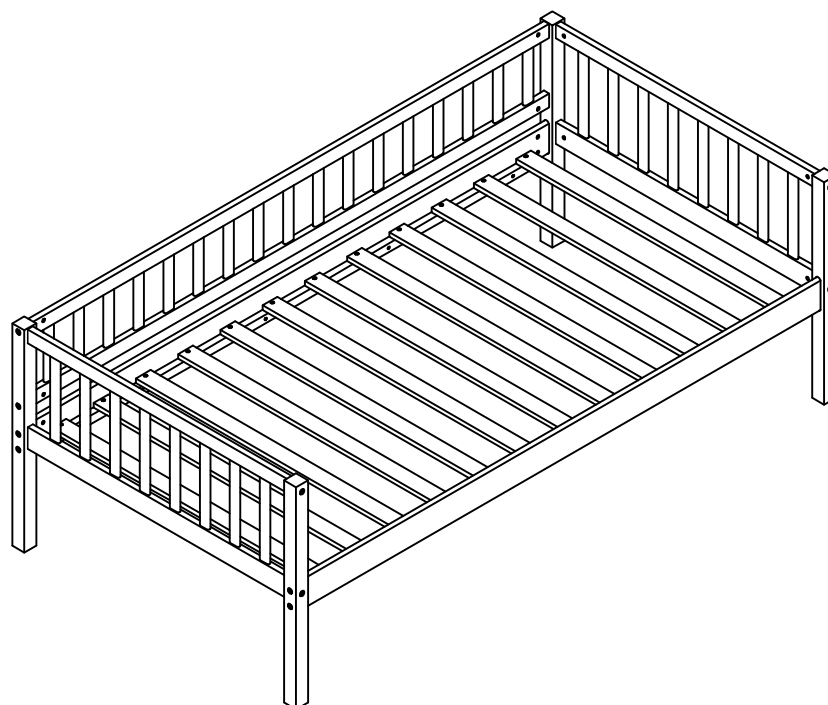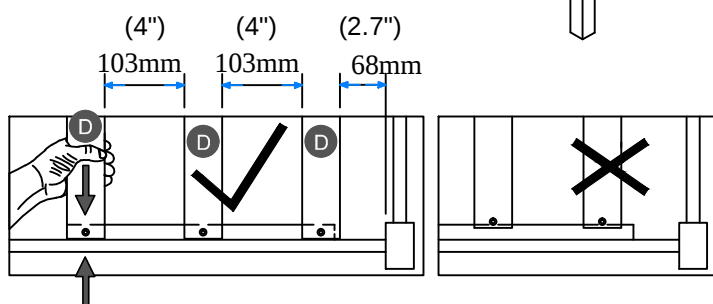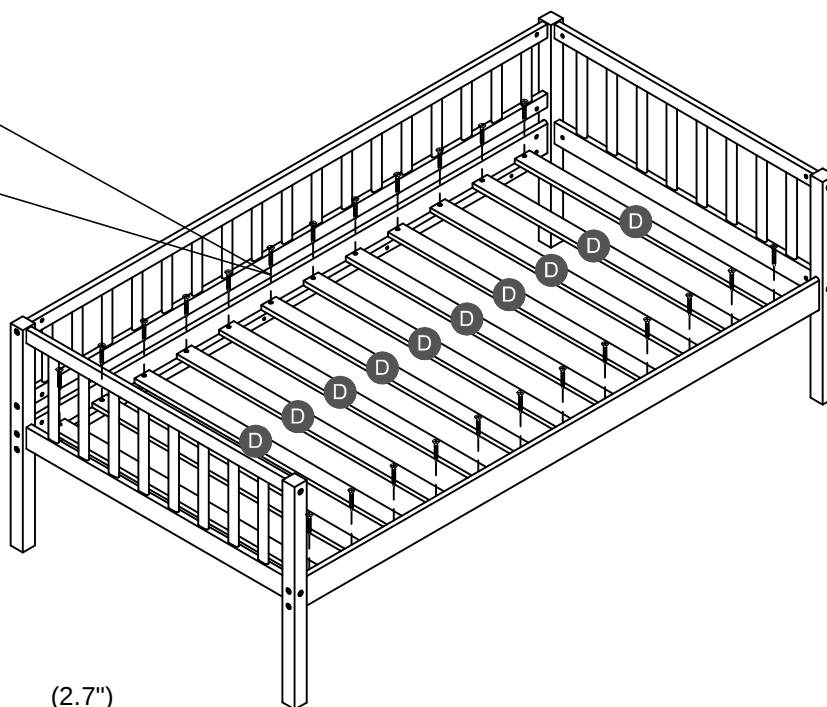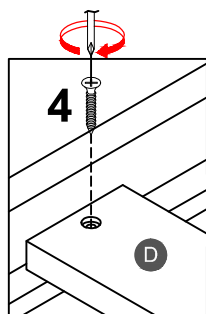

NOTE: Please make sure the bed slats close to the side rail before locking the screws to avoid breakage. This step is required for both the left and right sides. Moreover, please do not lock the screws of the bed slats at the outermost edge to avoid damaging.