Installation Steps

Please read the installation instructions carefully before installation. The front and back of the board are different. Be sure to see it clearly before operation. Attention shall be paid to the sizes of screws.

Before installation, be sure to know well about each part and make an inventory.

*The drawing is based on the package 5. Number of parts is slightly different. In case of any questions upon installation, please contact with Online Customer Service.


Parts List:

| · u | I to List. | | | | | |
|-----|--------------------------|--------------|-----|-------------------------|--------------------|------------------------|
| Α | small decorative spacer | 0 | х3 | 1 panel board | 2 long guard board | 3 left guardrail board |
| В | big decorative spacer | | x2 | | | |
| C | short rotating handle | Townson I | x4 | x1 | x1 | x1 |
| D | long rotating handle | | x4 | 4 right guardrail board | 5 host holder | 6 keypad board |
| E | 1-inch wheel | C) | x 2 | | | |
| F | 1.5-inch wheel | | x4 | x1 | x1 | x1 |
| G | small wrench | 2=3 | x1 | 7 elbow pipe | 8 U-shaped pipe | 9 table leg |
| Н | dual-purpose screwdriver | | x1 | | | |
| I | hanger rod | 0 0 | x4 | x2 pairs | v1 | x2 |
| J | M6x12 flat-end screw | 8)== | x4 | 10 guide rail | | |
| K | M5x50 pointed-end screw | 8 DEPENDENT | x10 | | | |
| L | M5x60 pointed-end screw | (X) ZHAHRAND | x2 | x1 pairs | | |
| М | M6x25 flat-end screw | | x2 | | | |
| N | M4x8 flat-end screw | ॐ | x4 | | | |
| 0 | tapping screw | 3 | x4 | | | |
| | | | | | | |


Installation steps:

Step 1: Inset the elbow pipe [7] into the steel frame on the back of the panel board [1], and screw up the short rotating handle [C] for fixation.

*Notes: The holes of the elbow pipe [7] face outwards

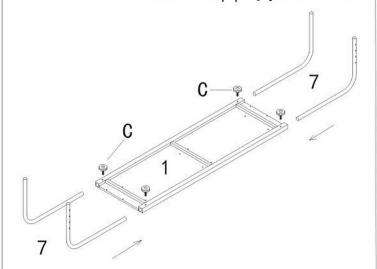



Step 2: Screw the 1.5-inch wheel [F] onto the table leg [9] with the small wrench [G], screw out the nylon parts on the table leg [9] with the dual-purpose screwdriver [H], insert the table leg [9] into the elbow pipe [7], and align with corresponding holes and screw up the long rotating handle [D] for fixation.

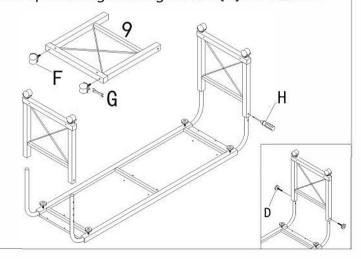


Step 3: Connect the guide rail [10] and the hanger rod [I] with the screws [N] (4 ones).

*There are two rows of elliptic holes on the guide rail. Upon installing the hanger rod, be careful to choose corresponding holes.

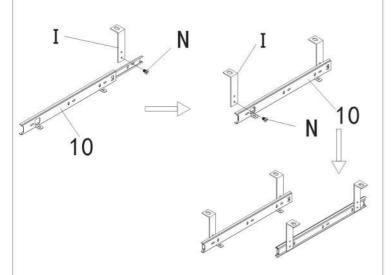





*There are no holes on the board. The tapping screws shall be screwed into it directly.

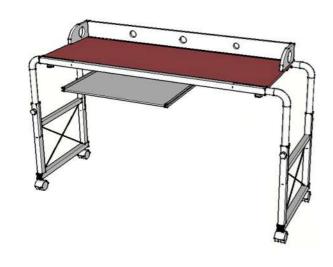

Step 6: Connect the long guardrail board [2] with the left guardrail board [3] and the right guardrail board [4] with the screws [K] (4 ones), place the small decorative spacer [A] into the holes of the long guardrail board [2], place the big decorative spacer [B] into the left and right guardrail boards [3][4]; and install the whole onto the panel board with the screws [K] (4 ones).

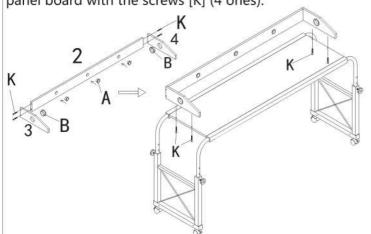

Step 4: Fix the parts finished in the above step onto the back of the panel board with the screws [J]

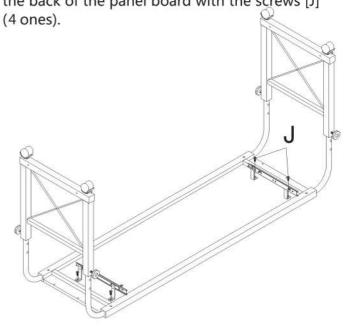

Step 7: Screw the 1-inch wheel [E] onto the U-shaped pipe [8] with the small wrench [G], connect the U-shaped pipe [8] and the host holder [5] with the screws [K] (2 ones), and connect the host holder [5] and the table leg [9] with the screws [L] (2 ones). The installation is

