


ASSEMBLY INSTRUCTIONS

CHEST


(Box 1)
CHEST

No.	Description	Drawing	Qty.
A	Chest		1 Pc
B	Bun Foot*		4 Pcs

* Bun Foot Packed Inside Chest Bottom Drawer

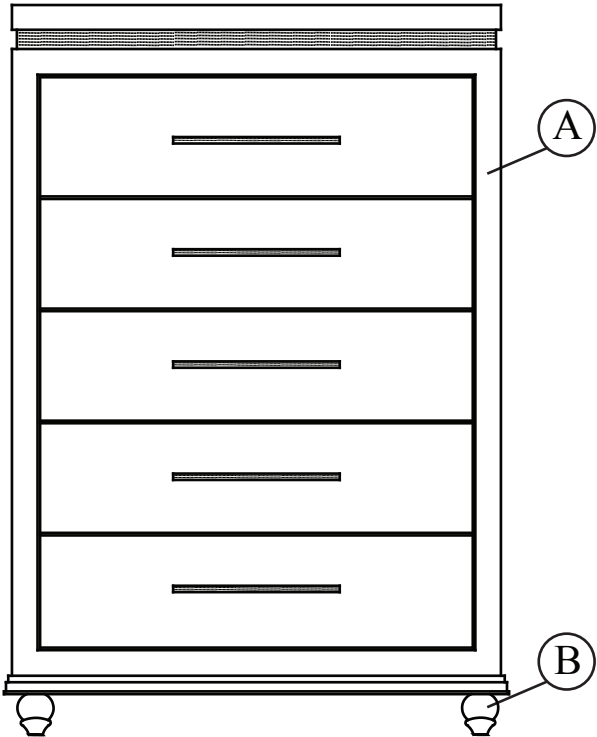

STEP 1:
Attach bun foot (B) to chest (A).

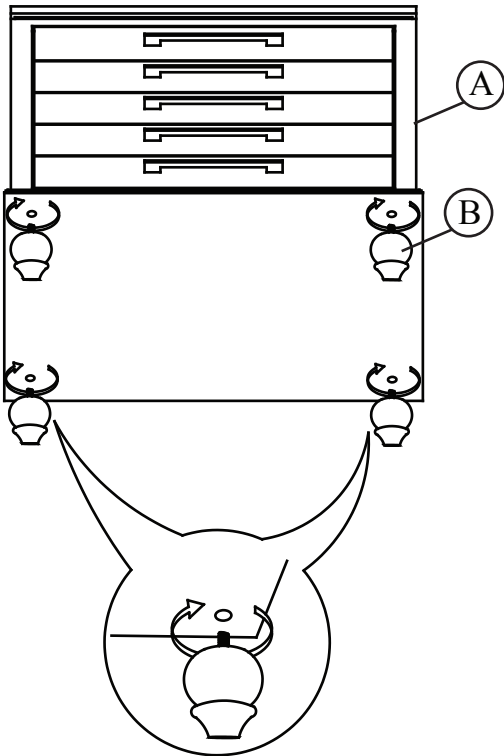

THE ANTI TIPPING HARDWARE IS LOCATED IN CHEST 1ST DRAWER
THE HARDWARE IS LOCATED IN THE PACKING ITEMS