


## Product assembly instruction

### 1: Product overview and model classification

The serial number	The name of the	Product model	load (kg)	Long (mm)	Wide (mm)	High (mm)	Net weight (kg)
● 1	Plank wagon, 2,000 pounds	YMBC-2000	910	1120	540	1030	20
● 2	Plank wagon, 3,000 pounds	YMBC-3000	1360	1120	540	1030	24



### 2: Product components

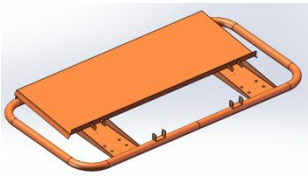

Mounting base\*1



Handle lever 1\*1



Handle lever 2\*1



Support bar\*2



bolt\*6



The wheel1\*2



The wheel2\*2



bolt\*8

### 3: Product assembly steps

**Step 1:** Install tie Handle lever 1 or Handle lever 2 to the Mounting base and ensure that the tie rod tube is inserted into the reserved tube of the bottom bracket



**Step 2:** Using a special wrench, bolt through the Handle lever tube and the Mounting base tube and secure.



**Step 3:** Secure the other Handle lever to the Mounting base as per step 2, making sure the bolts are locked. Note: the two handrails should be aligned and inserted together. Make sure that the clamp spring is locked and holds Handle lever 1 and 2 firmly.



**Step 4:** According to the method of step 2, two handrails are respectively fixed to the round pipe and the bottom frame of the handrail, and the final effect is as shown in the picture



**Step 5:** Assemble the four wheel groups into the corresponding positions of the bottom frame

