
ASSEMBLY INSTRUCTION

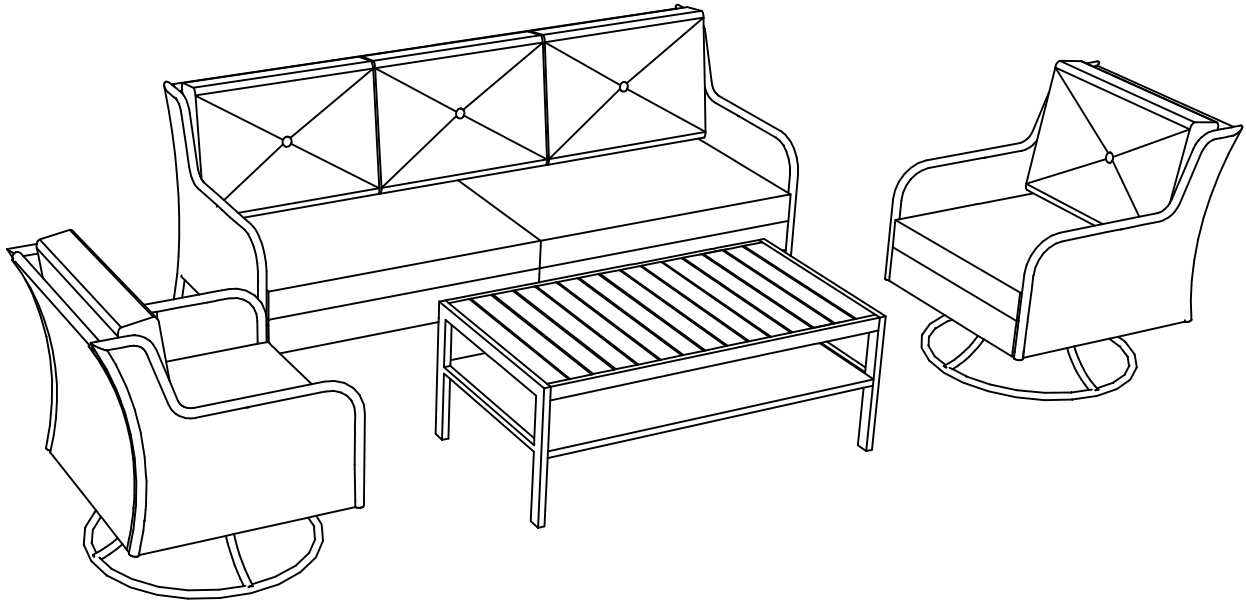



Notice:


1. 50% Tighten before fixing all screws, Allen wrench is recommended instead of an electric drill.
2. Place the item on a flat ground to adjust and make sure it remains stable.
3. Tighten up all screws with tools gradually.
4. If the screws are not aligned with holes during assembly, please loosen all the other screws to 50% and continue the assembly process.
5. If the item is not stable, please loosen all the screws, adjust it on a flat ground and tighten up all screws again.
6. Note : If one or some screws are fully tightened during assembly, chances are the others will not be aligned with holes. In addition, all the holes are designed to be relatively larger to provide more space for the adjustment of the screws.

Exployed View


x2

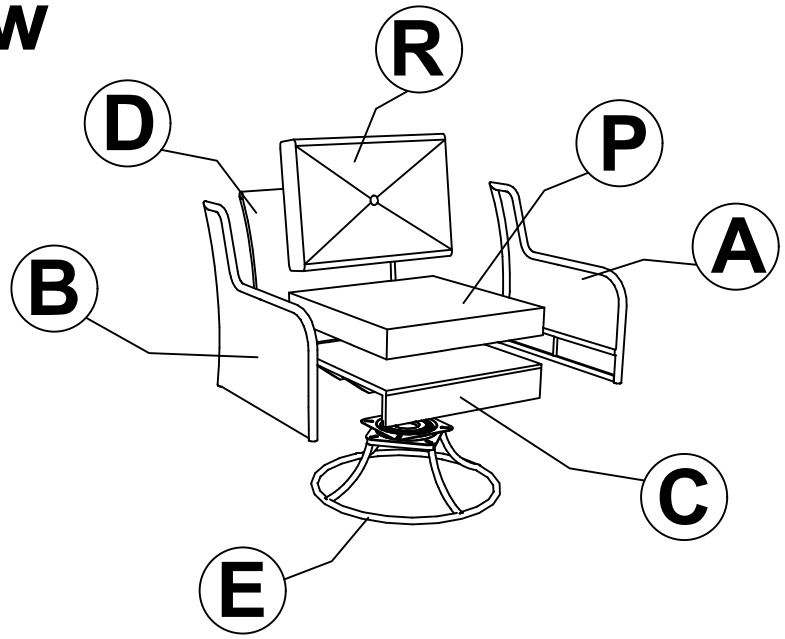

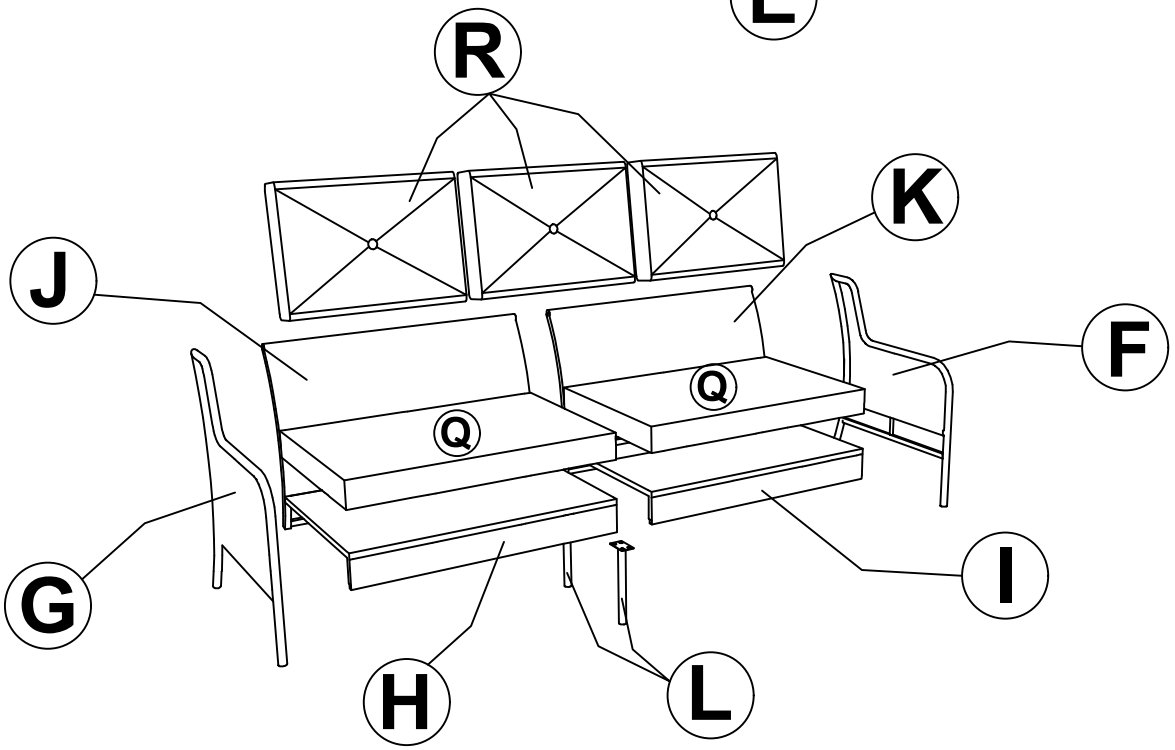


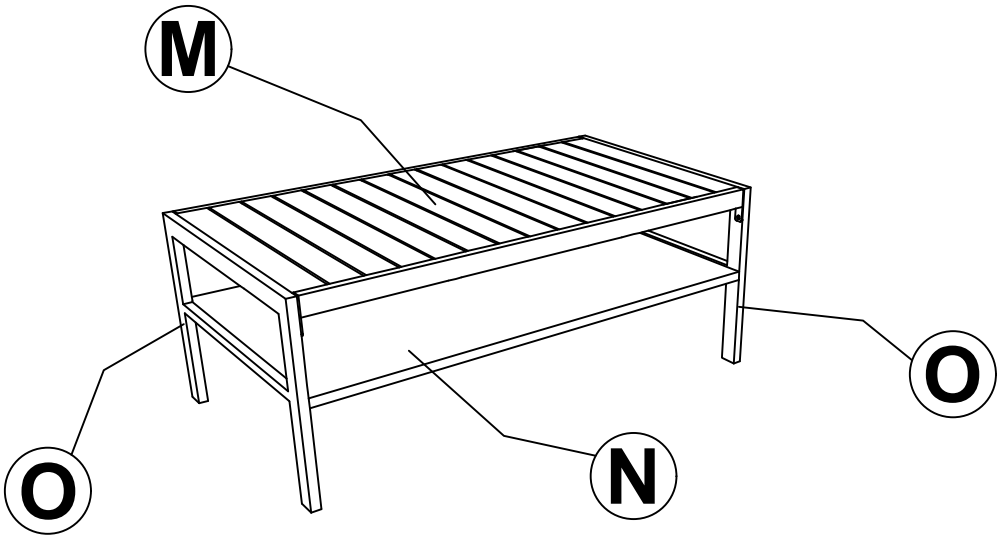


PART LIST

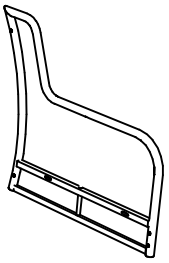


Ax2

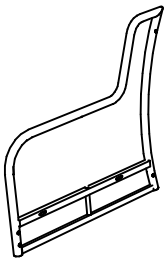


Bx2

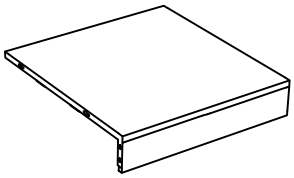


Cx2

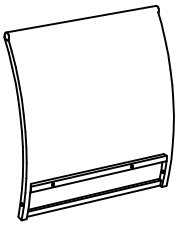


Dx2

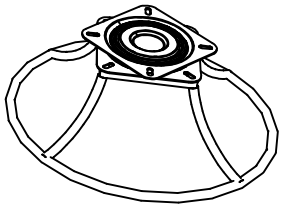


Ex2

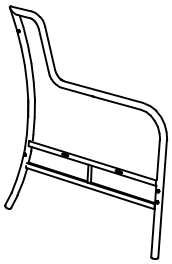


Fx1

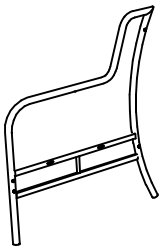


Gx1

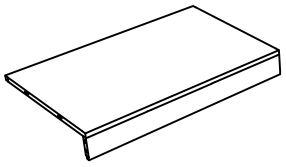


Hx1

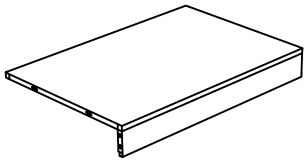


Ix1

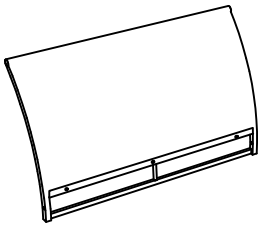


Jx1

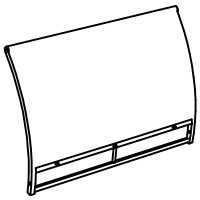


Kx1




Lx2

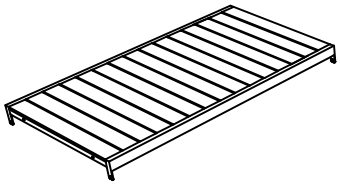


Mx1

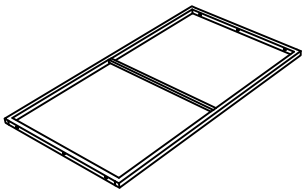


Nx1

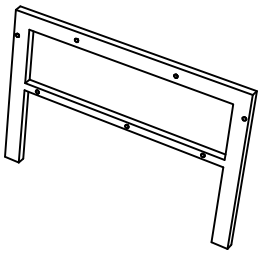


Ox2

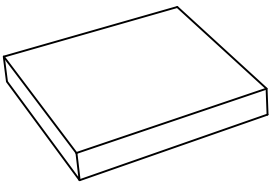

Px2

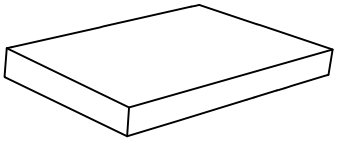


Qx2

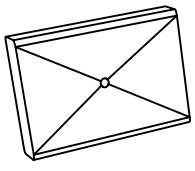


Rx5

3/14


HARDWARE LIST

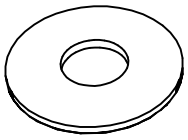


1- Washer : 85 pcs
Extra : 2 pcs

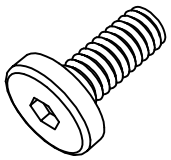


2- Bolt 6x20: 24 pcs
Extra : 2 pcs

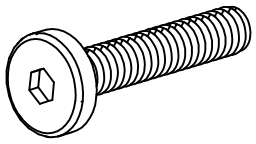

3- Bolt 6x30 : 20 pcs
Extra : 2 pcs

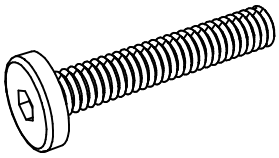

4- Bolt 6x45 : 41 pcs
Extra : 2 pcs




5- Bracket: 2 pcs




6- Allen key : 2 pcs


CARTON CONTENT :

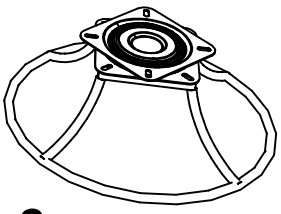


Ex2




Lx2

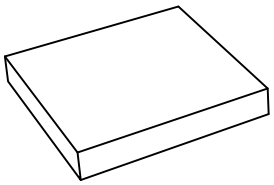


Px2

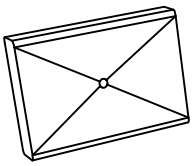


Rx4




Hardware

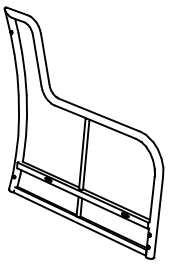


Ax2

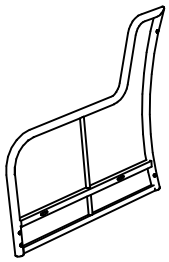


Bx2

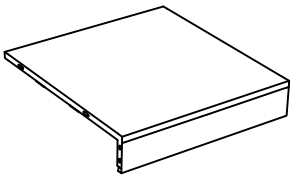


Cx2

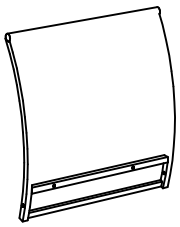


Dx2

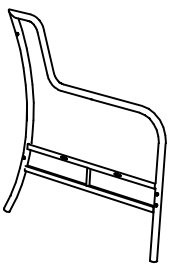

Fx1

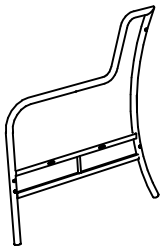


Gx1

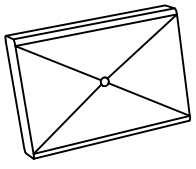


Rx1


CARTON CONTENT :

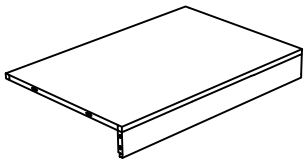


Ix1

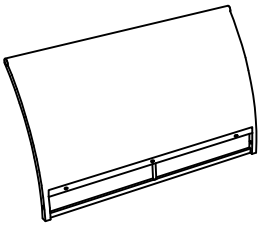


Jx1

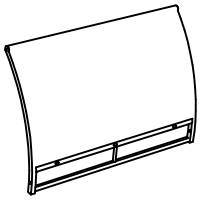


Kx1

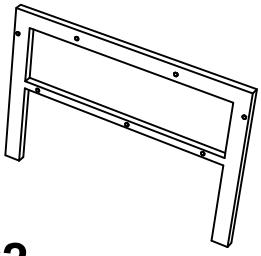


Ox2

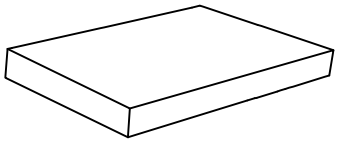


Qx1

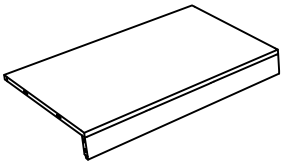


Hx1

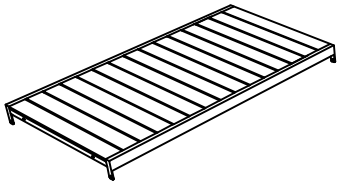

Mx1

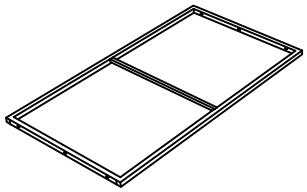


Nx1

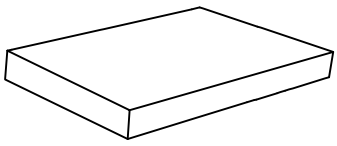


Qx1

Step 1

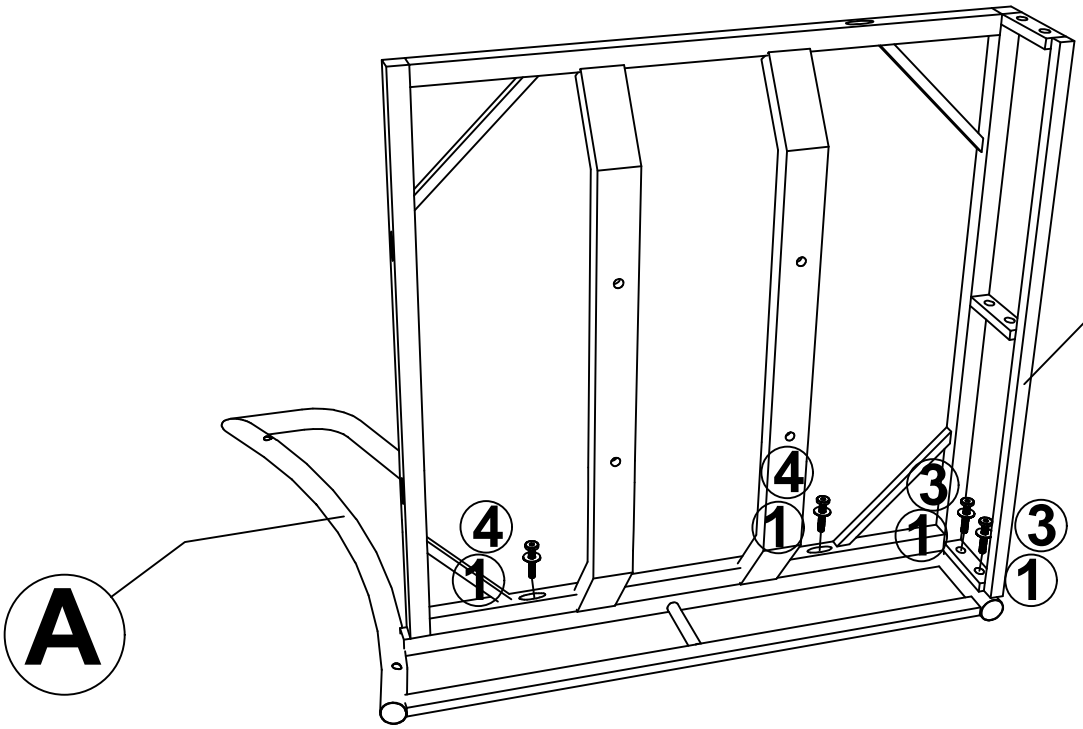

Ax1 Cx1 ①x4 ③x2 ④x2


Step 2

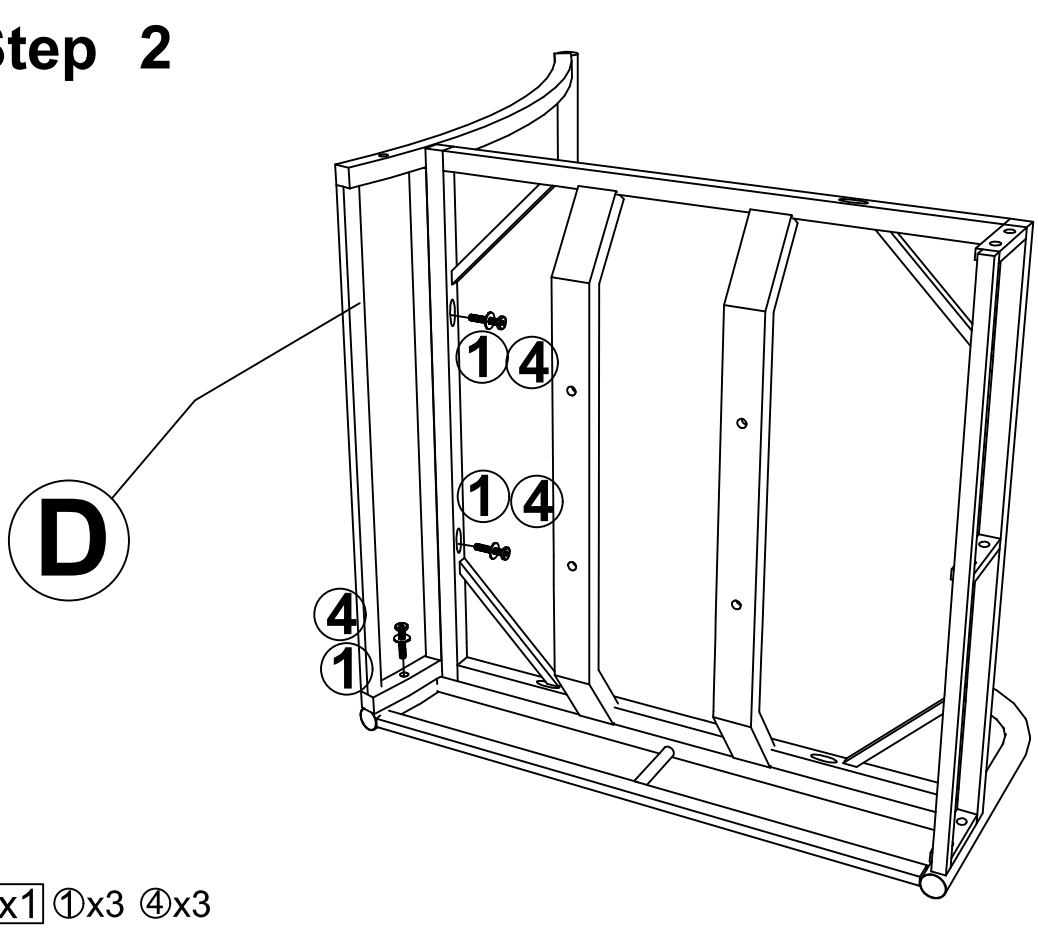

Dx1 ①x3 ④x3

Step 3


x2

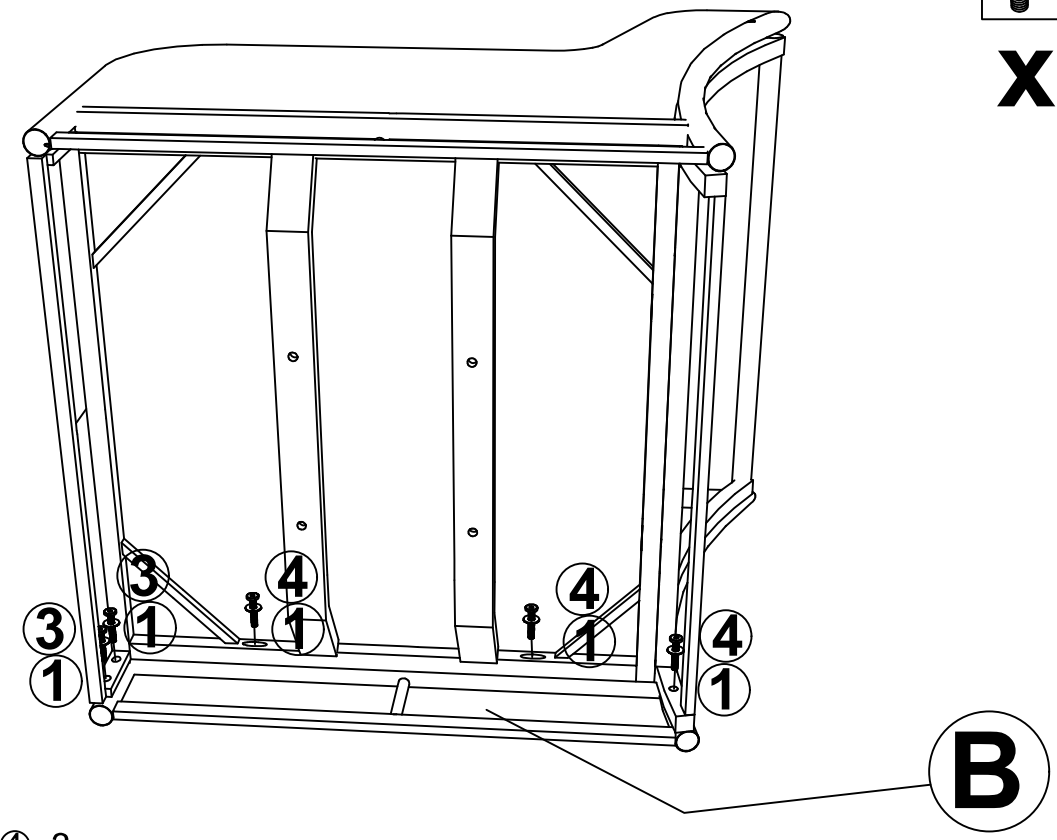

Bx1 ①x5 ③x2 ④x3


Step 4

x2

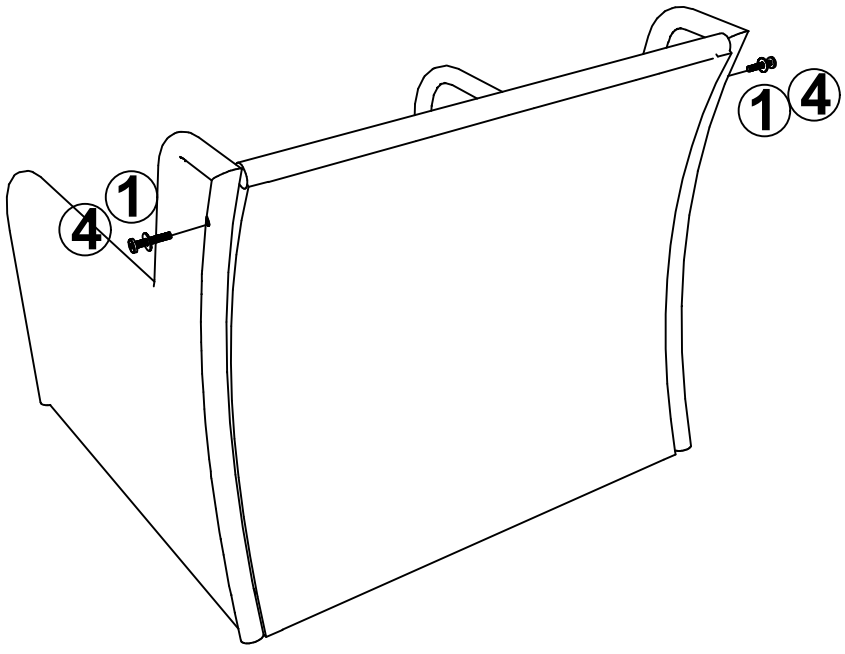


①x2 ④x2

Step 5

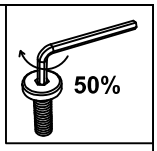


x2

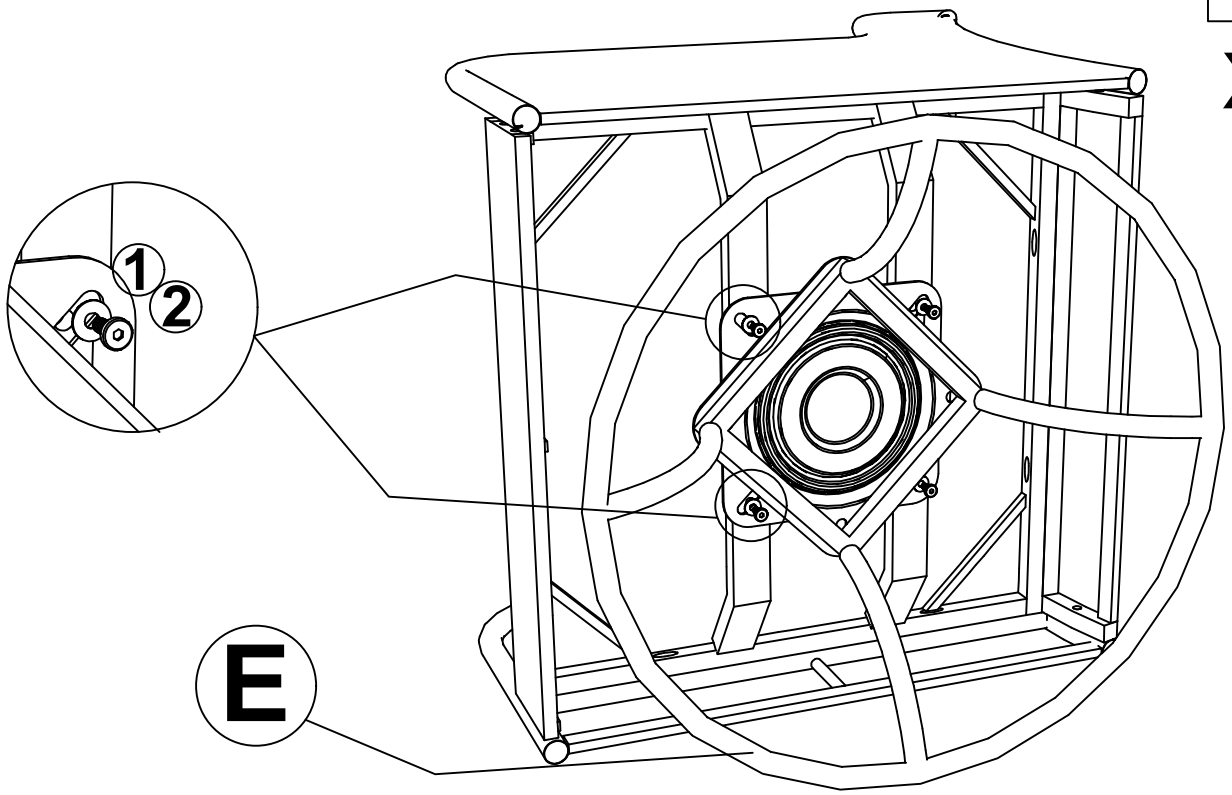


Ex1 ①x4 ②x4

Step 6

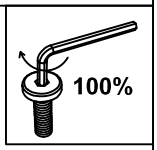


x2

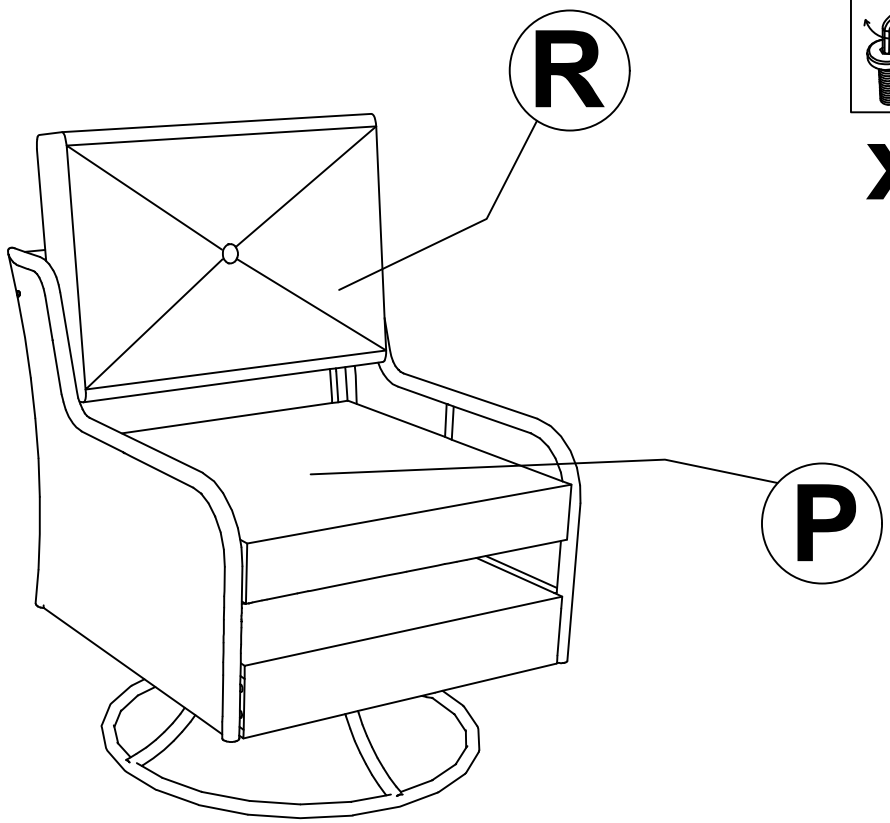


Px1 Rx1

Step 7

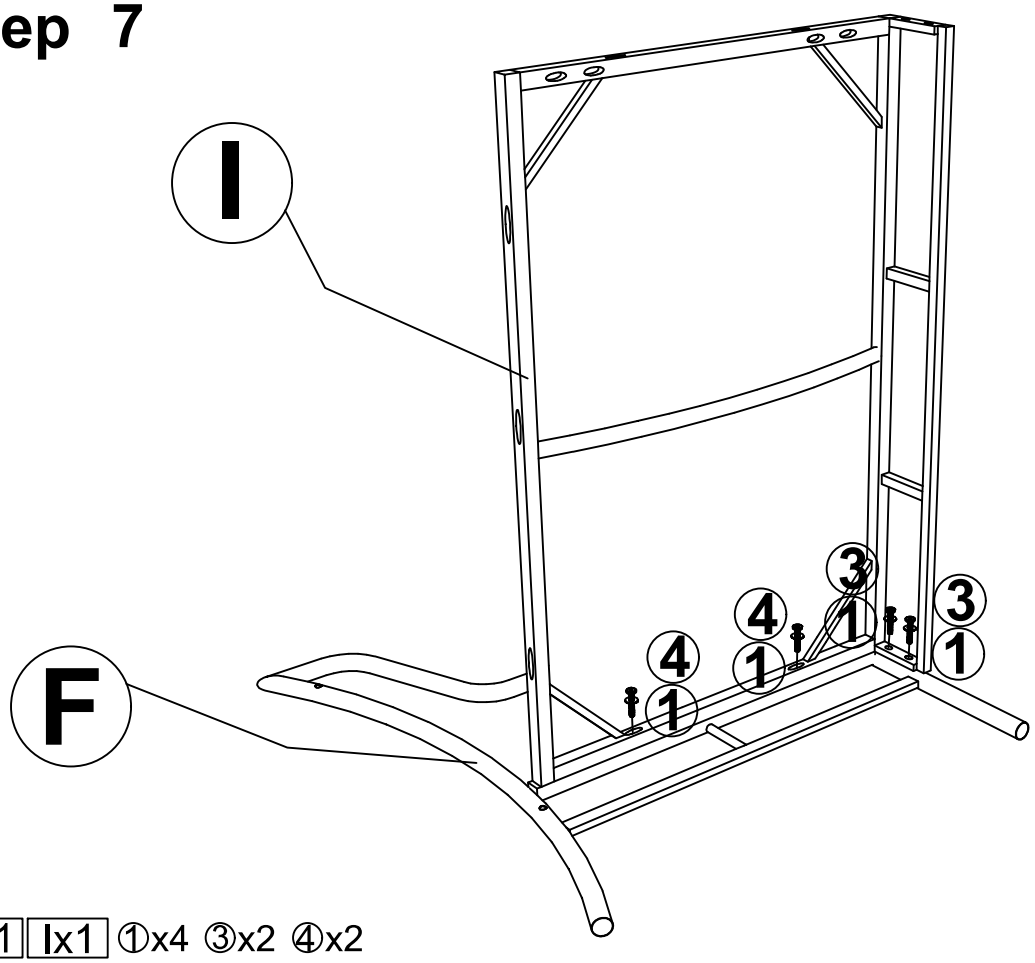


Fx1 Ix1 ①x4 ③x2 ④x2


Step 8

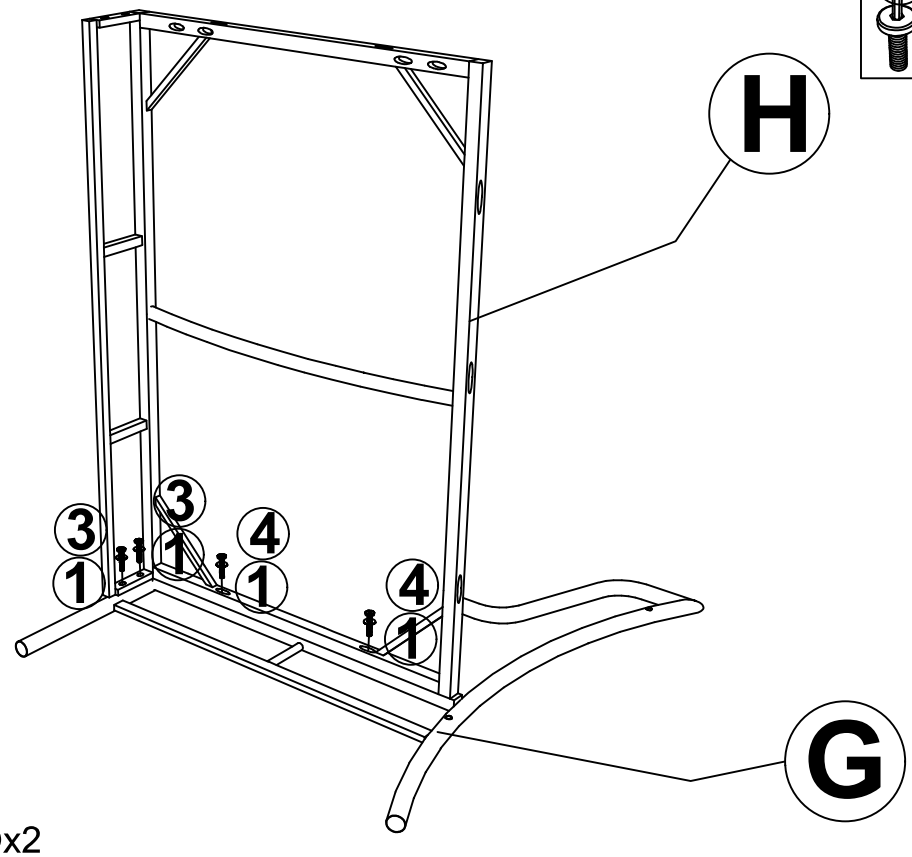

Gx1 Hx1 ①x4 ③x2 ④x2


Step 9

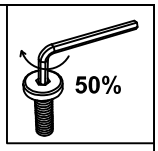


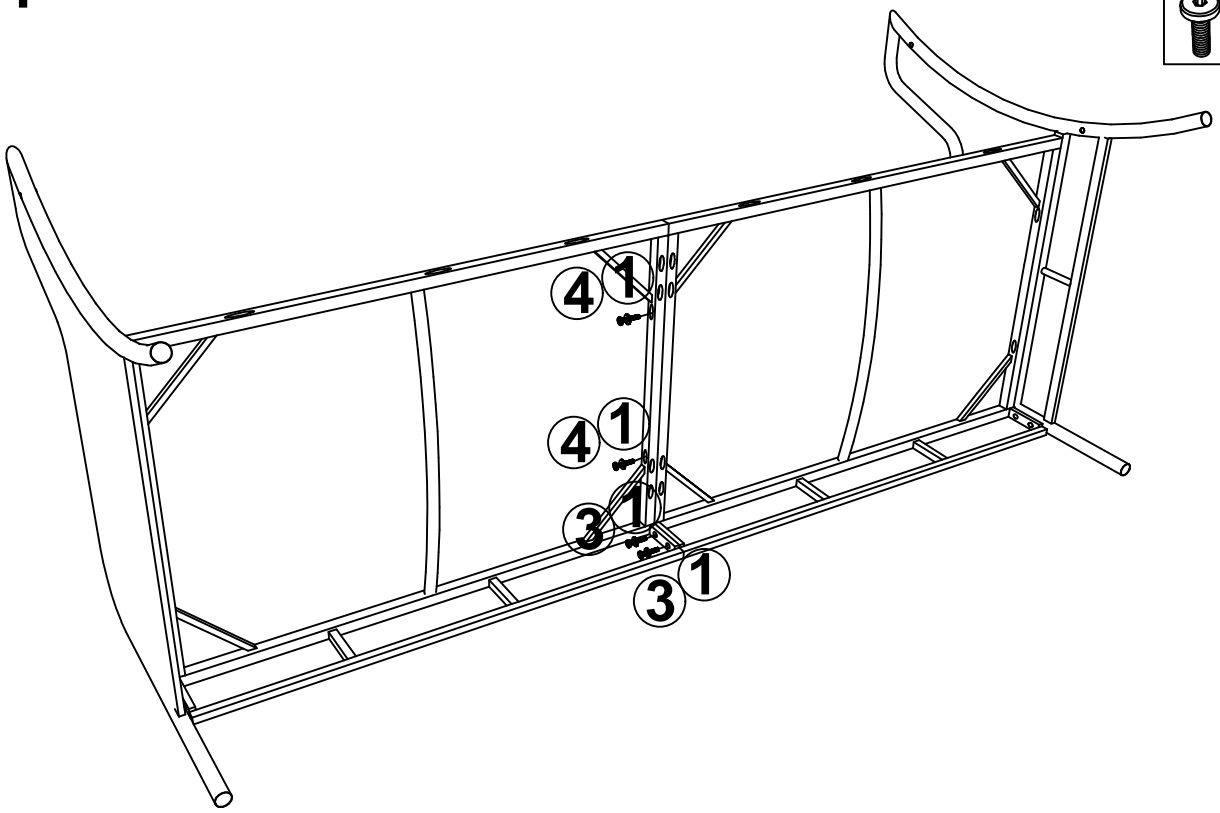

Step 7 Step 8 ①x4 ③x2 ④x2


Step 10

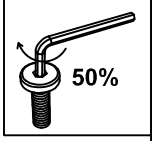

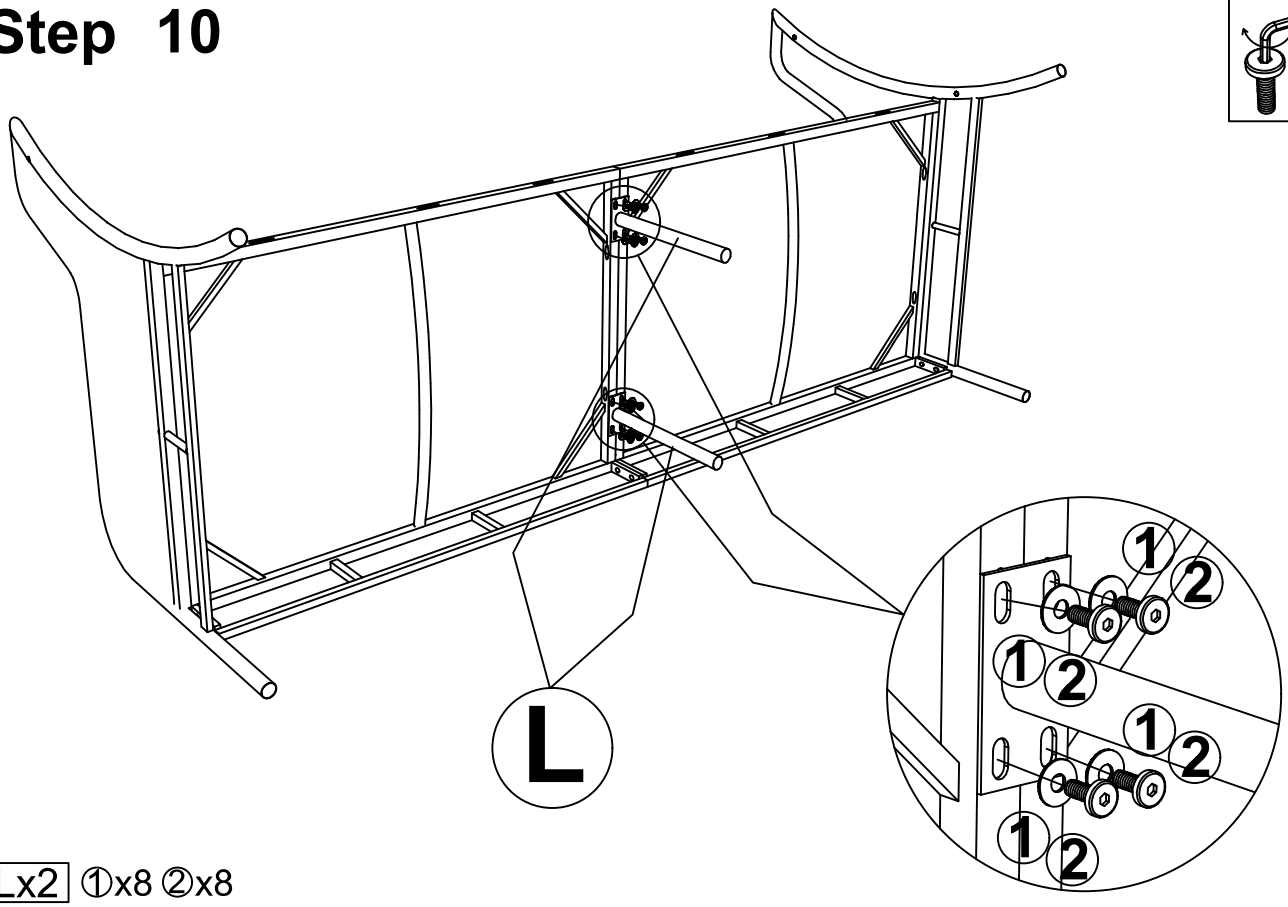


Lx2 ①x8 ②x8

Step 11

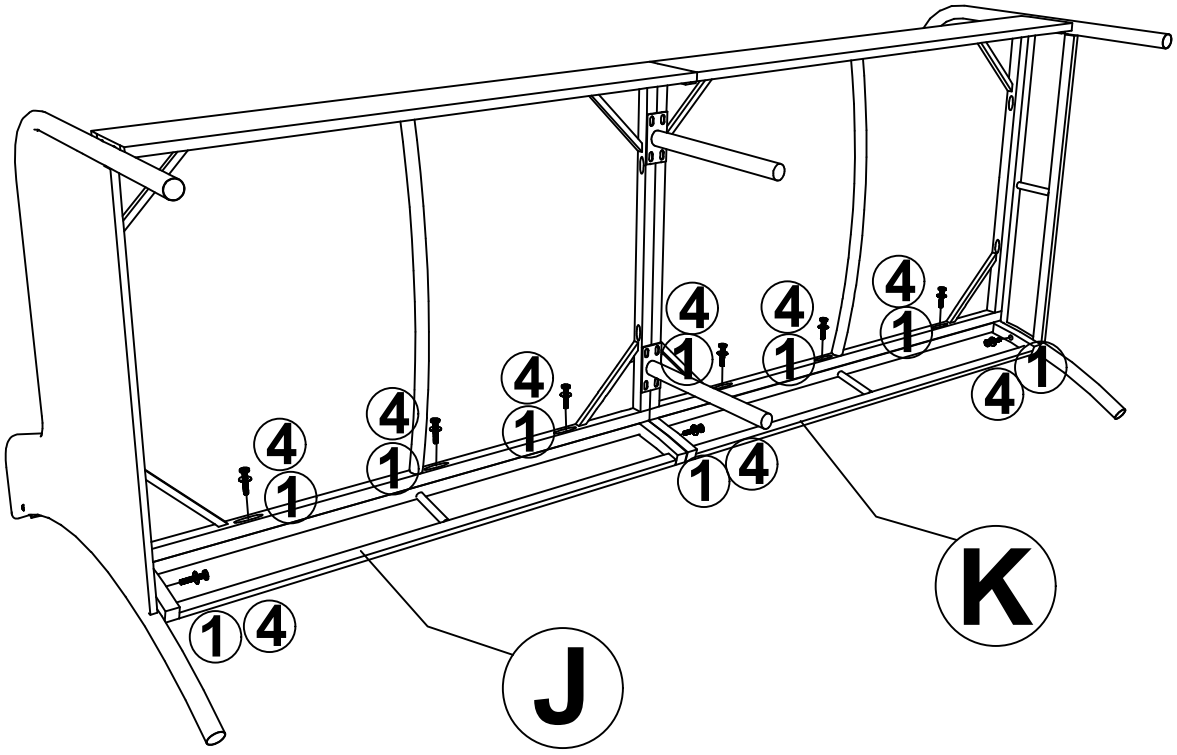


Jx1 Kx1 ①x9 ④x9


Step 12

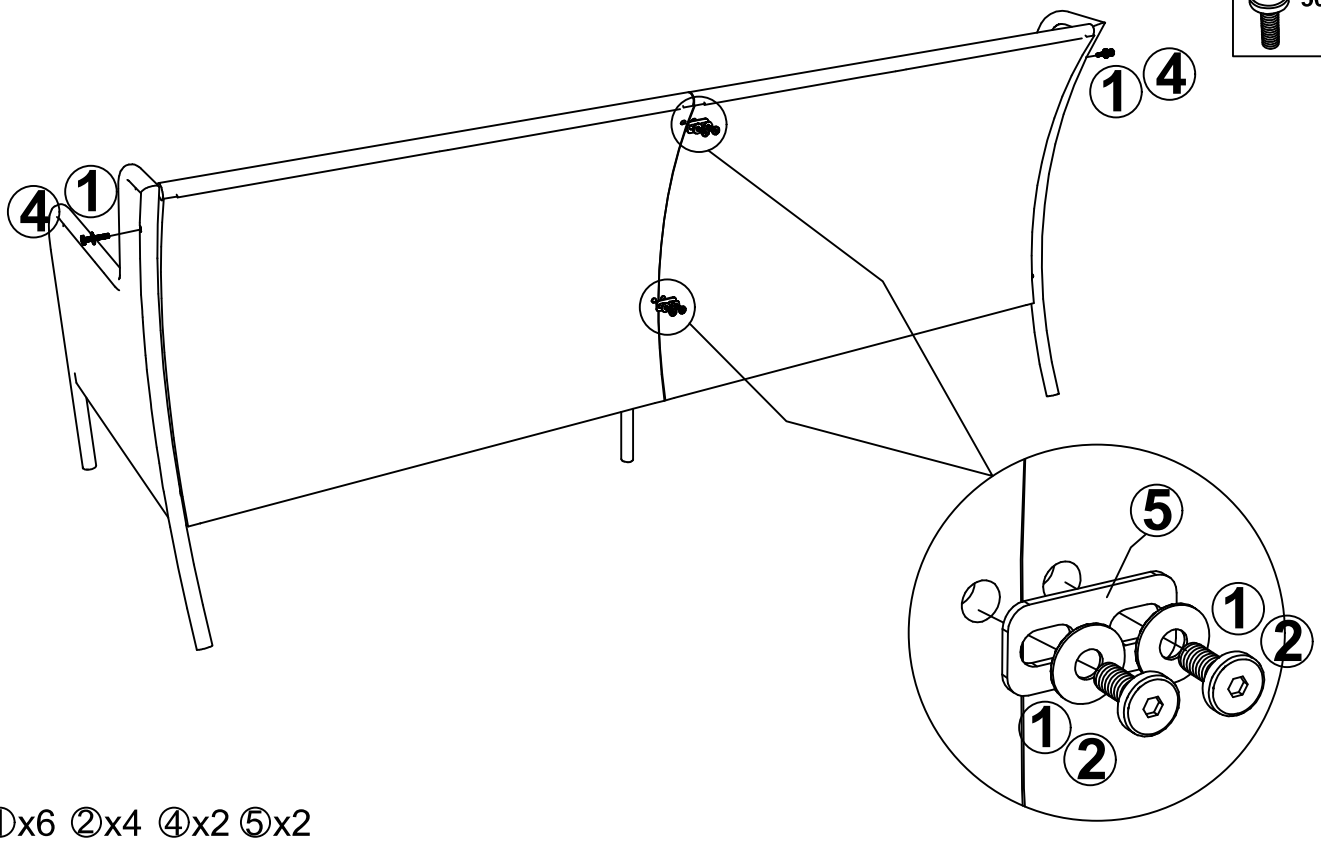

①x6 ②x4 ④x2 ⑤x2


Step 13

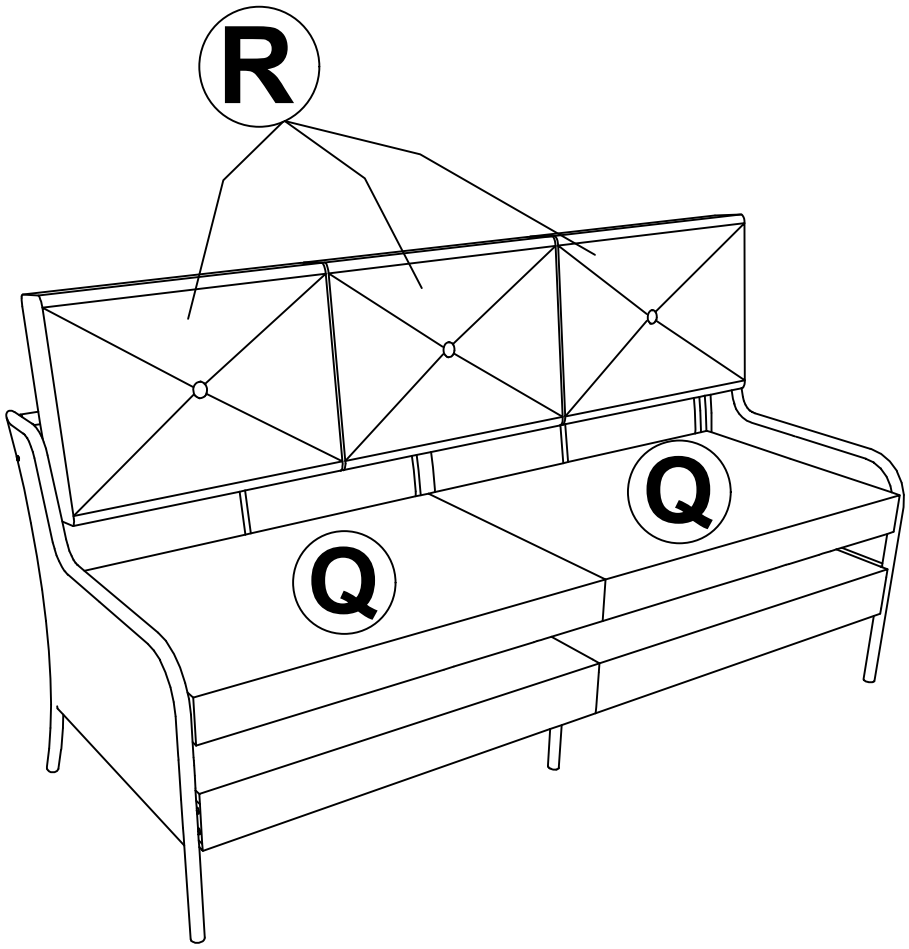


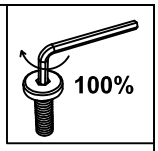

Qx2 Rx3


Step 14

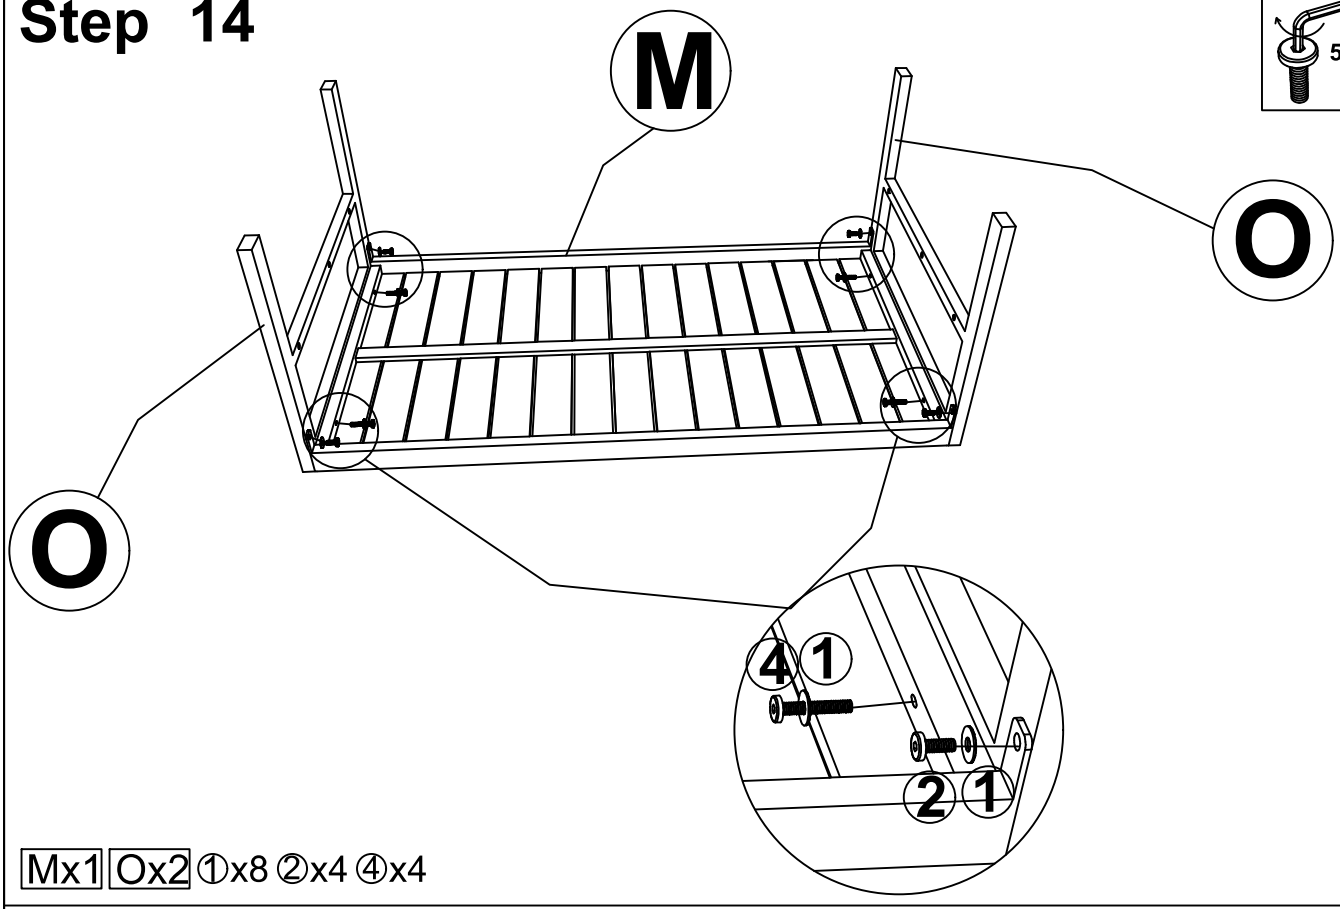

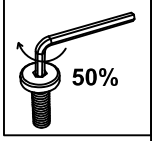


Mx1 Ox2 ①x8 ②x4 ④x4

Step 15

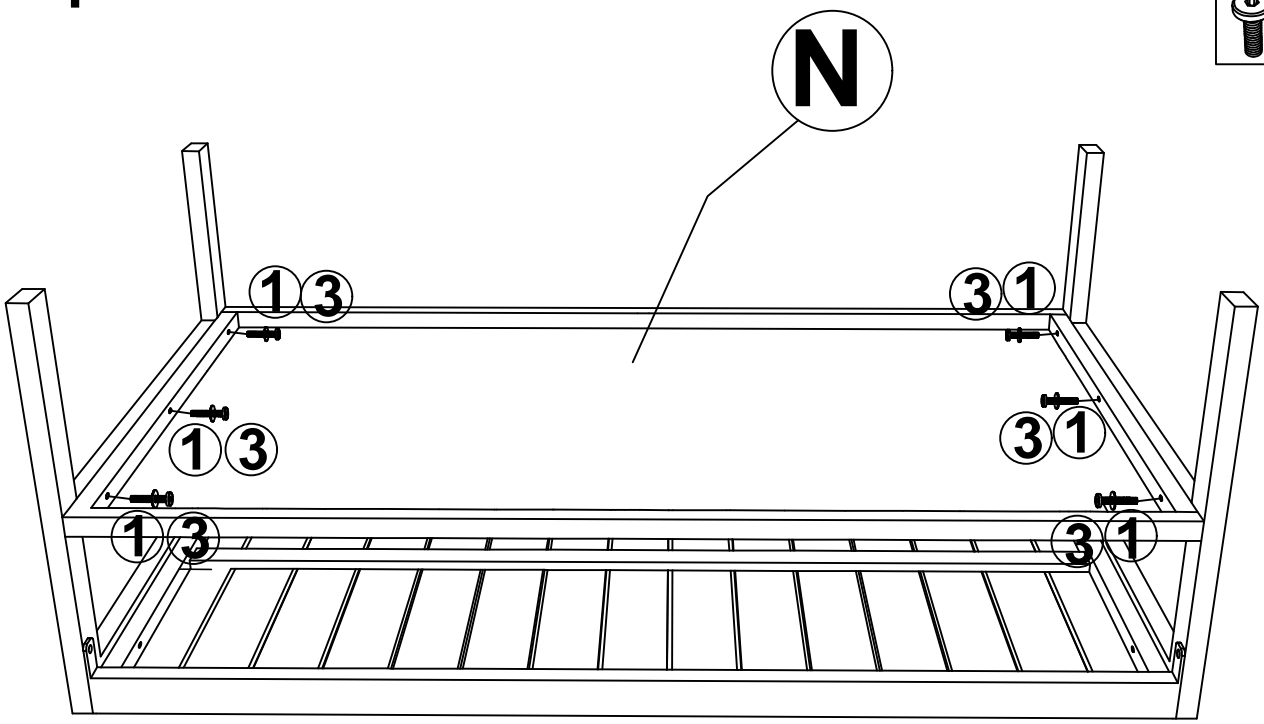



Nx1 ①x6 ③x6

Step 16

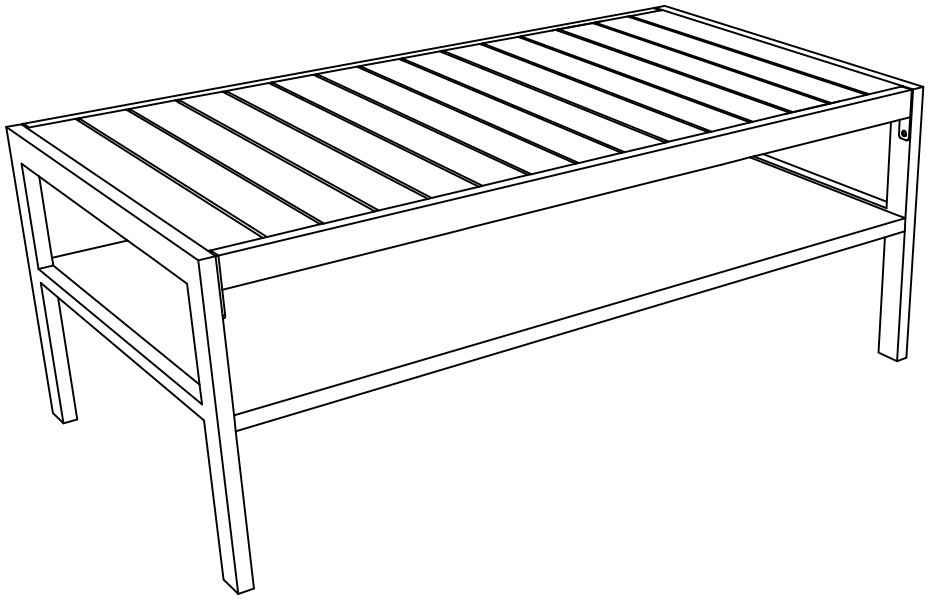

Step 17

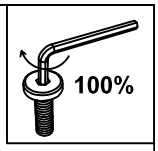

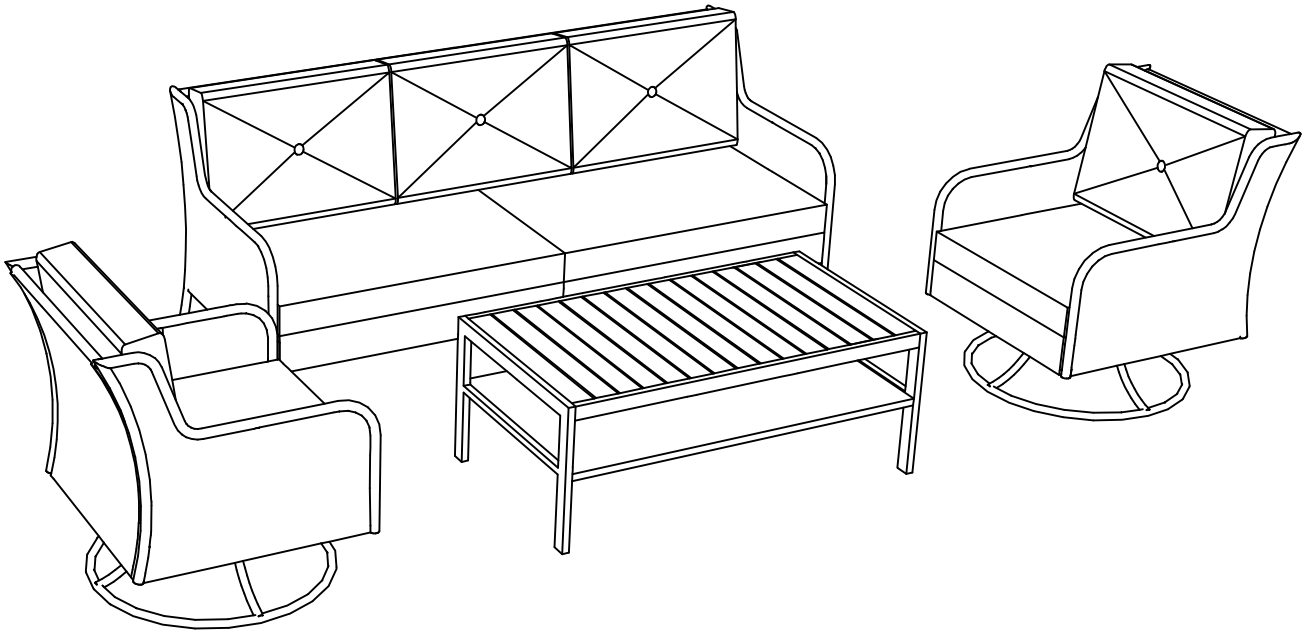

Finish