
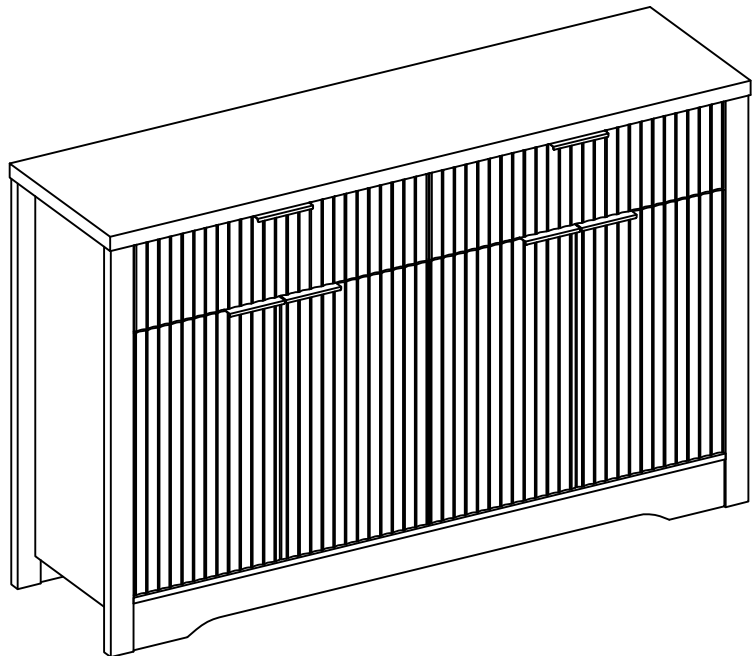
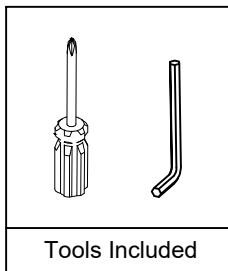


Fluted Buffet Cabinet


Assembly Instruction

CS-CBG-CW_V1.0

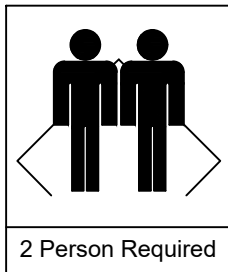

Customer Support

NEED HELP? For replacement requests or product inquiries, please contact our Customer Service Team by emailing us at cozylifecs@hotmail.com. Thank you for selecting us!

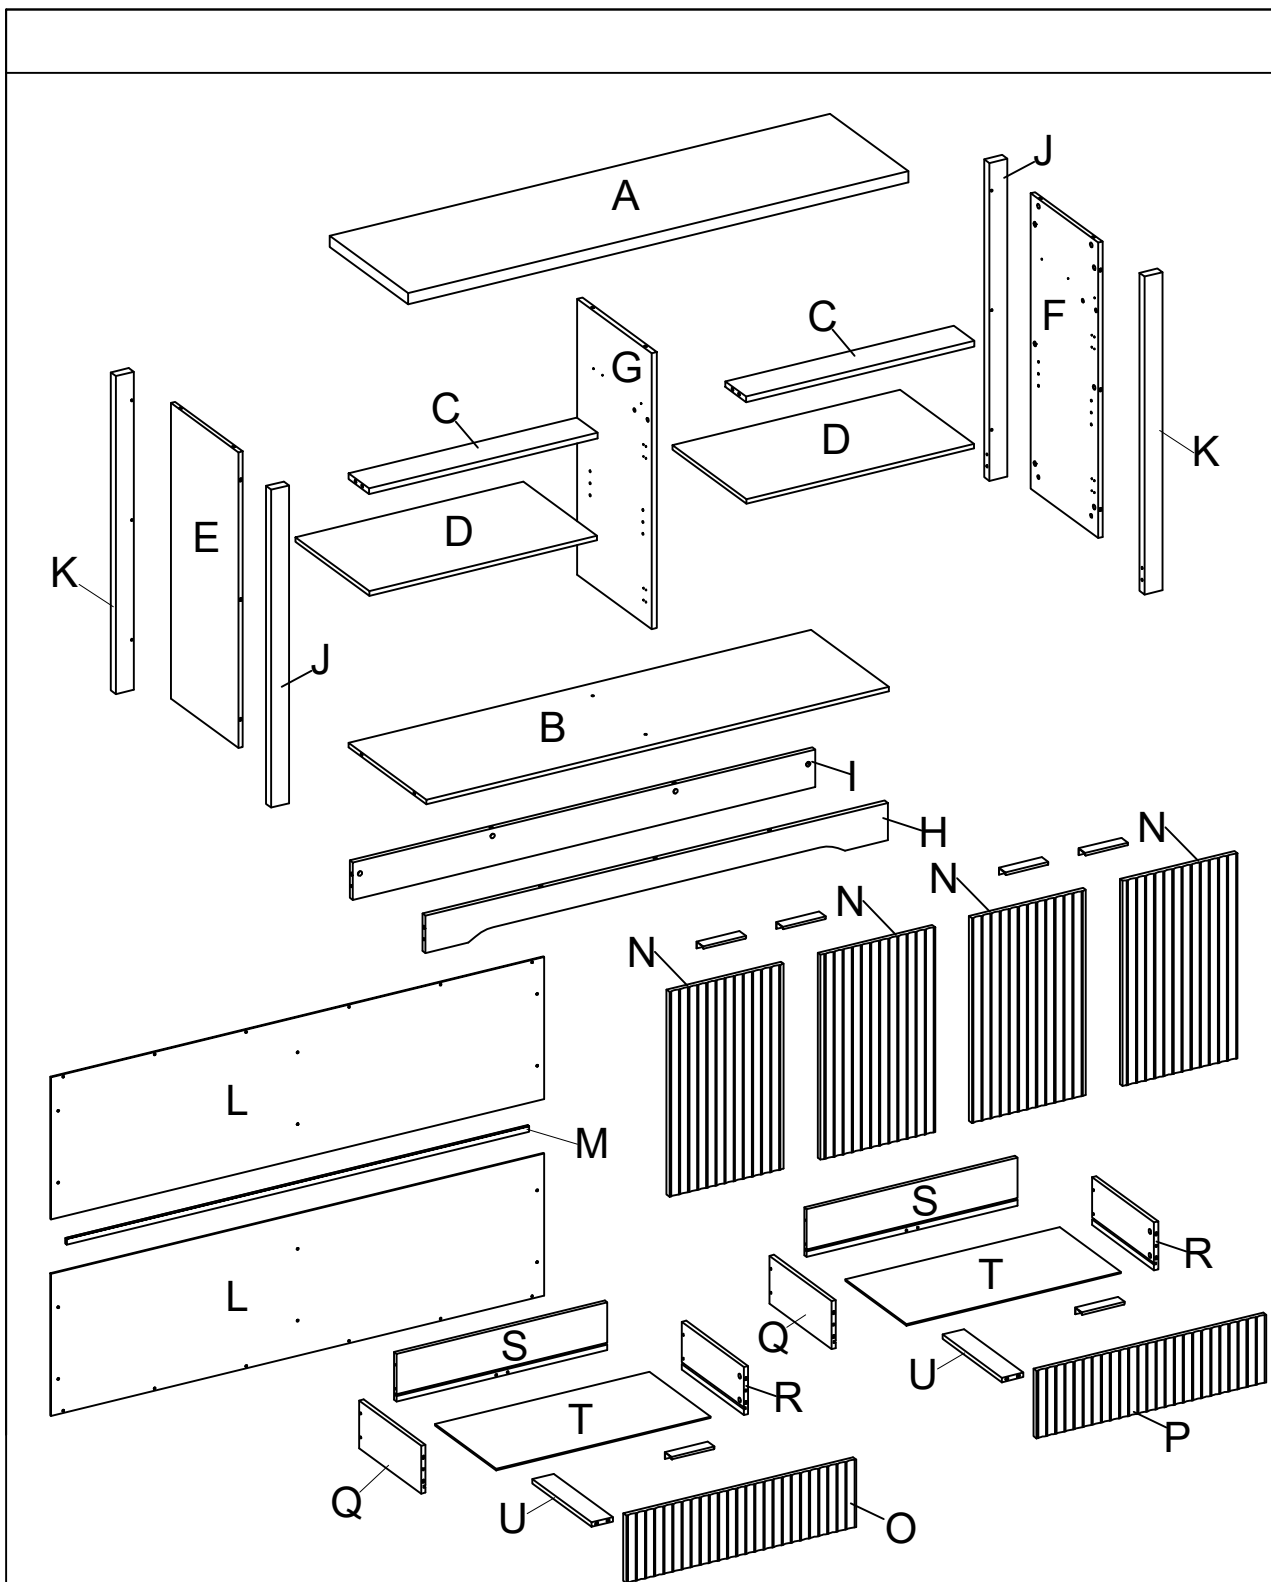


USEFUL HINTS BEFORE YOU START:


1. Read each step carefully before starting.
2. It is important that each step is performed in correct order to avoid difficulties.
3. Identify, sort and count the parts before assembly.
4. Assemble your furniture on packaging cardboard to prevent scratch or damage.
5. Clean the product with mild cleanser using soft damped cloth. Do not use harsh or abrasive cleanser.
6. Using incompatible hardware might cause damage to product.

PART LIST

A x 1pc



B x 1pc




C x 2pcs




D x 2pcs




E x 1pc



F x 1pc



G x 1pc



H x 1pc



I x 1pc




J x 2pcs



K x 2pcs



L x 2pcs




M x 1pc




L1294


N x 4pcs

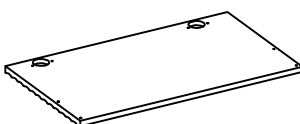


O x 1pc




P x 1pc




Q x 2pcs

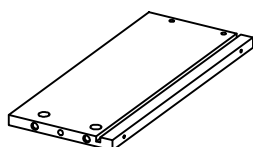

R x 2pcs

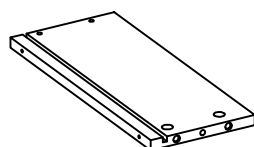


S x 2pcs














T x 2pcs



U x 2pcs




HARDWARE LIST

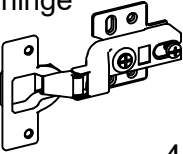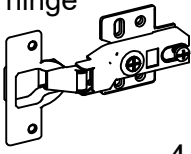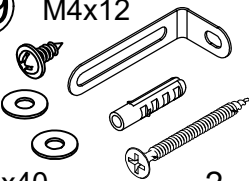①  M5x40 2 pcs	②  M3x12 84 pcs	③  6 pcs	④  M4x30 12 pcs
⑤  M4x14 24 pcs	⑥  M6x30 8 pcs	⑦  coarse thread screw M6x28 51 pcs	⑧  Ø12 51 pcs
⑨  300L 2 pcs	⑩  300L 2 pcs	⑪  300L 2 pcs	⑫  300L 2 pcs
⑬  Large curved hinge Ø35 4 pcs	⑭  Medium curved hinge Ø35 4 pcs	⑮  M6x19 8 pcs	⑯  4 pcs
⑰  M3 1 pc	⑱  1 pc	⑲  M4x12 M4x40 2 pcs	

How to install Camlocks


Connect the male camlock as directed in the assembly instructions with a screwdriver.

1 DO NOT OVER TIGHTEN

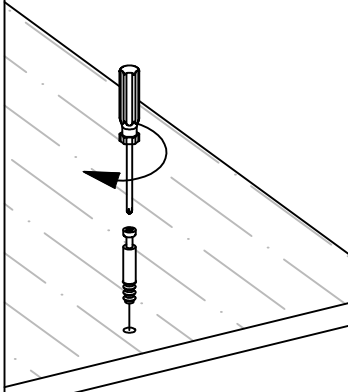

Put the male camlock into the entry hole.


2

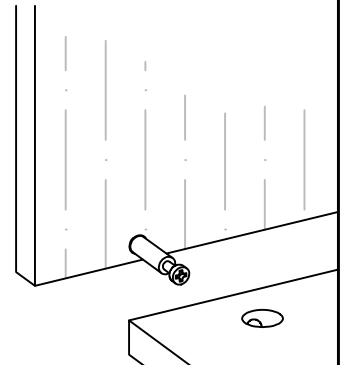

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points toward the entry hole for the male camlock.

3

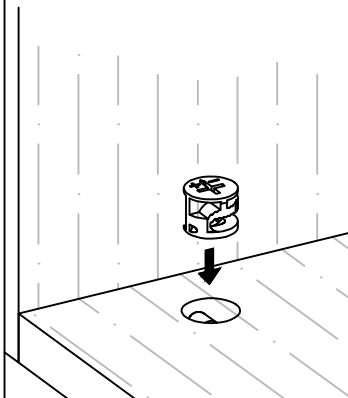


Screw the female camlock clockwise with a screwdriver.

You will feel a click when the camlock is locked in place.

The camlock is now completed.

4

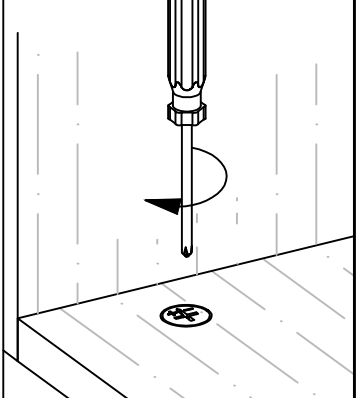


HOW TO ADJUST THE EUROPEAN ADJUSTABLE HINGES ON DOOR

If the doors require adjustment, follow the below options as needed:


To adjust door up or down, loosen screws (a), adjust door and retighten screws.

To adjust door left and right, turn screw (b) in or out.


To adjust door in and out, loosen screw (c), adjust door and retighten screw.

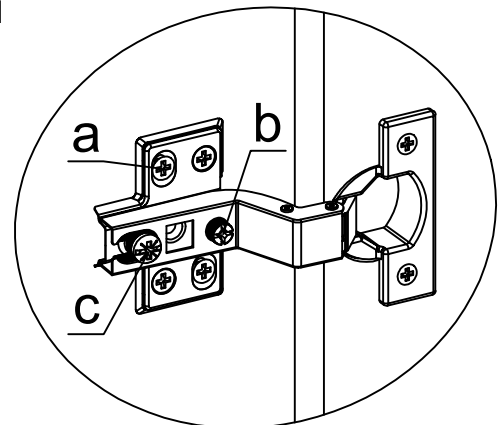


STEP 1

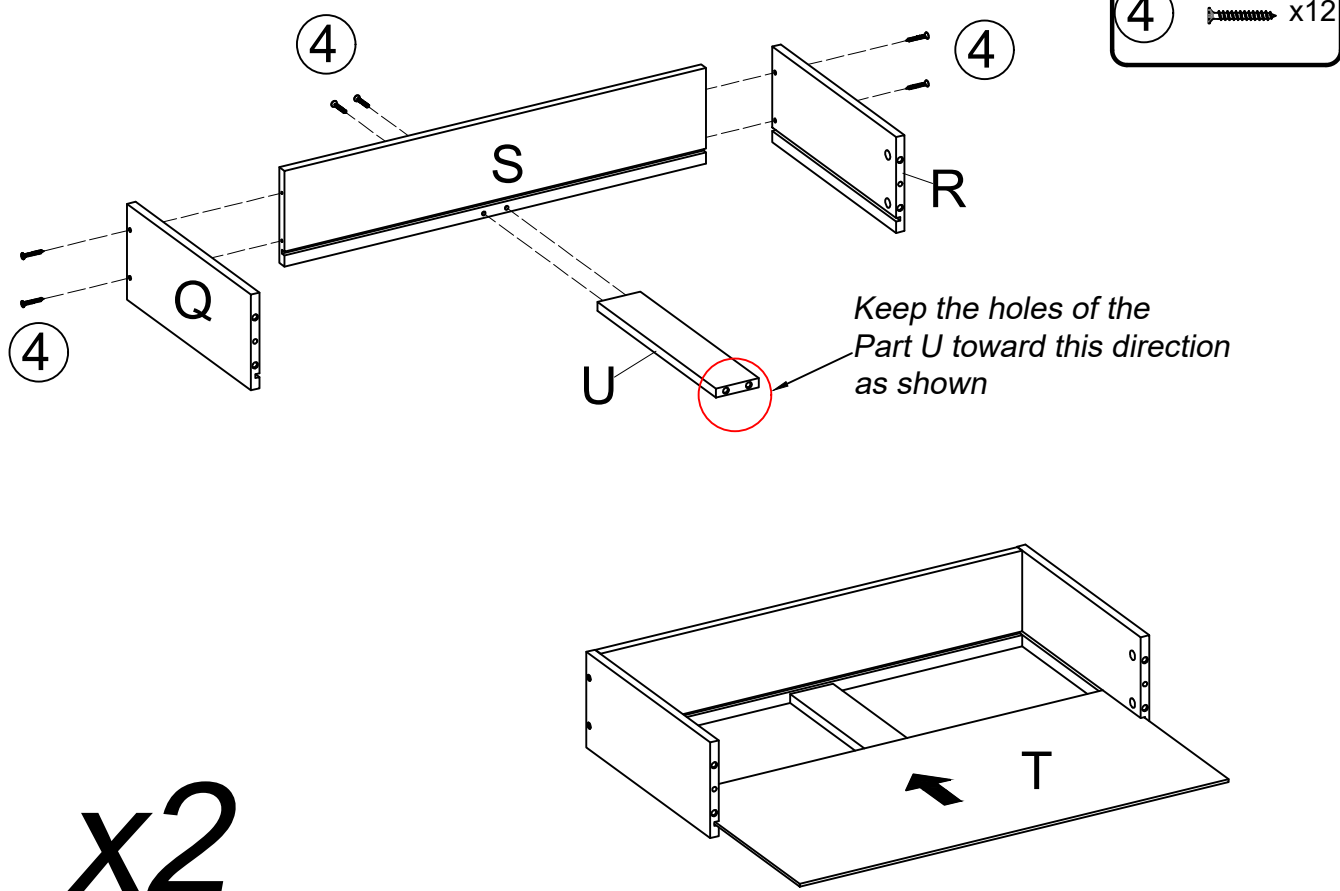


STEP 2

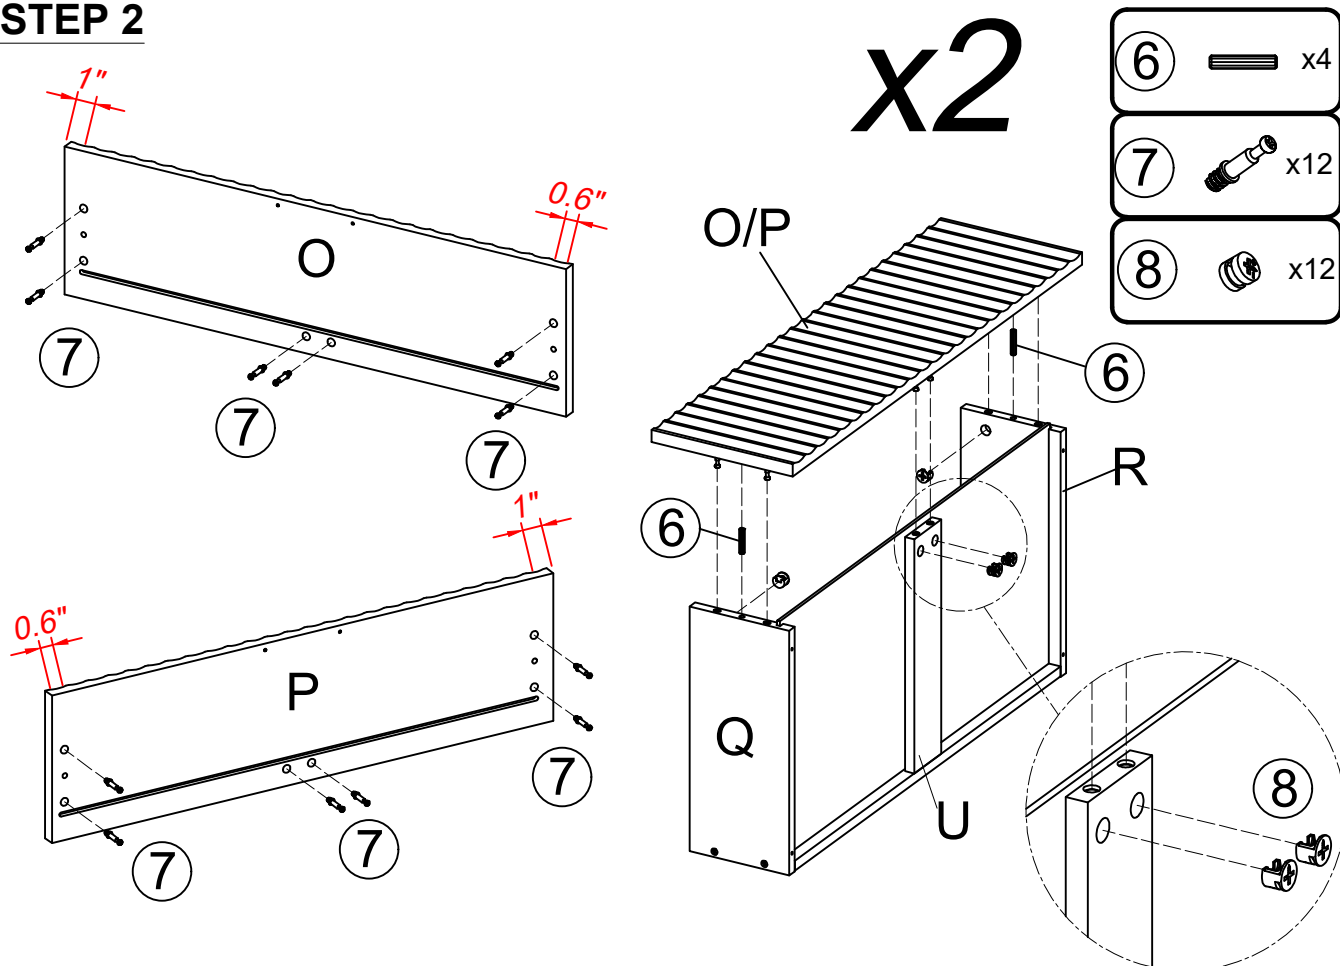

STEP 3

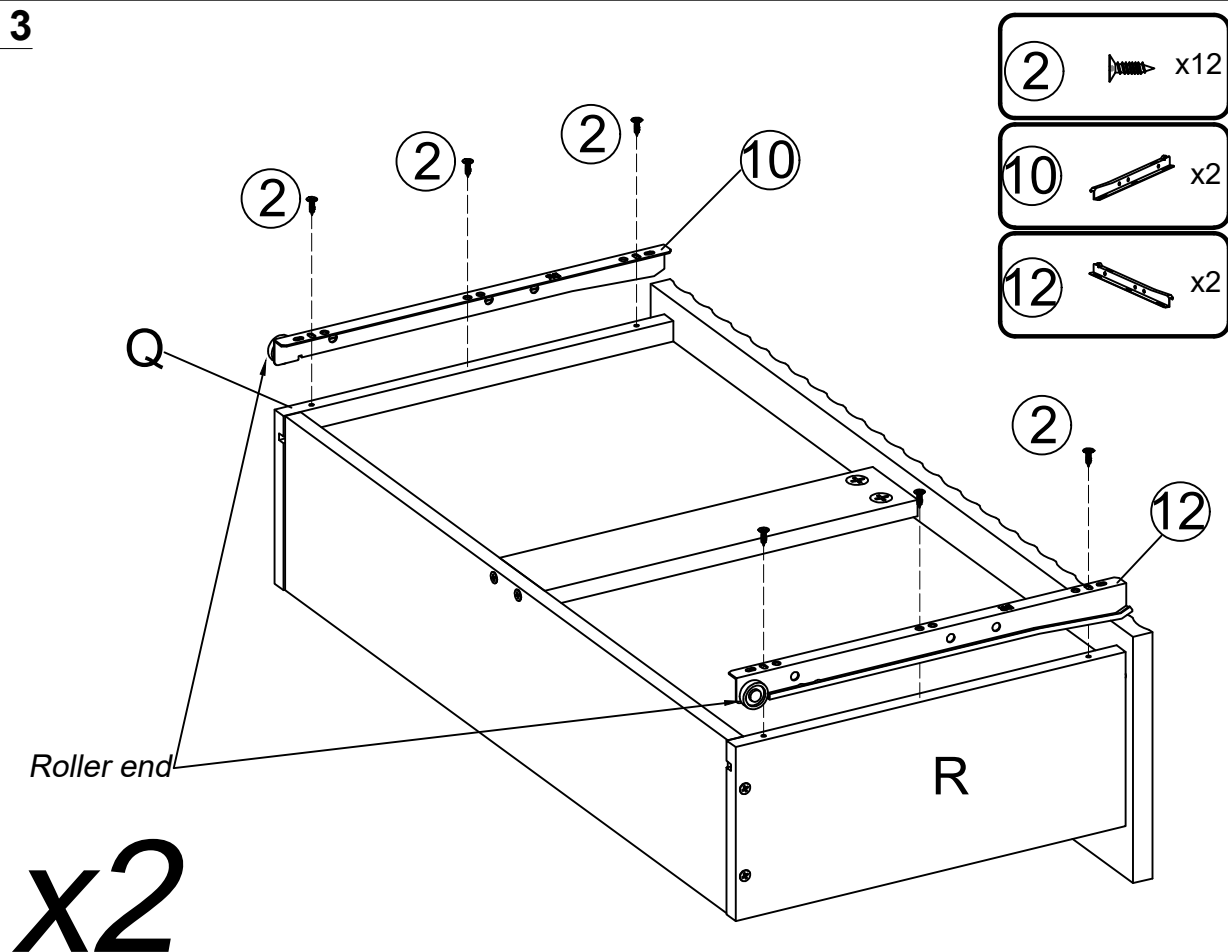


STEP 4

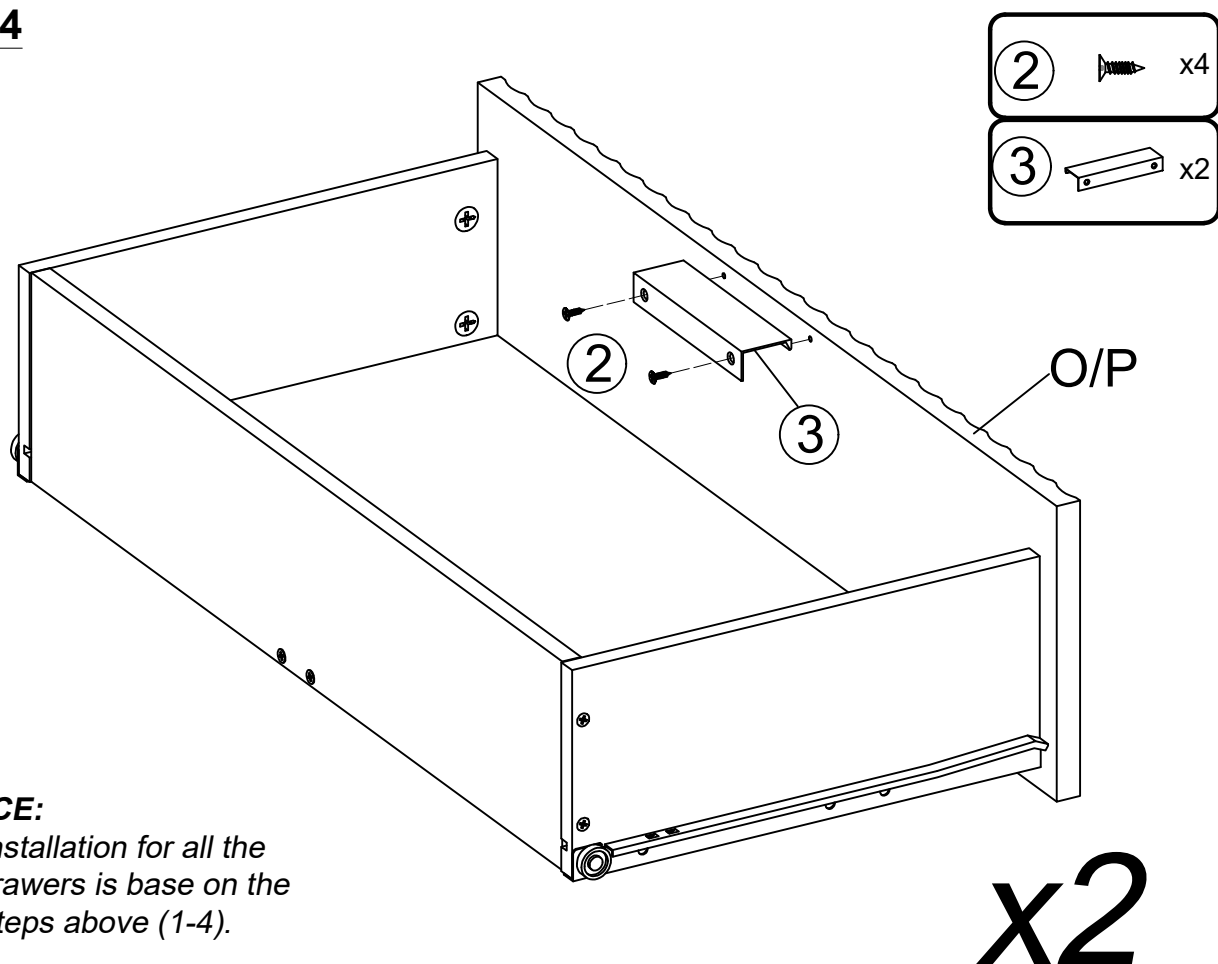

NOTICE:


The installation for all the two drawers is base on the four steps above (1-4).

STEP 5


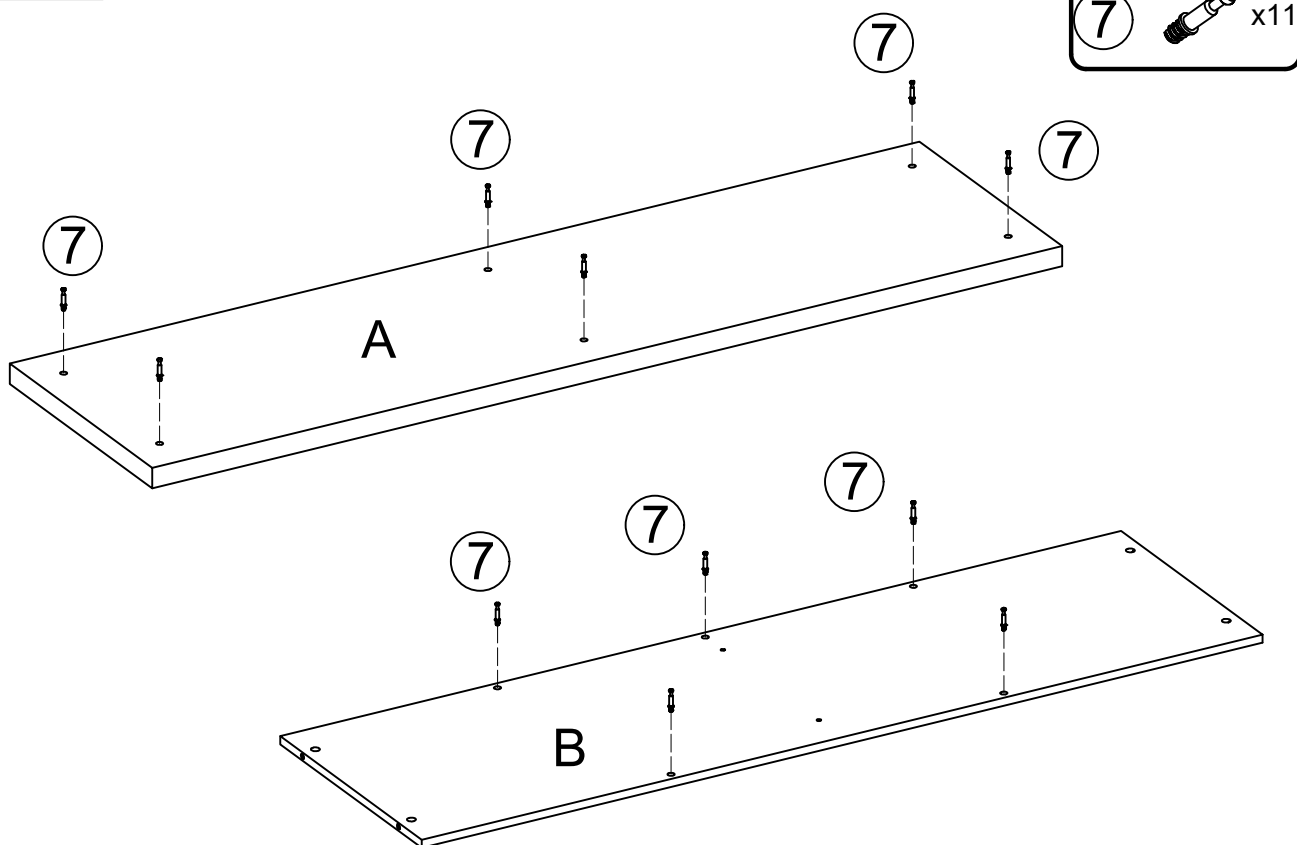


STEP 6

Keep the holes of the Part H and Part I toward this direction as shown


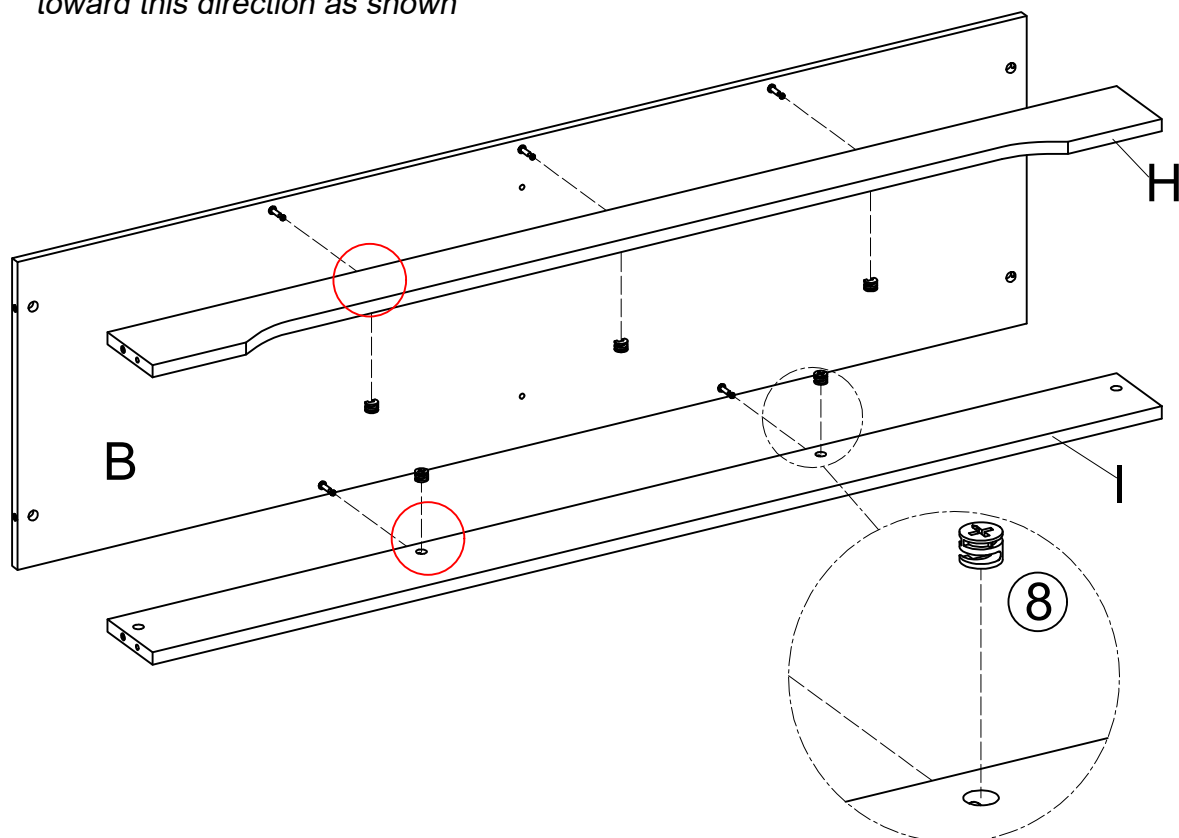


STEP 7





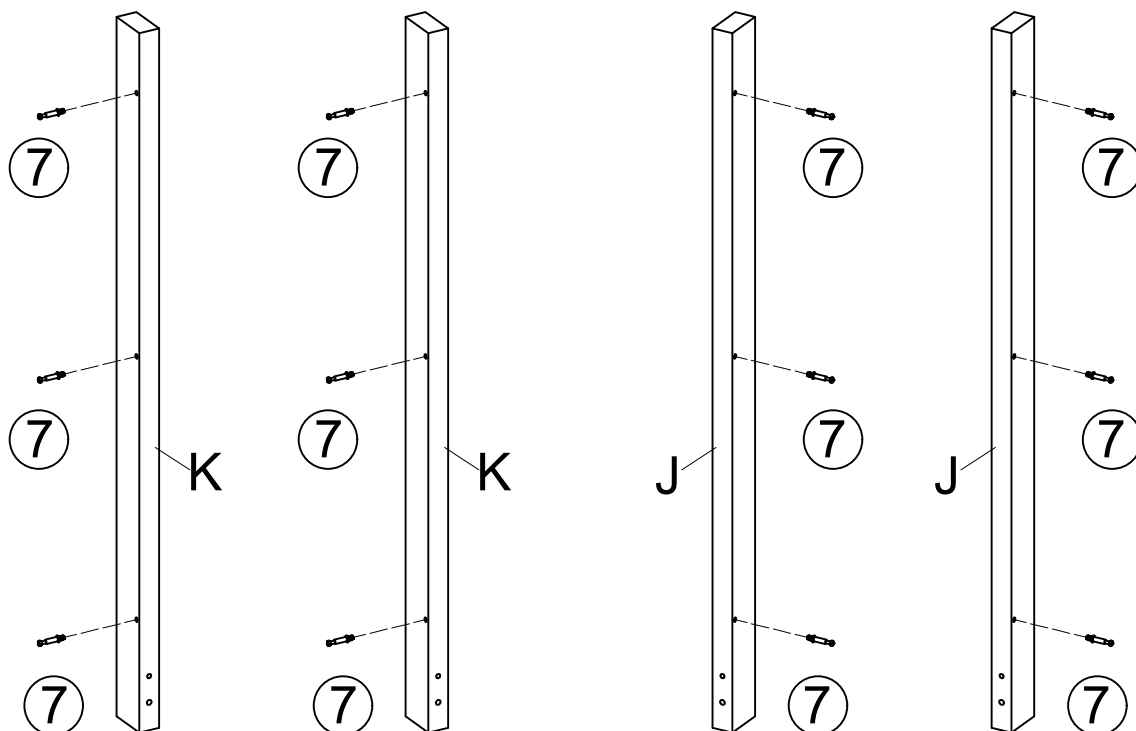



STEP 8



Keep the holes of the Part E/F/K/J toward this direction as shown

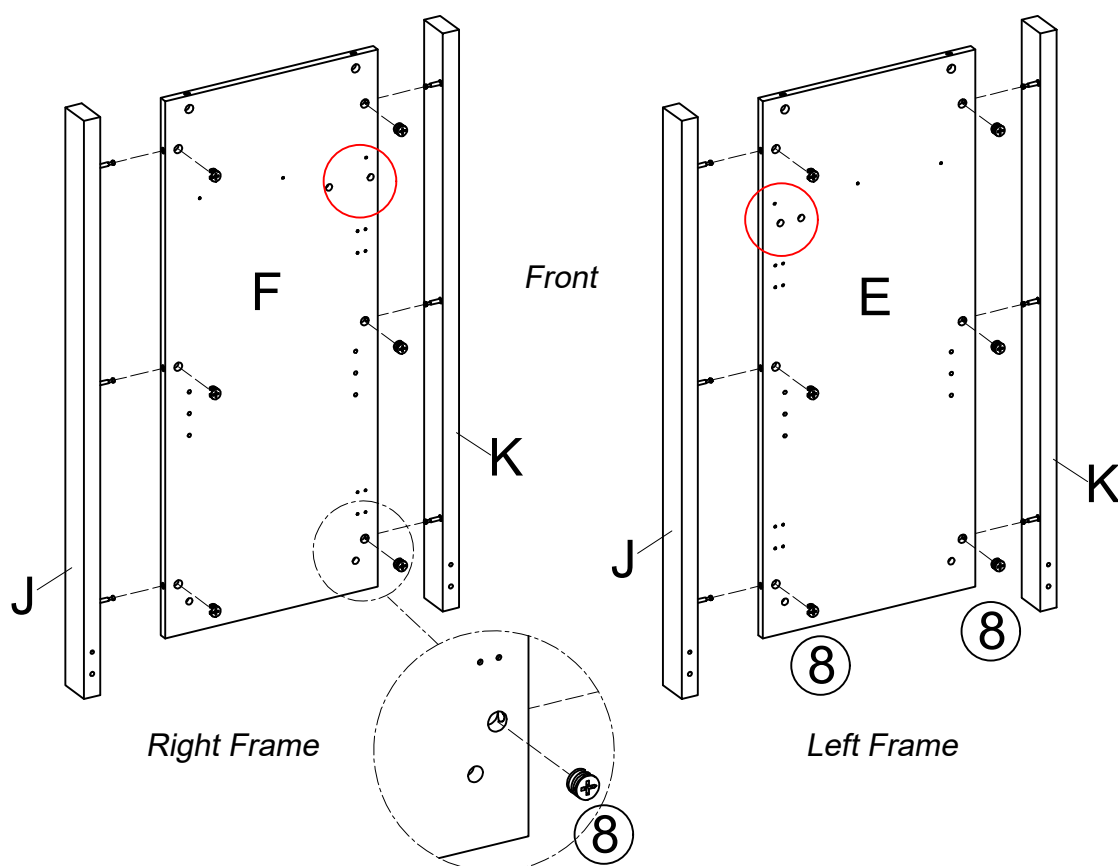





STEP 9

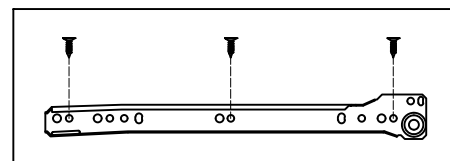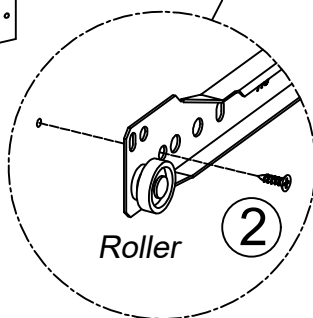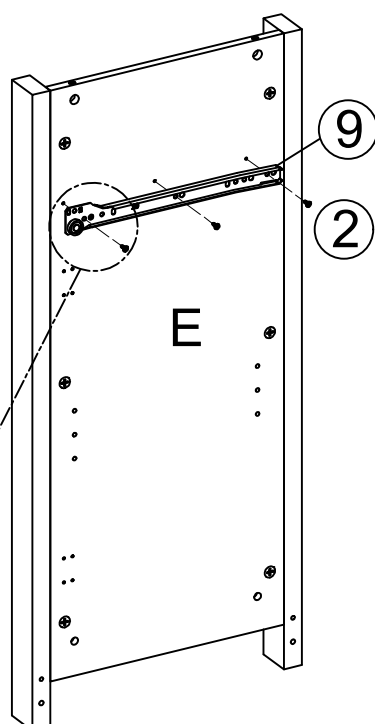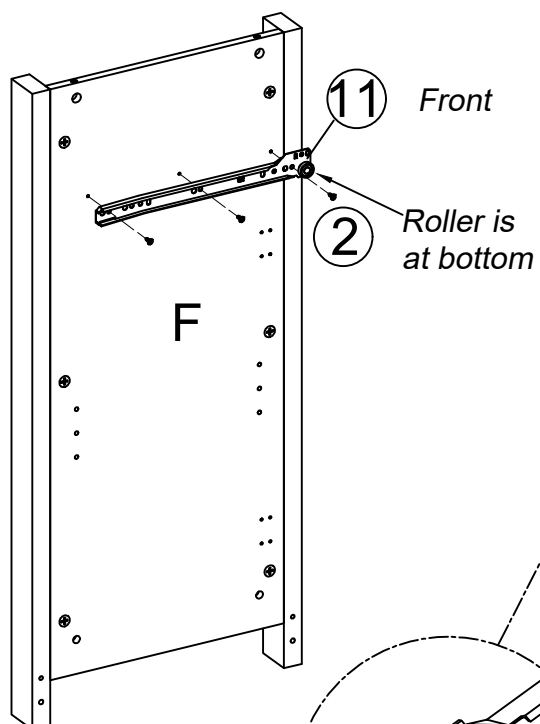




STEP 10

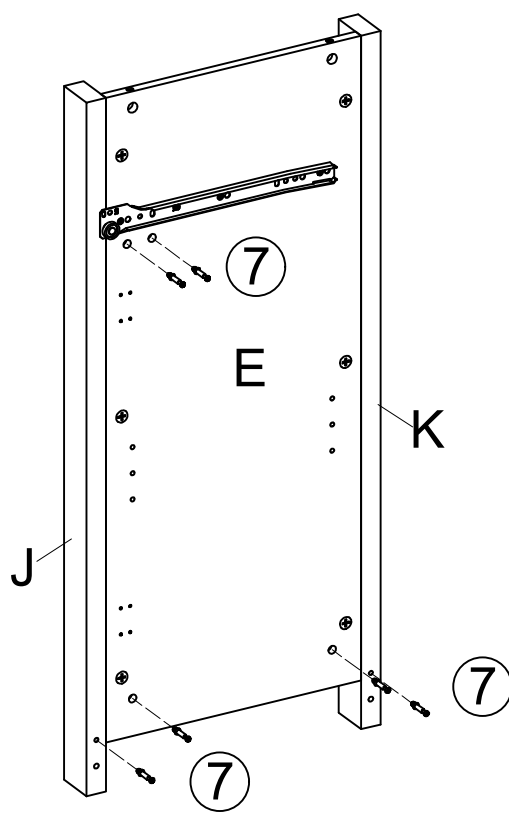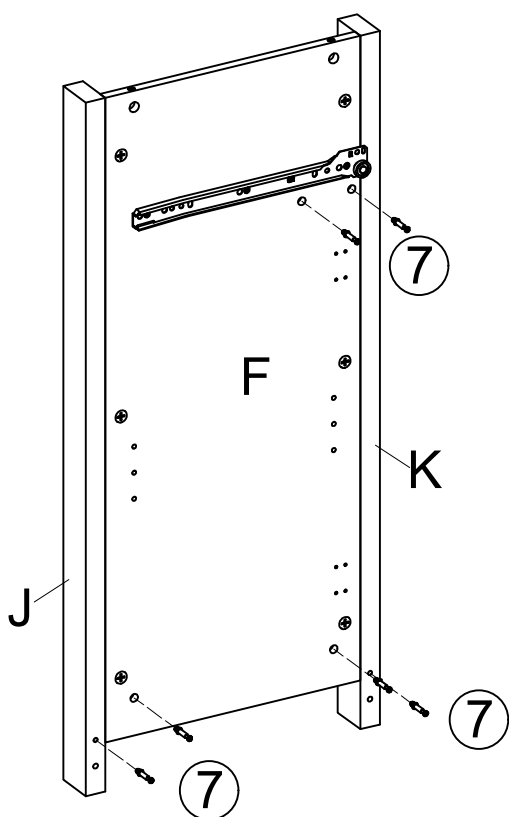


STEP 11

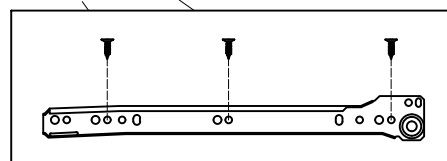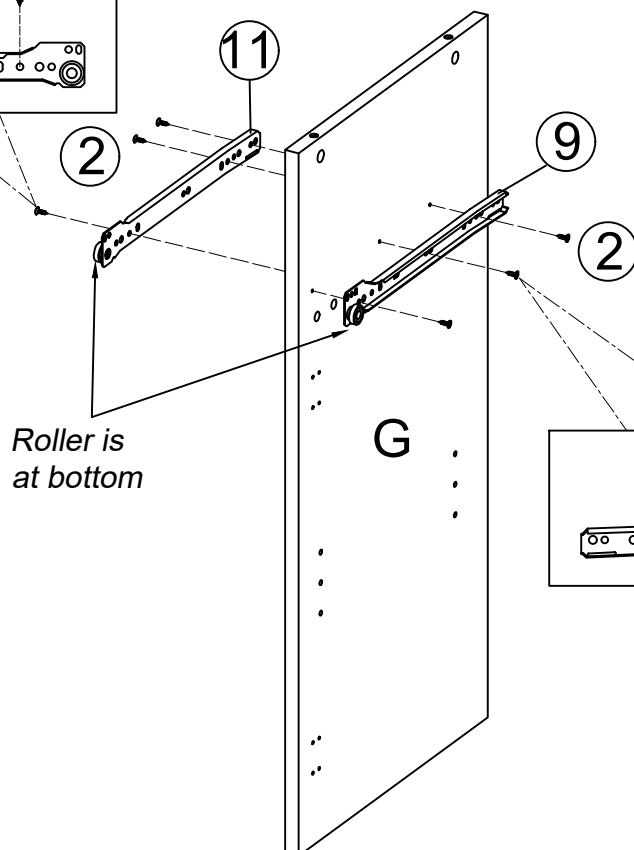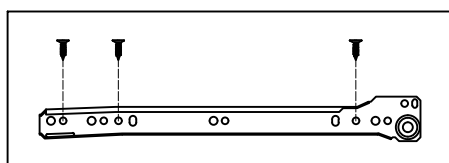


STEP 12

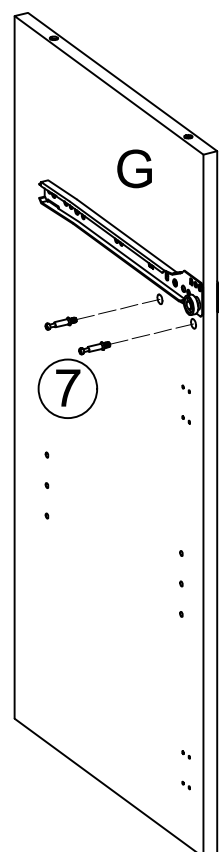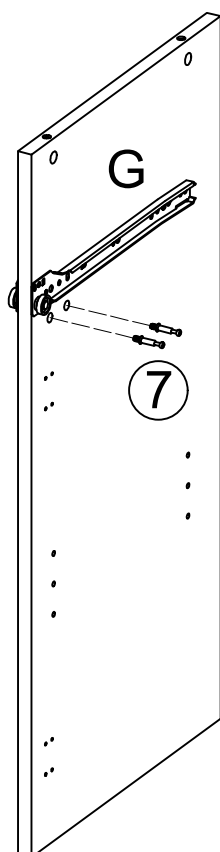



STEP 13




Keep the holes of the Part C
toward this direction as shown

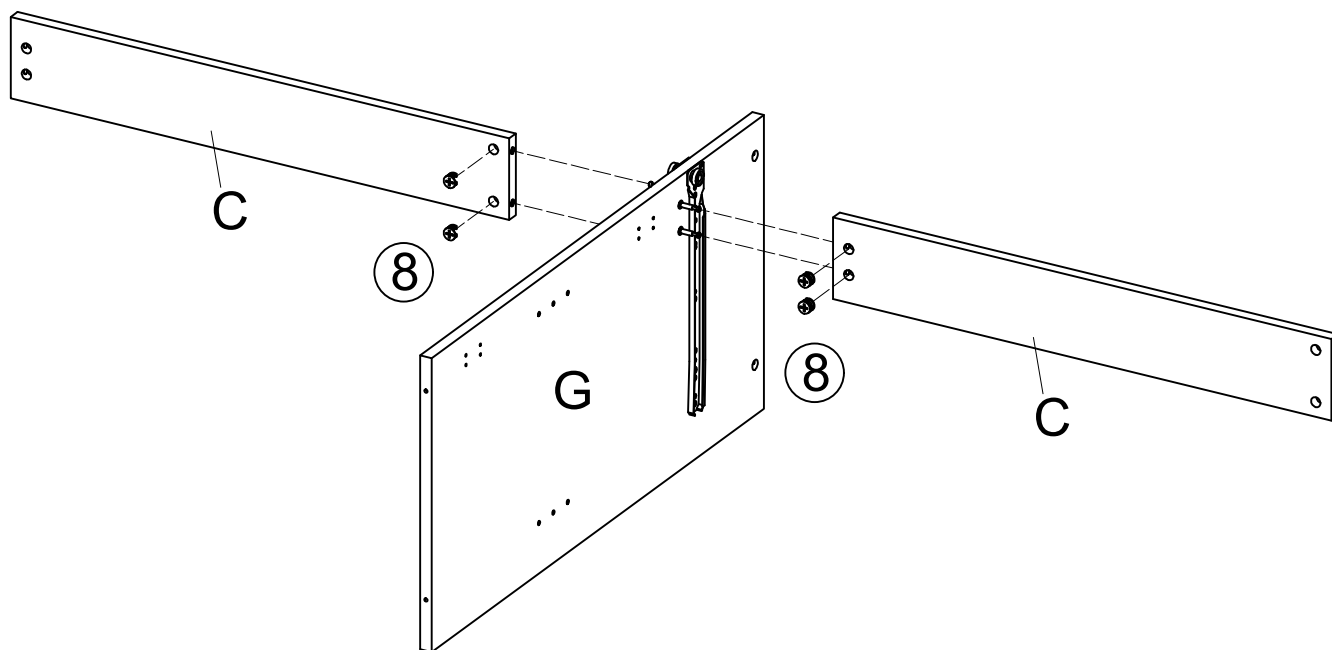


STEP 14

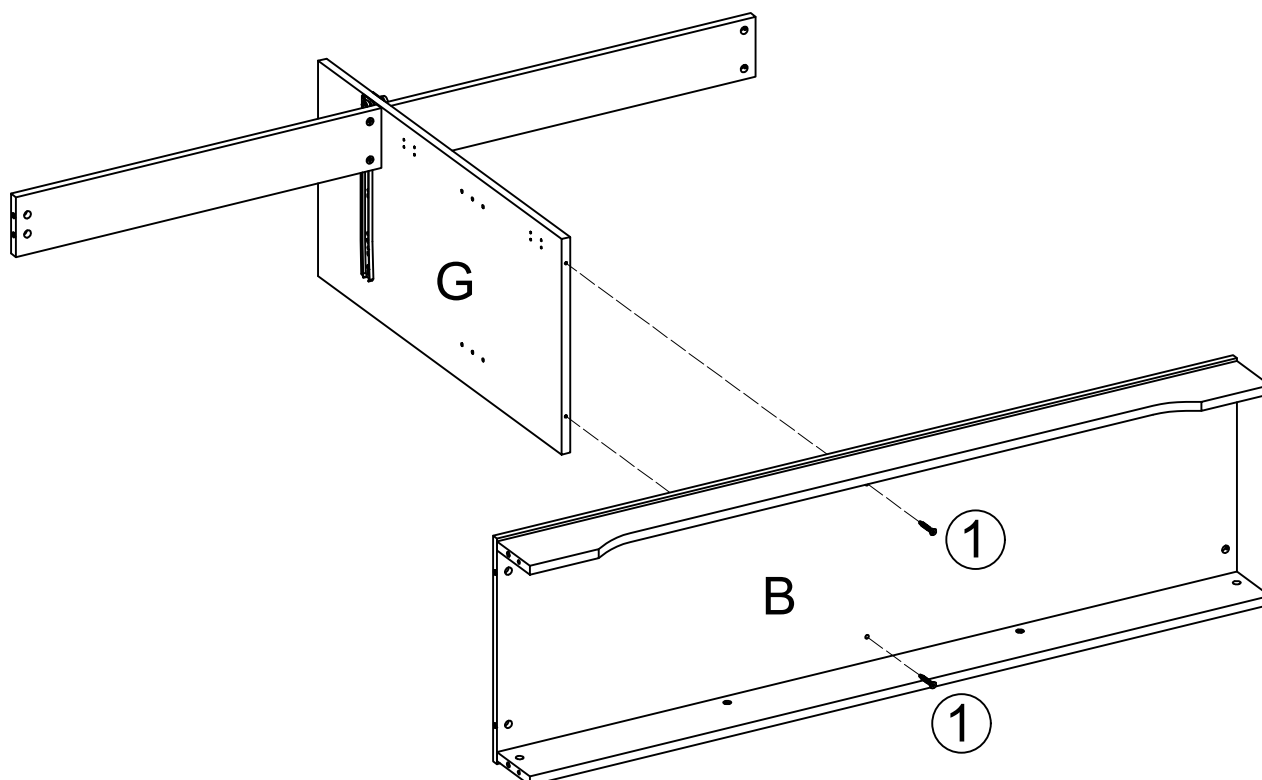

STEP 15

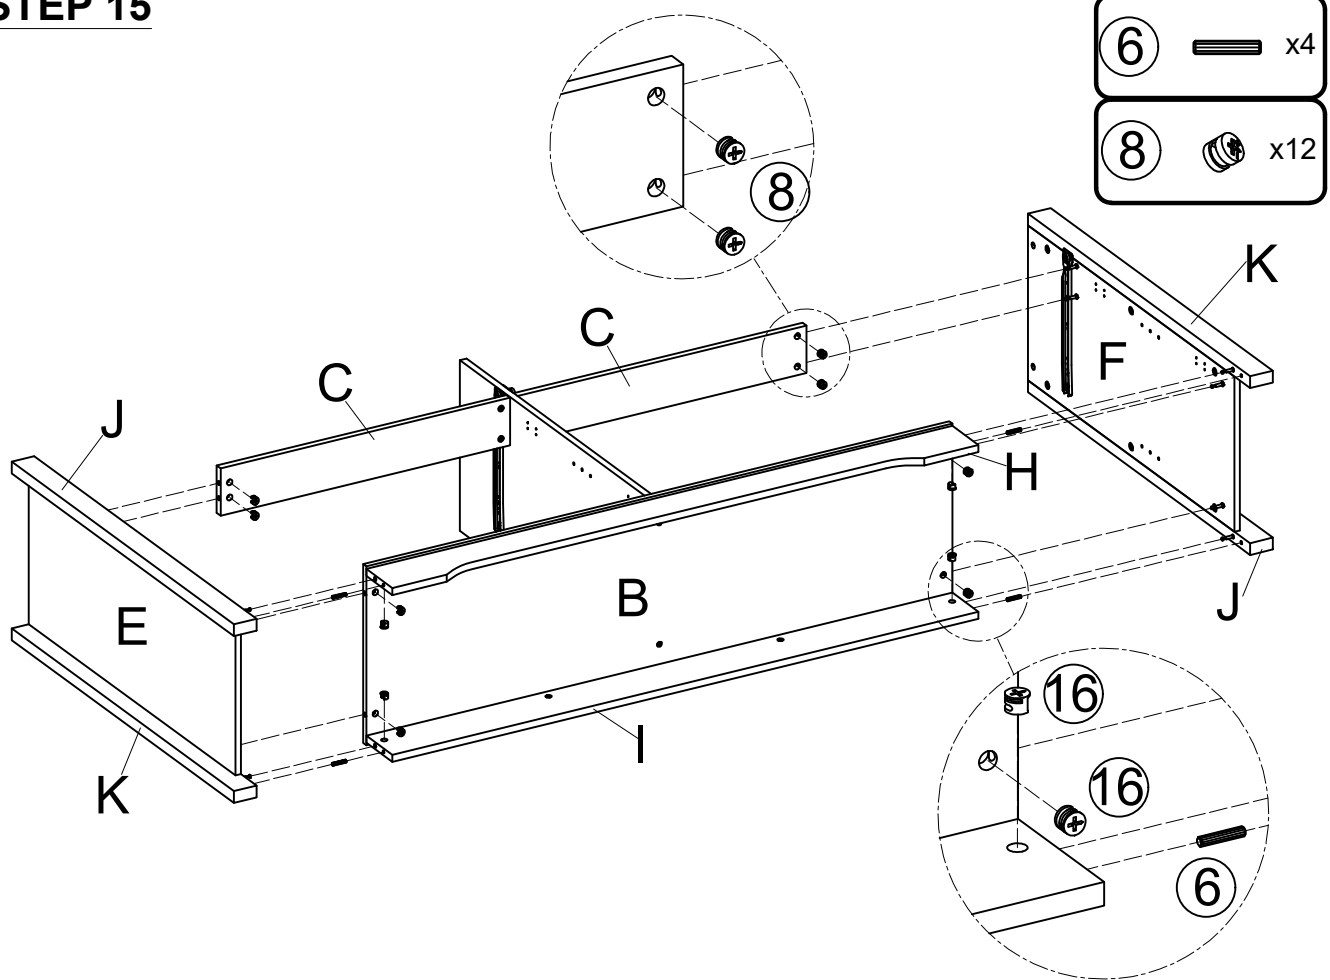


STEP 16

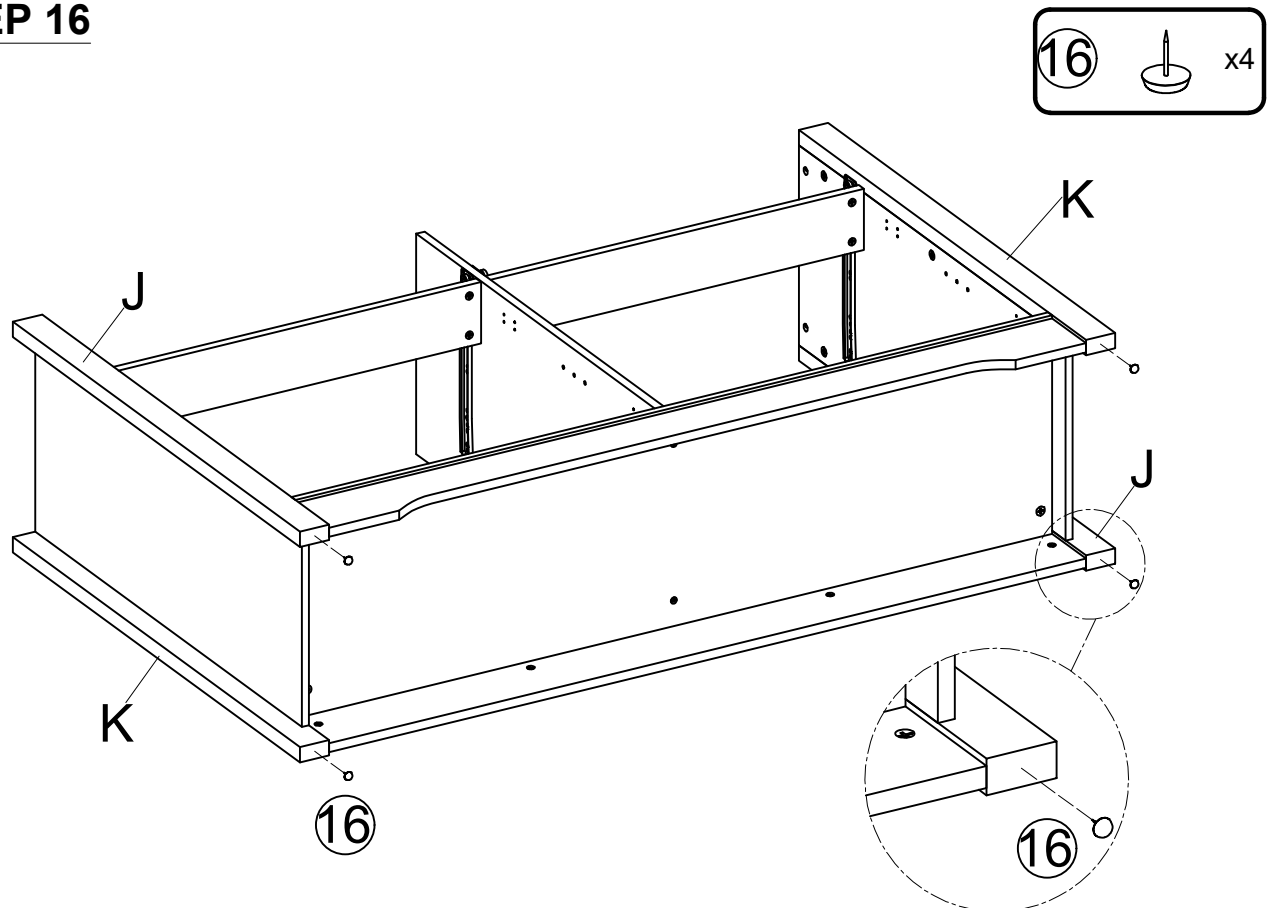

Gently tap the Floor Protectors (16) at the bottom of legs avoiding crack or damage of leg.


STEP 17

8  x6

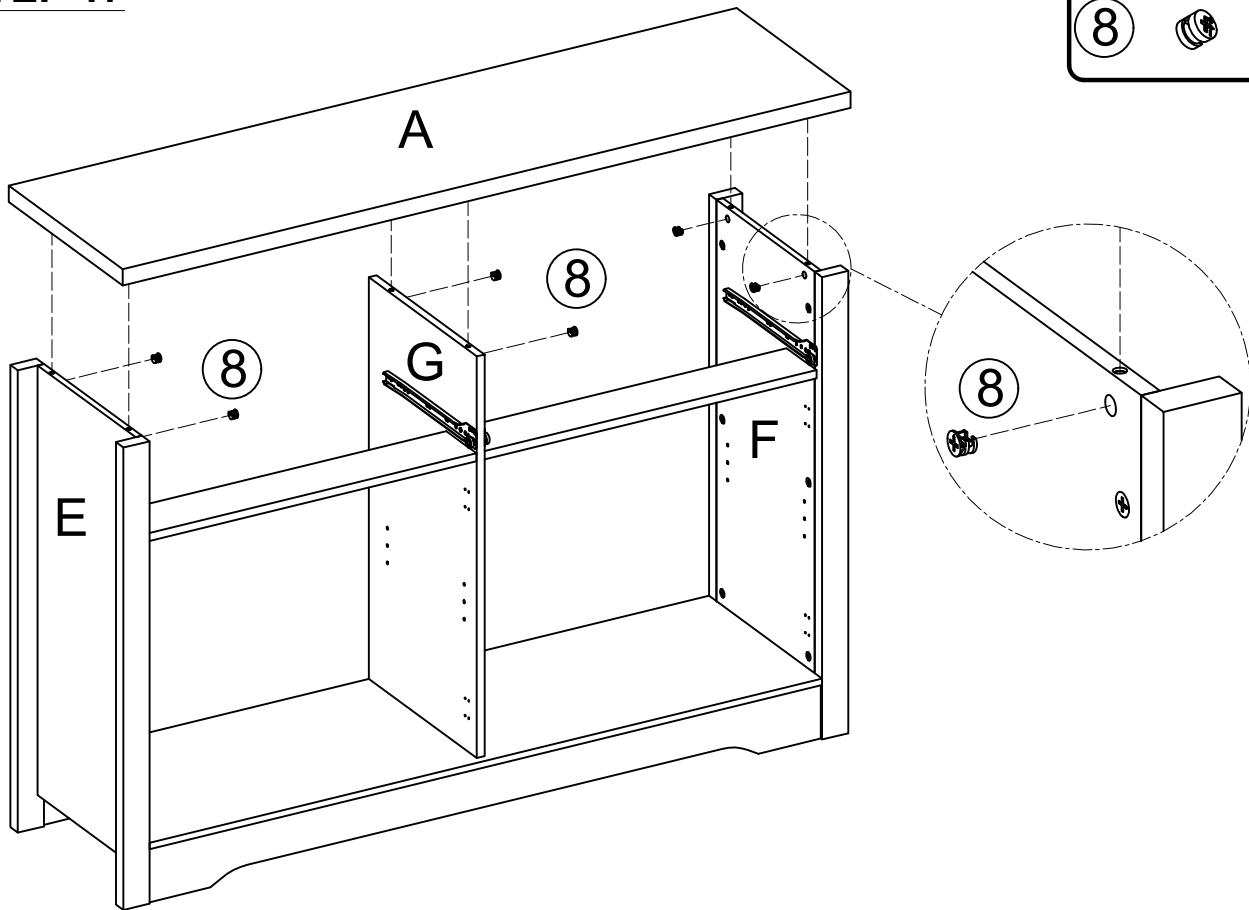


STEP 18

Please notice these two drawers divide left and right .

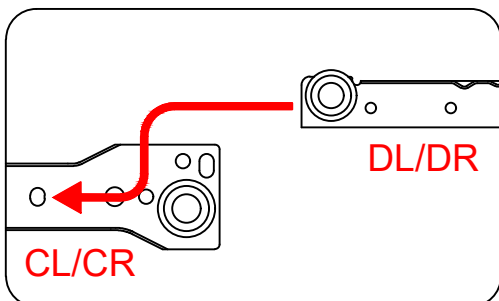


Please put the wheels align with the slots as the instruction shows, then slide into them

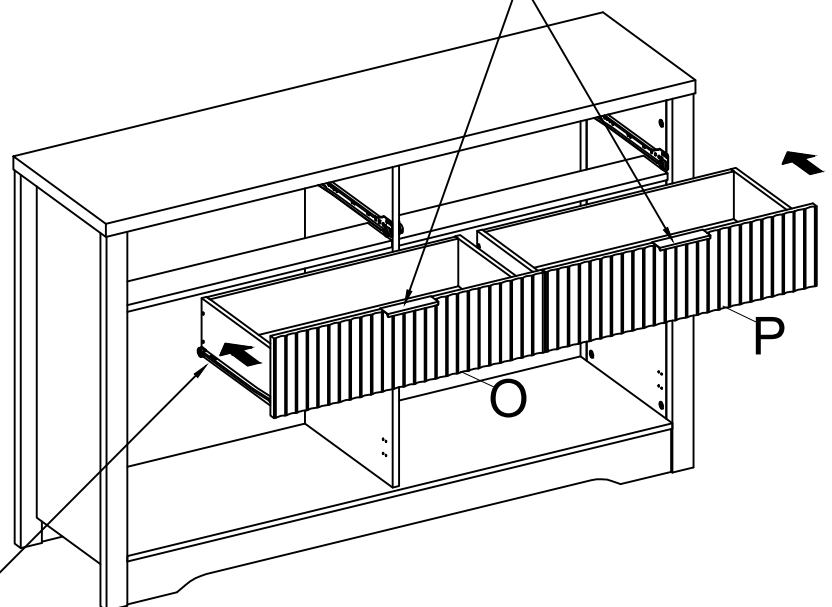


STEP 19

15  x8

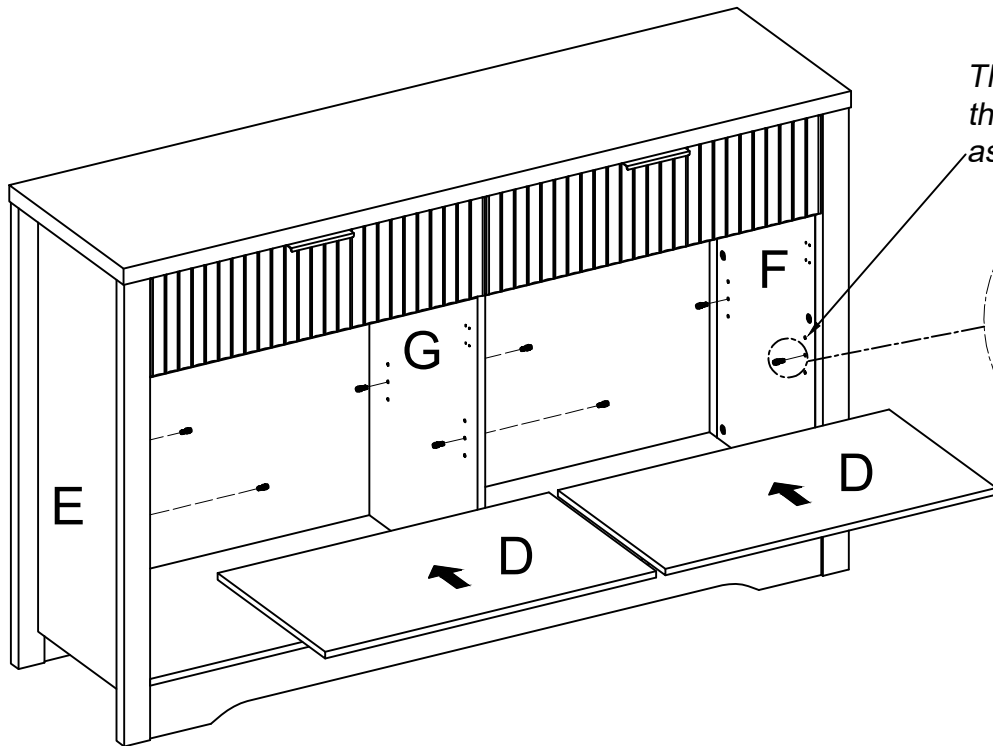


There are 3 heights for the shelf to be adjusted as you need.

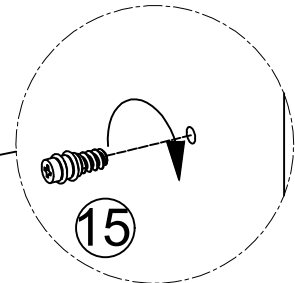

STEP 20

2  x8
3  x4

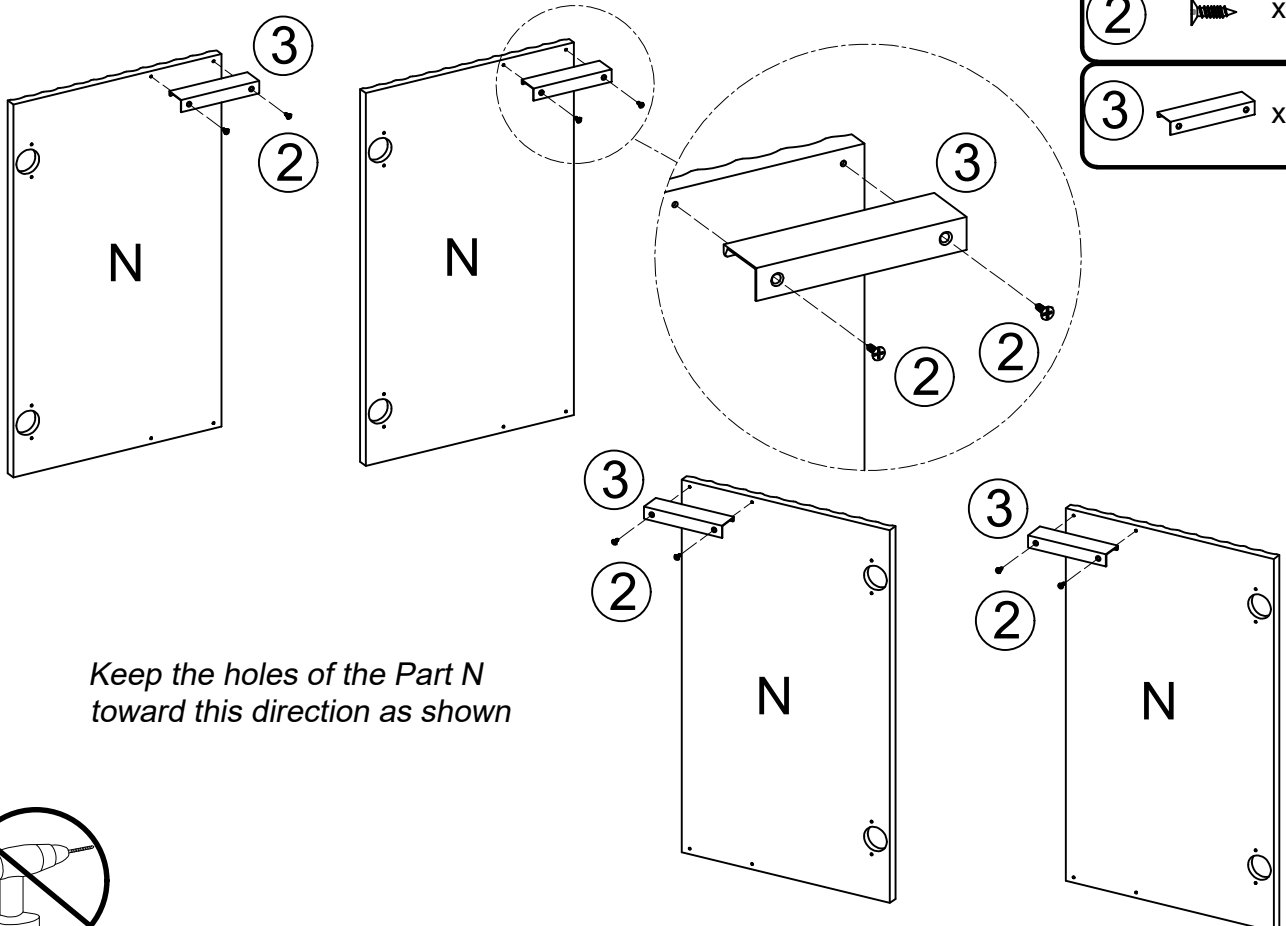


Keep the holes of the Part N toward this direction as shown




STEP 21


Please ensure that using the correct hinges for door assembly. Using the wrong hinge will cause a cracked panel.

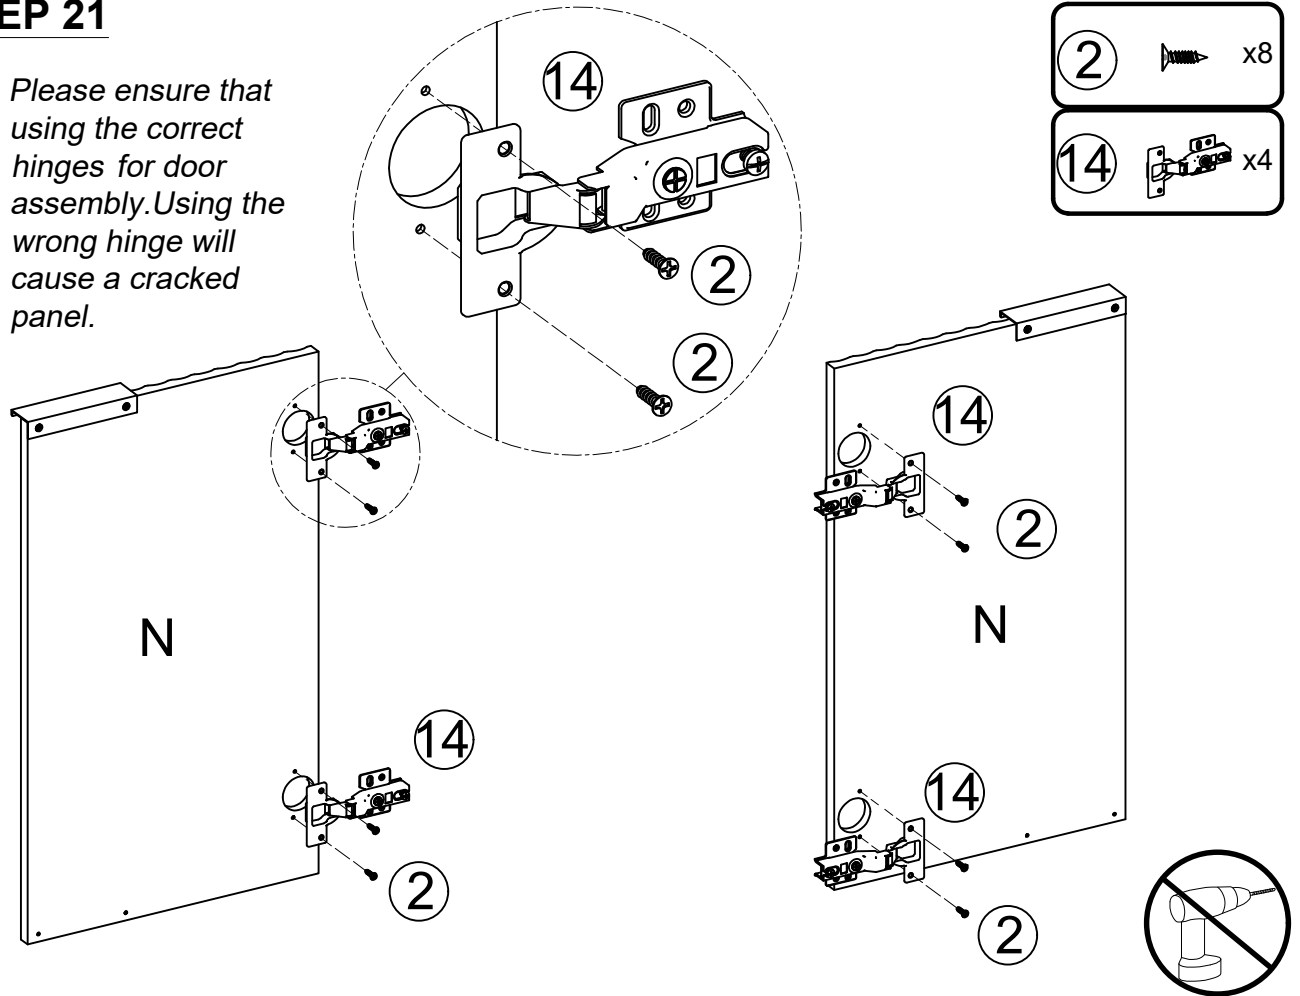

STEP 22

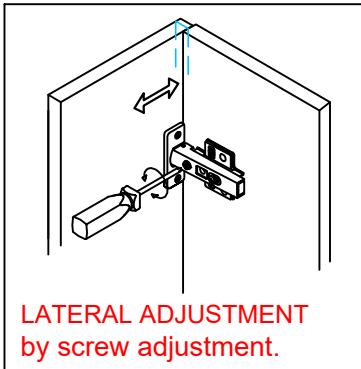


NOTE: In order to avoid conflict between the two doors, before installing the second door, please adjust the first door laterally by hinge screw so that it is far enough away from the center, and then adjust it to the approximate position after installing the second door.

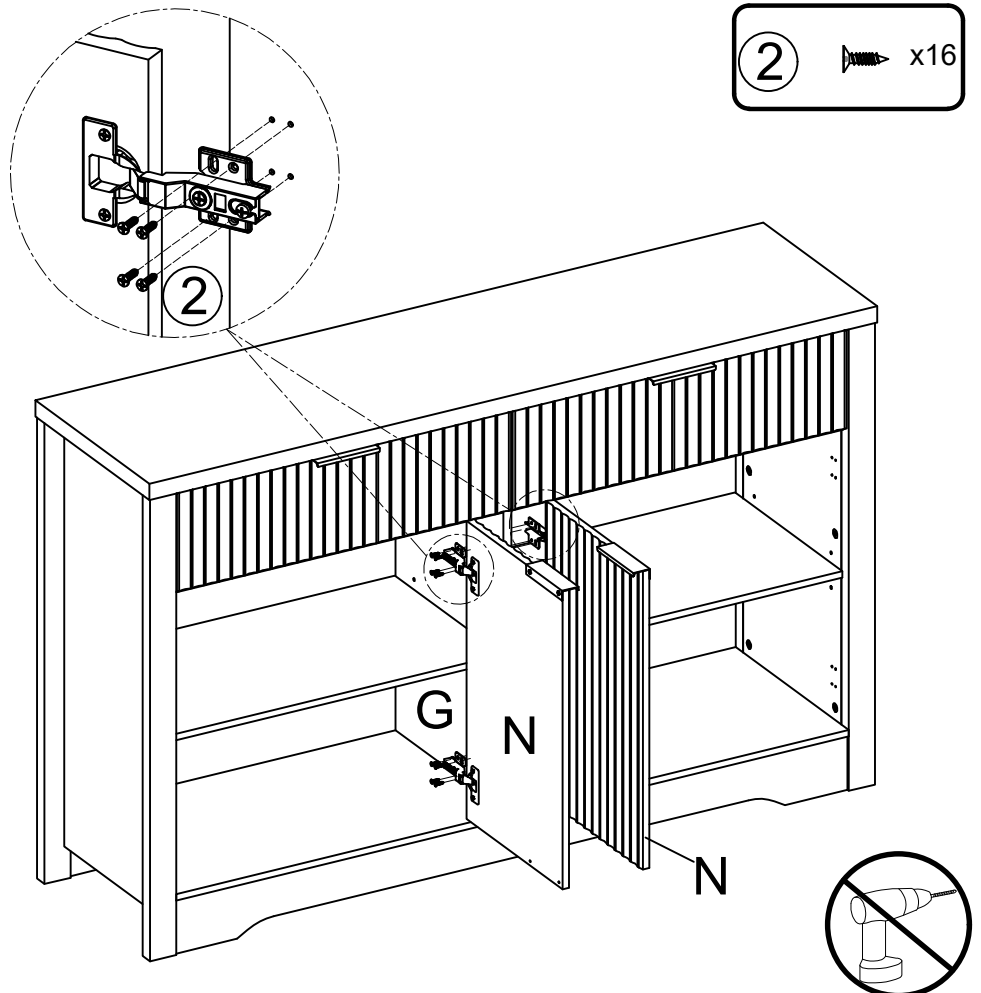

STEP 23


Please ensure that using the correct hinges for door assembly. Using the wrong hinge will cause a cracked panel.

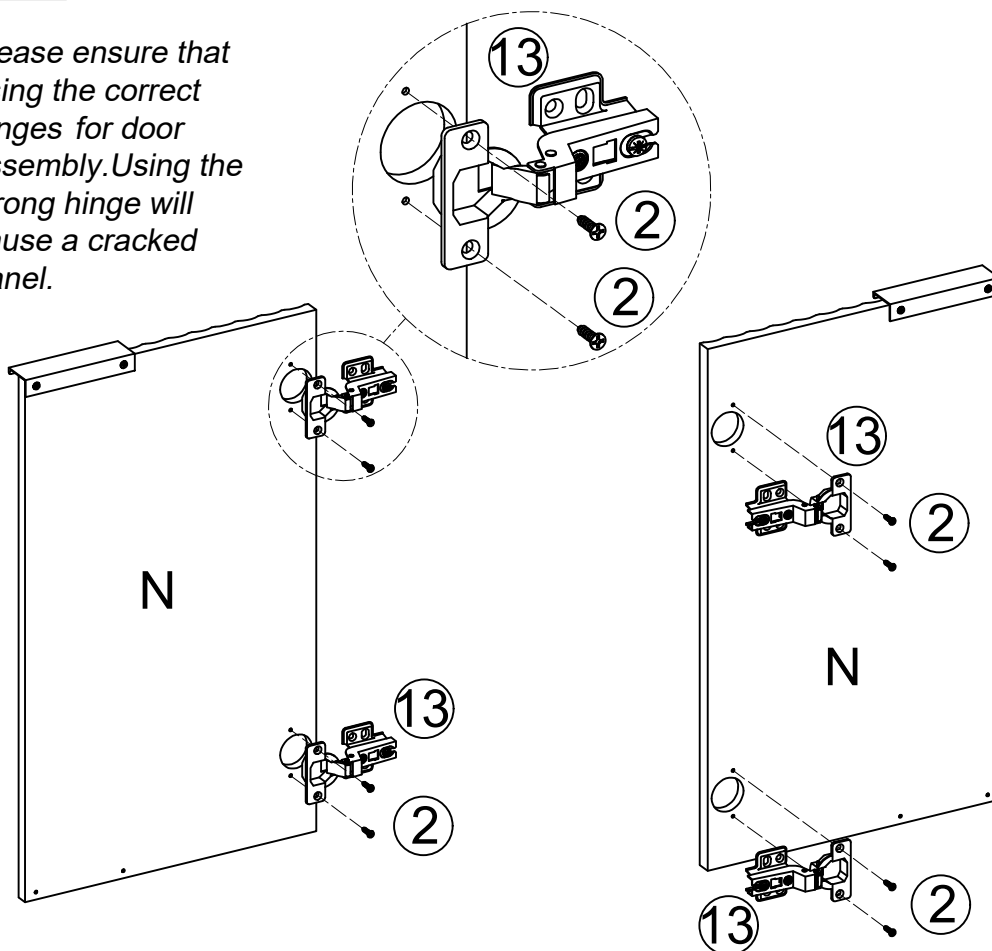


(2)  x8

(13)  x4

STEP 24


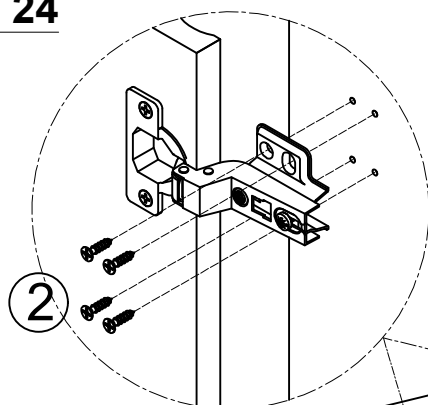


(2)  x16

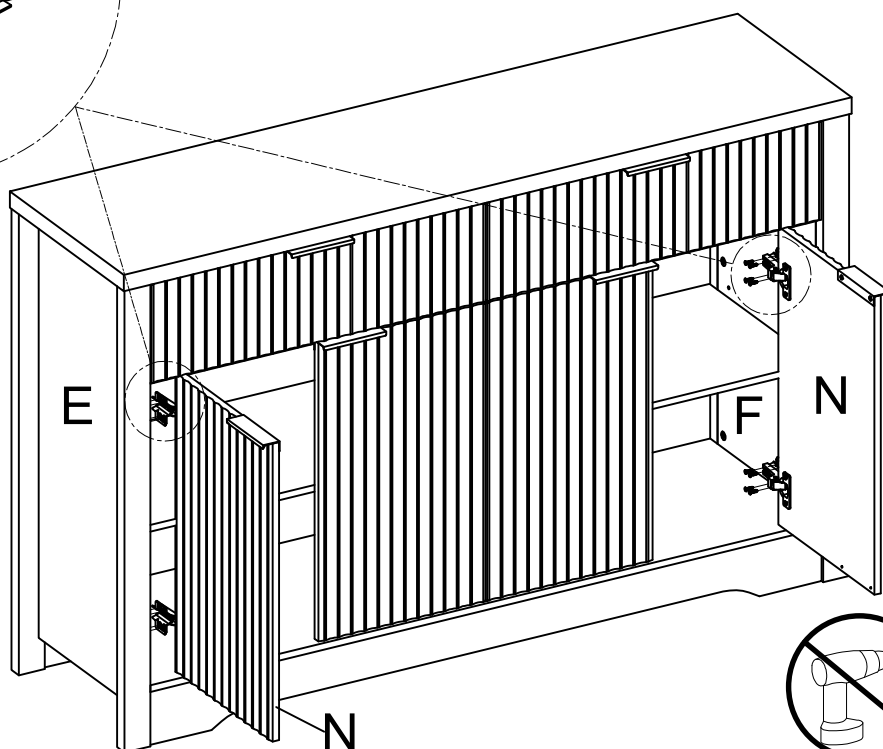


STEP 25

There are no reserved holes for on top panel and back legs, please use tools to screw directly.

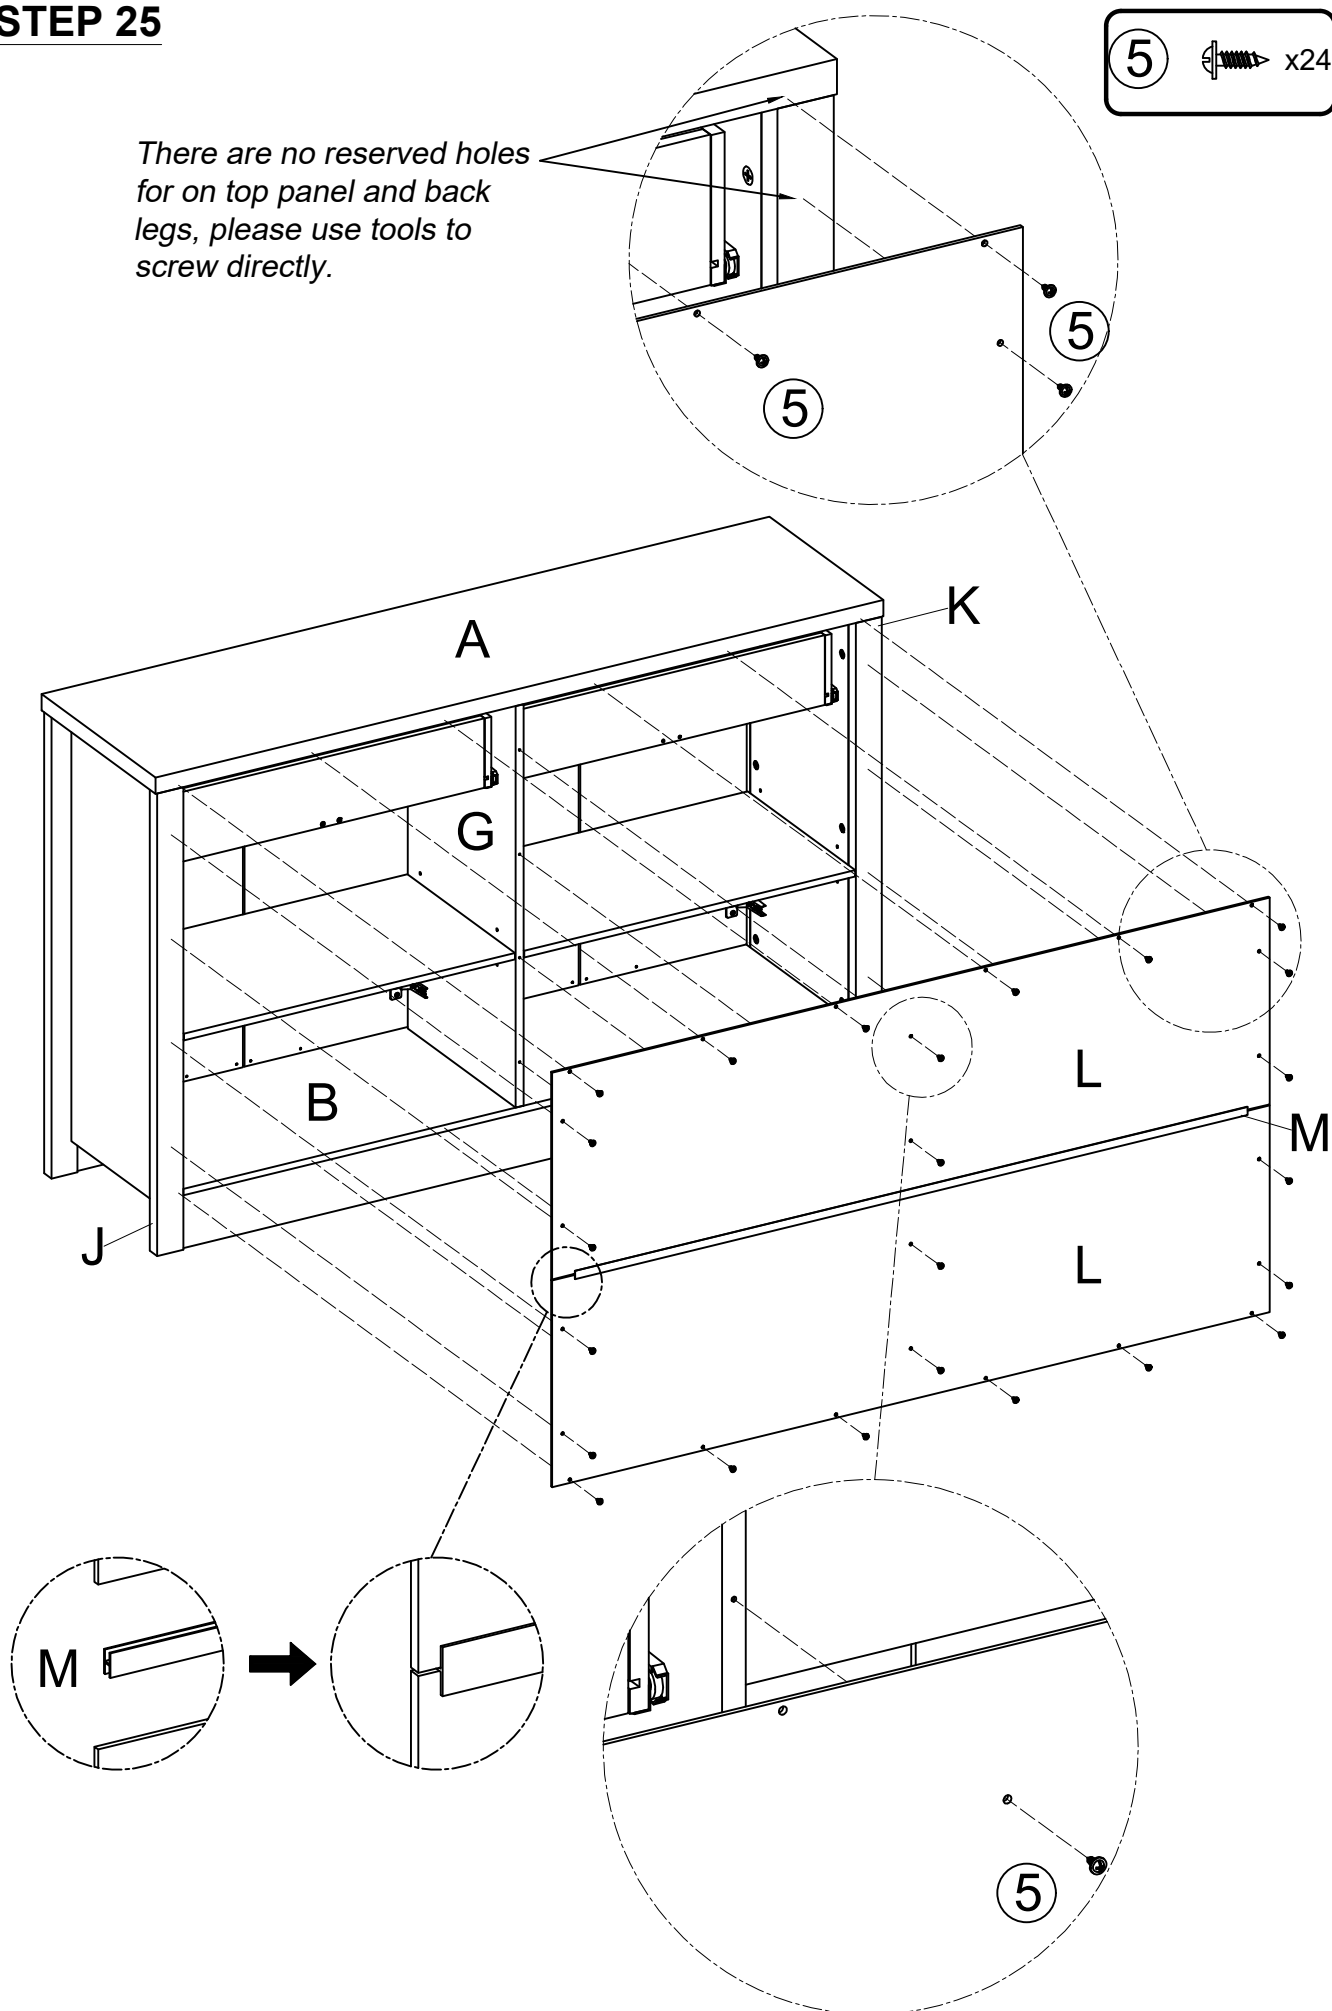

STEP 26

TIPPING RESTRAINT HARDWARE



Note: We have included two Tipping Restraint Hardware set for this Unit. When properly installed, this restraint can provide protection against the unexpected tipping of the Unit due to small tremors, bumps or climbing. We strongly recommend mounting this hardware to a wall stud and your Unit.

Note: You must install the Tipping Restraint Hardware with the unit in use to prevent any accidents or damage to the unit.

