



BED FRAME

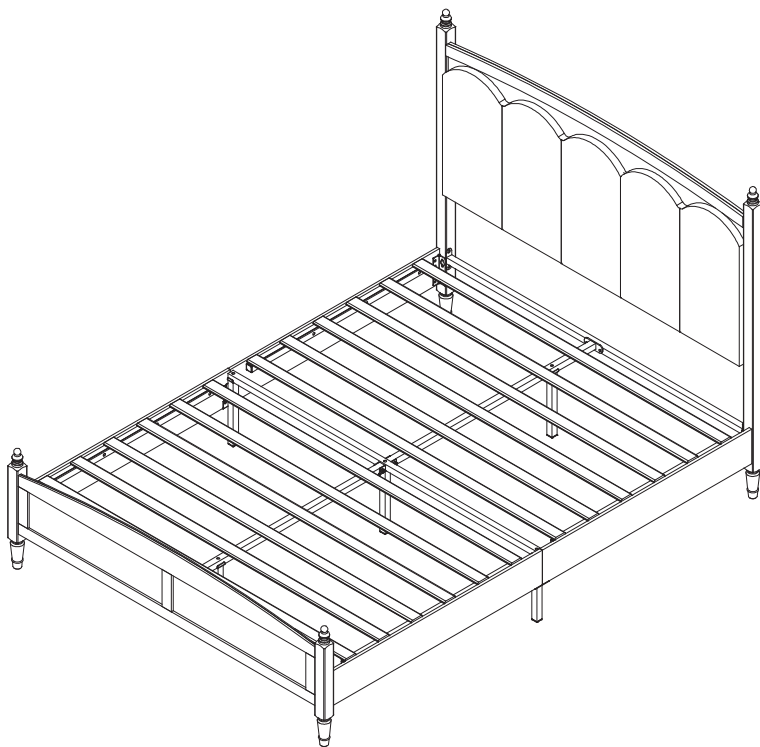

Thank you for choosing our products, please assemble and use it following the instructions.

Assembly Instruction




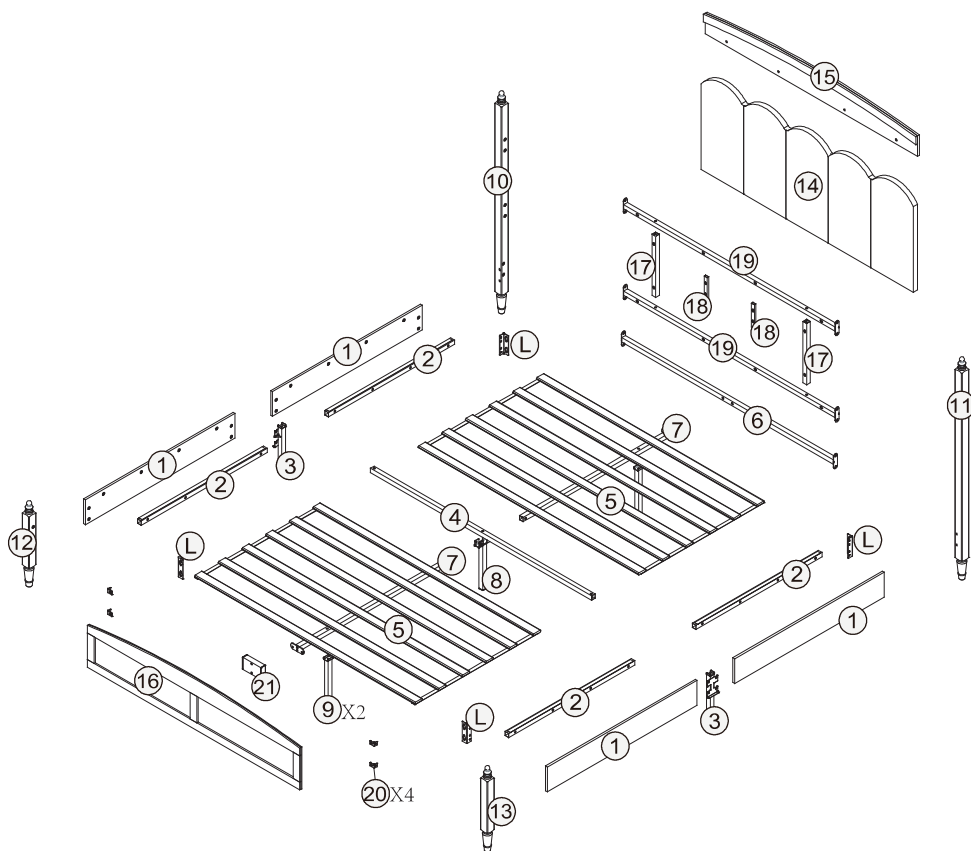


Important Note


HARDWARE NOTE :

1. Two or more people are required for assembly
2. Do not screw on the bolts too tight unless the installation is done. Make sure all bolts are tightly screwed before you use it.

Components

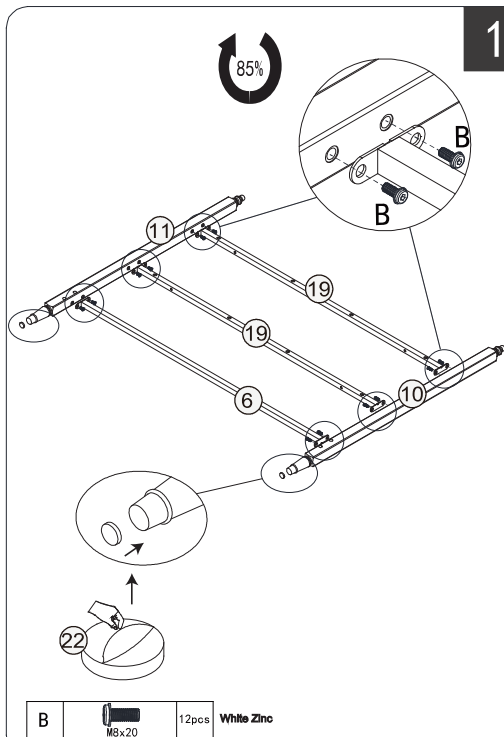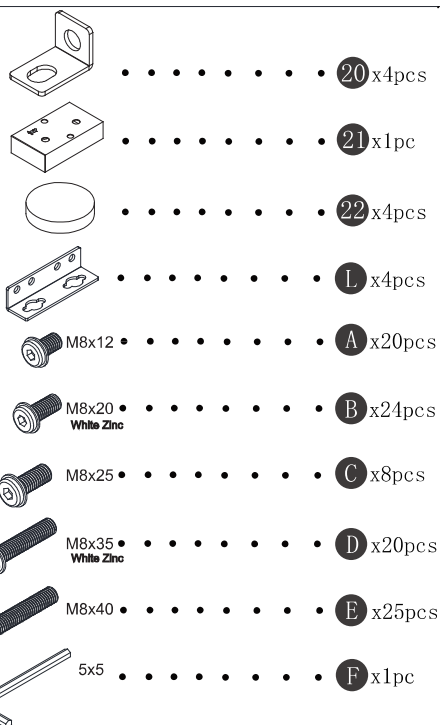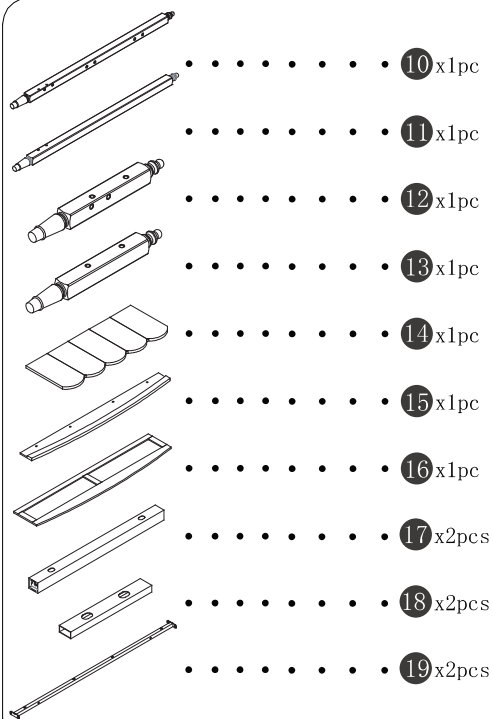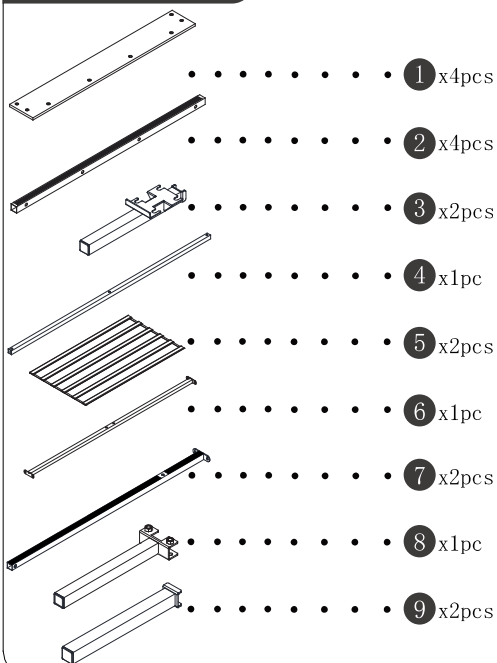


2

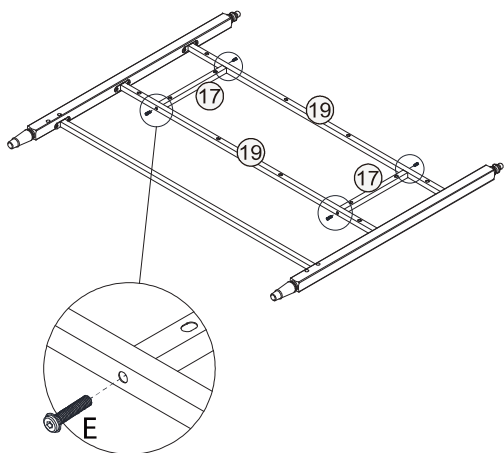


E		4pcs
M8x40		

3

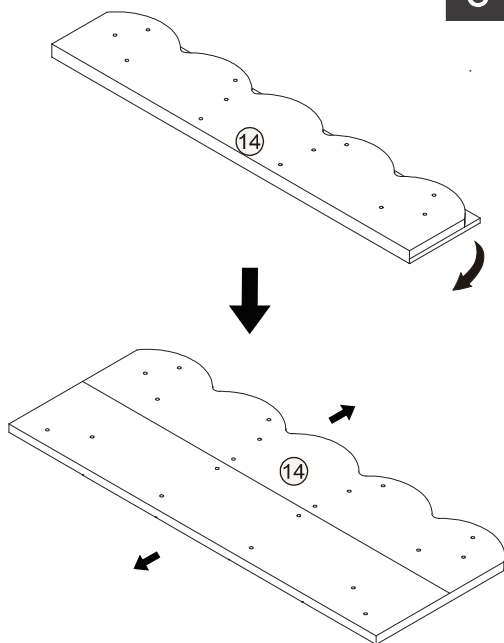


4

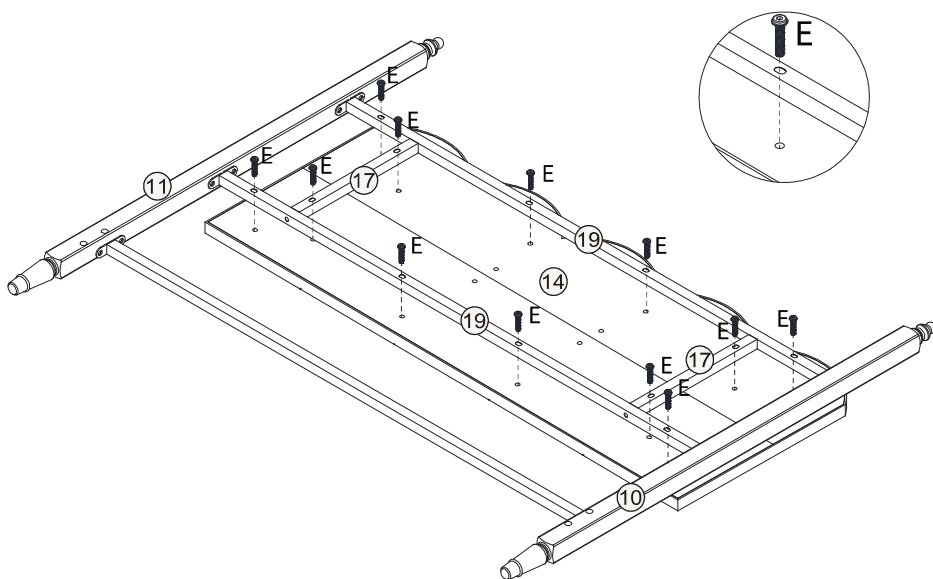


E		12pcs
M8x40		

5

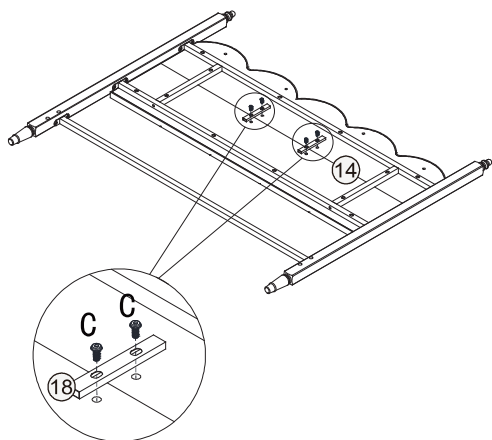

C	 M6x25	4pcs
---	---	------


6

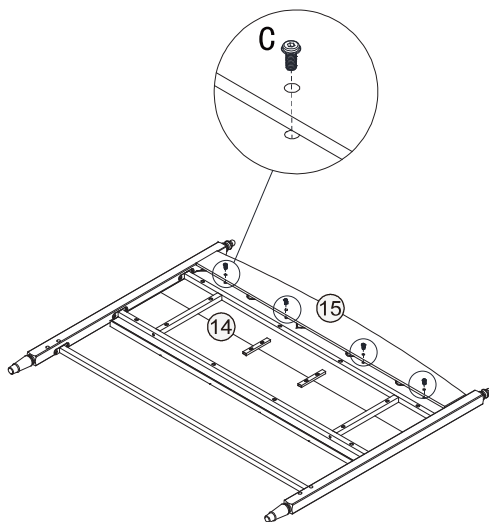

C	 M6x25	4pcs
---	---	------

7


x2

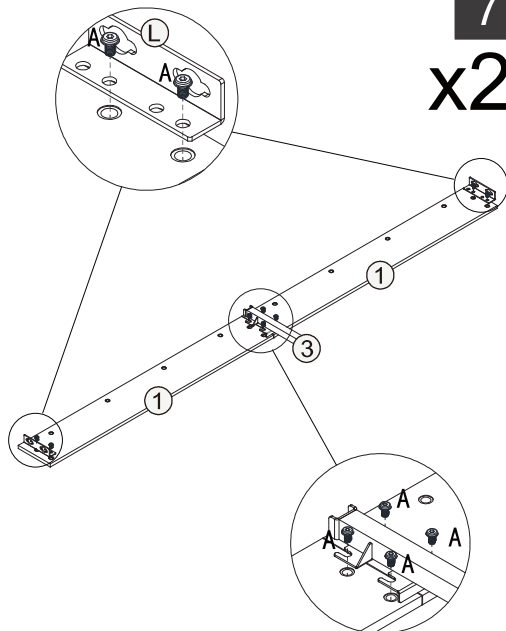

A	 M6x12	16pcs
---	---	-------


8

x2

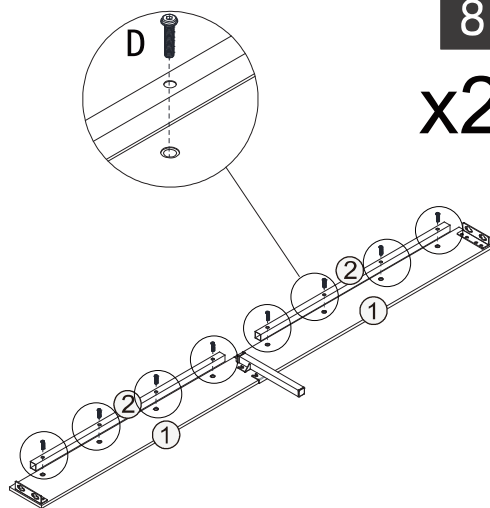


D	 M8x35	16pcs	White Zinc
---	---	-------	------------


9

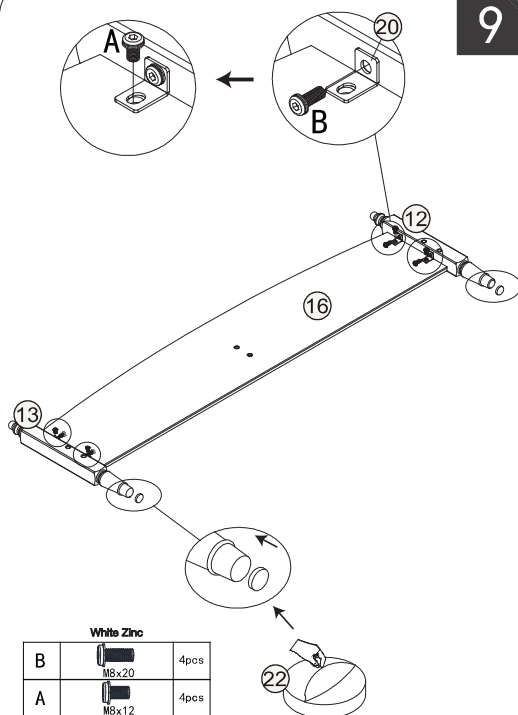


10

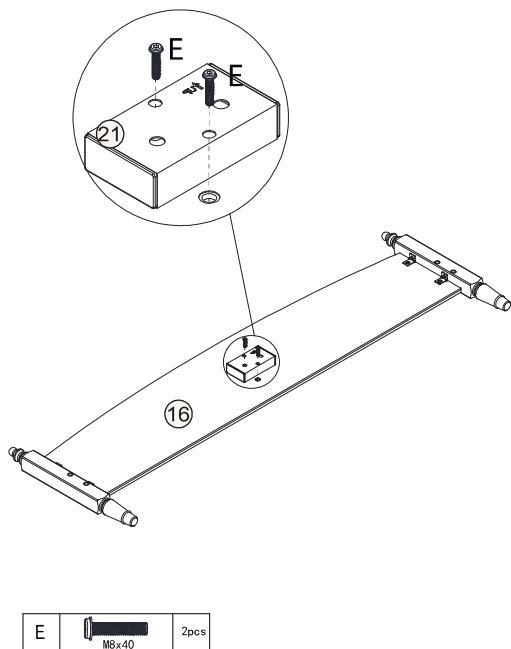


11

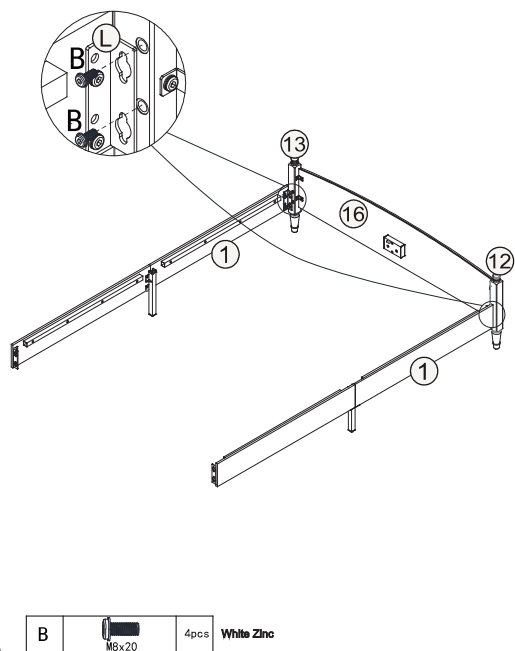

12

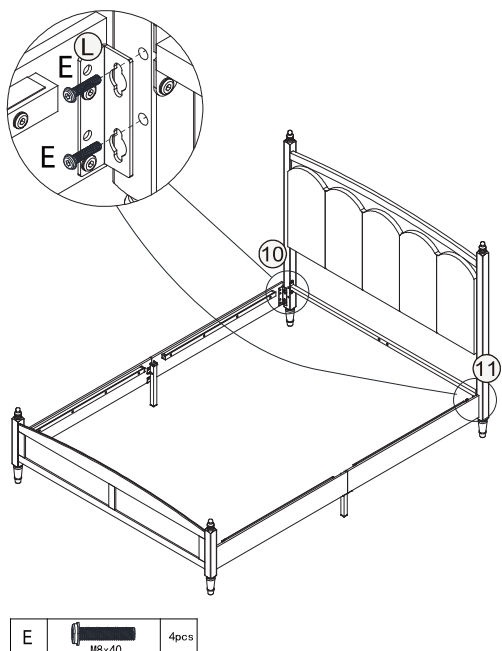


13

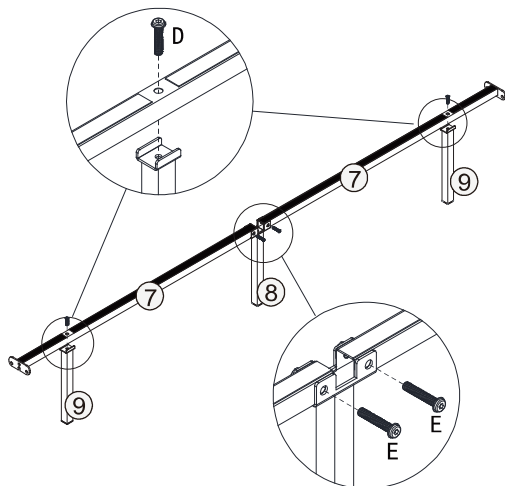


D		2pcs	White Zinc
E		2pcs	

14

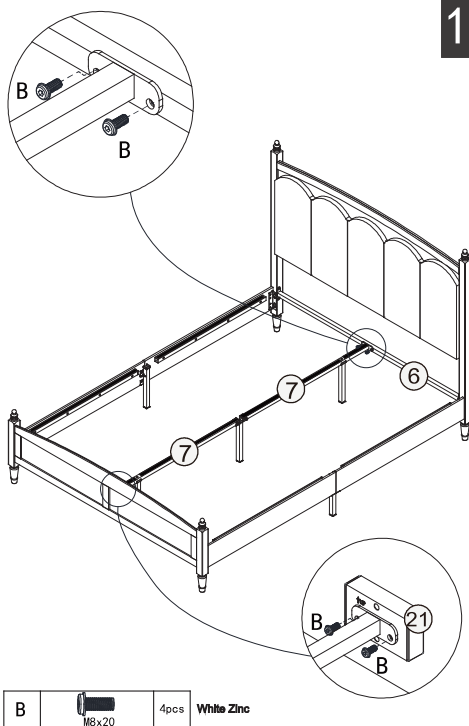


B		4pcs	White Zinc
---	---	------	------------


15

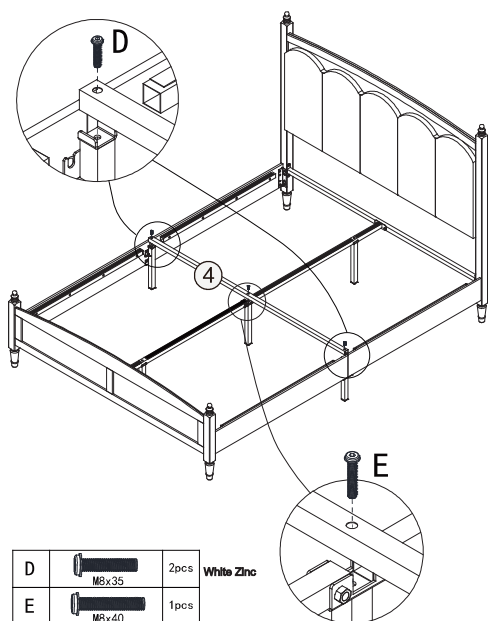

D		2pcs	White Zinc
E		1pcs	

16

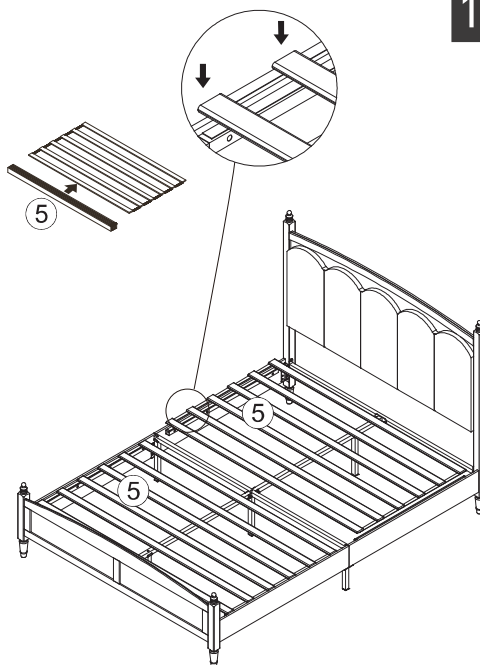

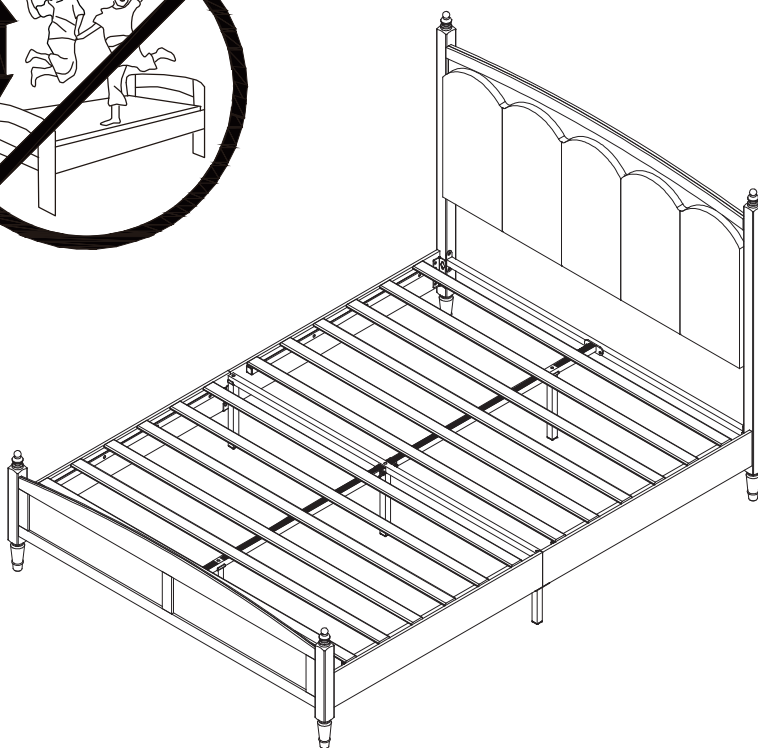

Note: Now you can tighten all the bolts.

Finish