




IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY

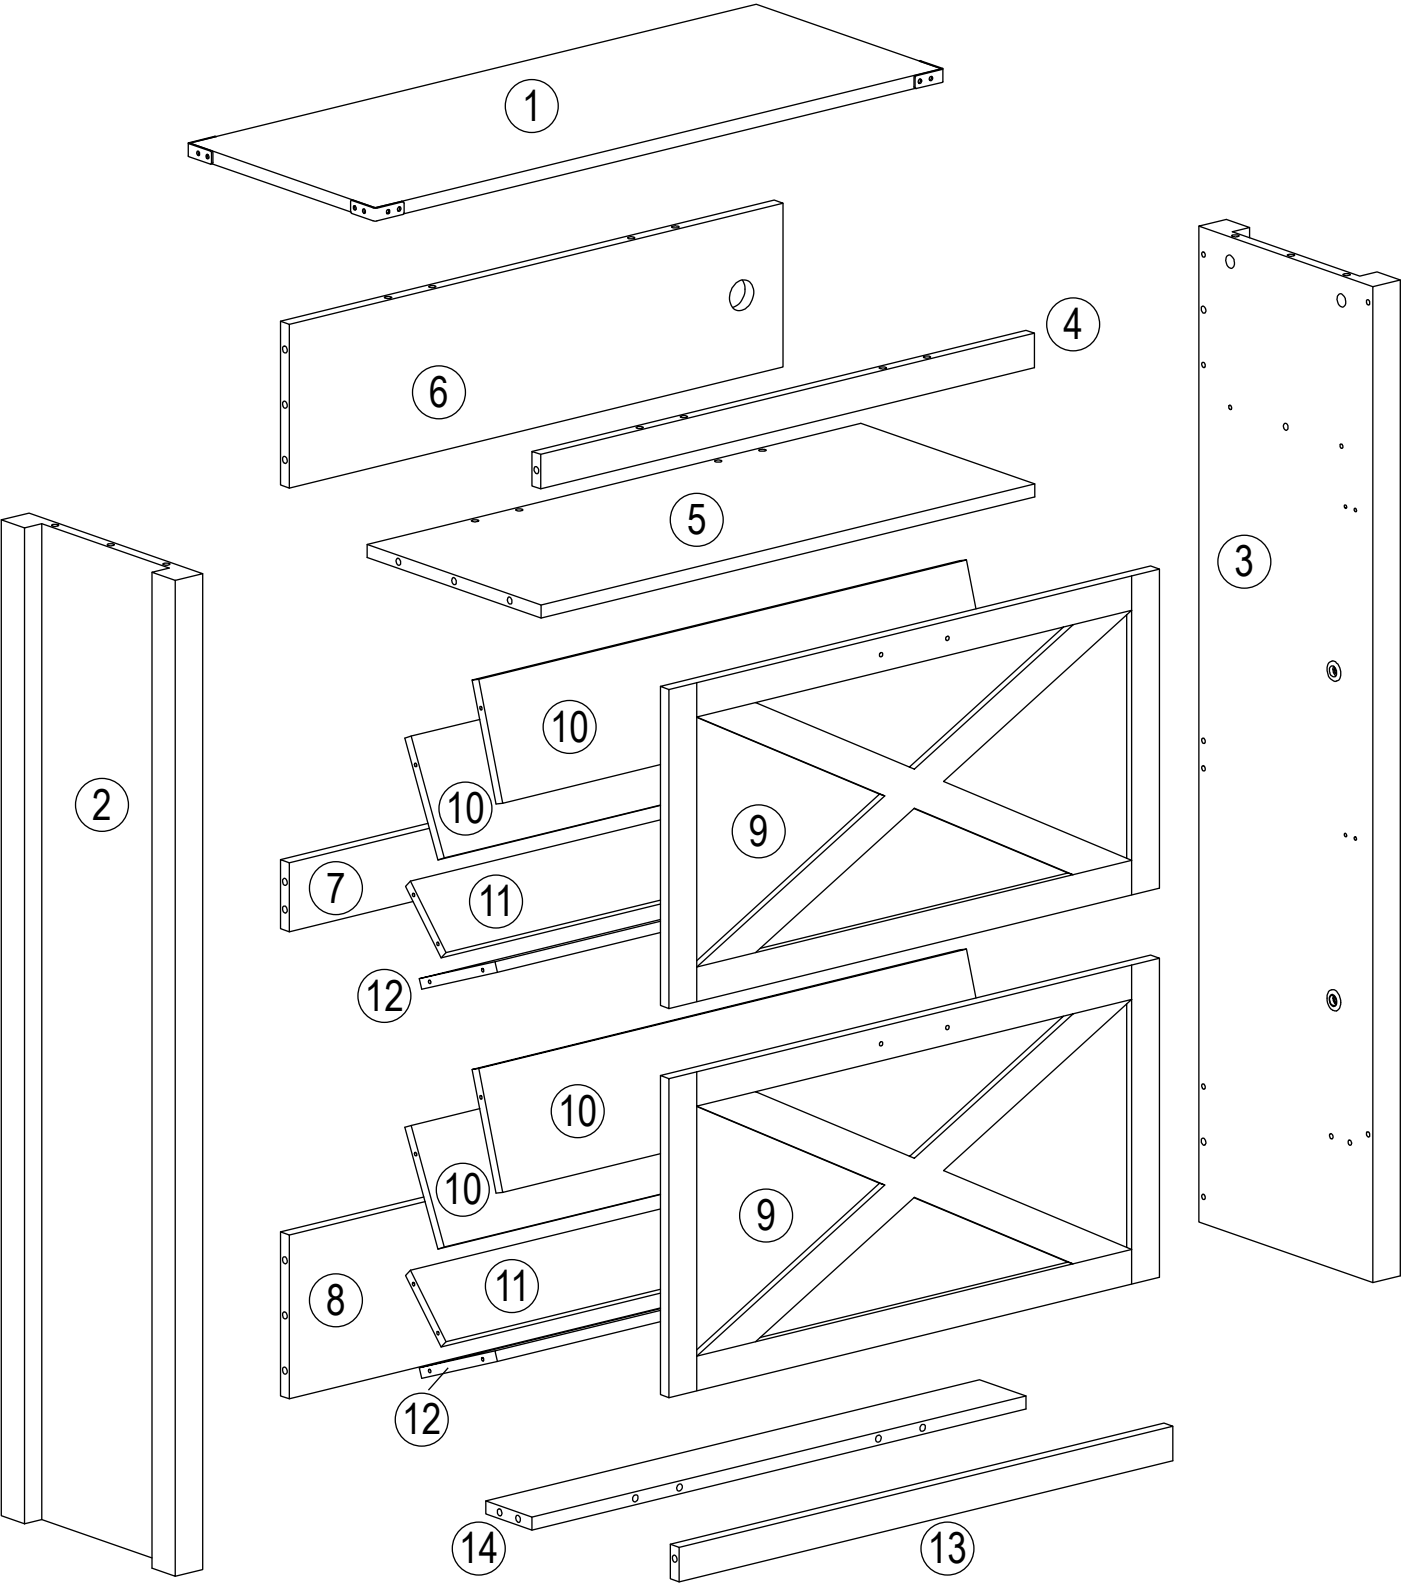




① ×1




② ×1




③ ×1




④ ×1




⑤ ×1

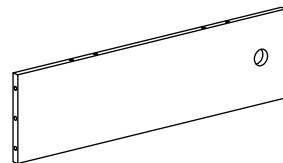


⑥ ×1

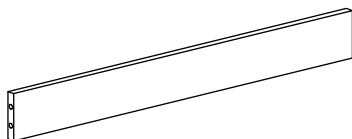


⑦ ×1

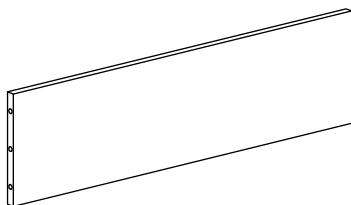


⑧ ×1

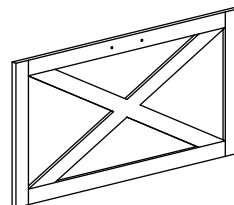


⑨ ×2




⑩ ×4




⑪ ×2



⑫ ×2



⑬ ×1




⑭ ×1


A	×34	B	×34	C	×16	D	×2	E	×1	F	×42	G	×8
Ø6×35mm		Ø15×12mm		Ø8×30mm		Ø7×47mm		M4×55mm		3.5×14mm		3.5×18mm	

H	×2	I	×2	J	×4	K	×4	L	×4	M	×4	N	×2
Ø4×35mm		131×20×23mm		M4×18mm		M4×8mm		Ø18×10mm		26×9×7mm		Ø8×40mm	


O	×2	P	×1	Q	×1	R	×2	S	×2	T	×2
155×20mm		Ø20mm				310×245×24mm		310×245×24mm		30×8×8mm	

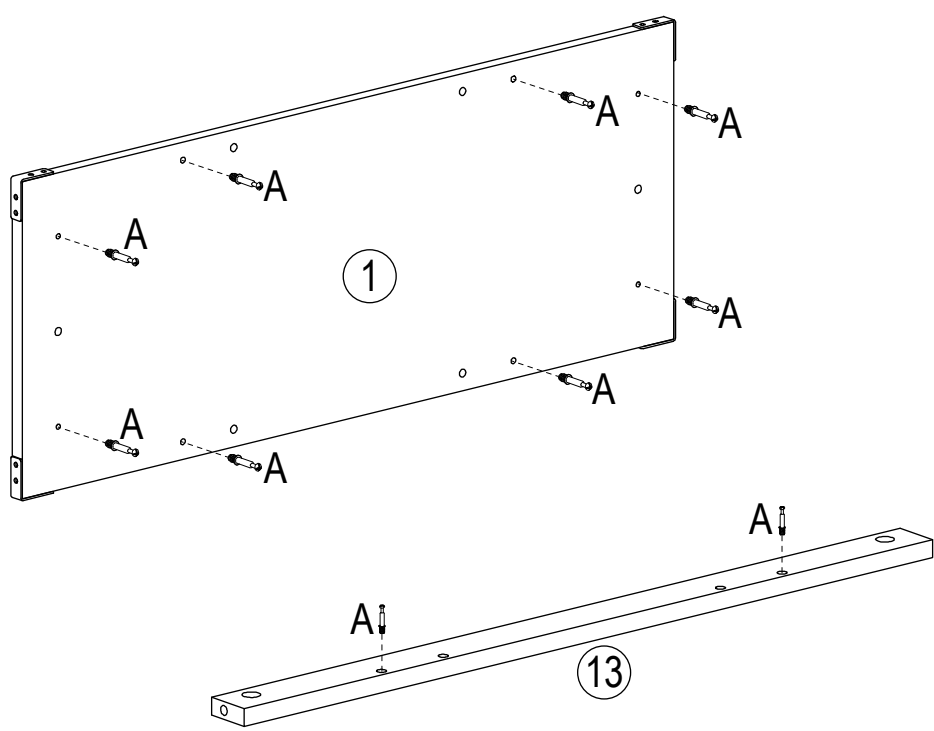


STEP 1




A	x10
	
Ø6×35mm	

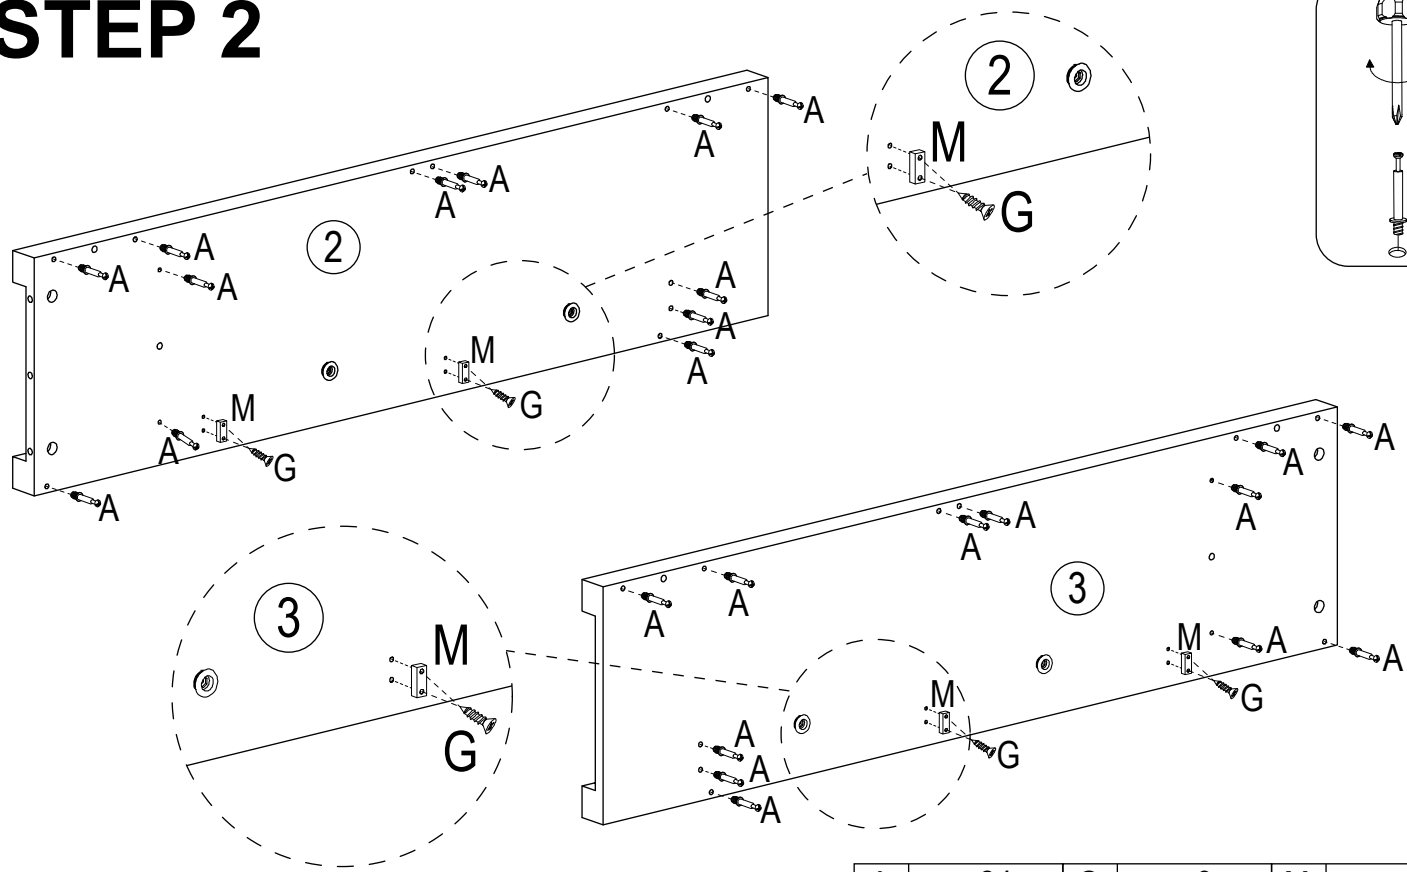



STEP 2




A	x24	G	x8	M	x4
					
Ø6×35mm		3.5×18mm		26×9×7mm	

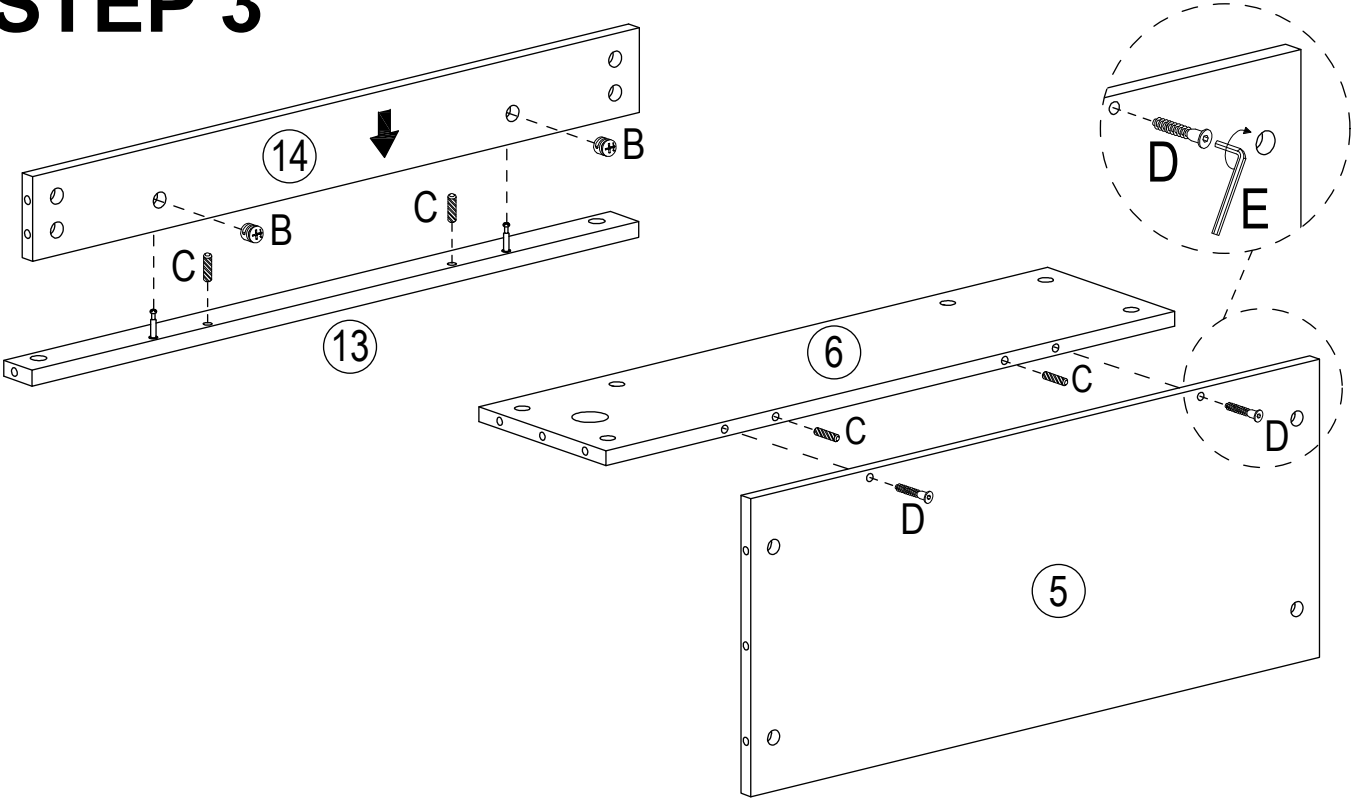

STEP 3




B	×2	C	×4	D	×2	E	×1
							
Ø15×12mm		Ø8×30mm		Ø7×47mm		M4×55mm	

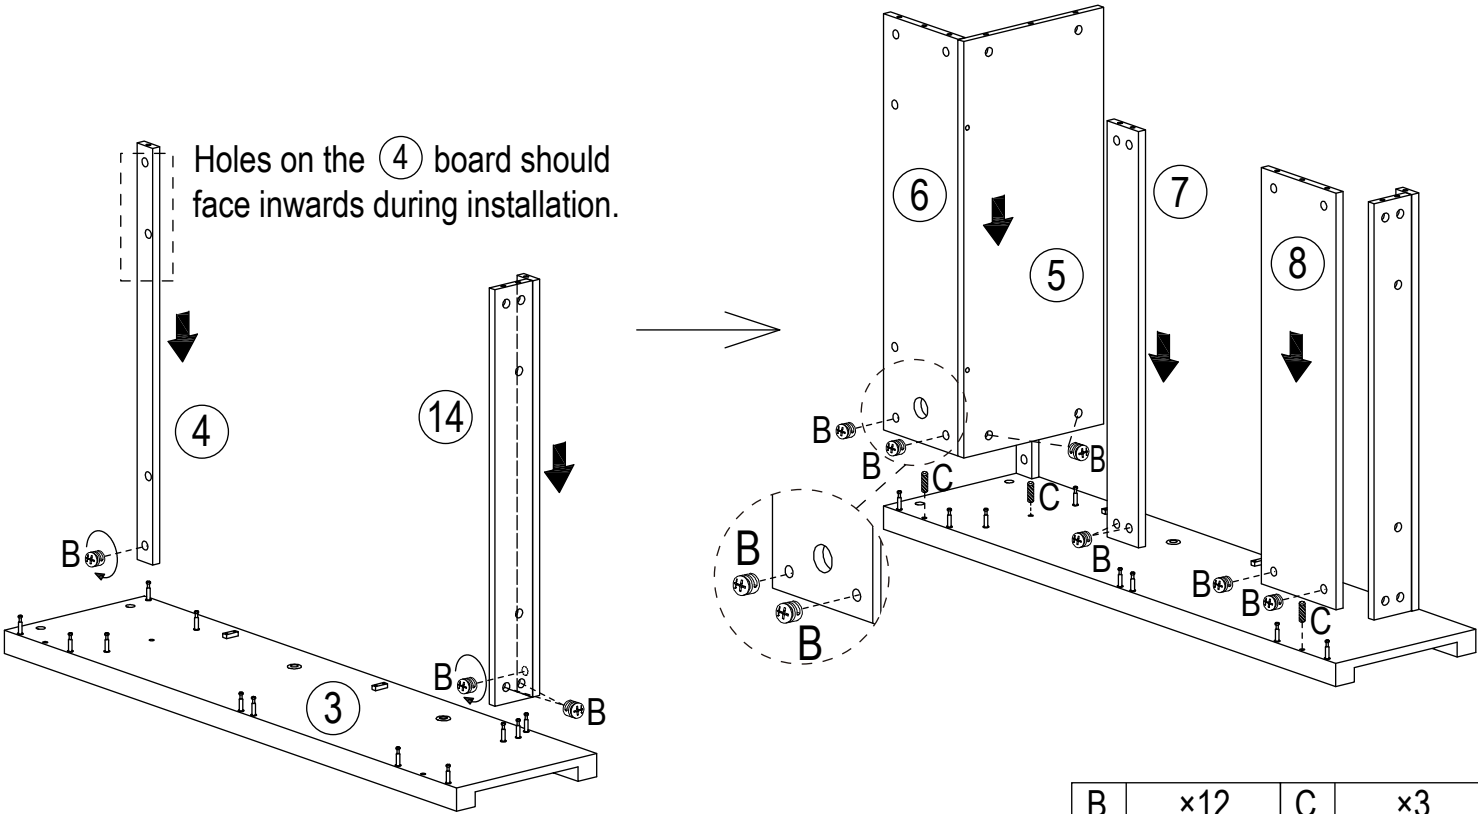

STEP 4



B	×12	C	×3
			
Ø15×12mm		Ø8×30mm	

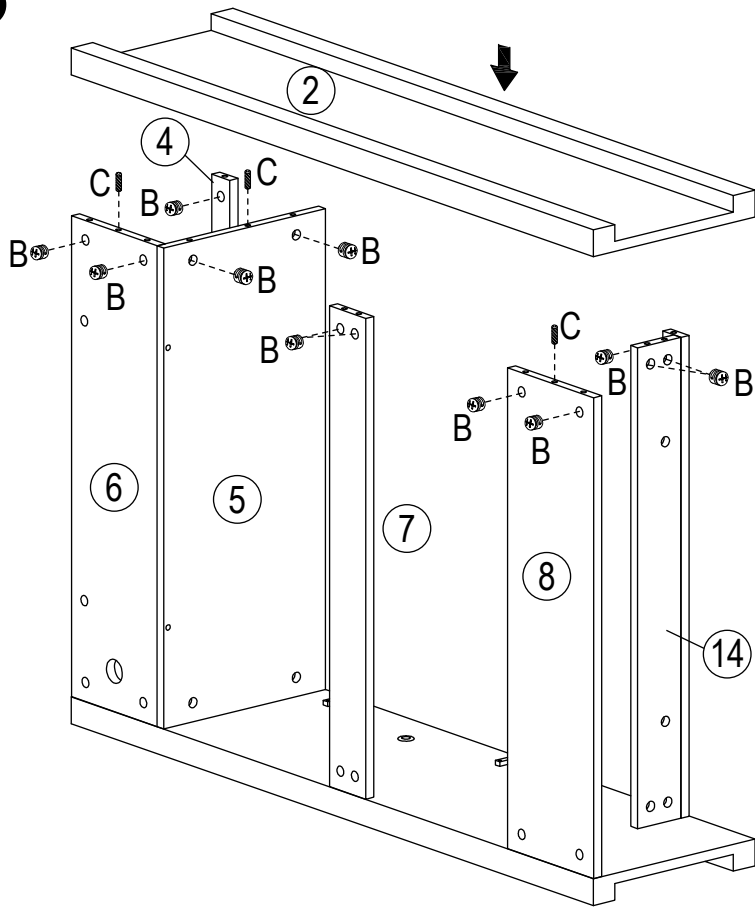
STEP 5





B	x12	C	x3
			
Ø15×12mm		Ø8×30mm	


STEP 6

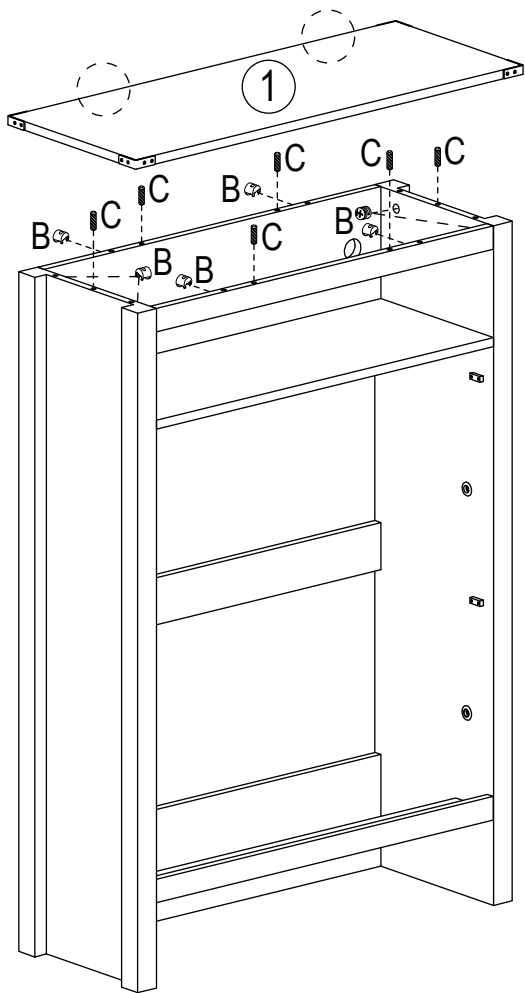Holes on the ① board should facing the wall.




B	x8	C	x6
			
Ø15×12mm		Ø8×30mm	


STEP 7

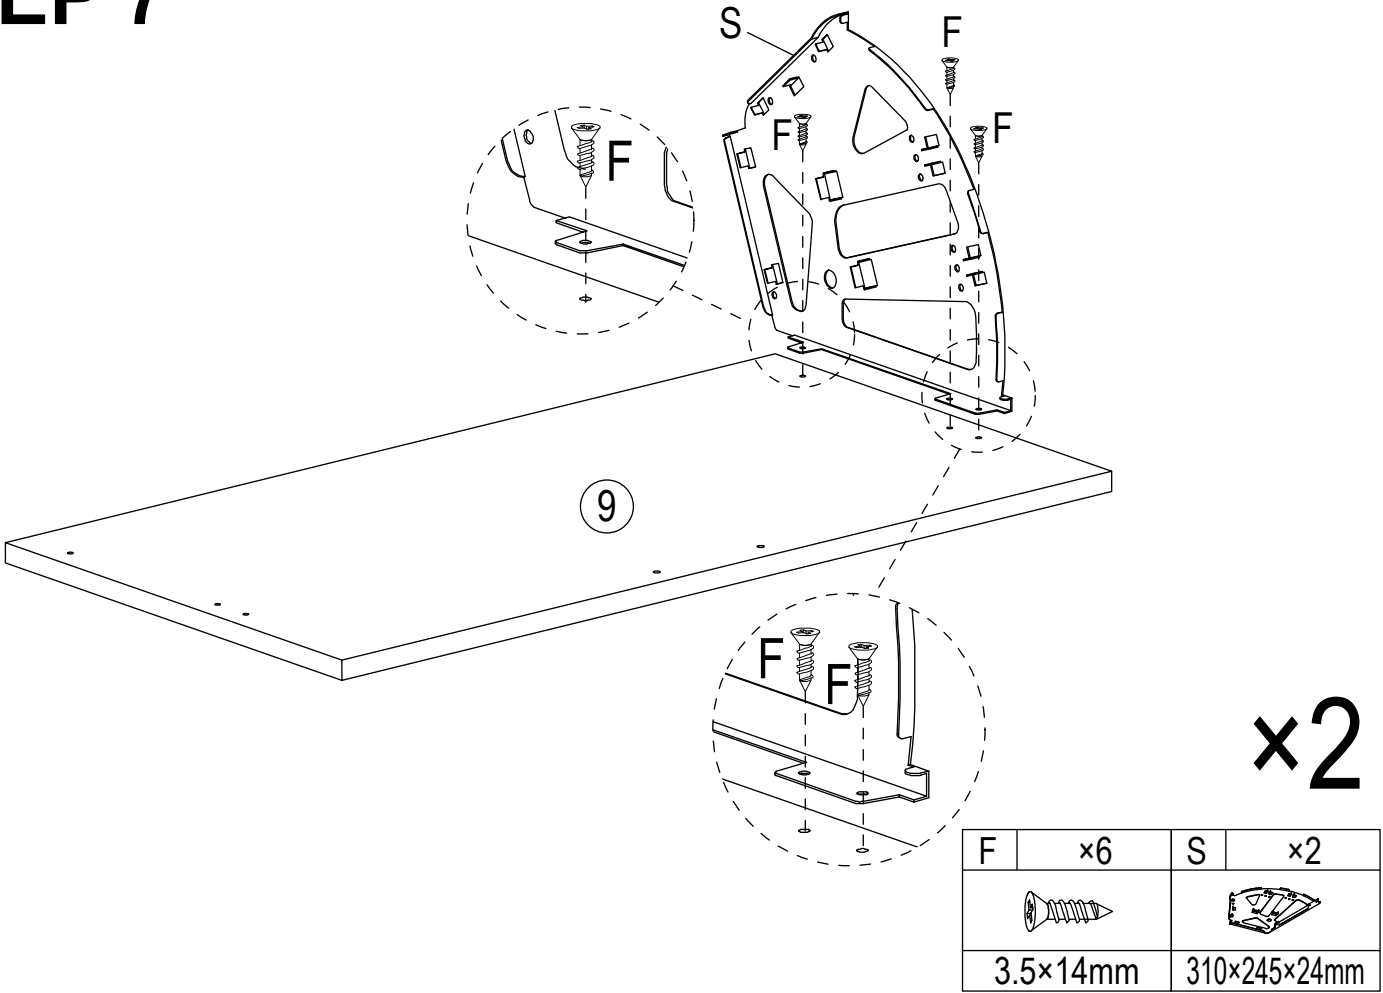


STEP 8

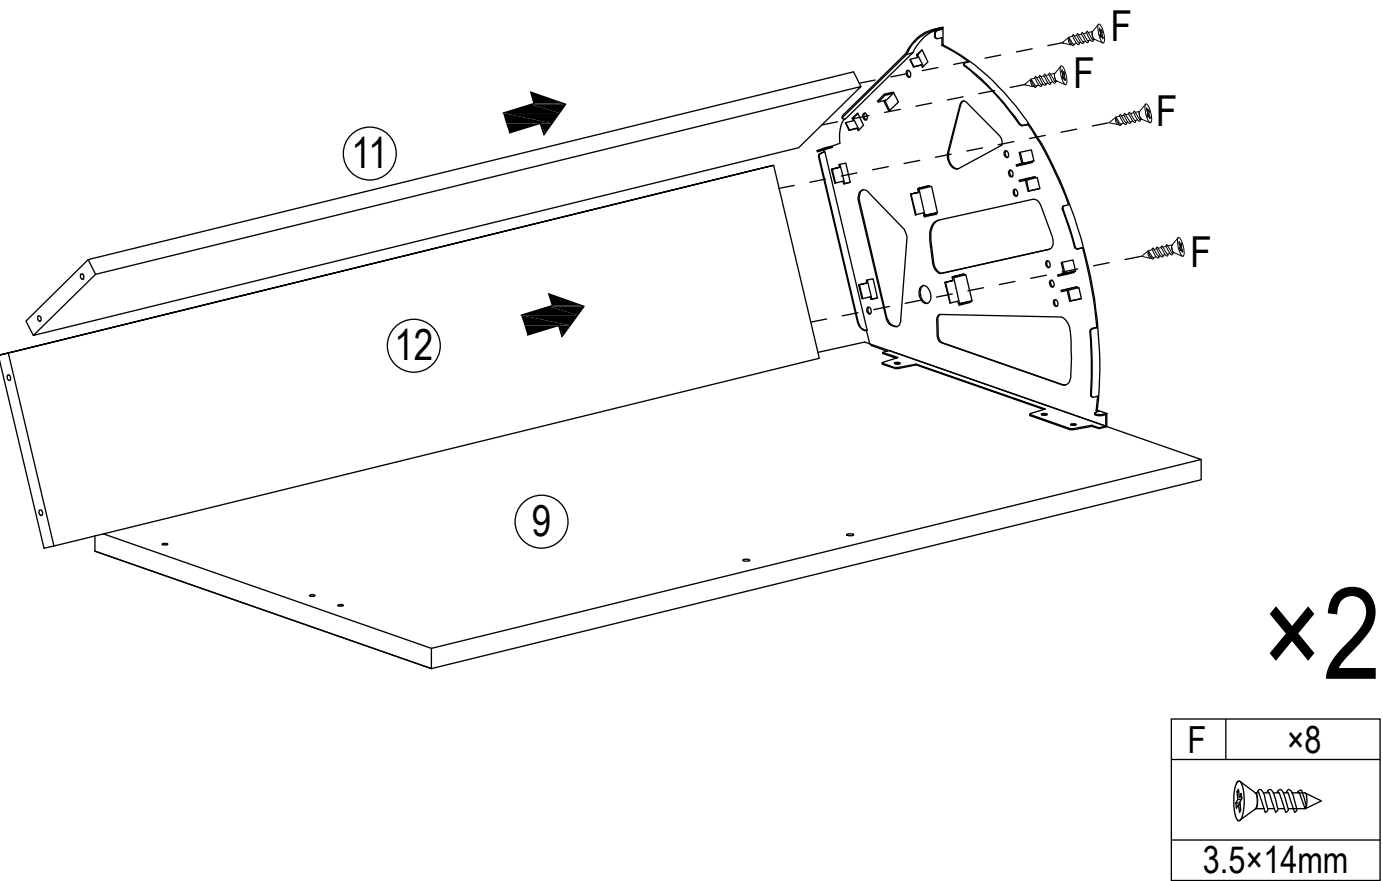


STEP 9

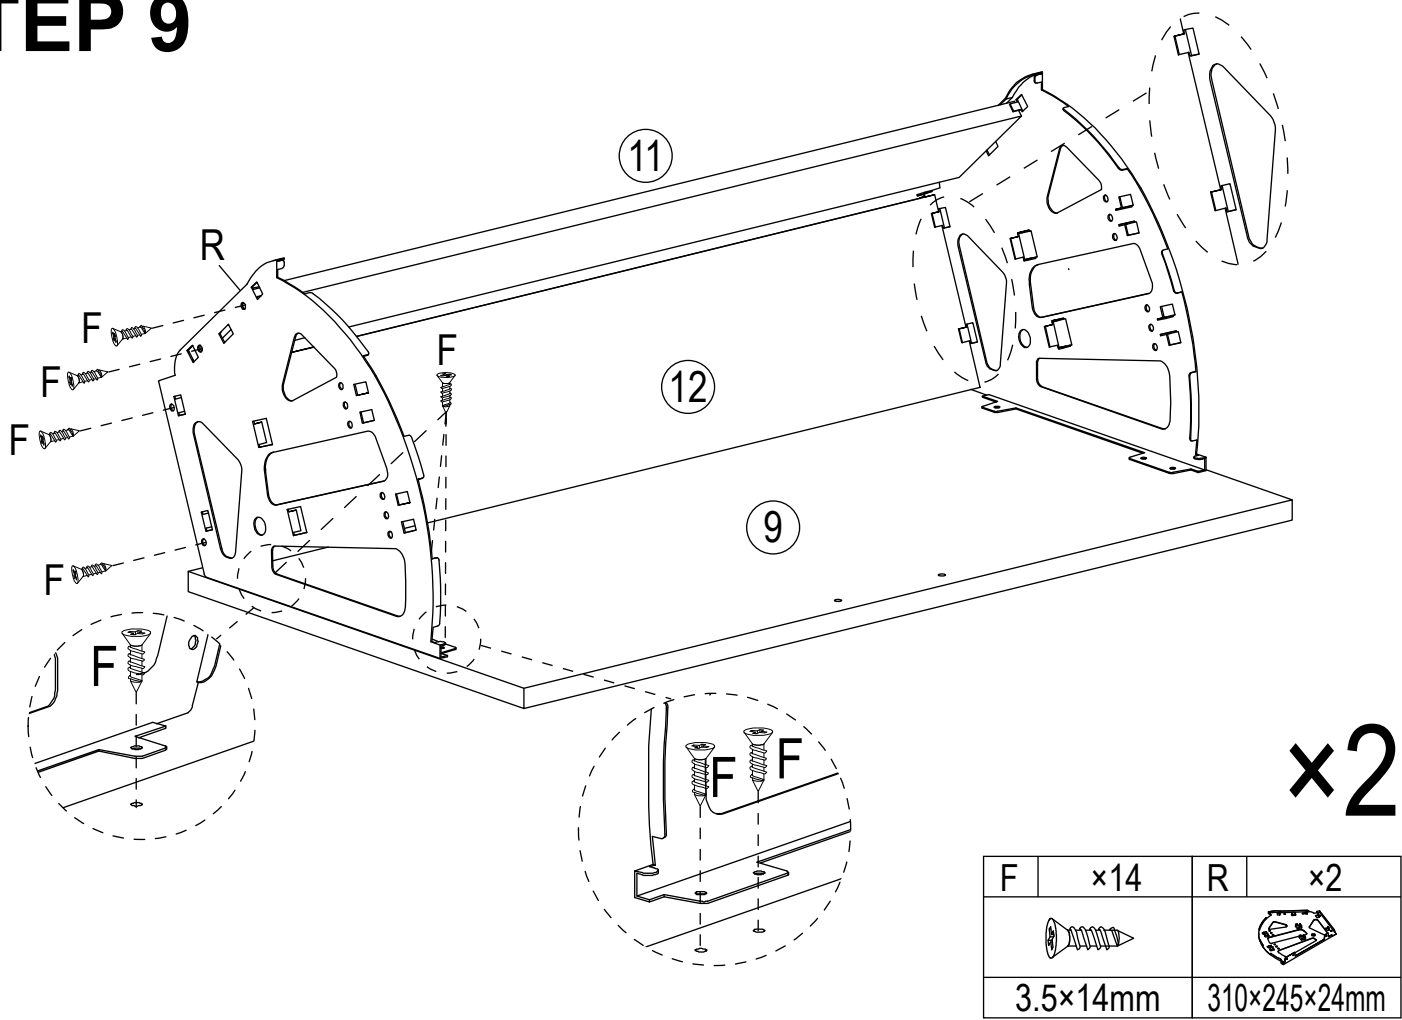

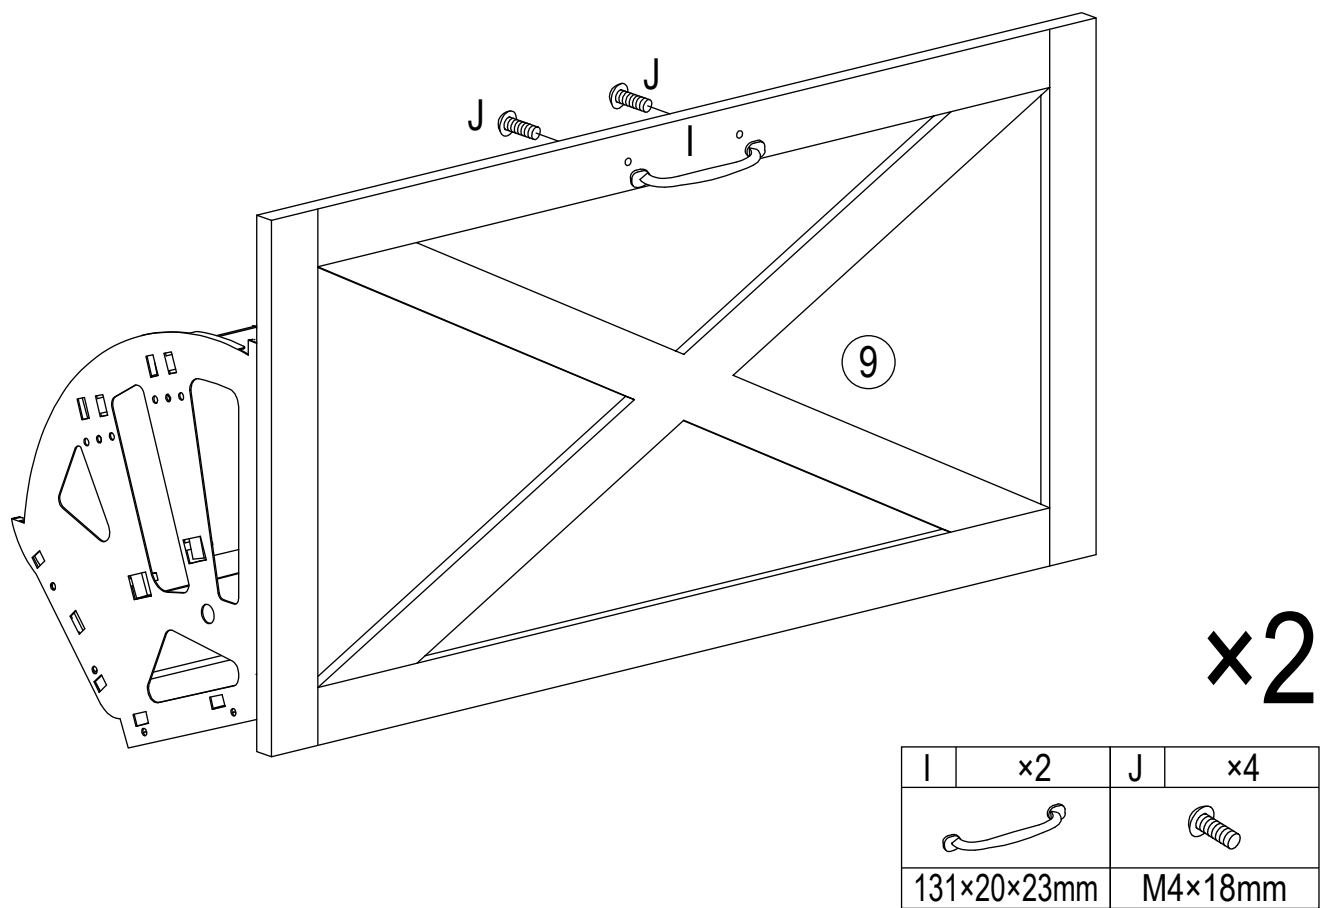

STEP 10

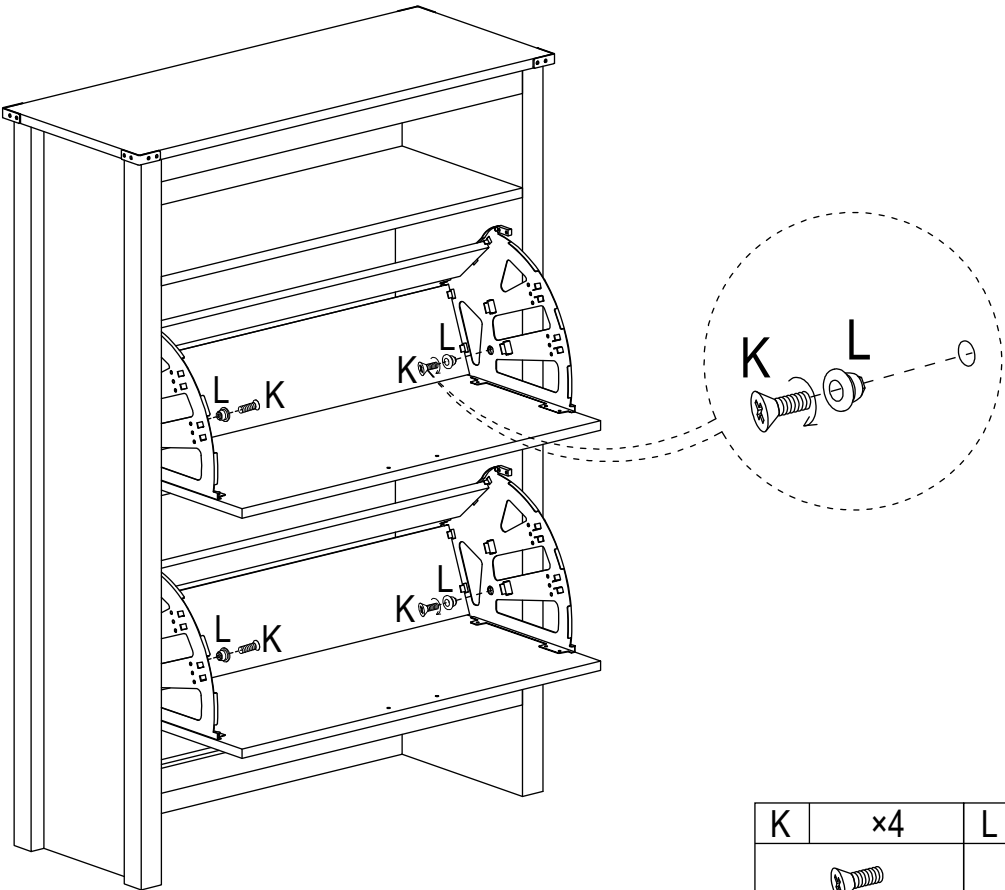


STEP 11






K	x4	L	x4
			
M4×8mm		Ø18×10mm	

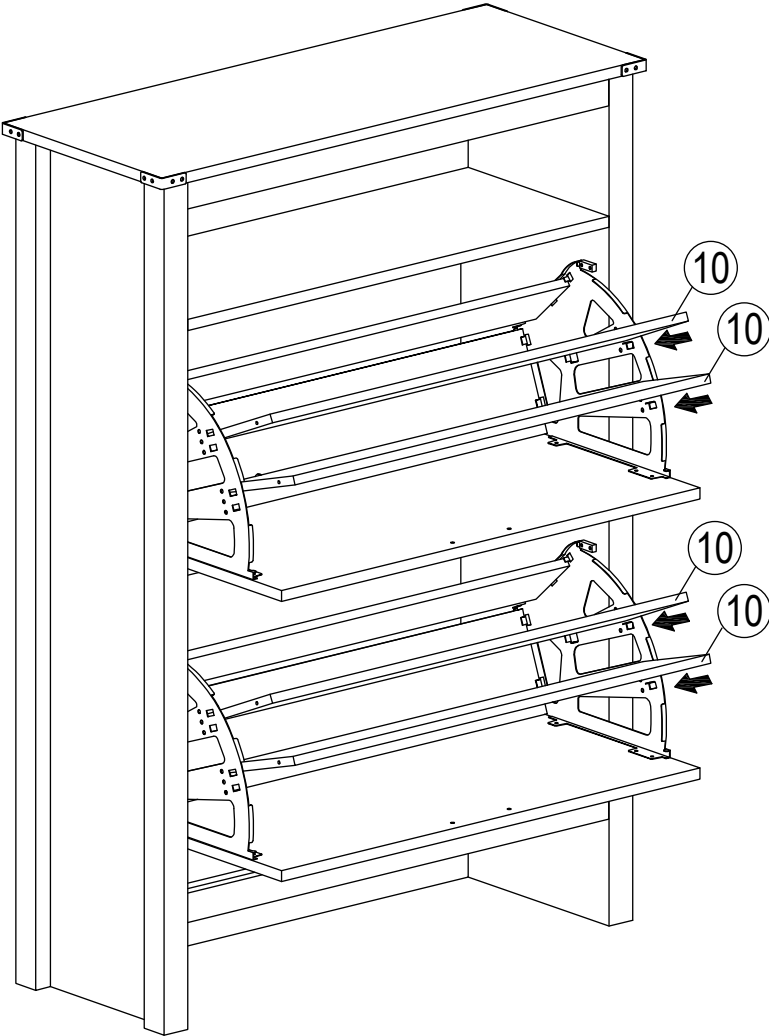STEP 12




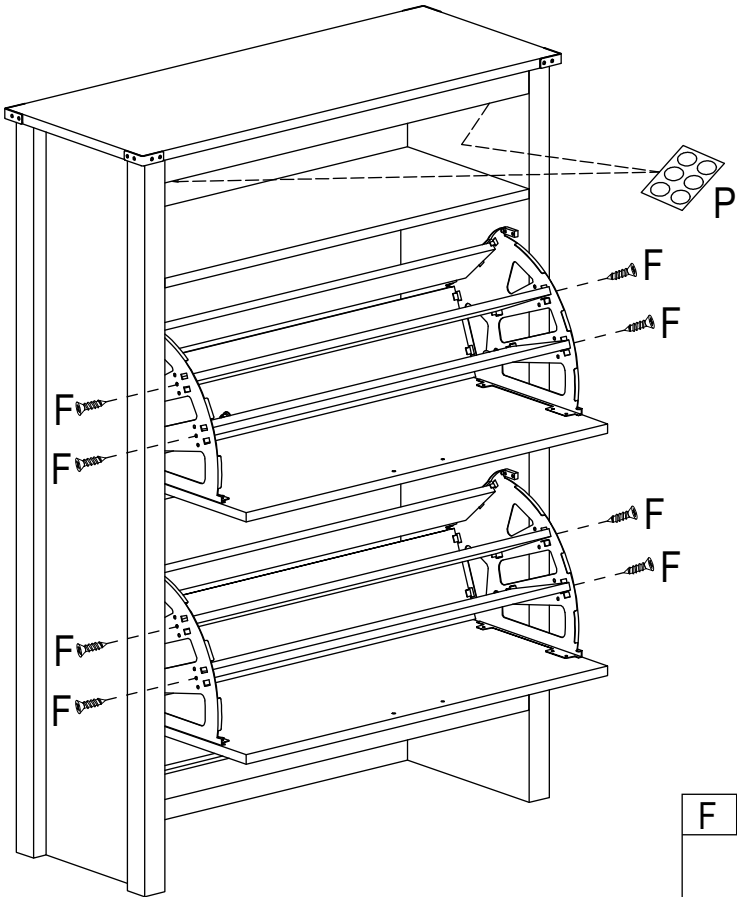

STEP 13




F	x8	P	x1
			
3.5×14mm		Ø20mm	

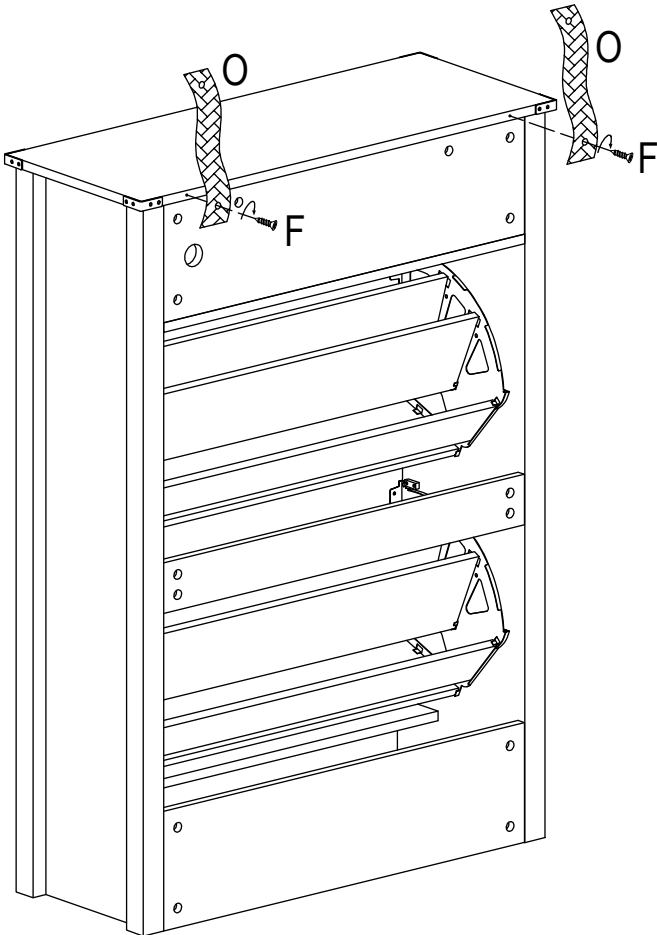STEP 14




F	x2	O	x2
			
3.5×14mm		155×20mm	


STEP 15

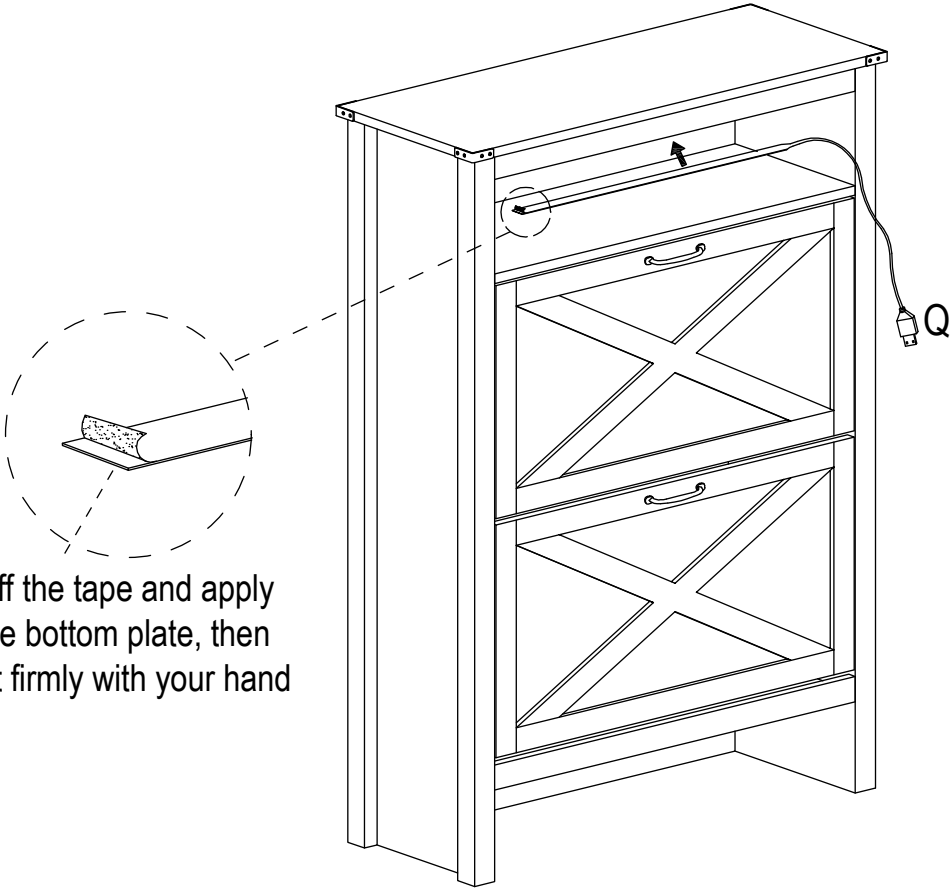




Tear off the tape and apply it to the bottom plate, then press it firmly with your hand

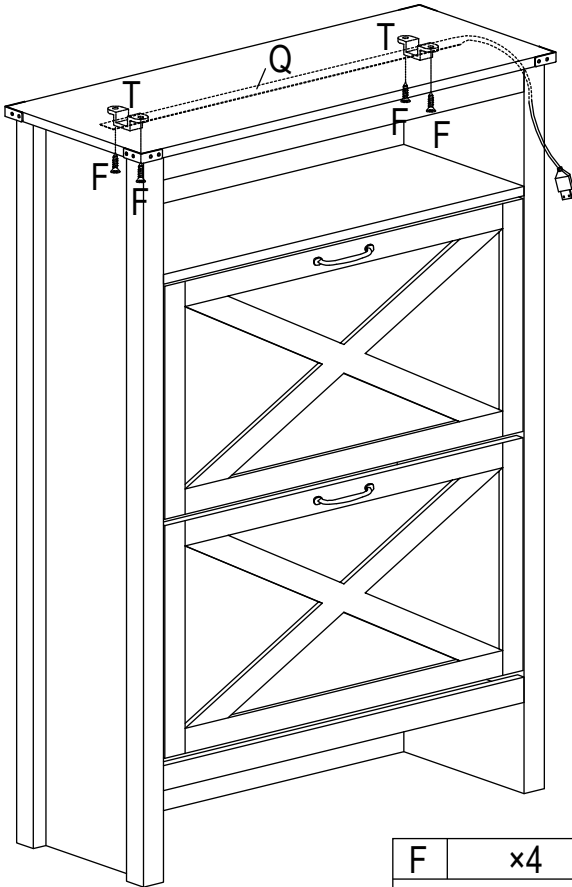

Please remove the plastic film here before using the remote control




F	x4	Q	x1	T	x2
					
3.5×14mm				30×8×8mm	



STEP 16



Attention: For safety and stability, we suggest you have to secure the anti-tip accessories to the wall to prevent tipping, injury, and property damage.

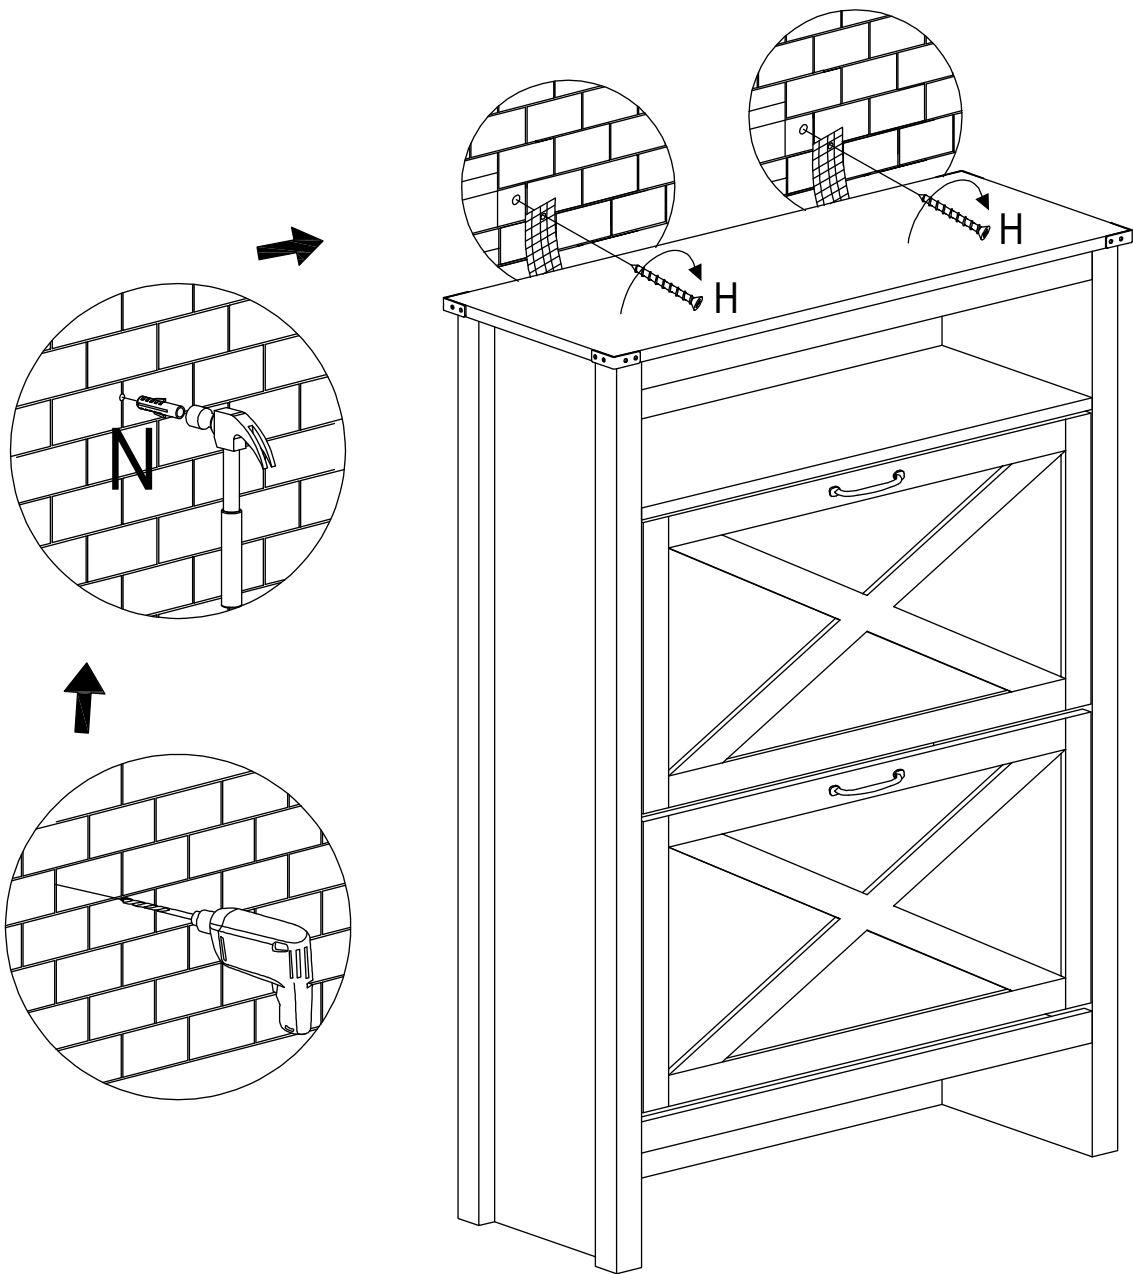

Installation Completed

H	x2	N	x2
			
Ø4×35mm		Ø8×40mm	