





Mixed Wood Wall Panel

Installation Guide

Mixed Wood Wall Panel


Wall Mounting

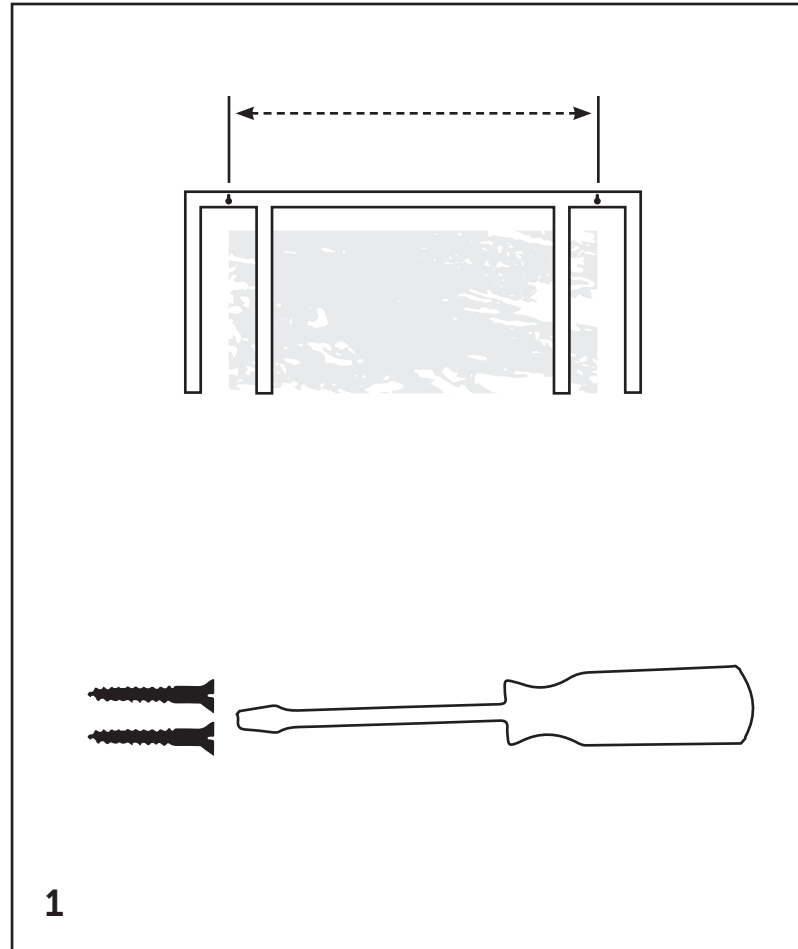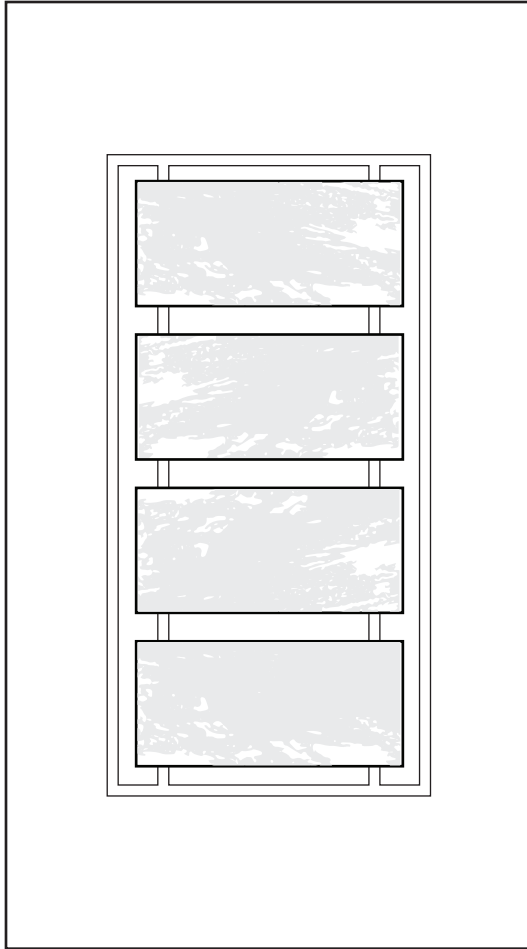

1

Measure the distance between the two holes on the back of Mixed Wood Wall Panel.

Place two screws into the wall surface at the measured distance and at the same level.

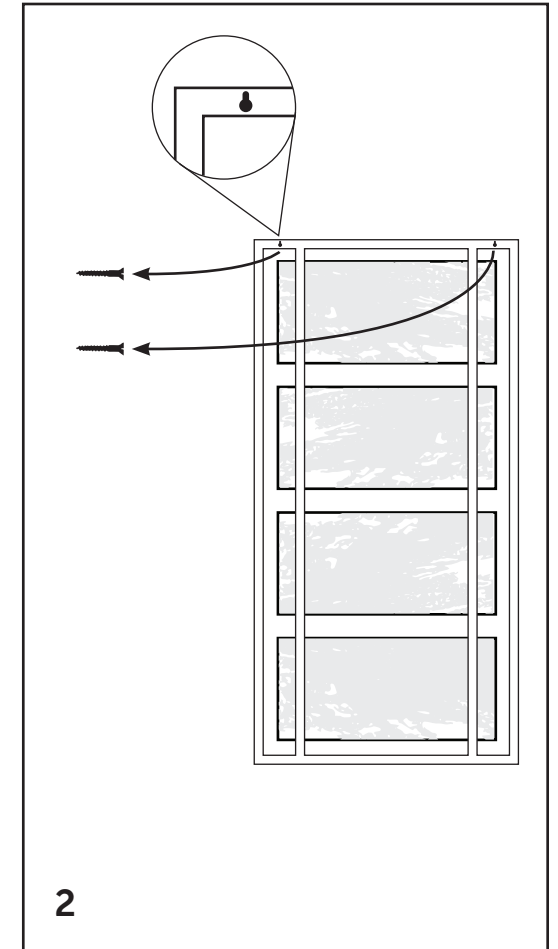

2

Place the holes on back of Mixed Wood Wall Panel onto the screws.

(screws not included)