



ASSEMBLY INSTRUCTIONS


QUEEN MURPHY BED

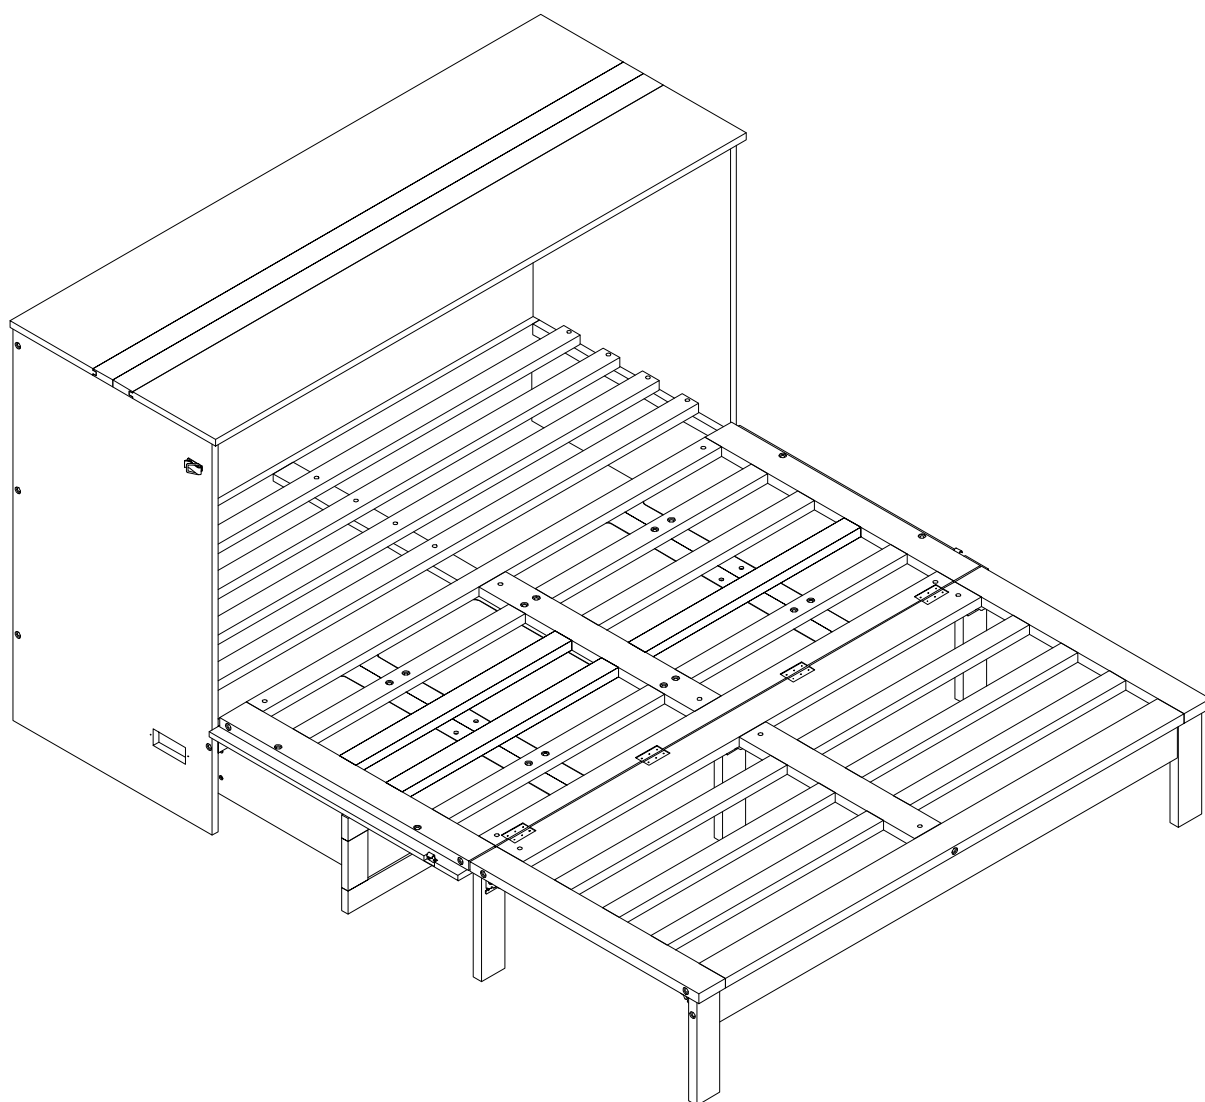










Detail View

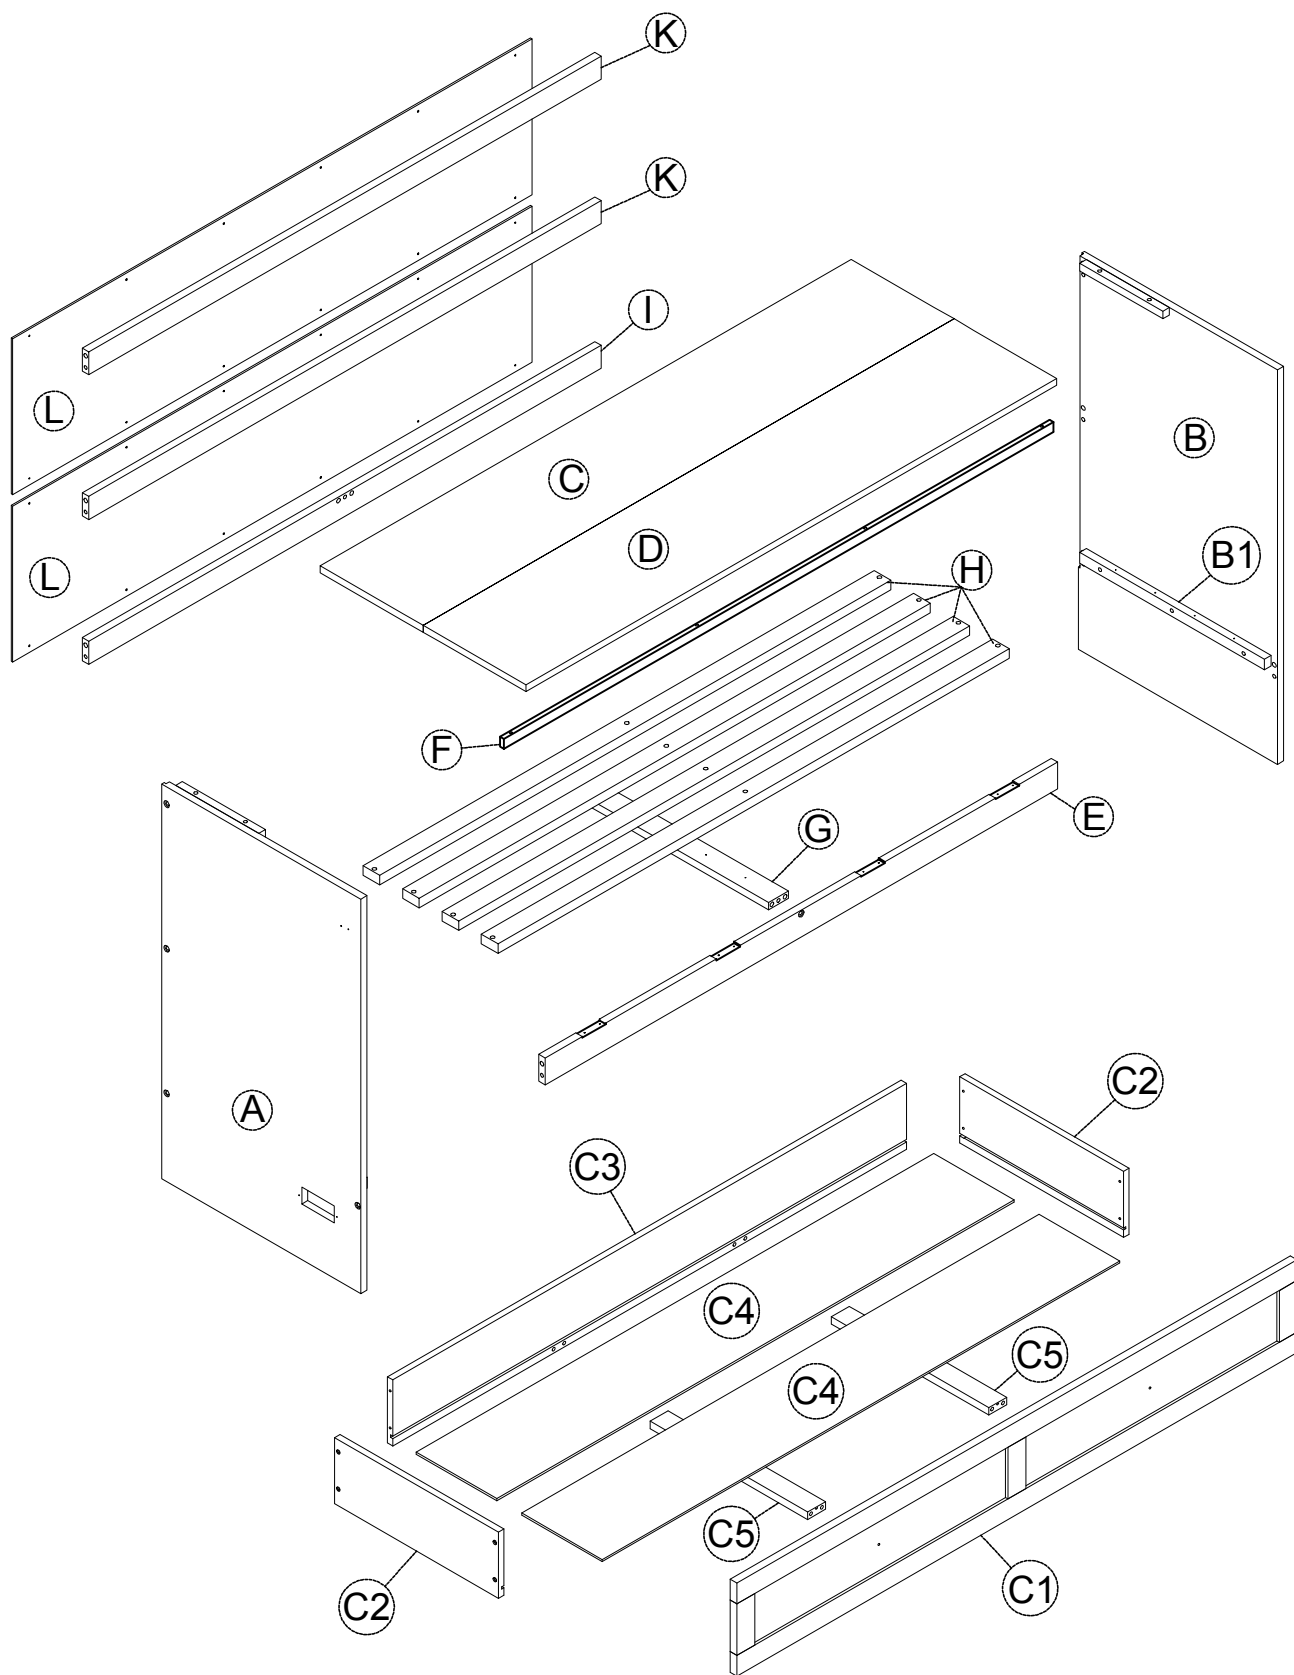















Detail View

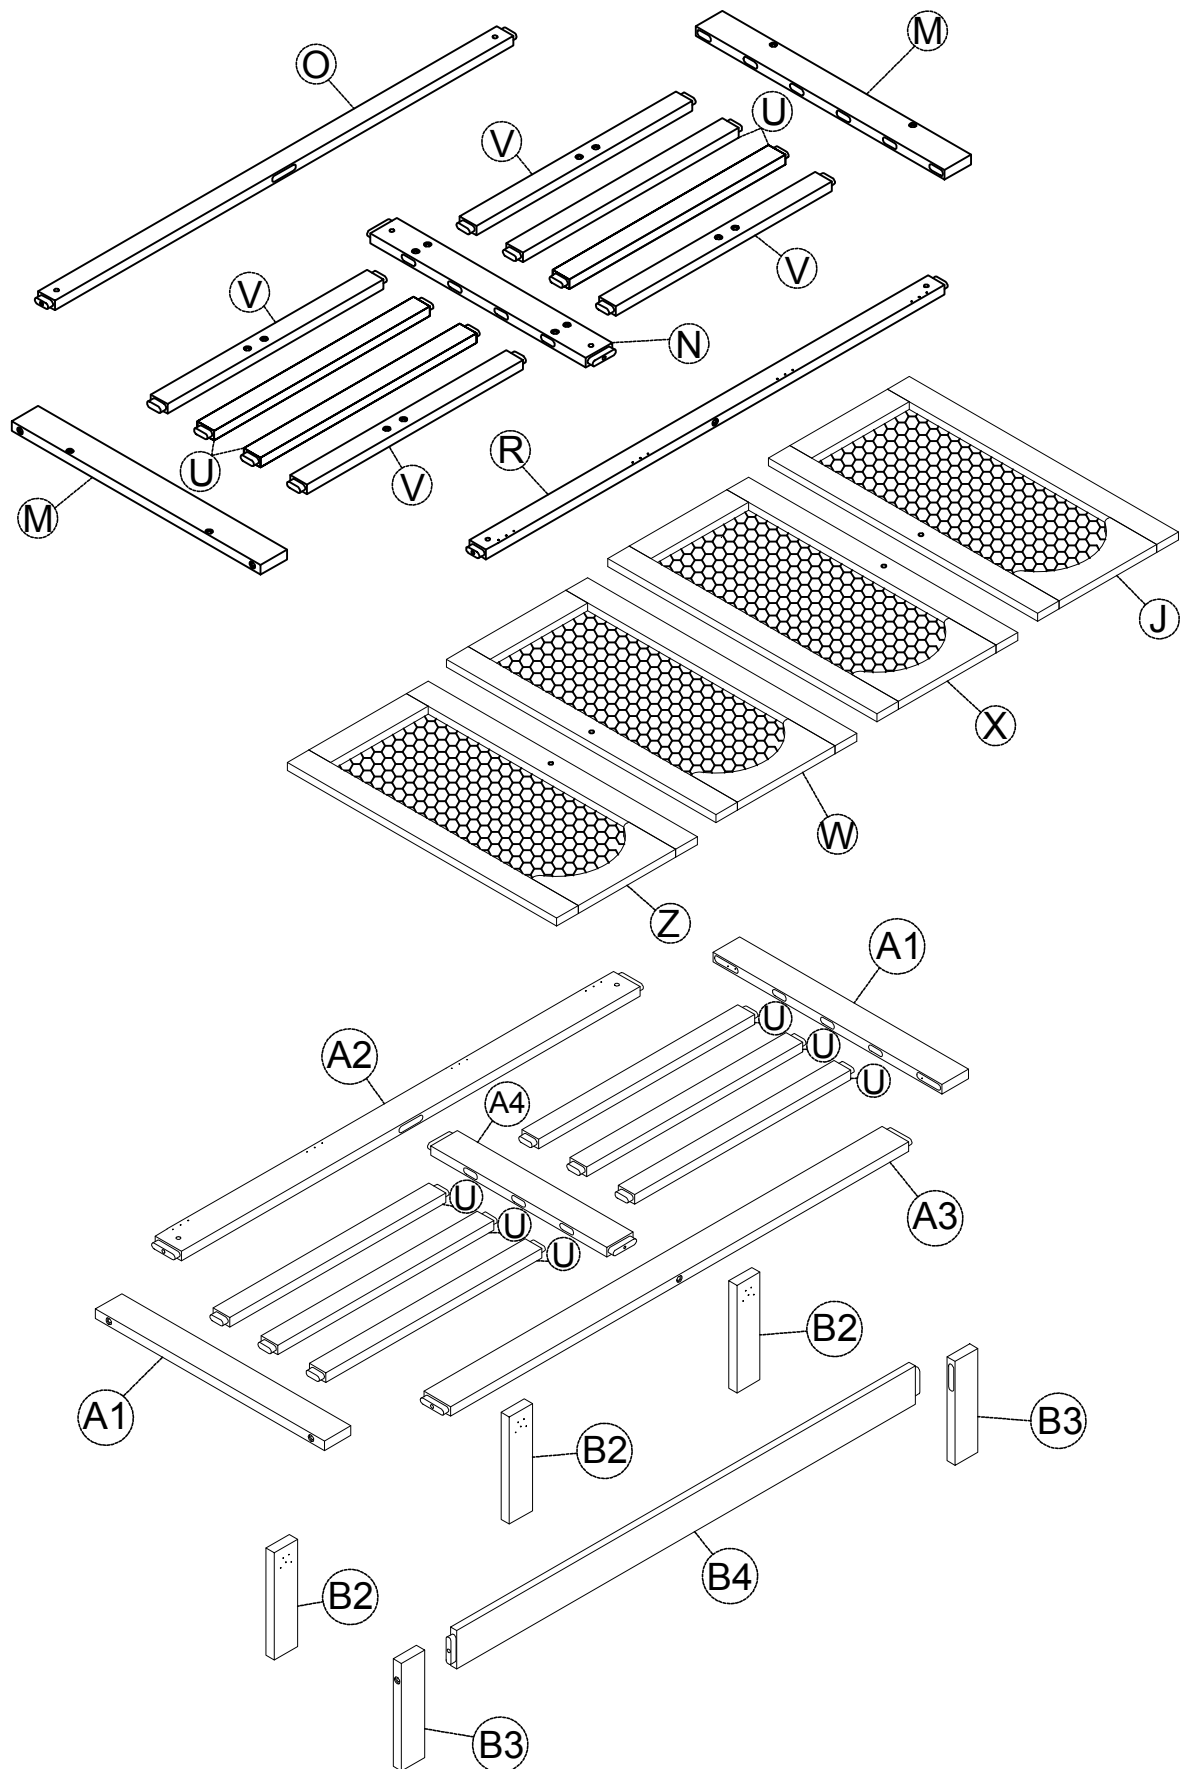



Part List : BOX 1

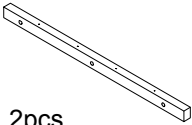A  1pc	B  1pc	G  1pc
M  2pcs	N  1pc	V  4pcs
U  10pcs	Z  1pc	W  1pc
X  1pc	J  1pc	A1  2pcs
A4  1pc	B1  2pcs	B2  3pcs
B3  2pcs		


Part List : BOX 2

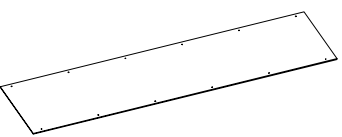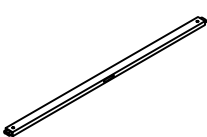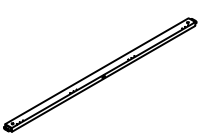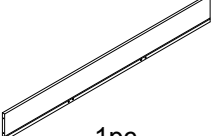C	 1pc	D	 1pc	E	 1pc
H	 4pcs	I	 1pc	K	 2pcs
L	 2pcs	O	 1pc	R	 1pc
A2	 1pc	A3	 1pc	B4	 1pc
C1	 1pc	C2	 2pcs	C3	 1pc
C4	 2pcs	C5	 2pcs	F	 1pc


Hardware List : BOX1

1	 (Ø15) x1/4"x60mm Hex-Head Bolts (8pcs)	2	 1/4"x15mm(9.5mm) Horizontal-Hole Nuts (8pcs)	3	 (Ø15) x1/4"x30mm Hex-Head Bolts (26pcs)
4	 (Ø15) x1/4"x60mm Hex - Head Screws (2pcs)	5	 (Ø15) x1/4"x90mm Hex - Head Screws (14pcs)	6	 66 x39x1.5mm Hinge (4pcs)
7	 66 x27x1.5mm Hinge (4pcs)	8	 70x58x56x3mm Foldable-bracket (1pc)	9	 70x58x56x3mm Foldable-bracket L (3pcs)
10	 Duckbill lock B (2pcs)	11	 Duckbill lock A (2pcs)	12	 Wooden-Knob (6pcs)
13	 internal cross hinge (4pcs)	14	 Ø5/32"x30mm Pan Heand bolts (4pcs)	15	 Ø8x8mm Horizontal-Hole Nuts (4pcs)
16	 Ø8x30mm Wooden dowel (24pcs)	17	 3.5x15mm Wood screws (74pcs)	18	 3.5x10mm Wood screws (8pcs)
19	 3.5x15mm Wood screws (74pcs)	20	 m4x25mm Wood screws (4pcs)	21	 m4x30mm Wood screws (20pcs)
22	 m4x50mm Wood screws (8pcs)	23	 12.5 x44mm internal cross hinge (3set)	24	 USB (1pc)
25	 Wood (2pcs)	26	 Ø5/32"x15mm Pan Heand bolts (2pcs)	27	 (1/4") 4x58mm Allen key (1pc)
28	 70x58x56x3mm Foldable-bracket (R) (1pc)	ASSEMBLY TOOLS REQUIRED (NOT INCLUDED) 			


STEP 1

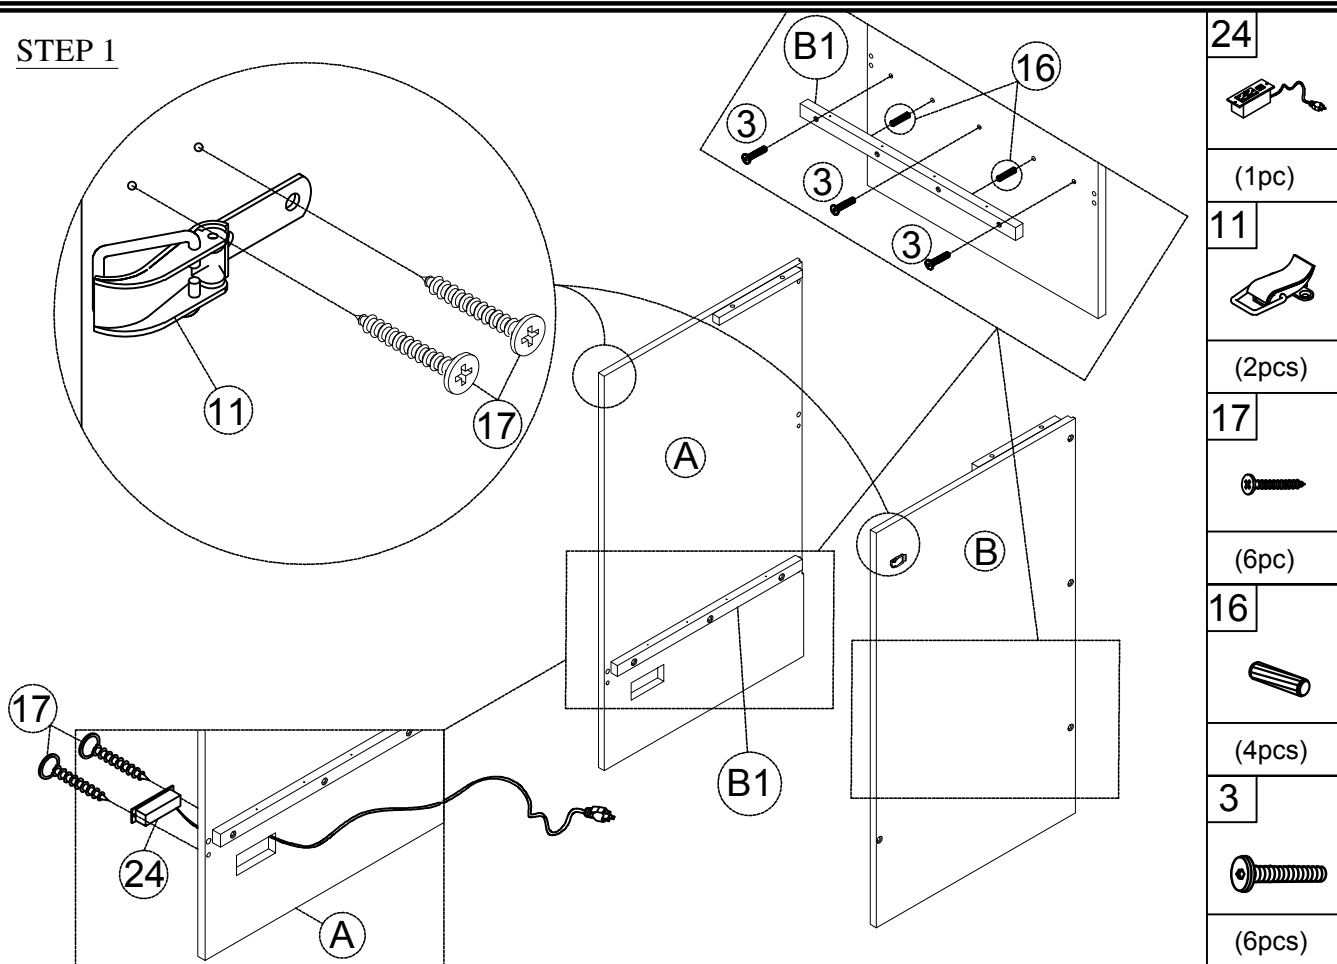

STEP 2

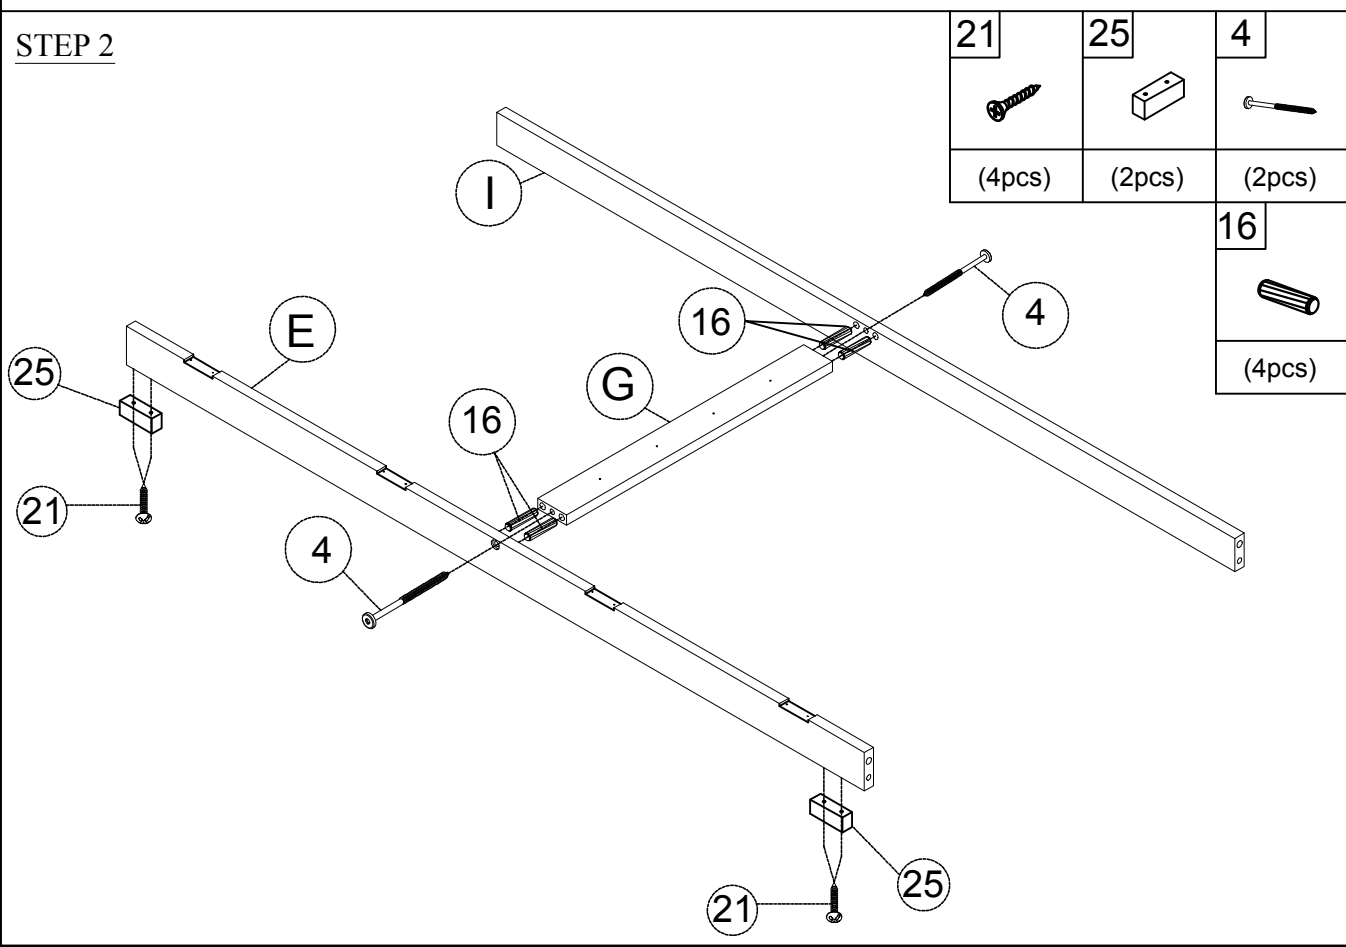

STEP 3

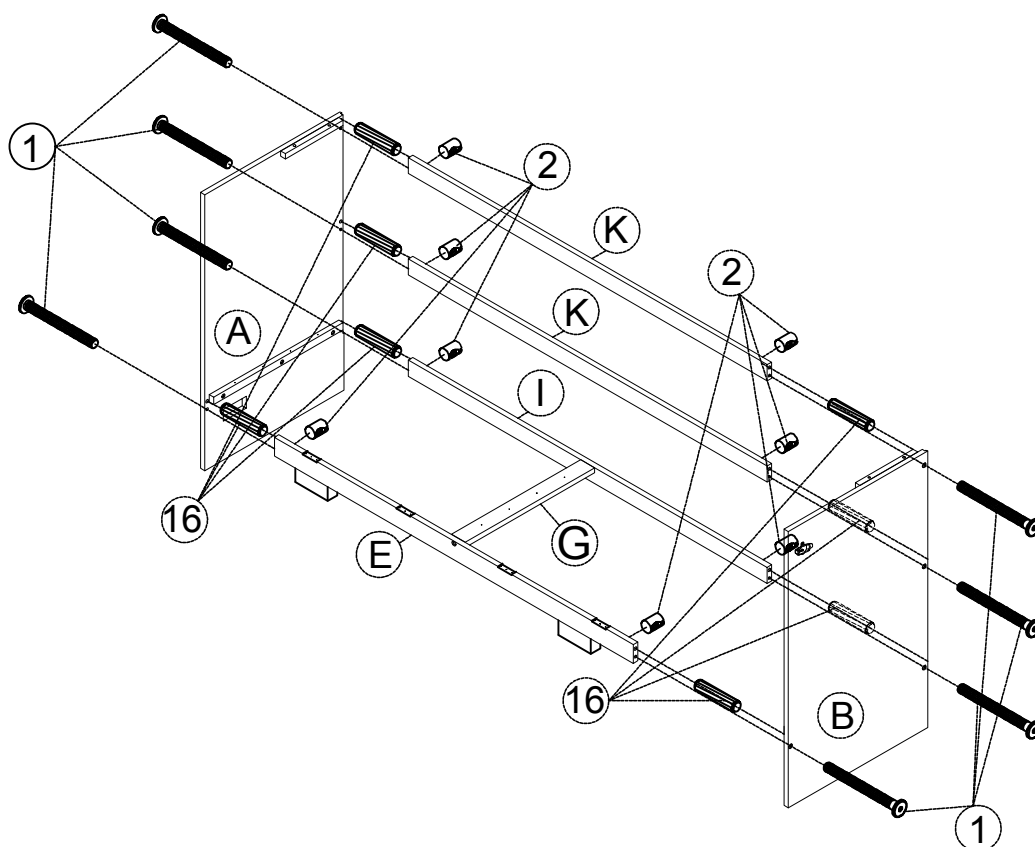

1



(8pcs)

16




(8pcs)

2



(8pcs)

STEP 4

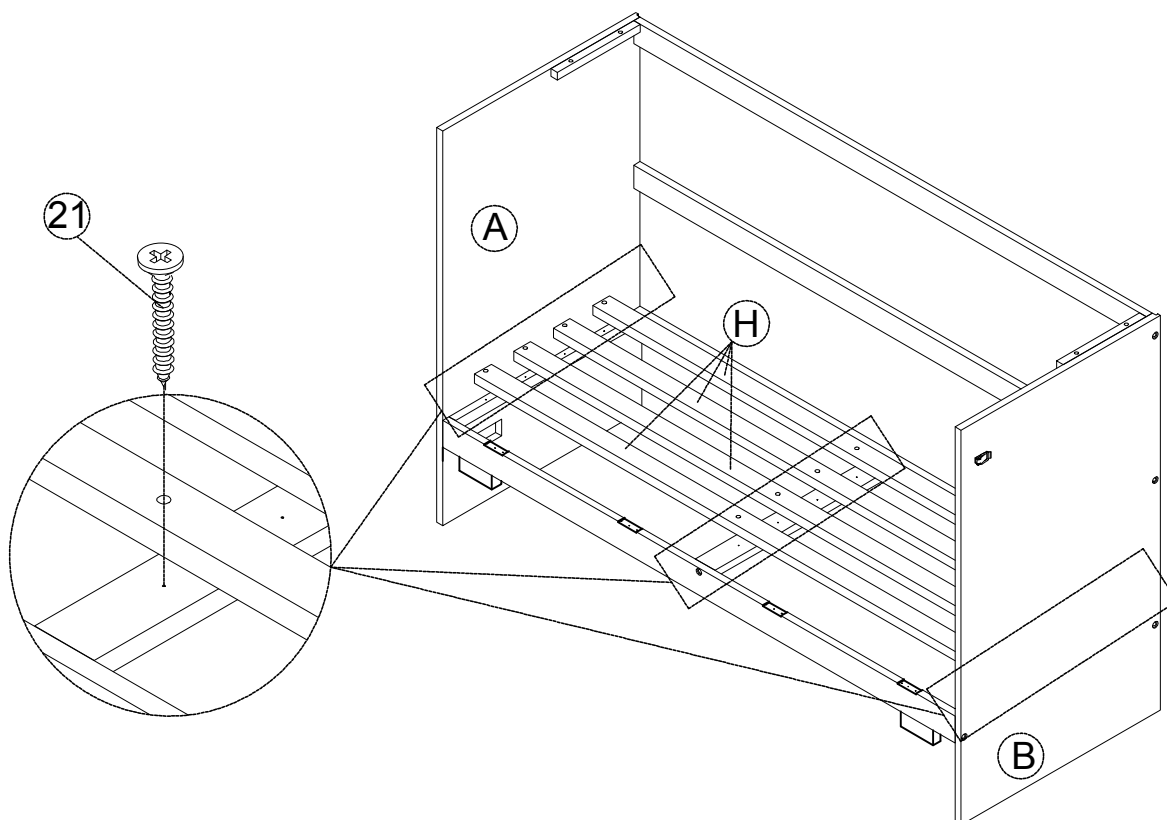

21




(12pcs)

STEP 5

19



(24pcs)

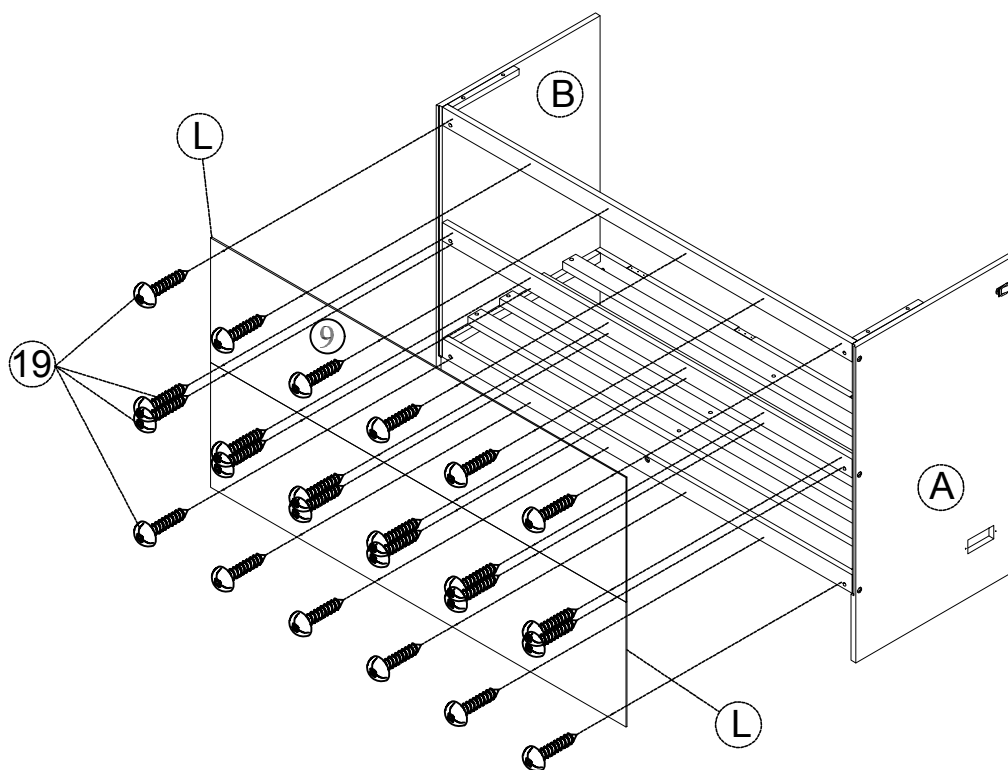

STEP 6

23




(3set)


22



(4pcs)

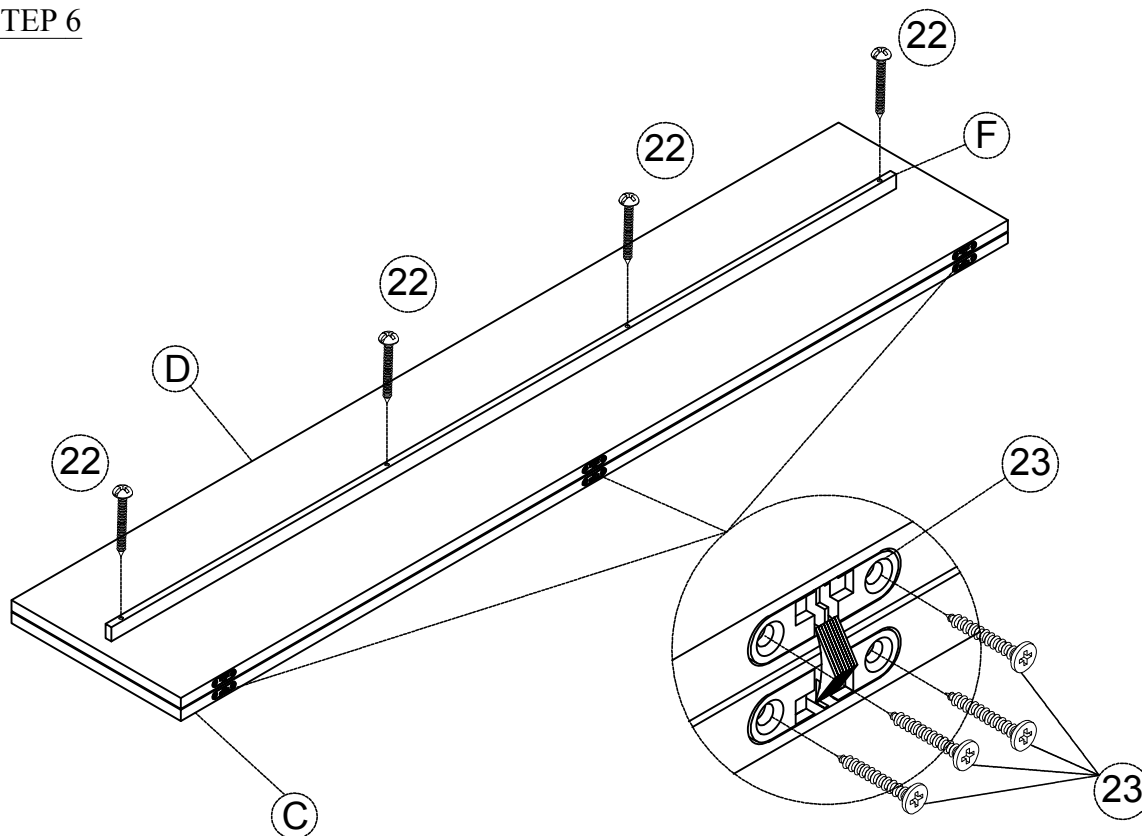

STEP 7

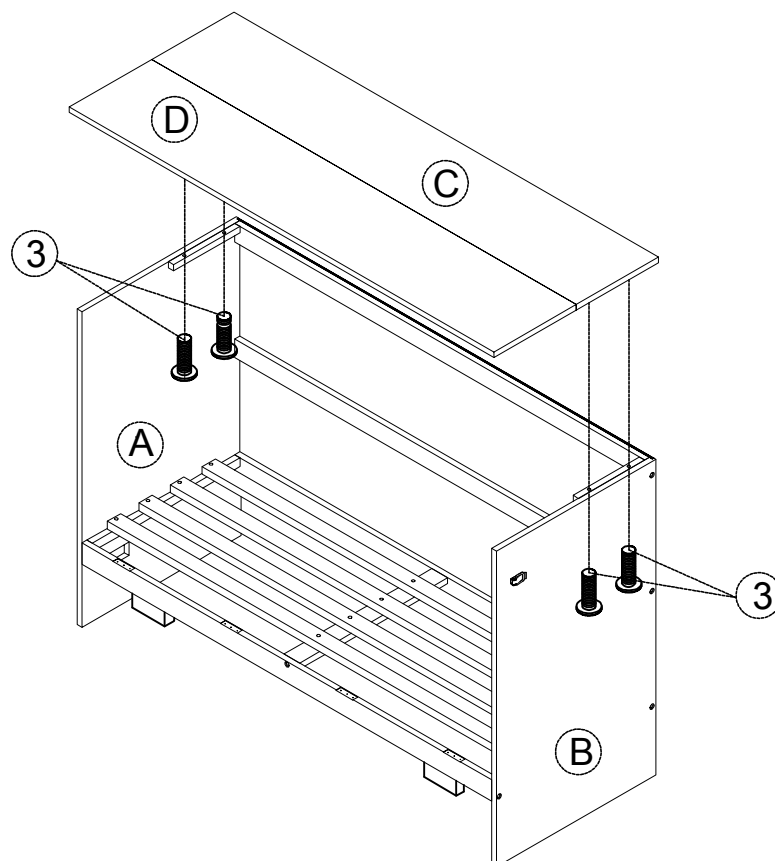


3



(4pcs)

STEP 8

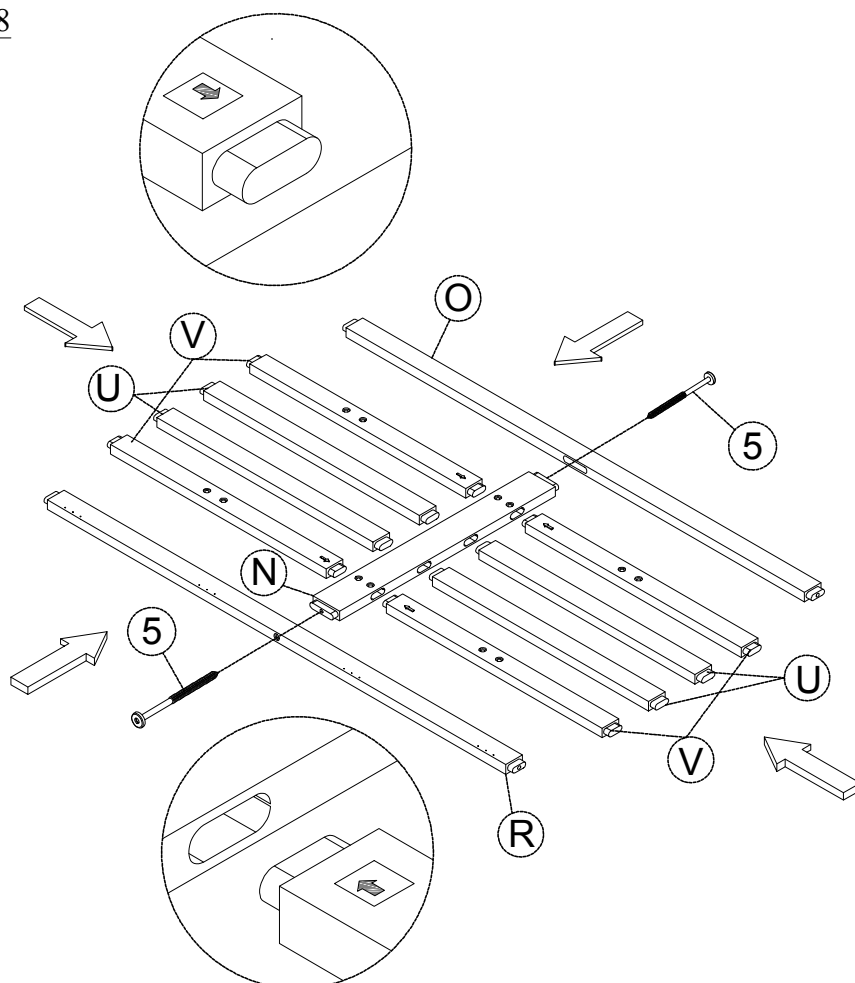


5



(2pcs)

STEP 9

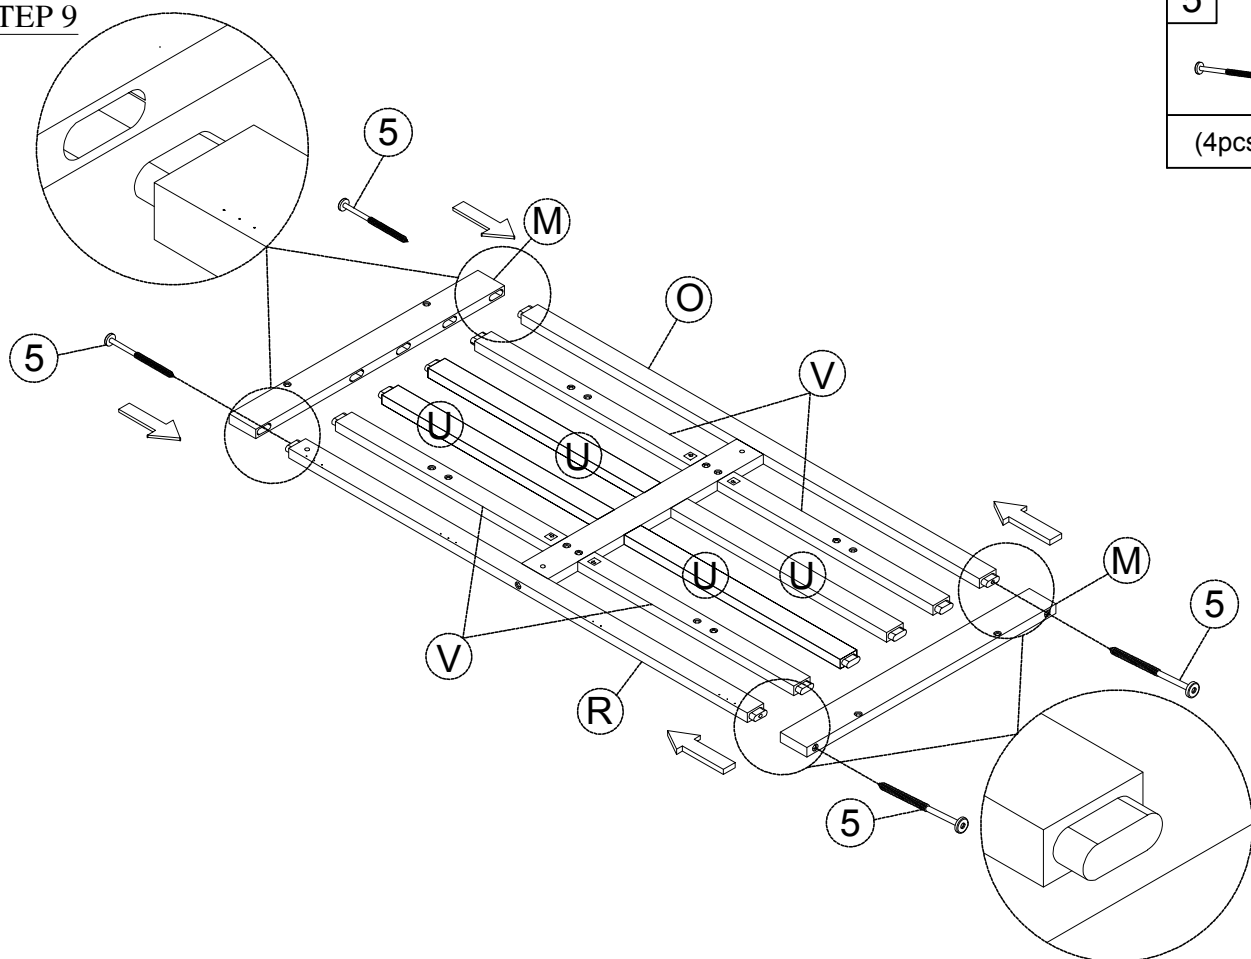


5



(4pcs)

STEP 10

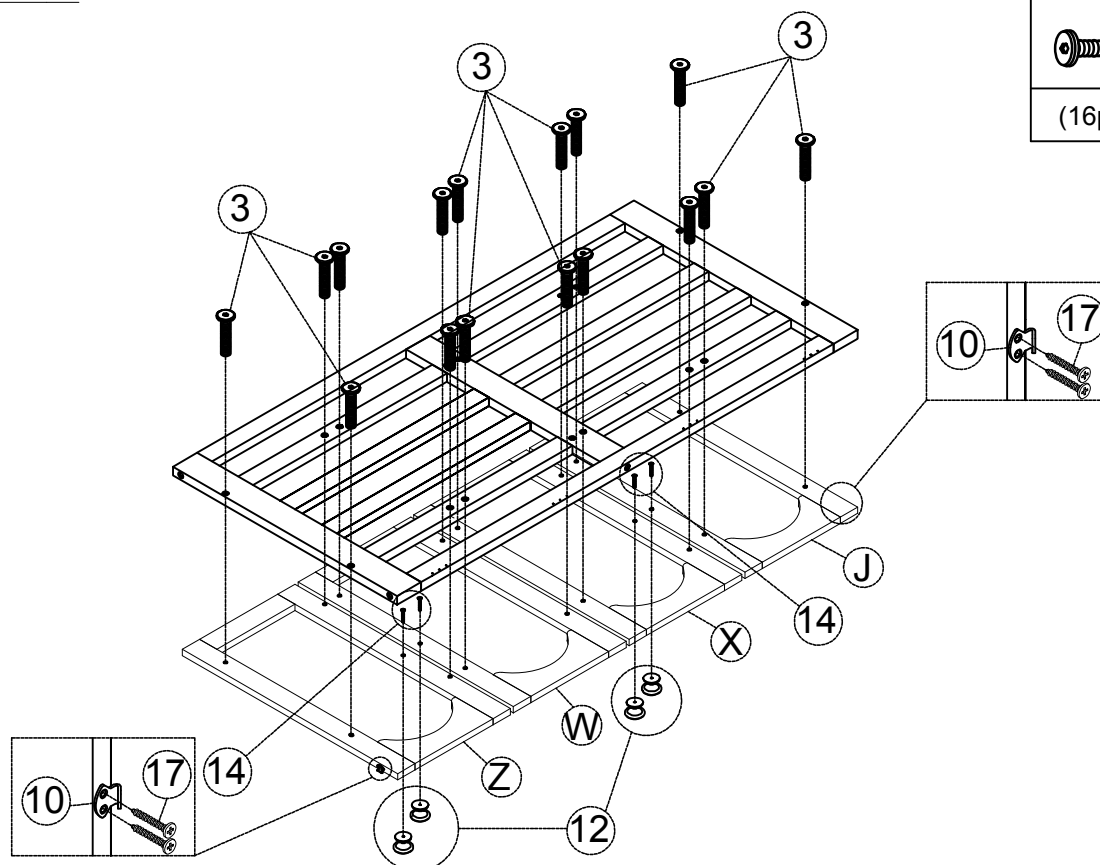

3



(16pcs)

12



(4pcs)

14



(4pcs)

10



(2pcs)

17




(4pcs)

STEP 11

5



(2pcs)

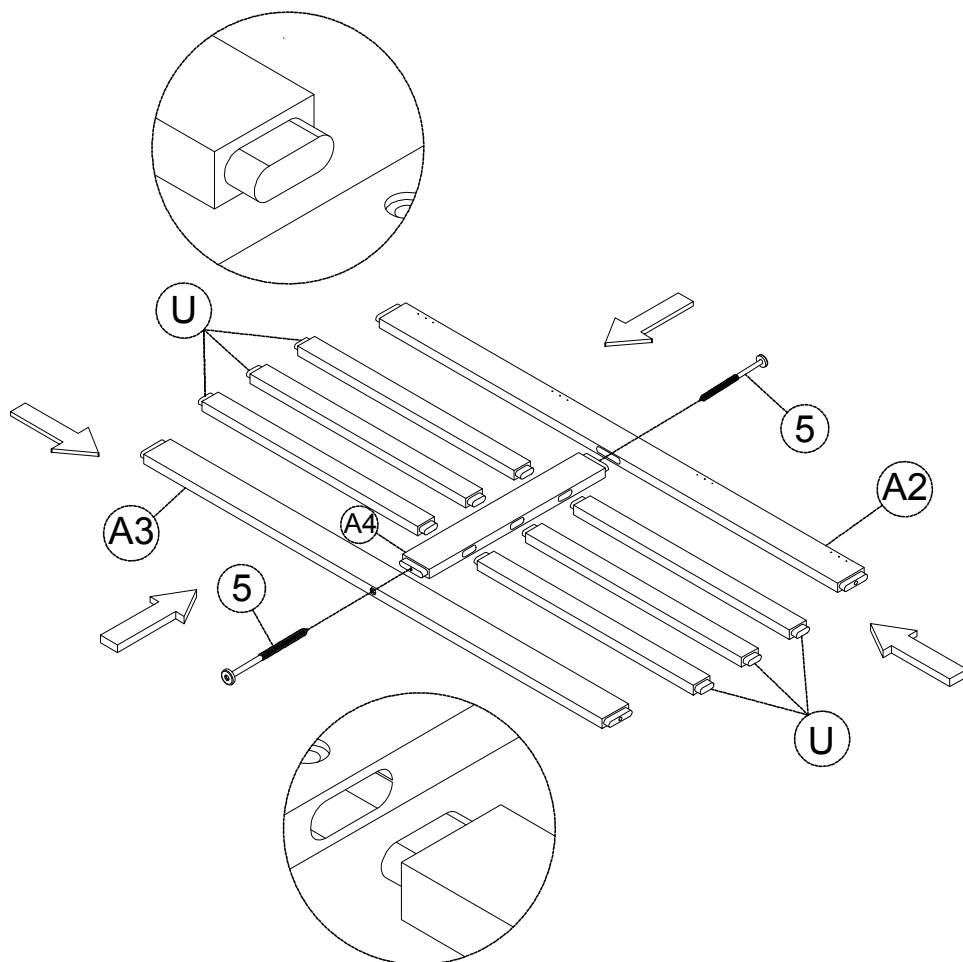


STEP 12


5



(4pcs)

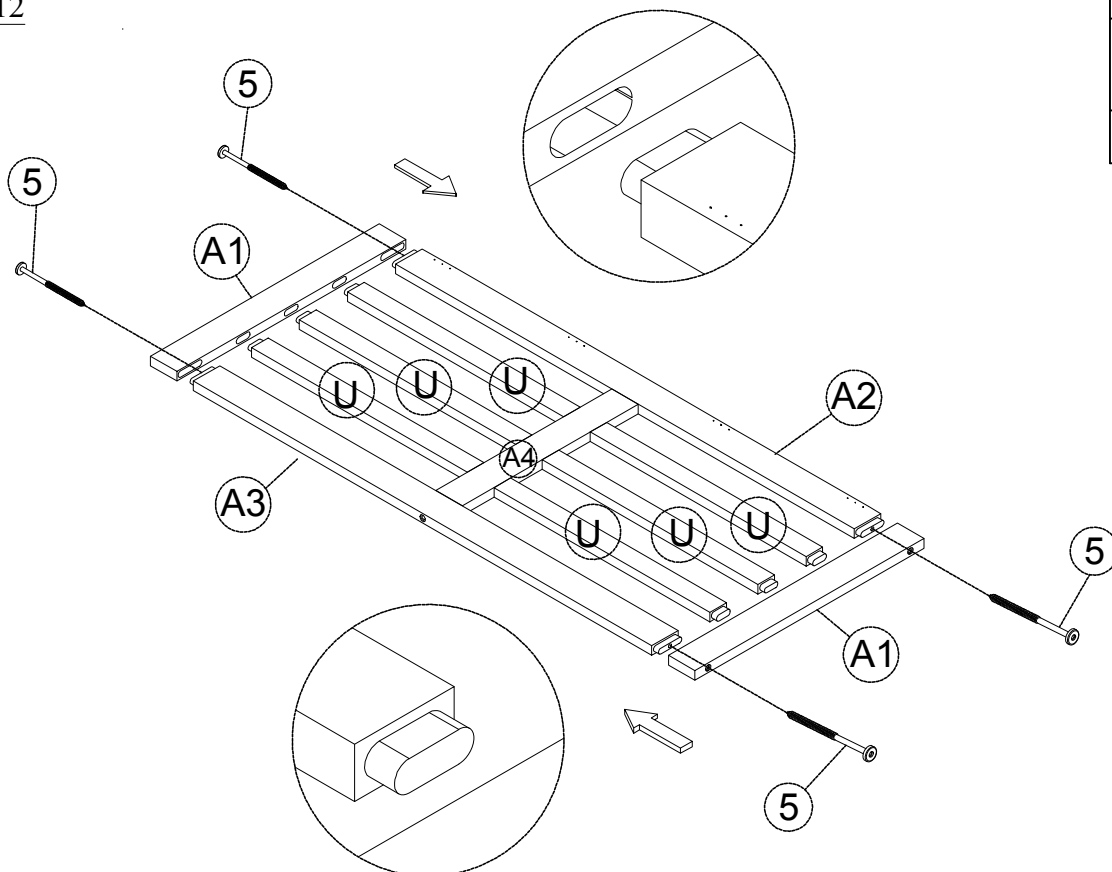

STEP 13

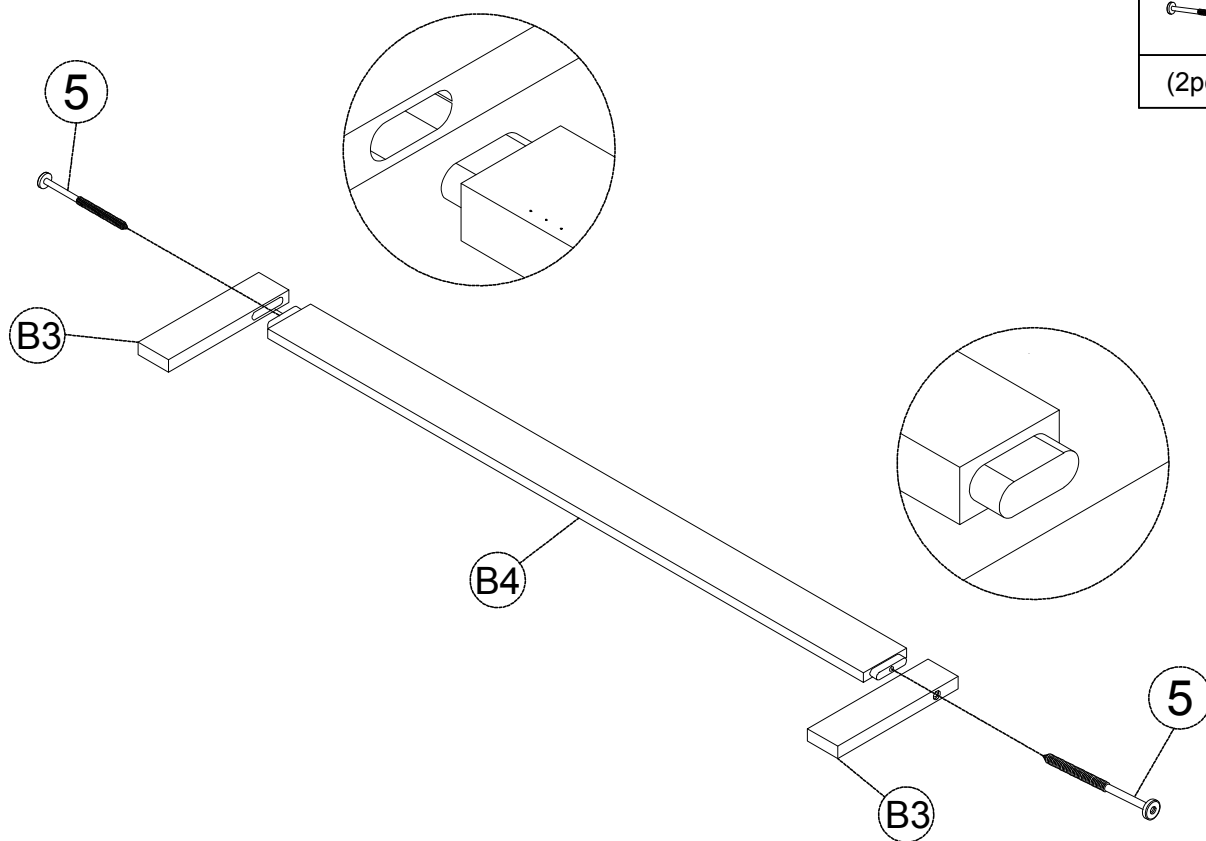


5



(2pcs)

STEP 14

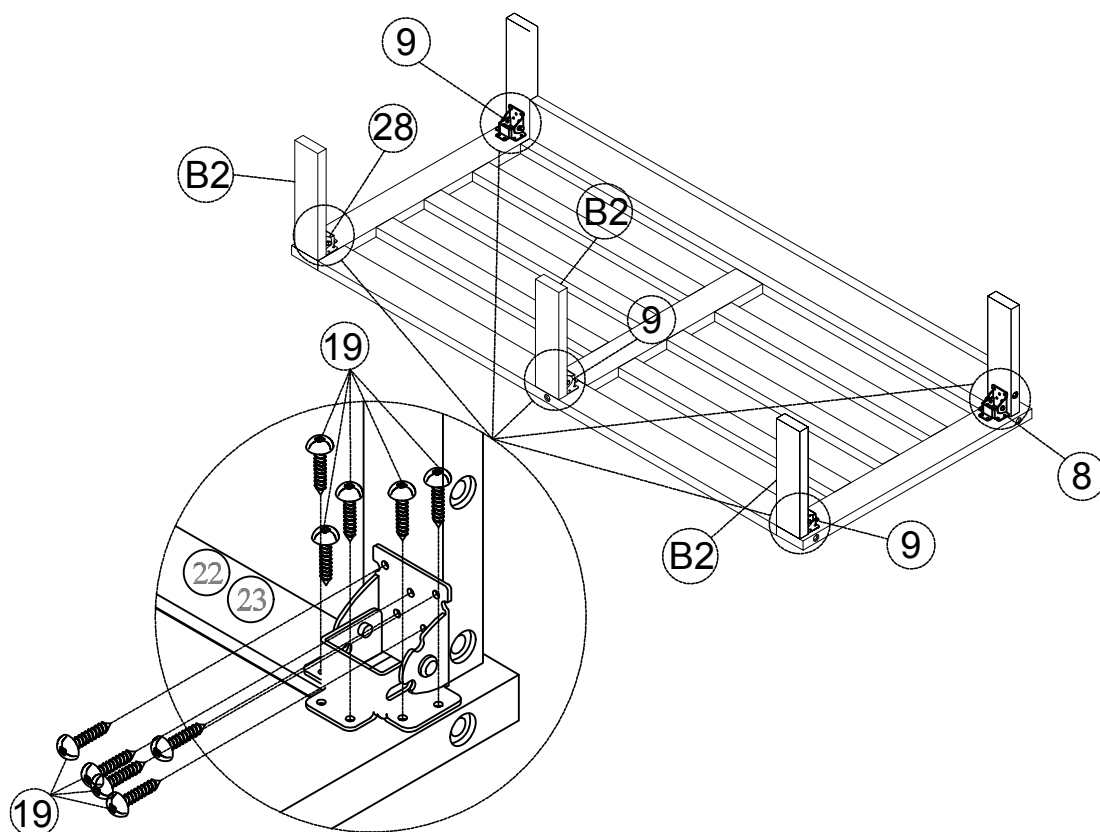

19



(50pcs)

9



(3pcs)

8




(1pcs)

28




(1pc)

STEP 15

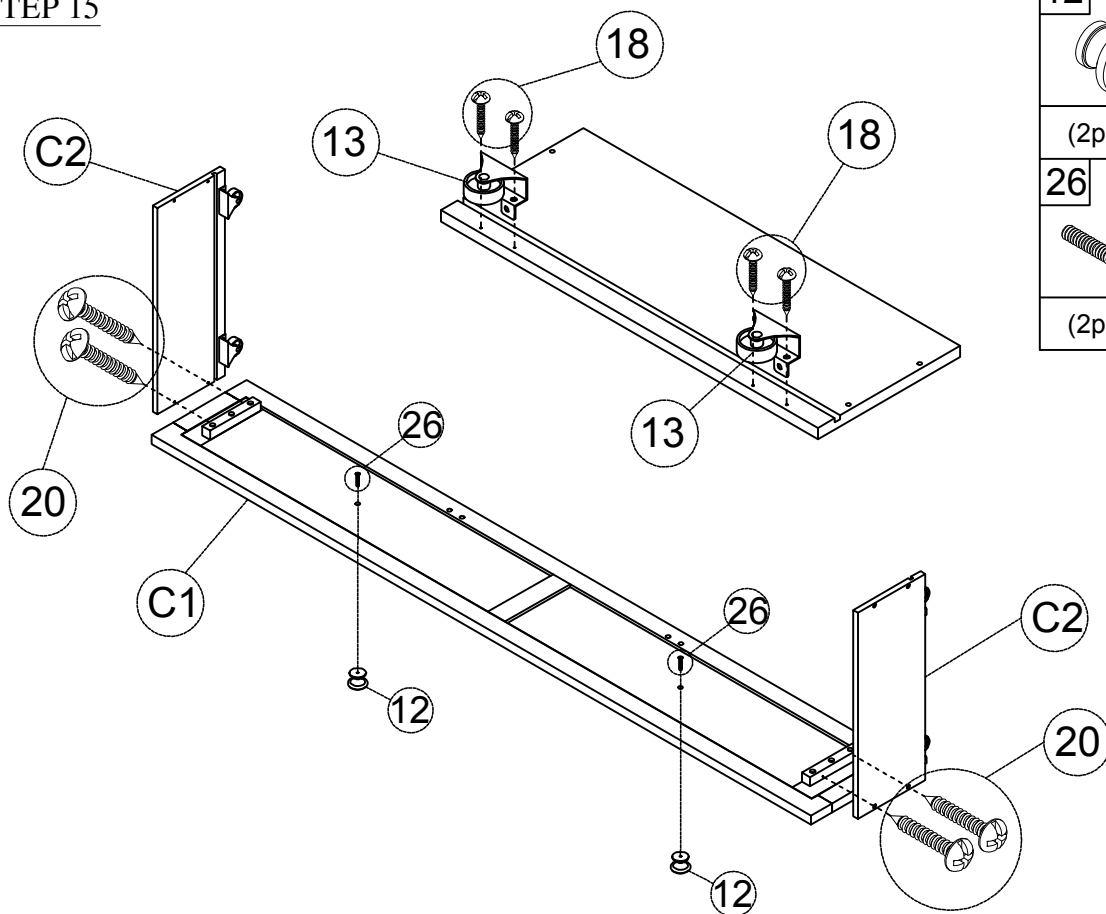

12	13
	
(2pcs)	(4pcs)
26	18
	
(2pcs)	(8pcs)
	20
	
	(4pcs)



STEP 16

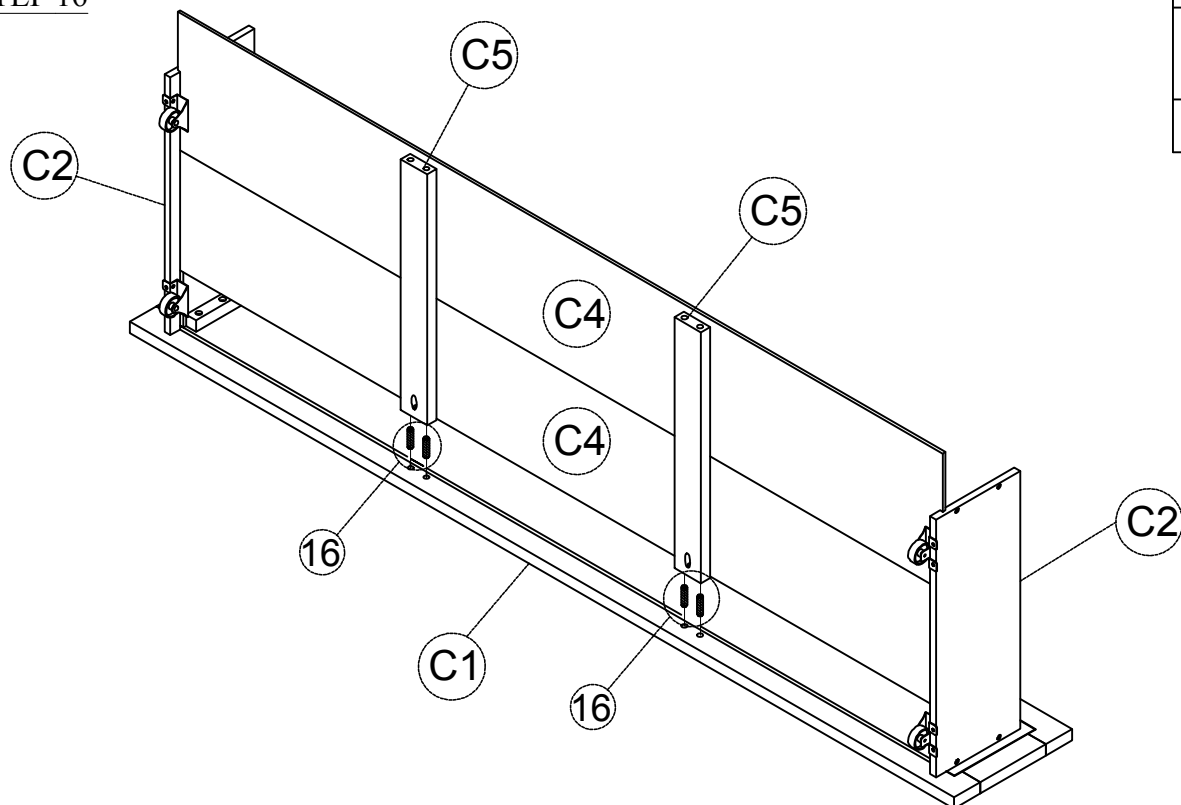


16

(4pcs)


STEP 17

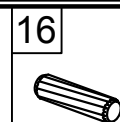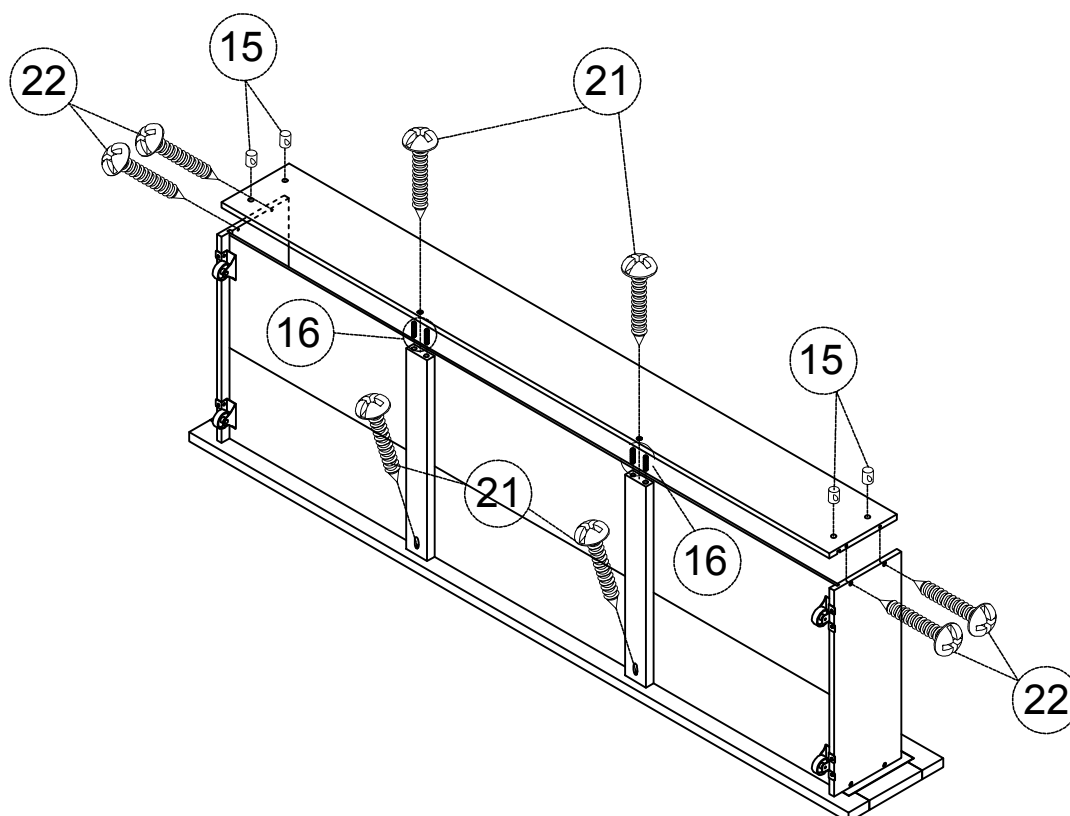


(4pcs)



(4pcs)




(4pcs)



(4pcs)

STEP 18

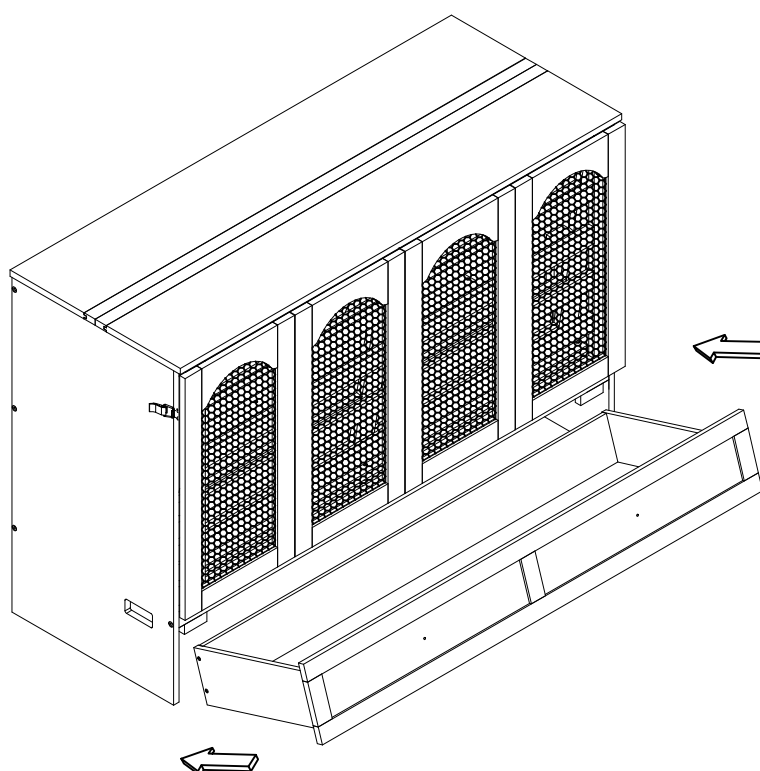


STEP 19

17



(64pcs)

6






(4pcs)

7




(4pcs)

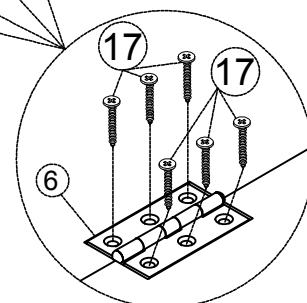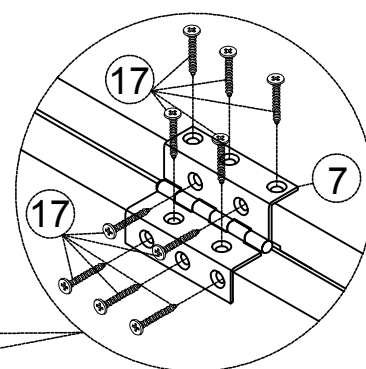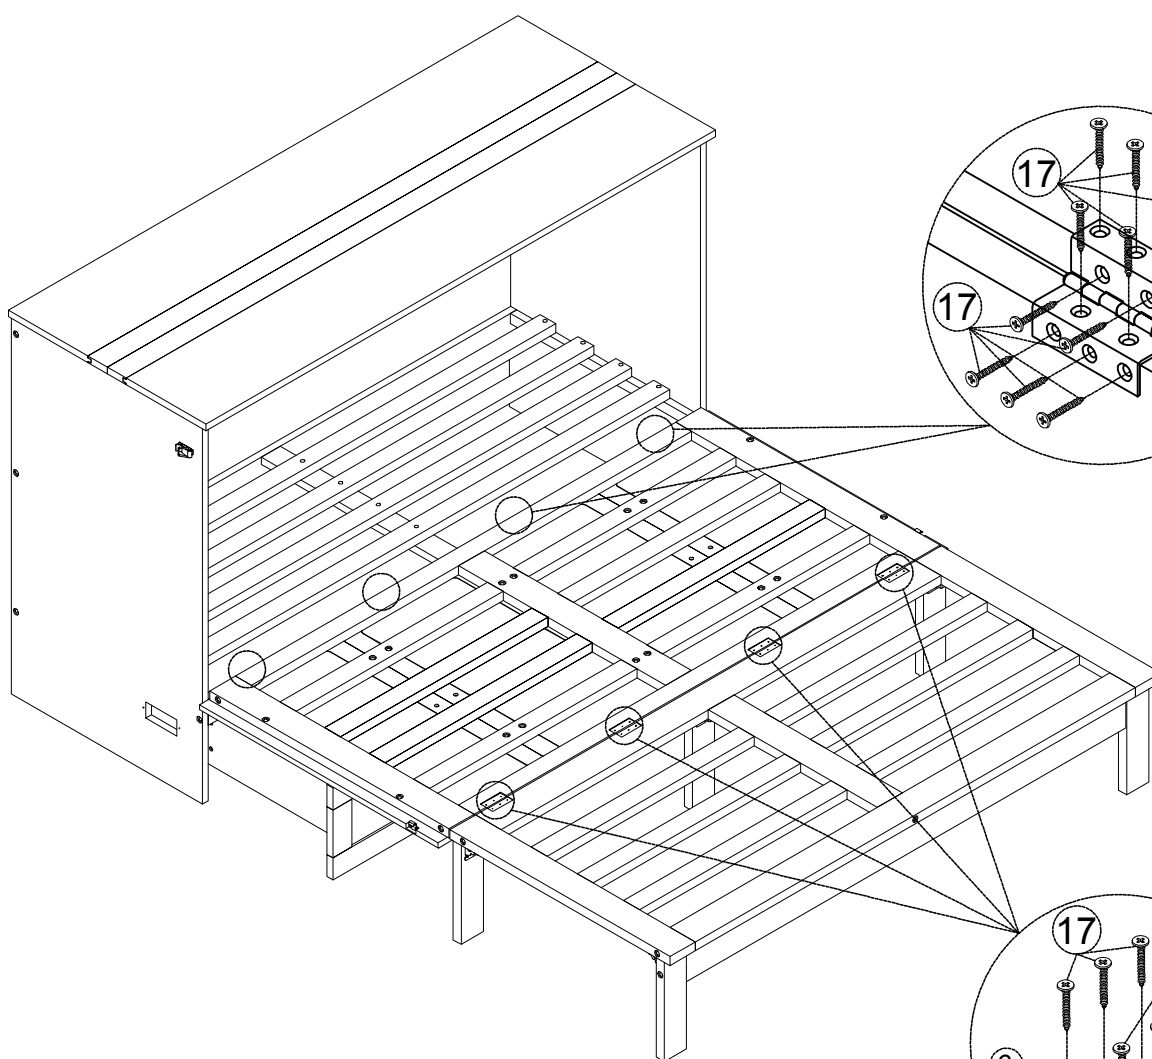

STEP 20

*** The Drawer Must Be Extended to a Minimum of Two-Thirds of its Full Length Before Lowering Down the Bed Frame.

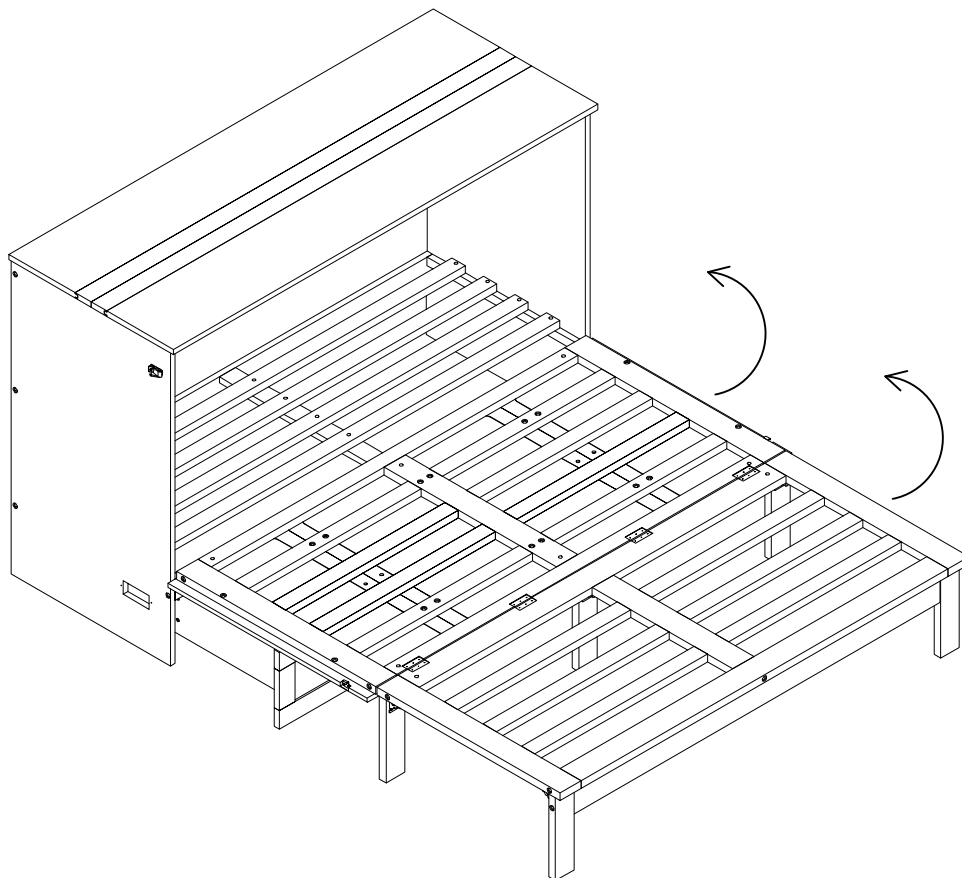

FINAL:

