

ASSEMBLY INSTRUCTIONS

A-78 PCS



B-78 PCS



Cams

C-26 PCS



Wooden dowels

D-12 PCS



(20mm)

E-6 PCS




F-8 PCS




H-12 PCS



(50mm)

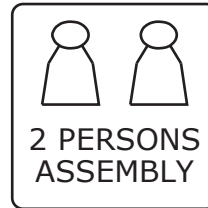

M-6 PCS



N-70 PCS



(M3.5×16mm)

P-8 PCS




Q-1 PC



R-1 PC




S-1 PC




(4mm)














T-1 PC















(6mm)


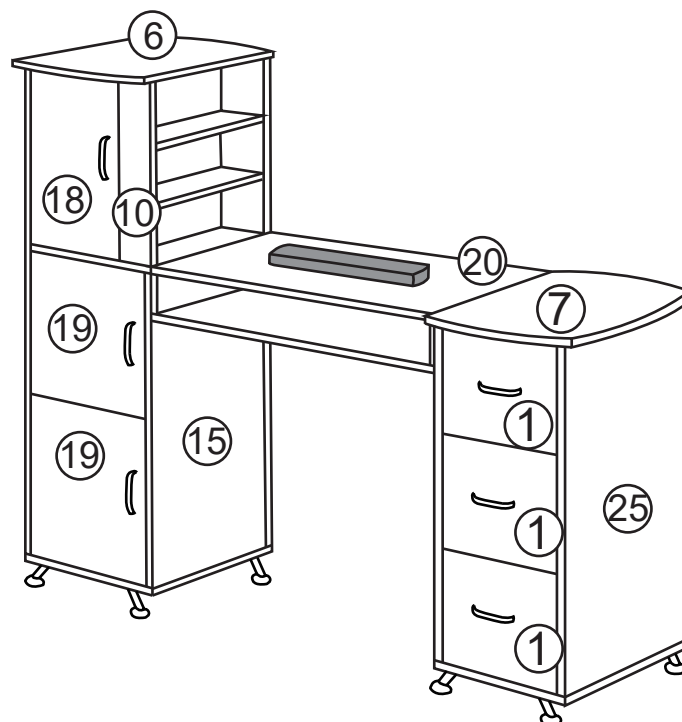


6154-2611

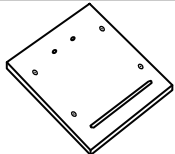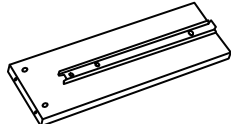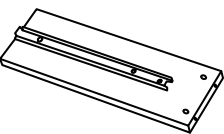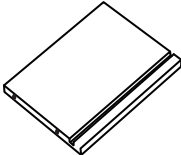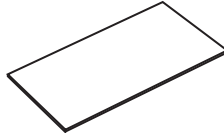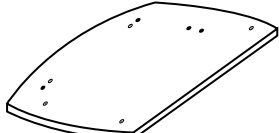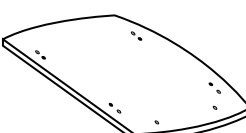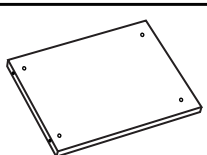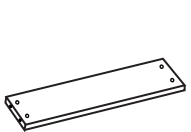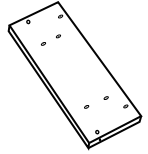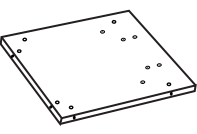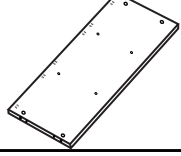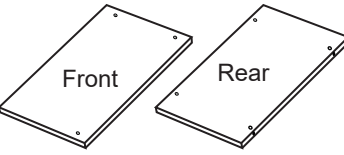
	314*202*16	3	①
	300*120*16	3	②
	300*120*16	3	③
	260*120*16	3	④
	293*270*3	3	⑤
	500*380*16	1	⑥
	500*380*16	1	⑦
	406*334*16	1	⑧
	406*83*16	2	⑨
	334*100*16	1	⑩
	334*334*16	1	⑪
	968*440*16	1	⑫
	440*336*16	1	⑬

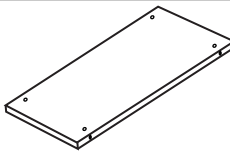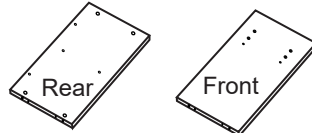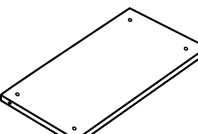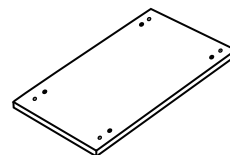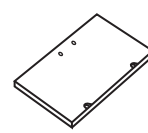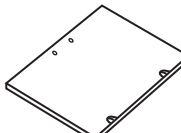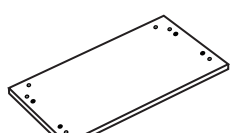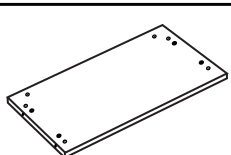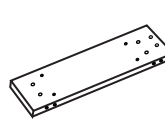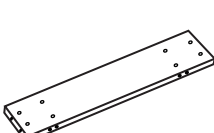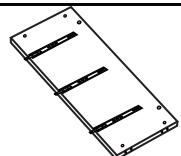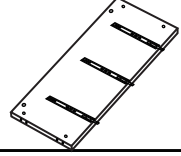	618*318*16	2	⑭
	618*440*16	1	⑮
	406*318*16	1	⑯
	442*352*16	2	⑰
	329*232*16	1	⑱
	305*314*16	2	⑲
	660*440*16	1	⑳
	660*440*16	1	㉑
	440*104*16	2	㉒
	628*104*16	1	㉓
	618*440*16	1	㉔
	618*440*16	1	㉕
	661*440*8	1	㉖


1 x3

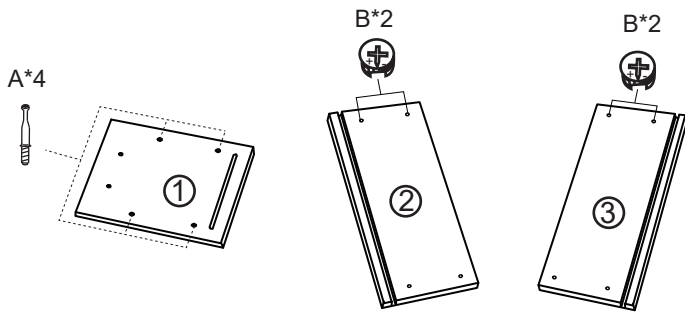


2 x3

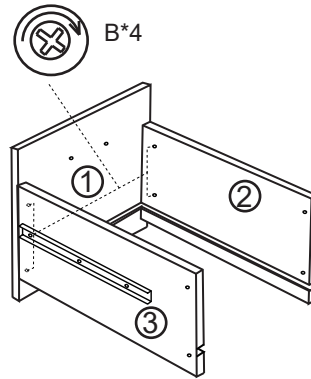



3 x3

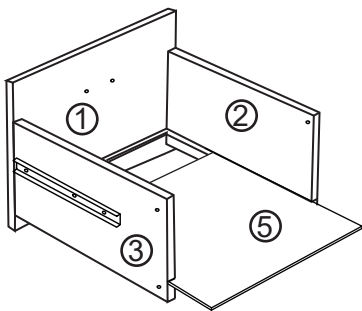


4 x3

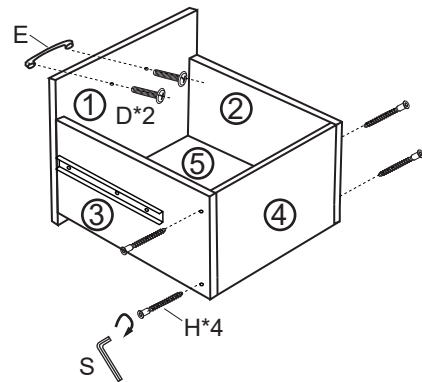


5

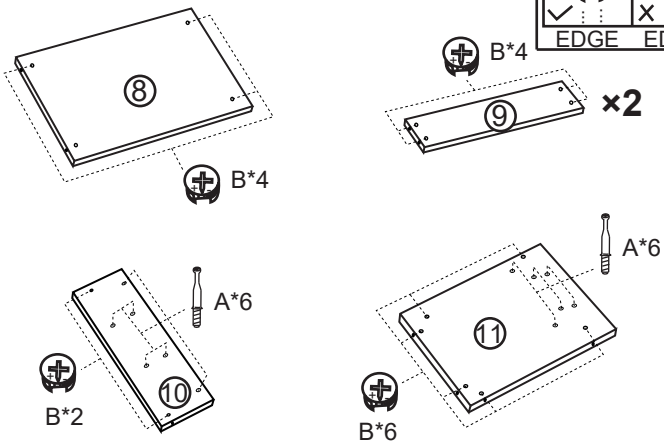



6

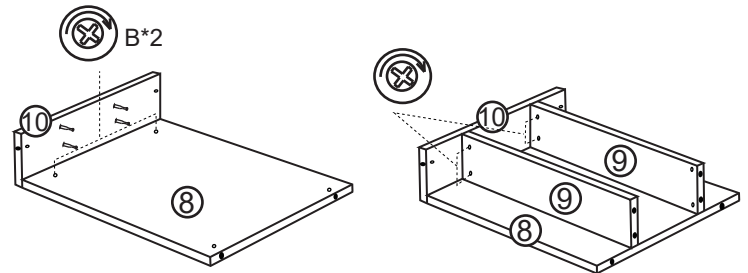


7

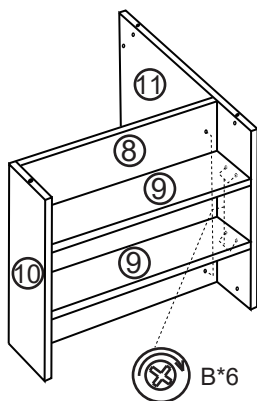


8

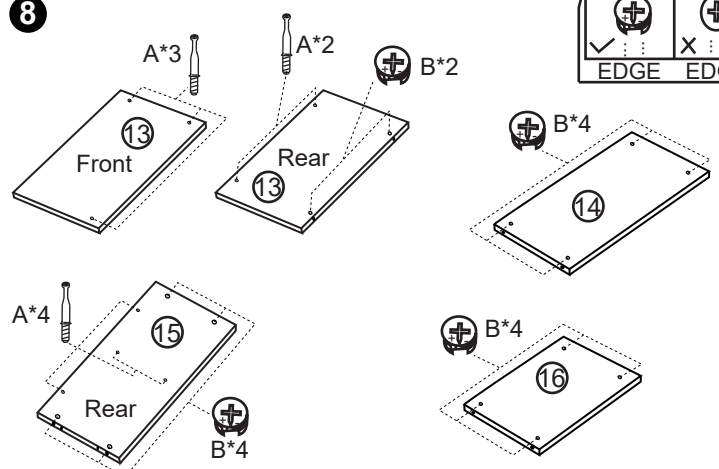


9

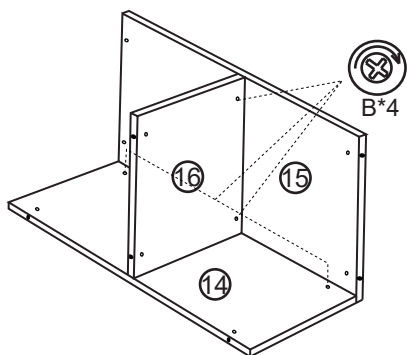


10

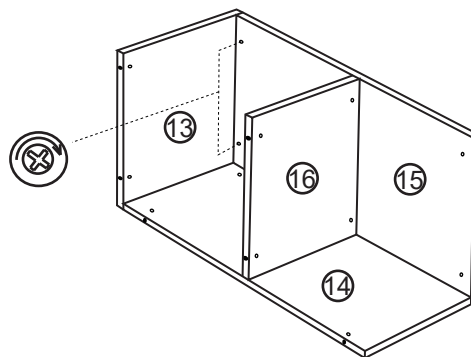


11

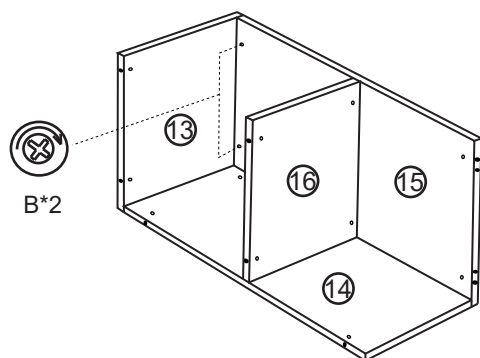


12

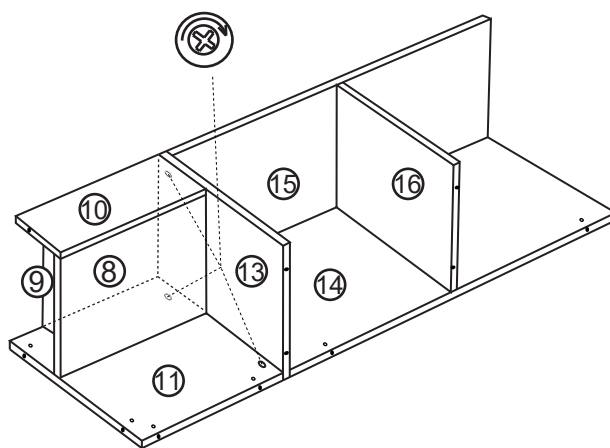


13

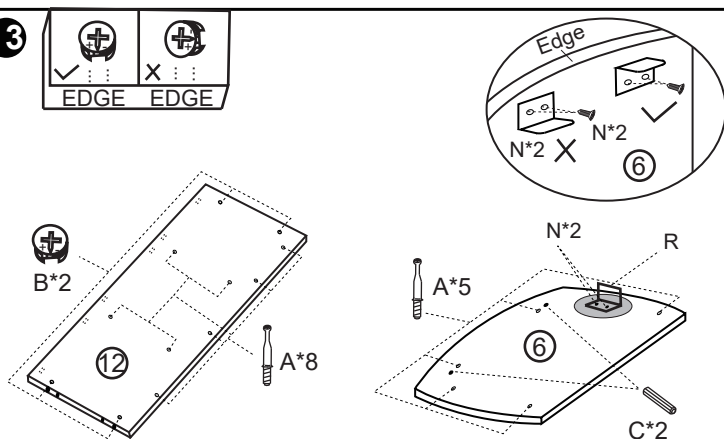


14

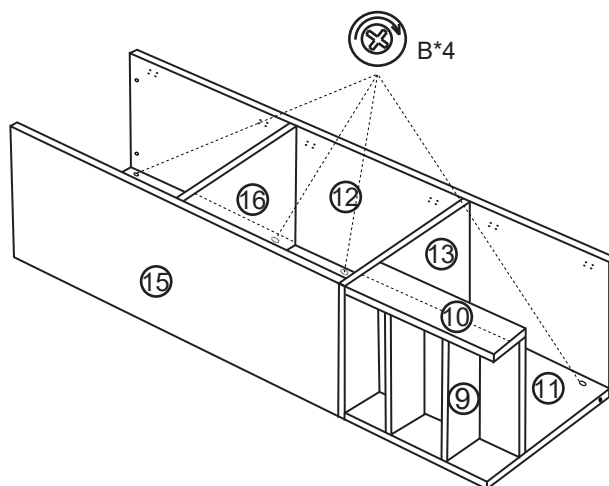


15 x2

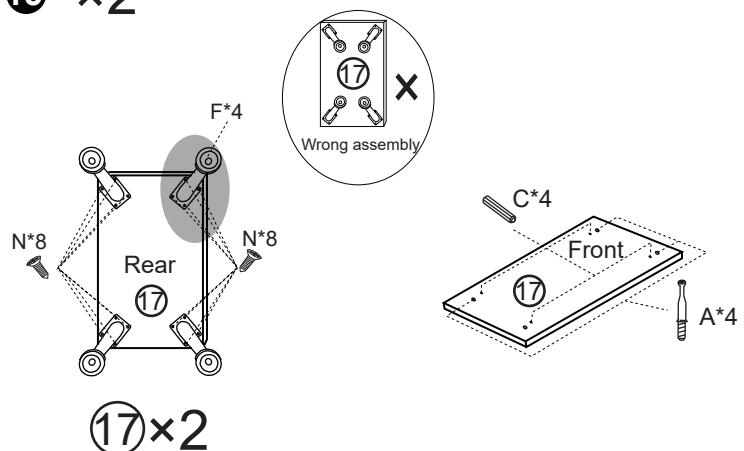


16

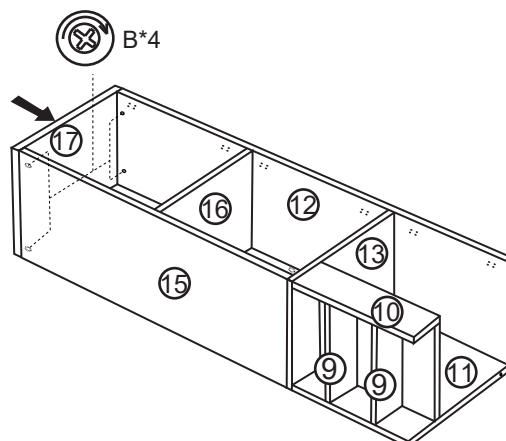


17

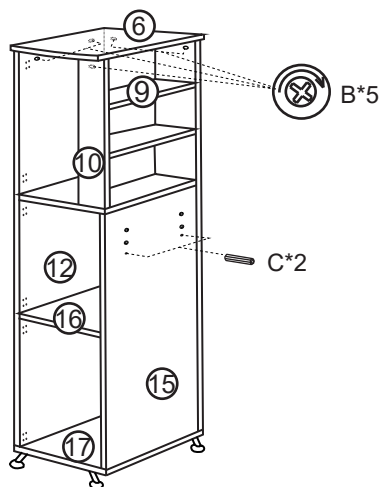


18

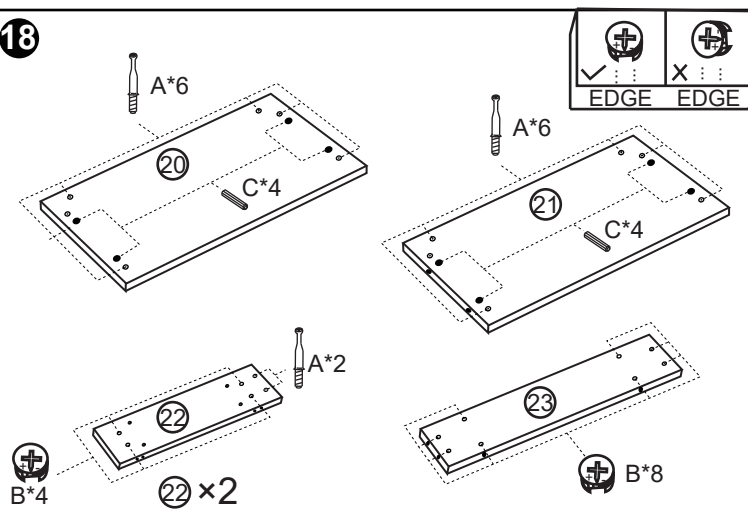


19

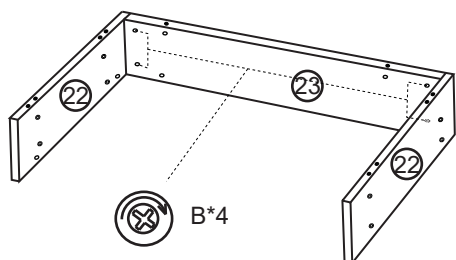


20

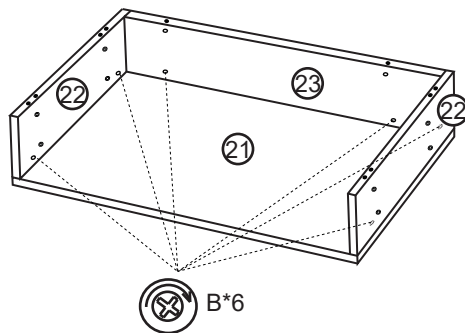


21

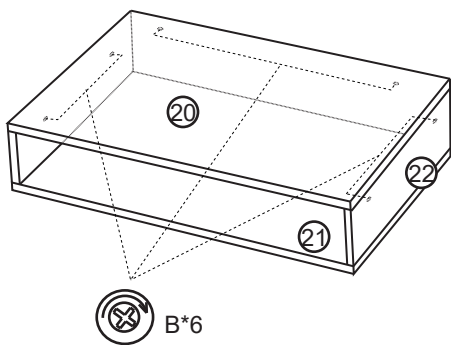


22

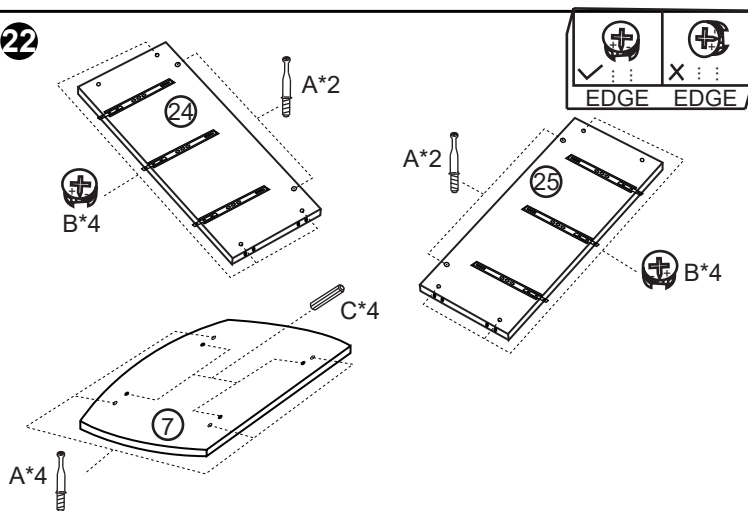


23

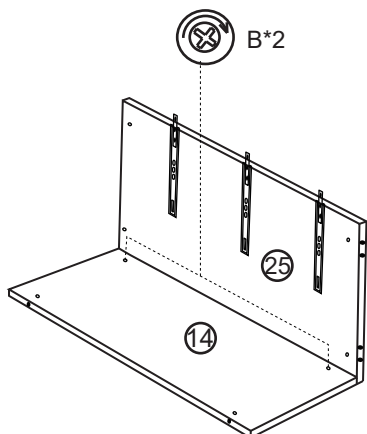


24

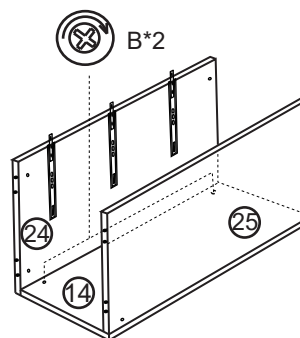


25

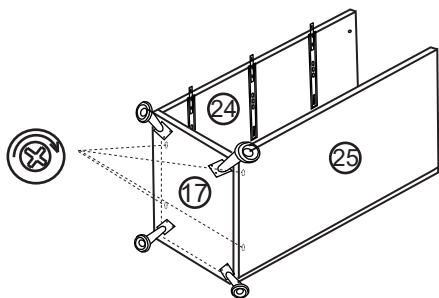


26

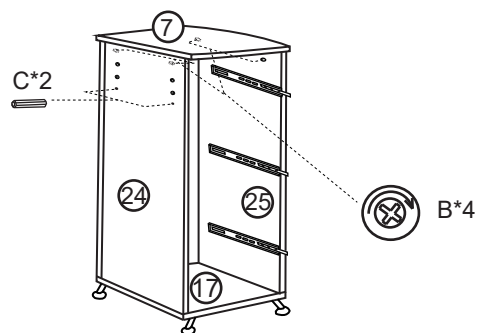


27

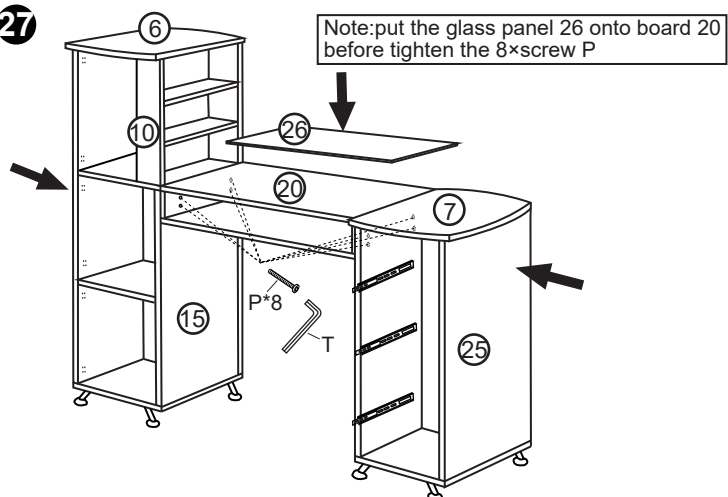

28

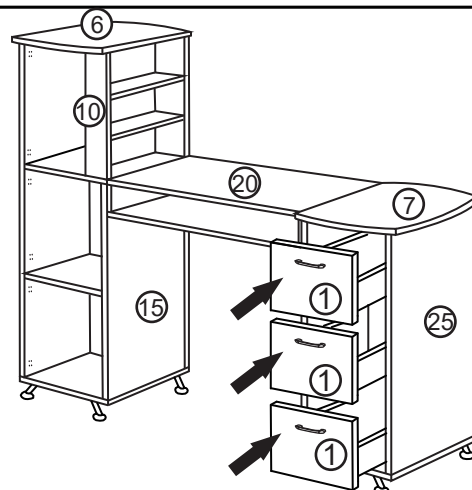


29

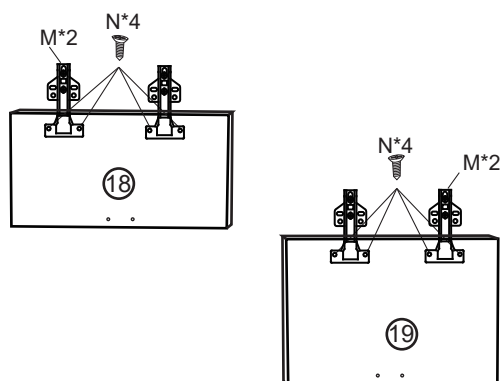


19 x 2

30


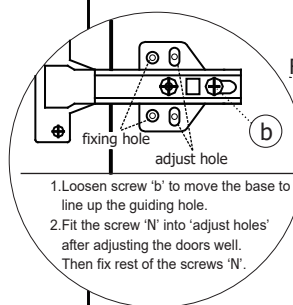


1. Loosen screw 'b' to move the base to line up the guiding hole.
2. Fit the screw 'N' into 'adjust holes' after adjusting the doors well. Then fix rest of the screws 'N'.

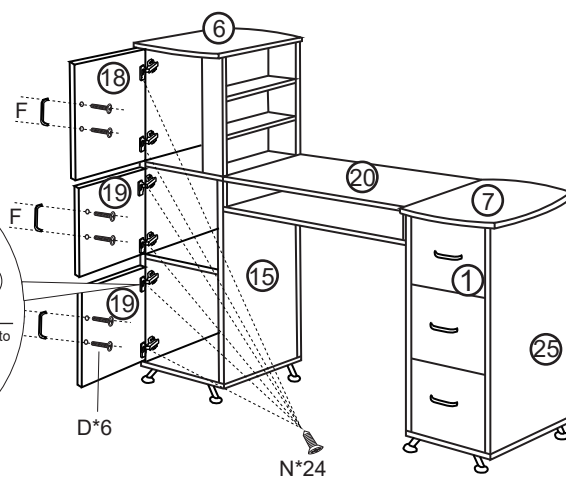

31

How to adjust the doors.

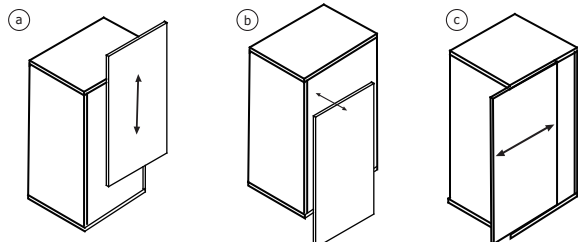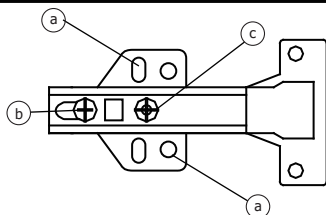

32

