








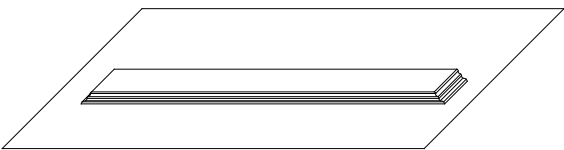
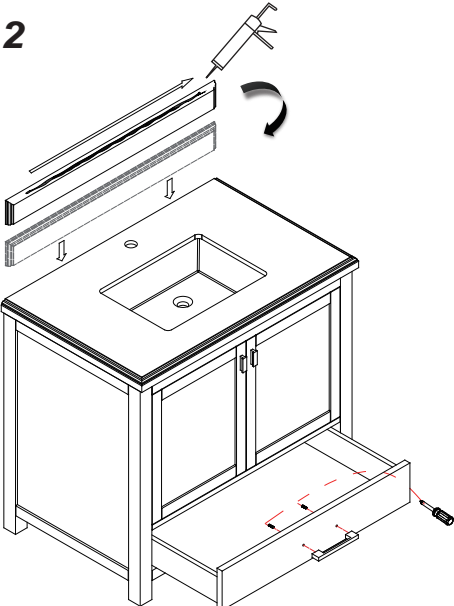
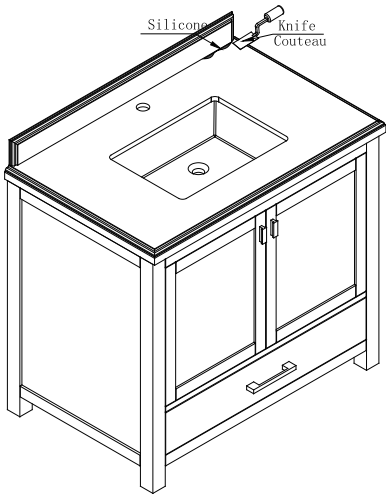
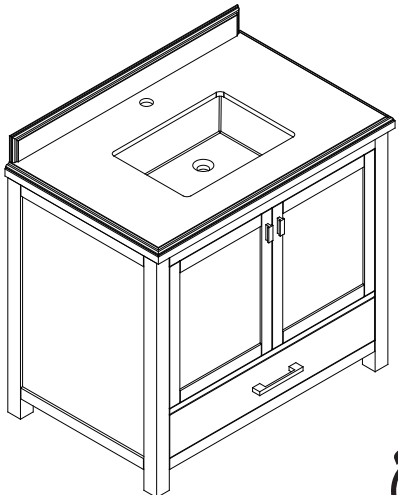



Installation Instructions

Notes: We recommend that you rough-in the drain and water lines after receiving the unit.
The vanity should be installed by a professional plumber.
Drainer pipe and trap are not included.
If you experience any difficulties with this product, do not return to the point of purchase.

Part List	A (cabinet)  x1	B (backsplash)  x1	C (screw)  x6	D (handle)  x2	D (handle)  x1
Tools required	 screwdriver(Phillips)	 silicone	 level	 tape measure	
<p>Step 1</p> <p>CAUTION Handle the backsplash with extreme care! Stone backsplash are very fragile. Always handle gently and place them flat on a soft surface.</p> 					
<p>Step 2</p> 					
<p>Step 3</p> 					
<p>Step 4</p>  <div data-bbox="1326 1995 1458 2092">  24h </div>					