


ASSEMBLY INSTRUCTIONS:

FULL HEADBOARD

VERSION 1.1

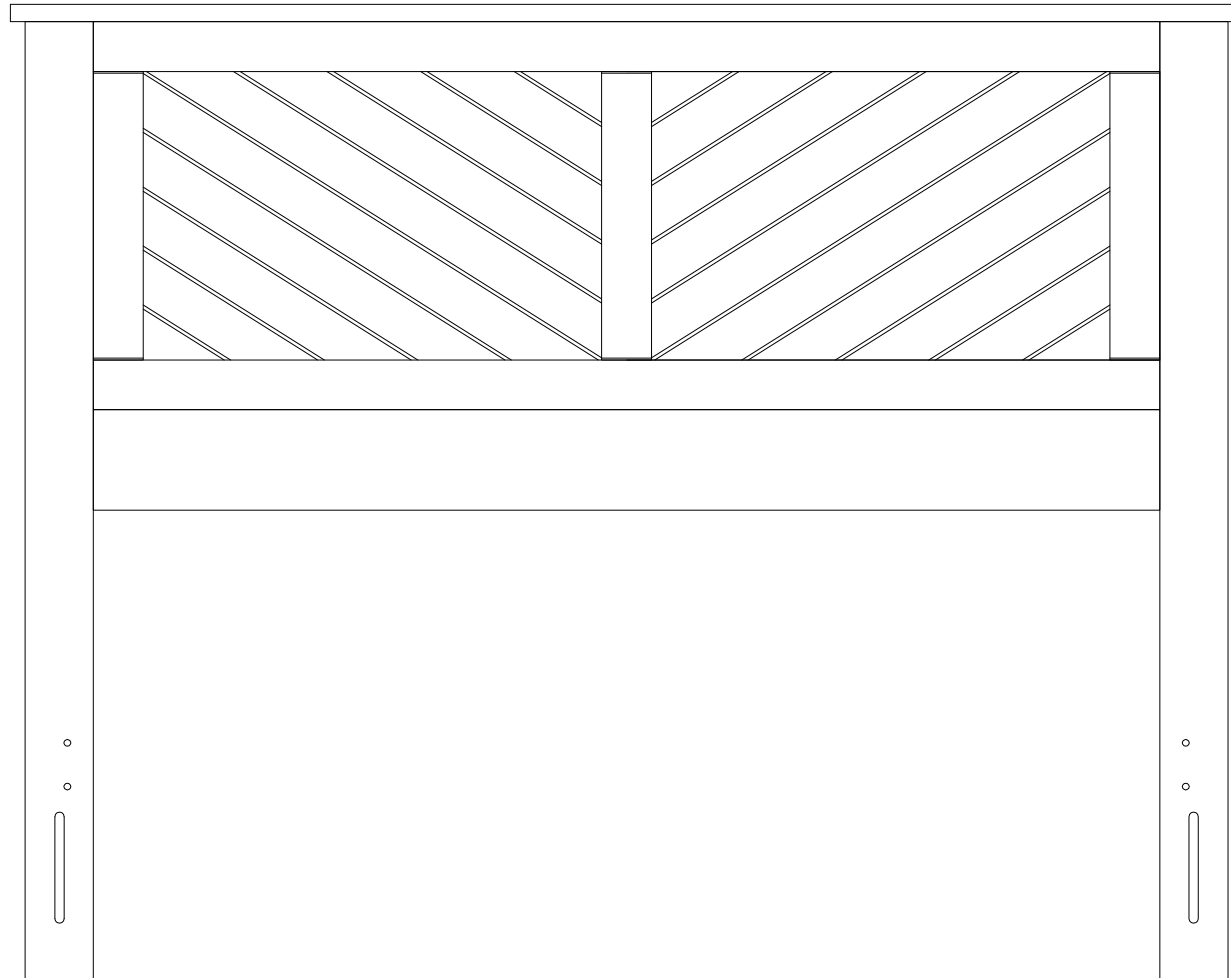

FULL HEADBOARD

Page 2 of 8

ASSEMBLY INSTRUCTIONS


Read these instructions carefully and keep for future reference. Refer to parts inventory for guidance, and ensure you have all pieces before starting.

When assembling, place all parts on a soft, clean, and flat surface such as a carpet to prevent scratches.


If you're having difficulty, our friendly Customer Care team is always here to help.

Attention : Veuillez Lire Toutes Les Instructions Avant De Commencer L'assemblage De Ce Produit. Les Pièces Sont Lourdes. Pour Éviter Toute Blessure Et Pour Vous Assurer Que Le Produit N'est Pas Endommagé Pendant L'assemblage, Nous Vous Recommandons De Faire Appel À Une Ou Plusieurs Autres Personnes.


Cuidado: Favor De Leer Todas Las Instrucciones Antes De Ensamblar Su Producto. Estas Piezas Son Pesadas. Para Prevenir Heridas Personales Y Asegurar Que Su Producto No Sea Dañado Mientras Es Ensamblado, Se Recomienda La Asistencia De Una O Más Personas.

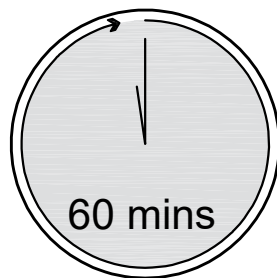

TIME

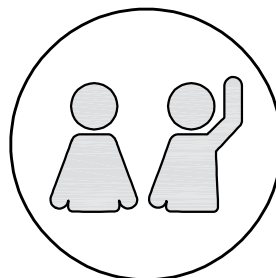

OF PEOPLE

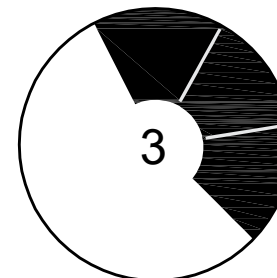




DIFFICULTY

Important: Use hand tools for assembly. Power tools can lead to over-tightening and damage.






FULL HEADBOARD

Page 3 of 8

Parts List



CODE	DESCRIPTION	QTY
A3	Headboard Top 	1 pc
B3	Crossbar Top 	1 pc
F3	Headboard 	1 pc
C3	Crossbar 	1 pc
D3	Crossbar Bottom 	1 pc
G-R	Right Leg 	1 pc
G-L	Left Leg 	1 pc

Hardware List



CODE	DESCRIPTION	QTY
1	Dowel Ø8x1-1/8" 	7 pcs
2	Cam Lock Bolt Ø1/4"x1-3/8" 	19 pcs
3	Cam Lock Ø15 	19 pcs
4	Flat Head Screwdriver 	1 pc
5	Philips Head Screwdriver 	1 pc

FULL HEADBOARD

1

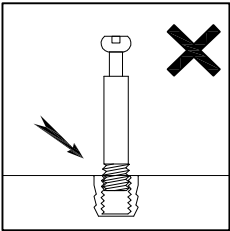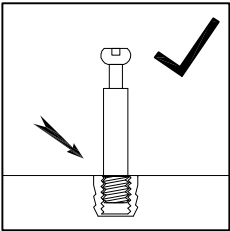

5



2

Ø1/4"x1-3/8" 18 pcs



1

Ø8x1-1/8" 6 pcs

A3

G-L

G-R

B3



C3

1

2



FULL HEADBOARD

2

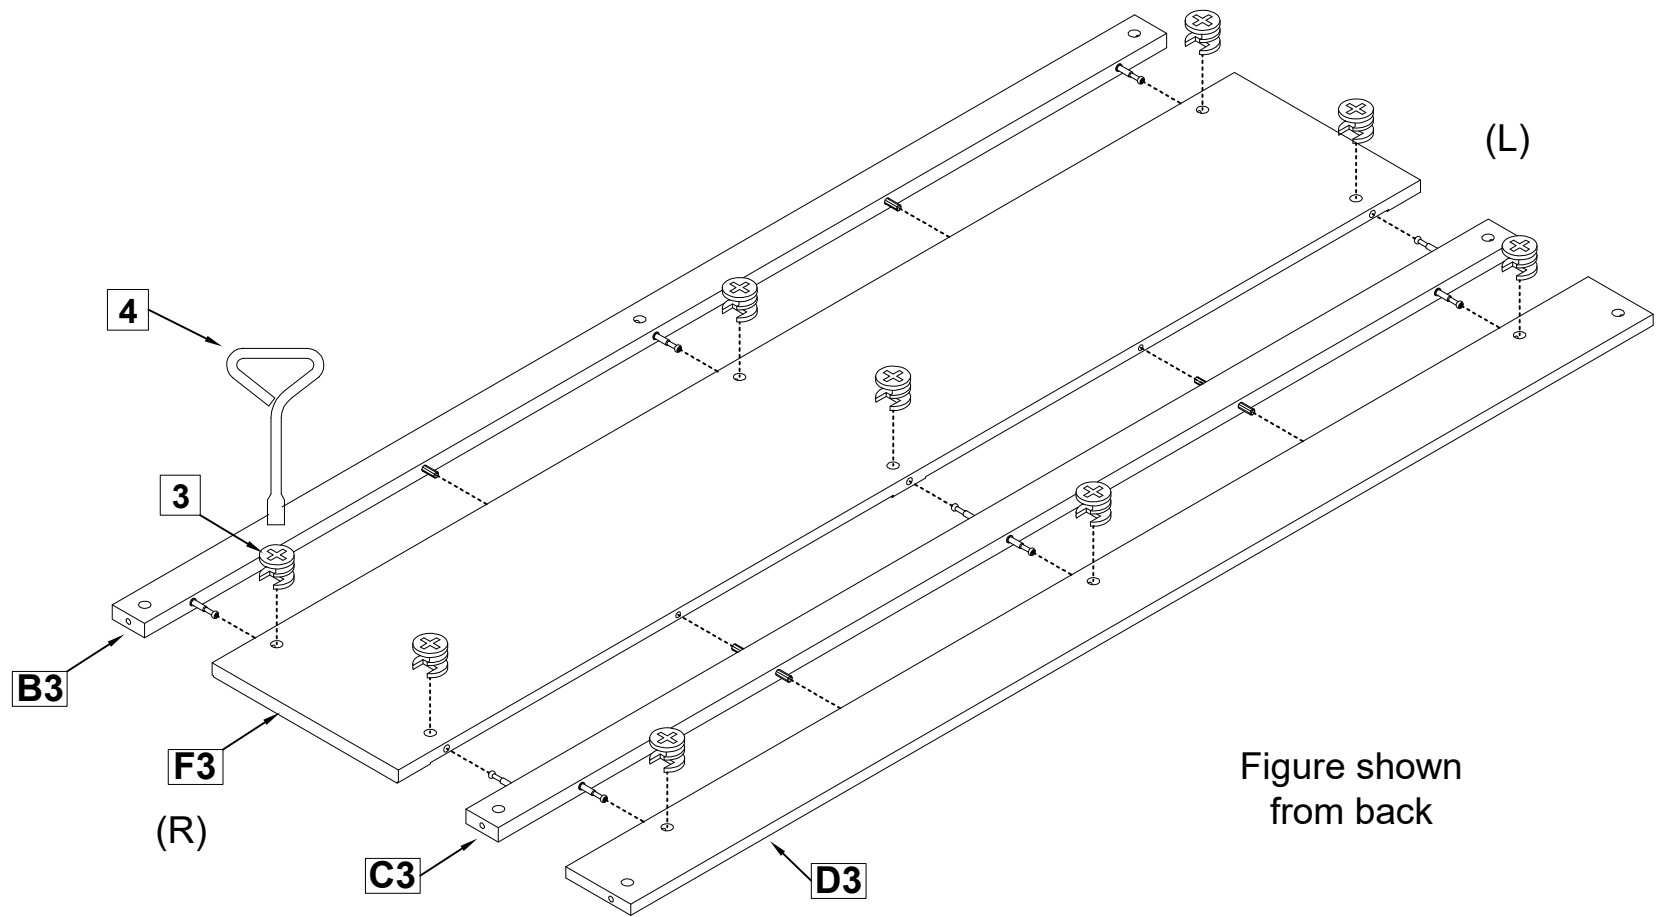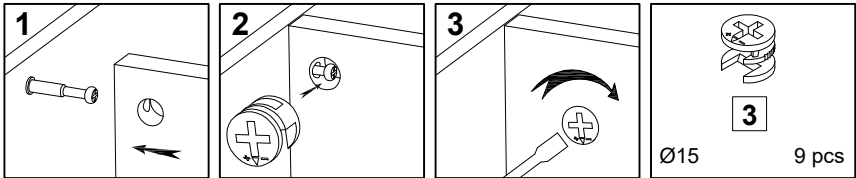



FULL HEADBOARD

3

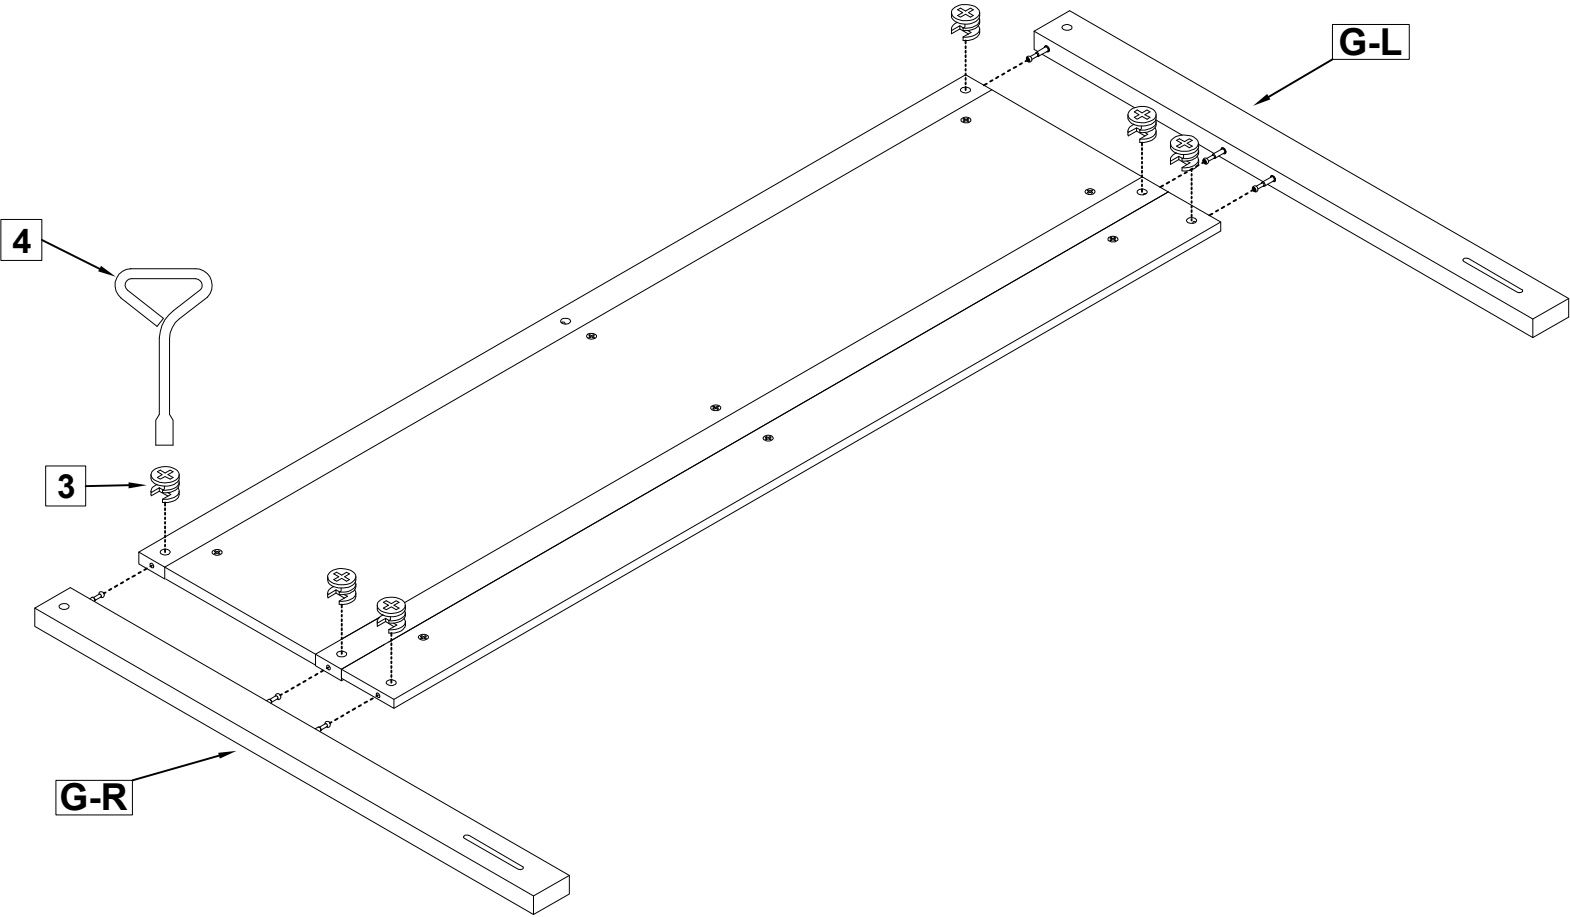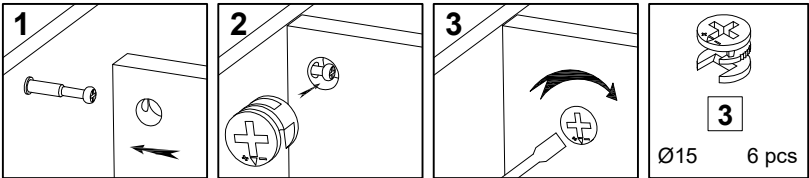


FULL HEADBOARD

4

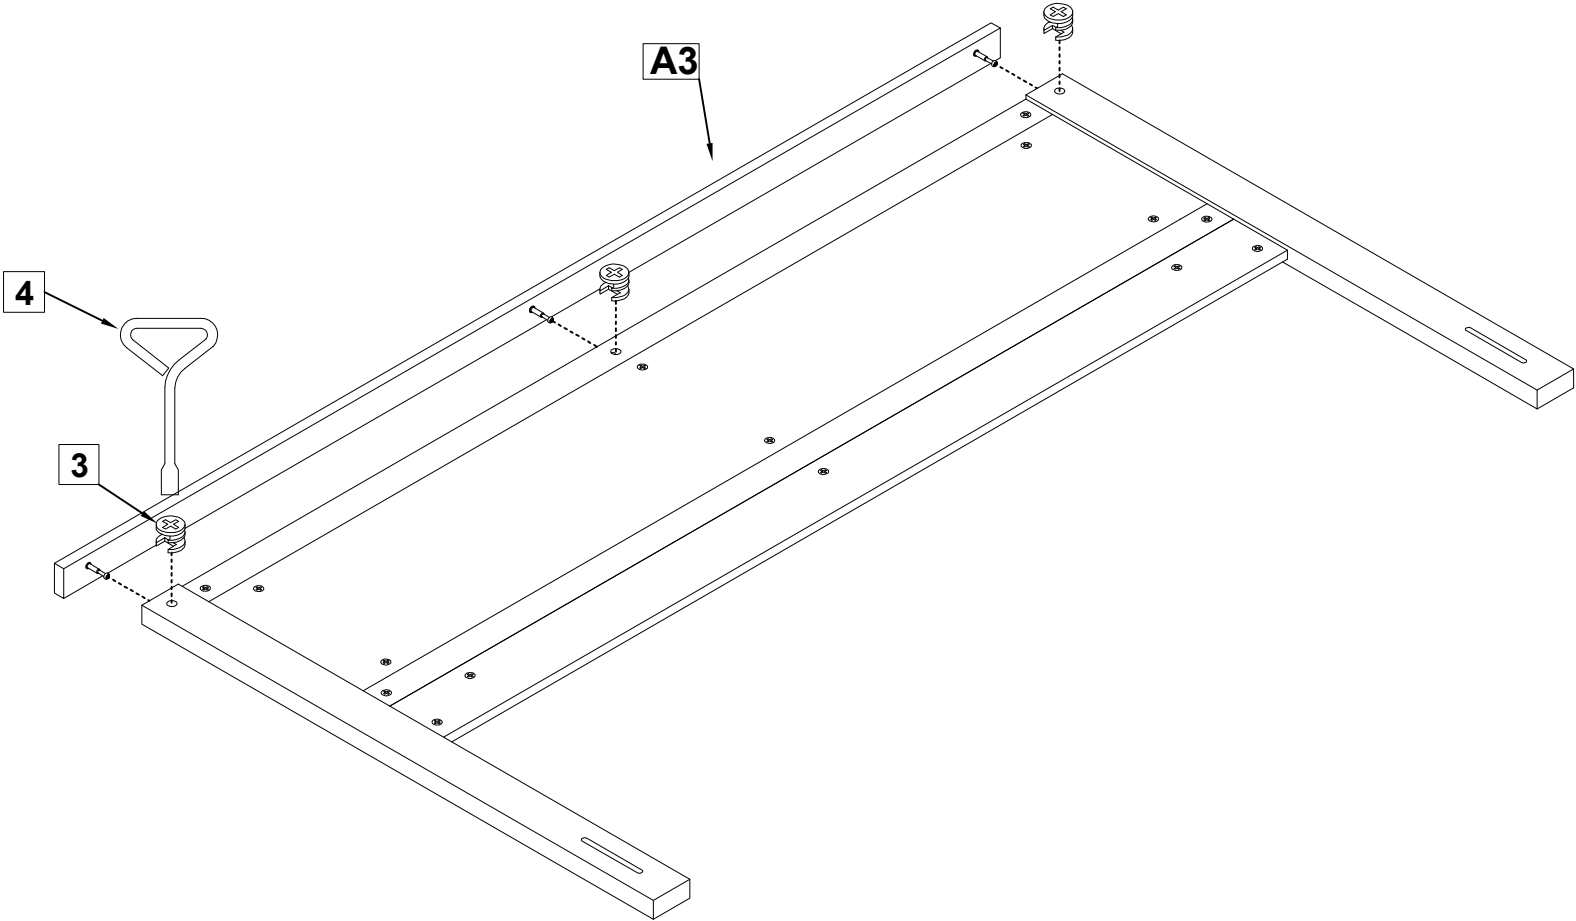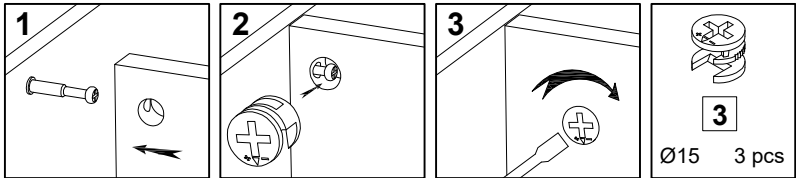

5

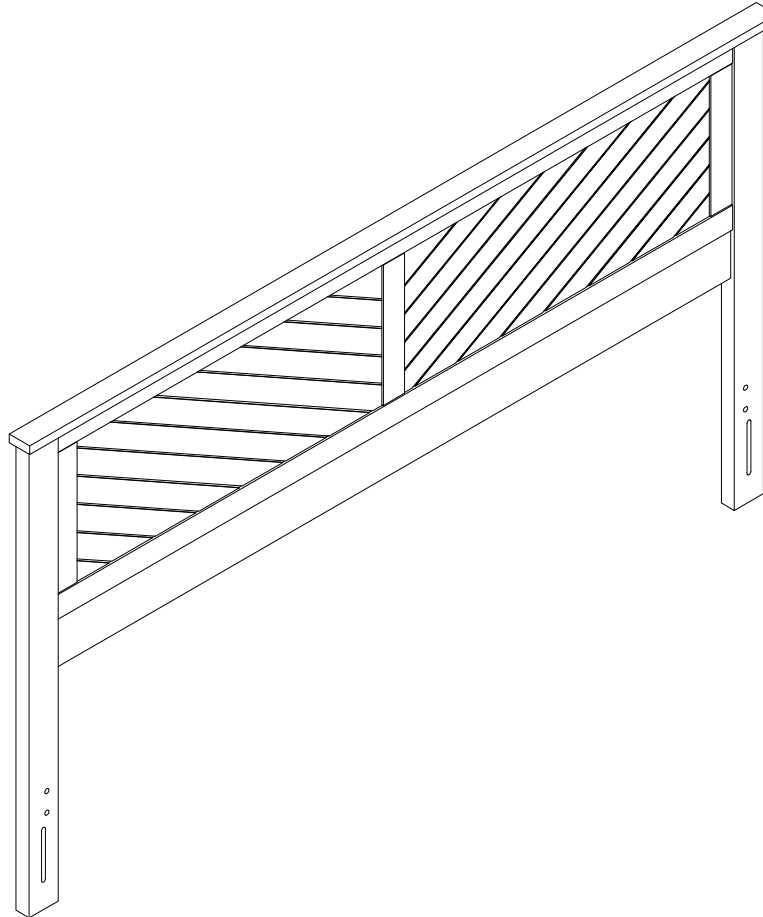

Attach the frame to the headboard using the long slots located on the lower portion of the legs of the headboard (hardware not included), these are designed to accommodate varying height bed frames. The holes with inserts are used with the bed frame that We produce for the headboard only.

Hardware/Assembly Tips:

With the headboard in position to be mounted to the frame, measure the length from the back of the headboard to the inside of the bedframe, allow enough additional length to add a couple of washers and a nut to secure the headboard to the frame.