






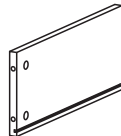
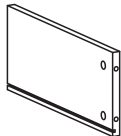
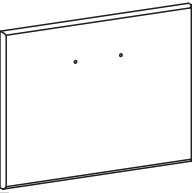
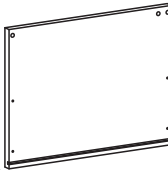
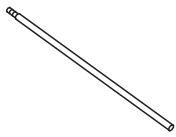
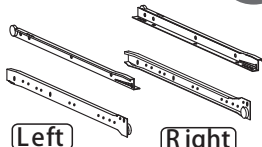










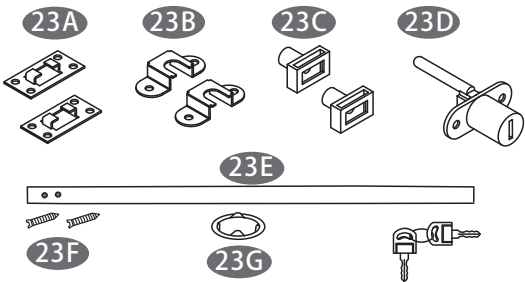

















IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY

ASSEMBLY INSTRUCTION

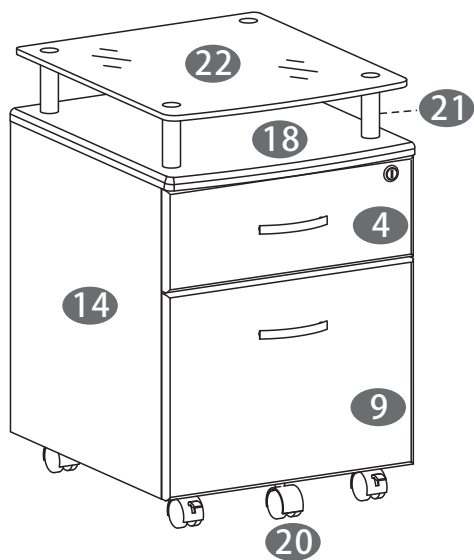




 <p>1</p>	 <p>2</p>
<p>X1</p>	<p>X1</p>
 <p>3</p>	 <p>4</p>
<p>X2</p>	<p>X1</p>
 <p>5</p>	 <p>6</p>
<p>X2</p>	<p>X1</p>
 <p>7</p>	 <p>8</p>
<p>X1</p>	<p>X1</p>
 <p>9</p>	 <p>10</p>
<p>X1</p>	<p>X1</p>
 <p>11</p>	 <p>12</p>
<p>X2</p>	<p>X2</p>
 <p>13</p>	 <p>14</p>
<p>X2</p>	<p>X1</p>
 <p>15</p>	 <p>16</p>
<p>X1</p>	<p>X1</p>
 <p>17</p>	 <p>18</p>
<p>X1</p>	<p>X1</p>
 <p>19</p>	 <p>20</p>
<p>X1</p>	<p>X1</p>
 <p>21</p>	 <p>22</p>
<p>X4</p>	<p>X1</p>
 <p>23A 23B 23C 23D 23E 23F 23G</p>	
<p>X1</p>	

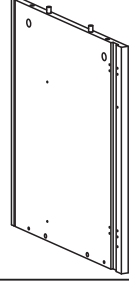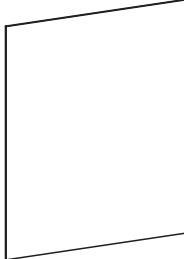 <p>A x 16 6x40mm +1 (spare)</p>	 <p>B x 8 4x35mm +1 (spare)</p>	 <p>C x 30 3x15mm +1 (spare)</p>
 <p>D x 4 4x20mm +1 (spare)</p>	 <p>E x 18 4x14mm +1 (spare)</p>	 <p>F x 1 6x12mm</p>
 <p>G x 4 6x20mm +1 (spare)</p>	 <p>H x 4 6x35mm +1 (spare)</p>	 <p>I x 1</p>
 <p>J x 1</p>		

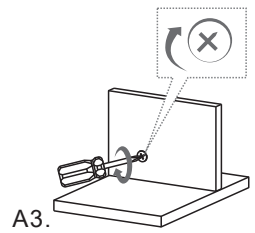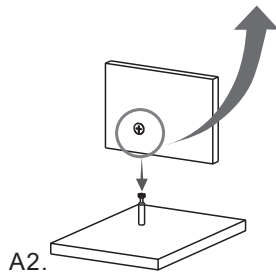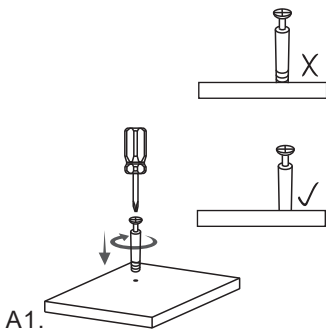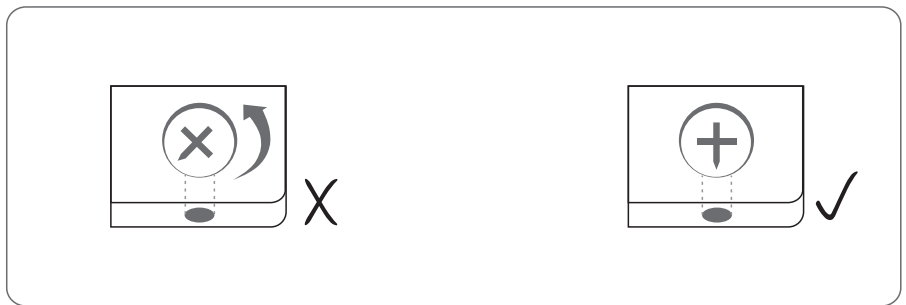
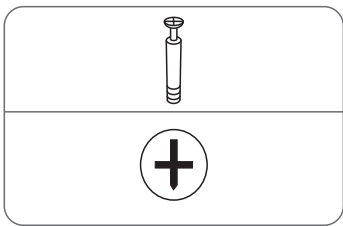


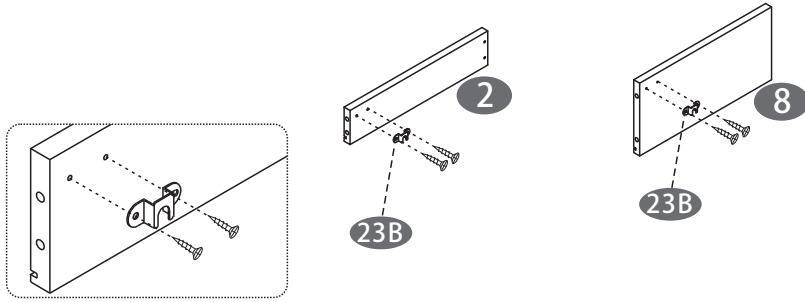

01




C 3X15 MM
 X4

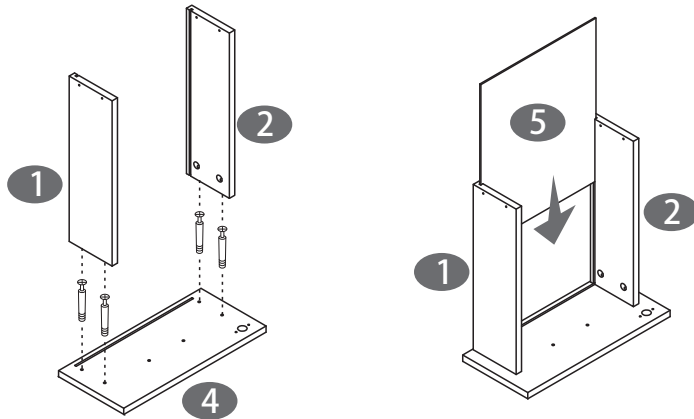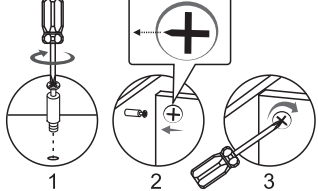


02


A 6X40 MM
 X4

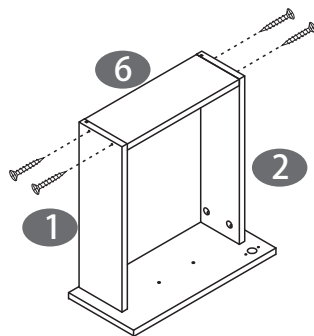


03




B 4X35 MM
 X4

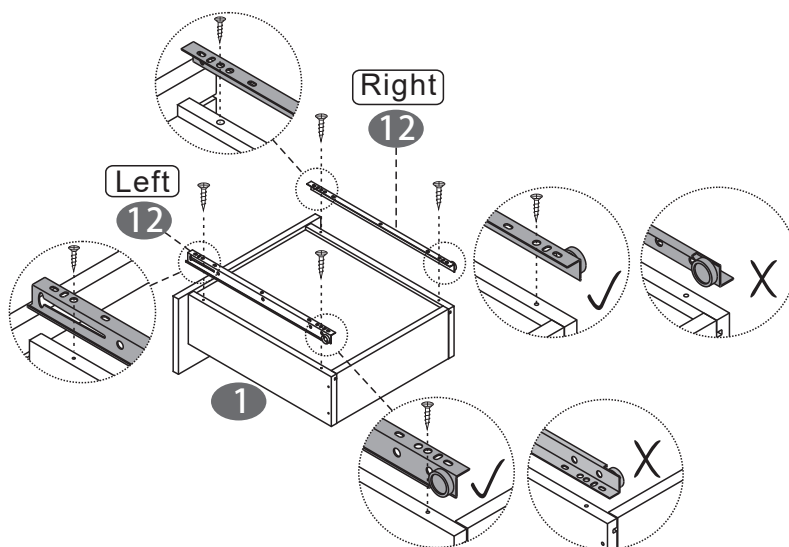


04




C 3X15 MM
 X4

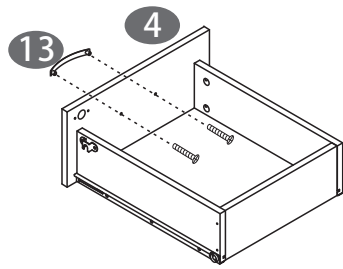


05




D 4X20 MM
 X2 

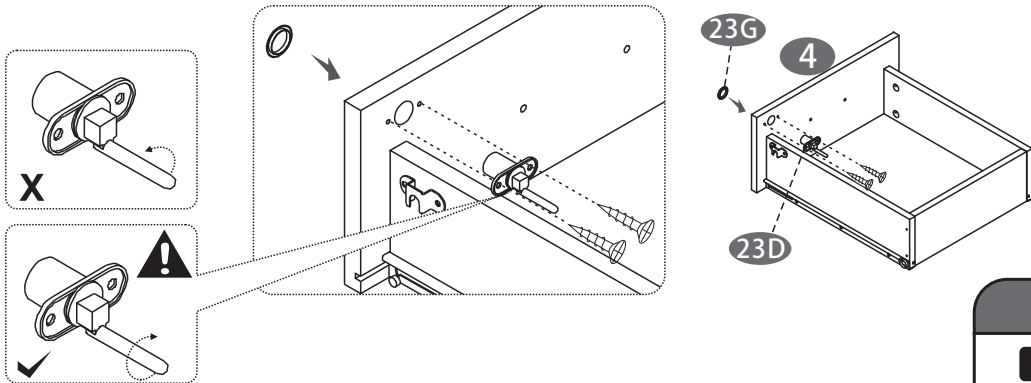

06



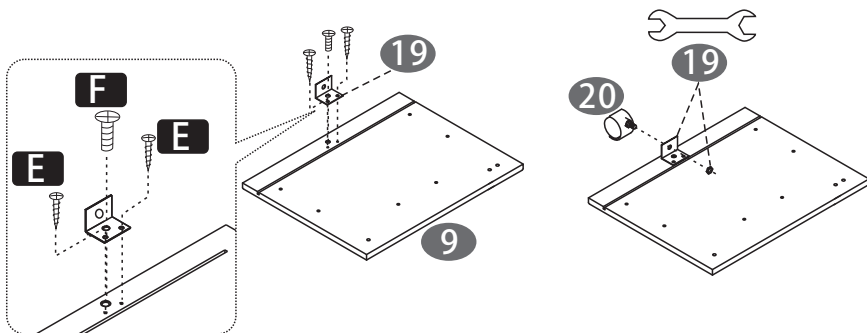

C 3X15 MM
 X2 



07





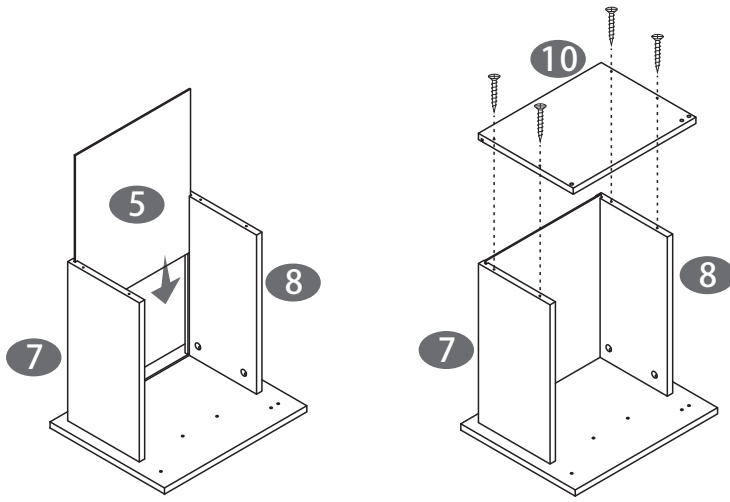
E 4X14 MM
 X2 



F 6X12 MM
 X1 

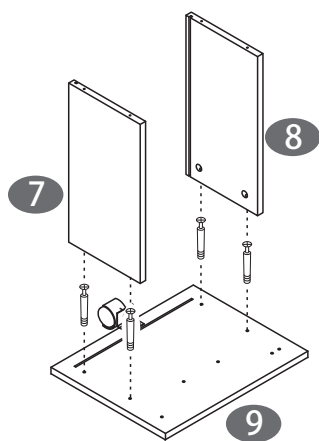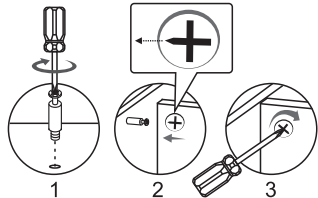
08

A 6X40 MM
 X4 






B 4X35 MM
 X4


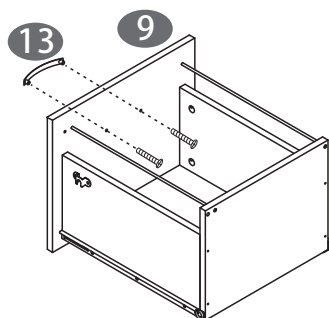


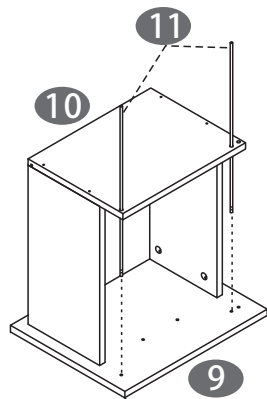

⚠ Be careful not to overtighten the metal rod





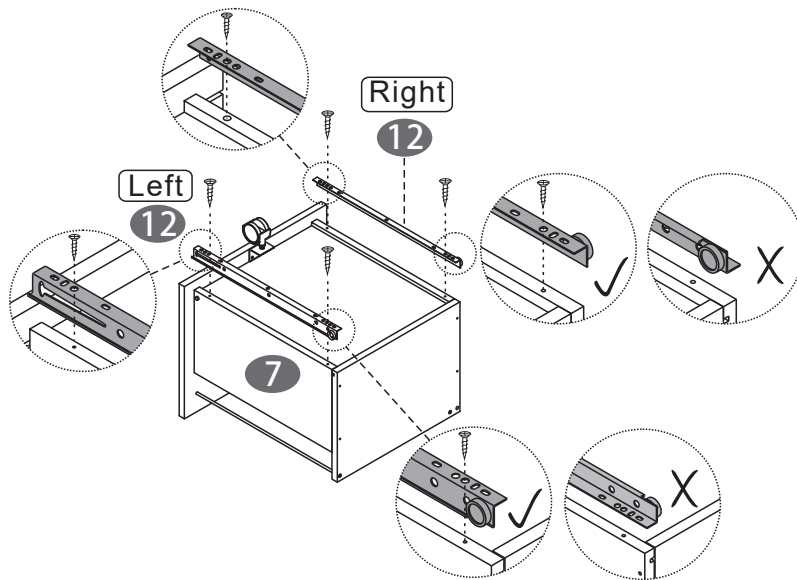
⚠ Attention à ne pas trop serrer la tige métallique







C 3X15 MM
 X4


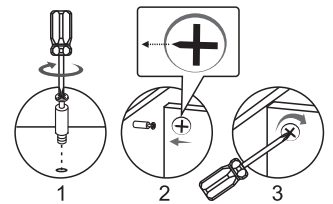
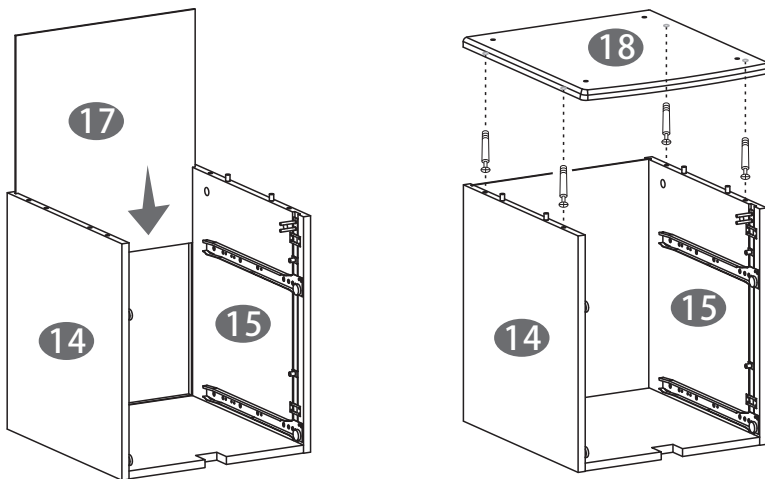




D 4X20 MM
 X2

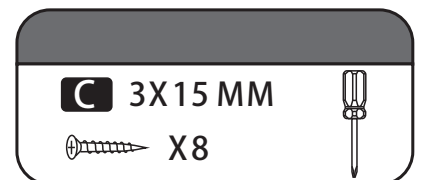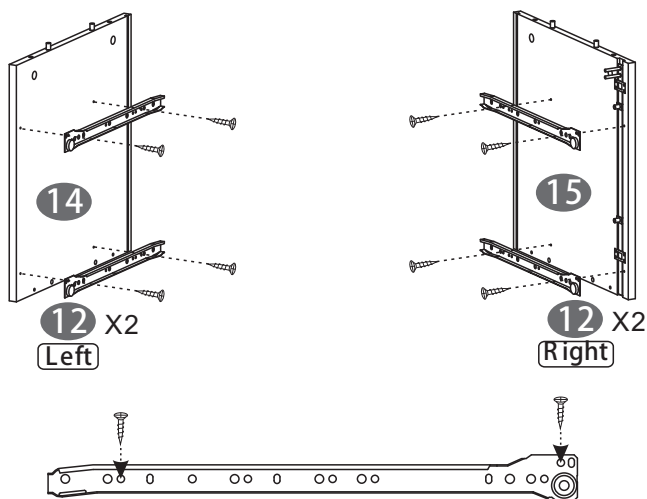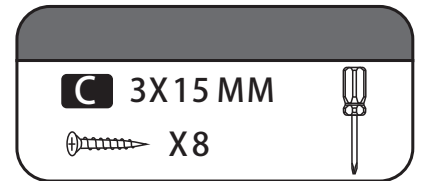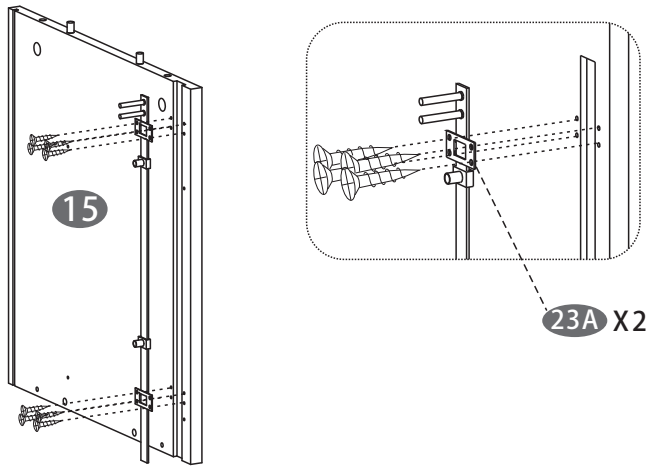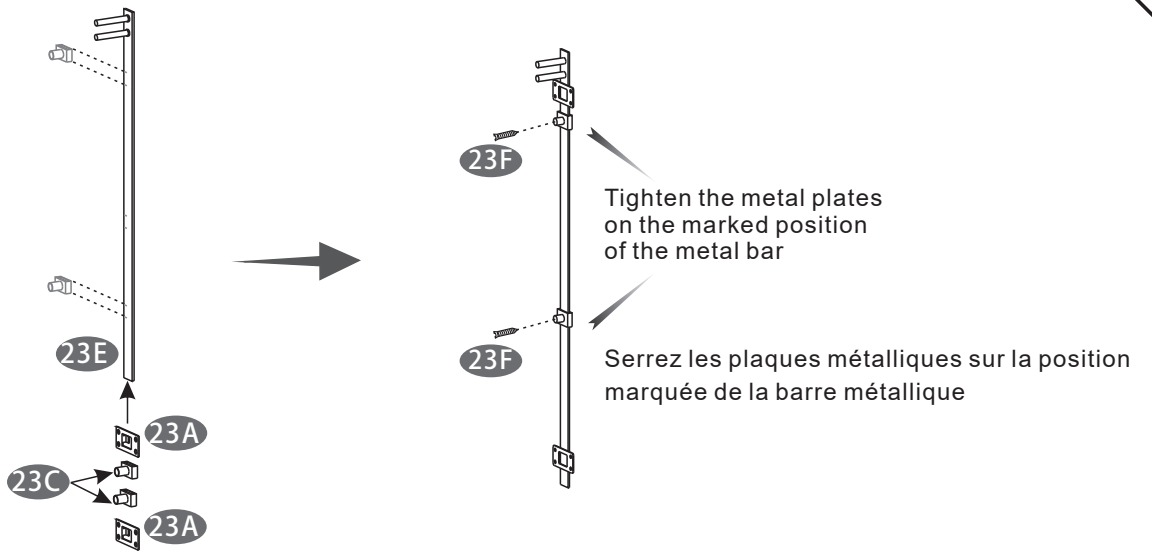
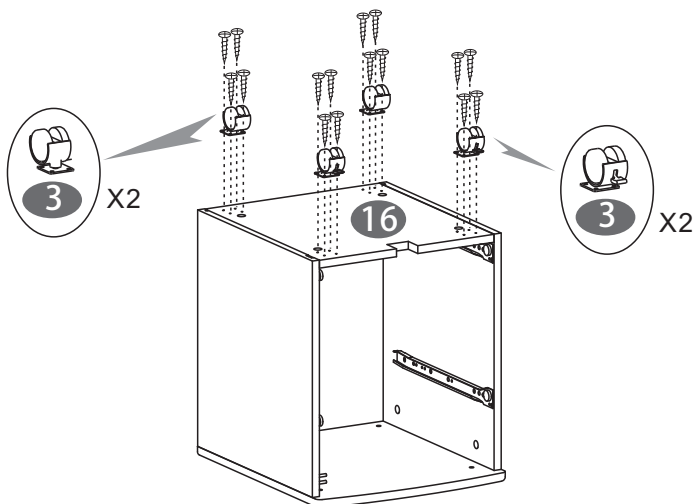


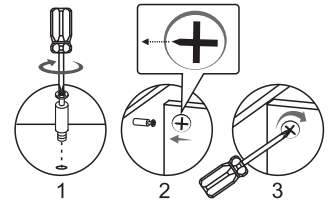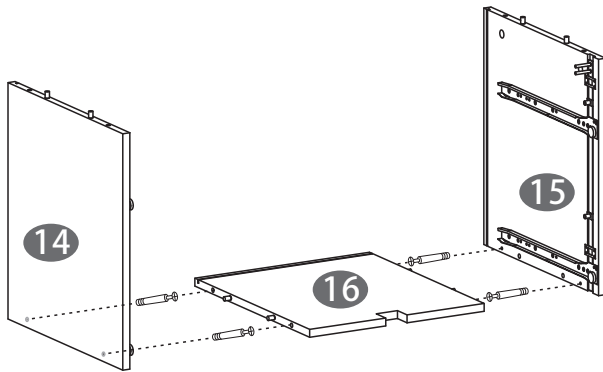



A 6X40 MM
 X4


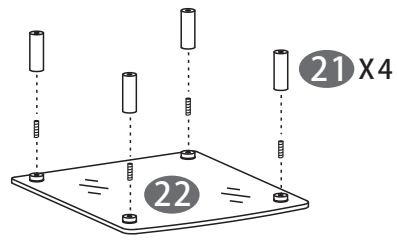



A 6X40 MM
 X4




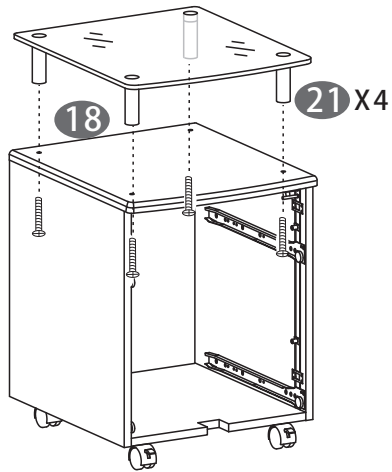
E 4X14 MM
 X16




19




G 6X20 MM
 X4

20



H 6X35 MM
 X4 

21

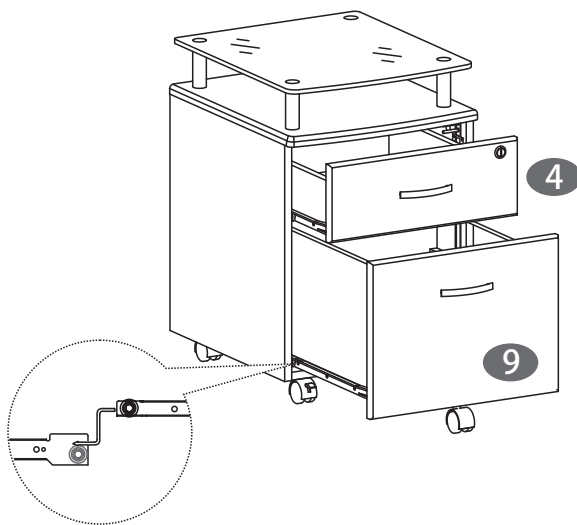

22

