


ASSEMBLY INSTRUCTIONS

PARTS AND FITTING PACKAGING DETAIL



BOX MIRROR

A. MIRROR 1 PC

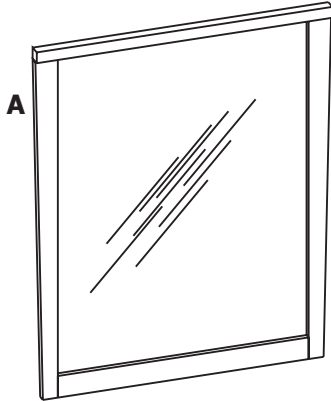


BOX DRESSER 7 DRAWER *

B. DRESSER 7 DRAWER 1 PC
C. SUPPORT MIRROR 2 PCS
HARDWARE** IN PLASTIC PUNCH

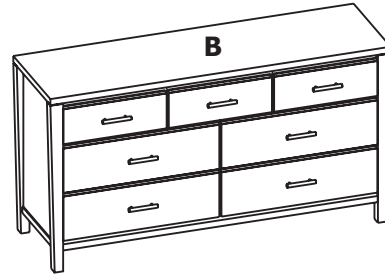


*SOLD SEPARATELY

OPTION 1 FIXING MIRROR ON THE WALL

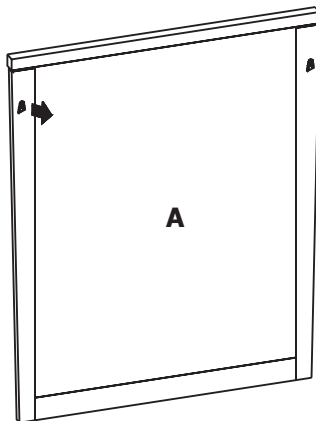

HANGING ON THE WALL
USING EYE LIDS WHICH
ALREADY INSTALLED

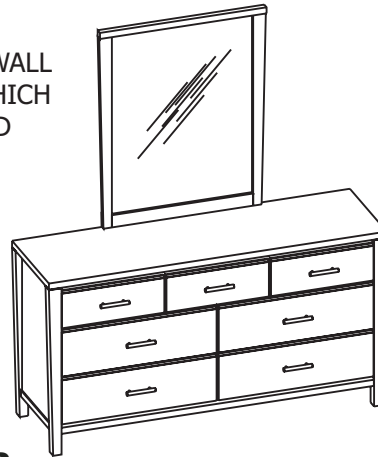


OPTION 2 FIXING MIRROR ON THE DRESSER 7 DRAWER

HARDWARE** PACKED IN BOX DRESSER 7 DRAWER

1	WOOD SCREWS Ø8X38MM	16 PCS
---	------------------------	-----------




TOOL REQUIRED :
PHILLIPS HEAD SCREW
DRIVER (NOT PROVIDED)

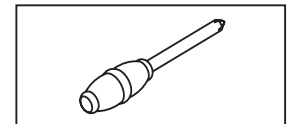

STEP 1 :

PLACE SUPPORT MIRROR (C) USING PILOT HOLES ON THE MIRROR AS YOUR GUIDE.

USE PILOT HOLES AS REFERENCE TO CONNECT MIRROR (A) & SUPPORT MIRROR (C) USING WOOD SCREWS (1). TIGHTEN THE SCREWS USING PHILLIPS HEAD SCREW. REPEAT THE STEP FOR SECOND MIRROR SUPPORT.

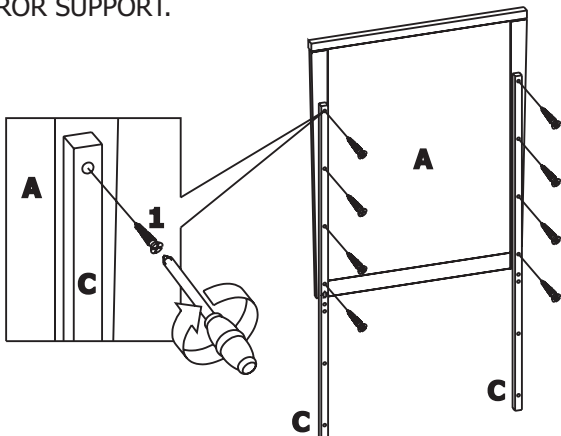

STEP 2 :

PLACE SUPPORT MIRROR (C) USING PILOT HOLES ON THE DRESSER AS YOUR GUIDE.

FOLLOW THE ILLUSTRATION TO FIX MIRROR (A) TO DRESSER 7 DRAWER (B) USING WOOD SCREWS (1) ON SUPPORT MIRROR FROM BACK SIDE, USE PILOT SCREWS AS REFERENCE FOR EASY ASSEMBLY. TIGHTEN THE SCREWS USING PHILLIPS HEAD SCREW.

