

INSTALLATION OF RIGID COVING (SIMILAR FOR PANEL MOULDING, SKIRTING, BYBLOS, DOOR SURROUNDS)

01 SURFACE - CEILING - WALL



Dust free



Dry




No grease


Flat wall
and ceilings

Sand and
wash surface


- Use DecoFix Pro for porous or DecoFix Hydro for non-porous surfaces
- Extra attention for gluing on wallpaper!!
- Preferably use DecoFix Hydro & DecoFix Extra for new-build projects
- Adhesion of paint or plaster on wall must be perfect
- When in doubt about surface, please contact Orac

02 WORKING CONDITIONS

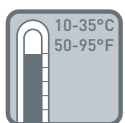
10-35°C
50-95°F

min 40%
max 70%



24 hrs

Storage & installation
conditions for Orac Decor
products & DecoFix

Place profiles & adhesives
at room temperature
24 hours before installation

ONLY FULL GUARANTEE WITH DECOFIX

03 GLUES

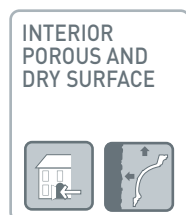

INTERIOR
POROUS AND
DRY SURFACE



glueing on
wall and
ceiling

PUROTOUCH® - DUROPOLYMER®



joints

PUROTOUCH® - DUROPOLYMER®

For **Orac Basixx** use
DecoFix Pro for joints



EXTERIOR
NON-POROUS
HUMID SURFACE



glueing on
wall and
ceiling

PUROTOUCH® - DUROPOLYMER®



joints

PUROTOUCH® - DUROPOLYMER®

	DecoFix Pro FDP500 310ml → 7 - 8m FDP600 4200ml → 65 - 110m	• Strong, water-based acrylic glue • Long-lasting seal between mouldings and the wall and/or ceiling • For interior applications and porous surfaces (not for humid spaces or outside) • Remove with humid sponge or cloth • Should be kept frost free
	DecoFix Extra FX200 310ml → min. 80m FX210 80ml → min. 20m	• Polyurethane-based glue • Seam joints between the mouldings • Remove excess glue before hardening (max. 1 hour and repeat after 2-3 hours) • Clean with acetone or Synth Thinner • Can be painted after 24 hrs • The more humidity, the faster the drying time
	DecoFix Hydro FDP700 290 ml → 7 - 8 m	• Extra strong MS polymer glue • For exterior applications, damp environments, non-porous surfaces (tiles, glass, ...) • Remove with soap solution

04 INSTALLATION → see reverse


04 INSTALLATION RIGID COVING

INNER CORNER



- Joints have to be dust free
- Use DecoFix Hydro for exterior applications, humid areas, non-porous surfaces and for newly built houses with high humidity and low temperature
- DecoFix Pro or Hydro should be used over the complete length of the profiles and the full width of the gluing area
- The V-Fix is only for guiding the nozzle
- Push products firmly and evenly against the wall and ceiling (every 10 cm)
- Use stainless steel nails to support bigger profiles and indirect-lighting profiles
- Use DecoFix Extra in every joint (not only for corners) on one side of the profiles already installed
- Apply enough DecoFix Extra; excess must come out of the front and the back
- Wipe off with acetone or similar product

OUTER CORNER

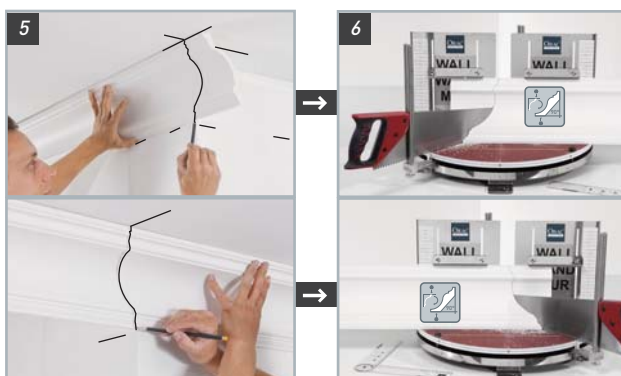

STOP MITRE

