

# ASSEMBLY INSTRUCTIONS

2630Q1





Weight Capacity Max to 700LBS





Mattress Size :



80"L x 60"W x (6"-10")H

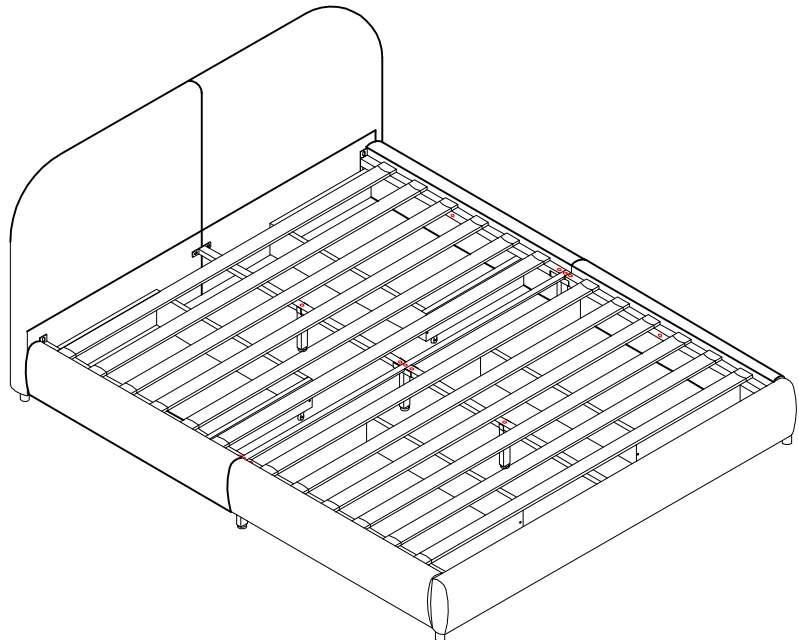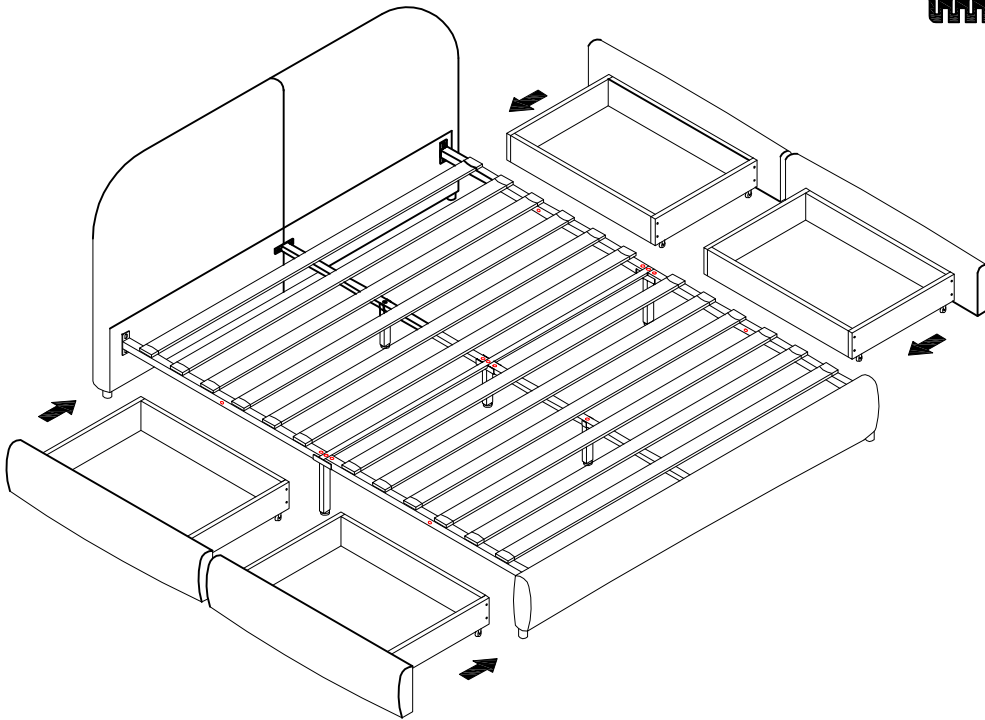




Install all screws according to the instructions, and then tighten them completely.

PACKING DETAILS:TOTAL 2 BOXES


| 2630Q1-A                                                                          |            |
|-----------------------------------------------------------------------------------|------------|
|  | 1-(1pc)    |
|  | 2-(1pc)    |
|  | 6-(2pcs)   |
|  | 7-(1pc)    |
|  | 8-(2pcs)   |
|  | 9-(4pcs)   |
|  | 10-(24pcs) |

| 2630Q1-A                                                                            |            |
|-------------------------------------------------------------------------------------|------------|
|   | 12-(16pcs) |
|   | 14-(8pcs)  |
|   | 15-(4pcs)  |
|   | 16-(8pcs)  |
|   | 17-(4pcs)  |
|   | 18-(4pcs)  |
|  | 19-(4pcs)  |


| 2630Q1-A                                                                            |                        |
|-------------------------------------------------------------------------------------|------------------------|
| (Hardware Packet)                                                                   |                        |
|  | M8 x 30mm A-(12pcs +1) |
|  | M8 x 45mm B-(14pcs +1) |
|  | M6 x 30mm C-(20pcs +1) |
|  | M8 D-(26pcs +1)        |
|  | M8 x19mm E-(26pcs +1)  |
|  | M8 F-(1pc)             |
|  | M6 x 40mm G-(80pcs +2) |
|  | M8 x15mm H-(64pcs +2)  |
|  | I-(1pc)                |
|  | M6 x 14mm J-(16pcs +1) |
|  | M6 K-(1pc)             |

| 2630Q1-B                                                                             |            |
|--------------------------------------------------------------------------------------|------------|
|  | 3-(4pcs)   |
|  | 4-(2pcs)   |
|  | 5-(1pc)    |
|  | 11-(12pcs) |
|  | 13-(4pcs)  |
|  | 20-(1pc)   |


STEP 1

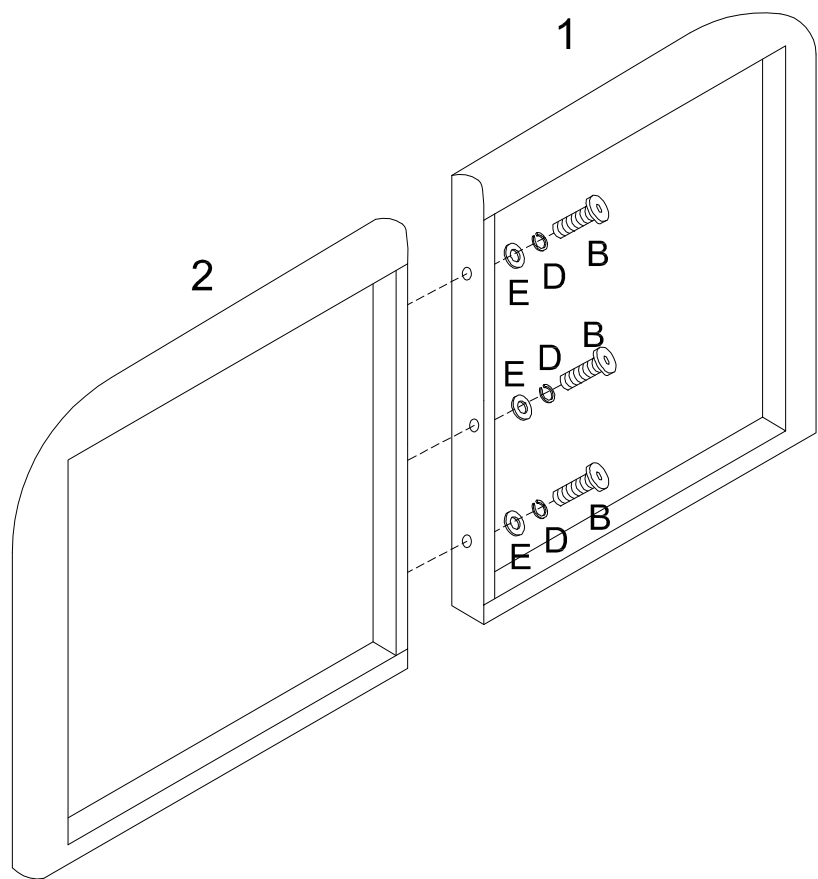


STEP 2

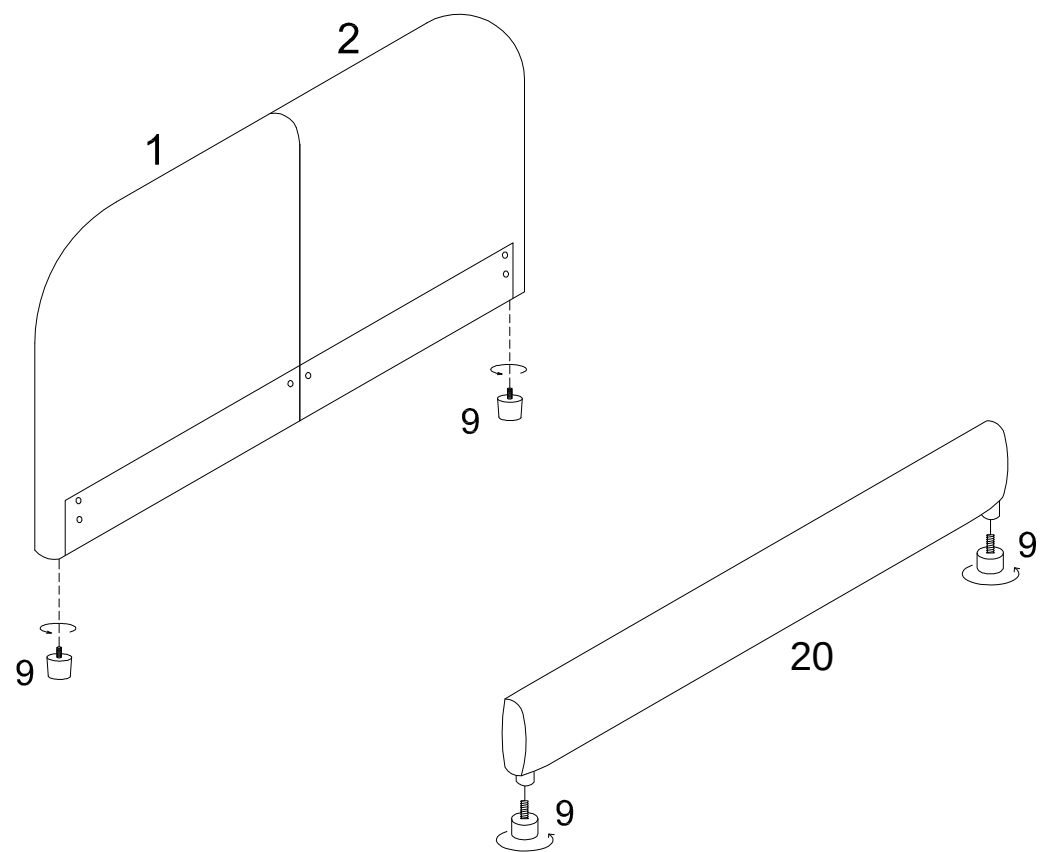


STEP 3

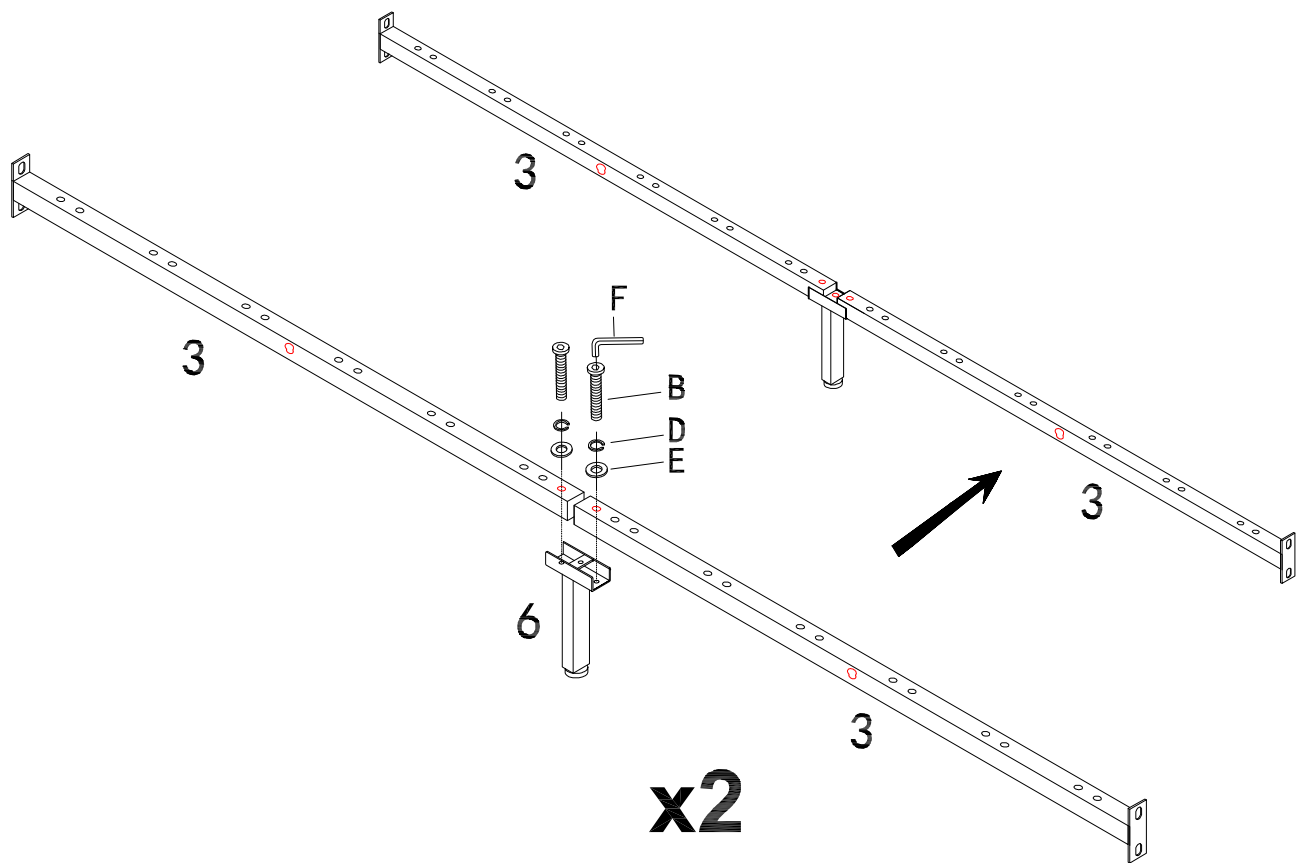


STEP 4

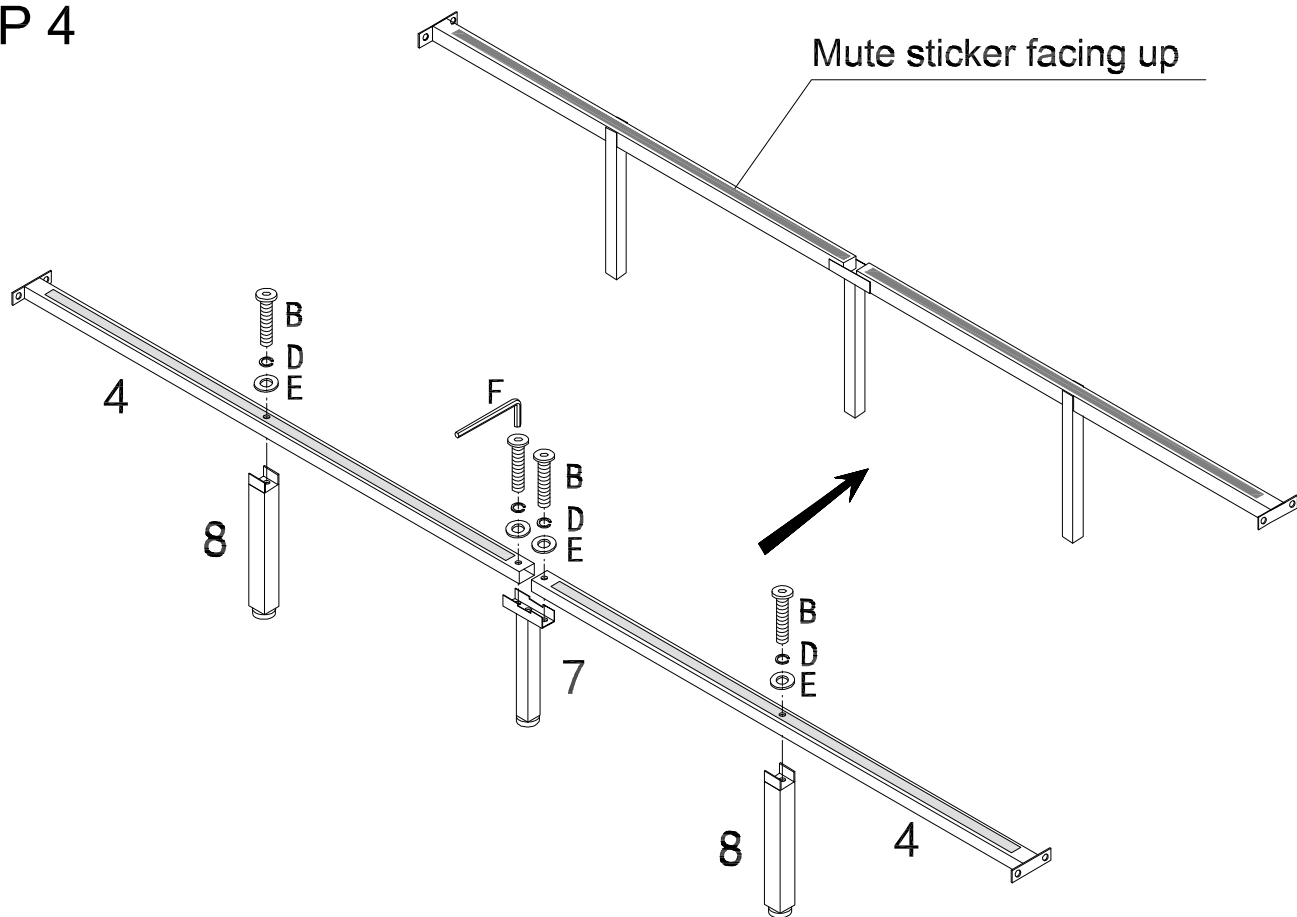


## STEP 5

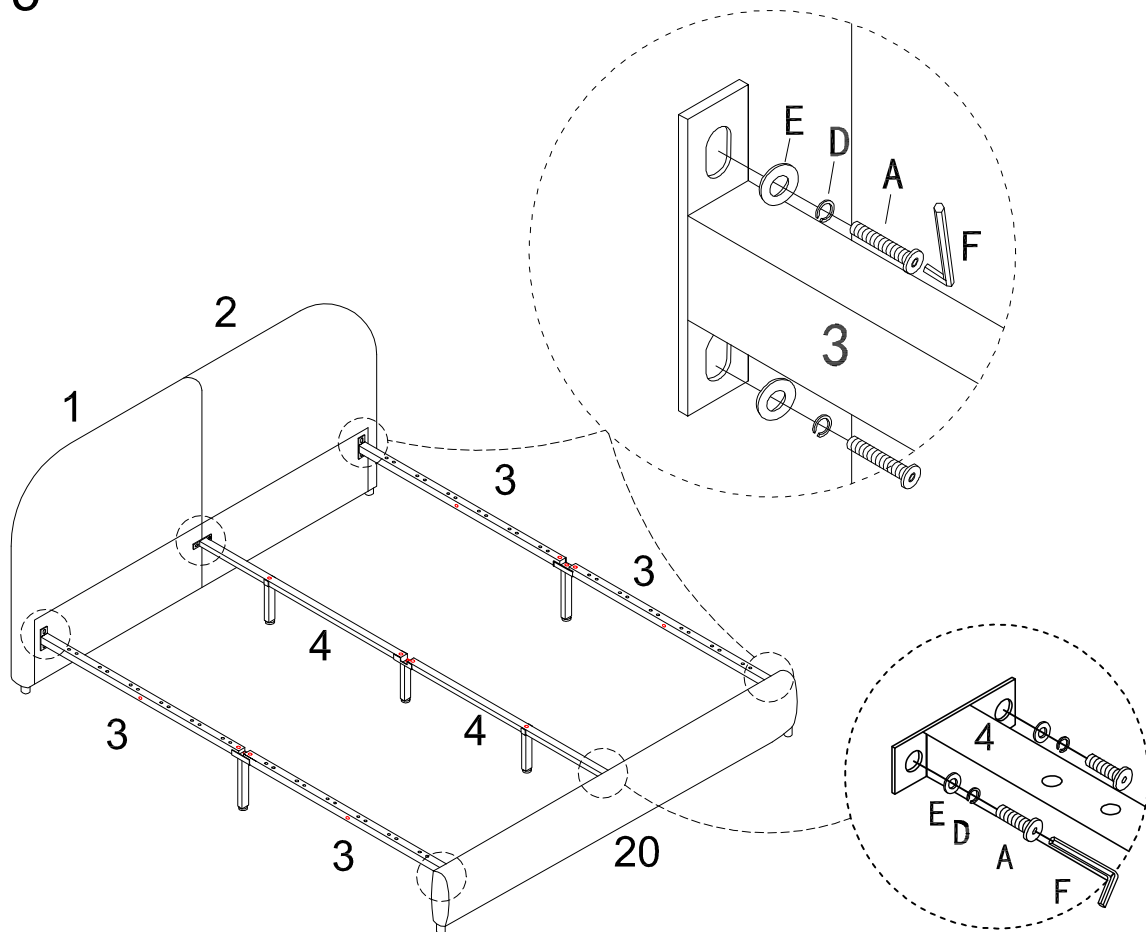


## STEP 6

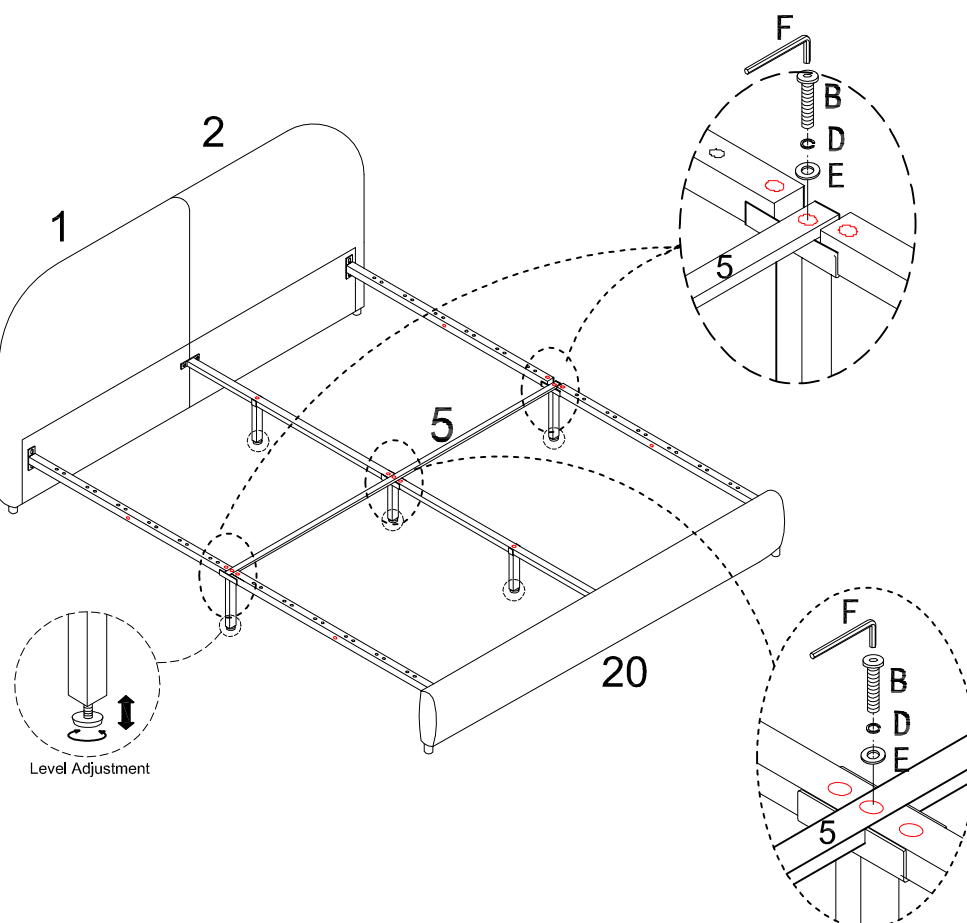

## STEP 7

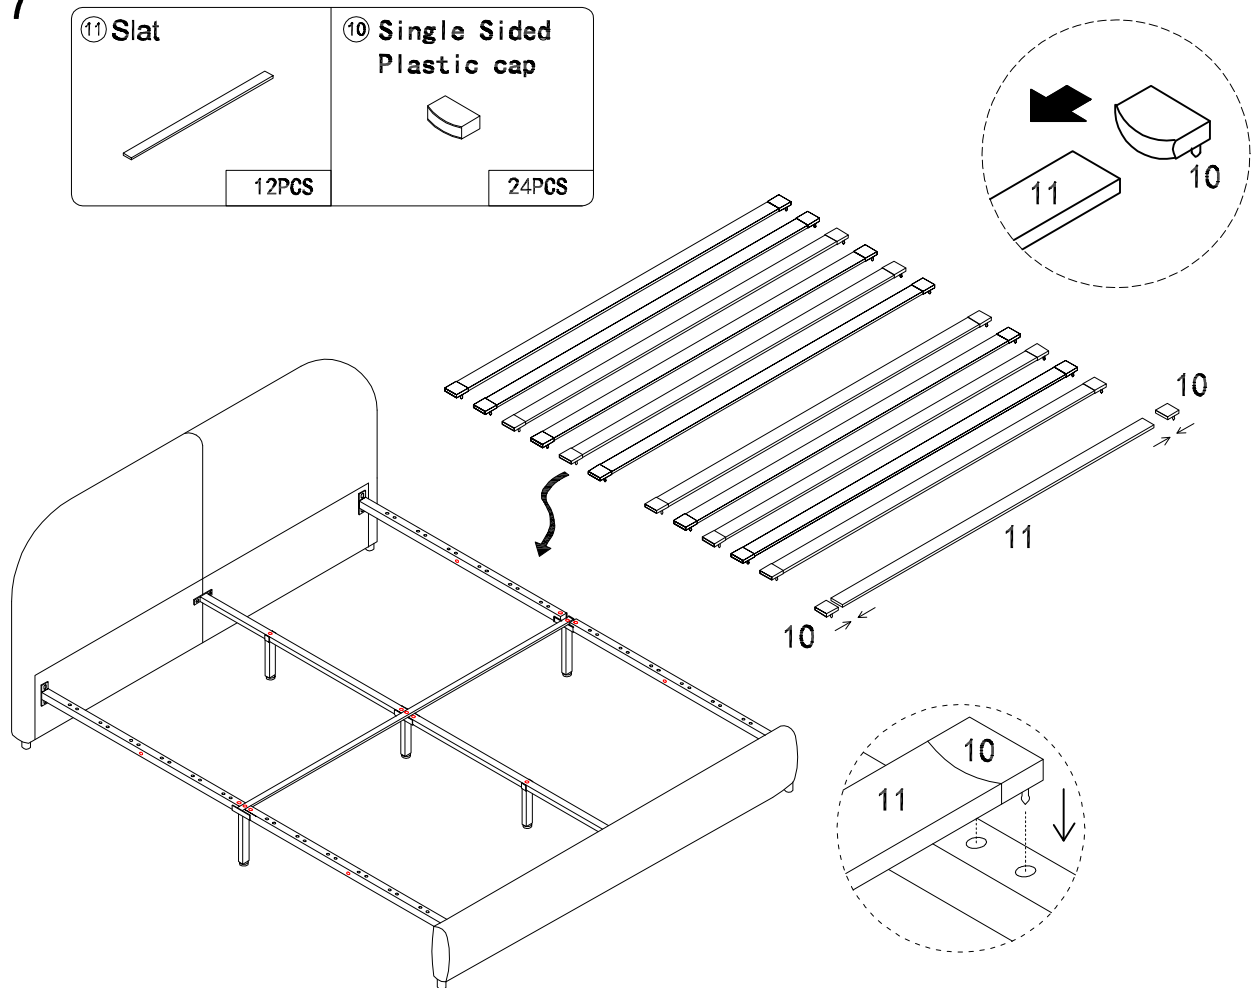


## STEP 8

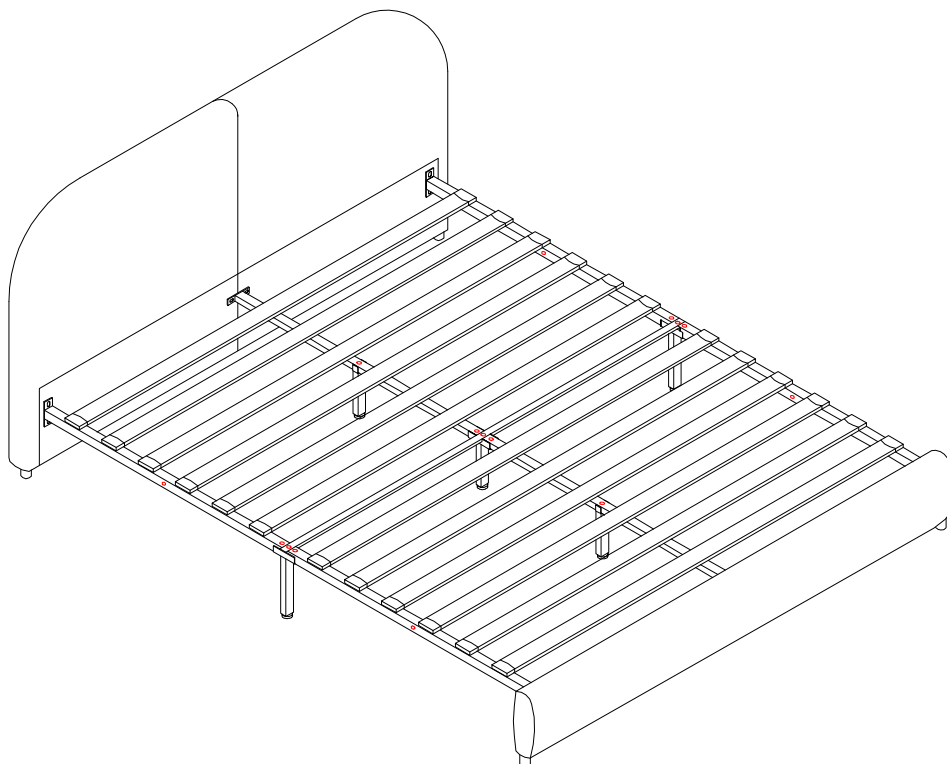


STEP 9

ASSEMBLE DRAWER

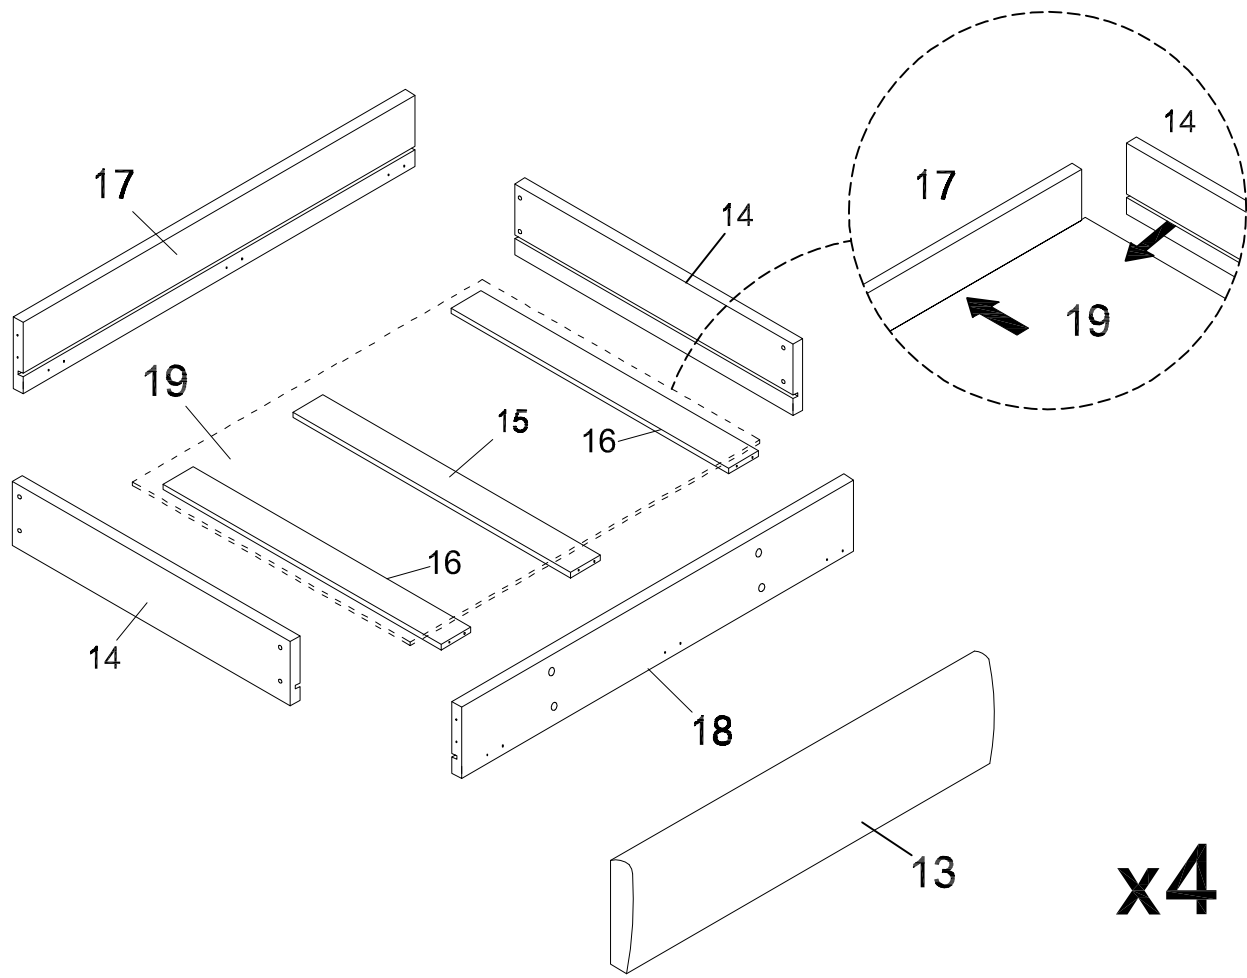


x4

STEP 10

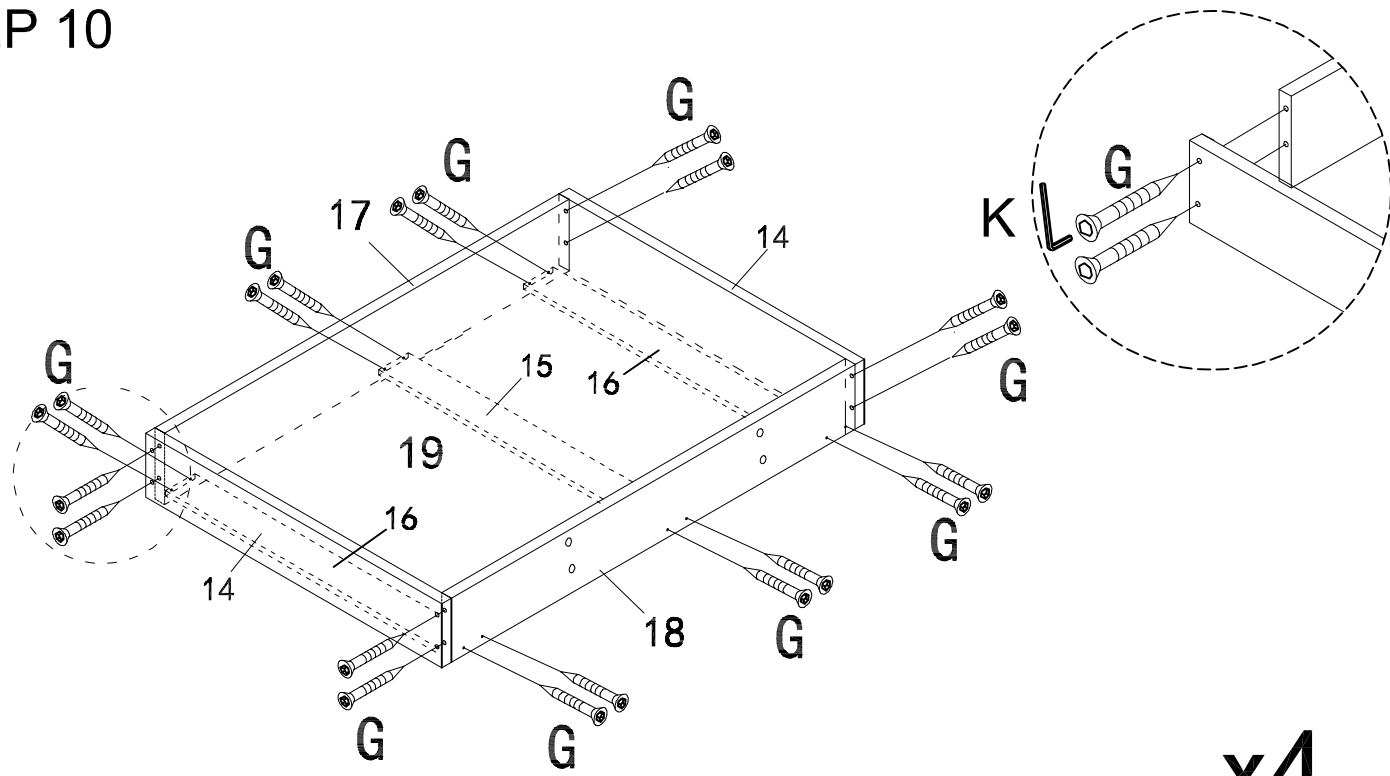


x4

STEP 11

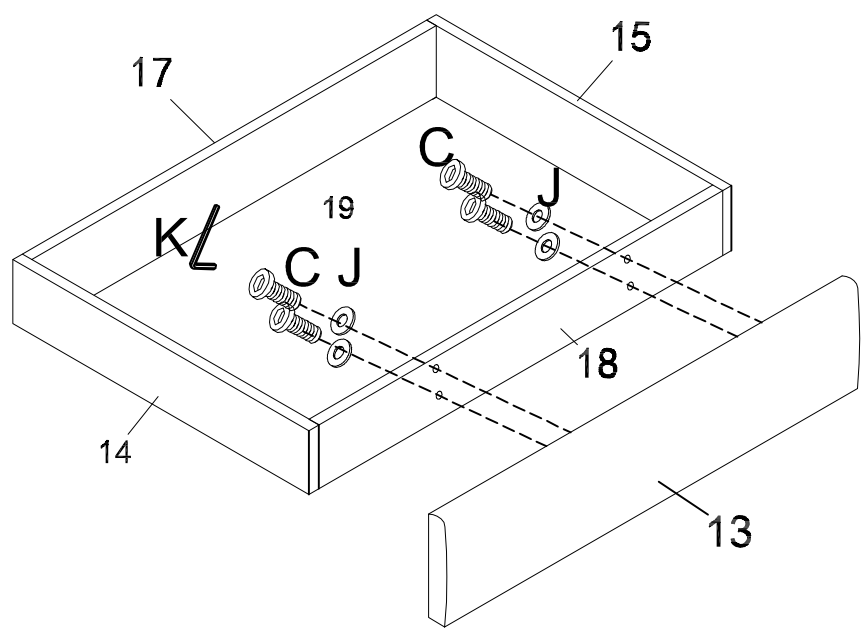

x4


STEP 12

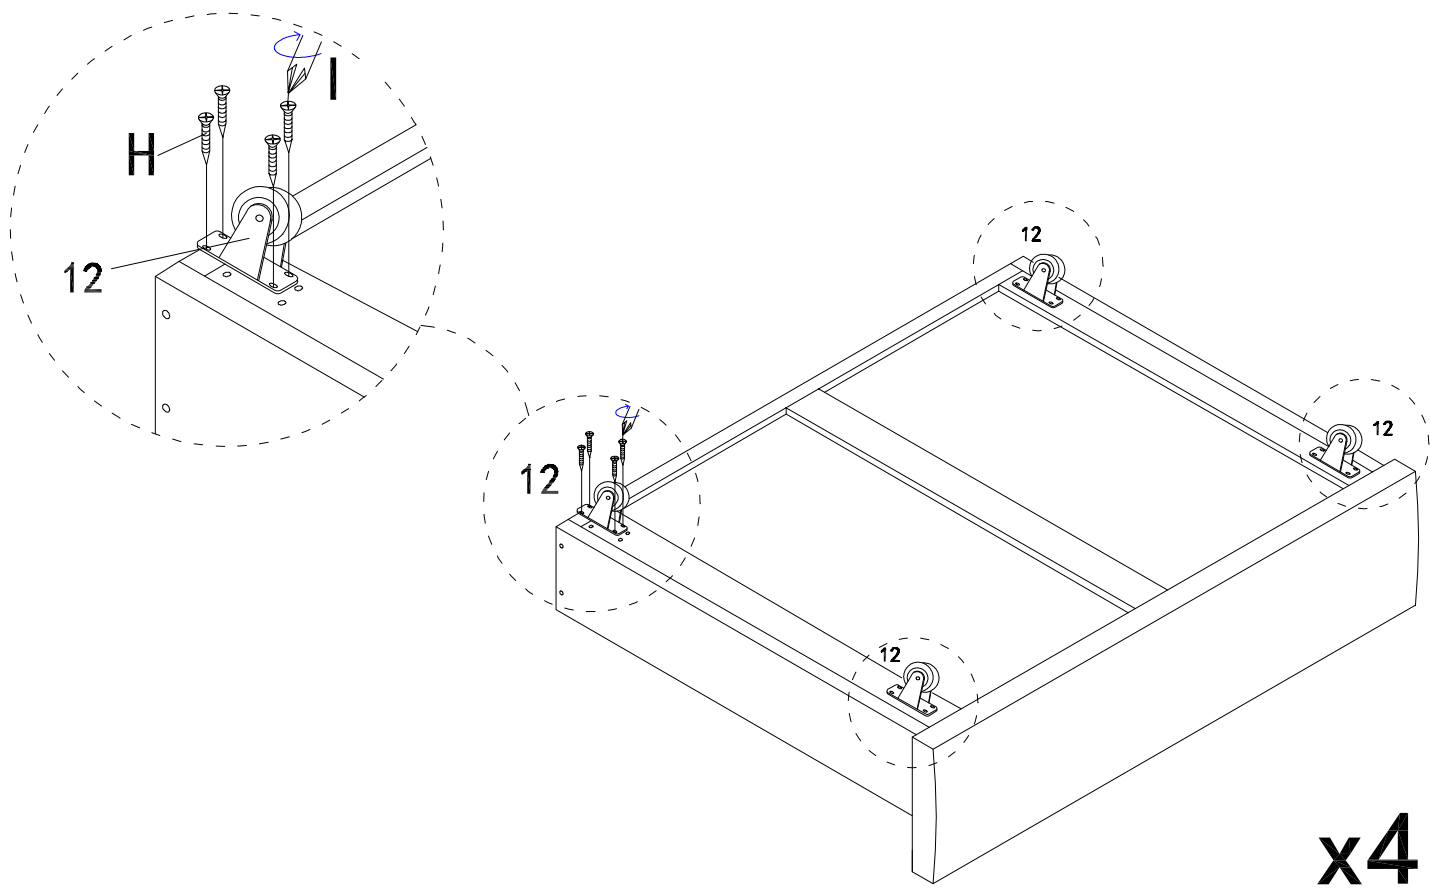

x4




## STEP 13

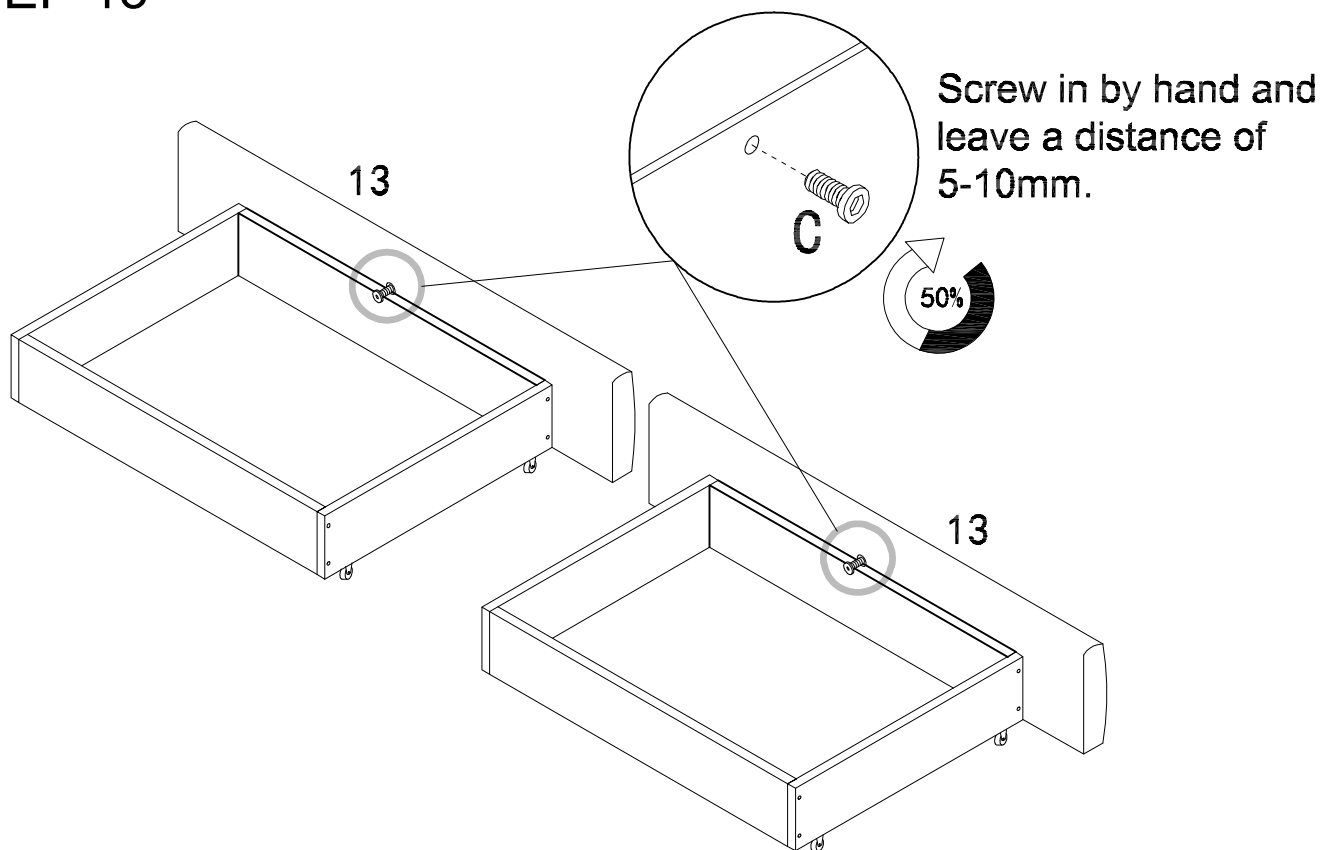

**x2**

## STEP 14


**DRAWER ASSEMBLY COMPLETE**

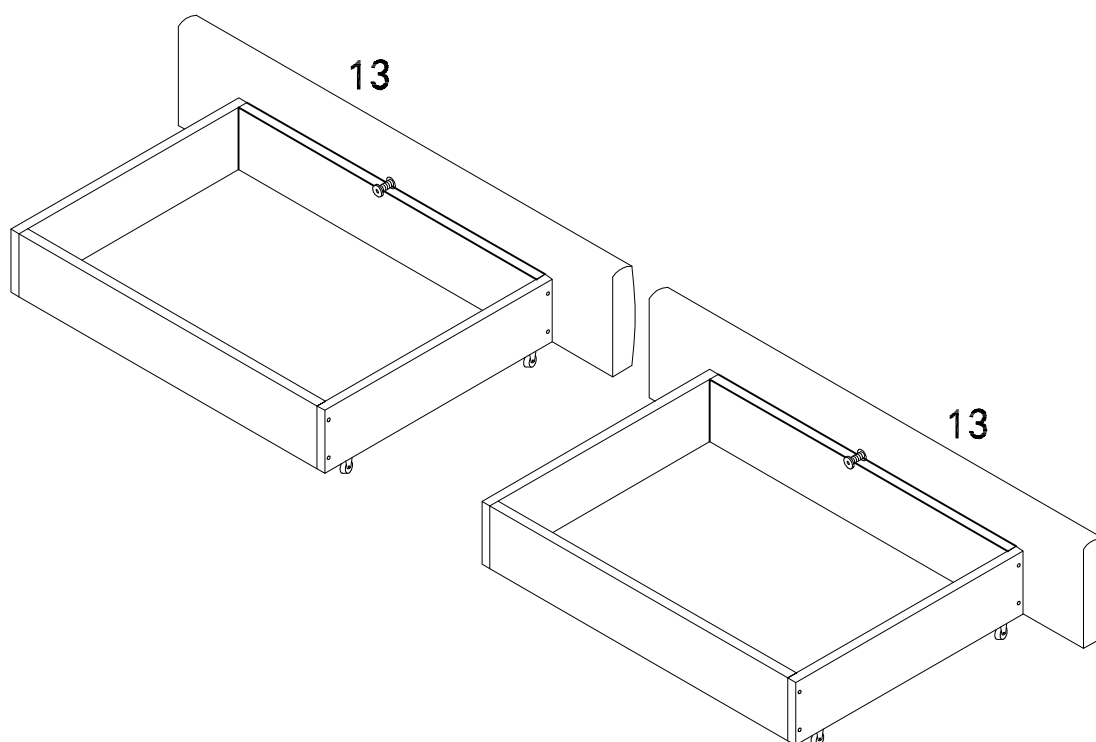

**x2**

## STEP 15

Drawer panel screw hang into side cross beam hole.

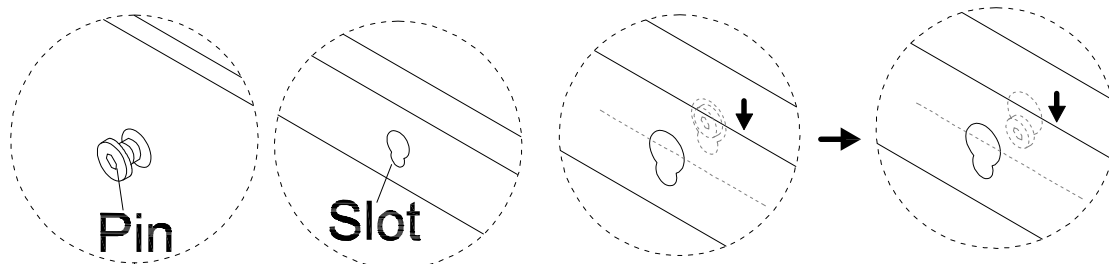

There is a screw head on the drawer board. Hang them in the hole as shown in the figure.

