
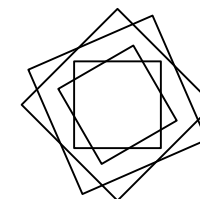


## THANKS FOR WATCHING

Your feedback is invaluable to us and we would love to hear about your experience. Please take the time to leave us a review.

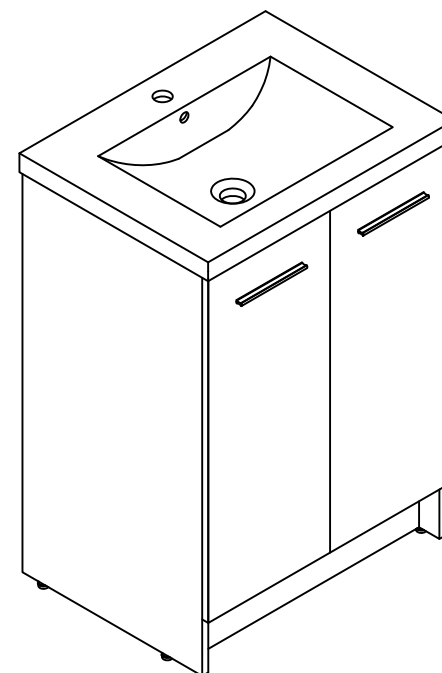

## Thank you for shopping with us!


We encourage you to take a few minutes to go through this booklet. It contains important information on installation and care tips to keep your furniture looking as good as new.

## Item NO.:UNOR V 006F 24


### Hardware

| NO. | Draw                                                                                                            | QTY | NO. | Draw                                                                                                          | QTY |
|-----|-----------------------------------------------------------------------------------------------------------------|-----|-----|---------------------------------------------------------------------------------------------------------------|-----|
| A   | <br>Screws Ø4x14mm             | 44  | I   | <br>Hinges ( Full cover )    | 4   |
| B   | <br>Two-in-one connector       | 24  | J   | <br>Handle(L = 160mm)        | 2   |
| C   | <br>Two-in-one connector       | 24  | K   | <br>Screws M4x18mm           | 4   |
| D   | <br>Wood plug                  | 4   | L   | <br>Adjustable feet          | 4   |
| E   | <br>Plastic anchor(Ø10mm)      | 2   | M   | <br>Movable laminate support | 4   |
| F   | <br>Screws for fix on the wall | 2   | N   | <br>Anti-collision gasket    | 4   |
| G   | <br>Bracket (53x70x44mm)       | 2   | O   | <br>Screwdriver              | 1   |
| H   | <br>Bracket (19x19x35mm)       | 2   |     |                                                                                                               |     |


### Recommended tools

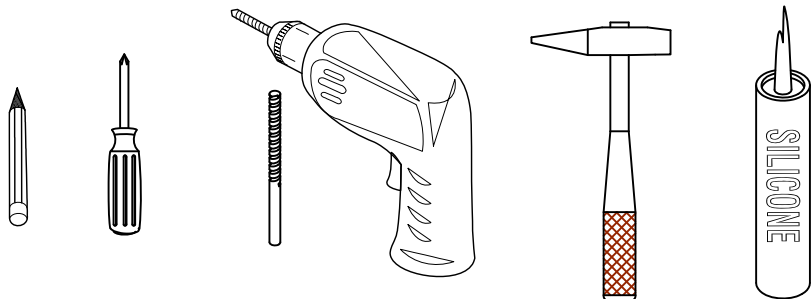


### Dimensions

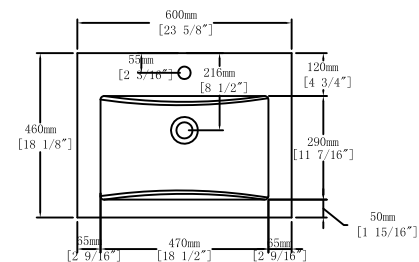

Top View

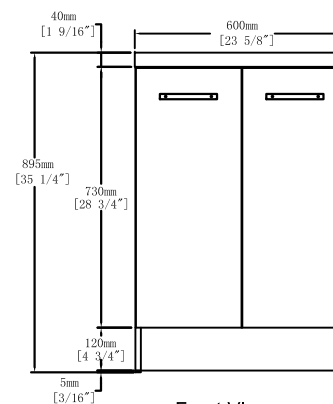

Front View

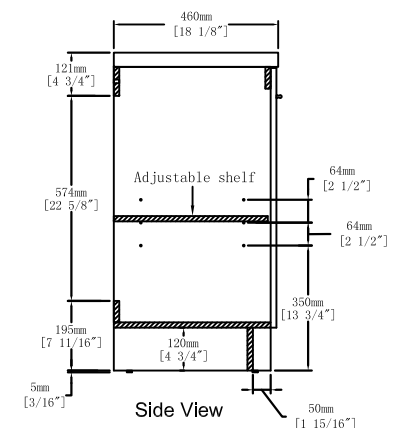


Side View

### CARE CLEANING AND MAINTENANCE


- 1.Dust regularly with a soft , dry cloth.
- 2.Avoid the use of all chemicals household cleaners, abrasives, or cleaners that contain lemon, vinegar, or other acids that may damage the finish.
- 3.Excessive exposure to sunlight and extreme changes in temperature and moisture can damage wood furniture.
- 4.The sink is fragile, please pay attention to maintaining its appearance.
- 5.Do not place hot appliances, such as curling irons and hot hair dryers directly on the countertop. Wipe spills immediately.

## Step 14


Notes:  
The installation position can be selected  
according to the required height.

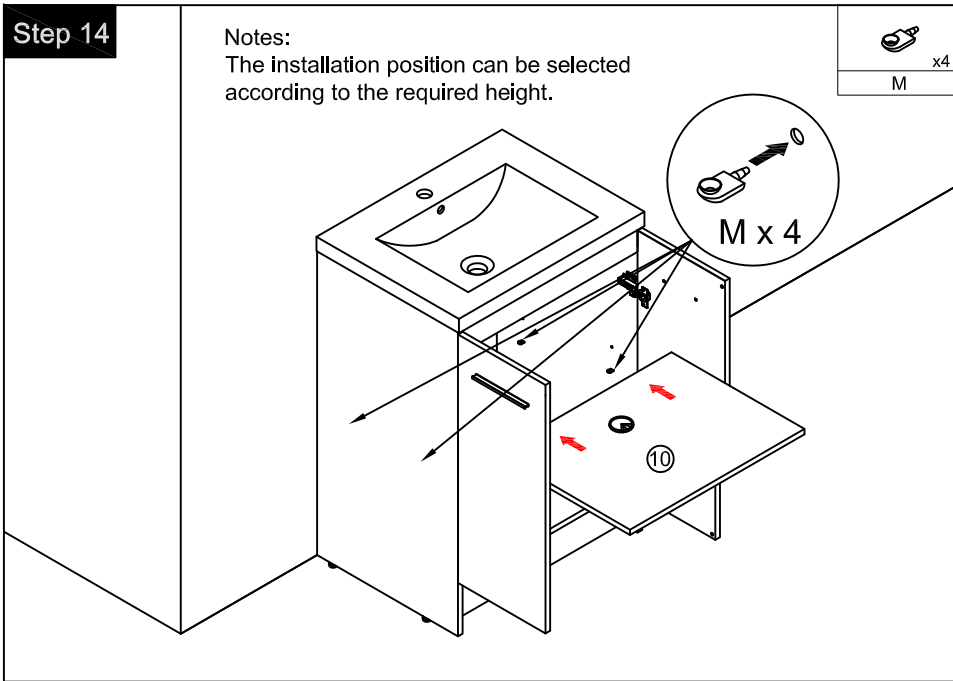


## Finished

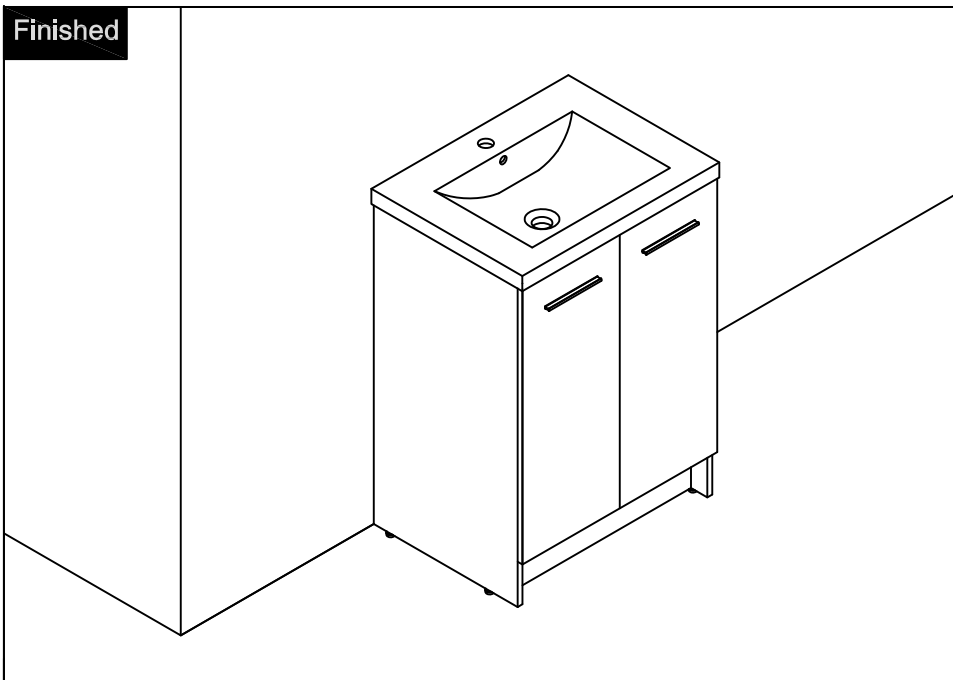




## Dimensions

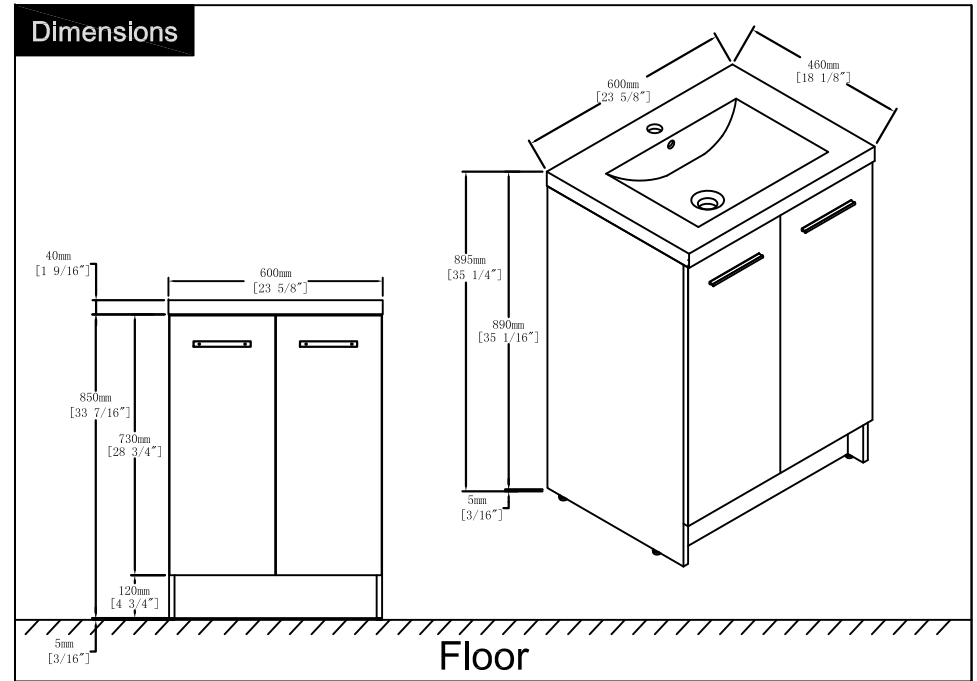


## Components

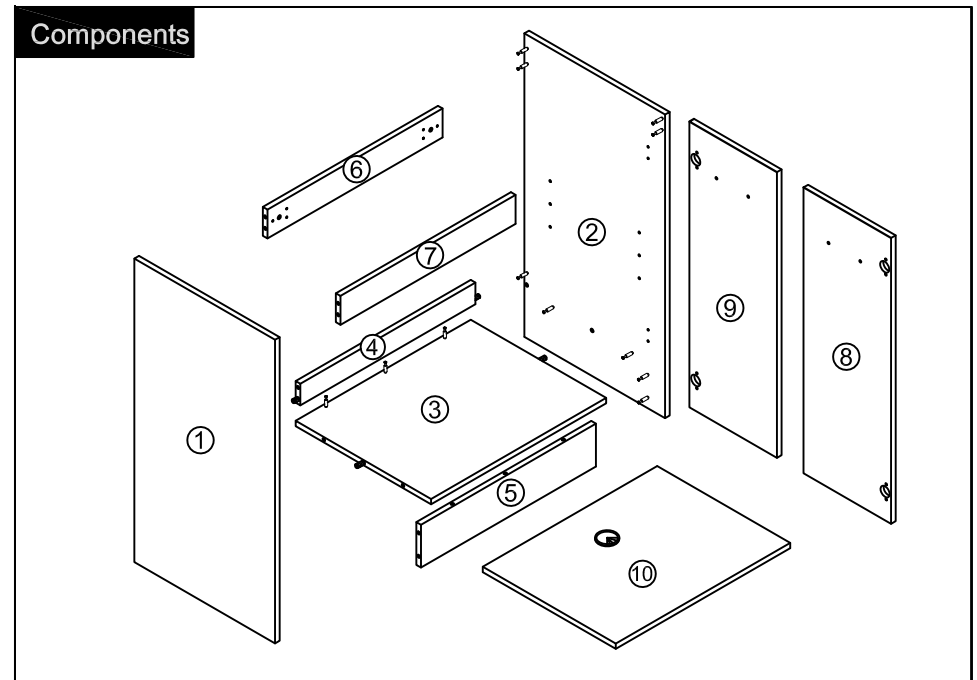





## Step 1

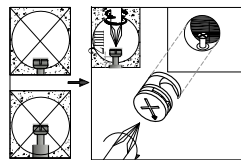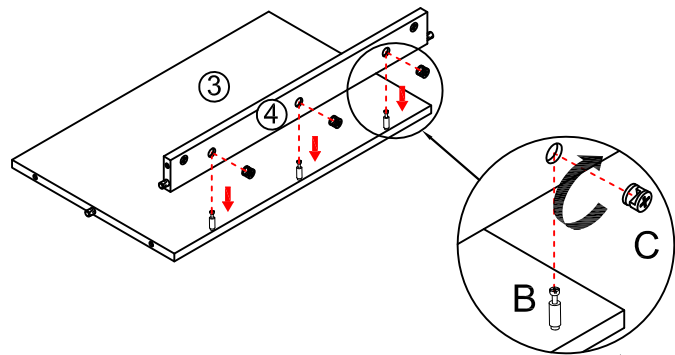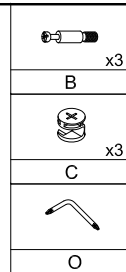




Notes: Screw installation depth as shown

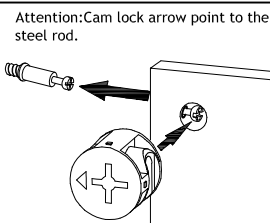


## Step 2

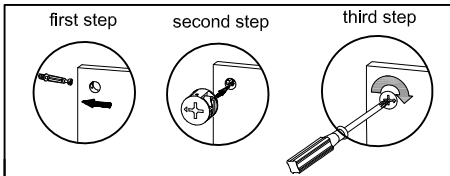
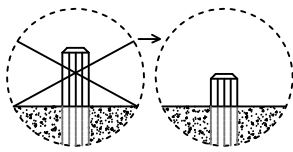
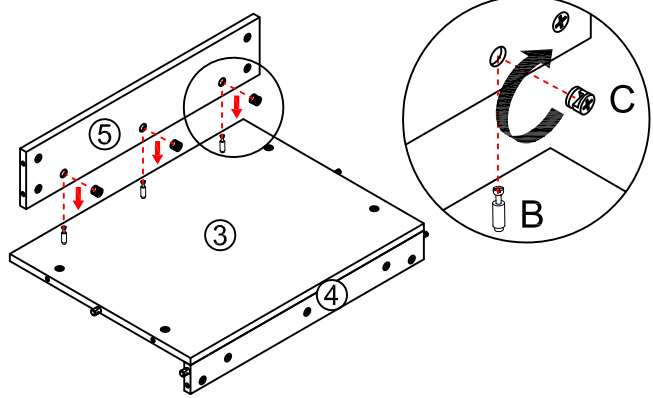
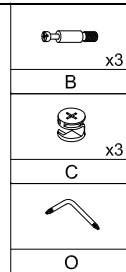


## Step 12

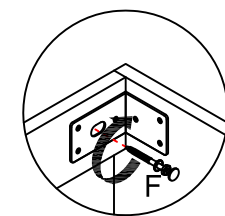
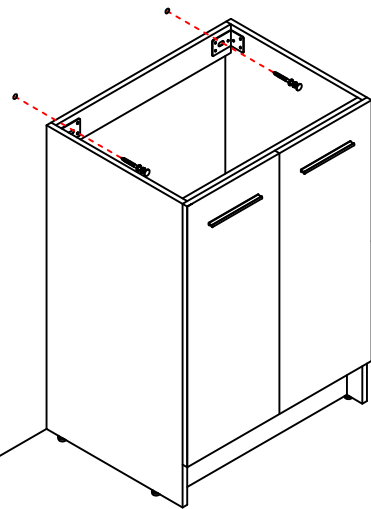
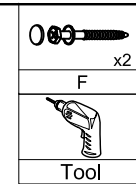


## Step 13

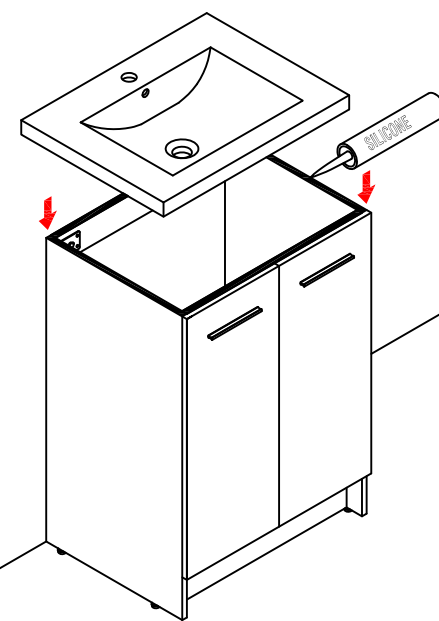


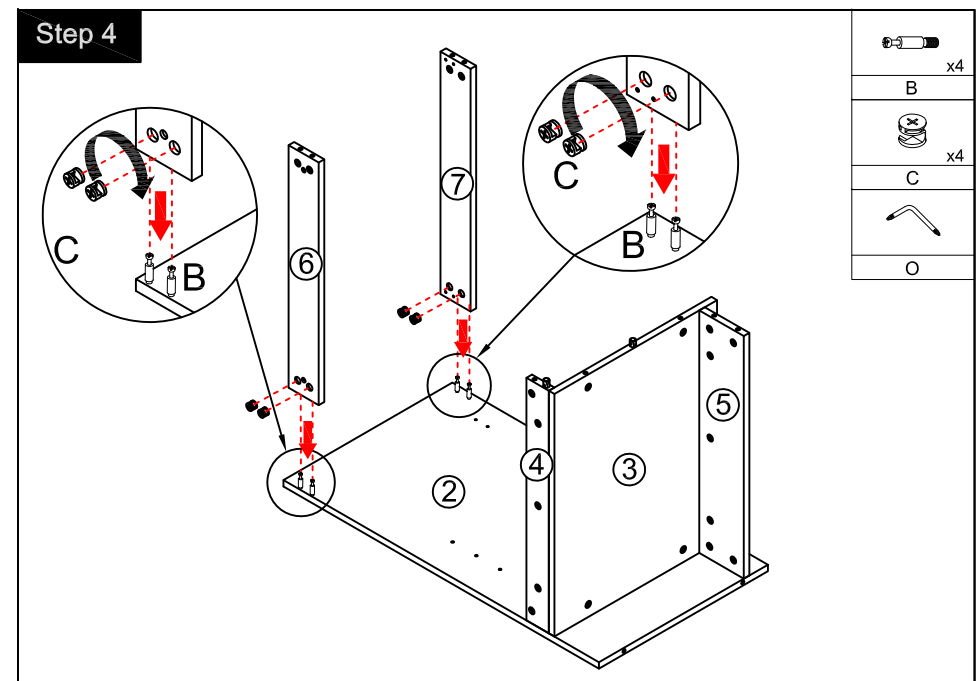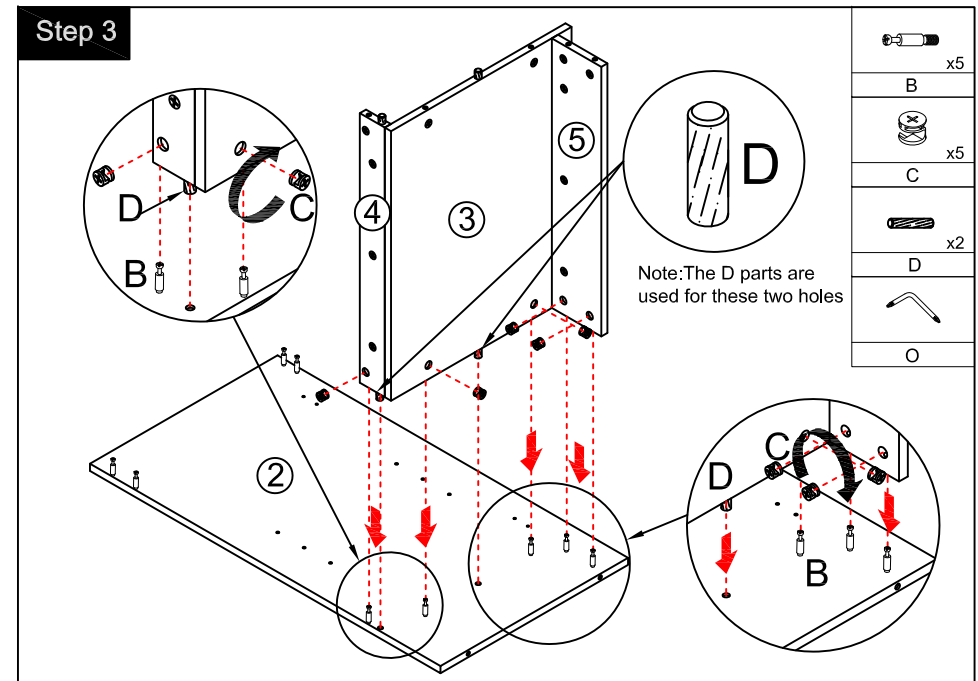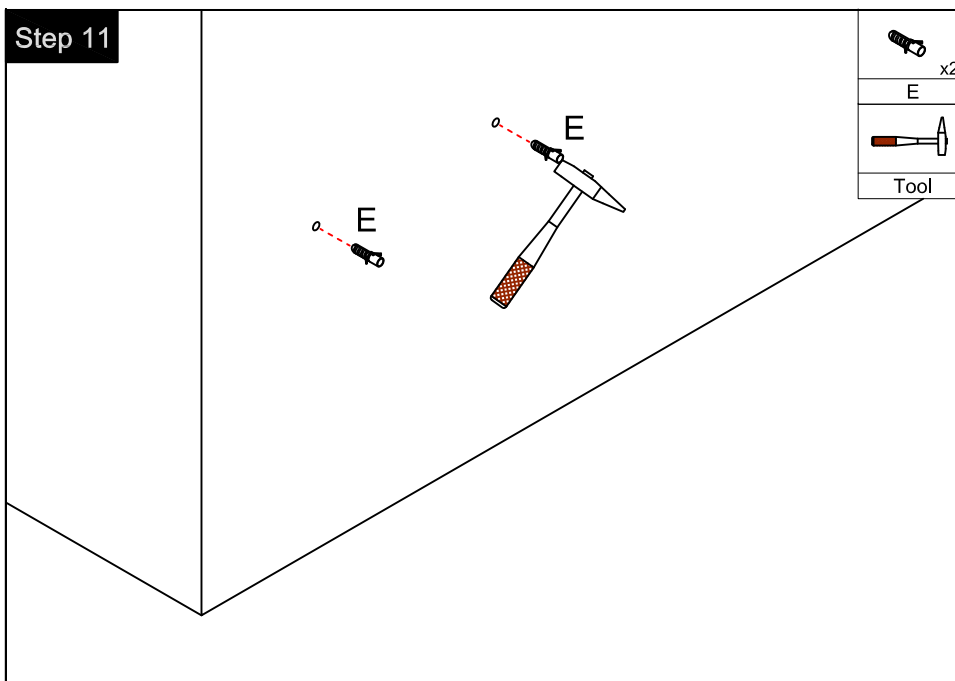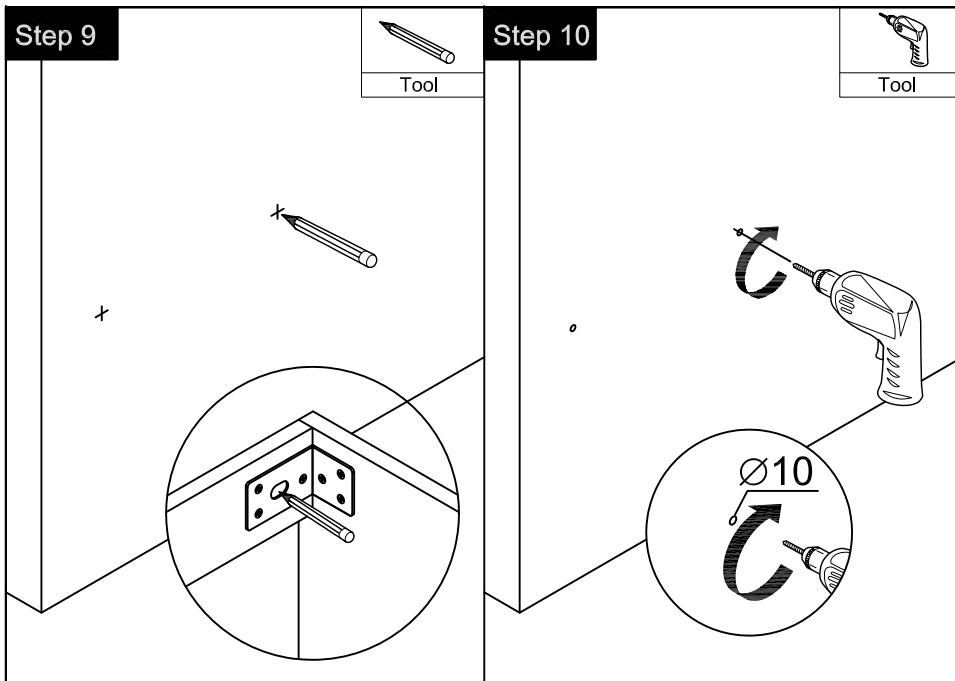

## Step 5

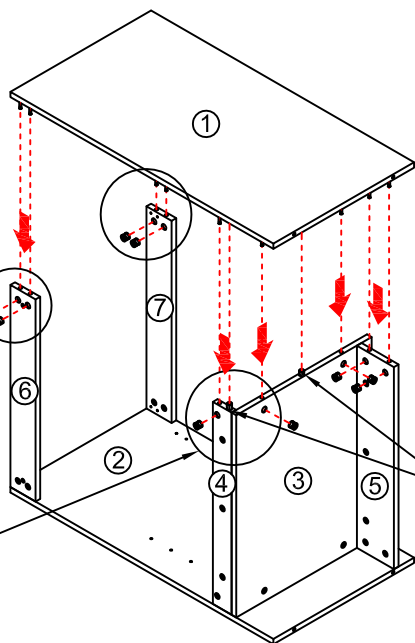
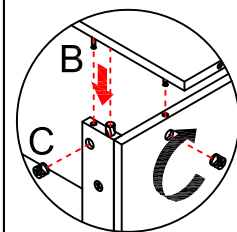
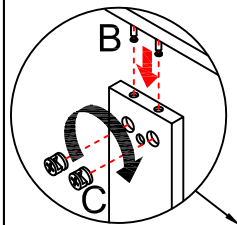


|  |    |
|--|----|
|  | x9 |
|  | x9 |
|  | x2 |
|  |    |

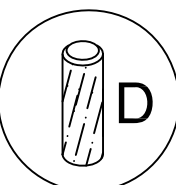


Note: The D parts are used for these two holes

## Step 7


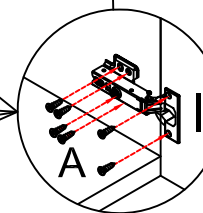
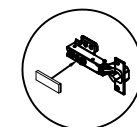
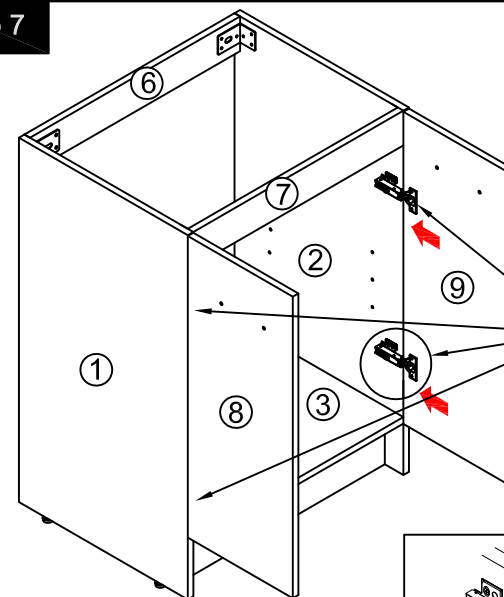


|  |     |
|--|-----|
|  | x4  |
|  | x24 |

You can adjust the doors by tightening or loosening the screws on the hinge.



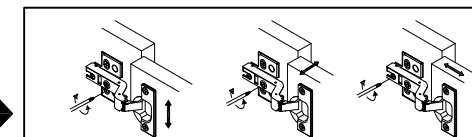


## Step 6

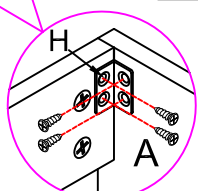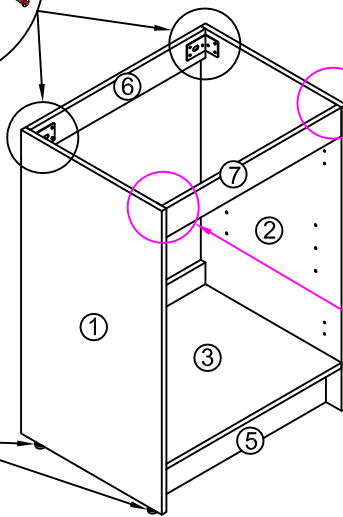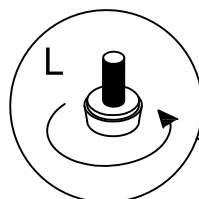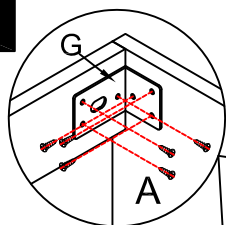

|  |     |
|--|-----|
|  | x2  |
|  | x2  |
|  | x20 |
|  | x4  |
|  |     |

## Step 8

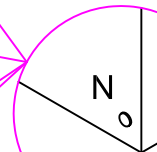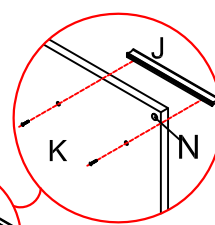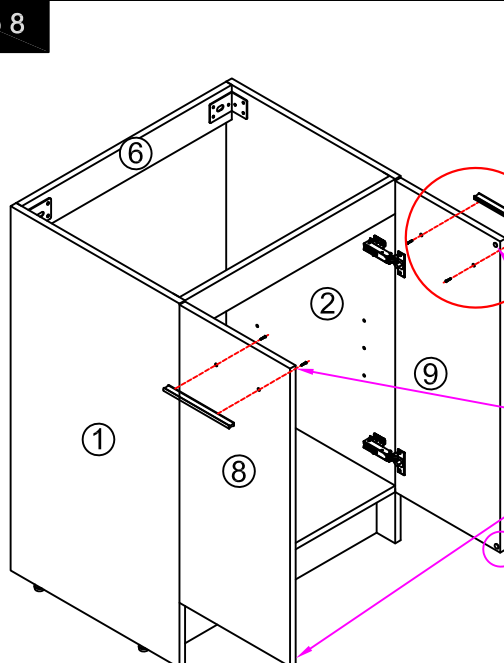



|  |    |
|--|----|
|  | x2 |
|  | x4 |
|  | x4 |
|  |    |

Installation Manual-UNOR SV 006F 12T

MOTIVATE  
YOUR LIFE !

## THANKS FOR WATCHING

Your feedback is invaluable to us and we would love to hear about your experience. Please take the time to leave us a review.

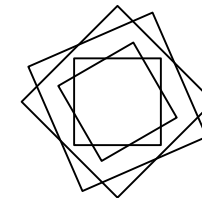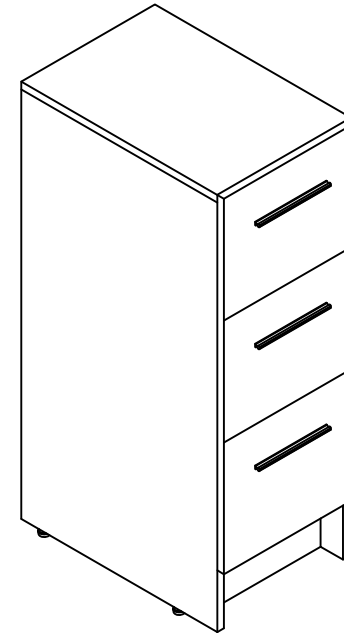


## Thank you for shopping with us!


We encourage you to take a few minutes to go through this booklet. It contains important information on installation and care tips to keep your furniture looking as good as new.

# Item NO.:UNOR SV 006F 12T


## Hardware
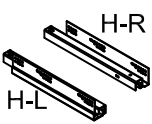
| NO. | Draw                                                                                                            | QTY | NO. | Draw                                                                                                       | QTY |
|-----|-----------------------------------------------------------------------------------------------------------------|-----|-----|------------------------------------------------------------------------------------------------------------|-----|
| A   | <br>Screws Ø4x14mm             | 30  | H   | <br>H-R<br>H-L<br>Track   | 3   |
| B   | <br>Two-in-one connector       | 54  | I   | <br>Handle                | 3   |
| C   | <br>Two-in-one connector       | 54  | J   | <br>Screws M4x18mm        | 6   |
| D   | <br>Wood plug                  | 8   | K   | <br>Adjustable feet       | 4   |
| E   | <br>Plastic anchor(Ø10mm)      | 2   | L   | <br>Anti-collision gasket | 12  |
| F   | <br>Screws for fix on the wall | 2   | M   | <br>Screwdriver           | 1   |
| G   | <br>Screws Ø4x20mm             | 6   |     |                                                                                                            |     |


## Recommended tools

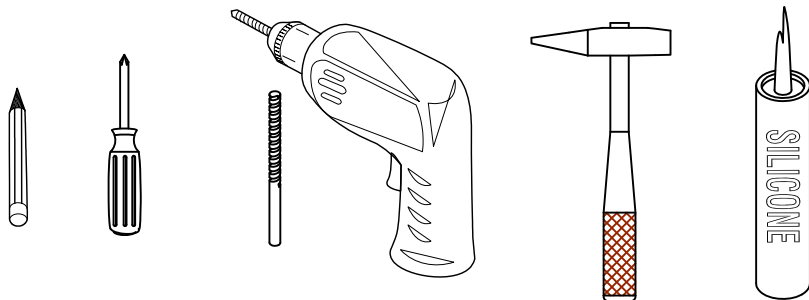


## Dimensions

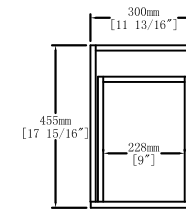

Top View

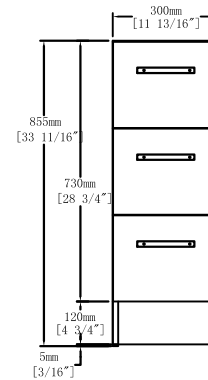

Front View

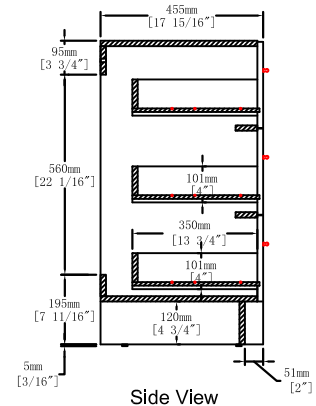


Side View


## CARE CLEANING AND MAINTENANCE

- 1.Dust regularly with a soft , dry cloth.
- 2.Avoid the use of all chemicals household cleaners, abrasives, or cleaners that contain lemon, vinegar, or other acids that may damage the finish.
- 3.Excessive exposure to sunlight and extreme changes in temperature and moisture can damage wood furniture.
- 4.Do not place hot appliances, such as curling irons and hot hair dryers directly on the countertop. Wipe spills immediately.


Finished

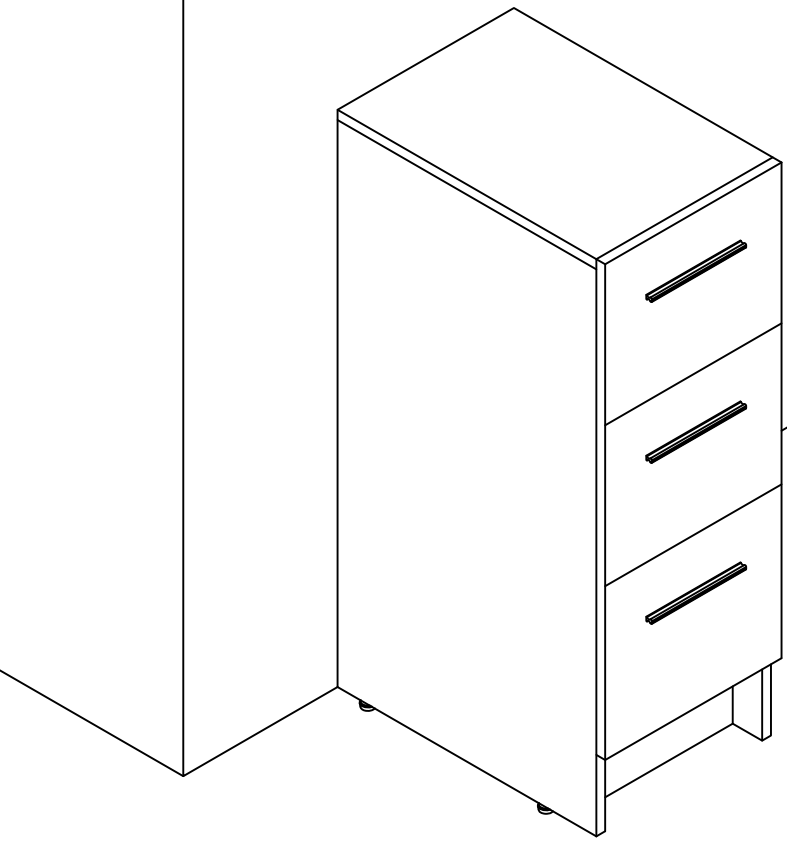

Dimensions

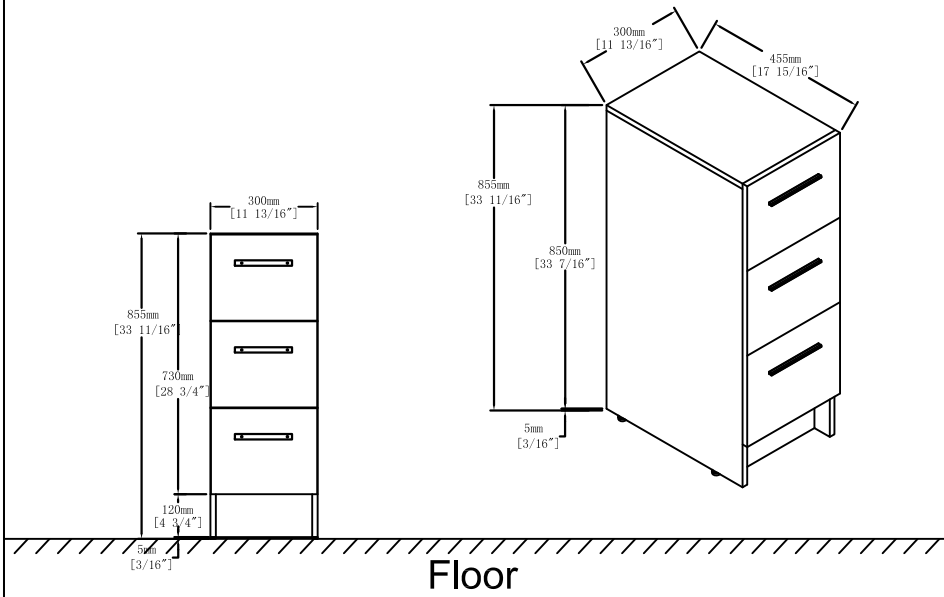



Components

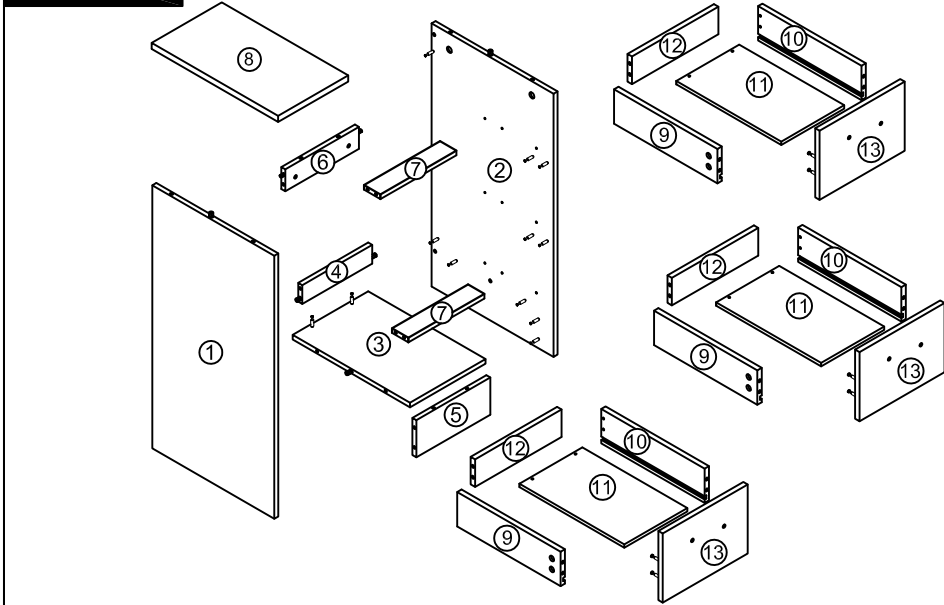

## Step 1


Note: Follow the holes positions exactly.

|             |     |     |
|-------------|-----|-----|
| H-L         | H-R | x3  |
| H           |     |     |
| (Ø4 x 14mm) |     |     |
|             | A   | x18 |
| Tool        |     |     |

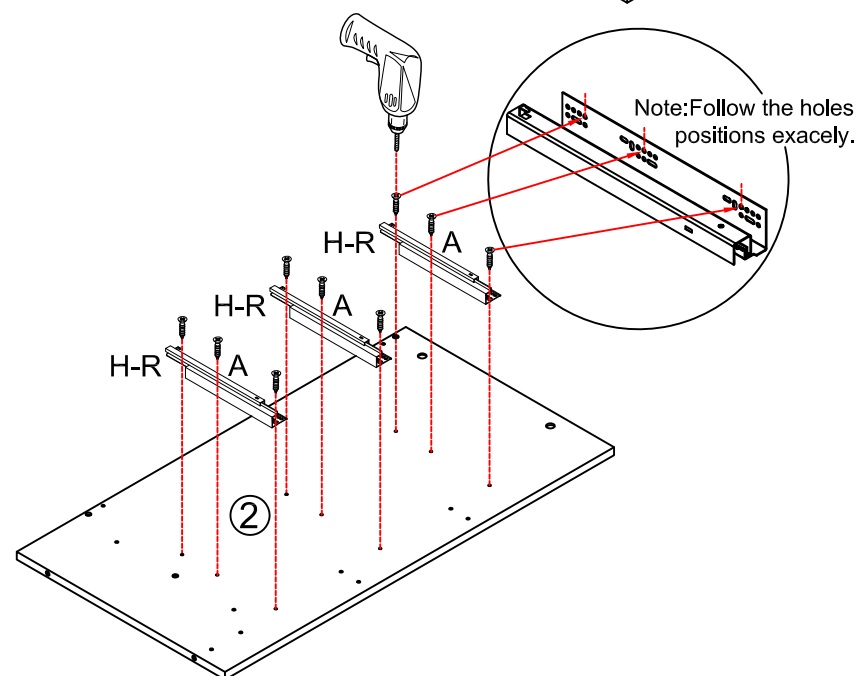
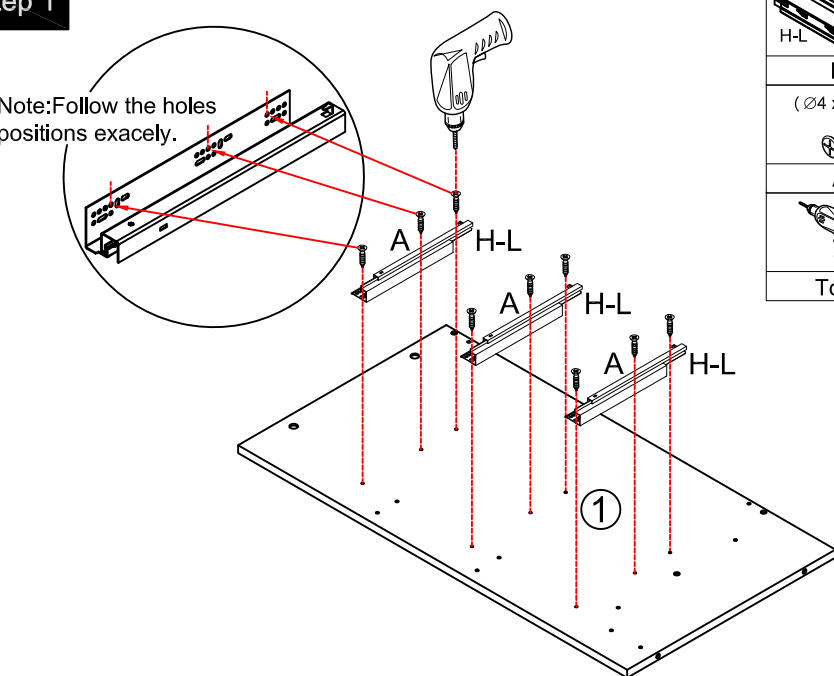


## Step 16


|             |     |
|-------------|-----|
| (Ø4 x 14mm) | x12 |
| A           |     |
| Tool        |     |

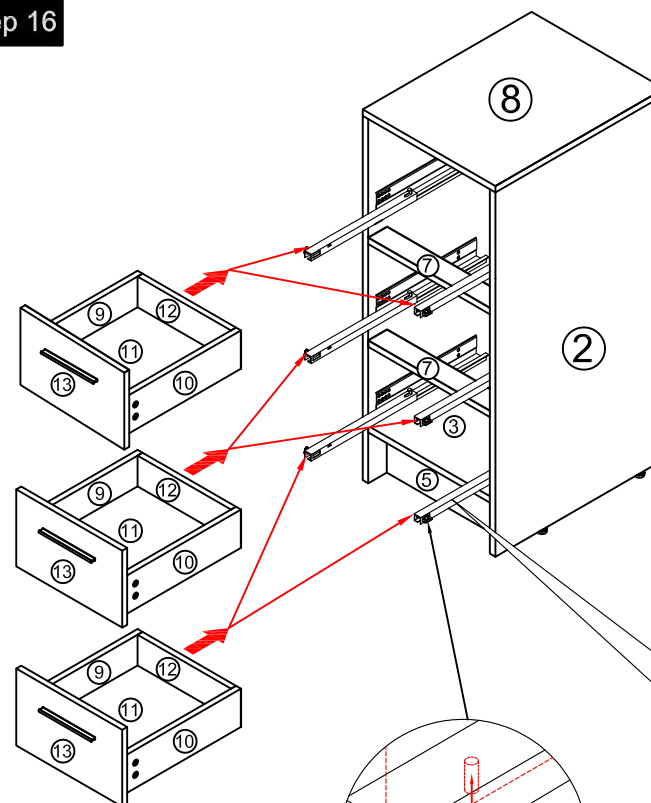


First

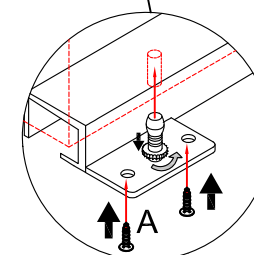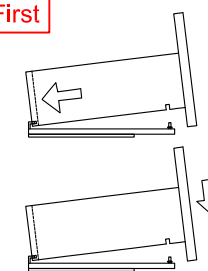

Third step: The bottom of the rail is fixed with screw A.



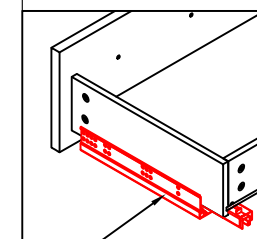


Second step: Tuck the rear holes.





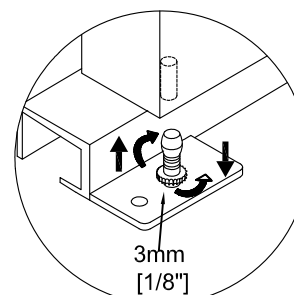


Note: The rails adjust their height 3mm.


## Step 15

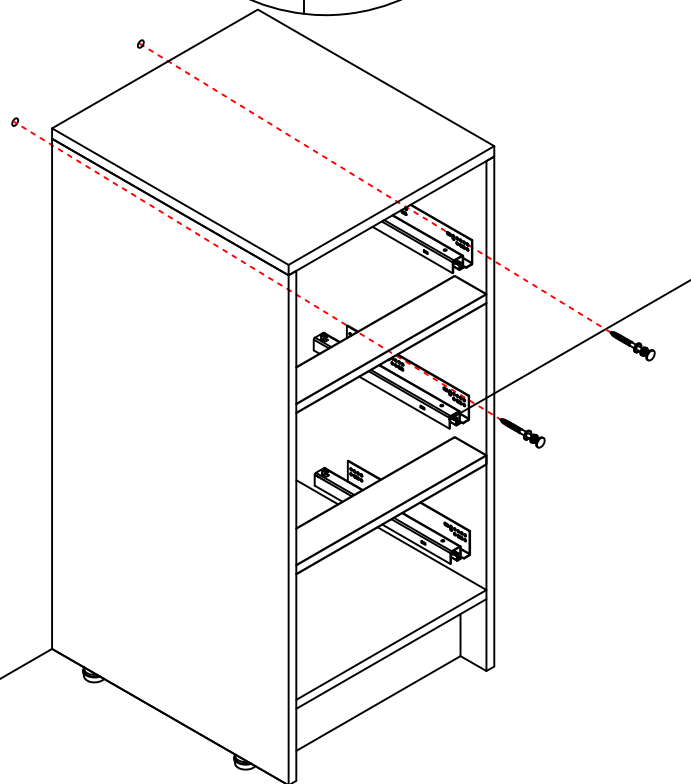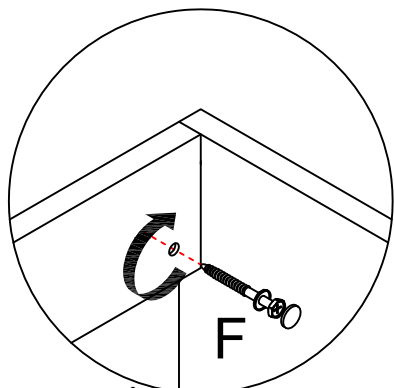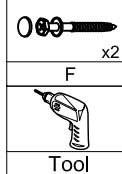






## Step 2

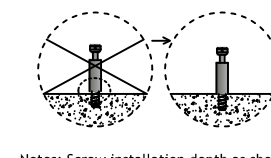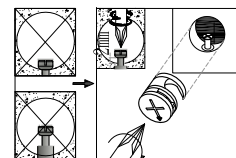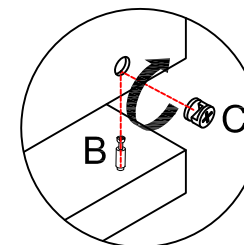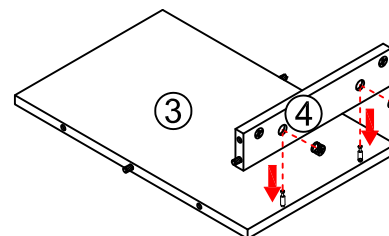


Notes: Screw installation depth as shown

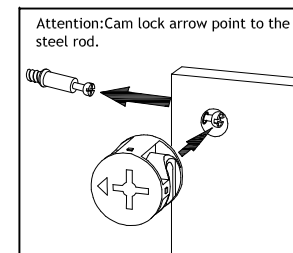


## Step 3

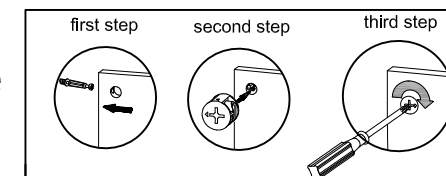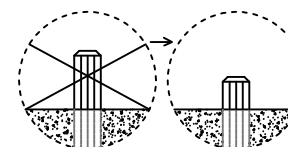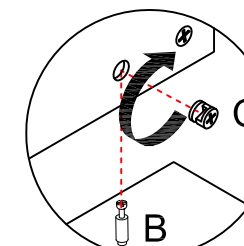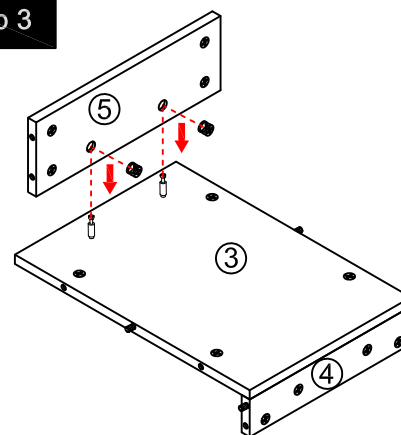


## Step 4

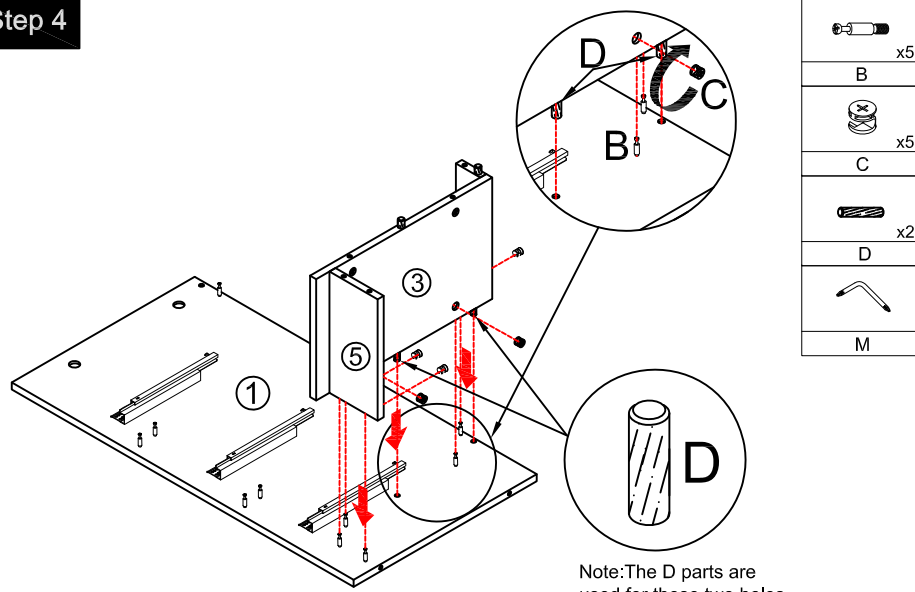


## Step 5

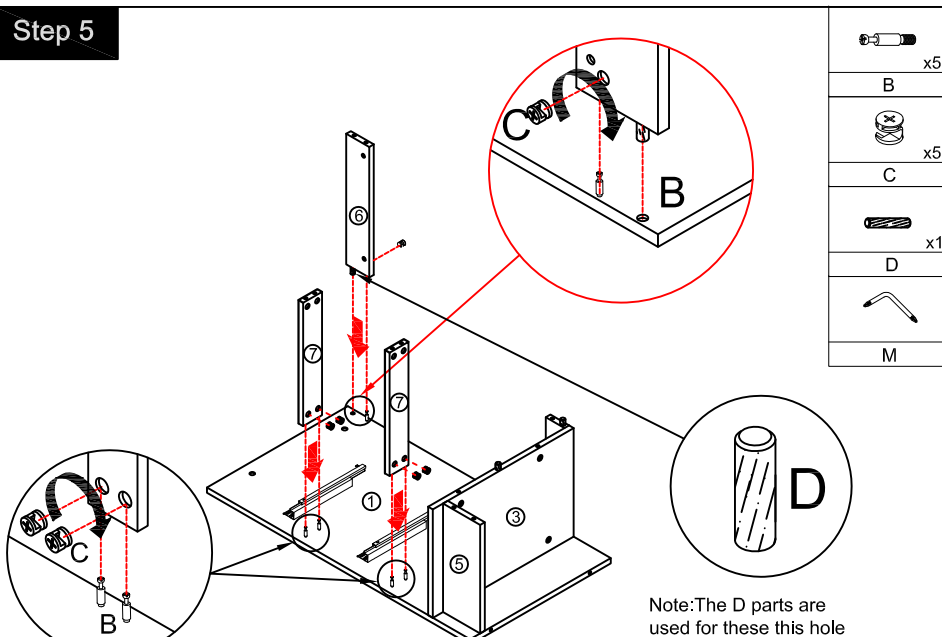


## Step 13

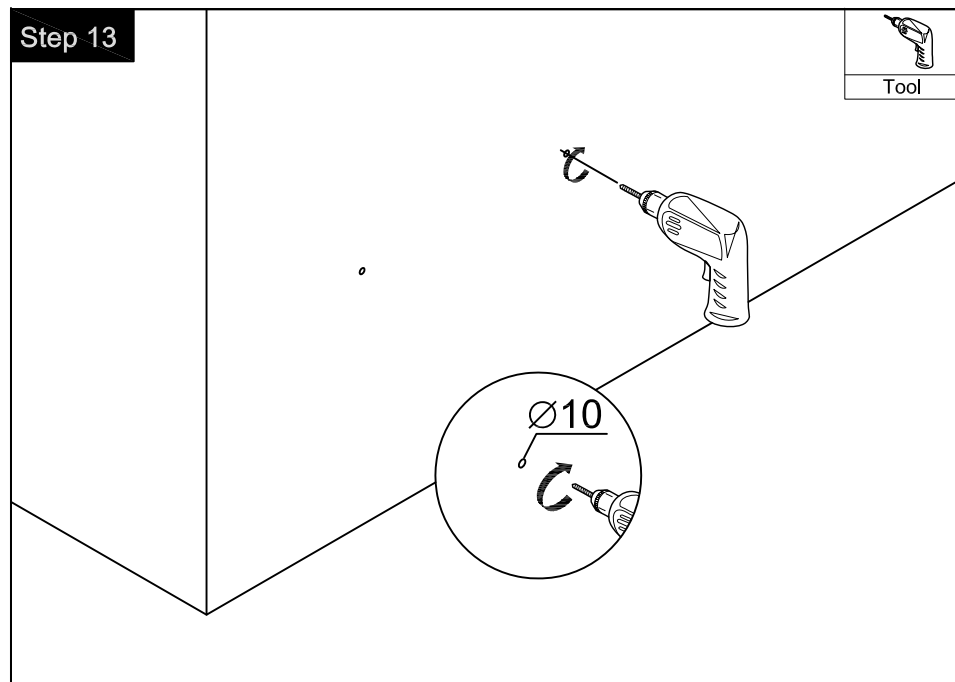

## Step 14

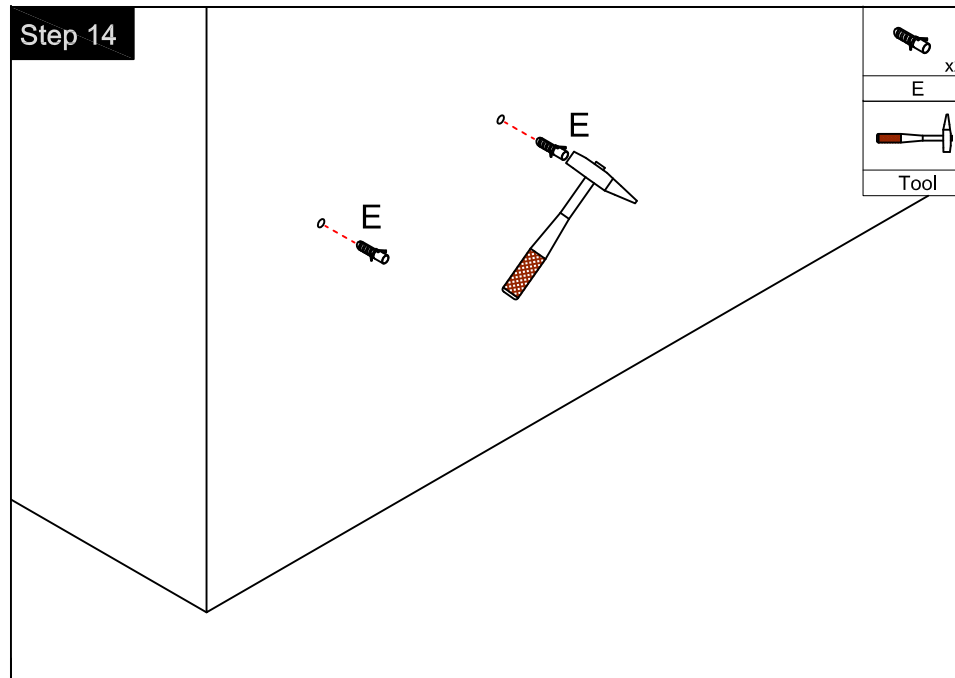


## Step 11

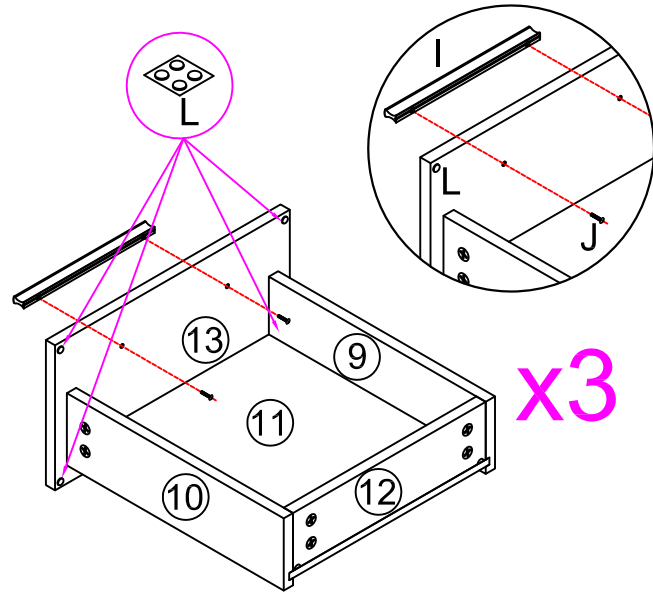


|                                                                                    |      |
|------------------------------------------------------------------------------------|------|
|  | x3   |
| I                                                                                  |      |
| (M4 x 18mm)                                                                        |      |
|  | x6   |
| J                                                                                  |      |
|  | x12  |
| L                                                                                  |      |
|  | Tool |

## Step 12

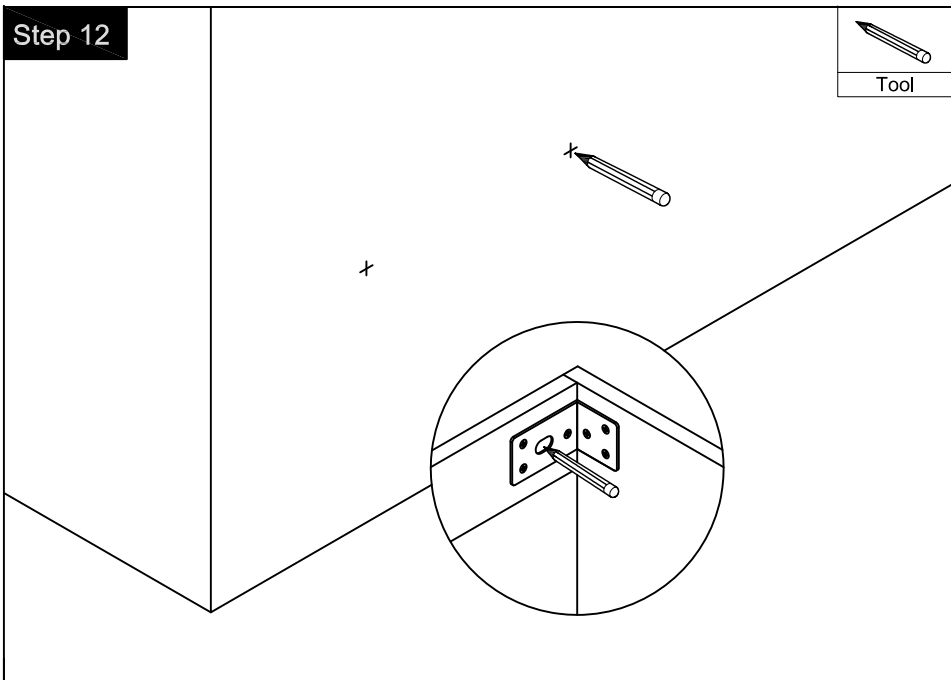

|                                                                                    |  |
|------------------------------------------------------------------------------------|--|
|  |  |
| Tool                                                                               |  |


## Step 6

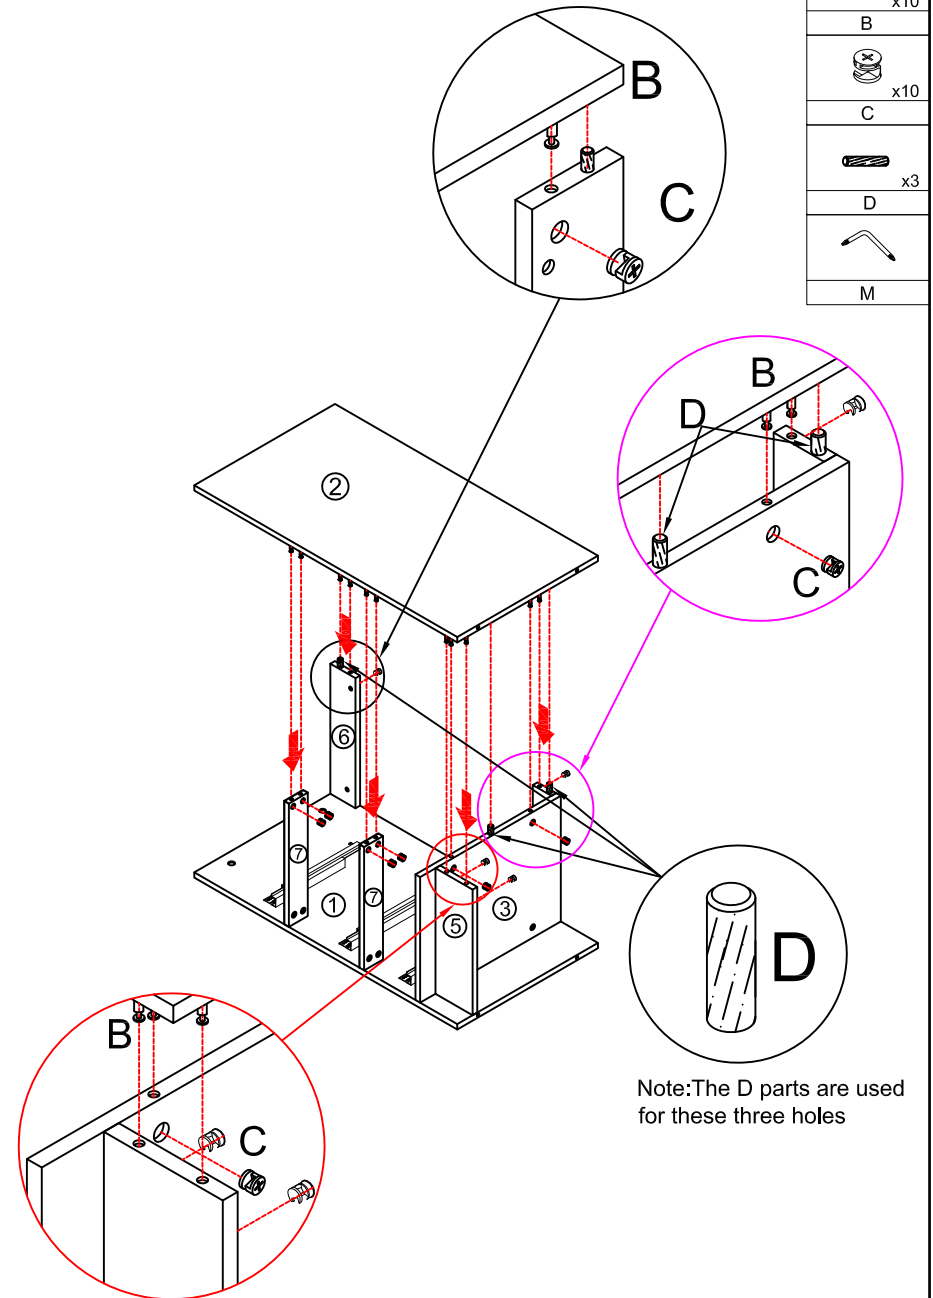


|                                                                                     |      |
|-------------------------------------------------------------------------------------|------|
|  | x10  |
| B                                                                                   |      |
|  | x10  |
| C                                                                                   |      |
|  | x3   |
| D                                                                                   |      |
|  | Tool |

Note: The D parts are used for these three holes


## Step 7

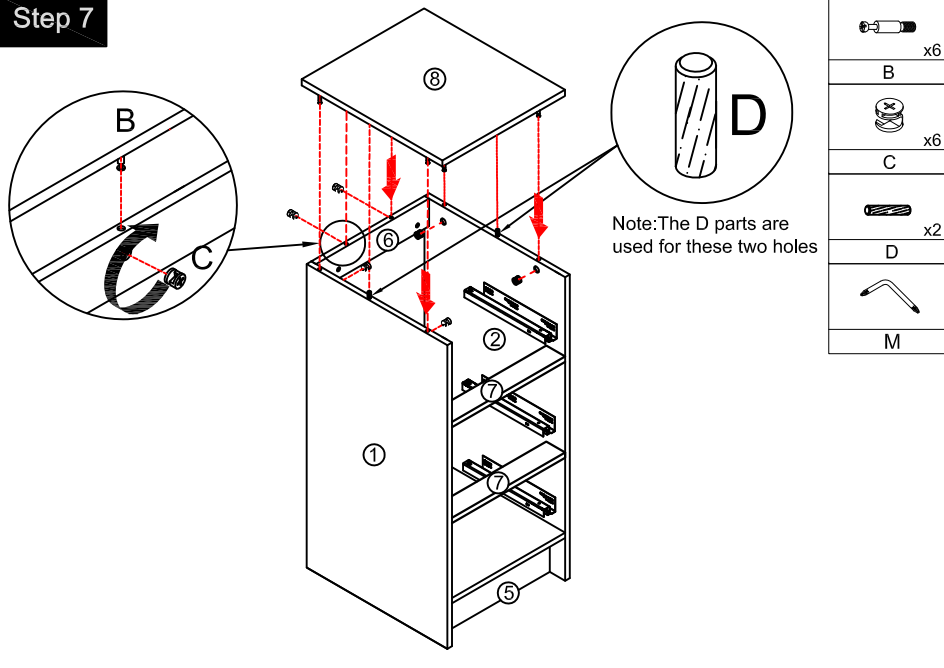

## Step 8

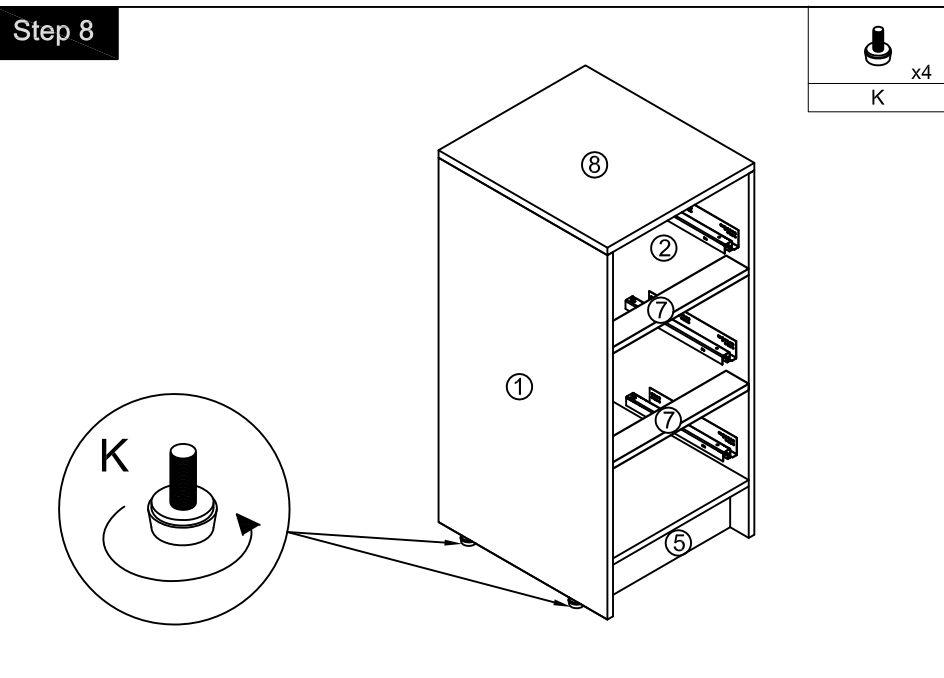

## Step 9

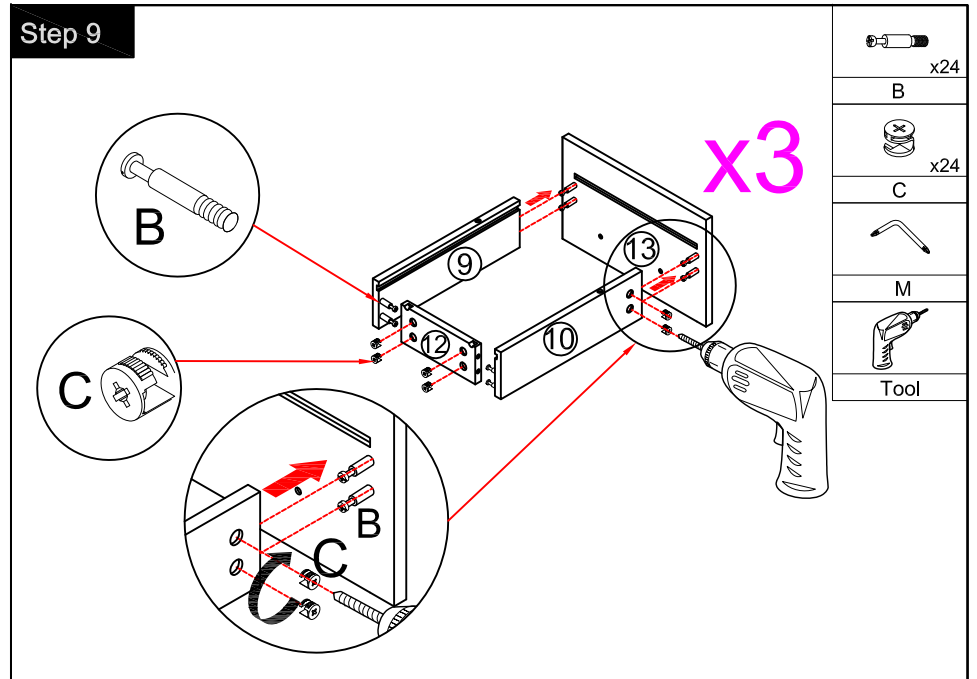

## Step 10

