



ASSEMBLY INSTRUCTIONS

SKU CODE: (N710P429519Q)



















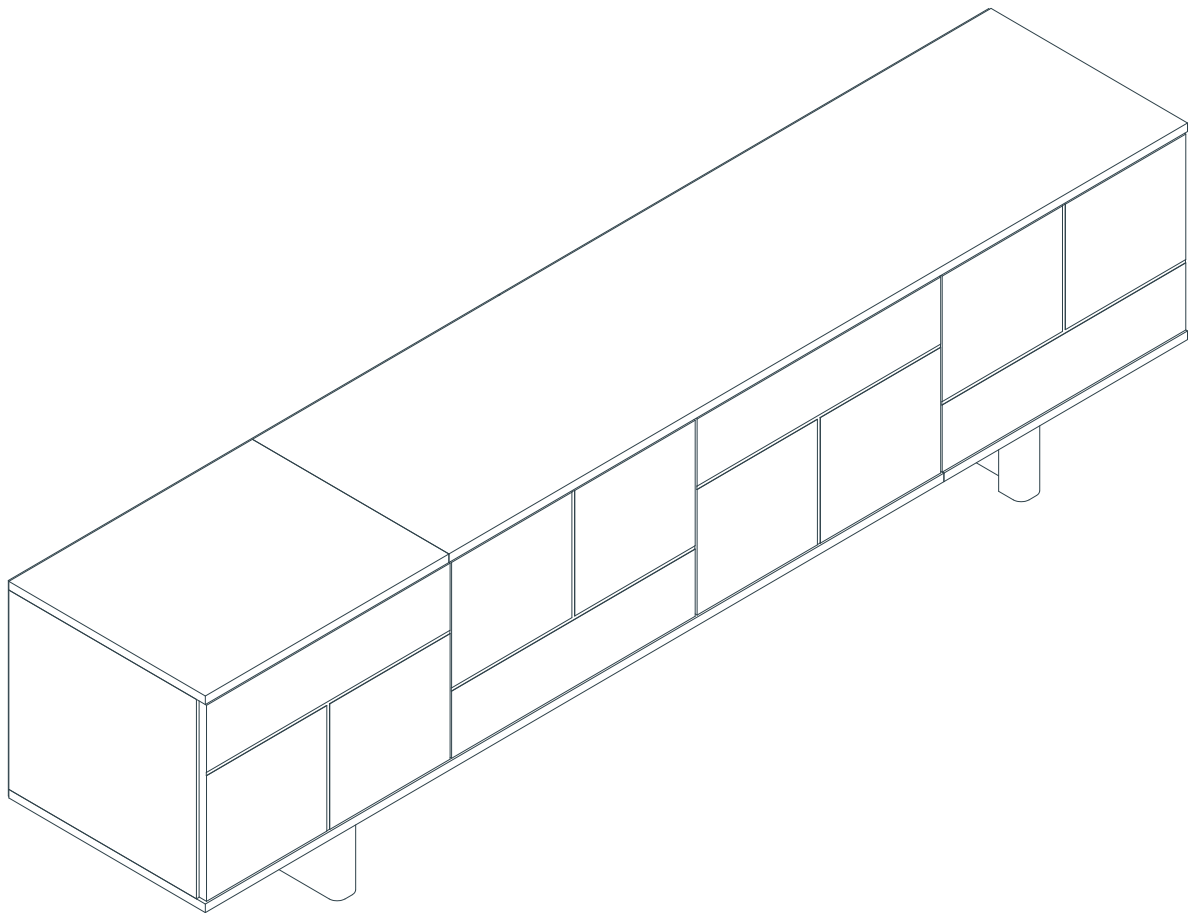


Detail View





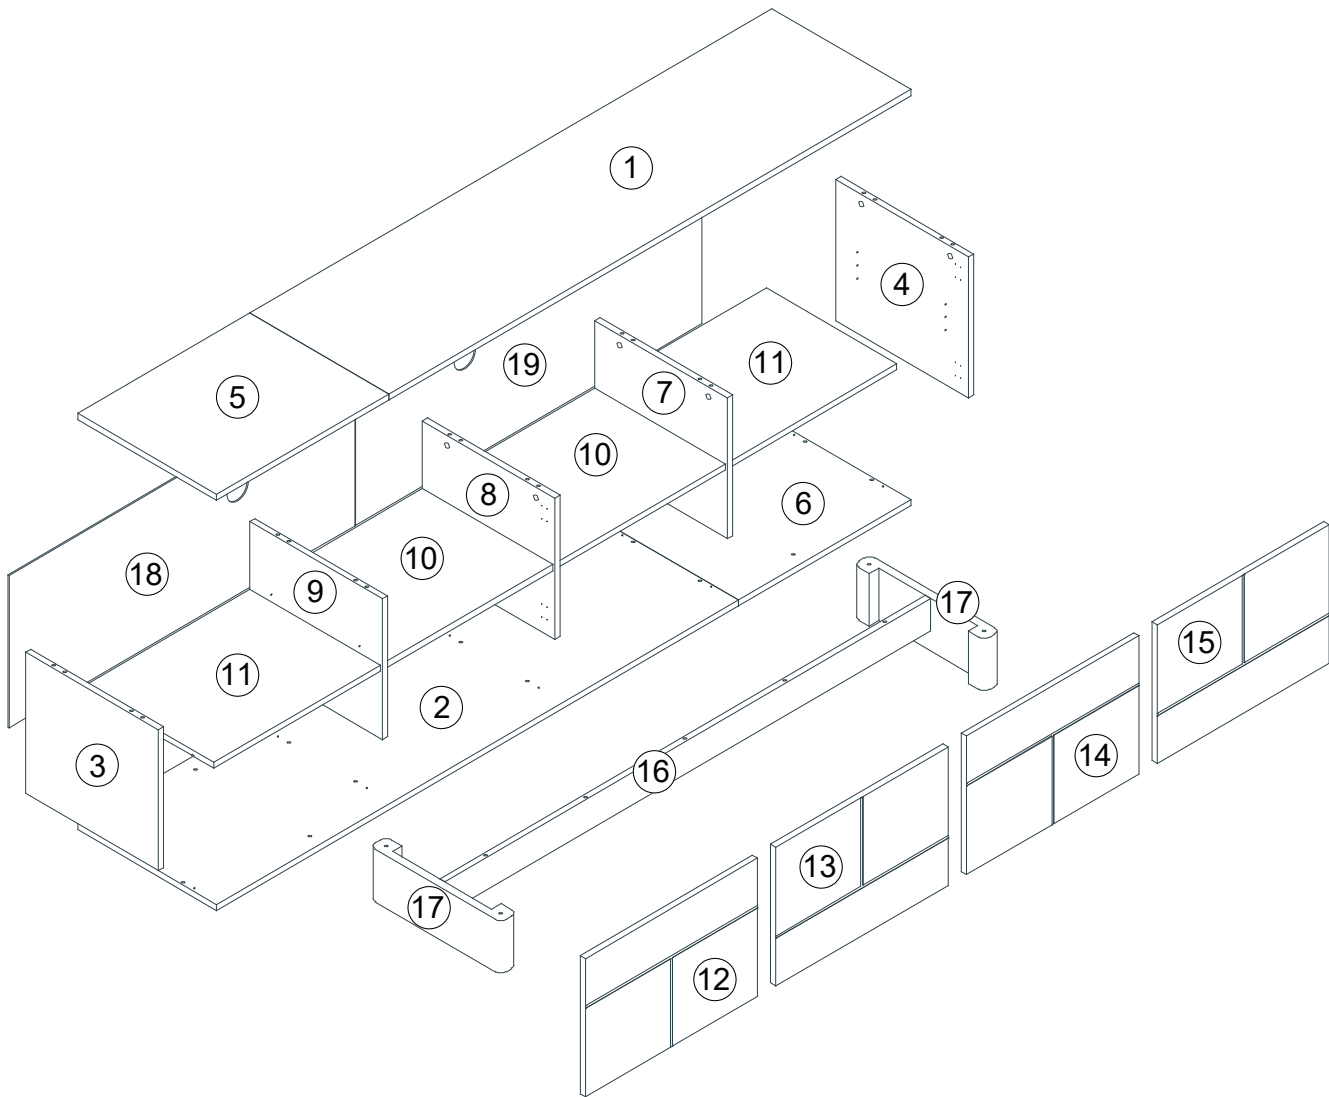


Part List


N710P429519Q

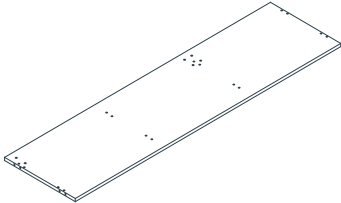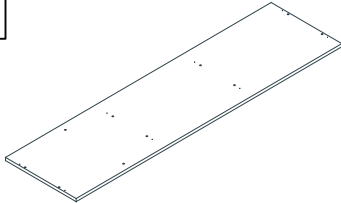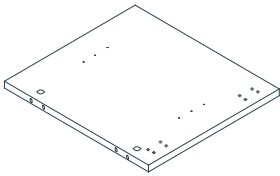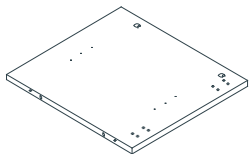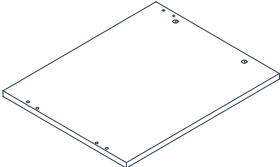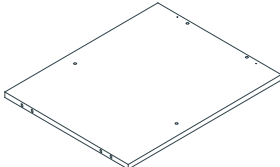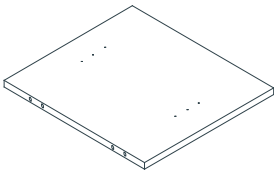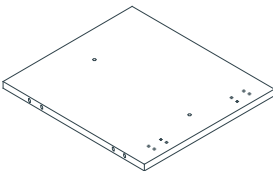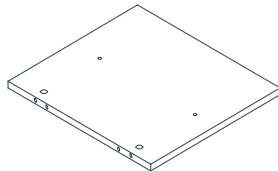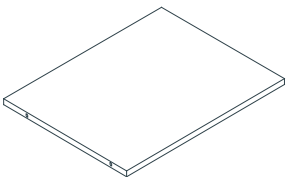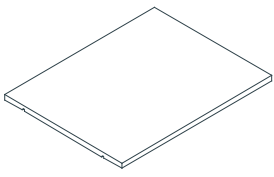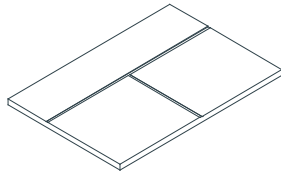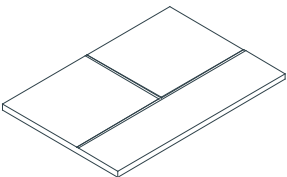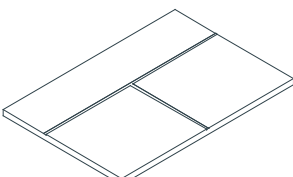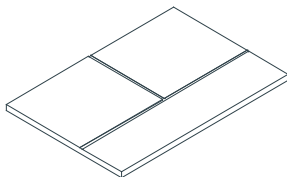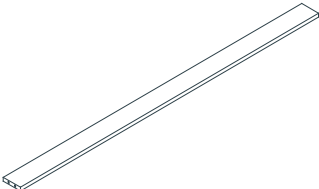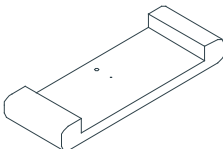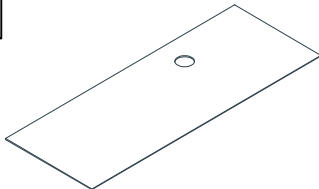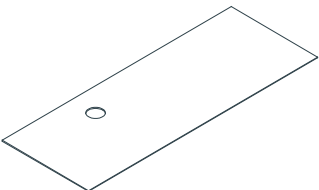1  Top Panel - 1pc	2  Bottom Panel - 1 pc	3  Side Panel (Left) - 1 pc
4  Side Panel (Right) - 1 pc	5  Top Panel (Small) - 1pc	6  Bottom Panel (Small) - 1pc
7  Right Panel (Center) - 1pc	8  Center Panel - 1pc	9  Left Panel (Center) - 1pc
10  Shelf (center) - 2 pcs	11  Shelf (Left/Right) - 2 pcs	12  Door Panel (Left) - 1pc
13  Door Panel (Center) - 1 pc	14  Door Panel (center) - 1 pc	15  Door Panel (Right) - 1 pc
16  Leg Panel (Center) - 1 pc	17  Leg Panel (Left / Right) - 2 pcs	18  Back Panel - 1 pc
19  Back Panel - 1 pc		

Hardware List N710P429519Q



A  Ø8*30mm	B  Ø8*50mm	C 
Wood Dowel (28 pcs)	Wood Dowel (6 pcs)	Cam Nut (19 pcs)
D  	E  Ø4 x 45mm	F  Ø3.5 x 16mm
Cam Bolt (19 pcs)	Chip Board Screw (10 pcs)	Chip Board Screw (64 pcs)
G 	H 	I  3/4"
Metal Shelf Support (8 pcs)	Metal Plate (2 pcs)	Nails (52 pcs)
J  5/8"	K  2/8"	L 
Hydraulic Hinges (4 pcs)	Hydraulic Hinges (4 pcs)	Buffer (4 sets)
M  M6 x 25 mm	N 	
JCBC Screw (4 pcs)	Allen Key M4 (1 pc)	


ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

STEP 1 :


A	B	D	F	L
				
8 PCS	4 PCS	17 PCS	8 PCS	4 PCS

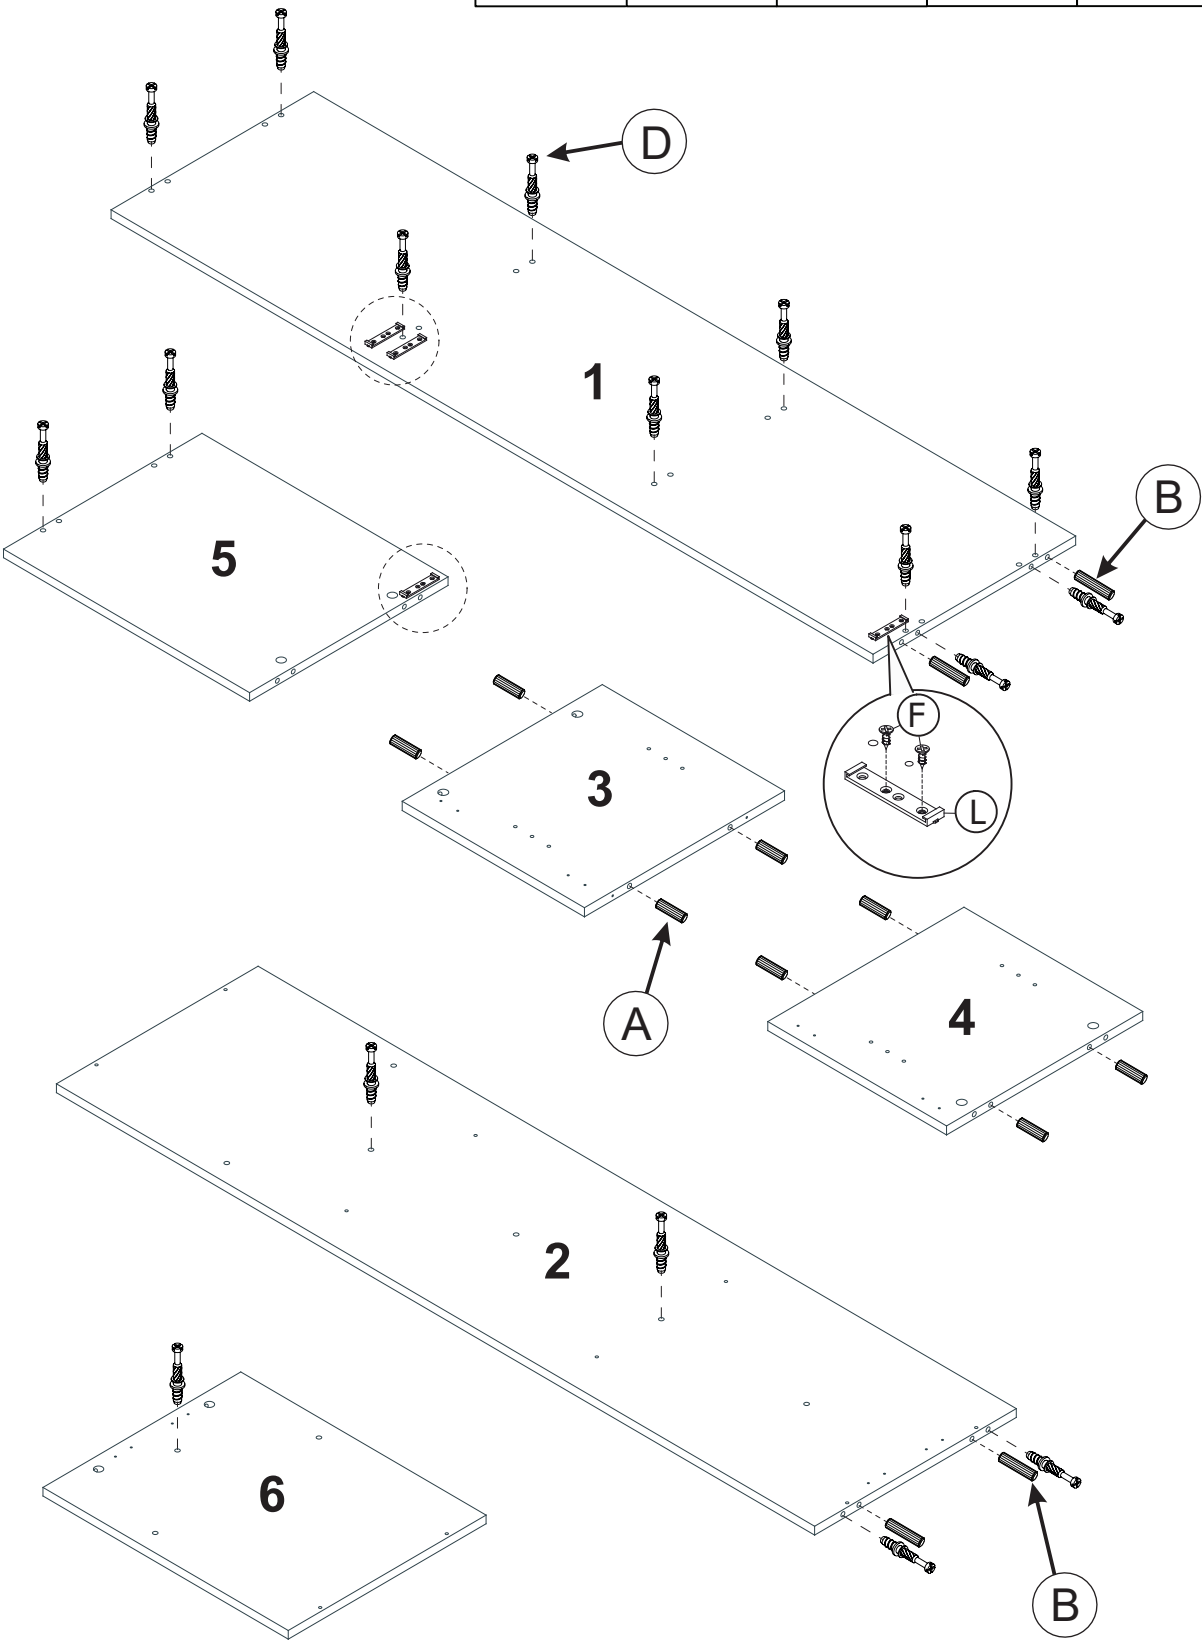


STEP 2 :

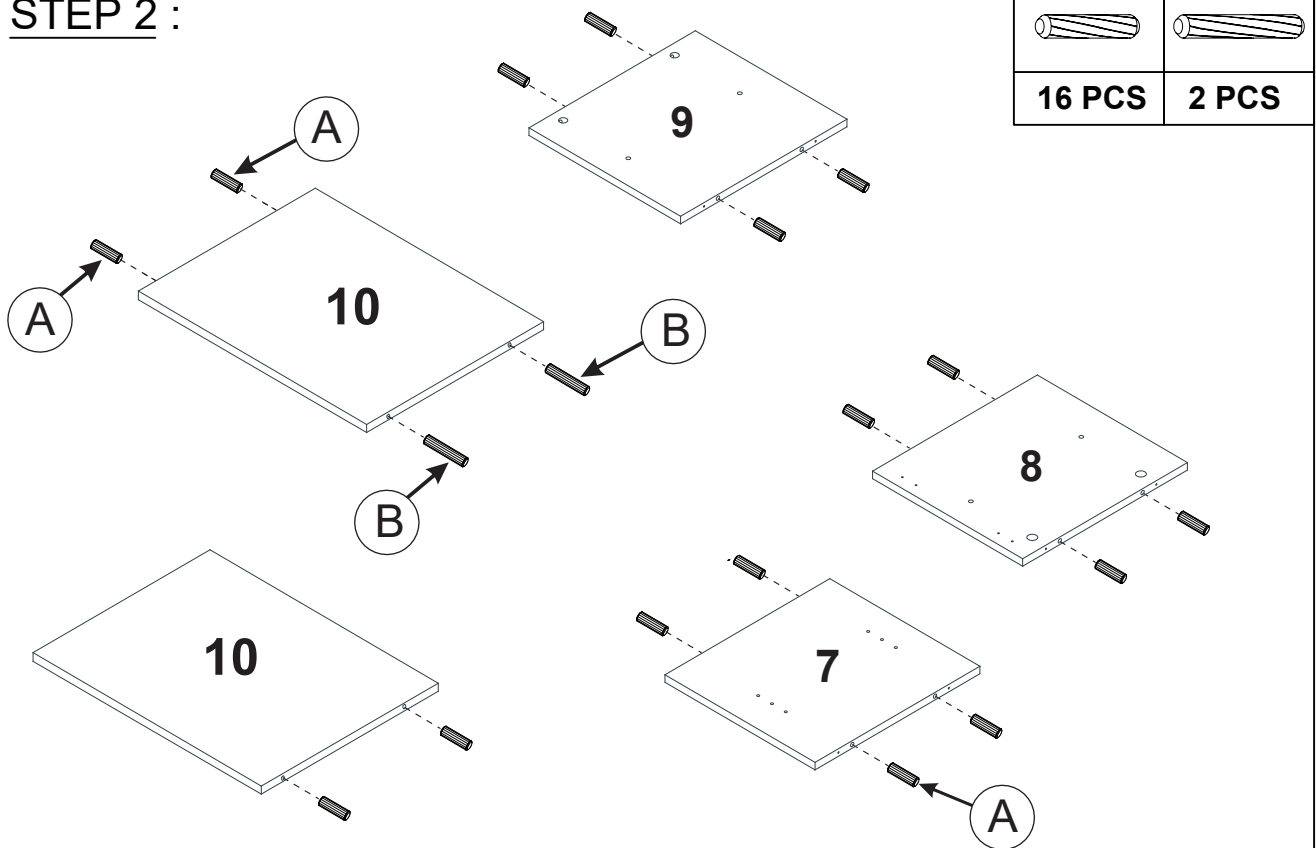

STEP 3 :

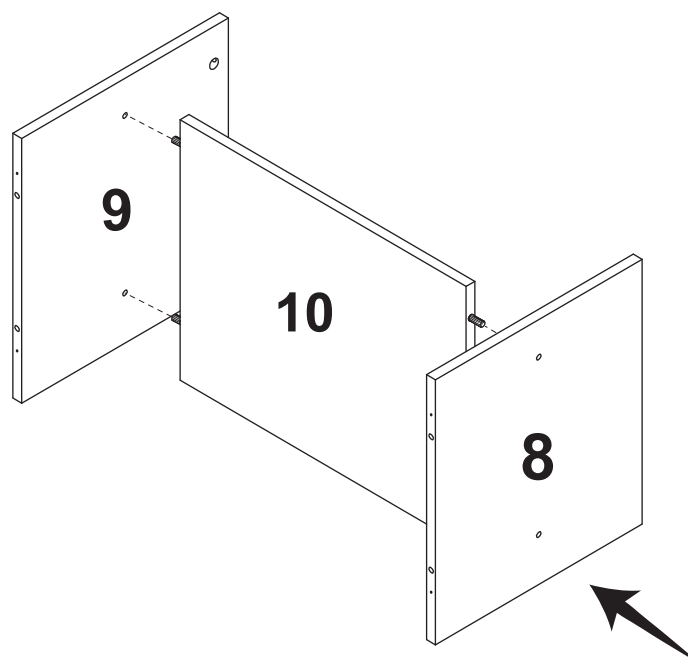

STEP 4 :

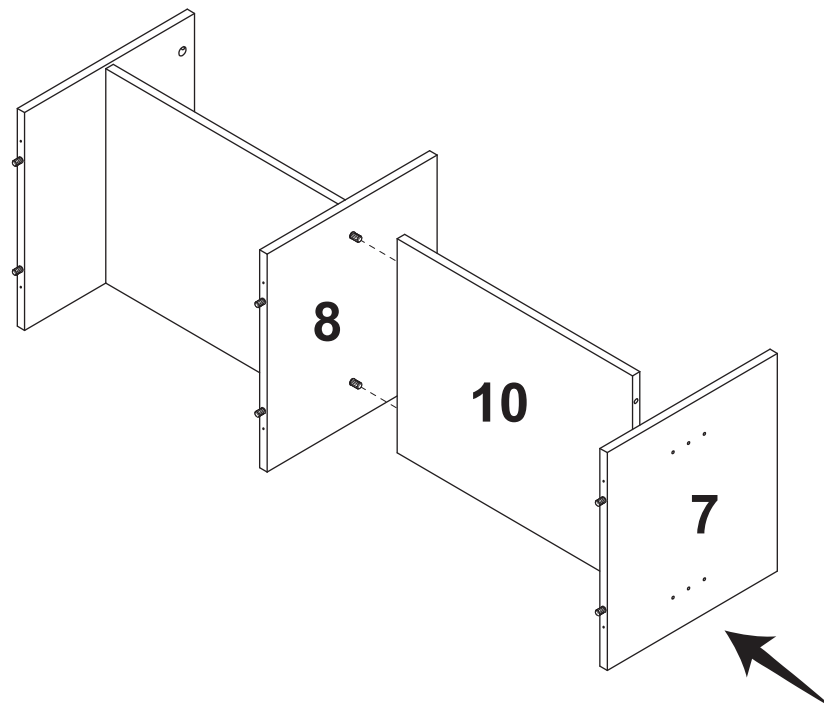


STEP 5 :


C




2 PCS

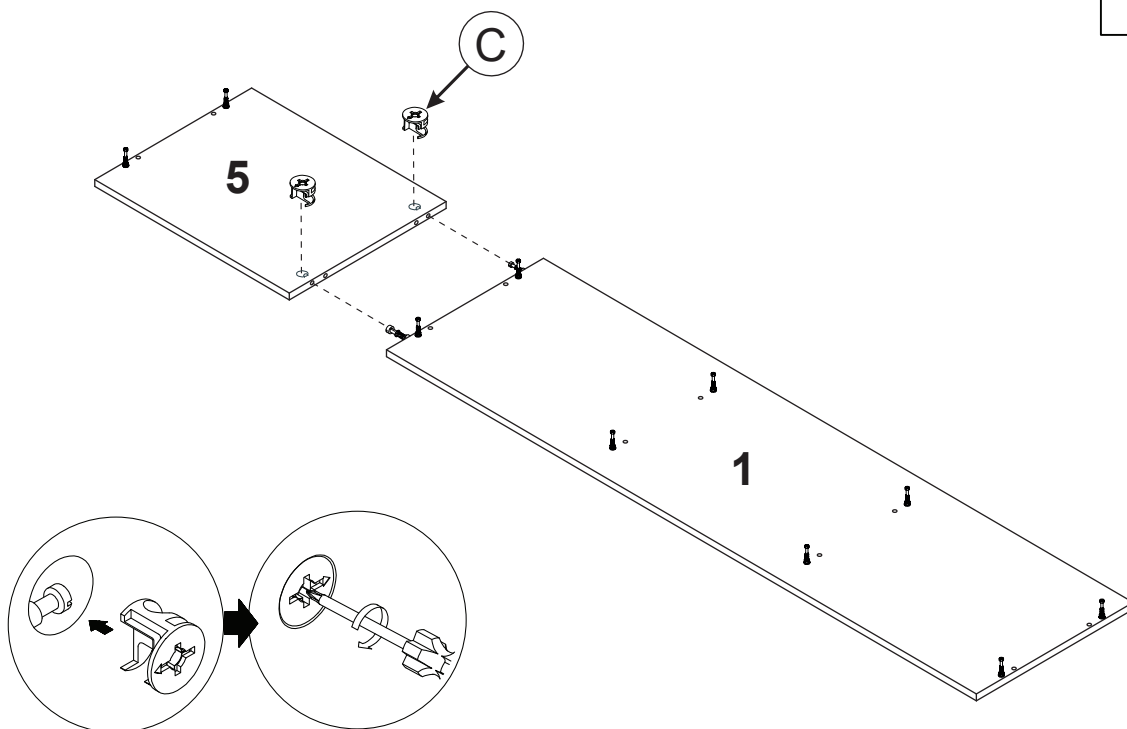

STEP 6 :

L	C
	
4 PCS	10 PCS

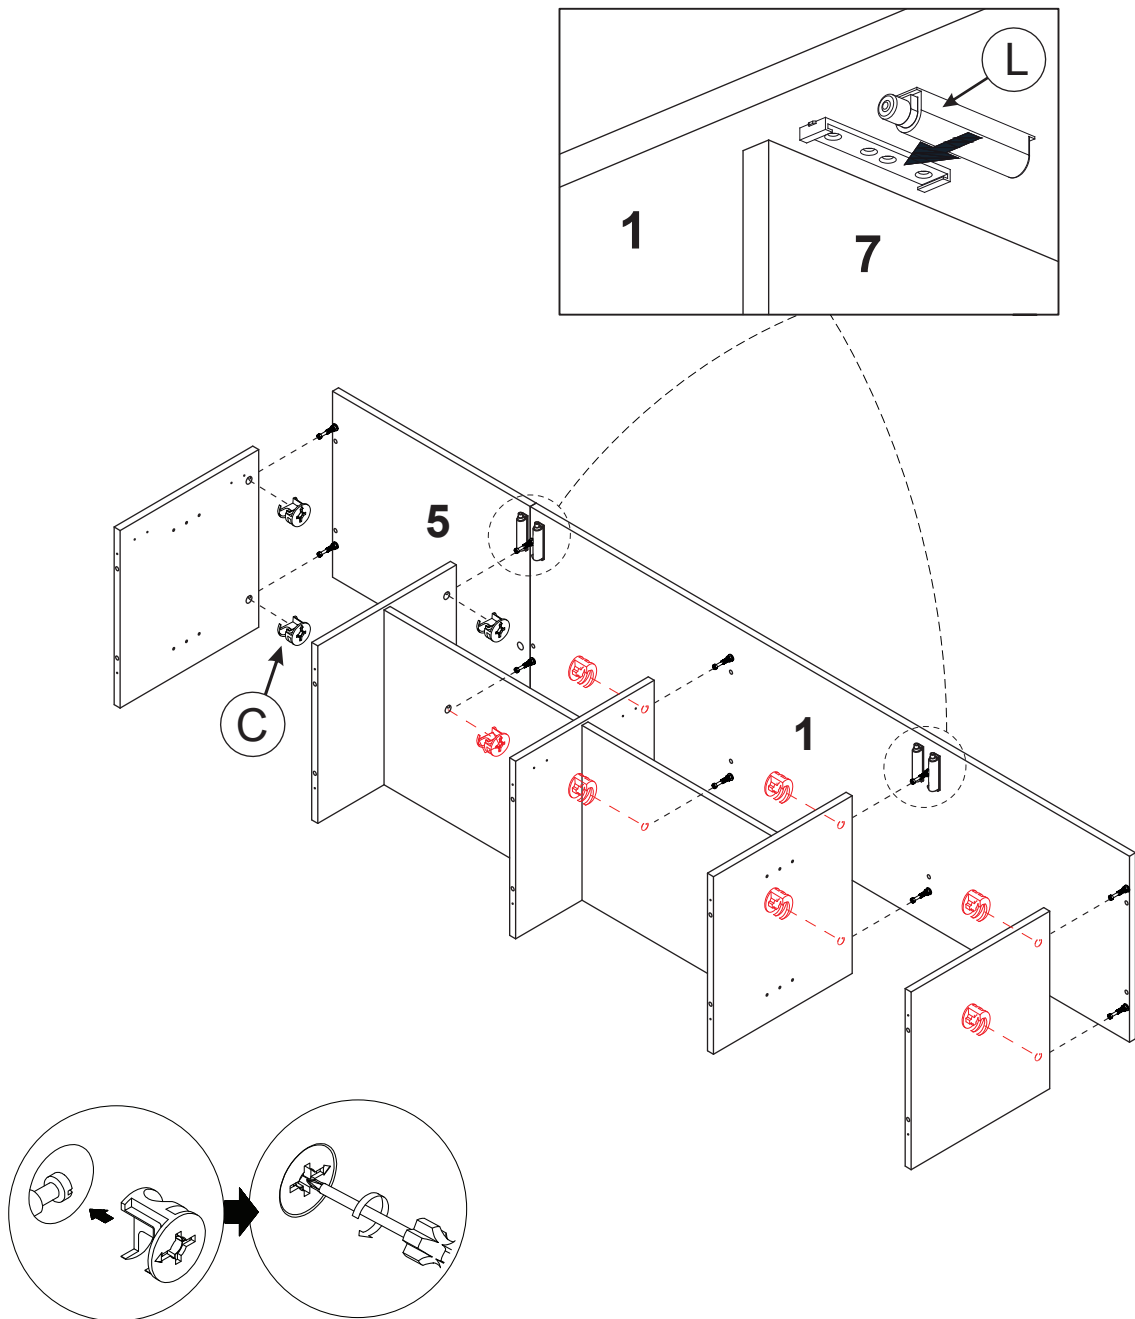


STEP 7 :

C



2 PCS

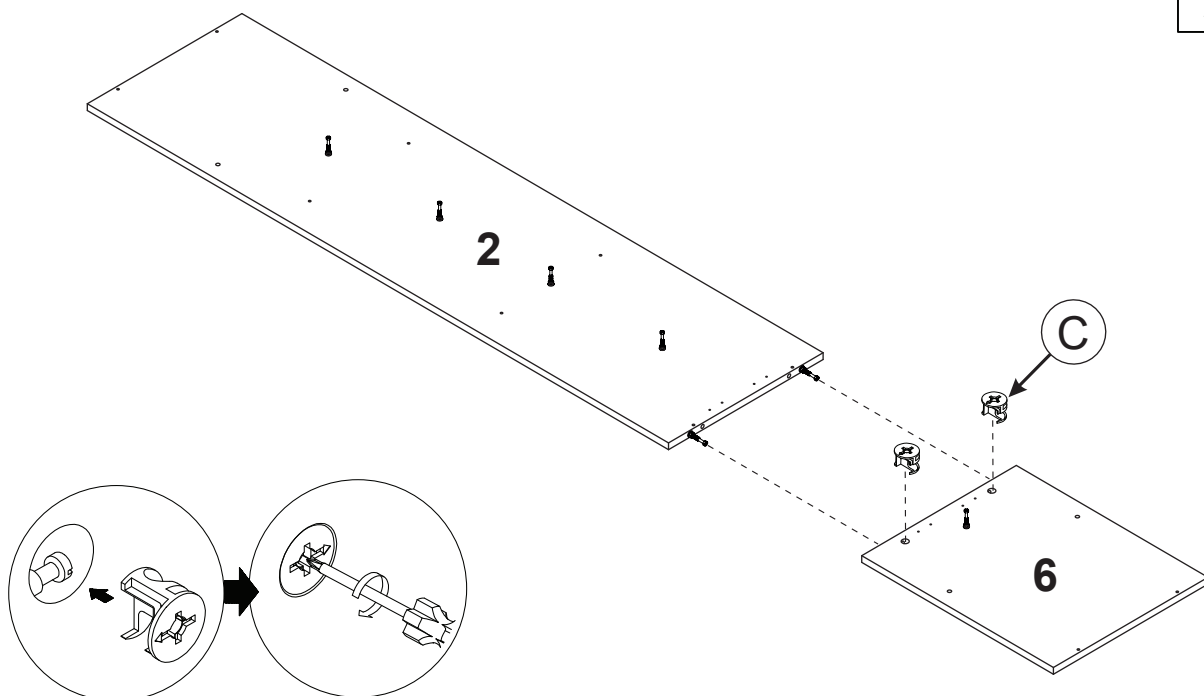


STEP 8 :

F




8 PCS

H




2 PCS

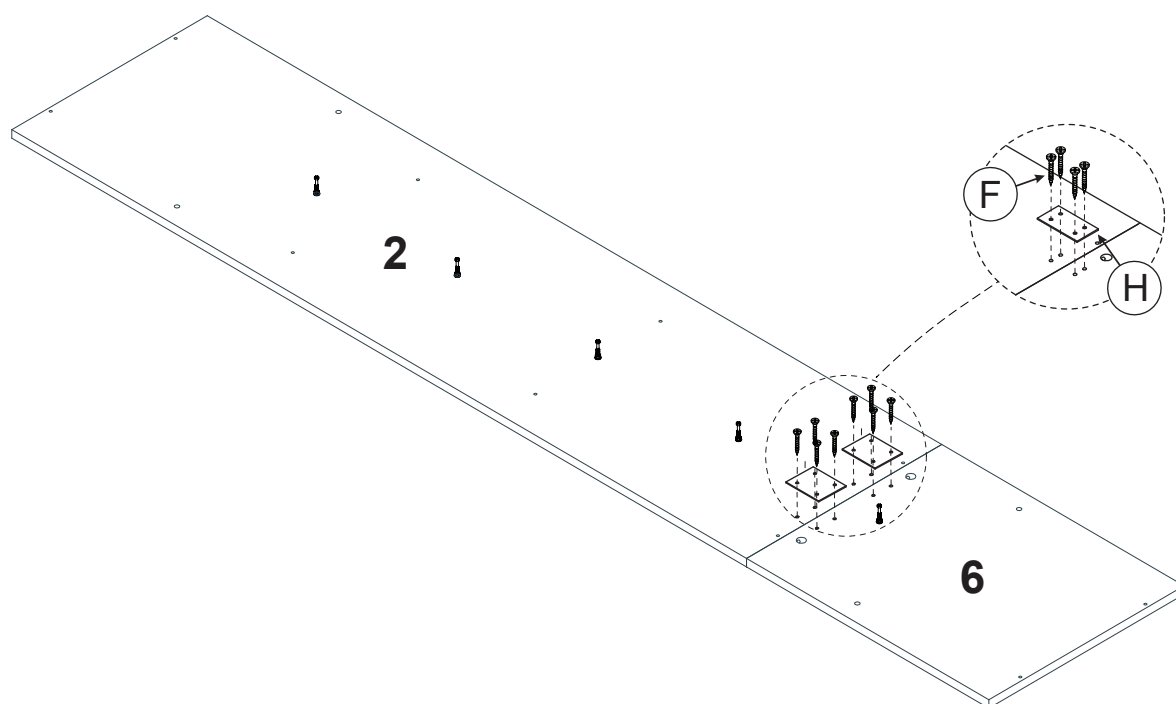


REMARK!
SECURE BOTTOM PANELS WITH METAL PLATES

STEP 9 :

E



10 PCS

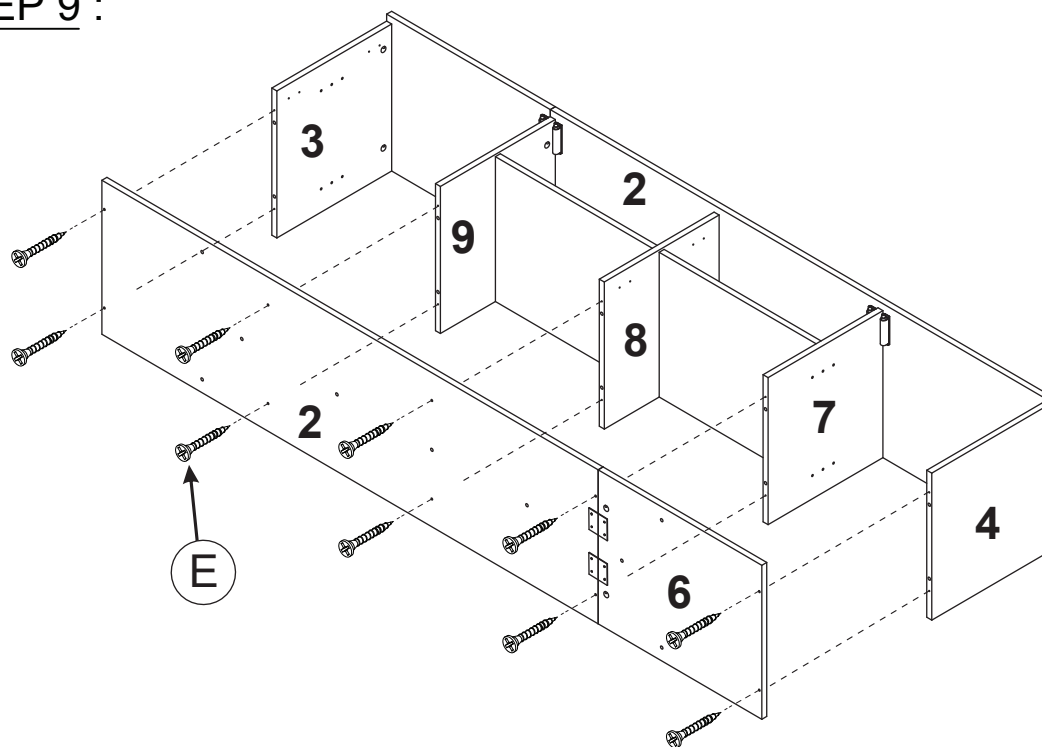


STEP 10 :

I




52 PCS

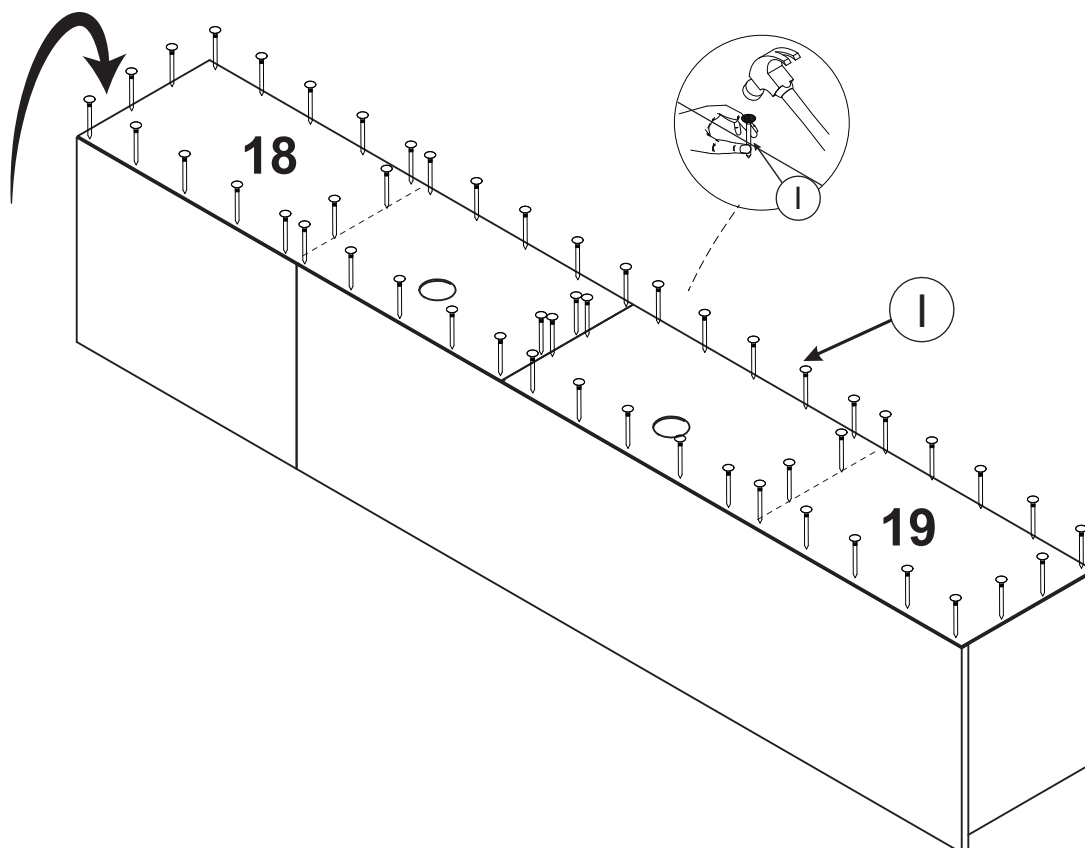

STEP 11 :


A	D
	
4 PCS	2 PCS

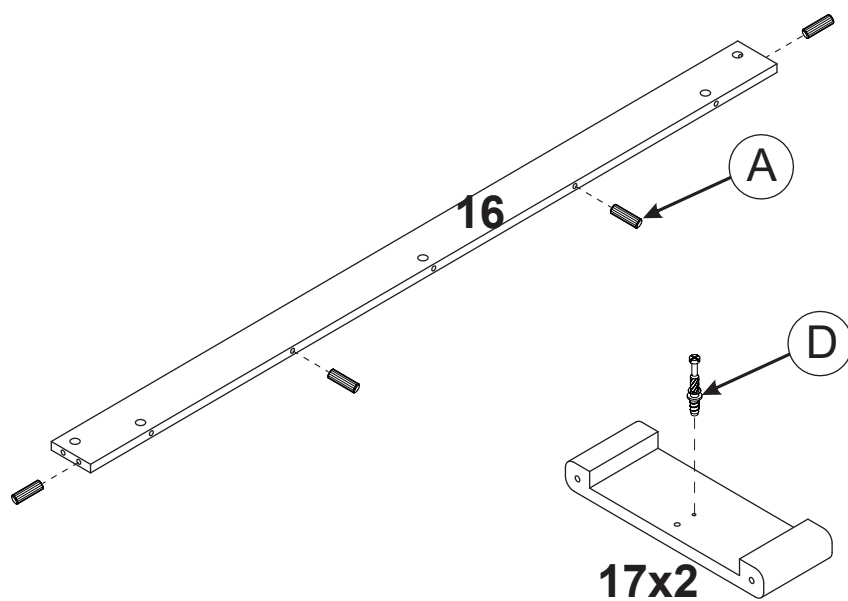

STEP 12 :

C

2 PCS

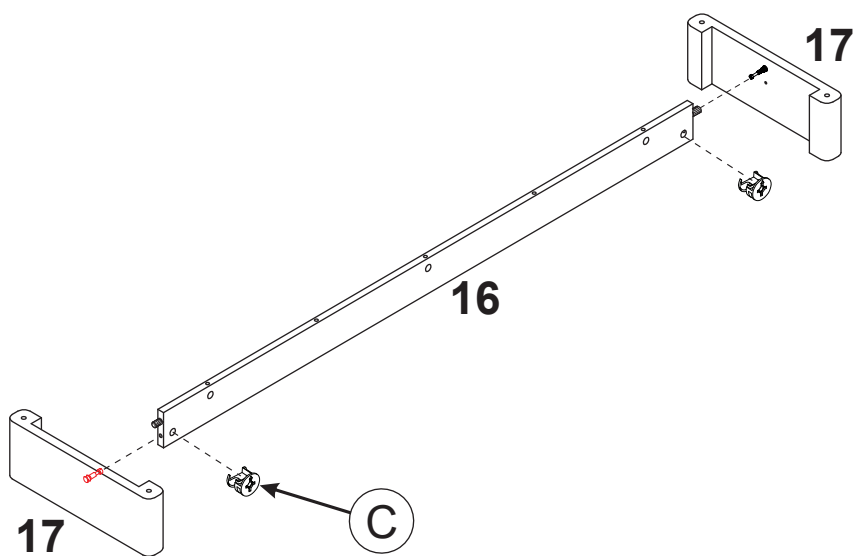


STEP 13 :

C



3 PCS

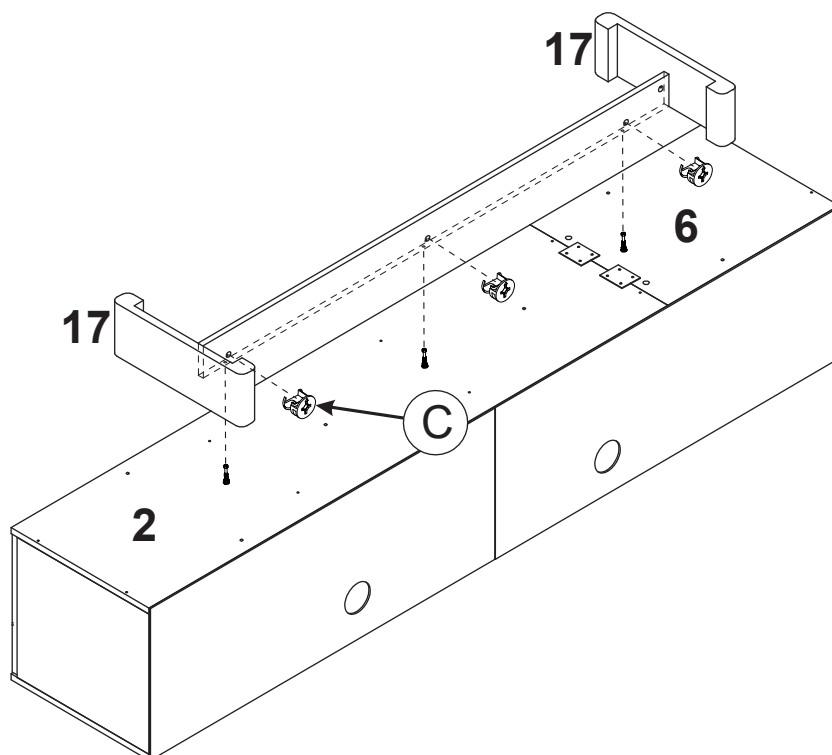

STEP 14 :

M




4 PCS

N






1 PC

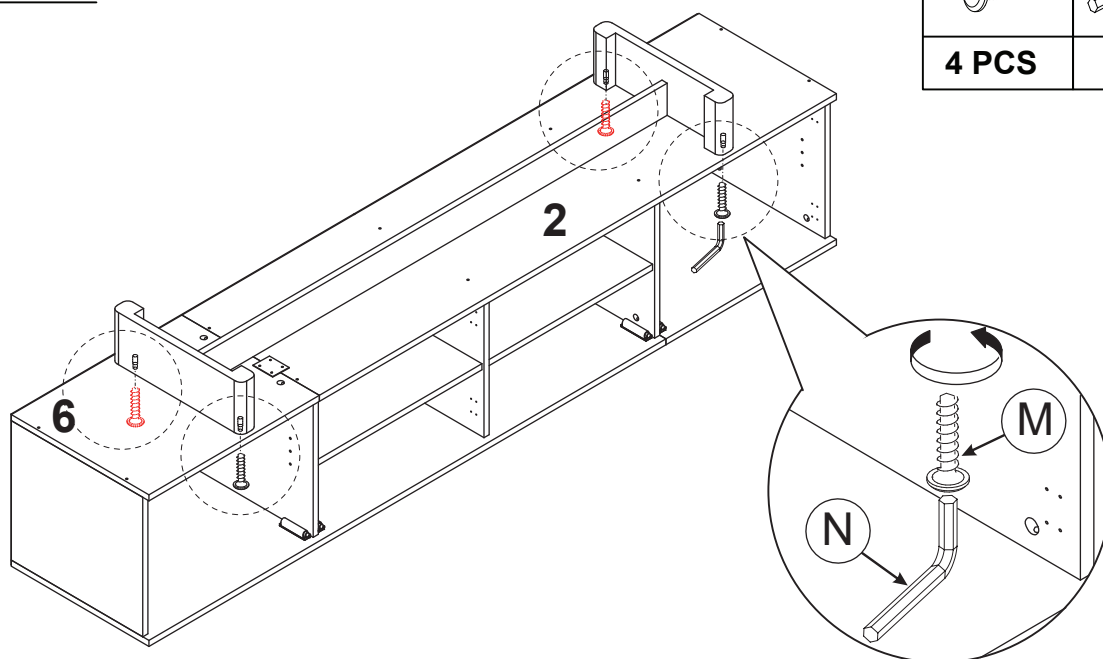

REMARK!
SECURE BOTTOM PANELS WITH METAL PLATES



STEP 15 :

F	J	K
		
16 PCS	4 PCS	4 PCS

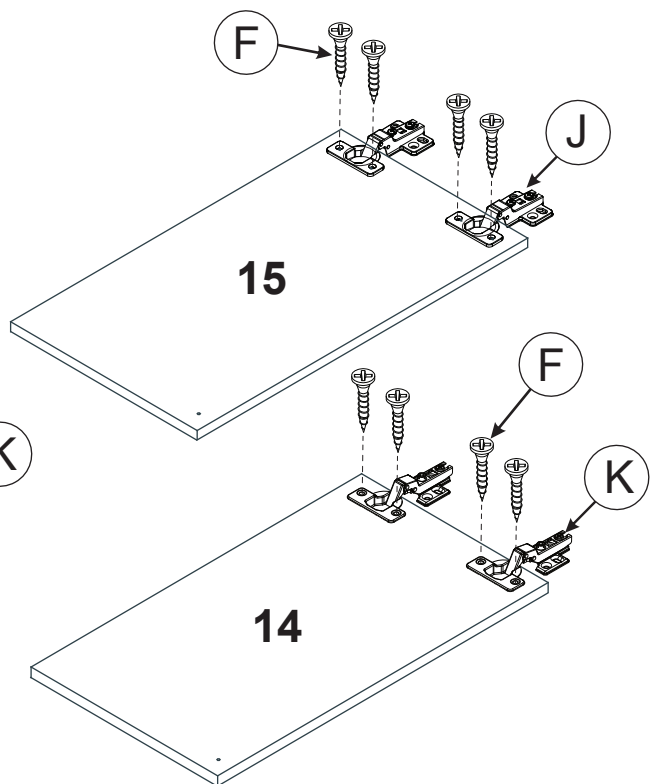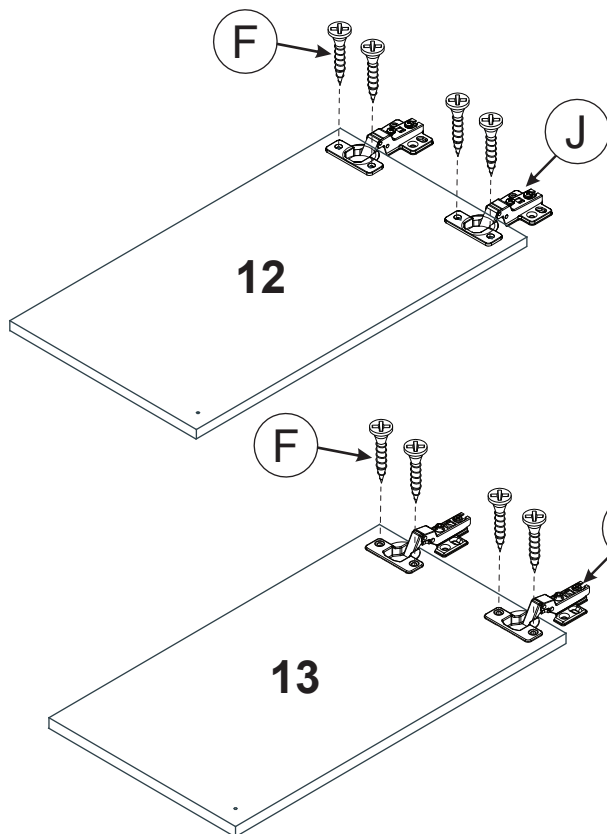

STEP 16 :

L
 
4 PCS

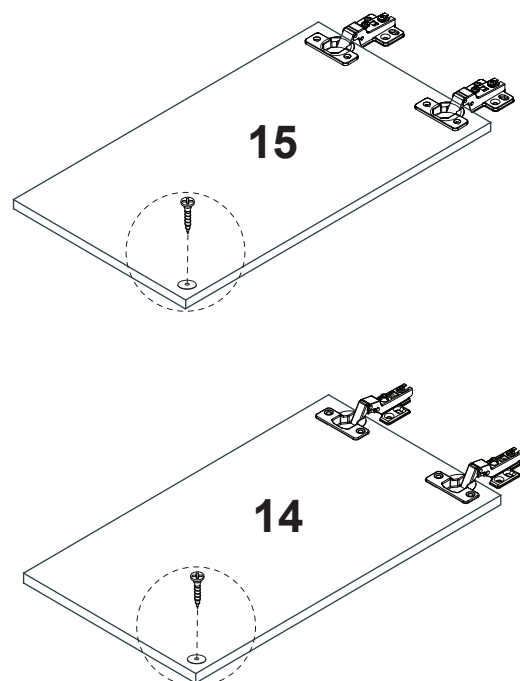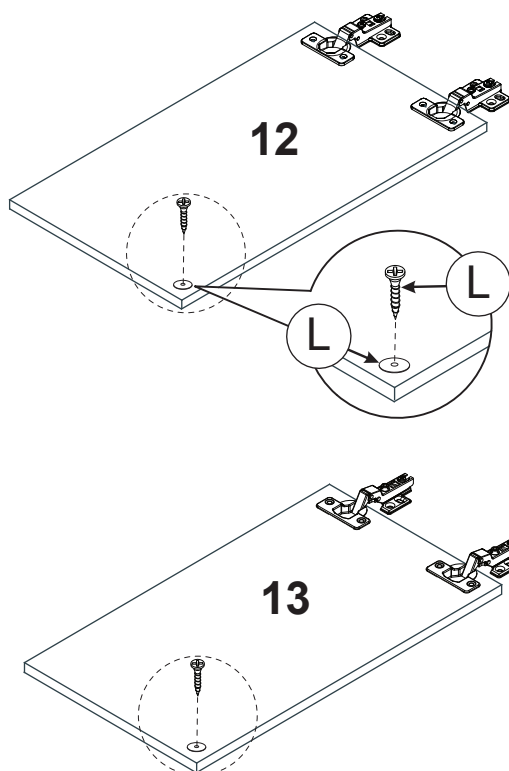


STEP 17 :


F





32 PCS

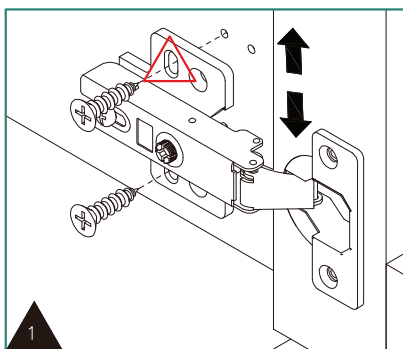


Use the "waist round hole" marked with a triangle to adjust the position of the door panel (ensure that the gap between the door panel and the upper and lower panels is consistent).

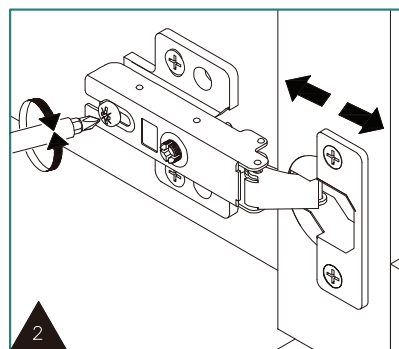

Use the screw at the back end of the hinge to adjust the front and back position of the door panel (ensure that the front of the door panel is in the same plane as the upper and lower panels).

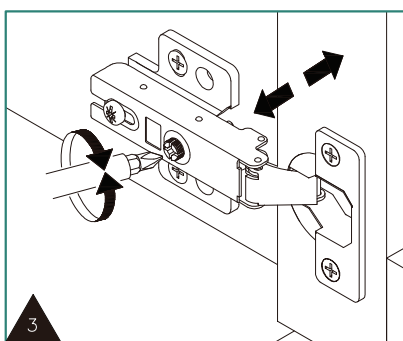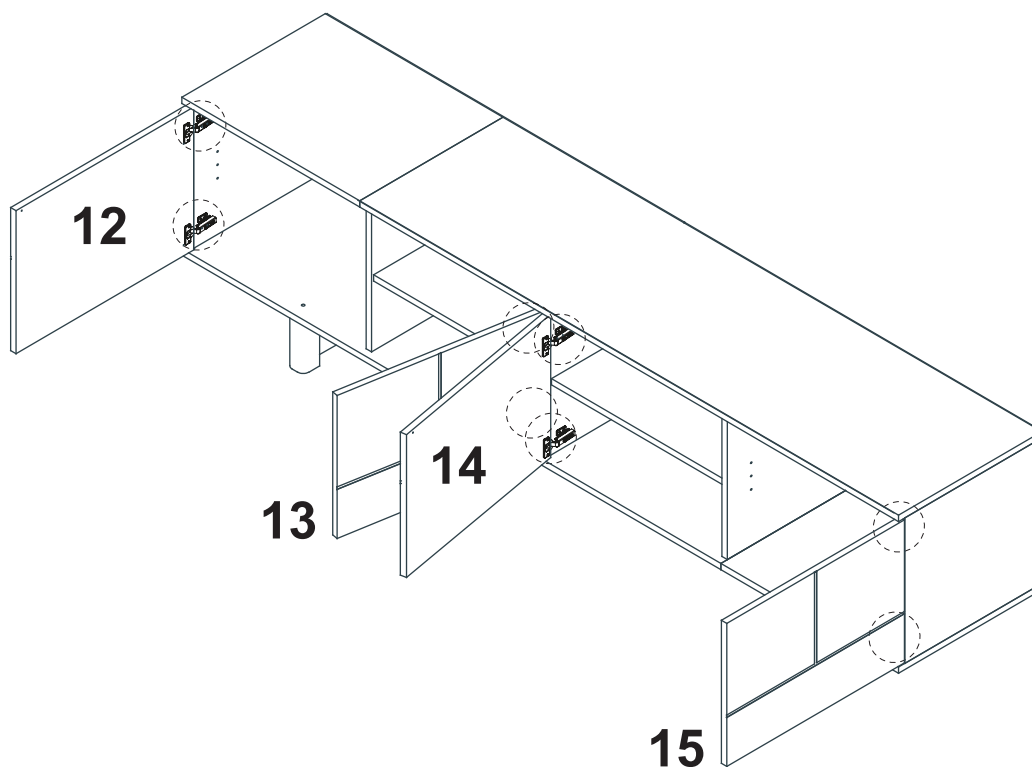

Use the screw at the front end of the hinge to adjust the left and right position of the door panel (ensure that the left and right sides of the door panel are in the same plane as the upper and lower panels).

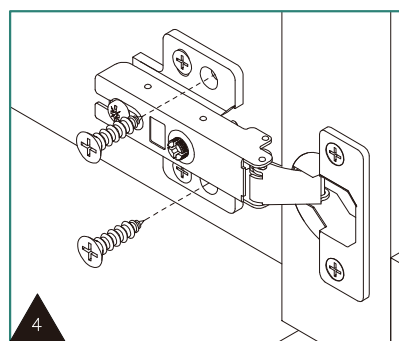


After completing these three steps, secure the other two screws on the hinge.

STEP 18 :

G



8 PCS

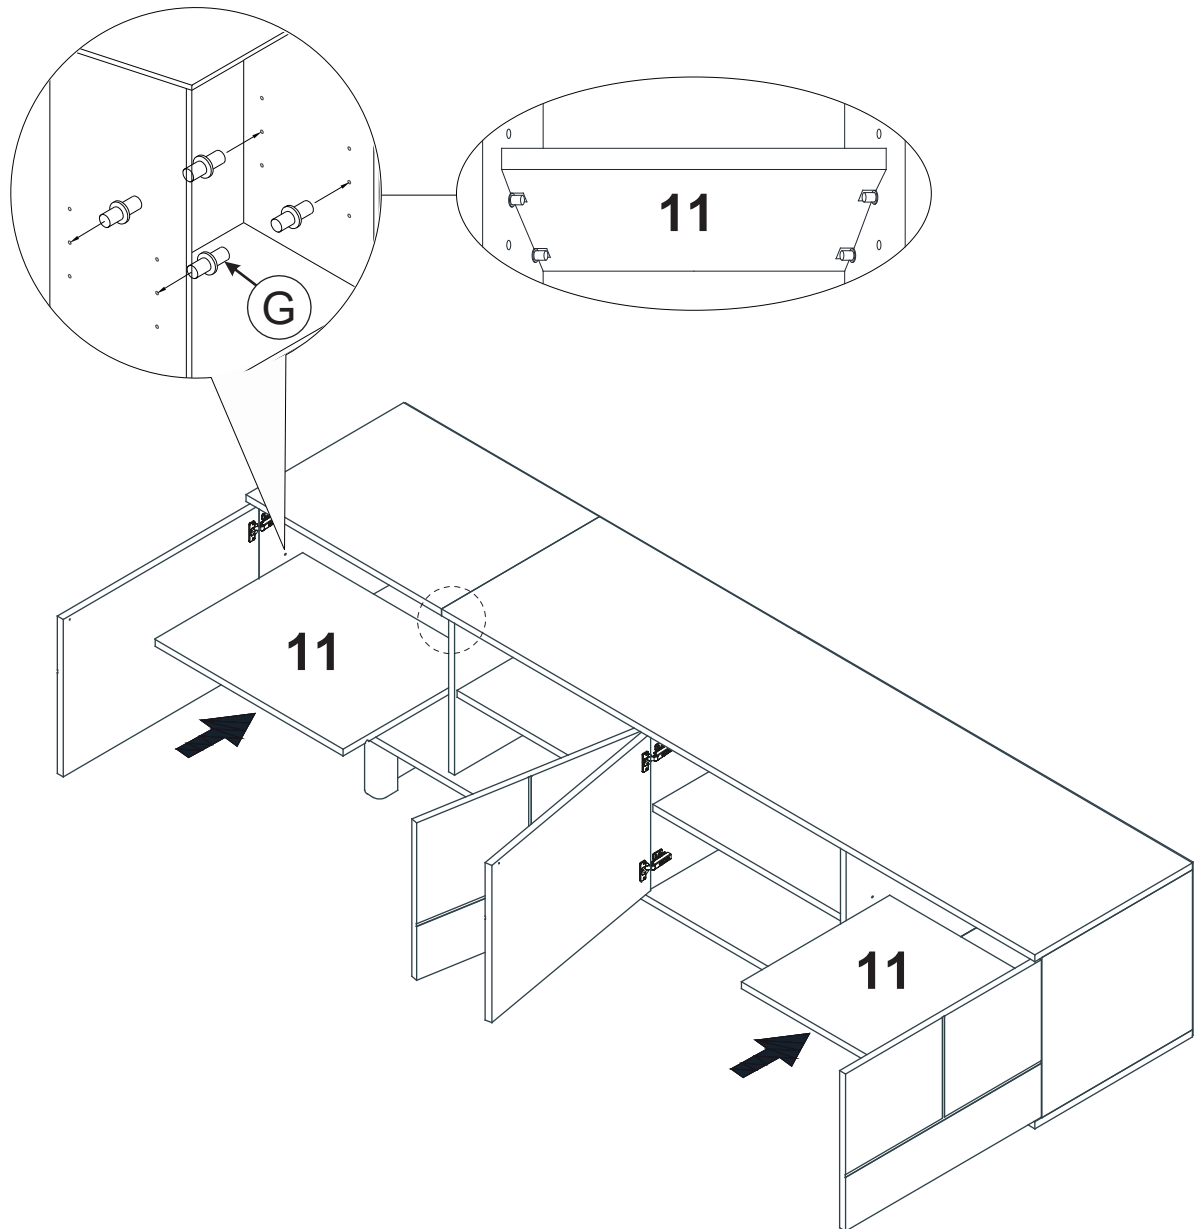

STEP 19 :

